
# Sky-Frame

# Structural situation Weight on substructure


## Weight on substructure

The adding up of the sliding glass weights must be taken into consideration already at the beginning of the planning phase so that the substructure is correctly dimensioned.

#### Closed condition:

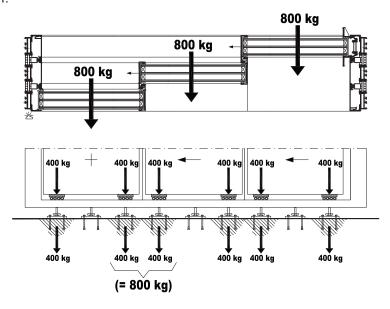

### Open condition:

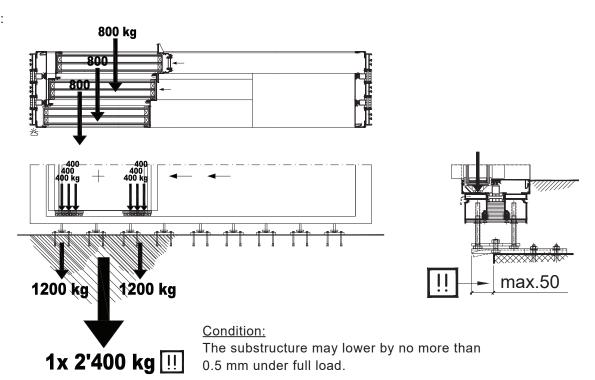

07.09.2016