





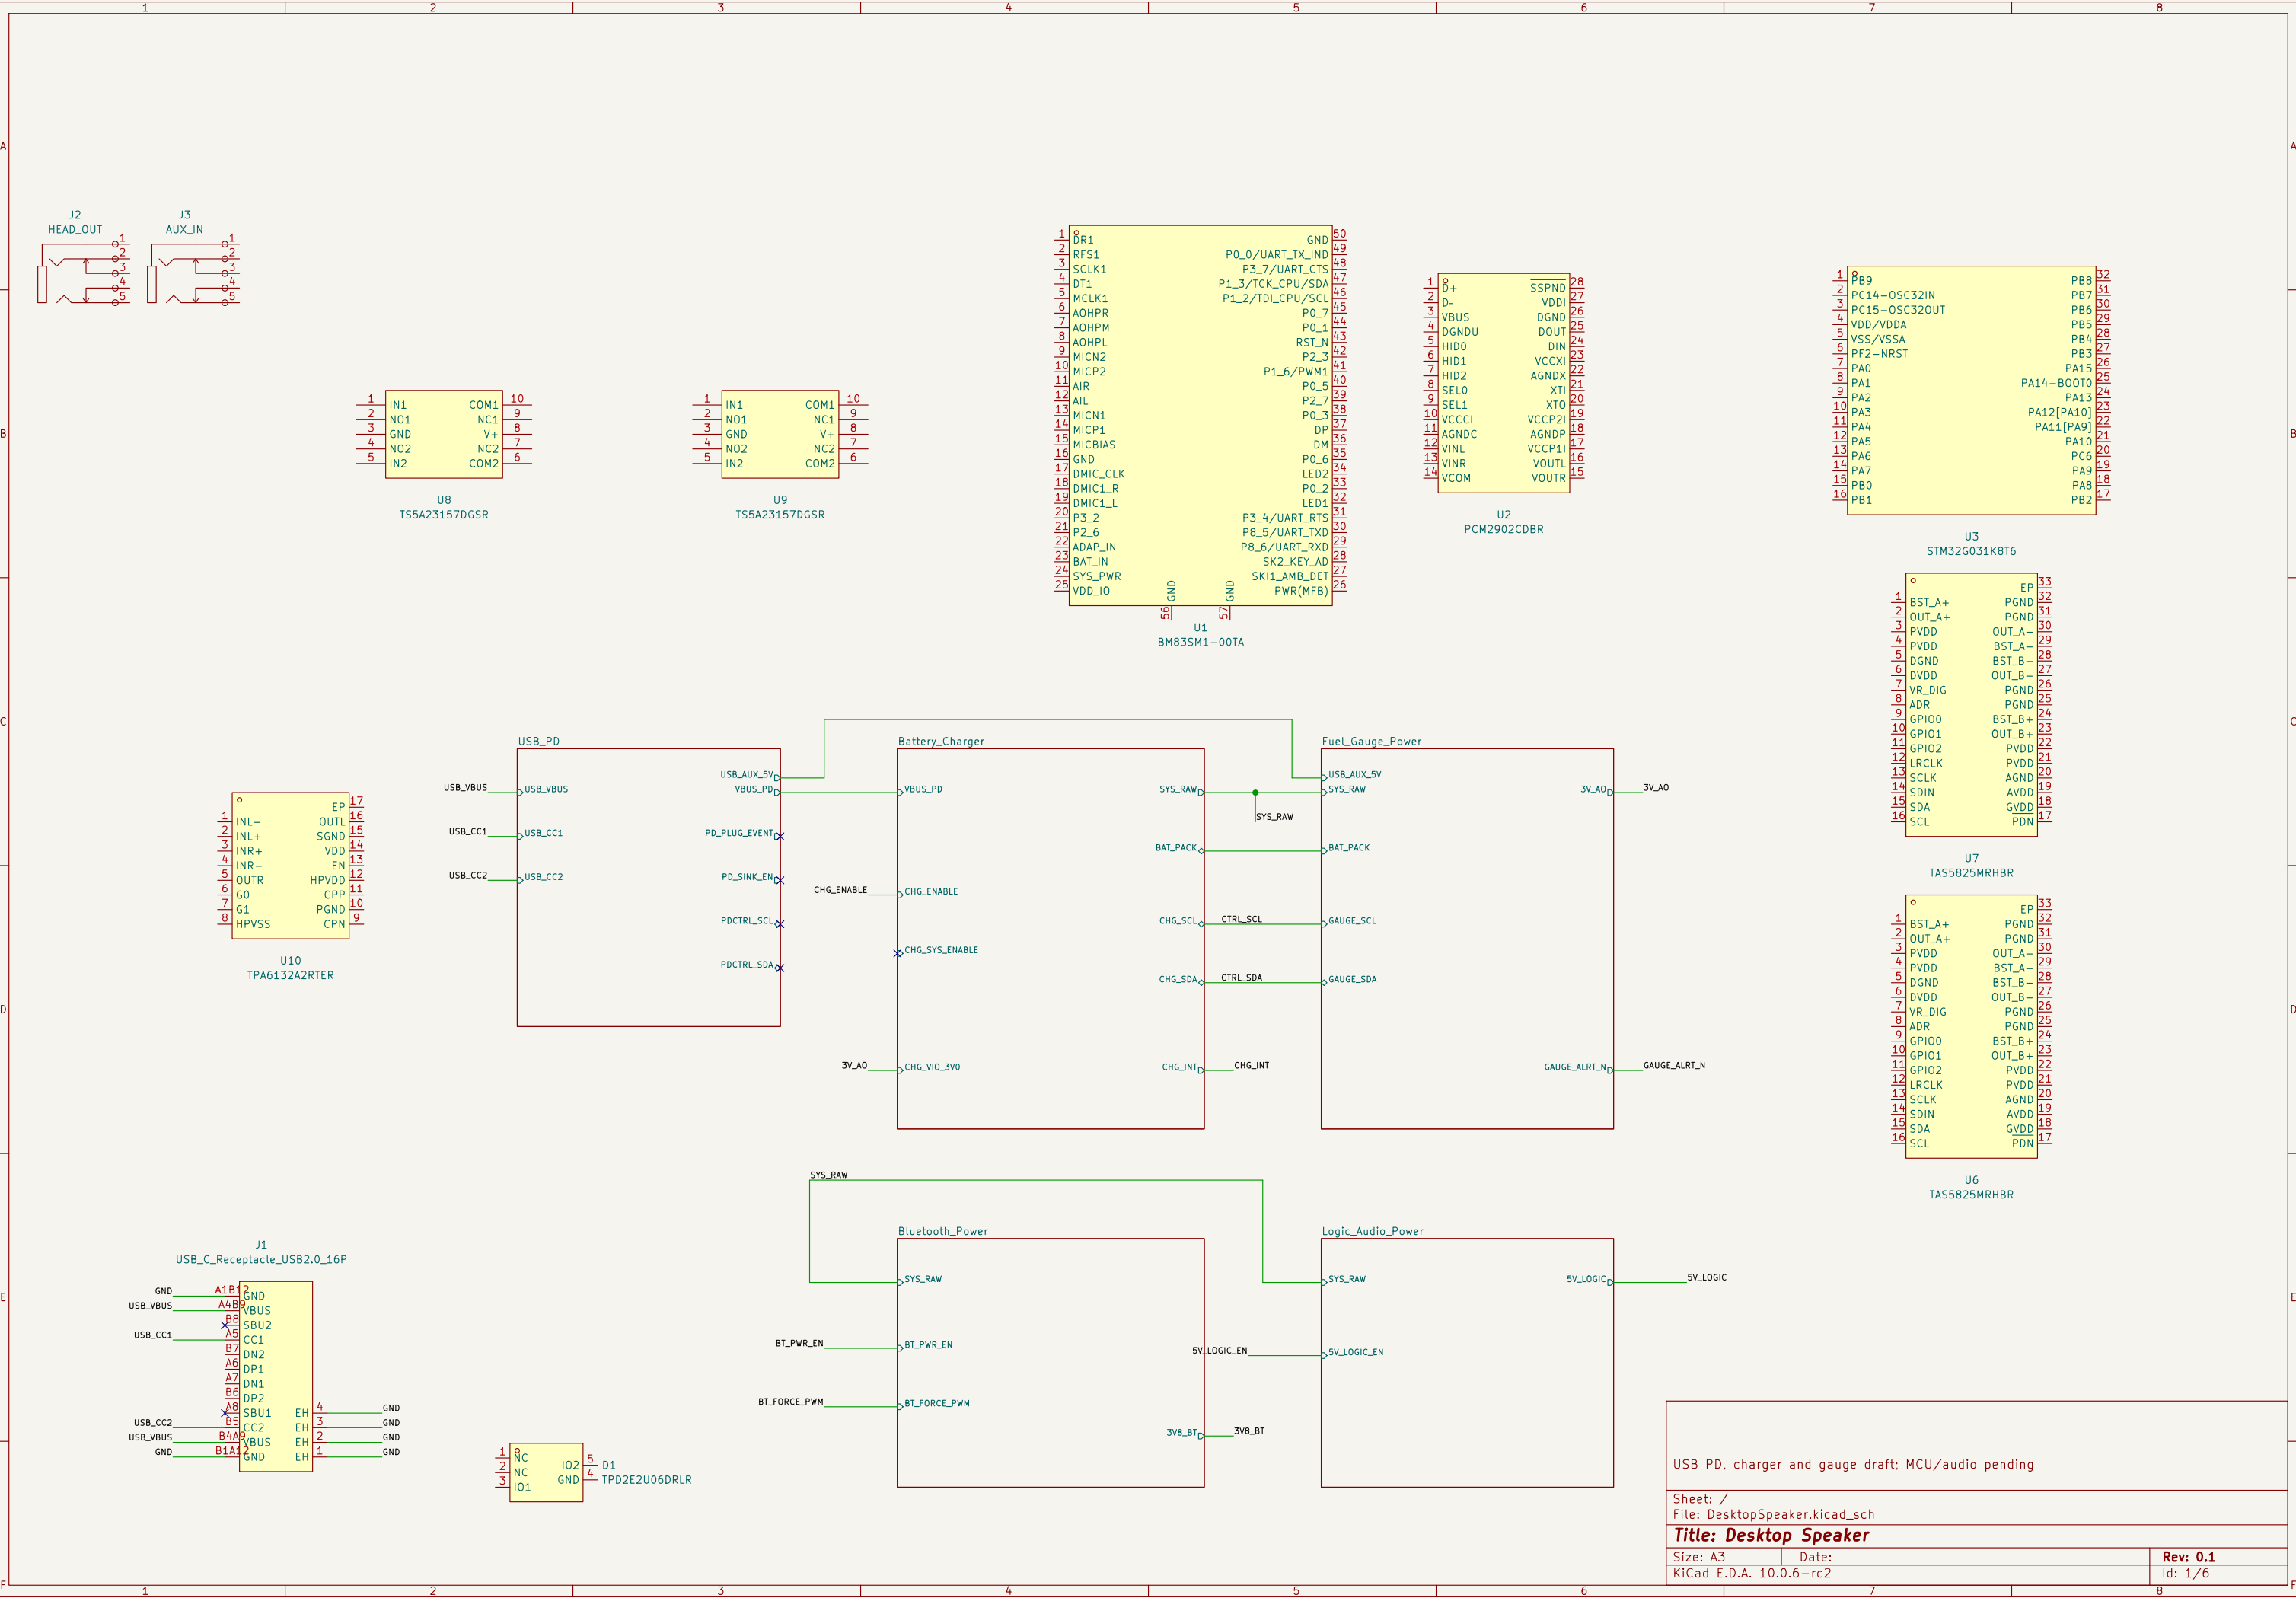

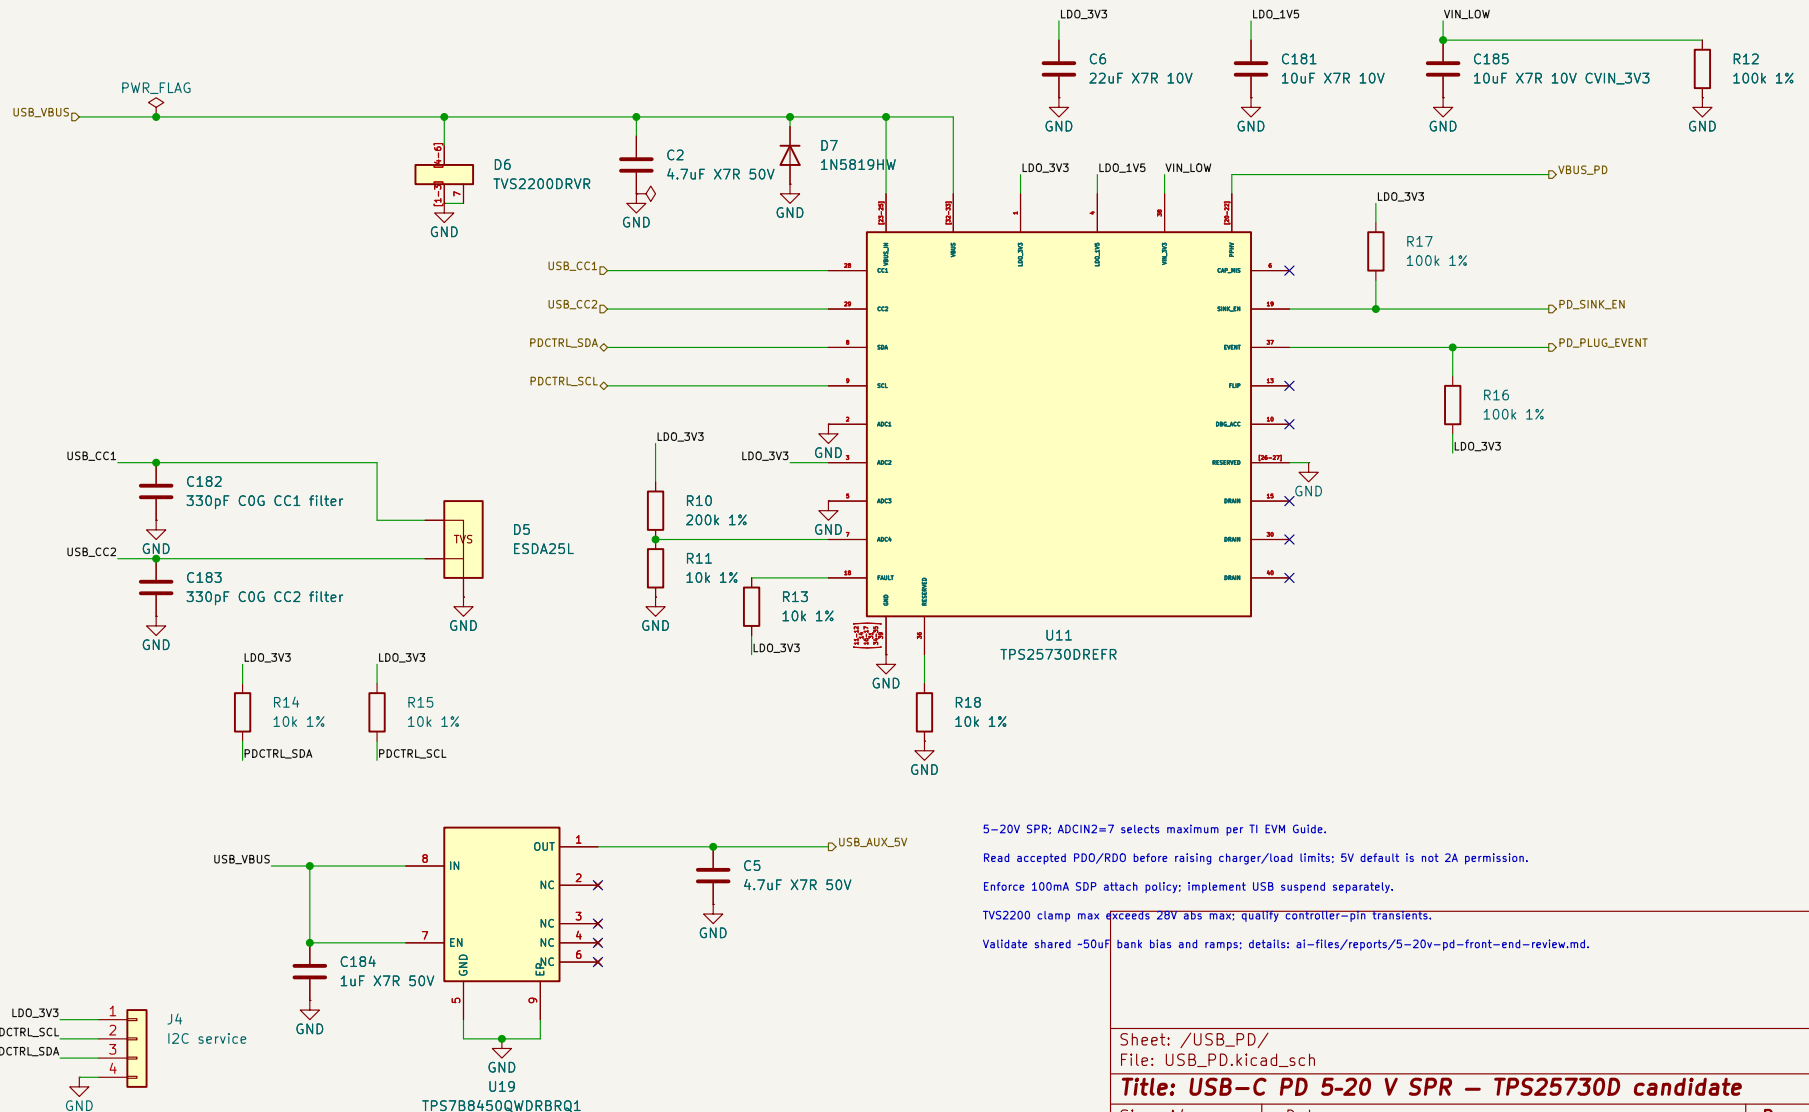

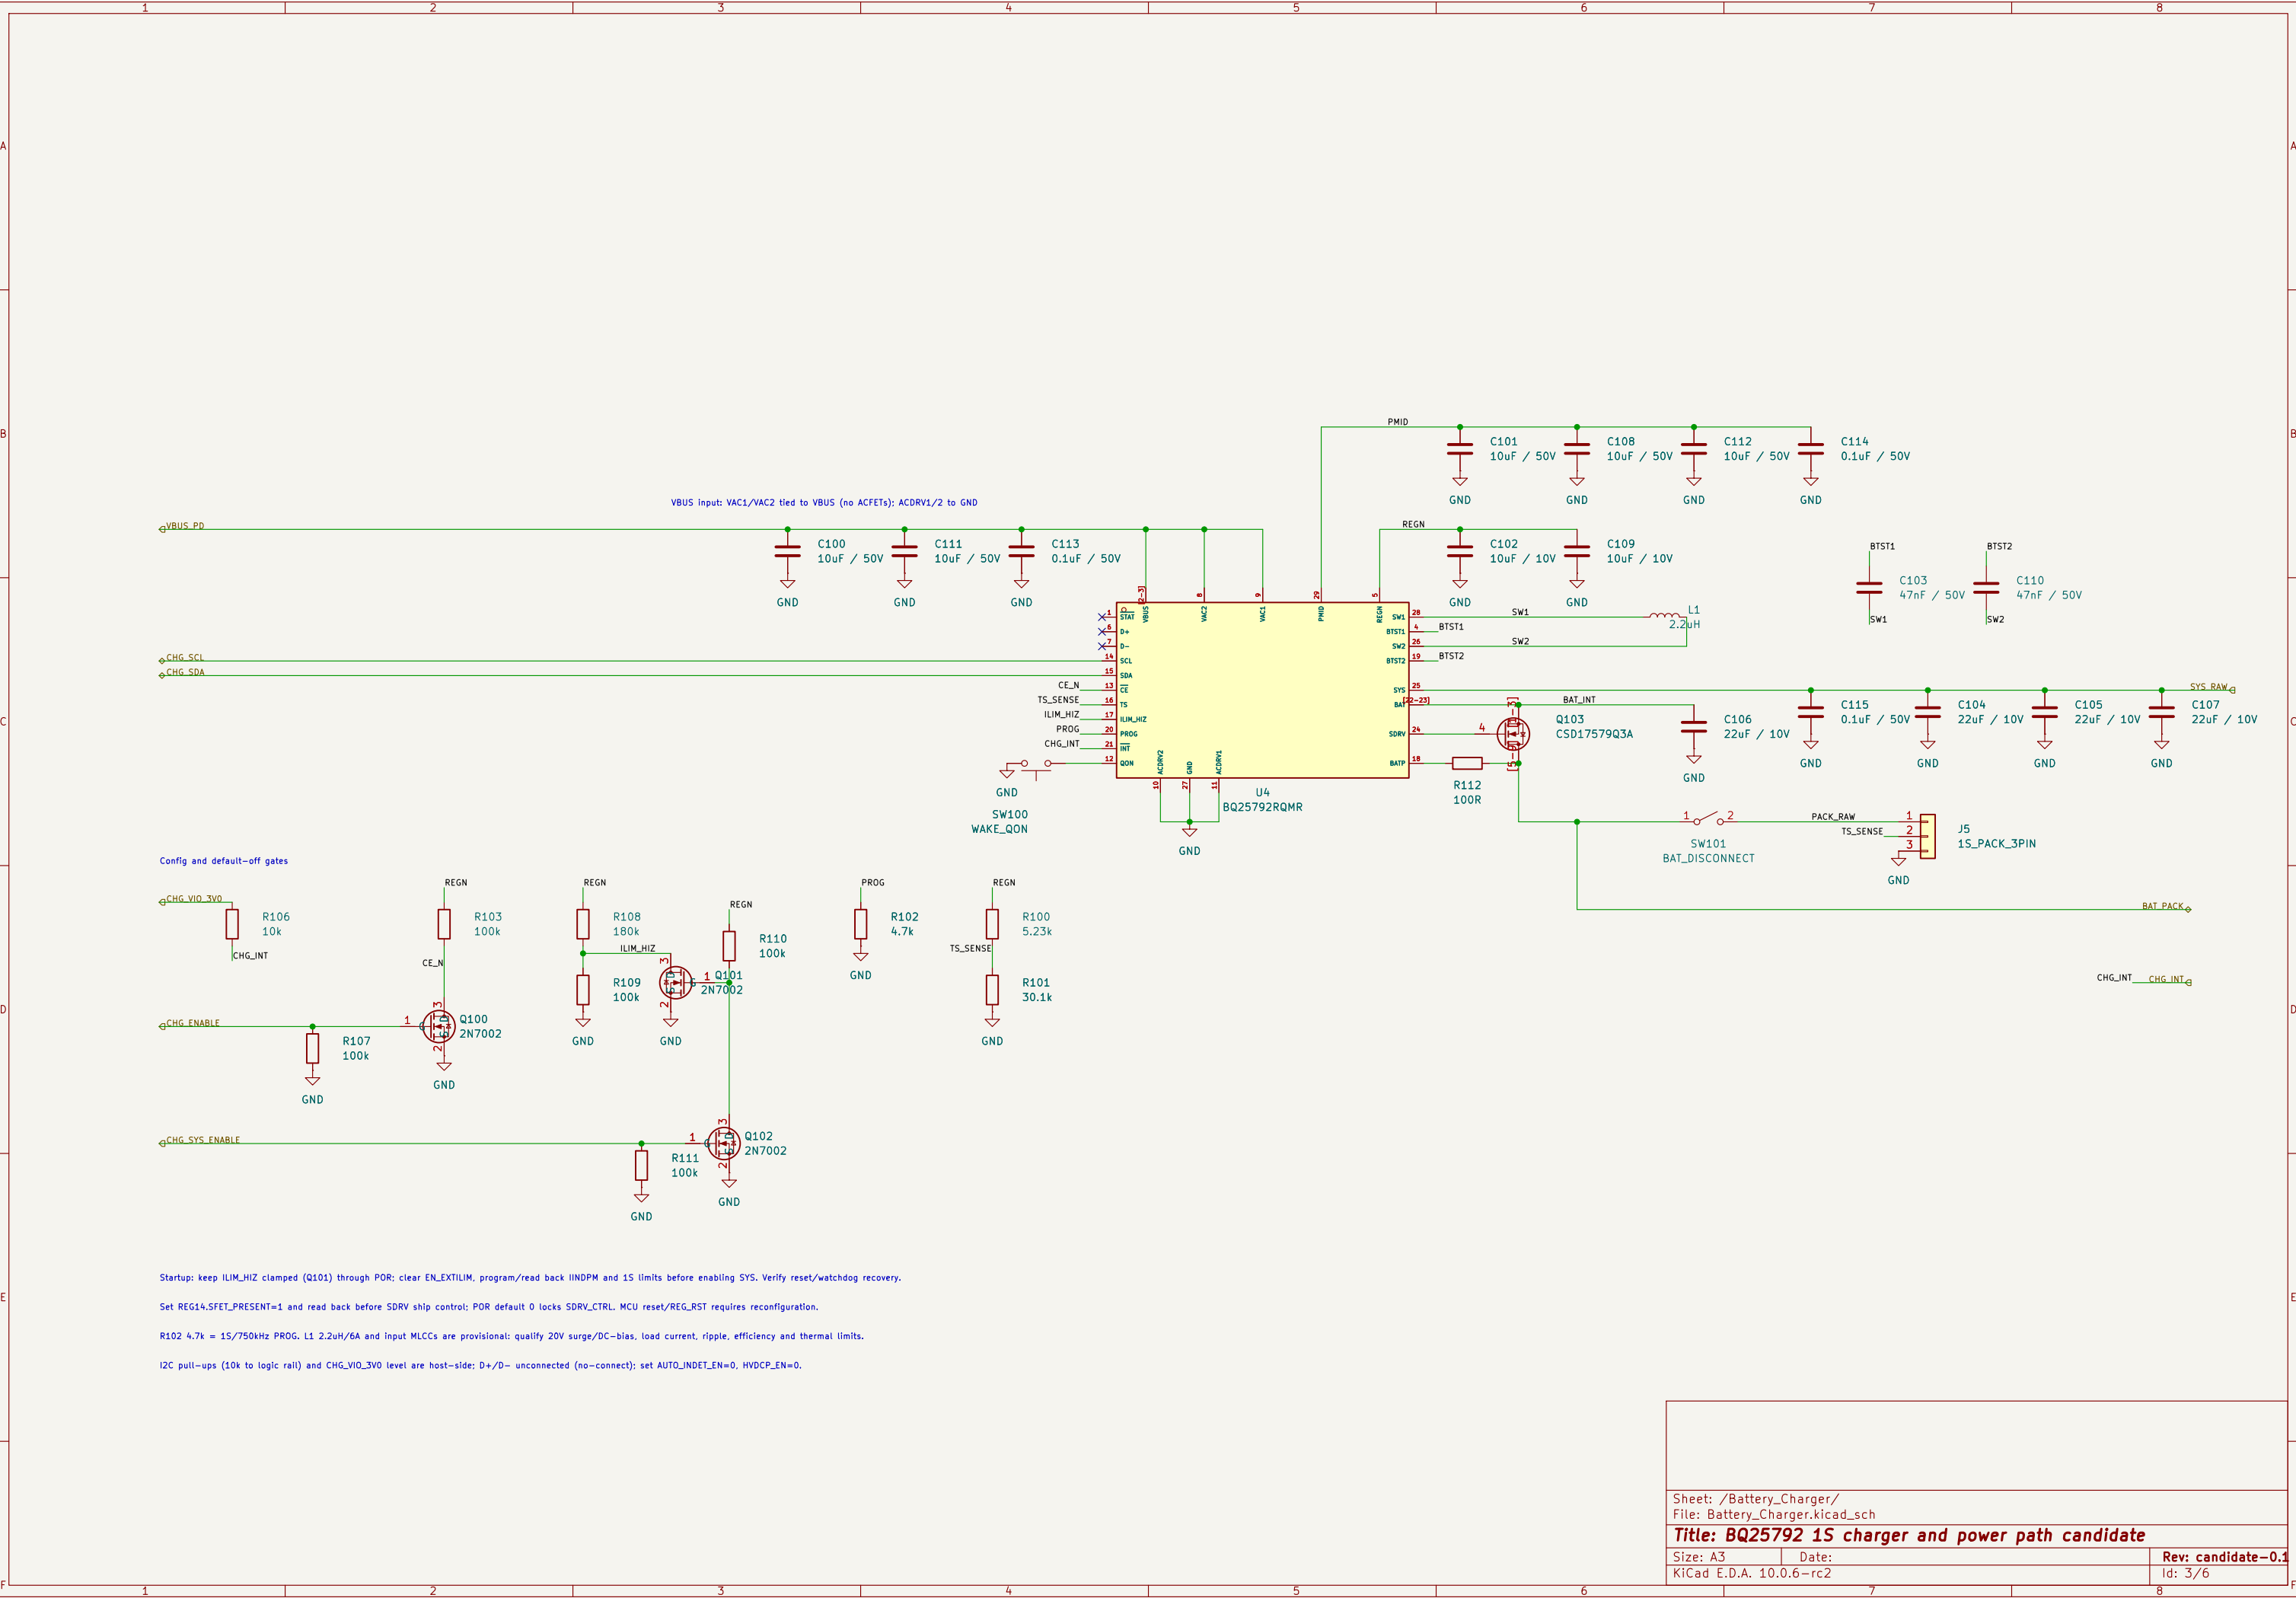

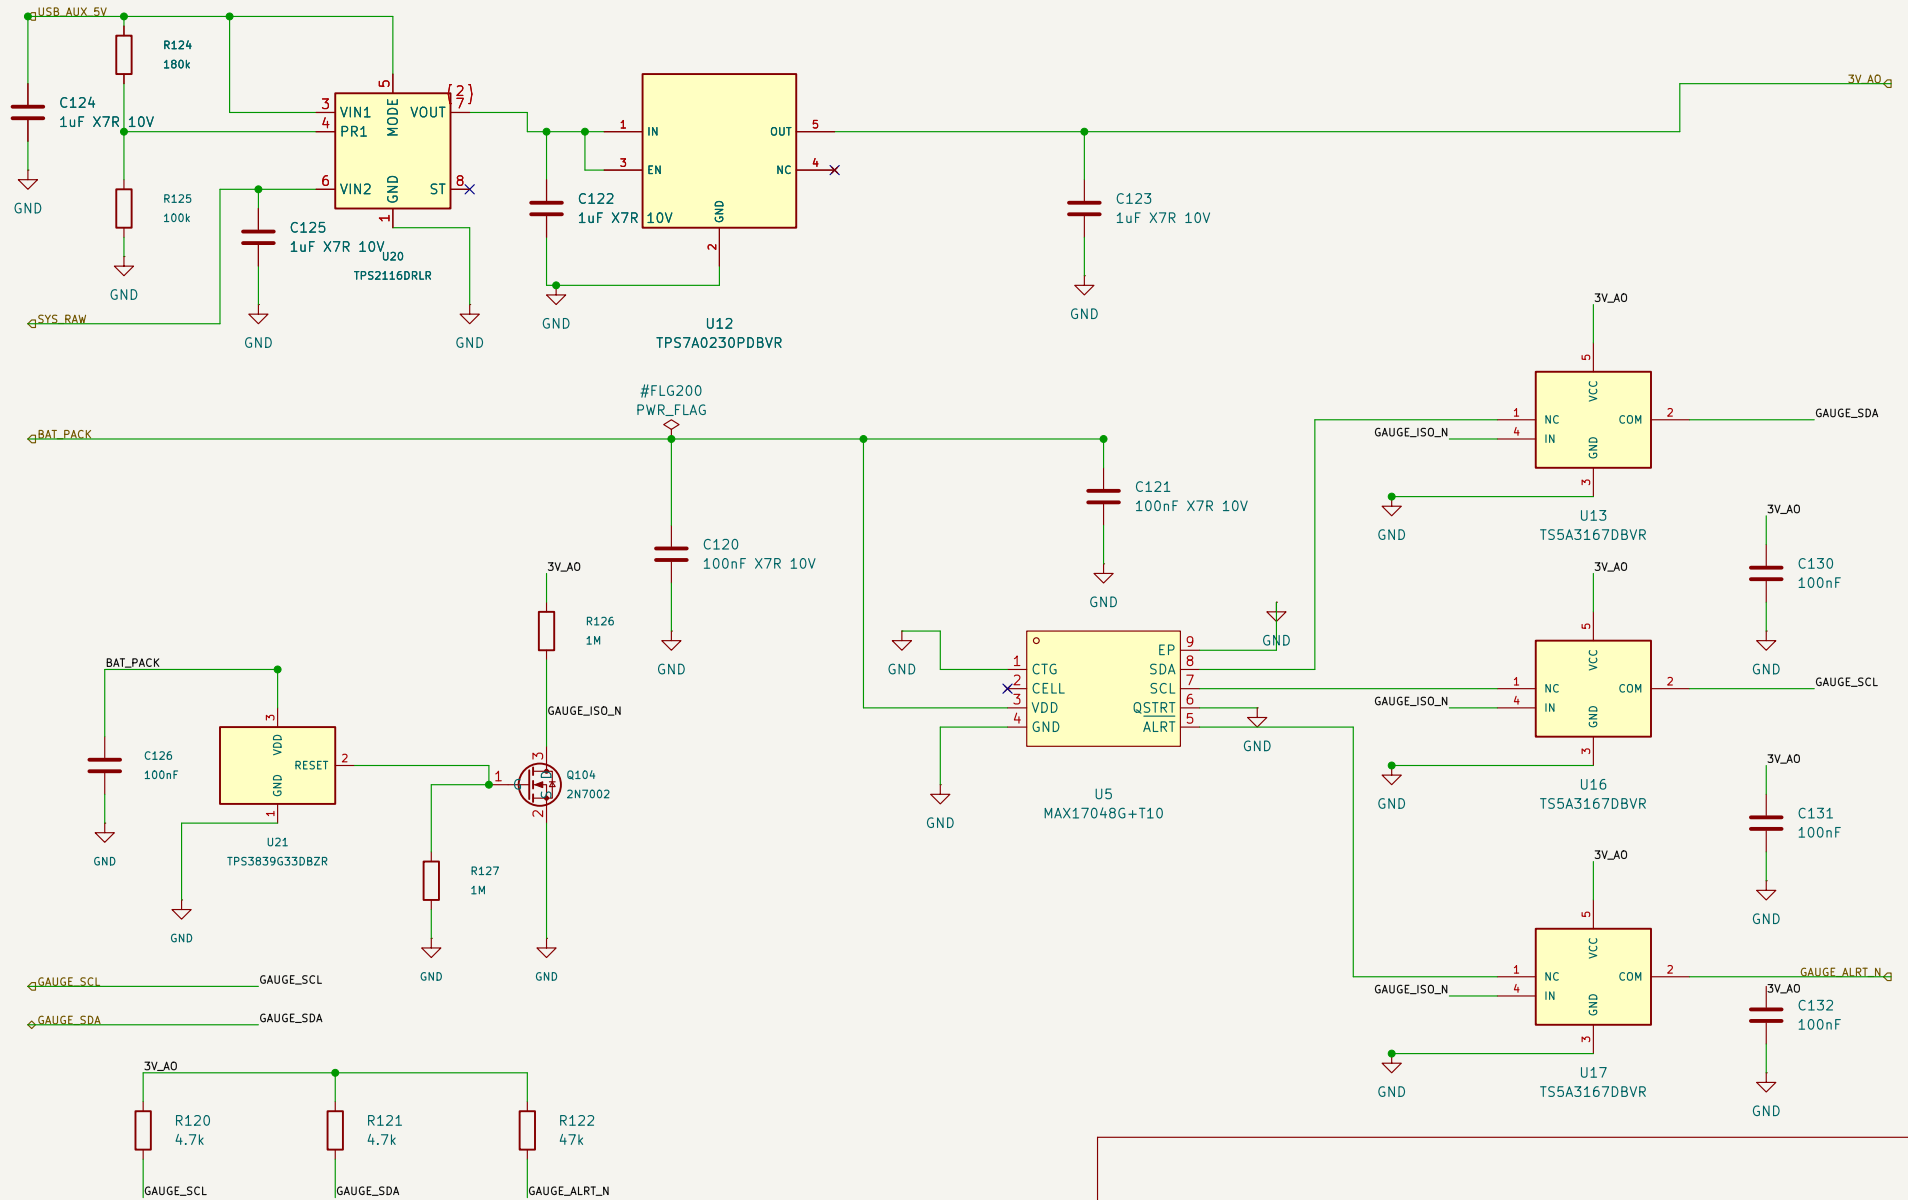

USB-priority logic supply; PR1 nominal 2.8 V.
Switchover/BOR and effective capacitance need qualification.

CELL pad 2 unused on MAX17048; QSTRT tied low

Gauge bus; AO-powered switches; default OFF below valid battery.
U21 3.08 V supervisor enables Q104 after reset recovery.

Sheet: /FuelGauge_Power/
File: FuelGauge_Power.kicad_sch


Title: Fuel gauge and low-current power

Size: A4
KiCad E.D.A. 10.0.6-rc2

Date:


Rev: 0.1

Id: 4/6

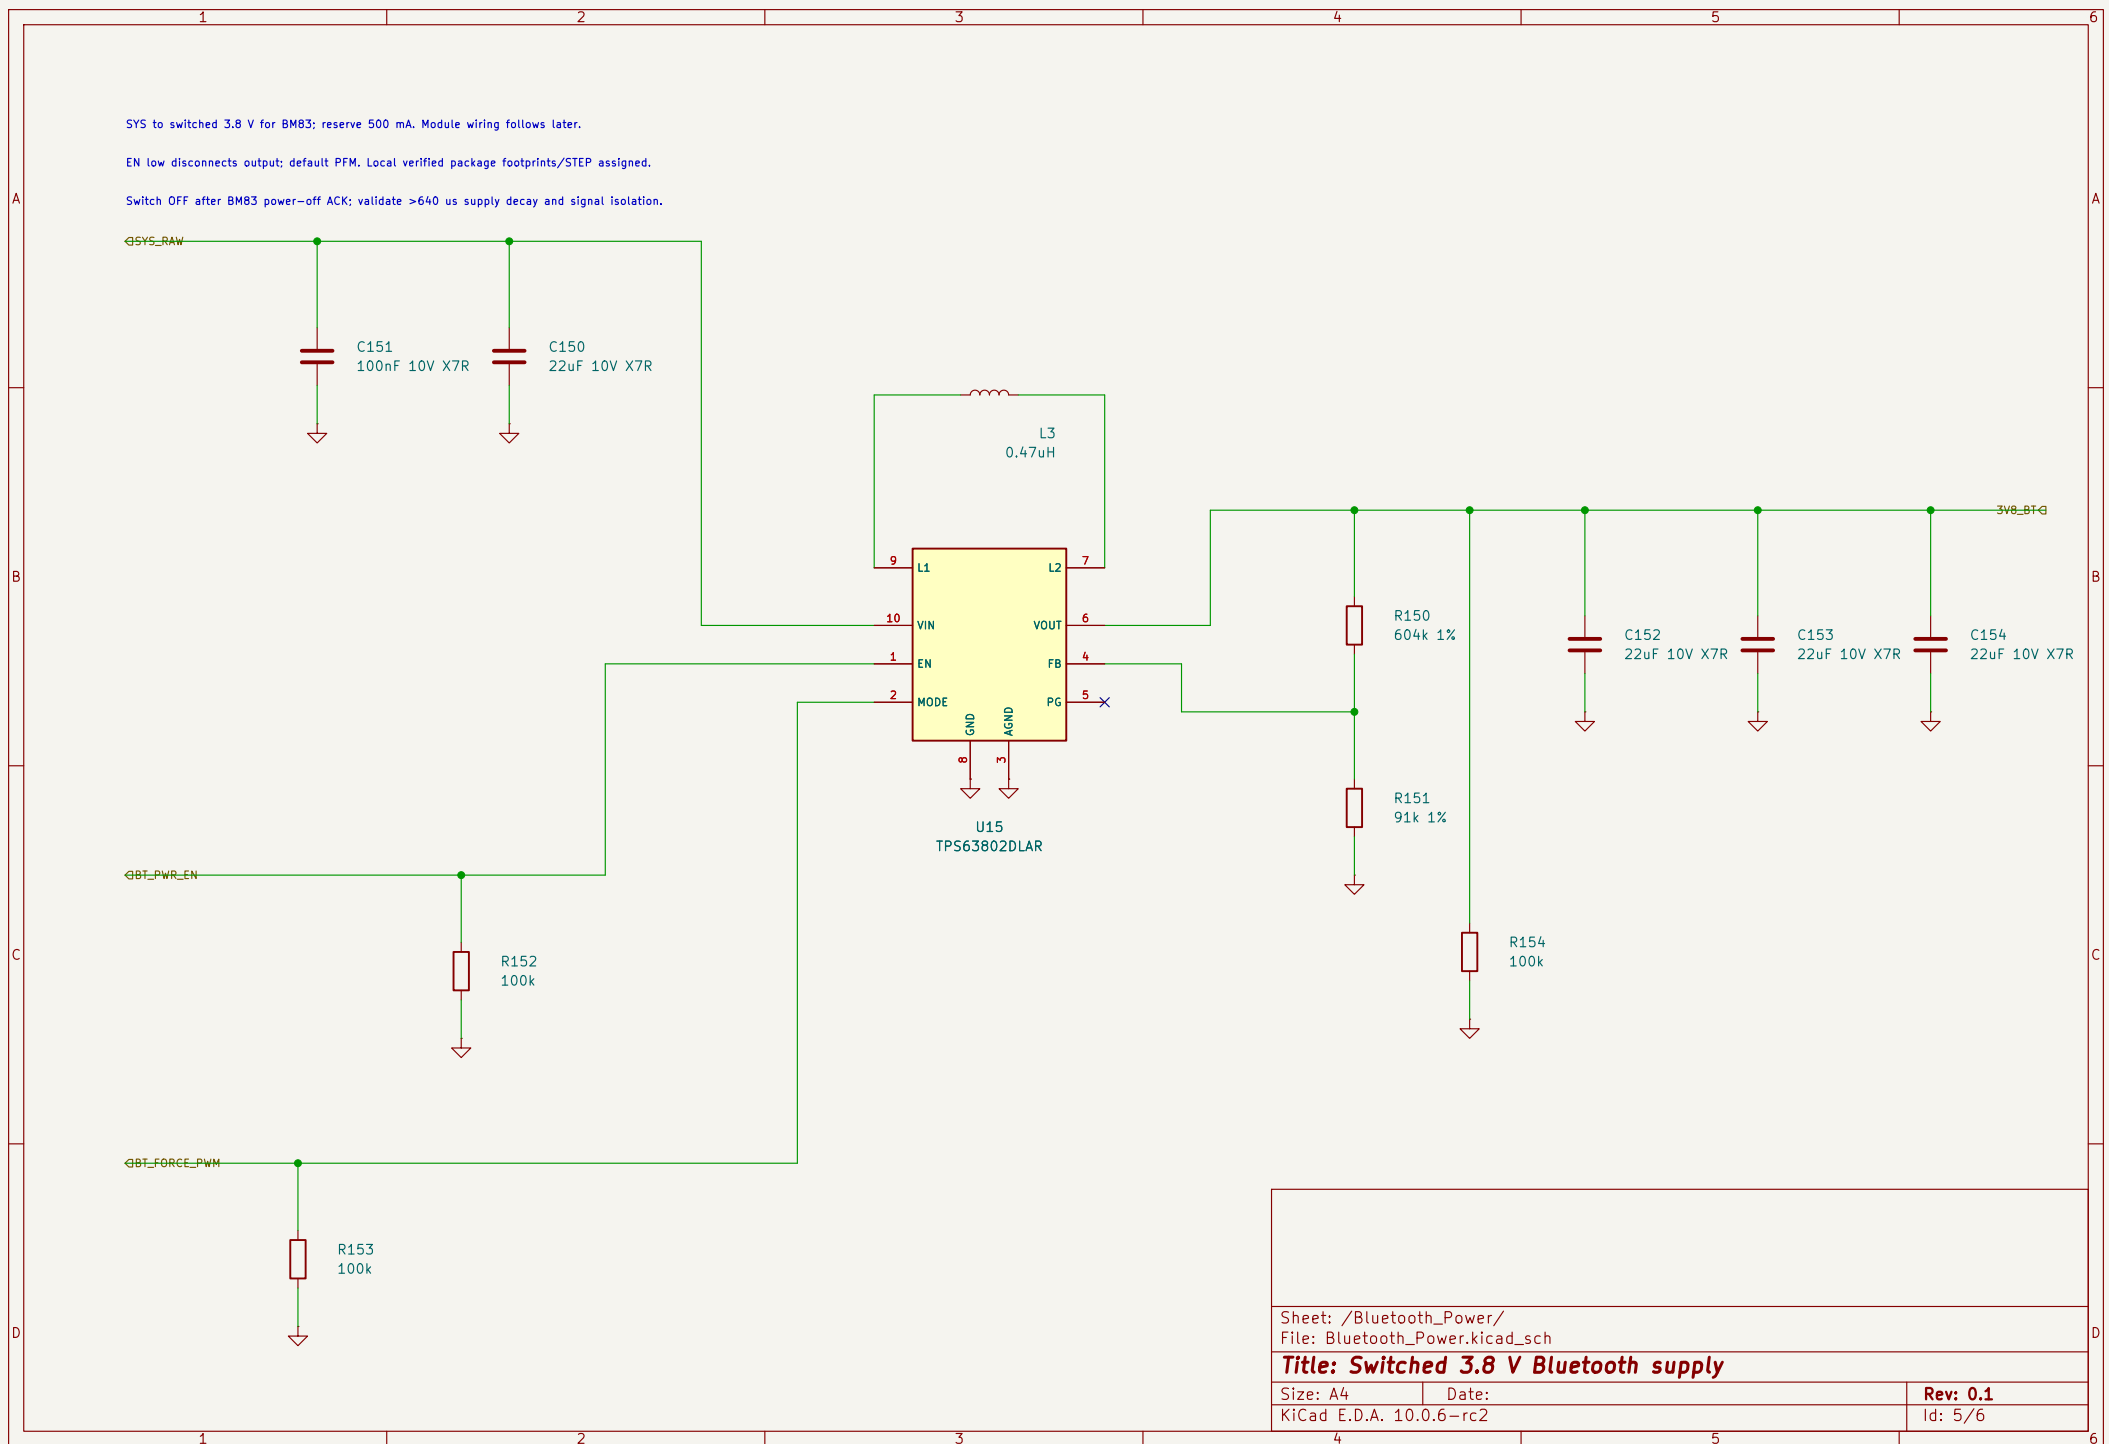

EN low = true input/output disconnect; MODE tied to SYS_RAW forces PWM after soft-start.

Steady PWM divider DC bound is within PCM2902C limits; soft-start uses PFM. Ripple and startup transient require qualification.

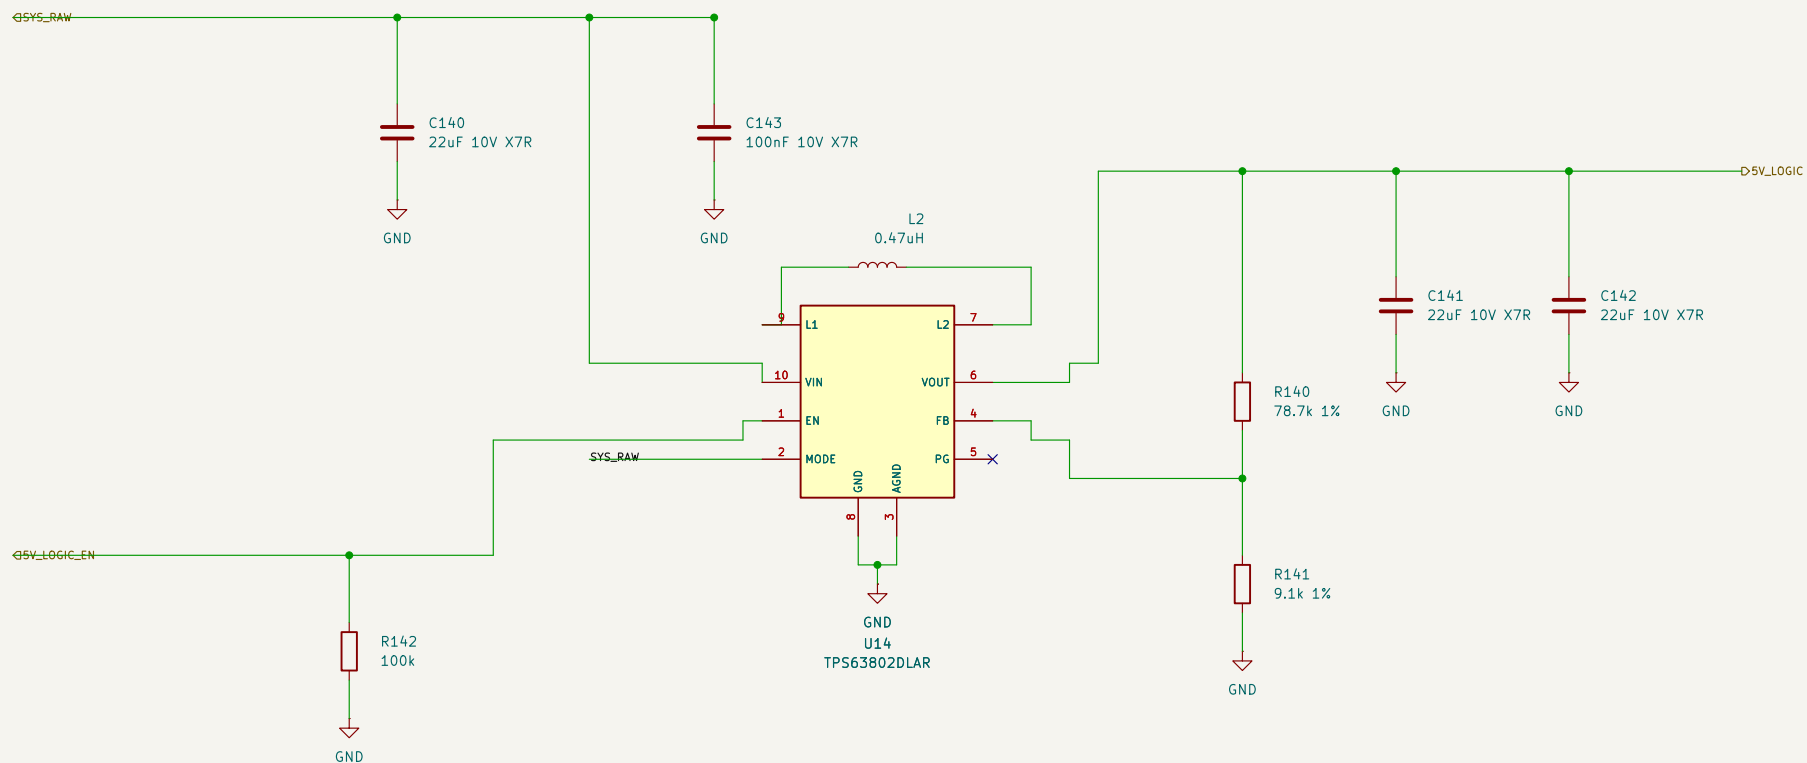

Title: Regulated 5 V logic and audio supply

Size: A4	Date:	Rev: 0.1
KiCad E.D.A. 10.0.6-rc2		Id: 6/6