



Assembly Instructions:

- Place padding on pegboard, cover with spandex
 Wrap spandex around to backside of pegboard
 Secure spandex to pegboard with staples or rivets.
 After applying velcro hook, staple in place for added strength
 Apply Velcro loop to the hook and do not remove backing from the loop.

Note:

- All views shown are for the right side assemblies unless otherwise noted.
 Spandex color should be red or blue

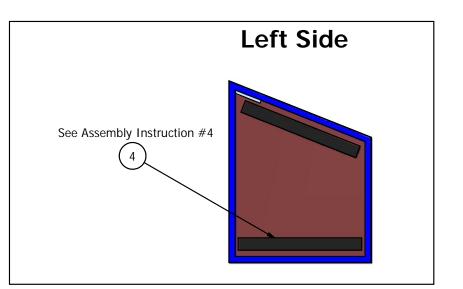

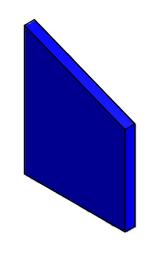

Resources					
Resource	Material	Quantity			
1	2" Memory Foam 3 lb/ft³ (Walmart 2" Aerus Natural	29-3/8" x 23"			
	Memory Foam Topper)	29-3/8 X 23			
2	1/4" Thick hardboard, shop pegboard	29-3/8" x 23"			
3	Spandex Material	29" x 36"			
4	2" Velcro Hook and Loop	42 inches			

PARTS LIST						
ITEM	QTY	PART NUMBER	DESCRIPTION			
1	1	GE-10024-01	Padding, Small			
2	1	GE-10024-02	Padding Backing, Small			
3	1	GE-10024-03	Spandex, Small			
9	2	GE-10024-04	2" Velcro			

	-							
DRAWN mcyr		11/12/2009				FIRS	ST	
CHECKED				200 Bedford Street, Manchester, NH 0310				
UNLESS OTHERWISE SPECIFIED				(603) 666-3906 FAX (603) 666-3907				
TOLERANCES: (INCHES)			TITLE	TITLE				
	FRAC.	+/- 1/32		Small Padding, Goal				
	.00	+/01	SIZE			DWG NO		l REV
	.000	+/005	B			GE-1002	4	INEV
	ANGULAR	+/25 Deg	. SCALE				SHEET 1 OF 2	

