

# Choupo

The Open Source Chemical Process Simulator

# User Guide

Choupo-dev

Copyright © 2026 Vítor Geraldes.

Authors: Vítor Geraldes.

This work is licensed under a Creative Commons Attribution-ShareAlike 4.0 International License.

Code examples, Choupo case files, and other machine-readable examples are licensed under GPL-3.0-or-later.

Typeset in LaTeX.

---

*Acknowledgment.* Choupo was conceived and architected by Vítor Geraldes. Substantial parts of the initial implementation, documentation, and tutorial corpus were produced with assistance from Anthropic Claude Code using Claude Opus/Fable models. This guide is published under human curation, review, and editorial responsibility by Vítor Geraldes.

# License

Attribution-ShareAlike 4.0 International

=======================================================================

Creative Commons Corporation ("Creative Commons") is not a law firm and
does not provide legal services or legal advice. Distribution of
Creative Commons public licenses does not create a lawyer-client or
other relationship. Creative Commons makes its licenses and related
information available on an "as-is" basis. Creative Commons gives no
warranties regarding its licenses, any material licensed under their
terms and conditions, or any related information. Creative Commons
disclaims all liability for damages resulting from their use to the
fullest extent possible.

Using Creative Commons Public Licenses

Creative Commons public licenses provide a standard set of terms and
conditions that creators and other rights holders may use to share
original works of authorship and other material subject to copyright
and certain other rights specified in the public license below. The
following considerations are for informational purposes only, are not
exhaustive, and do not form part of our licenses.

     Considerations for licensors: Our public licenses are
     intended for use by those authorized to give the public
     permission to use material in ways otherwise restricted by
     copyright and certain other rights. Our licenses are
     irrevocable. Licensors should read and understand the terms
     and conditions of the license they choose before applying it.
     Licensors should also secure all rights necessary before
     applying our licenses so that the public can reuse the
     material as expected. Licensors should clearly mark any
     material not subject to the license. This includes other CC-
     licensed material, or material used under an exception or
     limitation to copyright. More considerations for licensors:
    wiki.creativecommons.org/Considerations_for_licensors

     Considerations for the public: By using one of our public
     licenses, a licensor grants the public permission to use the
     licensed material under specified terms and conditions. If
     the licensor's permission is not necessary for any reason--for
     example, because of any applicable exception or limitation to
     copyright--then that use is not regulated by the license. Our
     licenses grant only permissions under copyright and certain
     other rights that a licensor has authority to grant. Use of
     the licensed material may still be restricted for other
     reasons, including because others have copyright or other
     rights in the material. A licensor may make special requests,
     such as asking that all changes be marked or described.
     Although not required by our licenses, you are encouraged to
     respect those requests where reasonable. More considerations
     for the public:
    wiki.creativecommons.org/Considerations_for_licensees

=======================================================================

Creative Commons Attribution-ShareAlike 4.0 International Public
License

By exercising the Licensed Rights (defined below), You accept and agree
to be bound by the terms and conditions of this Creative Commons
Attribution-ShareAlike 4.0 International Public License ("Public
License"). To the extent this Public License may be interpreted as a
contract, You are granted the Licensed Rights in consideration of Your
acceptance of these terms and conditions, and the Licensor grants You
such rights in consideration of benefits the Licensor receives from
making the Licensed Material available under these terms and
conditions.


Section 1 -- Definitions.

  a. Adapted Material means material subject to Copyright and Similar
     Rights that is derived from or based upon the Licensed Material
     and in which the Licensed Material is translated, altered,
     arranged, transformed, or otherwise modified in a manner requiring
     permission under the Copyright and Similar Rights held by the
     Licensor. For purposes of this Public License, where the Licensed
     Material is a musical work, performance, or sound recording,
     Adapted Material is always produced where the Licensed Material is
     synched in timed relation with a moving image.

  b. Adapter's License means the license You apply to Your Copyright
     and Similar Rights in Your contributions to Adapted Material in
     accordance with the terms and conditions of this Public License.

  c. BY-SA Compatible License means a license listed at
     creativecommons.org/compatiblelicenses, approved by Creative
     Commons as essentially the equivalent of this Public License.

  d. Copyright and Similar Rights means copyright and/or similar rights
     closely related to copyright including, without limitation,
     performance, broadcast, sound recording, and Sui Generis Database
     Rights, without regard to how the rights are labeled or
     categorized. For purposes of this Public License, the rights
     specified in Section 2(b)(1)-(2) are not Copyright and Similar

Rights.

e. Effective Technological Measures means those measures that, in the absence of proper authority, may not be circumvented under laws fulfilling obligations under Article 11 of the WIPO Copyright Treaty adopted on December 20, 1996, and/or similar international agreements.

f. Exceptions and Limitations means fair use, fair dealing, and/or any other exception or limitation to Copyright and Similar Rights that applies to Your use of the Licensed Material.

g. License Elements means the license attributes listed in the name of a Creative Commons Public License. The License Elements of this Public License are Attribution and ShareAlike.

h. Licensed Material means the artistic or literary work, database, or other material to which the Licensor applied this Public License.

i. Licensed Rights means the rights granted to You subject to the terms and conditions of this Public License, which are limited to all Copyright and Similar Rights that apply to Your use of the Licensed Material and that the Licensor has authority to license.

j. Licensor means the individual(s) or entity(ies) granting rights under this Public License.

k. Share means to provide material to the public by any means or process that requires permission under the Licensed Rights, such as reproduction, public display, public performance, distribution, dissemination, communication, or importation, and to make material available to the public including in ways that members of the public may access the material from a place and at a time individually chosen by them.

l. Sui Generis Database Rights means rights other than copyright resulting from Directive 96/9/EC of the European Parliament and of the Council of 11 March 1996 on the legal protection of databases, as amended and/or succeeded, as well as other essentially equivalent rights anywhere in the world.

m. You means the individual or entity exercising the Licensed Rights under this Public License. Your has a corresponding meaning.

Section 2 -- Scope.

a. License grant.

1. Subject to the terms and conditions of this Public License, the Licensor hereby grants You a worldwide, royalty-free, non-sublicensable, non-exclusive, irrevocable license to exercise the Licensed Rights in the Licensed Material to:

a. reproduce and Share the Licensed Material, in whole or in part; and

b. produce, reproduce, and Share Adapted Material.

2. Exceptions and Limitations. For the avoidance of doubt, where Exceptions and Limitations apply to Your use, this Public License does not apply, and You do not need to comply with its terms and conditions.

3. Term. The term of this Public License is specified in Section 6(a).

4. Media and formats; technical modifications allowed. The Licensor authorizes You to exercise the Licensed Rights in all media and formats whether now known or hereafter created, and to make technical modifications necessary to do so. The Licensor waives and/or agrees not to assert any right or authority to forbid You from making technical modifications necessary to exercise the Licensed Rights, including technical modifications necessary to circumvent Effective Technological Measures. For purposes of this Public License, simply making modifications authorized by this Section 2(a) (4) never produces Adapted Material.

5. Downstream recipients.

a. Offer from the Licensor -- Licensed Material. Every recipient of the Licensed Material automatically receives an offer from the Licensor to exercise the Licensed Rights under the terms and conditions of this Public License.

b. Additional offer from the Licensor -- Adapted Material. Every recipient of Adapted Material from You automatically receives an offer from the Licensor to exercise the Licensed Rights in the Adapted Material under the conditions of the Adapter's License You apply.

c. No downstream restrictions. You may not offer or impose any additional or different terms or conditions on, or apply any Effective Technological Measures to, the Licensed Material if doing so restricts exercise of the Licensed Rights by any recipient of the Licensed Material.

6. No endorsement. Nothing in this Public License constitutes or
   may be construed as permission to assert or imply that You
   are, or that Your use of the Licensed Material is, connected
   with, or sponsored, endorsed, or granted official status by,
   the Licensor or others designated to receive attribution as
   provided in Section 3(a)(1)(A)(i).

b. Other rights.

1. Moral rights, such as the right of integrity, are not
   licensed under this Public License, nor are publicity,
   privacy, and/or other similar personality rights; however, to
   the extent possible, the Licensor waives and/or agrees not to
   assert any such rights held by the Licensor to the limited
   extent necessary to allow You to exercise the Licensed
   Rights, but not otherwise.

2. Patent and trademark rights are not licensed under this
   Public License.

3. To the extent possible, the Licensor waives any right to
   collect royalties from You for the exercise of the Licensed
   Rights, whether directly or through a collecting society
   under any voluntary or waivable statutory or compulsory
   licensing scheme. In all other cases the Licensor expressly
   reserves any right to collect such royalties.

Section 3 -- License Conditions.

Your exercise of the Licensed Rights is expressly made subject to the
following conditions.

a. Attribution.

1. If You Share the Licensed Material (including in modified
   form), You must:

   a. retain the following if it is supplied by the Licensor
      with the Licensed Material:

      i. identification of the creator(s) of the Licensed
         Material and any others designated to receive
         attribution, in any reasonable manner requested by
         the Licensor (including by pseudonym if
         designated);

      ii. a copyright notice;

      iii. a notice that refers to this Public License;

      iv. a notice that refers to the disclaimer of
          warranties;

      v. a URI or hyperlink to the Licensed Material to the
         extent reasonably practicable;

   b. indicate if You modified the Licensed Material and
      retain an indication of any previous modifications; and

   c. indicate the Licensed Material is licensed under this
      Public License, and include the text of, or the URI or
      hyperlink to, this Public License.

2. You may satisfy the conditions in Section 3(a)(1) in any
   reasonable manner based on the medium, means, and context in
   which You Share the Licensed Material. For example, it may be
   reasonable to satisfy the conditions by providing a URI or
   hyperlink to a resource that includes the required
   information.

3. If requested by the Licensor, You must remove any of the
   information required by Section 3(a)(1)(A) to the extent
   reasonably practicable.

b. ShareAlike.

   In addition to the conditions in Section 3(a), if You Share
   Adapted Material You produce, the following conditions also apply.

1. The Adapter's License You apply must be a Creative Commons
   license with the same License Elements, this version or
   later, or a BY-SA Compatible License.

2. You must include the text of, or the URI or hyperlink to, the
   Adapter's License You apply. You may satisfy this condition
   in any reasonable manner based on the medium, means, and
   context in which You Share Adapted Material.

3. You may not offer or impose any additional or different terms
   or conditions on, or apply any Effective Technological
   Measures to, Adapted Material that restrict exercise of the
   rights granted under the Adapter's License You apply.

Section 4 -- Sui Generis Database Rights.

Where the Licensed Rights include Sui Generis Database Rights that
apply to Your use of the Licensed Material:

a. for the avoidance of doubt, Section 2(a)(1) grants You the right
   to extract, reuse, reproduce, and Share all or a substantial
   portion of the contents of the database;

b. if You include all or a substantial portion of the database
   contents in a database in which You have Sui Generis Database
   Rights, then the database in which You have Sui Generis Database
   Rights (but not its individual contents) is Adapted Material,
   including for purposes of Section 3(b); and

c. You must comply with the conditions in Section 3(a) if You Share
   all or a substantial portion of the contents of the database.

For the avoidance of doubt, this Section 4 supplements and does not
replace Your obligations under this Public License where the Licensed
Rights include other Copyright and Similar Rights.


Section 5 -- Disclaimer of Warranties and Limitation of Liability.

a. UNLESS OTHERWISE SEPARATELY UNDERTAKEN BY THE LICENSOR, TO THE
   EXTENT POSSIBLE, THE LICENSOR OFFERS THE LICENSED MATERIAL AS-IS
   AND AS-AVAILABLE, AND MAKES NO REPRESENTATIONS OR WARRANTIES OF
   ANY KIND CONCERNING THE LICENSED MATERIAL, WHETHER EXPRESS,
   IMPLIED, STATUTORY, OR OTHER. THIS INCLUDES, WITHOUT LIMITATION,
   WARRANTIES OF TITLE, MERCHANTABILITY, FITNESS FOR A PARTICULAR
   PURPOSE, NON-INFRINGEMENT, ABSENCE OF LATENT OR OTHER DEFECTS,
   ACCURACY, OR THE PRESENCE OR ABSENCE OF ERRORS, WHETHER OR NOT
   KNOWN OR DISCOVERABLE. WHERE DISCLAIMERS OF WARRANTIES ARE NOT
   ALLOWED IN FULL OR IN PART, THIS DISCLAIMER MAY NOT APPLY TO YOU.

b. TO THE EXTENT POSSIBLE, IN NO EVENT WILL THE LICENSOR BE LIABLE
   TO YOU ON ANY LEGAL THEORY (INCLUDING, WITHOUT LIMITATION,
   NEGLIGENCE) OR OTHERWISE FOR ANY DIRECT, SPECIAL, INDIRECT,
   INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY, OR OTHER LOSSES,
   COSTS, EXPENSES, OR DAMAGES ARISING OUT OF THIS PUBLIC LICENSE OR
   USE OF THE LICENSED MATERIAL, EVEN IF THE LICENSOR HAS BEEN
   ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS, EXPENSES, OR
   DAMAGES. WHERE A LIMITATION OF LIABILITY IS NOT ALLOWED IN FULL OR
   IN PART, THIS LIMITATION MAY NOT APPLY TO YOU.

c. The disclaimer of warranties and limitation of liability provided
   above shall be interpreted in a manner that, to the extent
   possible, most closely approximates an absolute disclaimer and
   waiver of all liability.


Section 6 -- Term and Termination.

a. This Public License applies for the term of the Copyright and
   Similar Rights licensed here. However, if You fail to comply with
   this Public License, then Your rights under this Public License
   terminate automatically.

b. Where Your right to use the Licensed Material has terminated under
   Section 6(a), it reinstates:

   1. automatically as of the date the violation is cured, provided
      it is cured within 30 days of Your discovery of the
      violation; or

   2. upon express reinstatement by the Licensor.

   For the avoidance of doubt, this Section 6(b) does not affect any
   right the Licensor may have to seek remedies for Your violations
   of this Public License.

c. For the avoidance of doubt, the Licensor may also offer the
   Licensed Material under separate terms or conditions or stop
   distributing the Licensed Material at any time; however, doing so
   will not terminate this Public License.

d. Sections 1, 5, 6, 7, and 8 survive termination of this Public
   License.


Section 7 -- Other Terms and Conditions.

a. The Licensor shall not be bound by any additional or different
   terms or conditions communicated by You unless expressly agreed.

b. Any arrangements, understandings, or agreements regarding the
   Licensed Material not stated herein are separate from and
   independent of the terms and conditions of this Public License.


Section 8 -- Interpretation.

a. For the avoidance of doubt, this Public License does not, and
   shall not be interpreted to, reduce, limit, restrict, or impose
   conditions on any use of the Licensed Material that could lawfully
   be made without permission under this Public License.

b. To the extent possible, if any provision of this Public License is
   deemed unenforceable, it shall be automatically reformed to the
   minimum extent necessary to make it enforceable. If the provision
   cannot be reformed, it shall be severed from this Public License
   without affecting the enforceability of the remaining terms and
   conditions.

```
  c. No term or condition of this Public License will be waived and no
     failure to comply consented to unless expressly agreed to by the
     Licensor.

  d. Nothing in this Public License constitutes or may be interpreted
     as a limitation upon, or waiver of, any privileges and immunities
     that apply to the Licensor or You, including from the legal
     processes of any jurisdiction or authority.


=======================================================================

Creative Commons is not a party to its public
licenses. Notwithstanding, Creative Commons may elect to apply one of
its public licenses to material it publishes and in those instances
will be considered the "Licensor." The text of the Creative Commons
public licenses is dedicated to the public domain under the CC0 Public
Domain Dedication. Except for the limited purpose of indicating that
material is shared under a Creative Commons public license or as
otherwise permitted by the Creative Commons policies published at
creativecommons.org/policies, Creative Commons does not authorize the
use of the trademark "Creative Commons" or any other trademark or logo
of Creative Commons without its prior written consent including,
without limitation, in connection with any unauthorized modifications
to any of its public licenses or any other arrangements,
understandings, or agreements concerning use of licensed material. For
the avoidance of doubt, this paragraph does not form part of the
public licenses.

Creative Commons may be contacted at creativecommons.org.
```

# Trademarks

Choupo is a trademark of TalentGround Lda.

Anthropic, Claude, and Claude Code are trademarks or registered trademarks of Anthropic, PBC.

ParaView is a trademark of Kitware Inc.

# Contents

**Preface — read this first** **1**

**1 Quick start** **2**
1.1 Permanent shell setup . . . 2
1.2 Build modes . . . 2

**2 The shell helpers** **3**

**3 Anatomy of a case directory** **4**
3.1 The dictionary: one notation for the whole simulator . . . 4
3.2 `controlDict` . . . 6
3.3 `flowsheetDict` — topology only . . . 6
3.4 The `0/` directory — one file per stream . . . 8
3.5 Materialising `0/`: `bin/choupo-init0` . . . 10
3.6 Validating without solving: `bin/choupo-lint` . . . 11
3.7 Units on every scalar . . . 11
3.8 Optional dicts . . . 12

**4 The thermodynamic foundation: `constant/thermoPhysPropDict`** **13**
4.1 Activity models (liquid $\gamma$) . . . 14
4.2 Equation of state (vapour $\varphi$ — and, for a cubic, the liquid too) . . . 14
4.3 Per-component correlations . . . 14
4.4 Multiple liquid phases (LLE / VLLE) . . . 14
4.5 Transport properties . . . 15
4.6 Dissolved gases: Henry's law . . . 15
4.7 The `formulation` keyword and the four VLE worlds . . . 15
4.8 Pure fluids: IAPWS-IF97 steam . . . 16
4.9 Per-unit `thermo {}` override and model boundaries . . . 16
4.10 Self-contained cases . . . 17

**5 Built-in unit operations** **18**
5.1 Quick reference . . . 18
5.2 Flash and saturation . . . 19
5.3 The reactor family . . . 20
5.4 Heat transfer . . . 23
5.5 Rotating equipment and electric loads . . . 24
5.6 Distillation, absorption, extraction . . . 24
5.7 Membranes and electrochemical separations . . . 28
5.8 Solids: separation, conveying, crystallisation . . . 31
5.9 Drying . . . 32
5.10 Flow primitives: mixer, splitter, valve, pipe . . . 34
5.11 Heat duties, utilities, heat integration . . . 34

**6 Reports** **36**

**7 The Panel view: an operator panel, read-only** **38**

**8 Sweeps, design specs, optimisation** **39**
8.1 `type sweep;` — trend over one parameter . . . 39
8.2 `type designSpec;` — meet N specs with N knobs . . . 40
8.3 `type optimization;` — search for the best value . . . 41

**9 Equipment sizing and costing** **42**

**10 Heat integration: pinch targets and candidate matches** **44**
10.1 Reading the answer . . . 44
10.2 Two declarations that look like one . . . 44
10.3 What it will not do . . . 45

**11 Batch simulation: `choupoBatch`** **46**
11.1 `batchReactor` . . . 46
11.2 `batchStill` — Rayleigh and the batch rectifier . . . 46

11.3 `batchCrystalliser` . . . 47
11.4 `batchDryer` . . . 47
11.5 `batchDiafilter` . . . 47
11.6 `batchElectrodialysis` . . . 47
11.7 Recipes — scripting a campaign . . . 48
11.8 Switching a feed mid-campaign: the datum amendment . . . 48
11.9 When the utility is needed, not just how much . . . 49

**12 Dynamic simulation and control: `choupoCtrl` 51**
12.1 `dynamicCSTR` . . . 51
12.2 Controllers . . . 51
12.3 Residence-time distribution by pulse tracer: `rtd` . . . 52
12.4 Frequency response and the Bode table: `frequencyResponse` . . . 52
12.5 A column exists only where a measurement does . . . 52
12.6 The first law in a dynamic run, and when it refuses . . . 53

**13 The property workbench: `choupoProps` 54**

**14 Cases pinned on published sources 55**

**15 Tour of the tutorials 56**

**16 Output anatomy 58**

**17 The web GUI: a runner and visualiser 59**
17.1 Starting the GUI . . . 59
17.2 The layout and interactions . . . 59
17.3 A properties case: the Workflow . . . 59

**18 Building your own case 61**

**19 Troubleshooting 62**

**20 Where to look next 64**

# Preface — read this first

Engineers used to text-driven, file-first tools will feel at home. Newcomers will feel curious, then liberated. Choupo is an *educational* process simulator: every Newton iteration, every $K$-value, every Wegstein step is visible both in the source and at runtime. If something surprises you, the answer is always one `grep` away.

This guide walks you from a cold install to running, reading, modifying, and building your own cases: first the case anatomy (the plain-text dictionaries and the per-stream state files), then the thermodynamic foundation, then every family of unit operations with a minimal working dict, then the outer layers — sweeps, design specifications, optimisation, sizing and costing — and finally the time-dependent binaries, the property workbench, and the browser front-end. Each section opens with a *What you'll learn* note; boxes mark crystal-clear takeaways, common pitfalls, and small experiments you should run as you read.

Five binaries cover five problem classes, and one dispatcher (`runCase`) picks the right one for each case:

| Binary | Problem class | Mathematics |
|---|---|---|
| `choupoSolve` | steady-state flowsheets | $F(x) = 0$ root-finding; Newton-on-tears recycles |
| `choupoBatch` | batch vessels + recipes | $\mathrm{d}Y/\mathrm{d}t = f(Y)$, RK4 or stiff Rosenbrock |
| `choupoSemiContinuous` | transient flowsheets, no control loop | $\mathrm{d}Y/\mathrm{d}t = f(Y, t)$ with continuous inlets and outlets (start-up, disturbance, fed-batch, feed & bleed) |
| `choupoCtrl` | dynamic continuous + control | $\mathrm{d}Y/\mathrm{d}t = f(Y, u, t)$ with controllers writing $u$ |
| `choupoProps` | property evaluation | points, scans, consistency tests, LM fits |

# 1 Quick start

*What you'll learn.* How to build the simulator once, set up your shell environment, and run your first tutorial in under five minutes.

Choupo needs only a C++17 compiler (`g++`) and GNU `make` — no external libraries. Build once, source the shell environment once, then run any tutorial:

```
cd /path/to/Choupo
make all                                          # release build
source etc/bashrc                                 # adds bin/ + project root to PATH

listCases                                         # available tutorials
runCase tutorials/steady/flash/flash01_benzene_toluene     # run one
less tutorials/steady/flash/flash01_benzene_toluene/log.choupoSolve
```

Tutorials live under `tutorials/<category>/<family>/<name>/`, where the category is a DISCIPLINE a student studies, never a binary: `steady/` (steady-state process simulation, `choupoSolve`), `unsteady/` (transient process simulation with no control loop, `choupoSemiContinuous`), `ctrl/` (process control, `choupoCtrl`), `batch/` (batch processes, `choupoBatch`), `props/` (thermophysical properties, `choupoProps`) or `plant/` (integrated plant design, multi-sector cases). `runCase` reads each case's `controlDict.application` and dispatches to the right binary automatically — you never pick the executable by hand. After your first build a symlink per binary (e.g. `./choupoSolve`) points to the matching `build/<platform>/` executable.

## 1.1 Permanent shell setup

Append this line to `~/.bashrc` so every new terminal has the environment ready:

```
source /path/to/Choupo/etc/bashrc
```

A fresh terminal then greets you with:

```
Choupo environment loaded.
  CHOUPO_HOME      = /path/to/Choupo
  CHOUPO_WORKSPACE = /path/to/Choupo/cases   (your cases; newCase writes here)
  Commands available  : choupoSolve, runCase, runApplication, newCase,
                        listCases, cleanCase, Choupo, cdTut, cdWork
```

## 1.2 Build modes

```
make all                # default --- release, -O2
make MODE=debug all     # -O0 -g, parallel tree under build/<platform>Debug
make print              # show resolved build variables
make clean              # remove current mode's objects
make distclean          # remove the whole build/ tree (and the WASM build)
```

Both modes coexist; the `choupoSolve` symlink points to the *last* binary built.

**Key idea.** You never recompile to switch cases. Build once, source once, then all you do is edit text dictionaries and re-run.

**Try it now.** Run `runCase tutorials/steady/flash/flash01_benzene_toluene` and then `less` the `log.choupoSolve` it writes. Notice the per-iteration trace under "Rachford-Rice Newton": that is the simulator showing its work.

# 2 The shell helpers

> *What you'll learn.* A handful of short commands cover every interaction you'll have with the simulator from the shell.

After sourcing `etc/bashrc` you have:

| Command | Purpose |
|---|---|
| `choupoSolve <case>` | Run a case directly; write everything to stdout. |
| `runCase [<case>]` | Run + redirect to `log.<binary>` in the case dir; dispatches by `controlDict.application`. Defaults to the current dir. |
| `runApplication <binary> <args>` | Run any binary, redirect to `log.<binary>` in the cwd. |
| `listCases` | Tabulate all tutorials with one-line descriptions. |
| `newCase <name> [note]` | Scaffold a fresh case in `$CHOUPO_WORKSPACE`. |
| `cleanCase [<case>]` | Remove `log.*` and generated outputs (never touches source). |
| `Choupo` | `cd` to the project root. |
| `cdTut` | `cd` to `tutorials/`. |
| `cdWork` | `cd` to your case workspace. |

Two equivalent workflows:

```
# From anywhere (use $CHOUPO_HOME):
runCase $CHOUPO_HOME/tutorials/steady/flash/flash01_benzene_toluene

# From inside the case dir:
cd tutorials/steady/flash/flash01_benzene_toluene
runCase                                  # writes log.choupoSolve here
```

Three further tools appear later in this guide: `bin/choupo-lint` (validate a case without running it, §3.6), `bin/choupo-init0` (materialise the initial stream state, §3.5) and `bin/choupo-import` (seal a case's property data so it runs self-contained, §4.10). `bin/runTests` runs the full regression over every bundled tutorial.

# 3 Anatomy of a case directory

> *What you'll learn.* Every case is a folder of plain-text files with a fixed division of labour: `system/` says how the problem is organised, `constant/` carries the models and data, and — in a steady case — the `0/` directory carries the complete initial state of every stream, one file per stream, OpenFOAM-style. The solver writes its answer to `converged/`. You will also meet the notation all of them are written in — the *dictionary* — and the reasoning behind it: why a process is *declared* rather than scripted, and why each fact gets exactly one home (§3.1).

The tree below is a *steady* (`choupoSolve`) case — the most common kind, and the one whose anatomy the rest of this section dissects. The other binaries reuse the same `system/` + `constant/` skeleton but not the stream-state directories: a batch or control case has no flowsheet streams to seed — its vessels carry `initial {}` charges and the run writes `trajectory.csv` (§11, §12) — and a props case replaces `flowsheetDict` with a `propsDict` altogether (§13).

```
caseName/
|-- caseName.cho             GUI marker (openable entity) --- empty, or
|                              GUI layout metadata; the solver never reads it
|-- system/
|   |-- controlDict          REQUIRED  application, verbosity, reports{}
|   |-- flowsheetDict        REQUIRED  TOPOLOGY ONLY: units + connections
|   |-- solverDict           optional  per-unit-op solver options
|   |-- outerDict            optional  sweep / designSpec / optimisation
|   `-- postDict             optional  sizing + costing chain
|-- constant/
|   |-- thermoPhysPropDict   REQUIRED  the thermophysical system
|   |-- reactions            optional  named-reaction library
|   |-- crystallisation      optional  crystallisation-kinetics library
|   |-- dryingKinetics       optional  drying-curve library
|   |-- components/          optional  case-local component overlays
|   `-- propertyManifest     optional  sealed-case seal: the dependency closure
|                                      + a sha256 per record (self-contained cases)
|-- 0/                       REQUIRED (steady only)  initial stream state,
|   |-- feed   liquid   vapor                        ONE FILE PER STREAM
`-- (written by the run)
    |-- converged/           the steady solution, same one-file-per-stream shape
|-- design/              one specification sheet per equipment item, when a
|                          `sizing {}` pass ran: inlets, outlets, sizing, cost
    |-- reports/             CSV + .ods reports selected in controlDict
    `-- log.choupoSolve      written by runCase
```

**Key idea.** A standalone unit operation is just a `flowsheetDict` of length 1. There is no special "single-unit" mode — one consistent case format for everything, from one flash drum to a multi-sector plant.

## 3.1 The dictionary: one notation for the whole simulator

Every file named above — `controlDict`, `flowsheetDict`, `thermoPhysPropDict`, each stream's state file, the reaction library — is written in the same small notation, the *dictionary*. It is worth meeting the whole language at once, because there is very little of it: five constructs of grammar, and — further down — two keywords that mean more than they say.

```
// a line comment; /* a block comment */ also works

keyword       value;                  // (1) an entry: one keyword, one value
                                      //     value = word, number, or "string"
block                                 // (2) a sub-dictionary: a named group
{
    keyword   value;
    nested    { keyword value; }      //     nesting is unlimited
}
names         ( alpha  beta  gamma ); // (3) a list of words or numbers
```

```
things                                  // (4) a list of sub-dictionaries
(
    { name a;  type flash; }            //     order is significant here
    { name b;  type mixer; }
);
```

That is the entire grammar: entries, sub-dictionaries, lists, lists-of-sub-dictionaries, comments. A number may carry its unit (`P 1 bar;`) — §3.7 covers that. There is no schema to register and no include mechanism; exactly two keywords do more than name a value, and you can read a case for a long time before meeting either:

```
variables { A  17.0 m2; }        // name a value once...
// ... then spend it wherever it belongs:
units ( { name effect1;  operation { area $A; } }
        { name effect2;  operation { area $A; } } );

inherits  "../../../constant";   // (in a thermoPhysPropDict) build on the
                                 // system declared at that folder
```

`variables` exists so that one physical quantity shared by several units — the heat-transfer area common to three evaporator effects, say — is written once and referenced, rather than copied three times and then edited twice. It is the same one-fact-one-home rule as the file layout, applied inside a file. `inherits` lets a sector's thermophysical system build on its plant's instead of repeating it (§4).

**Why plain text, and why this notation.** The format is deliberate, not incidental:

- **A process change is a reviewable diff.** Cases live in version control beside the code. "What changed between the run that worked and the one that didn't?" is answered by `git diff`, not by opening two projects side by side.
- **Comments are first-class.** In a teaching tool a case file is half specification and half explanation — the tutorials carry their reasoning in the dict itself, next to the number it justifies. A format without native comments (JSON) cannot do that; a general-purpose one (YAML, TOML) would force `P 1 bar;` into either a bare string or a nested object. The notation is domain-native: a chemical engineer's quantity, with its unit, on one line.
- **Nothing is hidden.** There is no binary project file, no cache that must agree with the text, no export step between what you edit and what the solver reads. The files in the folder are the complete input — which is the same glass-box promise the solver makes about its iterations.
- **It is writable by hand and by machine.** The tutorials were authored in a text editor; increasingly, cases are drafted with an assistant's help. Both produce the same artefact, and `bin/choupo-lint` (§3.6) checks it before you spend a solve.

**A dictionary declares; it does not instruct.** This is the deeper idea, and it is what makes the format a *representation* of a process rather than a script that builds one. A dict states what exists and what it is: *there is a flash drum called `flash01`, fed by `feed`, held at 370 K and 1 bar.* It never says what to do, in what order, or when. You will not find a "run" statement, a loop, or an `if` anywhere in a case — and when you want a hundred runs, you do not write a loop either: you declare a sweep (§8), which is one more dictionary.

The payoff is that a case has no single privileged reader. The same declaration is consumed by the solver, by the browser GUI that draws the flowsheet, by the report objects that write the balances, and by `choupo-lint` which reads it and refuses to run it. A script would have exactly one meaning — whatever happens when you execute it. A declaration has as many useful readings as you have tools.

**One question, one file.** The division of labour across `system/`, `constant/` and `0/` follows a single rule: each fact has exactly one home.

| The question | Its one home |
|---|---|
| What is connected to what? | `system/flowsheetDict` — topology, no numbers |
| What are the stream numbers? | `0/<stream>` — one file per stream |
| What are the substances and models? | `constant/thermoPhysPropDict` (+ libraries) |
| How is this run organised? | `system/controlDict` (+ the optional dicts) |

The rule is enforced, not merely recommended. If a flow rate could be written both in `flowsheetDict` and in `0/`, the two could disagree — and some code, somewhere, would have to pick a winner quietly. So a `streams {}` block inside any `flowsheetDict` is refused with an error that names the file and points at `0/`, and a graph with more (or fewer) streams than state files is fatal *before* the first iteration. You are never one silent override away from simulating something other than what you wrote.

> **Key idea.** Because the state lives in files rather than in the topology, `converged/` comes out in exactly the same shape as `0/`. A solution can therefore seed the next run, a sector can be lifted out of a plant and run on its own, and every number the engine touched is a file you can open, diff and version — the same rule for the data as for the code.

**Inheritance: a dict you do not write is inherited.** A case that omits `controlDict`, `constant/thermoPhysPropDict` or a reaction library inherits it from the folder above (up to six levels). This is what makes the sectored layout work: a sector of a plant carries only what is genuinely its own — typically its `flowsheetDict` and, when its chemistry differs, its own thermophysical system — and still runs as a case in its own right, borrowing the rest from the plant around it. The one dict that is *never* inherited is `flowsheetDict`: it *is* the node, so a folder without one is not a case. Inheritance is announced in the log, never silent — each unit prints whether its thermodynamics were inherited or locally overridden.

## 3.2 `controlDict`

The essential keys:

```
application   choupoSolve;      // | choupoBatch | choupoSemiContinuous | choupoCtrl |
    ↪ choupoProps
description   "Isothermal flash benzene/toluene at 370 K, 1 bar (Raoult)";
verbosity     3;                // 0 silent / 1 +warnings / 2 +summary
                                // 3 info (Newton iterations visible) / 4 debug
reports
{
    streamTable    { }          // see the Reports section
    massBalance    { }
    energyBalance  { }
}
```

For pedagogical use you want `verbosity 3` — that prints every Newton iteration, every Wegstein step, every $K$-value refresh. Set it lower only when an outer driver sweeps the simulator hundreds of times. Time-dependent cases (`choupoBatch` / `choupoSemiContinuous` / `choupoCtrl`) add time controls — see §11.

## 3.3 `flowsheetDict` — topology only

The `flowsheetDict` declares *what is connected to what* — units, their wiring, and (for recycles) the tear declaration. It carries **no stream numbers**: state lives in `0/` (§3.4). The first tutorial in full:


```
// stream state lives on disk in 0/ (per-stream files);
// flowsheetDict is TOPOLOGY only

units
(
    {
        name        flash01;
        type        isothermalFlash;
        in          feed;
        outputs     ( liquid  vapor );

        operation   { T 370.0 K;  P 1.0 bar; }
    }
);
```

Every unit entry follows the same slot order: `name` and `type` (required), an optional `model` (the sub-model selector, e.g. `simultaneous` on a column), then `in` (one inlet) or `inputs (...)` (several), `outputs (...)`, the `operation {...}` block of numeric knobs, and finally optional `reaction` / `crystallisation` / `dryingCurve` references and an optional per-unit `thermo {}` override (§4.9).

**Identifying streams: inputs by name, outputs by *position*.** This is the one rule that trips up every new author, so learn it once. A unit's `inputs` and its `outputs` are matched to physical streams by *different* mechanisms. An **input** is wired *by name*: you write `in feed;` (or `inputs ( hot cold );`) and the unit reads each stream by the name you gave it (a `heatExchanger` names its tube-side inlet with `tubeStream`; a multi-feed column maps each named feed to a stage in `operation.feeds`). An **output**, by contrast, is matched *by position*. Every unit produces its streams in a *fixed internal order*, and your `outputs` list does nothing more than *rename that ordered list*: `outputs[`$k$`]` becomes the name of the $k$-th stream the unit emits.

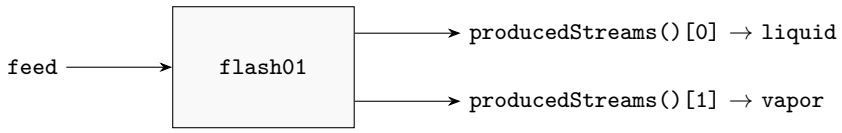


*`outputs ( liquid vapor )` renames by index — the ORDER matters*

The engine does literally `s = produced[k]; s.name = outputs[k]`. So the order of your `outputs` list must follow the unit's emission order (`isothermalFlash`: liquid, vapour; `crystalliser`: crystals, mother liquor; `cyclone`: clean gas, captured solids; `distillationColumn`: distillate, bottoms, then side draws by ascending stage — §5.6.2). Getting the order wrong sticks the label on the *wrong* physical stream and the engine does *not* warn — the counts still match. The only guard is arity: declaring more names than the unit produces is a loud error. To learn a unit's order, read its `producedStreams()` in the source (glass-box) or its entry in the unit-operation catalogue (§5).

**Recycles: tear streams.** A recycle is an ordinary stream whose producer sits downstream of its consumer. The engine *detects* the cycle itself — what you declare is the *cut*: which stream the recycle iteration tears. Declare it (and, optionally, the recycle solver knobs) in `solverDict`:

```
tearStreams        ( recycle );
recycleSolver       Newton;      // Newton on the tears (default); or Wegstein
recycleTol          1e-5;
recycleMaxIter      120;
```

The tear's initial guess is its `0/` file, like any other stream (§3.4). `recycleSolver Newton` builds a finite-difference Jacobian over the tear variables $(F, z_i, T)$ and converges quadratically; `Wegstein` keeps the classical fixed-point accelerator — run both on `tutorials/steady/flowsheets/process03_recycle` and compare the iteration counts.

**Recycle numerics as relaxation.** The three recycle solvers are three rungs of one idea. A recycle is a fixed-point problem $x = G(x)$; `recycleSolver directSubstitution` iterates it directly, and `recycleRelaxation w` (with $0 < w \le 1$, default 1) damps it, $x^{+} = (1-w)\,x + w\,G(x)$, exactly OpenFOAM's `relaxationFactors`. Wegstein is the same formula with $w = 1 - q$ chosen per variable from the last two iterates, so `recycleWegsteinQmin`/`Qmax` clamp a relaxation factor: $q = 0$ is direct substitution ($w = 1$), $q = 0.5$ the 50/50 average ($w = 0.5$), $q = -1$ a doubled step ($w = 2$), $q < -1$ stronger acceleration; the default clamp $[-1, 0]$ keeps $w \in [1, 2]$. Newton on the tears (`recycleSolver Newton`, the default) uses the whole slope; its honest knob is a step cap, `recycleMaxStep f` (a fraction of each unknown's scale per step), not a fixed factor. Every declared value is announced in the run log. `solverDict` also carries one block per unit type for the Newton of that unit (`distillationColumn { lineSearch armijo|none; maxStepT 10 K; maxStepX 0.1; }`, `cstr { maxStepExtent 0.5; }`); a key the engine does not read is refused by name.

**The sequential-plan contract.** The solver executes the units *in the order you declare them* — it never reorders. Before anything runs, the plan is validated: every material input must be a domain inlet, an output of an *earlier* unit, or a declared tear; and every declared tear must point backwards and close a real cycle. A cycle with no declared tear refuses, naming the cycle and the `tearStreams` line to paste; an out-of-order acyclic flowsheet refuses with a valid declaration order to paste; a tear that cuts nothing real (forward, off-cycle, misspelled) refuses too. When the plan is valid, the cut is announced in the log:

```
[plan] material recycle: tear 'recycle' cuts  mixer01 -> reactor ->
       separator -> split01 --recycle--> mixer01
```

Why so strict? Because every stream is pre-seeded from `0/`, a unit that reads a stream before its producer has run would silently consume the *initial guess* instead of the computed value — a wrong answer with no error. The validation makes that impossible. For the same honesty, a recycle that exhausts its iterations without converging now exits with status 1 and writes no `converged/` — the directory's name is a promise.

**Sectors — a plant and its sectors.** A big plant is organised as *sectors* (composite sub-flowsheets), each a folder with its own `system/flowsheetDict` and, when it needs one, its own `constant/thermoPhysPropDict` (a sector may run a different thermodynamic world — e.g. an electrolyte model in a brine section and NRTL in a solvent-recovery section). The root dict then assembles members and named connections:

```
sectors ( BRINE  EXTRACTION  CARBONATION );    // UPPERCASE folders
// or:   units ( cryst1 cryst2 recovery );     // dignified unit folders

connections
{
    liRichBrine { from BRINE/liRichBrine;  to EXTRACTION/liRichBrine; }
    brineFeed   { to BRINE/brineFeed; }        // to-only   = plant inlet
    tails       { from EXTRACTION/raffinate; } // from-only = plant outlet
}
```

The connection *key* is the stream's one stable identity (and its `0/` filename); `from`/`to` are producer/consumer ports. A stream's *role* is inferred from the shape of its edge — a `to`-only edge is an inlet, `from`+`to` is internal, `from`-only is an outlet. There is no boundary mini-language to maintain. The whole tree is flattened into one solver problem (`plant.sector.unit` names); the hierarchy is for authoring and namespacing, never a solver-within-a-solver. See `tutorials/plant/` for worked multi-sector cases.

## 3.4 The `0/` directory — one file per stream

In a steady case a stream's state lives in its own file on disk — never inside `flowsheetDict`. The `0/` directory holds the **complete initial state**: for an *inlet* the file is your boundary specification; for an *internal* or *outlet* stream it is an initial estimate the solver overwrites. (This contract belongs to the steady domain — `choupoSolve`; the time-dependent and props binaries have no stream registry to seed.) The file for the flash tutorial's feed:

```
// 0/feed
componentMolarFlows
{
    benzene    40 kmol/h;
    toluene    60 kmol/h;
}

T    370 K;
P    1.0 bar;
```

**Material — pick exactly one form.** Four equivalent ways to state what flows; a second form in the same file is a fatal conflict:

```
componentMolarFlows { water 86 kmol/h;  NaCl 12 kmol/h; }            // (a)
componentMassFlows  { water 1549.3 kg/h;  NaCl 701.3 kg/h; }         // (b)
molarFlow 100 kmol/h;   moleFractions { water 0.86;  NaCl 0.14; }    // (c)
massFlow 2250.6 kg/h;   massFractions { water 0.6884; NaCl 0.3116; } // (d)
```

Forms (a)/(b) are the natural process-design description ("mix 40 kmol/h of A with 60 kmol/h of B"); (c)/(d) are the textbook total + composition. Mass converts through each component's MW. Fractions must close: if $|\sum_i x_i - 1| > 10^{-6}$ the reader stops with a fatal error naming the stream and the actual sum — there is no silent renormalisation of a state file.

**Thermodynamic closure — T and P.** Give `T` and `P`; the phase split is then a *result* (Duhem's theorem: a stream of known composition is fixed by exactly two state variables), and the stream table shows the vapour fraction the engine resolves. A MIXTURE that declares `vaporFraction` beside `T` and `P` is **refused** as over-specified — three values on a two-variable state — and the message names the two remedies (since 2026-10-03; the landing case `flash01` used to ship all three). Do not write a decorative `vaporFraction 0;` or `1;` either — on a mixture it is refused naming the `phase` pin. Two honest pins exist for the cases $(T, P, z)$ cannot close:

- `vaporFraction 0.30;` — a genuine *two-phase split* of a *pure component*, on its saturation curve, where $T$ and $P$ are not independent and the split is a real degree of freedom (wet steam, a partly condensed pure vapour);

- `phase gas;` (or `phase liquid;`) — a *phase-intent* pin for a feed the cheap screen cannot classify (e.g. steam in a hot gas mixture: all vapour, but $T$ is below water's $T_c$ so "permanent gas" cannot be proved). Hot air or combustion gas above every component's $T_c$ needs *nothing* — the engine's $T_c$ screen recovers $vf = 1$ on its own.

**Multiphase decomposition.** A slurry or partly-solid stream adds a `phases {}` block that decomposes the overall material and must sum back to it exactly (validated on read); a particle-size distribution rides in a `psd {}` block. A utility stream may carry `category <word>;` so the utilities report can aggregate consumption by header (§6).

**The second basis: the `speciation {}` block.** Where the property package resolves ions, a stream carries *two* descriptions of the same material, and both appear in the file:

```
componentMolarFlows          // THE STATE: apparent components
{
    NH3    0.019858 kmol/h;
    CO2    0.003231 kmol/h;
    water  1.476911 kmol/h;
}
T  367.3398 K;   P  101325 Pa;

speciation                   // A VIEW of it: what the chemistry resolved
{
    network   ( ammonia carbonate );
    basis     stoichiometric;
    origin    "reported:postSolve";
    solvedAtT 367.3398 K;
    pH        8.361284;

    CO2aq  2.4982e-05 kmol/h;   HCO3  0.003078 kmol/h;
    CO3    1.2831e-04 kmol/h;   NH3aq 0.016520 kmol/h;
    H      1.5754e-10 kmol/h;   NH4   0.003338 kmol/h;
    OH     3.7577e-06 kmol/h;
}
```

> **Key idea.** `componentMolarFlows` is the **state**; `speciation {}` is a **view** of it. The apparent components are what the solver carries, what the balances close on, and what you edit. The species block is report-only — delete it from an input file and every answer is unchanged. It exists so a student can *see* the chemistry the package solved instead of taking the outlet on trust, and it is written on the inlet too: a feed nobody speciates is exactly the stream you would want to compare an outlet against.

The block is verified on read. Each species collapses back to the apparent components through the same *declared bridges* the component records carry (`aqueousMapping` / `dissociatesTo`) — never by name similarity — so it closes by construction, and a block that cannot be verified is refused rather than trusted. Rows are written in canonical sorted order, so a diff between two runs shows a change in the chemistry and never a change in the solver's container order.

**Where the block came from, and whether it is still true.** Three fields answer questions a bare list of ions cannot:

| | |
|---|---|
| `origin` | `solved:<unit>` — this unit ran the chemistry |
| | `transported:<unit>` — carried across, not re-solved |
| | `reported:postSolve` — derived after the solve |
| `solvedAtT` | the temperature the equilibrium was solved at |
| `equilibriumValidHere` | whether it still holds *here* |

That last one is the part worth understanding, because it is a distinction the file has to make and prose usually does not:

> **Key idea. An equilibrium is not a composition.** It is a *relation* between a composition and a thermodynamic state. A composition solved at 313 K does not become the equilibrium composition at 332 K by being carried there with a note saying where it came from.

So when a unit that resolves no chemistry — a heater, a pump, a splitter — passes such a stream along, the two claims are separated and only one travels. The *amounts* are a material inventory: the unit moved no atoms and no charge, so every species crosses exactly and the numbers stand. The *equilibrium* is a claim about this state, and if $T$ moved it dies at the boundary. The outlet then reads:

```
origin    "transported:transporter";
solvedAtT 313.15 K;
currentT  332.2310 K;
equilibriumValidHere false;
//  Solved at 313.15 K, carried to 332.2310 K by a unit with no chemistry
//  model.  The amounts stand (conserved exactly); pH and every other
//  equilibrium-derived value are WITHHELD -- re-equilibrate to restore them.
```

**Common pitfall.** Notice what is *absent*: there is no `pH`. It is withheld, not inherited — publishing the old pH here would put a number in the file that nothing at this state computed. Any activity, saturation index or conditional constant resting on the dead equilibrium is withheld the same way. If you want the equilibrium at that point, put a unit there that can solve one.

Staleness is *decided*, not assumed: the block goes stale because $T$ actually moved. A pump carrying the same brine at constant $T$ and $P$ across the same model boundary leaves the equilibrium intact and keeps reporting the pH. The boundary alone invalidates nothing; the change of state does.

**Runnable case.** `tutorials/steady/thermo/basis01_two_unit_chain` — a speciating flash hands its brine to a heater running a plain molecular world. Its `flowsheetDict` header walks the three answers that were available at that boundary and why only one of them is honest.

**The completeness contract.** $N$ streams in the flowsheet graph $=$ $N$ files in `0/`. A missing or an orphan file is **fatal** for `choupoSolve` — there is no partial state. The run announces the check:

```
[state] seeded 3 stream(s) from 0/ via the canonical manifest
[state] 0/ complete: 3 graph stream IDs == 3 state files
```

**`converged/` — the answer, in the same shape.** After a converged solve the engine writes the full solution as `converged/<stream>` files — same grammar, one file per stream, now carrying the solved numbers (and the resolved `phase`). The log confirms: `[state] wrote converged/`. A drilled-in sector case is seeded from its parent's `converged/` state, so a sub-case is reproducible from disk alone.

## 3.5 Materialising `0/`: `bin/choupo-init0`

You author only the *domain inlets* (and a seed for each declared tear); the tool writes every remaining stream file by explicit propagation through the topology:

```
bin/choupo-init0 <caseDir>            # writes the missing 0/ files
bin/choupo-init0 <caseDir> --force    # regenerates internal/outlet estimates
```

The rules are strict and announced: an authored inlet file is never touched; an unseeded recycle is a hard error naming the file you must author (feed propagation is only honest on an acyclic graph); and an incomplete `0/` handed to `choupoSolve` stays fatal — this tool is the sanctioned way out. The generated files are estimates the solver overwrites; they exist so that the initial state is explicit, inspectable, and on disk — never an invisible in-memory guess.

In the browser app the same step is *File* → *Complete 0/*. It runs the engine's own `-init0` (the code that backs `bin/choupo-init0`, without `-force`), so it can never overwrite a file you wrote: the dialog and the Log list each generated file with the engine's `[init0]` lines, the Case tree marks them *generated*, and an unseeded recycle is refused by the engine itself, naming the file to author. A run refused for an incomplete `0/` offers the action directly.

**Key idea.** `flowsheetDict` = topology. `0/` = numbers. `converged/` = the answer. Every stream's state is a file you can open, diff, and version-control — the same glass-box rule that governs the solver's iterations governs its data.

## 3.6 Validating without solving: `bin/choupo-lint`

The cheap step of the authoring loop — write, *lint*, fix, run. The tool takes the very same road the solver takes — it reads the dicts, assembles the thermophysical package (every component must resolve), flattens the topology (every connection must cable), enforces the `0/` completeness contract and resolves the tears — and then stops, just before anything would solve or be written to disk:

```
bin/choupo-lint <caseDir>     # read-only; nothing is solved, nothing written
```

On top of the load-path checks it reports what a run only discovers mid-execution: an unknown unit type (with the list of available types), a duplicate unit name, two units producing the same stream. Findings are collected and reported as *one* list — the tool describes the whole state of the case, not just the first defect it meets. Exit status: `0` the case will run as declared; `1` findings; `2` a load-phase refusal (whose own message names the rule and the fix).

It also prints the stream *roles* inferred from the topology — no producer → inlet; producer and consumer → internal; producer only → outlet; declared tears flagged — so you can confirm the graph says what you think it says before spending a solve. Roles are never declared in Choupo; the topology is the single source of truth, and the lint report is where you read it.

## 3.7 Units on every scalar

Choupo uses canonical SI internally: Pa, kmol/s, K, m, $m^2$, $m^3$, J, kg. You almost never want to type those raw, so any scalar in any dict may carry a unit suffix. The parser converts the value to SI on the fly and remembers its physical dimension — a typo in the unit is caught with a clear error before the solver runs.

**Three accepted forms.**

```
P    1     bar;                    // (a) named-unit shortcut
A_w  [-1  2  1  0  0]  1.5e-12;    // (b) bracket form:
                                   //     [M L T Theta N] exponents + SI value
R    0.5;                          // (c) raw SI (no declaration)
```

Form (a) is what you will type 95 % of the time. Form (b) is the escape hatch for quantities with no short named unit (membrane permeabilities, exotic transport coefficients). Form (c) says "trust me, the number is in canonical SI" — the parser cannot check anything, so a typo here passes silently.

**Named units shipped by Choupo.** The most useful aliases (the full registry of ∼90 units lives in `src/core/Units.cpp`):

| Quantity | Canonical SI | Named-unit aliases |
|---|---|---|
| pressure | Pa | `Pa, kPa, MPa, bar, atm, psi, mmHg, torr` |
| molar flow | kmol/s | `kmol/s, kmol/h, mol/s, mol/h` |
| mass flow | kg/s | `kg/s, kg/h, g/s, g/h, t/h` |
| volumetric flow | $m^3$/s | `m3/s, m3/h, L/s, L/h, L/min` |
| temperature | K | `K, degC, C, degF, F` |
| length | m | `m, mm, cm, km, in, ft` |
| area / volume | $m^2$ / $m^3$ | `m2, cm2, mm2;  m3, L, mL` |
| time | s | `s, min, h, day` |
| mass | kg | `kg, g, t, ton, tonne` |
| energy / power | J / W | `J, kJ, MJ;  W, kW, MW_power` |
| heat-transfer coeff. | W/($m^2$K) | `W/m2/K, W/(m2.K), kW/(m2.K)` |
| velocity | m/s | `m/s, cm/s, mm/s` |
| membrane $A_w$ | m/(s·Pa) | `m/s/Pa, m/s/bar` |
| viscosity | Pa·s | `Pa.s, cP` |
| concentration | kmol/$m^3$ | `kmol/m3, mol/m3, mol/L, M` |
| molality | mol/kg | `mol/kg, mmol/kg` |
| density | kg/$m^3$ | `kg/m3, g/cm3, g/mL, mg/L, ppm` |
| molar energy | J/mol | `J/mol, kJ/mol, J/kmol, kJ/kmol` |
| dimensionless | — | `-, %` |

Note the deliberate quirks: power is `MW_power` (a bare `MW` would collide with the mega-prefix logic of `MPa`), and `degC`/`degF` are affine — use `K` for temperature *differences*.

**What you see on a bad unit.** Asking for a pressure but typing `P 1 kg;` produces:

```
ERROR: Dictionary 'feed' ():
  parameter 'P' expected dimensions [1 -1 -2 0 0] (Pa)
  but the dict declared [1 0 0 0 0] (kg).  Check the unit
  suffix on this entry.
```

The same check guards every parameter the unit operations read (`T`, `V_R`, `area`, `W_shaft`, `P_perm`, ...).

**Output preferences.** By default Choupo prints flows in kmol/h, pressures in bar, temperatures in K — the chem-eng convention. To override, drop a `units` block in `controlDict`; an optional `precision` block tunes decimal digits per quantity:

```
units      { pressure atm;  flow kmol/s;  temperature degC; }
precision  { pressure 3;  temperature 2;  flow 4;  composition 4; }
```

The internals stay in SI; only the printed output changes.

## 3.8 Optional dicts

- `solverDict` — solver defaults per unit-op type, overridable by each unit: e.g. `isothermalFlash { tolerance 1e-8; maxOuterIter 50; }`.
- `outerDict` — sweeps, design specs, optimisation (§8).
- `postDict` — sizing + costing chain (§9).
- `constant/reactions` — the named-reaction library referenced by reactors: `reaction esterification;` or `reactions ( r1 r2 );` (§5.3).

# 4 The thermodynamic foundation: constant/thermoPhysPropDict

> *What you'll learn.* How a case declares its components and selects the models that turn $(T, P, z)$ into $K$-values, enthalpies, and transport properties — and how the run log announces every choice it makes.

Every case carries a `constant/thermoPhysPropDict` declaring its whole thermophysical system: the components, the equilibrium *formulation* (which $K$-value structure the VLE runs on), and the model in each phase slot. The minimum viable file:

```
recordType    thermophysicalPropertySystem;
schemaVersion 2;

components       ( benzene  toluene );

equilibrium
{
    formulation gammaPhi;

    liquid
    {
        activityModel ideal;        // gamma_i = 1  (Raoult)
        standardState pureLiquid;
    }

    vapour
    {
        fugacityModel idealGas;     // phi_i = 1
    }
}
```

Everything is declared — the formulation, the standard state, the vapour route — even when the choice is the obvious one; a shape the builder does not recognise gets a named refusal, never a guess.

Components are resolved *by name*, with an explicit evidence order: **case-local overlay** > **standard** > **local**. There are exactly two data homes, and the distinction is deliberate:

- `data/standards/` — *curated and public.* The committee-managed reference set of curated components; shipped in the repository, every value carrying primary provenance.
- `data/local/` — *yours and private.* A *gitignored* working tier for data you import, license or estimate. The repository ships it **empty** (a `README` and a `.gitkeep`); the engine reads it when present. A value resolved from it is announced `[local] UNVERIFIED` and carries its source, licence, import digest and method — it is never presented as equivalent to a standard.

Data is thus either curated-and-public or yours-and-private: there is no public "proposed" middle tier (retired 2026-07). A case-local file in `<case>/constant/components/` overlays either home and always wins (§18).

You populate `data/local/` yourself — for example with the reproducible ChemSep 8.3 importer (`bin/curate/chemsep_to_choupo.py`), which writes there. This is why the public repository redistributes *no* third-party property values: for coverage beyond the curated standards it ships Choupo's own open group-contribution estimates under `data/groupEstimative/` (clearly flagged as estimates), and you import any measured or third-party data into your private `data/local/`. Imported literature constants and predictive closures stay distinguishable in the provenance — an imported boiling point is not silently upgraded because an Ambrose–Walton closure makes the component flashable, and missing heat capacities or formation data stay missing (the gap report says what the model still needs).

## 4.1 Activity models (liquid $\gamma$)

| model | Notes |
|---|---|
| ideal | $\gamma_i = 1$ — the Raoult limit. Hydrocarbons, dilute systems. |
| NRTL | Renon–Prausnitz. Handles LLE. Needs binary pairs. |
| Wilson | Cheaper than NRTL but structurally *cannot* represent a liquid split. |
| UNIQUAC | Abrams–Prausnitz; the model many published kinetic studies regressed against. |
| UNIFAC | *Predictive* — $\gamma$ from molecular groups, no fitted binaries. The group decomposition lives in each component's .dat. |

NRTL/Wilson/UNIQUAC pairs are supplied inline or resolved by name from the pair catalogues. Resolution is **inline/case-local > standard > local > ideal default** (the same two-tier model as components: the public curated data/standards/parameters/<model>/ bank, then your private data/local/ bank, which the repository ships empty). A pair absent from every tier is the announced ideal default ($\tau = 0$), never a silent one:

```
// inside equilibrium.liquid:
activityModel
{
    model NRTL;
    binaryParameters                        // the dict OWNS the numbers,
    {                                       //   or points at a catalogue
        ethanol-water                       //   file via `source "...";`
        {
            i ethanol;  j water;
            a_ij -0.8009;  b_ij  246.18;    // tau_ij = a_ij + b_ij/T
            a_ji  3.4578;  b_ji -586.0809;
            alpha 0.30;
        }
    }
}
```

A local pair never shadows a standard pair. Staged ChemSep pairs live in the private data/local/parameters/ tier (not redistributed); they have passed identity, unit-conversion and provenance audits, but have not all been independently validated against experimental data; the log therefore marks their use [local] UNVERIFIED. A pair with no parameters anywhere does not abort the run — it defaults to ideal ($\tau = 0$) so you can build the foundation pair-by-pair — but it is never silent: each ideal-defaulted pair is announced with a [thermo] log line, and the GUI colours the pair matrix by where each pair resolved.

## 4.2 Equation of state (vapour $\varphi$ — and, for a cubic, the liquid too)

| model | Notes |
|---|---|
| idealGas | $Z = 1$, $\varphi_i = 1$. Adequate at low pressure. |
| SRK | Soave–Redlich–Kwong cubic; van der Waals one-fluid mixing; optional binaryInteractions ( { i CO2; j CH4; kij 0.0973; } ). |
| PR | Peng–Robinson cubic; better near-critical behaviour ($CO_2$). |

The cubics read each component's $(T_c, P_c, \omega)$ from the catalogue and deliver $Z$, residual $H/S$, and *both* roots — so a cubic can also serve as the *liquid* model in a $\varphi$–$\varphi$ package (below).

## 4.3 Per-component correlations

Vapour pressure defaults to Antoine ($\log_{10} P^{\text{sat}} = A - B/(T+C)$), stored per component; a corresponding-states alternative (vaporPressure { model AmbroseWalton; }) covers estimated components. Ideal-gas and liquid heat capacities are polynomials in $T$; species used at flame temperatures carry two-range NASA polynomials — the NASA Glenn nine-coefficient form read as NASA/TP-2002-211556 prints it (model NASA9), or the CHEMKIN seven-coefficient form (model NASA7). Each component's standardThermochemistry { dHf_298; s_298; referenceState; } block pins the formation datum — the referenceState keyword (idealGas / pureLiquid / pureSolid) declares on which rung of the enthalpy ladder the value is tabulated, and every energy balance that crosses a reactor requires it (§5.3). It defaults to idealGas when absent, so a condensed-phase datum that does not declare it is read on the wrong rung in silence.

## 4.4 Multiple liquid phases (LLE / VLLE)

For liquid–liquid work, select the gammaGamma formulation and declare the liquid phases explicitly:

```
components ( water  nButanol );

equilibrium
{
    formulation gammaGamma;         // 2+ liquid phases, one gamma surface each

    liquidPhases
    (
        { name aqueous;  activityModel { model NRTL; binaryParameters {...} } }
        { name organic;  activityModel { model NRTL; binaryParameters {...} } }
    );

    vapour { fugacityModel idealGas; }
}
```

The flash then searches for the liquid split by direct Gibbs-energy minimisation (§5.2) — a single-liquid `gammaPhi` system builds only one liquid and will not split.

## 4.5 Transport properties

Units that need viscosity, conductivity, diffusivity, or surface tension (pipes, dryers, tray hydraulics, exchanger rating) read them from a `transport` block of selectable sub-models:

```
transport
{
    vapour
    {
        viscosity           { model Chung; }      // gas mu, from Tc/Pc/omega/MW
        thermalConductivity { model Eucken; }
        diffusivity         { model Fuller; }     // needs diffusionVolume
    }
    liquid
    {
        viscosity           { model Vogel; }      // or Andrade
        thermalConductivity { model SatoRiedel; }
        diffusivity         { model WilkeChang; }
    }
    interface
    {
        surfaceTension { model BrockBird; }
    }
}
```

When a unit needs a property the package does not supply, the solver stops with a clear error naming the missing model — it never invents a value.

## 4.6 Dissolved gases: Henry's law

A gas solute ($CO_2$, $NH_3$, $O_2$, $H_2S$, $SO_2$, … in water) takes the infinite-dilution Henry reference. WHO dissolves in WHAT is declared structurally, by the `diluteSolution` formulation's `solvent {}` and `solutes {}` groups (next sub-section); the solutes' `binaryParameters` declare the Henry-pair files (`data/standards/parameters/Henry/<solute>-<solvent>.dat`, van 't Hoff temperature dependence). The absorber/stripper and the dilute-solution flash world run on this. Each engaged pair is announced with its constants and source (`[henry]` log lines).

## 4.7 The `formulation` keyword and the four VLE worlds

The `equilibrium.formulation` keyword selects the whole $K$-value structure the VLE runs on:

| formulation | World | K-value |
|---|---|---|
| gammaPhi | $\gamma$–$\varphi$ | $K_i = \gamma_i P_i^{\text{sat}}/(\varphi_i P)$ |
| diluteSolution | dilute solution | solvent on Raoult; each solute on the Henry form $y\varphi P = x\gamma^* H(T)\, e^{v_\infty (P-P_s)/RT}$ |
| phiPhi | $\varphi$–$\varphi$ | $K_i = \varphi_i^L/\varphi_i^V$ — the same cubic's two roots |
| electrolyteGammaPhi | aqueous electrolyte | ionic activity + osmotic coefficients on the aqueous-ion reference |

The dilute-solution world, from `flash08_co2_water_package`:

```
equilibrium
{
    formulation diluteSolution;

    liquid
    {
        solvent { component water;    standardState pureLiquid; }
        solutes
        {
            components    ( CO2 );
            standardState infiniteDilution;
            solutionModel henryDilute;
            binaryParameters
            {
                CO2-water { source "data/standards/parameters/Henry/CO2-water.dat"; }
            }
        }
    }

    vapour { fugacityModel idealGas; }
}
```

Declared parameter files are *verified at assembly* — a declared-but-missing pair refuses loudly, naming the entry to add — and the run announces the assembled world in its `[builder]` lines. In `phiPhi` both phase slots route through the ONE declared `equationOfState` (`fugacityRoute equationOfState; root liquid|vapour;`); two different cubics across the phases are refused: one Gibbs surface per phase, never two. Reference tutorials: `flash08_co2_water_package` (Henry) and `flash09_n2ch4_stryjek` ($\varphi$–$\varphi$ with a declared $k_{ij}$).

## 4.8 Pure fluids: IAPWS-IF97 steam

For water-dominated power cycles the package can route a pure component through the hand-rolled IAPWS-IF97 steam kernel (regions 1, 2 and 4, and region 3 – the near-critical and supercritical states a boiler drum near 20 MPa or a once-through boiler reaches – by the Helmholtz equation of Wagner et al. 2000; region 5, above 1073.15 K, is refused by name):

```
pureFluids { water { method IF97; } }
```

The Rankine tutorial `tutorials/steady/power/rankine02_water` closes its first law to $10^{-12}$ on IF97 — and its ideal-gas twin `rankine01_water` is kept on purpose, to show what an ideal-gas water *cannot* do (there is no two-phase dome to cross).

## 4.9 Per-unit `thermo {}` override and model boundaries

A unit may carry a `thermo {...}` block that *replaces* the global models for that unit only (components stay global):

```
{ name turbine;  type turbine;  in feed;  outputs ( expanded );
  operation { W_shaft -3 kW;  eta 0.8; }
  thermo    { equationOfState { model SRK; } } }    // real gas here only
```

A stream crossing from model X into model Y is re-interpreted at the boundary: $(T, P, z)$ are held and each unit recomputes its own enthalpy, so $H$ *steps* at the boundary — visibly, in the printed enthalpy. **$H$ is the conserved truth; $T$ is the model-dependent readout.** The solver never silently nudges $T$ to paper over the step; an opt-in

model-boundary audit prints $\Delta H = H_{\text{down}} - H_{\text{up}}$ into the first-law ledger. Default to one consistent global model; reach for the override only when the physics demands it. The run log is loud either way — every unit prints `thermo: inherited (global package)` or `LOCAL override -- ...`.

## 4.10 Self-contained cases

A case can be sealed so it runs with *no* installation catalogue:

```
bin/choupo-import <case>     # materialise the dependency closure into
                             # constant/ (components/, parameters/, ...)
                             # + the sha256 propertyManifest
```

The importer copies every record the case needs into the case's own `constant/` tree and writes `constant/propertyManifest` — the record-ownership registry (one sha256 per imported file; `sealed true;` forbids the runtime every catalogue fallback). A file the manifest does not claim is yours and untouchable. The definitive test is moving the case out of the repo and watching it still run. Every shipped tutorial is sealed this way; research cases and anything you archive with a thesis should be too.

**What the seal claims: the content, not the bytes.** A manifest carrying `sealSchema computational;` claims the *parsed* content of each record — keys in declaration order, values in canonical SI, declared dimensions, lists and sub-dicts — and not its bytes. The distinction is the whole point. Re-wrap a comment, re-indent a block, or write `1 bar` where the catalogue wrote `1e5 Pa`, and the seal still verifies: the drift is announced as *bytes only* and the verdict stands. Move a value, change a dimension, add or remove a key, or break the record so it no longer parses, and it `diverges` by name — and `onDivergence refuse;` stops the run, exactly as it always did.

The exclusion is by *typed fields* — comments and formatting never reach the parser's tree at all — rather than by stripping comments out of the text, which is the version of this idea that goes wrong the first time a comment character appears inside a string.

You can see what the seal claims, which is the point of doing it this way:

```
choupoProps --canonical-dump <record>    # what the seal actually sees
choupoProps --canonical-hash <record>    # and its hash
```

> **Common pitfall. A unit spelling is not always cosmetic.** `1 bar` ↔ `1e5 Pa` is (same SI value, same declared dimensions). *Dropping* the unit — `1 bar` → a raw `100000` — is not: the declared dimensions change, so the dimension-checked lookup that would catch a mistake has moved. The seal is deliberately conservative there and reports it as computational drift.

Manifests without `sealSchema computational;` keep the old whole-file byte semantics untouched, and every migrated manifest still carries its legacy byte hashes as the historical provenance record — the migration changed what the seal *claims*, and re-validated nothing.

# 5 Built-in unit operations

*What you'll learn.* The complete catalogue of steady-state unit operations — what each `type` does, which `model` sub-selectors exist, and what the `operation` block must contain. Aliases (`flash`, `column`, `FUG`, `REquil`, `boiler`, `condenser`, `MHeatX`, `membraneSW`, `extract`) name the same classes. `UnitOperation::availableTypes()` prints the live registry.

## 5.1 Quick reference

| `type` | **What it does** | **Key spec** |
|---|---|---|
| *Flash and saturation* | | |
| `isothermalFlash` *(alias `flash`)* | VL / LL / VLLE flash at fixed $(T, P)$; duty $Q$ is a result | `T`, `P` optional (inherit feed); `phaseSet VL\|LL\|VLLE` |
| `adiabaticFlash` | $H_{\text{out}} = H_{\text{in}}$; solves $T$ | `P` |
| `bubbleT` / `dewT` | Saturation temperature at fixed $P$ | `P` |
| *Reactors (§5.3)* | | |
| `conversionReactor` | Specified per-pass conversion; stoichiometric | `conversion` (or `conversions (...)`) |
| `equilibriumReactor` *(alias `REquil`)* | Named reactions driven to simultaneous $K_p(T)$ equilibrium | `reactions (...)`; `T` |
| `gibbsReactor` | Equilibrium by Gibbs minimisation over species | `elements`, `species`; models `elementPotential` / `reactiveFlash` / `directMin` |
| `cstr` | Stirred tank; kinetics; 1 or N reactions | `V_R`; `thermalMode` |
| `pfr` | Plug flow, RK4 along volume; 1 or N reactions | `V_R`, `nSteps`; `thermalMode` |
| *Heat transfer (§5.4)* | | |
| `heater` | 1-stream duty device; $T_{\text{out}}$ is a result | `Q` |
| `phaseChanger` *(aliases `boiler`, `condenser`)* | Crosses the saturation dome; $Q$ a result | exactly one of `Q`, `outletT`, `outletQuality`, `outletState`, `superheat`, `subcool`; or `model geometry` |
| `heatExchanger` | 2-stream $\varepsilon$-NTU rating | `area`, `U`; or `model geometry` / `model design` |
| `multiStreamHX` *(alias `MHeatX`)* | N hot + M cold in one shell; balance + internal pinch | per-stream `outlet {...T...}` targets |
| `evaporator` | Single-effect; steam chest is a real stream | `area`, `U` |
| *Rotating equipment (§5.5)* | | |
| `compressor` / `turbine` | $W_{\text{shaft}} + \eta$; $P_{\text{out}}$, $T_{\text{out}}$ results | `W_shaft`, `eta` |
| `pump` | Incompressible; closed form | `eta` + one of `P_out` / `dP` / `W_shaft` |
| `electricLoad` | Sink for shaft work via an energy wire | `energyInputs`, `eta` |

| type | What it does | Key spec |
|---|---|---|
| *Columns and staged separations (§5.6)* | | |
| `distillationColumn` *(alias `column`)* | Rigorous MESH; models `WangHenke` / `simultaneous`; multi-feed, side draws, Murphree, hydraulics, reactive | `nStages`, `feedStage`, `refluxRatio` or `distillateRate`, `P` |
| `shortcutColumn` *(alias `FUG`)* | Fenske–Underwood–Gilliland design | keys, recoveries, `refluxFactor`, `P` |
| `absorber` / `stripper` | Counter-current staged gas–liquid contact (Henry) | `stages` |
| `extractor` *(alias `extract`)* | Counter-current staged LL extraction (Gibbs-split stages) | `stages` |
| *Membranes and sorption separations (§5.7)* | | |
| `spiralWoundModule` *(alias `membraneSW`)* | NF/RO element or train (solution-diffusion + film model) | `module`, or `membrane` + `area`; `P_perm` |
| `ionExchanger` | Cation-exchange softener (Gaines–Thomas) | `resin`, `CEC` |
| `electrodialysisStack` | N cell pairs; Faraday transfer, Nernst + ohmic voltage | `stack`, or `N_cellpairs` + geometry; `current` |
| `batchElectrodialysis` *(choupoBatch)* | Recirculating batch rig: two tanks, the limiting current FALLING with the depleting diluate | `stack`, `diluateFlow`; `current` or `voltage` |
| `psa` | Pressure-swing adsorption (equilibrium-theory shortcut) | adsorbent isotherms, `bedCapacity`, `eta` |
| *Solids (§5.8)* | | |
| `cyclone` | PSD-aware gas–solid classifier; 5 models (`Lapple`, ..., `Muschelknautz`) | `bodyDiameter`, ... |
| `bagFilter` | Cake filtration; $\Delta P$ headline | `filterArea`, ... |
| `gasSolidSplitter` | Ideal spec'd split (PSD unchanged) | `solidsRecovery` |
| `pneumaticConveyor` | Dilute-phase conveying line; $\Delta P$ + saltation check | `geometry { D L dz }` |
| `crystalliser` | Models `equilibrium` / `MSMPR` / `FVM`; magma or cake+liquor outputs | `operatingTemperature`; kinetics for MSMPR |
| `sprayDryer` / `solidDryer` / `evaporativeDryer` | Gas–solid drying (§5.9.1) | atomiser, chamber; sorption isotherm |
| *Flow primitives (§5.10)* | | |
| `mixer` | $N \to 1$ adiabatic merge (or declared-$T$) | — |
| `splitter` | $1 \to N$ tee at spec'd fractions | `fractions (...)` |
| `valve` | Isenthalpic throttle | `P` |
| `pipe` | Darcy–Weisbach line; $\Delta P$ a result; two-phase aware | `geometry { D L roughness dz }` |

Each unit also accepts top-level solver-tolerance overrides (same keys as `solverDict`) and the per-unit `thermo {}` override (§4.9).

## 5.2 Flash and saturation

The isothermal flash is the pedagogical core: Newton on the Rachford-Rice equation in $V/F$, wrapped in a Wegstein outer loop that refreshes $\gamma_i(x)$. A flash is a *knob-less separator* — with an empty `operation {}` it inherits $T$ and $P$ from the feed and just separates; pin either or both to hold the drum state:

```
operation { T 370 K;  P 1 bar;  phaseSet VL; }   // VL (default), LL, or VLLE
```

**Degrees of freedom — $Q$ is a result.** A flash is fixed by exactly two numbers (Duhem's theorem), here $T$ and $P$. The duty is therefore a *result, never a spec*: a flash *gives* a $Q$ (read the `Q_kW` KPI), it never *takes* one. To impose a known heat and then separate, chain `heater(Q)` → `flash`; for a target outlet temperature, wrap the heater in a DesignSpec on `$Q` (§8.2). The `adiabaticFlash` is the one duty that needs no external device: $Q = 0$, spec `P`, and the outer Newton finds $T$.

**LL and VLLE.** For symmetric $\gamma$-models a liquid–liquid flash solved on the $K$-value fixed point collapses onto the trivial $x_\alpha = x_\beta$ saddle — so Choupo's LL and VLLE paths minimise the Gibbs energy of mixing *directly* (multi-start Nelder–Mead on the phase-split simplex). Run `tutorials/steady/absorption/extraction01_waterButanol` (LL) and `tutorials/steady/flash/vlle03_audit_artificial` (a constructed three-phase global minimum) to watch it work. `bubbleT` and `dewT` are the 1-D saturation solves ($\sum K_i x_i = 1$ and $\sum y_i / K_i = 1$).

## 5.3 The reactor family

> *What you'll learn.* Six reactors, one ladder of knowledge: specify the outcome (`conversionReactor`), let thermodynamics decide (`equilibriumReactor`, `gibbsReactor`), or let kinetics decide (`cstr`, `pfr` — and, in time, `batchReactor`, §11). Pick the rung that matches what you actually know.

All reactors share two contracts. First, **one reaction grammar**: stoichiometry and kinetics live once, in `constant/reactions`, and a unit references them — `reaction <name>;` for one, `reactions ( r1 r2 );` for a network — never repeated inside the unit. Second, **one enthalpy datum**: the heat of reaction is computed from each species' `standardThermochemistry` block (the elements datum), $\Delta H_{\mathrm{rxn}}(T) = \sum_i \nu_i h_i(T)$, in every reactor, steady or dynamic. There is no `dH_rxn` input to a steady reactor — a reactions-dict `dH_rxn` key is an announced override honoured only for toy components that deliberately lack formation data.

### 5.3.1 `conversionReactor` — the outcome is a spec

You state the per-pass conversion of the limiting reactant; the outlet follows stoichiometry. No kinetics, no residence time — the honest choice for a gas-phase reactor whose conversion is set by the catalyst, and the right reactor when a *recycle* is the point of the flowsheet (it keeps a finite per-pass conversion).

```
operation { conversion 0.75;  T 895 K; }     // single reaction
reaction  toluene_hda;                        // stoichiometry + limitingReactant
```

With several reactions, each extent is a spec — selectivity becomes a declared property of the catalyst:

```
operation
{
    T 650 K;
    conversions
    (
        { reaction main;  conversion 0.60; }    // fraction of the FEED limiting reactant
        { reaction side;  extent 0.04; }        // or a direct extent
    );
}
reactions ( main side );
```

Tutorials: `conversion01_hda`, `conversion02_parallel_selectivity`.

### 5.3.2 `equilibriumReactor` (alias `REquil`) — named reactions to equilibrium

You give a *set of reactions*; each is driven to simultaneous chemical equilibrium via its $K_p(T)$, computed from the species' formation data ($K = e^{-\Delta G^\circ/RT}$) — no kinetics, no residence time. The coupled system $K_{p,j} = \prod_i (p_i/P^\circ)^{\nu_{ij}}$ over all extents is solved in log form by the multivariate Newton. This is the reforming / shift / synthesis workhorse — and the tool to use when you want to restrict *which* reactions equilibrate (something the Gibbs reactor, which sees only species, cannot do).

```
{ name reformer;  type equilibriumReactor;
  in feed;  outputs ( effluent );
  operation { T 1000 K; }
  reactions ( steamReforming  waterGasShift ); }   // stoichiometry only; no kinetics
```

KPIs: `Kp_<name>`, `extent_<name>_kmol_h`, `conversion_<name>`, `Q_kW`. Tutorial: `tutorials/steady/reactors/equil01_reforming` (steam-methane reforming and shift together).

### 5.3.3 `gibbsReactor` — equilibrium without naming reactions

Direct Gibbs-energy minimisation over a declared species pool with atom-balance constraints — no reactions at all. Three selectable models: `elementPotential` (default; Lagrange multipliers), `reactiveFlash` (multi-condensable + NRTL), and `directMin` (multi-start Nelder–Mead on the extent null space).

```
operation
{
```

```
    T 800 K;   P 1 bar;
    elements ( C H O );
    species
    (
        { name CH4; atoms ( 1 4 0 ); }
        { name H2O; atoms ( 0 2 1 ); }
        { name CO;  atoms ( 1 0 1 ); }
        { name CO2; atoms ( 1 0 2 ); }
        { name H2;  atoms ( 0 2 0 ); }
    );
}
```

An optional `temperatureApproach <dT>;` — a *magnitude* — evaluates the *reaction* equilibrium at $T \pm \Delta T$ while enthalpy, vapour pressure and the energy balance stay at the physical $T$ — the classical way to model an incomplete approach for reversible systems without kinetics. The engine assigns the sign from the reaction's thermochemistry (a higher evaluation temperature under-predicts an exothermic reaction, so $T + \Delta T$; a lower one an endothermic reaction, so $T - \Delta T$), announces its choice and the isothermal reaction enthalpy it read, and publishes the signed value it used as the KPI `temperatureApproach_K`; a negative declaration is refused by name. The older key `approachTemperature` is retired and refused by name. For the adiabatic flame problem, wrap the reactor in a DesignSpec that varies `$T` until $H_{\text{out}} = H_{\text{in}}$ (`gibbs05_adiabatic_flame`: lean $CH_4$/air → 1492 K).

### 5.3.4 `cstr` and `pfr` — kinetics

The kinetic pair. The CSTR solves the design equation(s) $\xi_j = r_j(\boldsymbol{\xi})\, V_R$ — Newton-1D for one reaction, the multivariate Newton for a network; the PFR marches $\mathrm{d}F_i/\mathrm{d}V = \sum_j \nu_{ij} r_j$ with a manual RK4. Both compute concentrations on the liquid molar volume — for a gas-phase reactor prefer `conversionReactor` or `equilibriumReactor`.

```
{ name reactor;  type cstr;   in feed;  outputs ( out );
  operation { V_R 0.004 m3; }
  reaction  esterification; }              // or:  reactions ( r1 r2 );
```

A reaction entry in `constant/reactions` carries stoichiometry (with per-species orders) and an Arrhenius `kinetics` block; `reversible true;` adds the reverse leg by detailed balance ($k_r = k_f / K_{eq}(T)$). Multi-reaction networks are what make *selectivity* modellable — and the CSTR/PFR contrast visible: for the series network A→B→C at equal $\tau$, `pfr03_series_selectivity` keeps 79 % of the intermediate where `cstr03_series_selectivity` keeps 53 % — back-mixing eats the intermediate, a result you *see*, not memorise.

**Non-isothermal operation and multiplicity.** Both take `thermalMode isothermal` (default) · `adiabatic` · `heatExchange { UA; T_coolant; }` (CSTR) / `heatExchange { U; areaPerVolume; T_coolant; }` (PFR):

```
operation { V_R 0.004 m3;  thermalMode adiabatic;  T_guess 350; }
```

Because the reaction heat already lives inside $H$ on the elements datum, an adiabatic reactor is simply $H_{\text{out}} = H_{\text{in}}$ — no source term. The CSTR eliminates the extents first (at fixed $T$ the design equations are monotone), leaving one equation $\varphi(T) = H_{\text{out}}(T) - H_{\text{in}} - Q_{\text{ext}}(T)$ — the textbook heat-generated vs heat-removed balance, which can have **three roots**. Choupo does not hide that: it *scans* the bracket, prints every steady state it finds, and reports the one nearest `T_guess`. The PFR marches total enthalpy beside the species and recovers $T(V)$ by inversion — a hot spot is something you see in the axial profile.

> **Try it now.** Run `tutorials/steady/reactors/cstr05_multiplicity`: the scan finds and prints every steady state and the `steadyStates` KPI counts them. With the shipped liquid esterification, which is nearly thermoneutral (about −2.7 kJ/mol), there is only *one*, at 300.0 K; the three-root ignition and extinction picture needs a genuinely exothermic reaction, and a replacement case is planned. Then run `cstr04_adiabatic` and `pfr04_adiabatic` on the same esterification: +5.3 K vs +6.6 K — the difference is the back-mixing the CSTR pays for.

### 5.3.5 Catalytic kinetics: writing an LHHW rate law

> *What you'll learn.* How to write a Langmuir–Hinshelwood–Hougen–Watson rate law in `constant/reactions`, what `basis activity` obliges you to, and the one experiment that actually demonstrates product inhibition (it is not the one you would try first).

The same block is read by `cstr`, `pfr`, `batchReactor` and `dynamicCSTR`: one `RateLaw`, four reactors, no possibility of them disagreeing. The Theory Guide § "The rate law" derives where the denominator comes from; here is how to write it.

```
esterification_meoac
{
    limitingReactant   methanol;

    stoichiometry
    (
        { component aceticAcid;     nu -1;  order 1; }   // forward orders
        { component methanol;       nu -1;  order 1; }
        { component methylAcetate;  nu  1; }             // orderRev defaults to nu
        { component water;          nu  1; }
    );

    kinetics
    {
        type       LHHW;
        basis      activity;        // a_i = gamma_i x_i    (else `concentration`)

        A          8.497e6;         // k_f0   [mol/(g_cat.s)]
        Ea         6.047e4;         // J/mol
        A_rev      6.127e5;         // the REGRESSED reverse pair ...
        Ea_rev     6.373e4;         // ... or `reversible true;` for detailed balance

        adsorption
        {
            exponent    2;          // sites the rate-determining step occupies
            vacantSite  0;          // 1 (default) gives the classical `1 + sum K c`
            species
            (
                { component aceticAcid;     K0 0.05245454; }   // K_i = K0 exp(B/T)
                { component methanol;       K0 0.17601898; }   // B defaults to 0
                { component methylAcetate;  K0 0.05602127; }
                { component water;          K0 0.29086872; }
            );
        }
    }
}
```

Read it against the rate-law equation in the Theory Guide: `exponent` is $p$, `vacantSite` is $v$, `K0`/`B` are $K_i(T)$, and the `order` / `orderRev` entries are $\alpha_i$ / $\beta_i$. Omit the `adsorption` block entirely and the denominator collapses to 1: you are back to `type Arrhenius`, the plain power law, byte for byte.

**Two things the engine refuses.** You may not ask for `reversible true` *and* an `A_rev`/`Ea_rev` pair — pick the one you can defend. And you may not ask for `reversible true` on `basis activity`: detailed balance runs through $K_c$, a concentration-basis equilibrium constant, and pretending otherwise would put the equilibrium in the wrong place. Give the regressed reverse pair instead.

**`basis activity` obliges you to an activity model.** The rate constants of a published LHHW law were regressed *with* a particular $\gamma$-model. Pöpken's were regressed on UNIQUAC with the binary parameters of their own Table 3 — which are in the standard catalogue, cited — so `cstr07_lhhw_methylAcetate` declares `activityModel { model UNIQUAC; }` and nothing else will do. Swap in UNIFAC and $k_1$ stops being their $k_1$.

**Rate constants per gram of catalyst.** Add `catalystLoading <kg/m^3>;` to `operation`. The reactor prints it back and converts; with concentrations in kmol/m$^3$ the loading *is* the factor. Omit it and the constants are taken as already volumetric.

**Common pitfall.** The obvious way to see product inhibition — delete the `adsorption` block, keep $k_f$, compare — **shows nothing**. The reaction gets *faster*, because the adsorbed activities are small and dividing by their square is a multiplication. The constants were fitted for that denominator.
The honest experiment: hold every reactant fraction fixed and *charge the product*. In `batch07_lhhw_methylAcetate`, starting from `methanol 0.4; aceticAcid 0.4; water 0.2;` instead of `... water 0.0;` halves the initial rate, 58.3 → 29.0 mmol/(L s). The water is not a reactant. It is sitting on the sites.

**Try it now.** Run `cstr07_lhhw_methylAcetate`: $X = 49\,\%$, kinetically limited. Raise `V_R` to 1 m$^3$ and it climbs to 76 % and stops. Then run `batch07_lhhw_methylAcetate`, which integrates the *same* law in time: it reaches 76.6 %. Nothing in either dict asserts that number. It is where the rate law's numerator vanishes — the activity equilibrium $K_a = 25.50$ that Pöpken's independent Eq. 17 recovers from the same eight constants. Two reactors agreeing is how you check you typed the parameters right.

## 5.4 Heat transfer

**`heater` — the unit that *takes* a $Q$.** Single-stream, sensible-only; `operation { Q 100 kW; }` (negative cools) and $T_{\text{out}}$ is the result. "I need $T_{\text{out}} = 360$ K" is a DesignSpec on `$Q` (§8.2) — the outer loop is visible, the duty is never back-computed in secret.

**`phaseChanger` (aliases `boiler`, `condenser`) — crossing the dome.** Where a heater must stay off the saturation line, the phase changer lands its outlet *anywhere* on the $(T, vf)$ surface — subcooled, inside the dome, or superheated — wrapping the flash kernel and the dome-aware enthalpy $h = (1 - vf)h_f + vf\,h_g$. $P$ is held from the inlet (or set); then pick *exactly one* outlet coordinate (a degrees-of-freedom guard rejects zero or two):

```
operation
{
    // pick exactly ONE:
    Q             -630 kW;            // duty given -> T, vf results
    outletT        368 K;             // -> Q result
    outletQuality  0.4;               // partial condenser -> Q result
    outletState    saturatedVapour;   // or saturatedLiquid
    superheat      25 K;              // T = Tsat(P) + dT
    subcool        10 K;              // T = Tsat(P) - dT
}
```

The labels *boiler* / *partial condenser* / ... are emergent from the converged $vf$ and the sign of $Q$ — not a model switch. With `model geometry;` the duty *emerges* from real heat-transfer physics instead: a `coolant {}` block selects Nusselt (1916) laminar-film condensation on a tube bundle; a `boiling {}` + `heatingMedium {}` pair selects Rohsenow nucleate pool boiling with the Zuber critical-heat-flux ceiling — a design above CHF is hard-refused (burnout), and the Rohsenow surface constant `Csf` has *no default* and demands a `citation` (a ±100 % number must state its provenance). Tutorials: `phasechange01_partial_condenser`, `condenser01_film_nusselt`, `reboiler_water_copper`, `rankine02_water`.

**`heatExchanger` — rating, geometry, design.** The two-stream exchanger has three faces of one model:

- **default (`model epsNTU`)** — give `area` and `U`; duty and outlet temperatures are results ($\varepsilon$-NTU, `flow counter|co`).
- **`model geometry`** — give the tube-bundle geometry (`tubeID/OD/Length`, `nTubes`, `passes`, `shellID`, `baffleSpacing`, `tubePitch`, `wallK` or `wallMaterial`) and the per-side correlations (`Gnielinski` tube-side, `Kern` shell-side by default) *compute* $U$ and the area — the glass-box answer to "where does $U$ come from?". Both-side pressure drops are reported too.
- **`model design`** — give the duty target (an outlet temperature) and the tube choices; the engine *sizes* the bundle (bisects the tube count so the delivered $\varepsilon$-NTU duty meets the target) and then rates its own design.

The two-part tutorial pair `hxWorkflow1_design_from_duty` → `hxWorkflow2_rate_designed` is the standard industrial sequence: converge the balance with a duty target, design the exchanger, then rate the designed geometry (and ask the off-design question the design step cannot answer).

**`multiStreamHX` (alias `MHeatX`).** N hot + M cold streams in one adiabatic shell. Every inlet carries its own outlet-$T$ target; the unit verifies the energy balance (a non-zero imbalance is *reported*, never absorbed into an invented outlet) and builds the hot/cold composite curves to report the internal pinch $\Delta T_{\min}$ — a temperature cross is a hard warning. Tutorial: `mheatx01_two_hot_one_cold`.

**`evaporator`.** Single-effect with a *real* steam chest: `inputs ( feed steam )`, hardware `area` + `U`; the boiling temperature, vapour split, and operating pressure are all results. Multi-effect trains are just chained evaporators — see `evaporator02_triple_effect_sugar` and the DesignSpec that sizes them (§8.2).

## 5.5 Rotating equipment and electric loads

The credo: rotating hardware is specified by *shaft power and efficiency*, and the pressure it achieves is a result:

```
operation { W_shaft  10 kW;   eta 0.75; }     // compressor: W > 0
operation { W_shaft  -3 kW;   eta 0.80; }     // turbine:    W < 0
```

The compressor/turbine run an outer Newton on $P_{\text{out}}$ matching the isentropic enthalpy change scaled by $\eta$. The `pump` is incompressible and closed-form, so it accepts `eta` plus exactly *one* of `P_out` / `dP` / `W_shaft` — specifying the header it feeds is a local one-shot inversion, not a DesignSpec. A let-down is a `valve`, not a pump.

**Energy wires.** Shaft work travels on typed scalar wires declared on the *consumer*:

```
{ name T1;  type turbine;  in steam;  outputs ( exhaust );
  operation { W_shaft -1500 kW;  eta 0.85; }
  energyOutputs ( { name shaft;  kind work;  expression "-W_shaft";  unit W; } ) }

{ name G1;  type electricLoad;
  operation { eta 0.97; }
  energyInputs ( { from T1.shaft;  kind work;  target W_shaft; } ) }
```

Several inputs to the same target *sum* — the gas-turbine shaft-split, where one generator nets the turbine's gross work against the compressor's load (`tutorials/steady/power/combined02_brayton_rankine_shaft`). Typed ports are checked: a `work` wire cannot feed a `heat` input. Heat duties follow a different rule — see §5.11.

## 5.6 Distillation, absorption, extraction

### 5.6.1 The rigorous column

`distillationColumn` solves the full MESH stage equations with two selectable numerical strategies (the `model` slot):

- `WangHenke` (default) — the sequential bubble-point method: a tridiagonal (Thomas) component-balance sweep at frozen $K$, then a bubble-point $T$ update per stage. Cheap per pass, inspectable, but O(100–500) outer iterations, and it can step *through* an azeotrope non-physically. Use it for ideal / wide-boiling systems.
- `simultaneous` (aliases `MESH`, `NaphtaliSandholm`) — Newton on the whole block at once with Armijo backtracking. Quadratic (≈5–6 iterations) and stable through azeotropes — the required choice for non-ideal systems (NRTL ethanol/water: `column03_azeotrope_mesh`).

```
{ name column01;  type distillationColumn;      // model WangHenke is the default
  in feed;  outputs ( distillate  bottoms );
  operation
  {
      nStages          12;
      feedStage         6;
      refluxRatio      2.5;                     // XOR with distillateRate
      distillateRate   50 kmol/h;
      P                1.01325 bar;
  } }
```

A column carries two intrinsic heat ports — the reboiler (heating, at the bottoms $T$) and the condenser (cooling, at the top $T$), reported as `Q_reboiler_kW` / `Q_condenser_kW` and sized to plant utilities by temperature level (§5.11).

### 5.6.2 Multiple feeds, side draws, reactive stages


> *What you'll learn.* How the `simultaneous` column handles *several feeds*, *side draws*, and a *reaction on catalytic stages* — with a worked, paper-validated reactive-distillation case.

**Feeds are flowsheet streams.** A multi-feed column declares its feeds as *streams* (`inputs ( feed acidFeed )`); `operation.feeds` only maps each stream to a stage. This is deliberate (*information follows the streams*): a feed hidden inside the operation block would be a side channel the plant-boundary mass and energy balance never sees — and the first law would not close.

**Side draws, and the order of `outputs`.** A side draw is an *output* — a liquid or vapour bleed from an intermediate stage, its rate set in `operation.sideDraws`. Because outputs bind *by position* (§3.3), the column's emission order is fixed and your `outputs` list must match it:

$$\underbrace{\texttt{distillate}}_{[0]},\ \underbrace{\texttt{bottoms}}_{[1]},\ \underbrace{\text{side draws by } \textit{ascending stage}}_{[2],[3],\ldots}$$

So a four-product column that draws liquid at stage 13 then 23 is wired `outputs ( distillate bottoms drawC4 drawC5 )`: `drawC4` (position 2) is the stage-13 draw, `drawC5` (position 3) the stage-23 draw. Swap the two names and the label lands on the wrong stream — the engine does *not* warn.

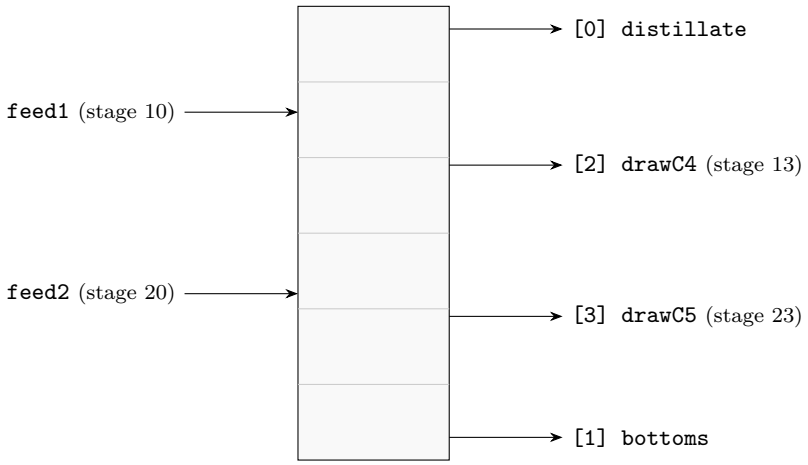


*feeds in* by name*; products out* by position


```
operation
{
    nStages 15;  refluxRatio 3.0;  distillateRate 42 kmol/h;  P 1.013 bar;
    feeds      ( { stream feed;  stage 5;  quality 1.0; }
                 { stream feed2; stage 11; quality 1.0; } );
    sideDraws  ( { stage 8;  phase liquid;  rate 15 kmol/h; } );
}
```

**A reaction on the stages.** A `reaction {}` block turns the column reactive. Under `simultaneous` the reaction must be mole-conserving ($\sum \nu = 0$) so the constant-molal-overflow profile is untouched; a reaction that changes the number of moles ($\sum \nu \neq 0$, e.g. methanol + isobutene $\rightleftharpoons$ MTBE) needs `model fullMESH`, which carries the extents and the mole change in its total rows (the heat of reaction rides on the elements datum of the energy rows) and may be specified by `bottomsRate` and `boilupRatio`; see `column19_mtbe_reactive_mesh`. The extent on each named catalytic stage is closed either by chemical `equilibrium` (activity-based $K_a(T)$, van 't Hoff) or by `kinetics` (a rate law × catalyst mass).

**Worked case — methyl acetate by reactive distillation.** The classic industrial esterification:

$$\mathrm{MeOH} + \mathrm{HOAc} \rightleftharpoons \mathrm{MeOAc} + \mathrm{H_2O}.$$

Acetic acid is fed *above* the catalytic zone and methanol *below*, so they flow counter-currently through it; the light product rises to the distillate, water sinks to the bottoms, and removing both products pulls the equilibrium forward — conversion far above a single equilibrium reactor.

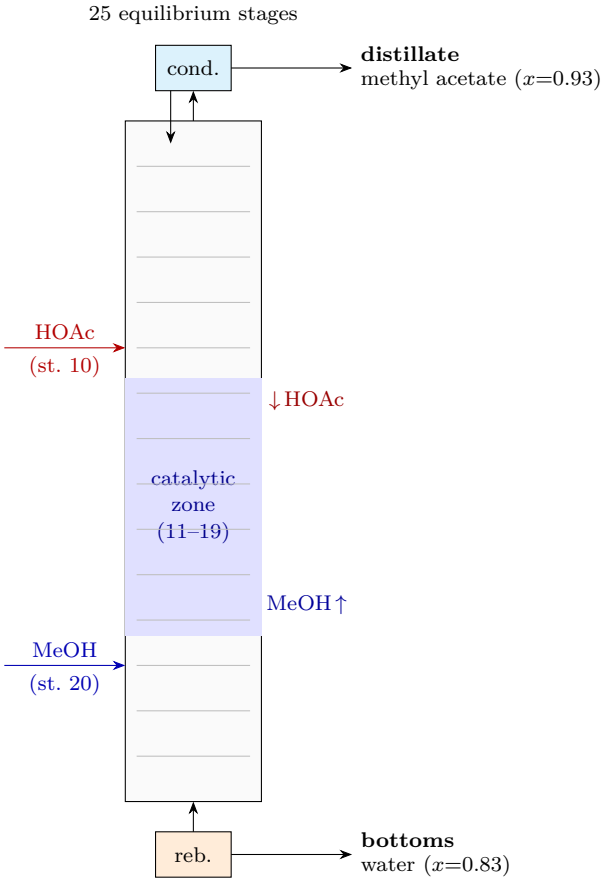


The dict says exactly this — two input streams mapped to stages (their state authored in `0/feed` and `0/acidFeed`), plus the reaction:

```
units ( {
    name rdColumn;  type distillationColumn;  model simultaneous;
    inputs  ( feed  acidFeed );              // both feeds are flowsheet streams
    outputs ( distillate  bottoms );
    operation {
        nStages 25;  refluxRatio 2.1;  distillateRate 30.1 mol/h;  P 1.017 bar;
        feeds ( { stream feed;     stage 20; quality 1.0; }   // methanol below the zone
                { stream acidFeed; stage 10; quality 1.0; } );// acetic acid above it
    }
    reaction {
        stoichiometry ( { component methanol;      nu -1; } { component aceticAcid; nu -1; }
                        { component methylAcetate; nu  1; } { component water;      nu  1; } );
        reactiveStages ( 11 12 13 14 15 16 17 18 19 );
        equilibrium { Ka298 38.7; dHrxn -5670; }   // activity-based K_a(T), van't Hoff
    }
} );
```

Running it (`tutorials/steady/distillation/column05_reactive_methylacetate`) converges by homotopy (solve the column non-reactive, then switch the reaction on) and gives **96 % methanol conversion**, a methyl-acetate-rich distillate and a water-rich bottoms — the *equilibrium ceiling*. The measured value (Pöpken *et al.*, *Ind. Eng. Chem. Res.* 40 (2001) 1566) is 87.6 %: the real column is slightly kinetically limited, so the equilibrium model correctly brackets it from above (replace `equilibrium` with a `kinetics` block to model the finite rate). Because both feeds are flowsheet streams, the plant-boundary energy balance closes exactly.

### 5.6.3 Real trays: Murphree efficiency

Add `murphreeEfficiency 0.70;` to `operation` (`WangHenke` only — `simultaneous` refuses the keyword rather than silently returning ideal stages) and `nStages` stops counting ideal stages and starts counting *real trays*: $y_j = E\,K_j x_j + (1-E)\,y_{j+1}$, folded into an effective $K$. $E$ is a *declared* number — O'Connell's correlation, a chart,

or plant data; the engine never invents it. `column11_murphree` is `column09` plus that one line: the distillate falls from 98.12 % to 95.05 % benzene, and at $E = 1$ every existing case reproduces bit for bit.

### 5.6.4 Tray hydraulics: will the column you converged actually run?

> *What you'll learn.* How to ask a converged column whether its trays can pass the traffic they carry — and how the same block, with one keyword removed, stops rating the column and starts sizing it.

A converged column tells you what separates. It says nothing at all about how wide it is, because nothing in the stage equations depends on the diameter. Two columns of very different width give the identical stream table — and one of them floods, which means in practice that it separates nothing. The Theory Guide § "Tray hydraulics" derives why.

Add a `hydraulics {}` block inside `operation` (either column model) and the column runs a rating pass over its own converged profile:

```
hydraulics
{
    trayType              sieve;
    // diameter           1.10;     // GIVE it -> rating.  OMIT it -> design.
    traySpacing           0.50;     // m
    weirHeight            0.050;    // m
    holeDiameter          5.0e-3;   // m
    holeAreaFraction      0.10;     // A_holes / A_active
    downcomerAreaFraction 0.12;     // A_downcomer / A_tower
    weirLengthFraction    0.77;     // l_weir / D
    orificeCoefficient    0.84;     // C_o -- YOU read this off the chart
    floodFraction         0.80;     // design target
    K2                    30.7;     // optional: enables the weep check
}
```

**The thermo package must supply the surface tension.** Entrainment is a contest between the vapour's drag on a droplet and the surface tension holding it together, so the Souders–Brown flooding velocity cannot be evaluated without $\sigma$. Add `transport { surfaceTension { model BrockBird; } }` to the `thermoPhysPropDict`, or declare a constant `sigma <N/m>;` inside the hydraulics block. The column refuses to guess; it will stop and say so.

**Two modes, one block.** Give `diameter` and the column *rates*: it reports how close each tray runs to its flooding velocity. Omit `diameter` and it *designs*: it finds the width at which no tray exceeds `floodFraction` of flood, and the widest tray sets the column. This is the same rating/design duality as the spray dryer (§5.9.2) — one set of equations, run in whichever direction you need.

**Two numbers you must own.** The orifice coefficient $C_o$ and the weep constant $K_2$ are charts in the literature, not formulae. Choupo does not invent charts. $C_o$ is a declared input, printed back at you with its provenance. $K_2$ is optional: give it and the weep check runs, leave it out and the column tells you plainly that the check was not performed. If a tray lands where the flooding fit is known to be unreliable ($F_{LV} < 0.03$), the column says that too.

**What it prints.** Run `tutorials/steady/distillation/column09_tray_hydraulics` at `verbosity 3`:

```
--- Sieve-tray hydraulics (DESIGN: the diameter is the result) ---
D = 1.322 m    tray spacing 0.500 m    weir 50.000 mm    holes 5.000 mm ...
C_o = 0.840  (declared -- the Liebson chart value for this A_h/A_p and t/d_h)
sized so no tray passes 80.000 % of its flooding velocity

stage    F_LV    C_SB    u_v    u_flood   %flood    h_t     dP      h_b   h_b,max
 1     0.0389  0.091   1.002   1.575    63.6     112.9   886.1   178.1   275.0
 ...
14     0.0826  0.085   1.081   1.351    80.0     135.3  1017.8   215.8   275.0
worst tray: 80.0 % of flood on stage 14   column dP = 13.26 kPa   ...
```

The last stripping tray sets the diameter, sitting exactly on the 80 % it was asked for. Notice that the flow parameter $F_{LV}$ jumps at the feed — more liquid, less vapour below it — which lowers the capacity parameter $C_{SB}$ and so the flooding velocity. Which tray ends up tightest is not obvious in advance; you find out by looking.

**Try it now.** Run `column10_flooding`. It is the *same* column, built 1.10 m wide instead of 1.322 m. Compare the stream tables: they are identical to the last digit, the MESH converges just as fast, the distillate is still 98.12 % benzene. Then read the hydraulics: stage 14 runs at 115.6 % of flood, and the downcomer backs up to 271 mm against a 275 mm limit. On paper it is a perfectly good column. It would not work. This is exactly why the check exists.

**Common pitfall.** Hydraulics is a *rating pass on the converged profile*, not a coupled unknown. The 13 kPa of pressure drop it reports is **not** fed back into the stage temperatures — the column was solved at one pressure. For a low-pressure column where the drop is a large fraction of the operating pressure, that matters, and Choupo says so rather than quietly absorbing it. The KPIs `diameter`, `floodApproach_max`, `floodStage`, `dP_column_kPa` and `downcomerBackup_max_mm` are available to a sweep or an optimiser, so you can trace how far you can push the reflux before a tray floods.

### 5.6.5 Shortcut column, absorber, stripper, extractor

`shortcutColumn` (alias `FUG`) is the Fenske–Underwood–Gilliland *design* method (constant $\alpha$, no azeotropes): declare the key components, their recoveries and `refluxFactor` ($R/R_{\min}$); $N_{\min}$, $R_{\min}$, $N$, and the feed stage are results. Use it to size first, then hand the numbers to `distillationColumn` for a rigorous rating.

`absorber` / `stripper` are counter-current staged gas–liquid contactors solved by the Thomas tridiagonal; the solute(s) need a Henry pair (§4). `extractor` (alias `extract`) is the liquid–liquid analogue: each theoretical stage is one LL equilibrium computed by the *same* Gibbs-minimisation flash kernel the flash uses (never re-implemented), the cascade swept by successive substitution. Hardware in, results out: `stages` is the knob; recovery and the distribution ratio are results. Tutorials: `absorber01_NH3_water`, `extract01_ethanol_water_benzene`.

## 5.7 Membranes and electrochemical separations

**`spiralWoundModule` (alias `membraneSW`).** The NF/RO element: solution-diffusion permeation + concentration polarisation, with selectable sub-models for feed-channel mass transfer (`SchockMiquel`, `StirredCell` or `constant`), pressure drop, and osmotic pressure (`vanHoff` or `Pitzer`):

```
operation
{
    membrane         SW30HR;        // -> data/standards/assets/<name>.dat
    area             35 m2;         // per element
    length           1 m;
    elements         1;             // >1 for a train in one vessel
    P_perm           1.01325 bar;
    dP_feed_total    2 bar;
    massTransfer  { model SchockMiquel;  channelHeight 0.7 mm;
                    diffusivity 1.6e-9 m2/s;  viscosity 1.0e-3 Pa.s; }
    osmotic       { model Pitzer; }
}
```

Inputs `( feed )`, outputs `( retentate permeate )`. KPIs: `J_w_avg`, per-solute observed rejection, `water_recovery`, `dP_feed`. Four membranes ship in the catalogue (a seawater-RO archetype, a loose-NF archetype, a pore-model NF, and an ion-exchange pair); the solutes carry `nonvolatile true;` and a van 't Hoff `dissociation` factor.

Two things the example types by hand may instead be *named*. `module NF270-4040;` resolves a `kind membraneModule` record in `data/standards/assets/` (two commercial elements and a laboratory flat cell ship today) which supplies the active area, the channel height, the spacer porosity and the leaf length, carries the manufacturer's `limits {}` — checked against the run and *announced* when exceeded, never refused — and its own `ratedTest {}`; typing any of that geometry beside `module` refuses by name. And the film's policy is one `polarisation { suctionCorrection ...; ionCoupling ...; }` block: with `ionCoupling electroneutral;` the wall concentrations of an ion-declared feed are solved *coupled*, each ion's $k$ on its own diffusivity and one interface potential gradient fixed by electroneutrality at the wall (no film thickness, no new parameter). The default is the per-ion field-free film, and the run says so. A `scaling { minerals (calcite gypsum); }` block runs the aqueous speciation solver per module at the bulk *and at the wall*, so you see concentration polarisation as the scaling driver

(`membrane07_scaling_si`). Start with `membrane01_RO_NaCl_seawater`, then the concentration-polarisation sweep `membrane03_concentration_polarization`.

**Boron: one component, two forms.** Boric acid is a small neutral molecule that crosses a seawater membrane almost like water; borate is an anion the membrane rejects like a salt, and which one dominates is the pH against the acid's pKa (9.24 at 25 °C, from the `chemistry/BOH4-formation.dat` record, with its enthalpy). A module declares `aqueousSplit { component boron; acid H3BO3; base BOH4; pH 8.2; pHSource "..."; rejection { ...} }` together with `boron ( fromAqueousSplit );` in its `rejection` block. The base fraction $\alpha = 1/(1 + 10^{\mathrm{p}K_a - \mathrm{pH}})$ is asked of the *case's* declared aqueous chemistry (the activity model the case declares under `equilibrium { aqueous { } }`, never one the unit picks) at the module inlet and the *declared* pH; the streams keep the apparent boron, the module reports the two forms. The permeances come from the data sheet's rated tests: two tests of one element at two pH (`tests ( id1 id2 )`) give both forms; one test gives the acid and the borate's rejection is a declared assumption (`base ( sameAs NaCl );`), announced on every run. Stage 1 freezes the split at the inlet's pH and takes the pH as a label of the module: no stream carries a pH and the caustic dosing that sets the second pass's pH is not a unit. At seawater strength Davies is outside its own band and the run says so. Lower the second pass's pH in `swro01_campoDalias` from 10 to 9 and the product's boron rises from 0.04 to 0.14 mg/L.

**How an RO/NF plant is laid out.** The element above is the smallest piece of a plant; the equipment a student designs around it is organised by a few practices that decide how many pumps, exchangers, vessels and racks a plant has and where they stand. This subsection states each practice, its source and its limits. Every source below is an open vendor or trade page read on 2 November 2026; no standard was read, and *no open source read gave a numeric clearance, pitch or aisle* (see item 4). Where a number has no source it is called *author-set*, and the case declares it `origin assumed;`.

1. **Trains, or a pressure centre.** A large seawater plant is not one pump and one vessel bank. It is organised either as *trains*, each with its own high-pressure pump, its own pressure-exchanger array and its own vessel racks, or as a *pressure centre*: a few large pumps feeding many racks through a common header. The trade is efficiency against redundancy: a larger pump is the more efficient machine, but its failure stops everything it feeds, while many trains lose one train at a time. This trade is the author's engineering judgement. The vendor article on it (Danfoss, *Multiple trains for large SWRO plants: how much flow should one pump produce*) returned an access error when fetched, and only a search engine's summary of it was seen, so *nothing is taken from it.* What was read is the size a single pump is built for (item 2). The case `swro01_campoDalias` is built as six trains because the manufacturer's case study it follows states six skids of equal capacity; a pressure-centre alternative is not yet a tutorial.
2. **The maxima of one pump and of one exchanger, and why the plant is organised in clusters.** A machine has a largest size. Sulzer's *MSD-RO axially split multistage pumps*, brochure e10110 (https://www.sulzer.com/en/-/media/files/products/pumps/axially-split-pumps/brochures/msdro_axiallysplitmultistagepumps_e10110.pdf, read), states capacities of 1000 to 1600 $m^3/h$, pressures up to 90 bar, and that the pump covers "SWRO train capacities from 20 000 … to 30 000 $m^3/d$". Energy Recovery's *PX Q-series* page (https://energyrecovery.com/pressure-exchangers/px-q-series/, read) states a concentrate flow of 4.5 to 147.6 $m^3/h$ (20 to 650 gpm) for the series, pressures up to 83 bar, volumetric mixing as low as 2 %, and offers the exchangers as a ready-to-install *array* package for a train ("train production capacity starting from 3000 CMD"). The window 250–650 gpm (56.8 to 147.6 $m^3/h$) of the Q650 model comes from the vendor's release of 9 March 2026, seen only as a search summary. The pages say nothing about how many devices or pumps a plant should use. The consequence is arithmetic and is the guide's own: a train needing more flow than one device passes is given an *array*, $n_{\mathrm{PX}} = \lceil Q/Q_{\mathrm{device}} \rceil$, and a train needing more than one pump passes is given $\lceil Q/Q_{\mathrm{pump}} \rceil$ pumps. A *spare* pump shared by the trains is an author-set choice in the case; a statement that Carlsbad runs three pumps and one spare was not re-read and is not relied on.
3. **The pressure-vessel bank.** A vessel holds one to eight elements in series (eight at Carlsbad, seven in the Campo de Dalias case). CompositesWorld, *Composites' role in seawater reverse osmosis desalination* (https://www.compositesworld.com/articles/composites-role-in-seawater-reverse-osmosis-desalination-, read; the last 15 000 characters of the page were not), reports for the Carlsbad plant 2236 filament-wound vessels of eight elements each (17 888 modules), rated 1200, 600 or 450 psi *depending on the area* (the page does not say which position gets which rating), and that groups of vessels fed from one pressurised header are called trains and are "arranged in racks". The 28.4-ft, 8-inch, eight-element vessel on that page belongs to the *Santa Barbara* plant, not to Carlsbad. That ratings vary with position means the `pressureRating` of a bank is a property of the bank, not of the plant; which vessels need the highest rating (the high-pressure end of the first pass) is the author's reasoning, not the page's. On the second pass, The Water Network's note on the Torrevieja plant (https://thewaternetwork.com/water-news-post-TFp/OwEEo2ZXUXrGgVIK-A4wiA, read) says that its second-pass vessels are set *on both sides* of the first-pass vessels, unlike most plants, where the second pass sits on one side. That one sentence is all that was read; it says nothing of how common either layout is.

4. **Element loading and the clearance at the end of a rack.** Elements are pushed into and pulled out of a horizontal vessel one at a time, in line with it, so the usual practice is to keep about one vessel length free at one end of a rack. *No open source read stated this.* The Hydranautics TSB122 and LG Chem TSB 102 loading bulletins were searched; the LG Chem one was found to describe the loading procedure (how far to insert the first element), not the space around the rack, and neither gave a clearance, a vessel pitch, a tier pitch or an aisle. The one-vessel-length rule is the practice as the author states it, following from the geometry of withdrawing an element in line; the vendor installation guides that give a figure were not readable here, so a student designing a real hall must take the figure from the vessel maker's guide. In Choupo this number, the rack pitch, the tier pitch, the end margin and the aisle are all *declared by the case and marked* `origin assumed;` with a reason; none is a default.

**How Choupo carries this.** The flowsheet is solved once, at plant flow, because $N$ identical trains in parallel carry $N$ times a train's flow; the sizing is done per train. In `system/postDict` the case declares `sizing { trains { count` $N$`; source; reason; } }` and adds `perTrain yes;` to each replicated entry; each such entry then yields $N$ items (`train1`…`trainN`) that publish their own numbers beside the plant's. An entry saying `perTrain` with no declared trains refuses by name, and a vessel count that does not divide by $N$ refuses naming the remainder.

- **Pumps** (`ratedMachine`, kind `volumeRate`): the case declares the largest pump, `rating { maxFlowPerUnit; pressureRating; origin; source; reason; }`. The sizer publishes the pumps needed per train, $\lceil Q_{\text{train}}/Q_{\max} \rceil$, the installed count (fewer than needed refuses), the spare, the flow and shaft power per pump, per train and for the plant, and the utilisation (announced above 85 %). Choupo carries no pump catalogue.
- **Pressure-exchanger array** (`pressureExchanger`): the declared device window (`minFlowPerUnit`, `ratedFlowPerUnit`) and `pressureRating`; a device below the bottom of its window or a pressure above the rating refuses.
- **Vessel bank** (`membraneBank`): from the module's own `vessels`, `elements` and element length and diameter, plus the case's vessel (`endAllowance`, `outsideDiameter`), rack (`vesselsPerRack`, `tiers`, `pitch`, `tierPitch`, `baseHeight`, `endMargin`, `aisle`) and `loadingClearance { vesselLengths }`. The sheet publishes

$$L_{\text{vessel}} = n_{\text{el}}\, L_{\text{el}} + a_{\text{end}}, \qquad N_{\text{racks}} = \lceil N_{\text{vessels}}/N_{\text{rack}} \rceil,$$
$$L_{\text{rack}} = L_{\text{vessel}} + 2\, m_{\text{end}}, \quad W_{\text{rack}} = \tfrac{N_{\text{rack}}}{N_{\text{tiers}}}\, p, \quad H_{\text{rack}} = h_0 + N_{\text{tiers}}\, p_{\text{tier}},$$

  and the bank's *envelope*: length $L_{\text{rack}}$ plus the loading clearance $k\, L_{\text{vessel}}$, width $N_{\text{racks}} W_{\text{rack}} + (N_{\text{racks}} - 1)\, a_{\text{aisle}}$ and height $H_{\text{rack}}$. A pitch below the vessel diameter, a vessel narrower than its element and a rack that does not divide into tiers each refuse by name.
- **Headers** (`pipeHeader`): the feed, brine and permeate header of each bank are sized by velocity, one item per header and train. The case lists them, `headers ( { role feed; stream roFeed; } ... )`, and declares a velocity window `velocity { min; max; origin; source; reason; }`, the inside diameters it can buy `nominalSizes { sizes ( { insideDiameter ...; } ... ); ... }`, a roughness, a friction correlation and a viscosity (the package here declares none). The sizer reads the volumetric flow of the named stream per train and takes the smallest declared bore not below $D = \sqrt{4Q/(\pi v_{\max})}$, provided its velocity stays above $v_{\min}$; if none fits it refuses, naming the window, the required bore and the list. It publishes the required and the nominal bore (`headerNominalDiameter`), the velocity and the Darcy–Weisbach pressure drop per metre, $f\, \rho v^2/(2D)$, with $f$ from the declared correlation. Choupo carries no pipe schedule table: the list of bores is the case's. The window of the worked example, 1–2 m/s, is *assumed*: the only figure found in an open page ("typically 1–2 m/s", a vendor article on small commercial RO plants) is not specific to seawater or to a header, and the FilmTec design-guideline excerpt read states no piping velocity. The drop is per metre; length, fittings, wall and pressure class are not modelled.
- **The hall.** The racks stand in a `building {}` of `system/layoutDict`, whose rooms list the items that stand in them; the engine publishes the counts and envelopes, and the plant layout check refuses overlaps. The racks, plans and the schematic of a train are drawn from the published sheet; the drawings compute nothing of their own.

**A worked example**: `swro01_campoDalias`, six trains, 98 664.7 $\text{m}^3$/d of product. *Declared by the case:* six trains (source: the manufacturer's case study, six skids); a largest pump of 1600 $\text{m}^3$/h and 90 bar and an exchanger window of 56.8–147.6 $\text{m}^3$/h at up to 83 bar (both *literature*, the pages above); and, all *assumed*: a vessel end allowance of 0.53 m (the Santa Barbara 28.4-ft vessel less eight 40-inch elements, taken to hold here), an outside diameter of 0.25 m, 0.40 m pitch and tier pitch, a 1.5 m aisle, 48, 28 and 20 vessels per rack in four tiers, and a loading clearance of one vessel length. *Computed by the engine* (the numbers are those published with the case's design record, DEV.md 4c C199 phase A; they were not re-run for this text): per train one high-pressure pump of 798.6 $\text{m}^3$/h (49.9 % of 1600) taking 1530.8 kW of shaft power, and six exchanger devices (868.2 $\text{m}^3$/h of low-pressure flow, 144.7 $\text{m}^3$/h per device, inside the window); the plant runs six pumps and one spare. Per train the first pass has 233 vessels of 7 elements and the second pass 54 + 18; a vessel is $7 \times 1.016 + 0.53 = 7.642$ m long, which is also the loading clearance; the vessels stand in $5 + 2 + 1$ racks; a 48-vessel rack measures $8.14 \times 4.8 \times 1.9$ m ($L \times W \times H$) and the first-pass bank has an envelope of $15.78 \times 30 \times 1.9$ m. *Literature:* the ranges and ratings of

the pump and the exchanger, eight-element vessels with ratings that vary by position, and the second pass on both sides at Torrevieja. *Limits:* the exchanger is a stand-in (the manufacturer's case study uses a piston-type work exchanger); the layout is Choupo's design, not the real site's; a pressure-centre alternative, pump curves, NPSH and the cost of the pump bank and vessels are not modelled. The declarations and their stated sources are in `tutorials/plant/swro01_campoDalias/system/postDict`.

**`ionExchanger`.** A cation-exchange softener: the inlet water analysis is fully equilibrated with a fixed-capacity Na-form resin (Gaines–Thomas mass action), so Ca/Mg drop onto the resin and Na rises equivalent-for-equivalent. `operation { resin SAC_Na; CEC 2.0 eq/L; }`; hardness removal is a *result* (a target-hardness key is refused — that is an outer-driver job). Every run carries a non-suppressible banner: this is the fresh-resin equilibrium limit, not a bed in service (breakthrough is transient). Tutorial: `membrane08_softened_scaling` — softener upstream of the RO train, the scaling driver removed at the source.

**`electrodialysisStack`.** N cell pairs of alternating cation/anion-exchange membranes: an applied current drives ions out of the diluate channel into the concentrate. Glass-box electrochemistry, all printed: Faraday transfer per cell pair ($\dot{n}_i = \xi I / z_i F$), Nernst membrane potential from real ion activities, the limiting current density (a loud warning — never a clamp — when $i > i_{\mathrm{lim}}$), ohmic drops from the membrane and channel resistances, and the stack power published on an energy wire.

```
{ name edStack;  type electrodialysisStack;
  inputs ( diluateFeed concentrateFeed );  outputs ( diluate concentrate );
  operation
  {
      N_cellpairs 100;   current 8.0;        // A
      xi 0.9;                                 // current efficiency (announced)
      membraneArea 0.2 m2;  channelThickness 0.5 mm;
      channelLength 0.4 m;  linearVelocity 0.05 m/s;
      E_electrodes 1.5;  membrane CMX_AMX;
  }
  energyOutputs ( { name power; kind work; expression "W_electric"; unit W; } ) }
```

As with the NF/RO element, the hardware may be *named* instead of typed: `stack EUR2C-7P18;` resolves a `kind edStack` record in `data/standards/assets/` which supplies the membrane pair, the cell pairs, the active area, the channel and spacer, the hydraulic passes, the stack's own Sherwood correlation and its limits. Declaring any of those beside `stack` refuses by name — `linearVelocity` included, because the crossflow velocity is not an operating knob: the diluate flow arrives on the inlet stream, so $u = Q/((N/\mathrm{passes})\,Wh)$ is a *consequence*, derived and printed with its arithmetic.

There are two limiting-current models, selected `limitingCurrent { model ...; }`. `CowanBrown` is the legacy single-salt working form on the membrane record's *declared* transport number. `GeraldesAfonso2010` *predicts* the limiting transport numbers from the ion diffusivities and the diluate composition, so no transport number is read at all; it needs the stack record's own correlation, and is the default wherever one is named and every diluate ion resolves a diffusivity. The run announces which model ran, and why.

Tutorials: `tutorials/steady/electrodialysis/ed01_nacl_desalination` and `ed02_over_limiting_current` (what the $i_{\mathrm{lim}}$ warning looks like when you cross it), then `ed03_stack_record` (the same bench stack as a record), `ed04_limiting_current_multiionic` (the prediction against six measured anchors) and `ed05_industrial_stack`.

**`psa`.** Pressure-swing adsorption as a steady flowsheet unit — the equilibrium-theory (local-equilibrium) shortcut: the swing between $P_{\mathrm{high}}$ and $P_{\mathrm{low}}$ on a competitive-Langmuir adsorbent sets the captured flow per species, with a declared equilibrium-utilisation derating `eta` and a purge fraction. What the shortcut does *not* model (breakthrough, cycle time, thermal effects) is announced in the run header. A result-named key (`recovery`, `purity`) in `operation` is refused — hitting a target is an outer-driver job. Tutorial: `tutorials/steady/separation/psa01_h2_psa`.

## 5.8 Solids: separation, conveying, crystallisation

Solids ride streams as a `phases { solid {...} }` decomposition plus an optional particle-size distribution (`psd`); the solids units read and transform both.

**Gas–solid separation.** `cyclone` is a PSD-aware classifier with five selectable models (`Lapple` default, `LeithLicht`, `IoziaLeith`, `Barth`, `Muschelknautz` — the last adds the solids-loading effect); `bagFilter` is cake-dominated near-total collection whose headline KPI is `dP_filter`; `gasSolidSplitter` is the ideal spec'd split (PSD passes unchanged — it does *not* classify).

**`pneumaticConveyor`.** A dilute-phase conveying line: the total $\Delta P$ is the sum of announced contributions (gas + solids acceleration, wall friction, static head, bends), the particle velocity from a force balance (gas drag against wall friction plus gravity along the pipe), the solids friction by Yang (1974), and the *Rizk saltation velocity* reported with a loud warning if the gas velocity falls below it (settling / blockage risk) — never a silent clip.

**`crystalliser`.** Three models on one saturation foundation:

- `equilibrium` (default) — cooling crystalliser; the mother liquor leaves saturated, yield = solute in $-\,c_{\mathrm{sat}}(T)$·solvent.
- `MSMPR` — steady continuous population balance by the method of moments: nucleation/growth kinetics from `constant/crystallisation`, supersaturation $S$ a result, and the full crystal-size distribution (mean sizes, CV, magma PSD) reported.
- `FVM` — the discretised population balance on a size grid (size-dependent growth).

All three read the same saturation — a solubility curve (`solubility {}` on the component) or, for a salt, the ion-activity $K_{sp}$ of the electrolyte package (including antisolvent drowning-out; `crystalliser08_nacl_antisolvent_msmpr`). Multiple feeds are first-class (`inputs ( brine antisolvent );`) and `operation { solute <name>; }` names which salt this unit crystallises when the feed carries several (`crystalliser09_KHT_KCl_series`). The declared `outputs` pick the product shape: `( magma )` for one slurry (required by MSMPR/FVM so the PSD travels), or `( crystals motherLiquor )` for a solid–liquid split, where the cake leaves *wet* (`cakeMoisture`, default 0.10 kg liquor per kg dry solid — perfectly dry solids are unphysical) and `solidsRecovery` lets fines escape with the liquor.

## 5.9 Drying

Three dryers, one honesty rule — the drying air is a *real stream* (it brings the heat and carries the moisture; the outlet temperature is a result, there is no imposed duty):

- `sprayDryer` — solution/suspension → powder (§5.9.1);
- `solidDryer` — polish a *hygroscopic* powder toward the equilibrium moisture set by the air humidity and the solid's GAB sorption isotherm (a `sorption {}` block on the component, typically a case-local overlay — sorption is sample-specific);
- `evaporativeDryer` — dry a *non-sorbing* crystalline solid of its free surface moisture: no isotherm exists or is consulted; constant-rate evaporation until the first of three announced limits binds (water gone, exhaust saturates, air runs out of heat).

### 5.9.1 Advanced spray drying: the atomiser library

> *What you'll learn.* How the `sprayDryer` atomises a solution into droplets, dries them to a powder of a real particle size, and where each piece of physics — the droplet size, the liquid properties, the drying curve — comes from. "All models are wrong, but some are useful": every correlation is an algebraic fit (no CFD) and announces its source and validity envelope at run time.

A spray dryer takes a liquid feed and hot drying air (both flowsheet *streams*) and returns a powder plus the humid exhaust. Three pieces of physics compose: (i) *atomisation* sets the droplet Sauter diameter $d_{32}$; (ii) *single-droplet drying* (Ranz–Marshall $\mathrm{Nu} = 2 + 0.6\,\mathrm{Re}^{1/2}\mathrm{Pr}^{1/3}$, a wet-bulb surface) sets the rate; (iii) the droplet shrinks to a powder particle $d_p = d_{32}\,(x_{\mathrm{solid}}\rho_L/\rho_{\mathrm{solid}})^{1/3}$ carrying a residual moisture set by the material's sorption isotherm.

**The atomiser is a selectable sub-model.**

```
operation
{
    atomiser
    {
        model   pressureNozzle;     // rotary | pressureNozzle | twinFluid
        deltaP  40 bar;             // pressure-nozzle hardware
    }
    chamberDiameter  1.0 m;         // -> residence time is a RESULT
    chamberHeight    5.0 m;
    flow             co;            // co | counter current
}
```

Omit the `atomiser` block and the default `rotary` wheel reads the legacy `wheelSpeed`/`wheelDiameter` keys — older cases are unchanged. The families and their hardware:

| `model` | correlation ($d_{32}$) | hardware |
|---|---|---|
| `rotary` | Friedman/Marshall wheel | `wheelSpeed` [rpm], `wheelDiameter` [m] |
| `pressureNozzle` | $9575\,\Delta P^{-1/3}\,\mu$m (class curve) | `deltaP` [Pa] |
| | *or* Wang–Lefebvre (two-term) | `correlation wangLefebvre` |
| `twinFluid` | Nukiyama–Tanasawa airblast | `relativeVelocity`, `airLiquidMassRatio` |

**Droplet size follows the liquid properties.** $d_{32}$ rises with surface tension ($\sigma^{0.1}$–$\sigma^{0.6}$) and viscosity ($\mu_L^{0.2}$), so a concentrated, viscous feed sprays coarser. Choupo pulls $\sigma$ and $\mu_L$ from the property layer when the `thermoPhysPropDict` declares the models (`surfaceTension`, `liquidViscosity`), with an announced fallback otherwise — the $\sigma$ source is printed in the report.

**Drying kinetics — equilibrium vs. curve.** The powder does not leave bone dry: it stops at the residual moisture set by (a) the equilibrium $X_e$ from the solid's `sorption` isotherm at the exhaust-air humidity, and (b) the falling-rate approach past the critical moisture $X_c$ (the `dryingCurve` in `constant/dryingKinetics`). Co- vs. counter-current changes the residence time and, in the trajectory models, the droplet thermal history.

**Chamber model — named by its authors, not "rigorous".** The unit-level `model` slot picks the chamber model: `marshall` (default) — the lumped inlet/outlet mass + energy balance and single-droplet constant-rate time (Marshall 1954); `langrishKockel` — the 1-D axial droplet trajectory with the Characteristic Drying Curve, which reports the profiles of $X$, $d$, $T_g$, $T_p$ *along* the chamber (a `profile.csv` you can plot); or `chen` — the same trajectory with the Reaction Engineering Approach kinetics, a smooth activation-energy rate with no critical-moisture break. Reported KPIs: $d_{32}$, $d_p$, Nu, Sh, $h$, $k_c$, $T_{\text{out}}$, $T_{\text{wetbulb}}$, the constant-rate droplet time and $X_{\text{final}}$ — all feeding sensitivity/sizing/costing.

### 5.9.2 Simulation vs. design — the model runs both ways

It can feel odd to supply a wheel speed and a chamber size just to *simulate* a dryer. That feeling is correct, and it has a name: what you are doing is *rating* — geometry → performance, "I have this dryer, what does it do?". The opposite question — "I want this powder, what dryer do I need?" — is *design*, targets → geometry. Choupo does not split these into two black boxes; it keeps **one model and runs it in both directions**.

*Rating* is the `sprayDryer` unit itself. *Design* is a `postDict` sizing pass carrying a `design {}` block, which **inverts the run you just rated** — it does not re-derive the correlations, it *scales from the simulated point*, so every step is visible:

```
sizing
{
    units
    (
        {
            unitName    dryer;
            type        sprayDryer;
            material    SS304;
            designRules
            {
                design
                {
                    targetSize       40;    // um  -- target powder Sauter mean d32
                    residenceFactor  3.0;   // chamber residence >= 3 x drying time
                }
            }
        }
    );
}
```

The pass then reports the geometry the targets demand: the wheel speed from the target drop size (Friedman's $d_{32} \sim N^{-0.6}$) and the chamber size from the required residence, with the Tanasawa regime warning still telling you whether that design lands in the clean ligament regime. In `tutorials/steady/drying/sprayDryer07_design` the sugar dryer rated at 20 000 rpm must spin to ≈40 000 rpm for a 40 µm powder, and its 1 × 5 m chamber turns out ∼30× oversized — the fast sugar drying needs only 0.24 s of residence. **You simulate with the unit and design with the pass: two directions of one model, both on the page, neither hidden.**

## 5.10 Flow primitives: mixer, splitter, valve, pipe

**mixer.** Adiabatic merge: $P_{\text{out}} = \min(P_{\text{in}})$, solids summed; the outlet is the state of equal enthalpy, *resolved* at its own equilibrium and priced as the energy report prices every stream, so a merge of a vapour and a liquid can leave two-phase, with the vapour fraction it resolves to. A mixer does not *separate* — one combined outlet; put a flash after it to split the phases. An optional `operation { T 330 K; }` declares the mix temperature instead, publishes the duty that implies as `Q_kW`, and labels the outlet with the dominant inlet phase (announced in the log).

**splitter.** One inlet, N outlets at `fractions ( 0.6 0.4 );` — a flow split, not a separation: all branches share $T$, $P$, composition, $vf$.

**valve.** Isenthalpic throttle to `operation { P 1 bar; }`; $T_{\text{out}}$ and the vapour fraction are results (a real-gas EoS flashes the let-down). Use it upstream of a flash to set the drum pressure; it warns if $P \geq P_{\text{in}}$.

**pipe.** The pressure *drop* is a computed result of geometry + flow — never a spec (a pipe has no knob; a pump raises $P$, a valve sets a let-down). Darcy–Weisbach friction + minor losses + static head, with the friction-factor sub-model in the `model` slot (`Churchill` default — one explicit expression for every Re, continuous through the laminar–turbulent transition; `Haaland`; `Colebrook`). In the transition band ($2300 \leq \text{Re} < 4000$) the regime is not determined by Re — it depends on the disturbances the line meets — so the $f$ any model returns there is an interpolation that keeps the solve continuous, not a prediction; a pipe in the band is announced once in the run's caveat block, and a design should move out of it:

```
{ name P1;  type pipe;  model Churchill;
  in feed;  outputs ( downstream );
  operation {
    geometry {
      D 0.1 m;  L 50 m;  roughness 4.6e-5 m;  dz 2 m;    // rise costs P
      fittings ( { K 0.9; count 2; }      // two elbows
                 { K 10.0;         } );   // one globe valve
    }
  }
}
```

When the feed flashes two-phase at $(T, P)$, the pipe automatically switches to a gas–liquid model, selected in an `operation { twoPhase { model ...; } }` sub-block: `LockhartMartinelli` (default; Chisholm multiplier + Butterworth holdup), `homogeneous`, `Friedel`, or `BeggsBrill` (flow-pattern map + inclination). KPIs include the five-way $\Delta P$ breakdown, velocities, Reynolds, regime, holdup and void fraction. Tutorials: `pipe01_water_line`, `pipe02_airwater_twophase`.

## 5.11 Heat duties, utilities, heat integration

One rule covers heat: **a duty is carried by a physical stream when one is wired to it, otherwise it is sized to a plant utility by temperature level**. Shaft work is a direct scalar wire (§5.5); no abstract "Q stream" ever travels the flowsheet.

**Q then allocate (the default).** Most units just report their duty and let a report size the utility. Add to `controlDict`:

```
reports { utilityAllocation { dTmin 10; } }
```

For each duty $Q$ at process temperature $T$ the report picks the lowest-grade catalogue utility that still works (a steam grade with $T_{\text{in}} \geq T + \Delta T_{\min}$ for heating; a coolant with $T_{\text{in}} \leq T - \Delta T_{\min}$ for cooling) and converts $|Q|$ to a mass flow, a load, and a cost. Nine utilities ship in `data/standards/utilities/`: `steamLP/MP/HP`, `coolingWater`, `chilledWater`, `dowthermA`, `hitecSalt`, `refrigerationPG`, and `electricity` — the power tier tallies pump/compressor motors against turbine generators, so a combined cycle shows a net electricity credit.

**Heat integration.** Reuse a column's condenser heat by wiring the duty on the consumer, like any energy link:

```
{ name preheater;  type heater;  in coldFeed;  outputs ( warmFeed );
  operation { }                                  // Q comes from the link
  energyInputs ( { from column01.condenser;  kind heat;  target Q; } ) }
```

Both ends then read *(carried)* in the allocation — no double-counting, and the report shows the saving. A *forward* link runs in one pass; a *feedback* link (the condenser preheating the column's own feed) is an energy tear — the flowsheet detects it, turns the recycle loop on, and converges the duty by successive substitution. Tutorials: `heatlink01_condenser_to_heater`, `heatlink02_condenser_feed_preheat`.

# 6 Reports

*What you'll learn.* One `reports {}` block in `controlDict` turns a converged run into CSV tables and a consolidated spreadsheet — stream tables, balances, utility bills, profiles, costs.

Each key names a report object; after a converged solve each writes into the case's `reports/` directory and announces the file:

| Report | What it writes |
|---|---|
| `streamTable` | one row per stream: role, $F$, $F_{\text{mass}}$, $T$, $P$, $vf$, compositions |
| `massBalance` | per-component in/out/net + global closure %, and a per-unit table |
| `elementBalance` | plant-boundary *atom* conservation, one row per element (kmol-atom/h in, out, residual, closure %) + a status sidecar (§6) |
| `energyBalance` | per-unit $H_{\text{in}}$ / $H_{\text{out}}$ / $\Delta H$ (the implied duty) + the plant boundary |
| `utilities` | consumption aggregated by stream `category` (kg/h, MW, cost) |
| `utilityAllocation` | each duty sized to a catalogue utility by temperature level (§5.11) |
| `energyStreams` | the W/Q wire ledger |
| `computed` | the values of computed `$variables` (below) |
| `profiles` | per-unit internal profiles (column stages, PFR axis, dryer trajectory) |
| `design` / `economics` | equipment realisation + cost tables (with a `postDict`, §9) |
| `spreadsheet` | one consolidated, coloured `report.ods` (multi-sheet) |

**Which liquid properties each unit used.** When a run priced a liquid density, viscosity, surface tension or diffusivity, the Reports workspace has a *Liquid properties used* section for the whole run: the engine's own findings first (the same liquid given two numbers, a source the unit's type does not declare, a constant beside a computed value), then a table grouped by the consumer the engine named — the property, the number with its unit, the state it was asked at (temperature, pressure), and the source in the engine's words, with the engine's class word beside it: *kernel* (the case's property package priced it), *bypass* (the unit computed it itself, so the number does not follow the case's property choices) or *declared* (the case gave it). A number the engine did not record reads "value not recorded". The app only displays the engine's table; it computes and rewords nothing. The section is absent from a result that has no such block. What the three classes mean is in the Theory Guide, §**??**.

**The PFD as a printable sheet.** Exporting the flowsheet has two forms. The canvas *Colours* menu, *Export figure*, saves the coloured drawing as SVG or PNG. The *PFD (PDF)* report (the Reports workspace, or the *PFD sheet* button beside the export) builds the document a design project hands in: the flowsheet figure with the wire numbers of the canvas, the *stream table* along the bottom (one column per physical stream, headed by that same number: $T$, $P$, phase, total flow and the mole fractions, exactly what the run published, a dash where it published nothing), the equipment tags where the case carries them, the utilities the duty stubs name, and a title block with the case, the date, the engine version and commit and *sheet n of N*. A sectored plant gets the plant overview and one sheet per sector. The page follows the content: A3 landscape, stepping up to A2 and A1 when the stream table would otherwise need text below 2.5 mm printed; beyond A1 the table continues on the next sheet (same title block). A small selector forces a size. The page opens in a new tab with a *Print / Save as PDF* button (no PDF library is involved: use the browser's print dialog, margins "None"); the SVG of each sheet can be saved as well. The stream table is read from the run, so declare `reports { streamTable {} }` in `controlDict` when you also want the engine's own `reports/streams/streamTable.csv`.

**The element balance is a default diagnostic.** Species moles may change legally through reactions; the invariant of a reacting flowsheet is the *atoms*. Every converged `choupoSolve` run therefore writes `reports/balances/elementBalance.csv` (one row per element: kmol-atom/h in, out, residual, closure %) and its `elementBalance.meta` status sidecar *without being asked* — a declared `elementBalance {}` block keeps full control, and any report block can opt out with `enabled false;` inside it. The claim is honest by construction: a component whose formula cannot be parsed and that declares no `elementalComposition{}` block makes the status `UNAVAILABLE` *naming the species and the reason*; a declared-composition component with unaccounted mass makes it `PARTIAL`. The GUI's *Element balance* view draws exactly this artefact: total atoms in vs out, sealed only when *every* element closes (a signed total could cancel a +C error against a −O error), with the per-element decomposition one click away. The theory and the parser contract are derived in the Theory Guide (*Balances: mass, elements, energy*).

**Computed variables.** For post-processing arithmetic, declare `compute` expressions in the `variables` block of `flowsheetDict` — they resolve against unit KPIs, stream fields, and earlier variables, and land in

reports/computed/values.csv:

```
variables
{
    Q_total    { compute "effect1.Q + effect2.Q + effect3.Q";  unit kW; }
    economy    { compute "water_evap / effect1.F_steam"; }
}
```

# 7 The Panel view: an operator panel, read-only

*What you'll learn.* A time-integrated case may declare an *operator panel*; the *Panel* view draws it from the run, at the instant a time cursor is on, and changes nothing.

**What it is for.** An operator-in-training opens a time-integrated case and sees, at the instant the cursor is on, whether each watched variable is inside its limits, how it got there, and what the case's author declared about it. The view appears in the top menu of a time-integrated case *only when the case declares a panel* (`system/panelDict`, written in the design guide's section on the operator panel; today the engine reads it in `choupoBatch` runs); a case without one shows no Panel entry. *Open in new tab* puts the same panel in a tab of its own for a second screen; that tab follows the parent's latest run and dims, saying why, when the case has moved since the run it draws.

**What it shows.** Each element of the panel is one of four kinds: a *number*, a *bar* (the value on its scale with its limits drawn), a *trend* (the whole run beside the number, the limits drawn, the engine's alarm intervals as a band along the foot, the cursor as a vertical line) and a *lamp* (a word and a shape). Everything is grey by default. An element is coloured, and carries a word and a triangle, only while the engine reports its alarm active at the cursor's instant, and then it also shows the action the case's author asked for. The strip above the widgets counts the alarms active at that instant. Under each element are the reason it is on the panel and, in *declared by the case*, the source and reason of its limit. Below the widgets the engine's *facts* about the panel are listed as it wrote them (an element that never moves, a limit that is never approached, the instants a limit is crossed): facts, not a grade.

**The scale of a trend.** A trend carries a scale: the minimum and maximum of the range it is drawn on at the left, and the run's first and last written instant at the foot. Where a placed card is taller than its neighbours the grid stretches it, so no gap is left beside a tall card. When the case declares a panel and a run has finished but the engine published no panel block, the view says that the engine predates the operator panel (running again does not help; the engine has to be updated) instead of asking for a run.

**The time cursor.** One slider moves every widget together over the instants the run wrote; it works from the keyboard (arrows, *Home*, *End*). A crossing is seen on the written instants: an excursion shorter than one write interval is not seen, and the remedy is a smaller `writeInterval`.

**Where the limits come from, and what the view does not do.** Every limit, range, word, reason and action is the case's own, read back from the engine's report of `system/panelDict`. The view *computes nothing*: it compares no value with a limit. The engine reports an alarm interval only for an element that declares an `alarm`; an element with a limit and no alarm has its limit drawn, is never coloured and is not counted. A column the run does not publish is drawn as *not published*, never as a zero. The unit of a column is not published, so the view prints the column's name beside its value (`i_A_per_m2`). The view has no editing control: change the panel in `system/panelDict` and run again.

# 8 Sweeps, design specs, optimisation

> *What you'll learn.* How to wrap the simulator in an outer loop without writing a single line of C++: trend one knob (`sweep`), map two (`gridSweep`), meet N specs with N knobs (`designSpec`), or search for the best value (`optimization`).

Drop a `system/outerDict` into a case and the binary switches from one pass to the driver loop automatically. One driver per case; `type` selects it. Ask the right question of the right tool:

| Question | Tool |
|---|---|
| "What if $T$ were 360 K?" (one point) | edit the dict, re-run |
| "How does $V/F$ trend with $T$?" | `sweep` |
| "What does the $(T, P)$ envelope look like?" | `gridSweep` |
| "What area gives exactly 4500 kg/h?" | `designSpec` |
| "Which reflux minimises $V_{\text{strip}}$?" | `optimization` |
| "Fit NRTL to my bubble-$T$ data" | `fitParameters` under `choupoProps` (§13) |

**Paths.** Drivers mutate the case between passes via dot-and-bracket paths (`units[0].operation.refluxRatio`, `variables.A`, `streams.feed.F` — the last steered through an explicit stream-override channel, since stream state lives in `0/`). Values written this way are *raw canonical SI*. Results are read back as `<unit>.<kpi>` or `<stream>.{F,T,P,vf}`.

## 8.1 `type sweep;` — trend over one parameter

```
type        sweep;

parameter
{
    target    units[0].operation.T;        // any scalar dict path
    range     ( 360.0  385.0 );            // (min max), raw SI of the target
    nPoints   26;
}

responses
(
    flash01.V_over_F       // <unit>.<kpi>
    flash01.Q_kW
);

report { format csv;  file sweep_flashT.csv; }
```

One row per point; a point that fails to converge is reported and written as `nan` — the sweep continues. Canonical case: `tutorials/steady/flash/flash06_sweep_T` (the $V/F$ S-curve across the bubble–dew window). `type gridSweep;` is the 2-D version — a `parameters ( {...} {...} )` list of two targets, producing the long-form CSV a contour plot reads (`flash07_gridsweep_TP`: the flash envelope over $(T, P)$; non-converged cells stay honest gaps, never interpolated).

A sweep may declare CONSTRAINTS — the same block the SQP optimizer uses, same grammar, same refusals:

```
constraints
(
    { kpi column01.x_D_LK;   atLeast 0.985; }
    { kpi column01.V_strip;  atMost  0.065;  }
);
```

The sweep becomes a FEASIBILITY MAP: every row gains, per constraint, the value, the bound, the signed normalised residual and a `satisfied` flag, plus a final `feasible` verdict — and no point is ever filtered. The infeasible rows are the lesson: where the spec fails and where the budget binds, with the feasible window read directly off the CSV (`sensitivity02_feasibility_map`: the reflux window between the purity spec and the boilup budget).

Two objectives that pull against each other build a PARETO FRONT by epsilon-constraint — `type paretoSweep;` — with no multi-objective solver: the second objective becomes a swept bound and each front point is one full, auditable SQP run,

```
type paretoSweep;   method sqp;
variables ( { path units[0].operation.refluxRatio;
              min 1.5; max 6.0; initial 3.0; } );
objective { kind kpi;  path column01.V_strip;  sense minimise; }
tradeoff  { kpi column01.x_D_LK;  bound atLeast;
            range ( 0.96  0.994 );  nPoints 5; }
report    { file pareto.csv; }
```

The CSV records, per point, the bound, the achieved objective and trade-off values, the variables at the optimum and the solver's own converged/feasible verdicts — a failed point stays on the table, marked. Where the bound is slack the point is the unconstrained optimum; where it binds, the SQP's Lagrange multiplier is the marginal price of the second objective (`pareto01_purity_energy`: the purity–energy front of the benzene/toluene column, $R^*$ rising $1.6 \to 3.8$ as the purity bound tightens).

An INTEGER decision — how many stages? — is declared, never relaxed: `integer true;` on a variable makes the optimizer enumerate every value in `min..max`, each one a NEW run (a changed `nStages` rebuilds the column; a late parameter mutation on a sized object would lie), solving the inner continuous problem at each. The FULL table is emitted — failures included, best marked (`optim06_integer_stages`: the classic $N$-vs-$R$ trade, boilup falling $0.056 \to 0.035$ kmol/s from 12 to 14 stages at the same purity spec; 9 to 11 stages cannot reach that spec inside the declared reflux range $R \leq 6$, and the SQP says so — a local infeasibility, announced, never an optimum outside the box — while $N = 8$ is refused aloud because the feed cannot sit on the bottom stage).

> **Try it now.** `runCase tutorials/steady/optimisation/sensitivity01_column_reflux` produces `sweep_results.csv`. Plot $V_{\text{strip}}$ against $R$ with any tool; you'll see the classic energy asymptote as the reflux ratio grows past the minimum.

## 8.2 `type designSpec;` — meet N specs with N knobs

The DesignSpec is the visible version of "back-compute the input from the target". Each knob is a case-level `$variable`, declared in `flowsheetDict` and referenced by the unit — the driver iterates the variable, a square Newton meets the targets:

```
// system/flowsheetDict
variables { A 100 m2; }                       // initial guess; DesignSpec iterates it
units ( { name effect1; type evaporator;  ...
          operation { area $A; ... } }
        { name effect2; type evaporator;  ...
          operation { area $A; ... } } );     // the SAME $A: equal areas by construction
```

```
// system/outerDict
type         designSpec;

manipulate
(
    { variable A;   initial 100.0 m2;   min 20.0 m2;   max 500.0 m2; }
    { variable streams.utilitySteam_200kPa.F;
                  initial 400 kmol/h; min 100 kmol/h; max 1500 kmol/h; }
);

targets                         // SAME COUNT as knobs (square Newton)
(
    { path  L3.F_mass;   value 4500.0 kg/h;   tol 1.0 kg/h; }   // value form
    { path  effect3.P;   value 15 kPa;        tol 50 Pa;    }
    // equality form: { lhs effect1.area;  rhs effect2.area;  tol 0.001; }
);

options { maxIter 40;  tolF 1.0;  fdStep 1.0e-4; }
report  { file designspec_history.csv; }
```

All knob entries carry units, converted on read; a `manipulate` variable may also be a stream field (as above — the steam flow the plant must supply). After convergence the simulator is replayed once at the design point so the case ends with full converged output. Canonical cases: `compressor02_designspec_pout` ($1 \times 1$), `designSpec01_triple_equal_areas` ($2 \times 2$: one area + one steam flow meet a capacity and a vacuum spec at once).

## 8.3 `type optimization;` — search for the best value

```
type    optimization;
method  nelderMead;                        // or sqp (adds nonlinear constraints)

variables
(
    { path units[0].operation.refluxRatio;  min 3.0;  max 5.0;  initial 4.0; }
    { path units[0].operation.feedStage;    min 6;    max 12;   initial 8;   }
);

objective
{
    kind     kpi;             // kpi | stream | cost | costTotal
    path     column01.V_strip;
    sense    minimise;        // minimise (default) | maximise
}

options { maxIter 80;  tolX 5e-3;  tolF 1e-4; }
report  { file optimization_history.csv; }
```

`nelderMead` is the derivative-free simplex with hard box bounds — an evaluation that fails to converge gets an announced infinite penalty and the simplex contracts away from it. The `cost` / `costTotal` objective kinds run the `postDict` sizing + costing chain on every evaluation (§9) — see `optim01_column_reflux` and `optim02_process_cost`.

`method sqp;` switches to a hand-rolled line-search Sequential Quadratic Programming (damped BFGS on the Lagrangian, L1 merit, active-set QP) and accepts a `constraints (...)` list with unit-aware `atLeast` / `atMost` / `equals` bounds on any KPI. The trace is glass-box: per-iteration KKT residuals, the active set, the Lagrange multipliers (shadow prices), and a closing five-line KKT certificate. Worked example: `optim04_membrane_recovery_scaling` — brackish-RO recovery maximised subject to wall-scaling constraints, with the calcite constraint active at the optimum and its multiplier printed (the shadow price of scaling head-room). Asking Nelder–Mead for constraints is a loud error — add a penalty term or switch method.

**Parameter estimation.** Regression of model parameters against experimental data lives in `choupoProps` as the `fitParameters` operation (§13); the old `fitBinaryPair` outer driver was retired, and asking for it points you to the replacement.

# 9 Equipment sizing and costing

*What you'll learn.* How a single `postDict` turns a converged flowsheet into a vessel list, wall thicknesses, weights, and bare-module costs.

Drop a `system/postDict` and the simulator result is post-processed after the pass:

```
sizing
{
    units
    (
        {
            unitName    reactor;
            type        stirredTank;
            material    SS316;
            designRules
            {
                L_over_D        2.5;
                pressureDesign  3.0;
                corrosionAllow  0.003;        // m
                jointEfficiency 1.0;
            }
        }
        {
            unitName    heater;
            type        shellTubeHX;
            material    SS304;
            designRules { U 600.0;  LMTD 10.0;  pressureDesign 2.0; }
        }
    );
}

costing
{
    method      Turton;
    year        2026;
    cepci       820;
    cepci2001   397;
    usdToEur    0.92;
}
```

`type` selects an `EquipmentSize` model (`stirredTank`, `shellTubeHX`, `vessel`, `distillationColumn`, and the `design {}` inversions such as the spray dryer's, §5.9.2); materials come from `data/standards/assets/` (carbon steel, SS304, SS316, aluminium — each with density, Turton material factor, yield stress, ratings). The `Turton` costing model (Turton App. A coefficients on Guthrie's bare-module form; the former name `Guthrie` is refused, naming `Turton`) uses Turton-style purchased-cost correlations, the ASME wall-thickness pressure factor for vessels, then $C_{BM} = C_p(B_1 + B_2 F_M F_P)$ and $C_{TM} = 1.18\, C_{BM}$, printing a per-unit table:

**One unit may be several pieces of equipment.** A `distillationColumn` is one mathematical operation and five physical objects — a shell, a tray stack, a condenser, a reboiler and a reflux drum — and it is sized and costed as all five, one specification sheet each under `design/<unit>/<item>`. Its diameter is the answer the `hydraulics {}` block already computed; $U$, the approach temperature and the drum residence time are yours to declare, and an item whose rules you did not declare is named and NOT built rather than sized on a default nobody chose. **The tray stack is costed by the tray**: one sieve tray priced from the tower cross-section (Turton's set, as the authors' CAPCOST program carries it), times the tray count, times a bare-module factor for the trays' material class and a quantity factor for fewer than 20 trays. Declare the class as `trayMaterial carbonSteel;` (or `stainlessSteel`, `nickelAlloy`) in the column's `designRules`; without it the trays refuse by name and the totals line reads `TOTALS (EUR) - INCOMPLETE`. See `tutorials/steady/distillation/column09_tray_hydraulics`.

**Every sized item has a plant tag, and the run writes the equipment list.** The tag is the name the item answers to in the sheet, the cost table and the list: Turton's `XX-YZZ A/B` form, generated by one rule. `XX` are the kind letters (`P` pump, `C` compressor, `E` exchanger, `V` vessel, `T` tower, `R` reactor, `TK` tank, ...; the table is Choupo's

own convention, listed in `docs/ai/packs/design-cost.md`, not a standard), `Y` is the number of the sector in the order the flowsheet declares them (1 for a flat case, 0 for the plant's own level), `ZZ` a running number within the sector and the letters, in declaration order, and the suffix tells identical parallel items apart (the six trains of a desalination plant are `P-101A` to `P-101F`; two pumps standing for one item are `P-103A/B`). Declare `tag P-201;` on a `sizing` entry to choose it yourself (the run says so once); a unit that realises several items names each with `itemTags { shell T-101; condenser E-101; }`; two items with the same tag are refused. The sheet carries a `tag` line, `sizing.csv` and `costs.csv` a `tag` column, and `reports/equipment/equipmentList.csv` is the equipment list: one row per item with its size, dimensions, design pressure, material and cost. The app prints the same rows from the Reports tab (*Open equipment list*, A3 landscape, "Save as PDF" in the print dialogue).

```
========================  Equipment Costing  ========================
  Method:  Turton     Year:  2026.0    CEPCI: 820.0

  unit      equipment       F_M   F_P    C_purchased   C_bare_mod    C_total_mod
  heater    shellTubeHX     2.34  1.09     365 249      2 146 753    2 533 169
  reactor   stirredTank     3.05  1.00       2 055         16 033       18 918
  TOTALS (EUR)                             367 304      2 162 786    2 552 087
```

Cost indices, currency rates and prices are *case data* — dated and cited in the dict, never invented by the engine. Run `tutorials/steady/flowsheets/process02_with_design` for the full chain, and `optim02_process_cost` for an optimiser driving it.

# 10 Heat integration: pinch targets and candidate matches

> *What you'll learn.* How to ask a converged flowsheet the question that comes before any exchanger exists — how much heating and cooling the plant would need if its heat recovery were perfect — and how to read the two reports that answer it.

Add one block to `system/postDict`:

```
pinchPass
{
    dTmin        10 K;      // process-to-process approach (declared, not defaulted)
    latentWidth  1 K;       // width given to a phase-change slice
}
```

That is the whole interface. The pass reads the converged result, builds the stream population from the units that carry a duty, and reports:

| | |
|---|---|
| **KPIs** | |
| `pinch.Q_H_min_kW`, `pinch.Q_C_min_kW` | the energy targets |
| `pinch.T_pinch_K` | the pinch, on the shifted axis |
| `pinch.T_pinch_hot_K` / `_cold_K` | and on the real one |
| `pinch.Q_heat_current_kW` / `Q_cool_current_kW` | what you consume today |
| `pinch.candidates_admissible` / `_total` | the match table's tally |
| `pinch.violation_heat_below_pinch_kW` | heating on the wrong side |
| `pinch.violation_cool_above_pinch_kW` | cooling on the wrong side |
| **Files** | |
| `reports/pinch/compositeCurves.csv` | hot / cold curves, shifted and not |
| `reports/pinch/candidateMatches.csv` | every hot×cold pair, per region |

At `verbosity 3` the Linnhoff–Flower problem table is printed *cascade row by cascade row*, which is the point: the targets are checkable by hand from what the run prints. The theory, the arithmetic and a fully hand-worked example are in the Theory Guide's section *Pinch analysis: the target before the network*.

**In the browser.** The case's *Pinch* tab opens on the four targets the engine published — the hot and cold utility ($Q_{H,\min}$, $Q_{C,\min}$), the pinch temperature and $\Delta T_{\min}$ — with the engine's own classification words under them, and then the composite curves, sized to fit the window; the explanation of how to read the curves is behind *How to read this*. A partial analysis keeps its red banner above all of this.

## 10.1 Reading the answer

Three numbers matter first. `Q_H_min_kW` is the least heating any network could get away with; `Q_heat_current_kW` is what your flowsheet actually spends. The gap between them is the prize. The pinch temperature tells you where the plant divides: above it the process is a net heat sink, below it a net heat source, and a kilowatt carried across that line costs you twice — once in steam, once in cooling water.

The violation lines name the units doing exactly that. They also add up:

$$\sum(\text{heating below the pinch}) + \sum(\text{cooling above}) \;=\; Q_{H,\text{current}} - Q_{H,\min},$$

so if the two sides of that identity disagree in your case, something in the stream population is not what you think it is.

## 10.2 Two declarations that look like one

> **Common pitfall.** `pinchPass`'s `dTmin` is the **process-to-process** approach. The utility report has its own `dTmin`, which is the **duty-to-utility** approach. They default to the same 10 K and they are not the same physical quantity — one governs whether two process streams may exchange, the other whether a utility may serve a duty. Choupo keeps them as two declarations on purpose; setting one and assuming the other followed is how the two come to disagree silently.

## 10.3 What it will not do

- **It never rewrites your flowsheet.** The candidate table says what the physics admits; which candidates become exchangers is yours to decide, with plot plan, control and startup in view.
- **It never says "optimal".** Every feasible row is a *thermodynamically admissible candidate* — and that wording is enforced by a regression gate, not just by good intentions.
- **It targets energy, not area or capital.** The area-target and capital-versus-energy phase is not implemented; nothing in the output should be read as a cost.
- **It takes each unit's net duty.** A column enters as reboiler minus condenser unless you model the two as separate units — which, for heat integration, you usually should.

**Runnable case.** `tutorials/steady/heat/pinch01_four_stream_classic` — four streams whose $CP$ values are exact, so every number the pass prints can be checked on paper. The hand-worked cascade and candidate table are in the case's own `flowsheetDict` header.

# 11 Batch simulation: choupoBatch

> *What you'll learn.* How the time-dependent binary integrates closed vessels — batchReactor, batchStill (plain Rayleigh or a staged rectifier), batchCrystalliser — and how a recipe block scripts a campaign of transfers and setpoint changes.

A batch case is the same case shape with time controls in controlDict:

```
application    choupoBatch;
startTime      0;          // s
endTime        600;        // s
deltaT         1.0;        // s   (RK4 step)
writeInterval  30;         // s   (trajectory snapshot interval)
```

Each vessel carries an initial {} charge instead of an inlet stream; the run writes trajectory.csv (one column per state variable, one row per writeInterval).

## 11.1 batchReactor

```
{ name reactor;  type batchReactor;
  initial
  {
      T 350 K;  P 1.013 bar;  V 0.001;  totalMoles 0.0185;
      molarComposition { ethanol 0.5;  aceticAcid 0.5; }
  }
  operation { mode isothermal;  T_setpoint 350 K; }   // or: mode adiabatic
  reaction  esterification; }                          // or: reactions ( A_to_B B_to_C );
```

mode isothermal holds $T$; adiabatic integrates the energy balance alongside the species — batch02_adiabatic shows a cold start with the nearly thermoneutral liquid esterification warming only 320 to 322 K in 600 s (the thermal runaway this case was written for needs a genuinely exothermic reaction; a replacement is planned). The kinetics vocabulary is shared with the steady reactors: Arrhenius, the gas-kinetics forms (modifiedArrhenius, thirdBody, falloff — real combustion mechanisms run here, see ignition02_h2air_slack), and LHHW — the *same* RateLaw class (§5.3.5), so a batch vessel and a CSTR can never disagree about what an adsorption denominator means.

**Stiff chemistry: adaptive time-stepping.** The default is the fixed-step RK4 loop. Add timeStepping adaptive; to controlDict and the stiff, error-controlled Rosenbrock23 integrator takes over — the step starts low (deltaT0), grows through quiet stretches, and shrinks through a sharp transient, with the step history printed at verbosity 3. Trajectory rows still land on the clean writeInterval grid. If the integrator gives up inside an interval — the step driven below its floor, or the per-interval guard timeSteppingControl { maxSteps N; } exhausted — the run *stops* with a refusal naming the interval, the time reached, the cause and the units: the clock is not advanced over a state that stopped short, and no event, routing or time directory follows it. Compare batch06_adaptive_runaway with its fixed-step twin, and ignition01_h2o2 (real Ó Conaire H/O ignition, a stiffness ratio $\sim 10^7$) with ignition01_h2o2_rk4, which blows up to NaN at the same deltaT — the stiffness lesson on real chemistry.

## 11.2 batchStill — Rayleigh and the batch rectifier

The default model rayleigh; is the classical open still: constant boil-off F_vap, the bubble point re-solved each step, the pot trajectory following the Rayleigh integral (still01_benzene_toluene reproduces the closed form to ∼2 %; still02_ethanol_water_azeo shows the pot moving *away* from the azeotrope — a Rayleigh still cannot cross it from below). dischargeTo receiver; routes the condensed vapour into a passive batchAccumulator, so pot + receiver conserve the charge at all times. The first time that edge hands material over, the log says so — * t=...s continuous discharge begins: 'still' -> 'receiver' (the unit's declared 'dischargeTo receiver;' - accumulates every step) — because matter appearing in a receiver that no recipe event named used to arrive, in a first-week student's words, "from nowhere".

model rectifier; adds the classical batch rectification: nStages ideal stages above the pot and a total condenser, with the reflux policy a first-class choice:

```
{ name still;  type batchStill;  model rectifier;
  dischargeTo receiver;
  initial   { T 365 K;  P 1.013 bar;  totalMoles 1e-3;
              molarComposition { benzene 0.5;  toluene 0.5; } }
  operation { P 1.013 bar;  F_vap 1.5e-6;      // boilup V, kmol/s
              nStages 3;
              refluxPolicy constantReflux;  refluxRatio 3.0; } }
```

Under `constantReflux`, `F_vap` is the internal boilup $V$; the product is $D = V/(R+1)$ and the distillate composition $x_D(t)$ is solved each instant from the quasi-steady stage cascade — it starts rich and drifts down, the constant-$R$ purity trade (`still04_rectifier_benzene_toluene`; with `nStages 0` and $R = 0$ it reproduces plain Rayleigh to the last digit).

`refluxPolicy constantComposition;` holds a light-key purity instead: `lightKey benzene; x_D_target 0.93; refluxMax 8; onRefluxLimit stopDistillation;` — $R(t)$ is solved each step by a bracketed search, climbing as the pot depletes; when the ceiling can no longer reach the target the run *announces* the limit and executes the declared action (distillation stops, the event lands in the trajectory and the KPIs). Distinct refusals exist for a target below the $R = 0$ floor, a target unreachable at `refluxMax`, and an azeotrope barrier — computed from the VLE, not guessed (`still05_rectifier_constant_xD`).

## 11.3 batchCrystalliser

A supersaturated charge desupersaturates in time: RK4 on the packed moments $(\mu_0, \mu_1, \mu_2, \mu_3, n_{\text{solute}})$, against the same kinetics library the steady MSMPR uses (`constant/crystallisation`), so the crystal-size distribution grows through the batch (`batch05_crystalliser`).

## 11.4 batchDryer

A tray of wet solid losing its moisture into air of *declared, constant* condition — the air is an environment, not a ledgered stream. The state is the dry-basis moisture $X$; above the critical moisture the wetted surface sits at the air's wet-bulb temperature and the flux is gas-film controlled, below it the flux falls linearly in the free moisture (announced at run time as a modelling choice). The equilibrium moisture comes from the GAB isotherm on the solid's `sorption {}` record — a solid without one is refused by name — and the declared `criticalMoisture` must lie above it. The latent heat is the air's, from outside the campaign, so it is published as `latentDuty_kW` while the energy ledger refuses to claim a verdict (`dryer01_sucrose_tray`; theory: Theory Guide, drying).

## 11.5 batchDiafilter

A stirred retentate vessel behind a membrane: the same local flux law, membrane record, film coefficient and osmotic model the steady `spiralWoundModule` uses, asked once per instant instead of once per channel node. `mode concentration;` lets the vessel shrink; `mode constantVolume;` makes solvent up at the permeate rate so the solutes wash out (the make-up enters the campaign ledger under its own kind word, `externalIntake`). The initial holdup is the `holdup {}` block of `0/internalStates/<unit>`; an inline `initial {}` is refused, and so is a missing `k_film` — the unit invents no correlation for a stirred geometry it was not told. What it publishes is the lesson: the observed rejection at every instant, and in constant-volume mode `washoutActual` beside `washoutIdeal`, the ideal evaluated from this run's own initial rejection so the gap with the hand derivation $c/c_0 = e^{-(1-R)N}$ cannot have been arranged (`diafilter01_nf_desalting`: 0.5015 against 0.4970 after 5.44 diavolumes). An optional `fouling { law cake; k ...; reason "..."; }` block adds a Hermia blocking resistance to the permeance; the `reason` is mandatory because a blocking law is a claim about a mechanism, and `standard`/`complete` refuse by name (`diafilter02_fouling_decline`). The pump work is not ledgered: the campaign energy balance names it as a gap rather than closing with a term quietly zero. Theory: Theory Guide, membrane chapter, "Batch diafiltration".

## 11.6 batchElectrodialysis

A recirculating batch electrodialysis rig: two well-mixed tanks, the diluate and the concentrate, pumped through the same stack the steady `electrodialysisStack` runs. It asks the same limiting-current assembly — Geraldes & Afonso (2010), Eqs. A13/12/13/15 — once per instant instead of once per pass, and that is the whole point of it. The limiting current is a PREDICTION from the diluate composition, so in a batch run it FALLS as the tank depletes; under a constant current $i$ does not move, and the two must cross. In `edbatch01_constant_current` $i_{lim}$ falls from 643.04 to 88.26 A/m$^2$ and the crossing happens at $t = 1593$ s, announced at the instant it happens and replayed in the end-of-run caveat block.

The unit holds BOTH tanks — `state()` is the diluate, because it is the product, and the concentrate is internal state it publishes in full — so the closed rig's campaign material balance is exact by construction. Both come from the `holdup {}` block of `0/internalStates/<unit>`, the concentrate as a `concentrate {}` sub-block; a `T` or `P` inside it is refused, because the rig is isothermal and has one temperature. A `stack` record is required (there is no

inline-geometry form), and so is `diluateFlow`: a steady stack reads its crossflow off an inlet stream, a batch rig has no stream, so the pump setting is declared once and nowhere else. Give `current` OR `voltage`, exactly one — they are two different experiments.

What it publishes is the lesson. The hand calculation is Faraday's law at the INITIAL current, $n(t) = n(0) - \xi I N t/(zF)$, a straight line emptying the tank at a finite time; the unit publishes it as `demin_ideal`, evaluated from this run's own $I(0)$, own inventory and own declared $\xi$ — computed, never declared, so the gap with `demin_actual` cannot have been arranged — and it NAMES the reason they part. At constant current that reason is the crossing (86.27 % against 91.41 %); at constant voltage it is the current itself decaying as the diluate loses conductivity and the Nernst back-EMF grows (`edbatch02_constant_voltage`: $I$ from 4.365 to 2.018 A, 61.59 % against 85.51 %, and $i/i_{lim}$ never reaching 1 — which is why a bench rig run at fixed voltage is self-limiting).

`overLimiting { model saltFluxPlateau; }` is opt-in and introduces no parameter: at $i = i_{lim}$ the film delivers the counter-ion as fast as it can, so the excess current is carried by water-splitting products and $\xi_{eff} = \xi \min(1, i_{lim}/i)$. The DEFAULT is `none` — the current efficiency stays put, the run warns that it is then extrapolating a model outside its validity, and the current is never clamped either way.

A diluate with several cations or anions runs: each membrane's current is shared between its counter-ions by $|z_i| D_i c_i$ (Theory Guide, the electrodialysis chapter; witness `edbatch03_multiionic_split`). Not modelled, and each refused or announced rather than assumed: any selectivity the membranes add between counter-ions beyond that share; back-diffusion from the concentrate; water transport; co-ion leakage; any temperature transient (the Joule heat is removed by no modelled duty, so the campaign energy balance reports UNAVAILABLE and says why); the pumps; the electrode reactions, lumped into `E_electrodes`. Theory: Theory Guide, the electrodialysis chapter.

## 11.7 Recipes — scripting a campaign

A `recipe (...)` list in `flowsheetDict` schedules events by time or by condition:

```
recipe
(
    { time 400;  action transfer;      from reactor;  to still;  fraction 1.0; }
    { time 200;  action setParameter;  unit reactor;  key T_setpoint;  value 350.0; }
    { when { unit reactor;  quantity x_ethanol;  op lt;  value 0.30; }
      action transfer;  from reactor;  to still;  fraction 0.5; }
);
```

Actions: `transfer` (partial via `fraction`; the receiving vessel may start empty), `setParameter`, and condition-triggered `when` events (`quantity` is `T`, `total`, `n_<comp>` or `x_<comp>`; `op` is `gt`/`ge`/`lt`/`le`). Every fired action lands in the result's timeline — the machine-readable campaign sequence — and, underneath it, the MATERIAL LEDGER: one structured record per material edge (interval, vessels, per-component amount, transported enthalpy integrated package-by-package). The run closes a campaign MASS BALANCE over all-phase vessel inventories ($m_0 = m_{final} + m_{external}$; per-ELEMENT for reacting campaigns) and reports it under the `campaign` KPIs; a genuine leak marks the run non-converged. A still without a `dischargeTo` receiver is recorded as an unrouted external outlet, never a silent loss. `recipe01_react_then_distill` runs the classic react-then-still sequence in one case.

The material ledger has an ENERGY twin: per vessel, one record per segment of constant physics (a `setParameter` or a charge closes the segment), with the isothermal reactor's jacket duty priced exactly from committed mole numbers ($Q = \Delta H$ of the closed constant-$P$ segment; a declared `dH_rxn` prices lumped species via reaction extents, announced). A recipe `transfer` conserves enthalpy by construction: the mix temperature solves $H$-equality on the elements datum (heat-capacity differences matter — hot ethanol into cold water lands ∼4 K above the molar average), falling back to the molar average only when a species cannot be priced, announced. Stills carry reboiler and condenser duty records (phase-enthalpy differences of the actual packages at their own temperatures; the rectifier's condenser handles the whole boilup $V$ at the top-stage $T$). The campaign ENERGY BALANCE only claims a verdict when every piece is ledgered and priceable — otherwise the run prints `energy balance UNAVAILABLE` naming each missing piece (a temperature jump, a fallen-back charge, a species without formation data). KPIs land under `campaign` as `energy_*`; see `batch08_isothermal_duty`, `recipe04_charge_enthalpy` and `recipe01_react_then_distill` (the react-then-distil showcase closes end to end at $10^{-16}$). Valid duties are then allocated to catalogue UTILITIES by temperature level (the still's reboiler draws LP steam by its latent heat; a 293 K crystalliser needs chilled water, not cooling water), with campaign totals under `utility_*` — energy, mass and cost per utility; a duty no utility can serve is listed, never dropped.

## 11.8 Switching a feed mid-campaign: the datum amendment

A batch `recipe` can re-declare an open-boundary unit's feed while the campaign is running — the classic case being an adsorber that loads on a $CO_2$/He mixture and is then purged with pure helium:

```
recipe
(
    { time 3600;  action setParameter;  unit bed;
      key feed.CO2;  value 0.0; }        // the NEW feed mole fraction
);
```

That looks like an ordinary parameter change and it is not, because of what an open boundary means: the unit's *declared feed commitment* is campaign matter from $t = 0$. Re-declare it and the commitment changes *discontinuously* — matter enters or leaves the campaign's datum without ever flowing through a piece of equipment.

**Key idea.** The jump is **ledgered, never absorbed.** The unit prices each amendment as a package at the commitment's own ($T$, $P$, phase) and the driver records it against the external boundary as a `feedAmendment`. The campaign's mass, element and energy balances then read a *record* where they would otherwise see a leak — and a balance that closes because the discrepancy was quietly written off is worse than one that fails.

**Common pitfall.** Only the *composition* of a declared feed may be amended this way. Swinging its temperature, velocity or pressure mid-campaign is refused by name — those change the physics of the boundary, not just the inventory crossing it, and the amendment machinery has nothing honest to say about them. See `batch19_feed_switch_purge`, whose breakthrough KPIs stay frozen across the switch while the desorption duty appears as the same exact state difference every other duty uses.

## 11.9 When the utility is needed, not just how much

A campaign total sizes nobody's boiler. Two batches that consume the same 607 kJ of low-pressure steam need completely different steam headers if one draws it evenly over an hour and the other wants all of it during a four-minute bring-to-boil. So beside the totals, `choupoBatch` writes the **demand staircase**:

```
reports/utilities/utilityDemand.csv
tStart_s,tEnd_s,unit,eventType,utility,deltaEnergy_kJ,averageRate_kW
0,1,reactor,reaction,coolingWater,-0.849382680299,-0.849382680299
...
400,401,still,reboiler,steamLP,16.9571...,16.9571...
```

One row per accepted driver step per demanding unit. `deltaEnergy_kJ` is the energy in that window; `averageRate_kW` is explicitly a *step mean*, not an instantaneous rate — the column is named for what it is so nobody differentiates it twice.

From the staircase come two KPIs per utility that the totals cannot give:

| | |
|---|---|
| `utility_<name>_peak_kW` | the largest step-mean rate |
| `utility_<name>_t_peak_s` | when it happened |

**Worked example 11.1.** The number the total hides`recipe01_react_then_distill` draws 607.6 kJ of LP steam over 800 s — a mean of **0.76 kW**. Its peak is **16.96 kW**, at $t = 400$ s, when the still is brought to the boil. A header sized on the mean is short by a factor of twenty-two.

**Key idea. The ledger stays the authority; the profile is a view of it.** Each record's window sums are checked against the ledger's exact energy to $10^{-6}$ relative, and a profile that fails is *refused* — the record still stands and still appears in the totals. A profile that disagrees with the ledger is a bug in the profile, never a correction to the ledger, and the two may not silently drift apart. The `.meta` beside the CSV counts `profiledRows`, `unprofiledRecords` and `refusedProfiles`, so a partial profile announces itself instead of looking complete.

**Common pitfall. Impulses have no rate.** An instantaneous energy intervention — a `setParameter` temperature jump — is a genuine energy but not a power: dividing it by a zero-width window would invent an arbitrary number. Impulses are therefore an explicit class, excluded from the peaks and warned about, so a peak is always a rate something actually sustained.

Records that carry no time profile at all (a duty with no service window) are *listed* in the `.meta` rather than dropped, on the same principle as the unserved duties above: a report that quietly omits what it could not do reads as a report that found nothing to omit.

# 12 Dynamic simulation and control: choupoCtrl

*What you'll learn.* How the control binary integrates a continuously fed plant while controllers write manipulated variables — and why the controller sample time and the integrator step are two different things.

choupoCtrl integrates open vessels with continuous feeds — $\mathrm{d}Y/\mathrm{d}t = f(Y, u, t)$ — with a controllers layer writing the manipulated variables $u$ at each sample. The SAME integration with NO control loop is its own problem class, choupoSemiContinuous (ruled 2026-09-20): a start-up, a disturbance watched open-loop, fed-batch, feed & bleed. Both binaries run one driver (src/dynamicDriver/); choupoSemiContinuous refuses a controllers block by name, and choupoCtrl announces when a case declares none. Both refuse a recipe block by name: a recipe (transfers, setParameter, conditions, cycles) is executed by choupoBatch only, and a timed change in a continuous process is a Schedule controller under choupoCtrl. Both also refuse, before integrating, a closed loop whose circulating flow nothing sets: a loop of constant-volume vessels and quasi-steady units with no feed entering it and material leaving it, in which every unit passes the flow it receives, so the flow would shrink at every accepted step and the answer would depend on the time step. A loop fed from outside through a quasi-steady mixer (the flow is then the balance of the feed and the split fractions, unsteady03_nf_feed_and_bleed_startup), or carrying a vessel with an outflow law, is well posed. Everything in this section about the time loop, the ledger and the instants applies to both. In controlDict, deltaT is the controller *sample time*; with timeStepping adaptive; the plant is sub-stepped between samples by the stiff integrator while the manipulated variable is held — two time steps, both correct (ctrl03_adaptive_disturbance).

## 12.1 dynamicCSTR

```
{ name reactor;  type dynamicCSTR;
  initial { T 320 K;  P 1.013 bar;  V 0.001;  totalMoles 0.0185;
            molarComposition { compA 1.0; } }
  feed    { F 5e-5 kmol/s;  T 320 K;  composition { compA 1.0; } }
  operation { reactions ( a_to_b );  jacketUA 30 W/K; } }
```

Constant-volume continuous CSTR with an optional jacket ($UA\,(T_j - T)$); RK4 on the packed $(n_i, T)$. Its measured (CV) and manipulated (MV) variables are string-keyed so controllers bind by name. Kinetics: Arrhenius or LHHW (the shared rate law — ctrl07_lhhw_inhibition closes a temperature loop on a reaction that poisons itself, the exotherm fading as the product covers the catalyst). Add start steadyState; inside initial and the engine relaxes the holdup ODE to its fixed point at the declared feed and prints the seeded state — a clean start at the operating point.

## 12.2 Controllers

```
controllers
(
    {
        name  TC1;
        type  PID;
        measurement { unit reactor;  cv T_reactor; }
        actuator    { unit reactor;  mv T_jacket; }
        setpoint    350 K;
        Kp  4.0;  Ki  0.04;  Kd  0.0;
        bias  320;  uLow  280;  uHigh  420;
    }
    {
        name  FeedDist;
        type  Signal;                                  // open-loop forcing
        actuator { unit reactor;  mv T_in; }
        signal   { type sinusoidal;  mean 320 K;  amplitude 15 K;  period 600 s; }
    }
);
```

Three controller types: PID (clamped anti-windup, derivative-on-PV), Schedule (open-loop piecewise-constant steps — the disturbance injector of ctrl02_disturbance_rejection), and Signal — the full forcing-function vocabulary (step, staircase, ramp, pulse, sine — alias sinusoidal, the spelling the witness cases use — prbs). Inject a sinusoid on an inlet and watch the loop's forced response, attenuated and phase-lagged; sweep the period to build a Bode plot one point at a time (ctrl06_sine_disturbance). For identification experiments, type prbs; generates

the classic broadband binary sequence from a declared-seed maximal-length LFSR — deterministic and exactly repeatable, with the period verified at load and the leading bits printed (ctrl08_prbs_ident): signal { type prbs; mean 320 K; amplitude 10 K; bitPeriod 120; registers 4; seed 1; }.

Disturbances can target the unit's INLET FACE by field name — actuator { unit reactor; inletField T; } (or F, moleFraction.<c>, componentMolarFlow.<c>) — the only legal disturbance surface. The inlet's authoritative state is the per-component molar-flow vector: componentMolarFlow.<c> writes one component's flow and re-derives $F$ and $z$ (the disturbance never hides from the other components), while moleFraction.<c> holds the total flow and renormalises the others proportionally — two explicit semantics, each announced at start-up, both validated hard (ctrl09_stream_disturbance pins the derived pair to hand arithmetic). The trajectory carries F_in and z_in_* as first-class columns. The trajectory CSV carries every CV, MV and setpoint — plot it and read the tuning off the page.

## 12.3 Residence-time distribution by pulse tracer: rtd

A tracer experiment is declared in controlDict, beside the time controls, and driven by an ordinary Signal controller on the inlet face:

```
rtd
{
    unit    reactor;
    tracer  compB;
}
```

The engine integrates the *outlet* molar flow of tracer leaving unit on the same accepted-step trapezoid as the balance ledger, prints [rtd] response moments: area ...kmol, tbar ...s, sigma2 ...s^2 plus the spread $\sigma^2/\bar{t}^2$, and writes the $E(t)$ curve to reports/rtd/E.csv (t_s, n_tracer_kmol_s, E_per_s). KPIs under rtd: area_kmol, tbar_s, sigma2_s2, variance_ratio, truncation_final_over_peak. The engine *measures*; it never deconvolves — the $\tau$ arithmetic belongs to the case. It refuses a unit that is not a dynamic unit, a tracer that is not a declared component, and a run in which no tracer ever left the outlet (ctrl18_rtd_pulse_cstr).

## 12.4 Frequency response and the Bode table: frequencyResponse

```
frequencyResponse
{
    unit           reactor;
    tracer         compB;
    reference      TracerSine;   // the frequency is READ from the drive
    discardCycles  5;
    fitCycles      4;
}
```

reference names a Signal controller carrying a sinusoidal signal; the frequency is read from that drive, so it has one home. Declaring frequency (Hz) instead is the alternative — both, or neither, is refused. After discardCycles periods the outlet tracer flow is sampled for fitCycles periods and least-squares fitted to $a + b\sin\omega t + c\cos\omega t$; the run prints [frequencyResponse] fit: amplitude ..., phase ...deg, mean ..., residual ... and publishes frequency_Hz, out_amplitude_kmol_s, out_phase_rad, out_mean_kmol_s and fit_residual_rel (the variance one sinusoid does not explain). The amplitude *ratio* is your division by the drive's declared amplitude. A fit window that endTime does not reach is refused by name. The Bode table is an outerDict sweep over controllers[0].signal.frequency with linkedTargets ( controllers[1].signal.frequency ); so the carrier mirror moves in lockstep (ctrl20_bode_cstr).

## 12.5 A column exists only where a measurement does

trajectory.csv is headed t, then one column per unit state (<unit>.<label>), then the controllers. The column set is fixed at $t = 0$: the header is written once and every row has exactly its number of fields (a column for an item the run can carry, such as an ion a tank starts without, is present from the first row and reads 0 until the item appears). A controller with a measurement writes the triple <name>.SP, <name>.PV, <name>.MV; a controller *without* one writes <name>.MV alone. The Schedule type is the one that declares no measurement (hasPV() false); every other type inherits the default. The same rule governs the console echo, the end-of-run summary — which prints PV = (open-loop - no measurement) for a schedule — and the KPIs: SP_final and PV_final exist only with a PV, while MV_final always does, so a schedule's terminal value *is* its MV_final. That is what ctrl02_disturbance_rejection pins: FeedDist MV_final beside TC1 PV_final. Until 2026-09-03 a schedule published PV = 0.0 at every instant — an absence printed as a measurement of zero.

## 12.6 The first law in a dynamic run, and when it refuses

Every accepted step is logged into a balance ledger — mass, elements and energy — and written to `reports/balances/balanceTrajecto`. Mass and elements always close. Energy is the interesting one, because whether the run can *claim* closure depends on what the thermodynamic package can price, and the vessel decides that by **probing the enthalpy surface**, once, at start-up — never by looking at a component's name.

Three routes, and the run announces which one it took and why:

| route | the energy equation | ledger |
|---|---|---|
| **canonical** | the vessel stores $H(\mathbf{n}, T) = \sum_i n_i h_i(T)$ on the elements datum and the ODE is its *exact* derivative | CLAIMS closure |
| **mixture-H** | no per-species leg exists, but the mixture surface prices the whole holdup: total $H$ becomes a STATE and $\mathrm{d}H/\mathrm{d}t = \dot{H}_{\mathrm{in}} - \dot{H}_{\mathrm{out}} + Q$ is integrated directly; $T$ is a *readout* | CLAIMS closure |
| **Cp/convective** | no elements-datum enthalpy at all — $T$ is integrated from $\sum n_i c_{p,i}$ as it always was | **REFUSES** |

**Key idea.** The refusal is the feature. A $c_p$/convective temperature equation is *not* the derivative of any stored enthalpy, so a first-law closure computed from it would be a number with no theorem behind it. Choupo prints the balance as unavailable and names the components that blocked the datum, rather than publishing a residual that means nothing.

**Why probing, and not a list of names.** A dissolved salt *has* an elements datum — the aqueous ion reference — but its enthalpy lives at the *mixture* level, because it depends on molality. So "does a datum exist" is the wrong question; "can the per-species leg serve it" is the right one, and only the surface itself can answer. The vessel asks by trying, catches the refusal, and moves to the next route. That is why an electrolyte tank gets the mixture-H formulation instead of a fabricated per-species leg.

**Two structural gifts of the mixture-H form** , worth knowing because they look like omissions until you see why they are not: the partial-molar terms live implicitly *inside* the state, so no $\partial H/\partial n_i$ is ever needed; and reactions drop out of the energy equation entirely, because the elements datum already carries the heat of reaction inside $H$.

**Runnable case.** `ctrl11_esterification_jacket` — the canonical route, closing to $1.4 \times 10^{-7}$ relative. That residual is not error in the physics: it is second order in $\Delta T$, the trapezoid the ledger itself uses. `ctrl10_brine_concentration` — the mixture-H route on an electrolyte tank, closing to $7.9 \times 10^{-11}$.

# 13 The property workbench: choupoProps

*What you'll learn.* How to interrogate the thermodynamic foundation *before* wiring a flowsheet: single points, 1-D/2-D/ternary scans, data-consistency tests, and parameter fits — all from a `propsDict`.

A props case replaces `flowsheetDict` with a `system/propsDict` carrying `operations (...)`:

| type | What it does |
|---|---|
| `propertyPoint` | one state, properties to stdout |
| `propertyScan1D` | sweep one variable, long-form CSV ($P^{\mathrm{sat}}(T)$, $\gamma(x)$, ...) |
| `propertyScan2D` | a $(T, P)$ or composition grid ($Z$, residuals, ...) |
| `propertyScanTernary` | walk the ternary simplex at fixed $(T, P)$, classify the phase regime per node (the same VLLE flash kernel as the unit op), collect tie-lines |
| `fitParameters` | Levenberg–Marquardt regression of any dotted package parameter against data, with identifiability statistics |
| `estimateComponent` | create a component from molecular groups (Joback + corresponding-states closures), shown against reference data |
| `vleConsistency` | thermodynamic consistency tests on VLE data (Herington area + Gibbs–Duhem point test) |

Two flavours to give the taste:

```
{ name psat;  type propertyScan1D;
  vary { variable T;  from 250 K;  to 400 K;  n 51; }
  properties ( Psat_ethanol  Psat_water );
  output { file psat.csv; } }

{ name fit_nrtl;  type fitParameters;
  parameters
  (
      { path activityModel.pairs[0].a_ij;  initial -0.8;  min -15;  max 15; }
      { path activityModel.pairs[0].b_ij;  initial 246;   min -5000; max 5000; }
  );
  residual
  {
      kind  T_bubble;   P 1.01325 bar;
      data ( 0.05 361.95   0.10 359.95   0.20 358.05  ... );
  } }
```

The fit writes `fit_history.csv` and `parity.csv` and reports which parameters the data can actually identify — the honest part most fitting exercises skip. A fitted pair is written as a dated *proposal* under the case's `constant/`; promoting it into the frozen standard catalogue is a deliberate human act (the engine refuses to write under `data/standards/`).

This is the tip of a much larger workbench — component estimation from groups, model-vs-data overlays, electrolyte activity models (Pitzer, eNRTL), steam-table verification, speciation and scaling indices. The *Properties Guide* (`docs/propsGuide.pdf`) and the *Explorer Guide* cover it in depth; start with `tutorials/props/README.md` and the worked cases under `tutorials/props/`.

# 14 Cases pinned on published sources

*What you'll learn.* Which tutorials are validated against a primary published source rather than against Choupo's own previous answer — and, just as important, what part of such a benchmark is portable and what part is not.

Most tutorials carry a *golden master*: a recorded set of KPIs that the regression suite re-checks on every run. That catches a change, which is what it is for, but it is self-referential — it proves the engine still agrees with itself. A handful of cases do something harder: they are pinned, digit for digit, on numbers somebody else published.

**Key idea.** The rule for these cases is **one coherent primary source end to end, never a blend**, and the provenance of every number stated in the case itself. Two papers' conditions mixed into one case produce a benchmark that matches neither and is impossible to argue with afterwards.

**`cavett01_recycle_train` — the recycle solver.** The Cavett (1963) four-flash train on the Rosen–Pauls specification, verbatim. Two torn streams; Newton closes them in 7 iterations to $|r| = 4 \times 10^{-9}$. Its teaching value is a *negative* result: per-component Wegstein acceleration, the classic recycle accelerator, is not merely slow here — it is *defeated*, limit-cycling for 300 iterations and exiting non-zero with no `converged/` written. Propane circulates at 35 716 kmol/h against 2291 fed, and the accelerator chases a moving inventory. Swap `recycleSolver` in `system/solverDict` and watch it happen.

**Common pitfall. Stream values were never the portable part of this benchmark.** The case runs SRK ($k_{ij} = 0$); the published solutions used an advanced Peng–Robinson package and, before that, FLOWTRAN. The light ends agree to under 1% ($N_2$ 358.2 exact; $CH_4$ 2995.4 vs 2995.3) and the loop intermediates carry the model difference openly (iso-butane in P1: 153.9 here, 197.7 and 198.2 published). The case reports that component by component instead of quietly choosing the flattering comparison.

**Common pitfall. A published table is not scripture.** Rosen himself notes that the 1977 FLOWTRAN ethane row is internally inconsistent — 2883.2 in P1 where the component balance wants ∼2383.2, a transcription slip carrying 502 mol/h of imbalance in print for 28 years. Check a source's own balance before you calibrate against it.

**The Williams–Otto four.** Reactor + decanter + column + purge/recycle, with a published steady state, published PI tunings and published optimisation values — so the same plant anchors four different parts of the engine:

| | |
|---|---|
| `ctrl12_williams_otto` | the steady state, to all printed digits |
| `ctrl13_williams_otto_step` | the paper's Fig.-2 step, 3.901 → 4.446 klb/h |
| `ctrl14_williams_otto_pi` | the Fig.-4 PI tracking, on the figure's own shape |
| `ctrl16_williams_otto_optimal` | the §5.3 optimum, via `outerDict` over `choupoCtrl` |

**Key idea. The gap is stated up front and measured.** `ctrl16` reaches $J = 546.8$ against the paper's 551.8 — **99.1 %** — because Choupo shoots with $K = 5$ where the paper used orthogonal collocation. That is a different numerical method solving the same problem, and saying so is worth more than a tuned number that matches. A benchmark you can only pass is not a benchmark.

Both design records are in the repository: `docs/design/williams-otto-reference-case.md` carries the full transcription with the paper's own equation numbers, and `cavett01`'s own `controlDict` header carries its provenance and the history of its own wiring — including that the first version of that dict was reconstructed from paraphrases and said so, until the primary source arrived.

# 15 Tour of the tutorials

*What you'll learn.* Choupo ships a large corpus of runnable tutorials under `tutorials/`, in six disciplines: `steady/`, `unsteady/`, `ctrl/`, `batch/`, `props/`, `plant/`. `listCases` tabulates them all with one-line descriptions — and it is the authority on how many there are, which is why no number appears here. The selection below is the on-ramp — pick the one closest to what you want to do and edit from there.

| Tutorial | What you learn |
|---|---|
| *steady/flash, steady/thermoTest* | |
| `flash01_benzene_toluene` | First run: Raoult VLE, Rachford–Rice, Newton trace, the `0/` state files. |
| `flash02_ethanol_water` | NRTL + Wegstein outer loop. |
| `flash06_sweep_T` / `flash07_gridsweep_TP` | One knob → a curve; two knobs → the flash envelope. |
| `flash08_co2_water_package` | The Henry dilute-solution world, declared as a package manifest. |
| `flash09_n2ch4_stryjek` | The $\varphi$–$\varphi$ world: one cubic, both phases, declared $k_{ij}$. |
| `vlle03_audit_artificial` | Three-phase VLLE by Gibbs minimisation, on a constructed global minimum. |
| *steady/reactors, steady/gibbs* | |
| `cstr01_first_order` / `pfr01_first_order` | Newton on the extent; RK4 by hand vs the analytic $X = 1 - e^{-k\tau}$. |
| `cstr03` / `pfr03_series_selectivity` | Series selectivity: back-mixing eats the intermediate (53 % vs 79 %). |
| `cstr04_adiabatic` / `cstr05_multiplicity` | Non-isothermal CSTR; every steady state found is printed (one for this nearly thermoneutral esterification). |
| `cstr07_lhhw_methylAcetate` | A published LHHW law on UNIQUAC activities (§5.3.5). |
| `conversion01_hda` | Specified per-pass conversion + recycle — the honest gas-phase reactor. |
| `equil01_reforming` | Reforming + shift driven to simultaneous $K_p(T)$ equilibrium. |
| `gibbs01_water_gas_shift` / `gibbs05_adiabatic_flame` | Gibbs minimisation; the flame temperature as a DesignSpec. |
| *steady/distillation, absorption* | |
| `column01_benzene_toluene` | Wang–Henke bubble-point column. |
| `column03_azeotrope_mesh` | The simultaneous MESH through the ethanol/water azeotrope. |
| `column05_reactive_methylacetate` | Reactive distillation, paper-validated (§5.6.2). |
| `column09` / `column10` / `column11` | Tray hydraulics design; the flooded twin; Murphree trays. |
| `shortcut01_benzene_toluene` | Fenske–Underwood–Gilliland sizing. |
| `absorber01_NH3_water` / `extract01_ethanol_water_benzene` | Henry absorber; staged LL extraction. |

| Tutorial | What you learn |
|---|---|
| *steady/heat, power, rotating, hydraulics* | |
| `hx01_heater` / `heatExchanger02_geometry_U` | The duty device; $U$ computed from the bundle geometry. |
| `hxWorkflow1` / `hxWorkflow2` | Design from a duty target, then rate the designed bundle. |
| `condenser01_film_nusselt` / `reboiler_water_copper` | Duty emerging from film condensation / nucleate boiling (CHF guard). |
| `rankine02_water` / `combined02_brayton_rankine_shaft` | IF97 Rankine cycle; the shaft-split combined cycle. |
| `compressor01_air` | $W_{\text{shaft}} + \eta$; $P_{\text{out}}$ a result. |
| `pipe02_airwater_twophase` | Lockhart–Martinelli two-phase pressure drop. |
| *steady/membranes, separation, solids, drying, crystallisation* | |
| `membrane01_RO_NaCl_seawater` | The canonical seawater-RO element. |
| `membrane07_scaling_si` | Speciation × membrane: wall scaling three modules ahead of the bulk. |
| `psa01_h2_psa` | Equilibrium-theory pressure-swing adsorption. |
| `cyclone01_dust_removal` | PSD-aware cyclone. |
| `crystalliser01_sugar` / `crystalliser02_msmpr` | Cooling equilibrium yield; the MSMPR population balance. |
| `sprayDryer01_sugar` | Atomisation + droplet drying to a real particle size. |
| *steady/flowsheets, optimisation, evaporation* | |
| `process01_reactor_flash` / `process03_recycle` | First flowsheet; the tear + Newton-on-tears recycle. |
| `sensitivity01_column_reflux` | The reflux sweep to CSV. |
| `designSpec01_triple_equal_areas` | Two knobs, two specs on a triple-effect evaporator train. |
| `optim01_column_reflux` / `optim04_membrane_recovery_scaling` | Nelder–Mead; constrained SQP with shadow prices. |

| Tutorial | What you learn |
|---|---|
| *batch/, ctrl/, unsteady/, plant/* | |
| `batch01_first_order` / `batch02_adiabatic` | RK4 vs the analytic decay; adiabatic energy balance (nearly thermoneutral). |
| `still01` / `still04` / `still05` | Rayleigh; constant-$R$ rectifier; constant-$x_D$ policy at the reflux ceiling. |
| `recipe01_react_then_distill` | A scripted transfer between vessels. |
| `ctrl01_cstr_temp_control` / `ctrl02_disturbance_rejection` | PID tracking; step-disturbance rejection. |
| `ed01_nacl_desalination` | The electrodialysis stack, below and at the limiting current. |
| `plant/lithiumBrinePlant` | A multi-sector plant across four thermodynamic worlds. |

Every tutorial's header comment states what it demonstrates and, where applicable, the published number it reproduces. The *Tutorials Guide* (`docs/tutorialsGuide.pdf`) is the long-form companion, one chapter per family.

# 16 Output anatomy

*What you'll learn.* What every section of a run's log means, and why the inner iteration trace is the part you should read.

A typical steady run with `verbosity 3` prints, in order:

1. **Banner** — version + licence.
2. **Case header** — case dir, database root, the property package that was found, which optional dicts are present, and the `[overlay]`/`[estimate]` announcements for any case-local component data.
3. **State seeding** — `[state] seeded N stream(s) from 0/` and the completeness check.
4. **Topology** — the source streams and the per-unit wiring.
5. **Per-unit run** — for each unit operation:
   - the thermo provenance line (`thermo: inherited (global package)` or the local override);
   - inputs echo ($F, T, P, \mathbf{z}$);
   - the inner iteration trace (Newton steps with $g(x)$, $\mathrm{d}g/\mathrm{d}x$, $\Delta$);
   - for $\gamma$-models, the outer composition loop;
   - the result block (regime, $V/F$, $\mathbf{x}$, $\mathbf{y}$, $\mathbf{K}$, duty).
6. **Recycle loop** (if tears exist) — per-iteration tear residuals, Newton or Wegstein steps, announced convergence aids.
7. **Reports** — one `[report]` line per file written.
8. **State writing** — `[state] wrote converged/`.
9. **Structured result** — a JSON block between `«<Choupo:result-begin»>` markers carrying every stream, KPI, convergence history and advisory (this is what the GUI and scripts read).
10. **Assumptions and caveats** — every advisory the run raised (an extrapolated correlation, an unverified or estimated record, a defaulted control), replayed once, grouped, under `ASSUMPTIONS AND CAVEATS` just before the end — because a warning a thousand lines above the answer has been delivered, not received. Each line names its site and, in brackets, the solve it was raised in. Advisories raised about states a solver visited and did *not* publish are counted separately under `THE SOLVER'S PATH` (status `trial` in the result JSON; the default status is `accepted`): they describe how the answer was reached, not the answer. A run with nothing to say prints `none raised about the answer` — silence means nothing was raised, never that the block did not run.

An excerpt of the part that matters, from the first tutorial:

```
[outer 0] Rachford-Rice Newton (inner):
  it          V           g(V)         dg/dV         dV
  ----  ----------  -------------  -------------  -------------
  0     0.50000000   -3.75806e-02   -1.87920e-01   -1.99981e-01
  1     0.30001863   7.81978e-04    -1.97366e-01   3.96206e-03
  2     0.30398070   5.66359e-07    -1.97081e-01   2.87374e-06
  3     0.30398357   2.94959e-13    -1.97081e-01   0.00000e+00
```

**Key idea.** The inner iteration trace is where the simulator stops being a black box. The residual column tells you whether Newton is converging quadratically (the exponent doubling per line, as above) or linearly (the problem is ill-conditioned) — diagnosis you can do by eye.

Batch and control runs additionally write `trajectory.csv` on the `writeInterval` grid, and print an epilogue of headline events (conversions reached, recipe actions fired, reflux limits hit, ignition delay where relevant).

# 17 The web GUI: a runner and visualiser

> *What you'll learn.* How to open a case in the browser, run it, and read the result — and why the GUI never edits your dicts.

Choupo ships a browser front-end under `gui/`. Its design stance is deliberate and worth stating up front: **the GUI is a runner and visualiser, not an editor.** Cases are authored as plain-text dicts on disk, edited with any text editor (increasingly with LLM help). The GUI loads those dicts, draws the flowsheet, runs the solver *in the browser* (compiled to WebAssembly), and renders the log + plots. The files on disk remain the single source of truth. The architectural inspiration is ParaView — a text-defined case plus a viewer — not a block-diagram editor.

## 17.1 Starting the GUI

```
make wasm-gui          # build the WASM solver (choupoSolve + choupoProps)
bin/runGui             # boots the dev server and opens a browser window
bin/runGui --kill      # stops everything
```

## 17.2 The layout and interactions

The shell is a thin top bar over a full-screen flowsheet canvas — no left tree, no docked panels. Auxiliary views (log, plots, stream table, thermo foundation) open on demand as workspaces.

- **Single-click** a node or edge — raises a floating selection card (labels, units, help tooltips; a unit's continuous operation values are a what-if of the open copy, never written to disk). After a run the card of a unit that priced a liquid also lists *Liquid properties used*: the number, the state it was asked at and where it came from, in the engine's words, with a link to the Theory Guide (§**??**); a unit with nothing to report shows no such section.
- **Double-click** — pops the unit out, or drills into a composite sector (the drilled sub-case is seeded from the parent's persisted `converged/` state).
- **Drag** nodes and edge bends to lay the flowsheet out; the layout persists per case in the browser's `localStorage`.
- **Stream-class toggles** — show/hide whole classes of streams (e.g. energy wires) to declutter.
- **Run** — streams the same log you would see from `runCase`; **Stop** cancels mid-solve.

Stream colour encodes phase and comes straight from the solver ($vf$ plus solid mass fraction); it never changes on hover or selection — selection is signalled by a halo, not a recolour.

**What the Plots and Streams views open on.** After a run the *Plots* view lands on a unit's *Profile* when a unit published one (a column opens on its stage profile; before, it opened on the two-bar element balance, which is still one click away under *Balance*). A column's profile draws one panel per kind of quantity on the shared stage axis — temperature, the liquid mole fractions, the reaction extent as bars — and never puts two kinds on one axis; the components that stay below 2 % of the liquid everywhere start switched off in the legend, and the vapour fractions, activity coefficients, $\ln K_a$ and the reaction rate are one chip away (*Show*). The series are grouped by the names the engine writes (`x_`, `y_`, `gamma_`, `extent_kmol_h`); the engine publishes no kind or unit per series. The *Streams* view groups the solver's advisories of one kind into one line with a count (for example *[provenance] 6 advisories*); *show all* lists the engine's texts verbatim.

## 17.3 A properties case: the Workflow

A process case opens on its **Flowsheet**; a properties case (one with a `system/propsDict`, §13) opens on its **Workflow**, the same application with a different home, drawn with the flowsheet's own grammar. In both, what an arrow carries is *information*: on a flowsheet, the state one unit computed and the next one reads; here, the data and the records one step reads and the results it gives. A properties case is a *sequence*: `choupoProps` runs the `operations` in the order they are declared and refuses, before the first one runs, an operation that reads what a later one writes. The Workflow shows that sequence; it does not edit it.

- **The diagram (the home).** One **box per numbered step** (A.1, A.2, B.1, …, in the order the run takes them; a set of runs a declared view draws together as one series — the five feed points of a measured curve — is *one* step). Each study is a **frame** around its steps, lettered by position. A box says what is inside it without a click: the operation's type and its number of runs, the model and its main options, what it reads (FIT / HELD OUT where it fits), what it writes, the figures and tables it feeds, and its state and verdict. On the left of a step, its **feeds**: the measured datasets and records it reads; a file the process run writes enters from a **Flowsheet run** terminal. On the right, its **products**: the records, proposals and files it writes, and the figures and tables the case declares from its results. An arrow from one step to another means the later one reads what the earlier one wrote. Each arrow is labelled with what it carries, and each kind has its own dash.

- **Single click** on a box opens the same floating card the flowsheet opens for a unit: what the step reads (each dataset FIT or HELD OUT, and the band declared before the fit), the model with its options inside it, what it writes (as the engine's own file-traffic table lists them, with the fingerprints a written record states), the verdict with its identifiability beside it, and after a run its main numbers.
- **Double click** (or **Enter**, or the card's **Open**) opens the step in its own browser tab with everything about it: its figures, what a fit found, each run's numbers with their units, what ran run by run, and the card's sections.
- **The outline** on the left, folded with `[`, lists the same studies and steps and shares the diagram's selection; ↑/↓ walk the steps in order.

When the drawing is too large for its window at full size, the fit draws it as an *overview*: every box keeps, at the 11-pixel minimum, its number and state and as much of its name, type and model as it has room for (on a very small window, the number and the state alone), and the canvas says that the smaller labels are hidden until you zoom in — exactly as the flowsheet does.

Beside the Workflow, the top menu carries **Studies** — each declared study's figures, tables and numbers, one study at a time or all of them — and **Reports**, what the run produced to read, check and take away: the curation verdicts, the records and proposals it wrote, the comparison with measured data, the decisions it took, every file it wrote (to download or draw), the thermo readiness, and one download of all of it. The case's one **Run workflow** is in the top bar (and `Ctrl+Enter`); **F1** opens the theory of what is selected. A case that carries both dicts (a fit, then a flowsheet that reads the fitted record) opens on its `controlDict.application` and switches home from the top bar; the record such a fit writes says which unit of the flowsheet reads it.

**Common pitfall.** **MOCK vs WASM.** If the WASM solver has not been built (`make wasm-gui`), the GUI falls back to a *mock* adapter that returns canned numbers so the UI still renders. The Run badge reads `MOCK` in that case, not `WASM` — check it before trusting any result. After changing any C++ source, rebuild the WASM (it is a separate artefact from the native binary) or the browser keeps running stale code.

# 18 Building your own case

> *What you'll learn.* The fastest path from a blank idea to a converged result: scaffold or clone, wire the topology, author the inlets, initialise, run.

Two starting points:

```
# (a) scaffold a fresh case in your workspace:
newCase myFlash "isothermal flash of my mixture"

# (b) clone the tutorial closest to your idea:
cp -r tutorials/steady/flash/flash01_benzene_toluene tutorials/steady/flash/myFlash
```

Then the loop is always the same:

1. edit `system/flowsheetDict` (topology) and `constant/thermoPhysPropDict` (components + models);
2. author the *inlet* files in `0/` (and a seed for any tear);
3. `bin/choupo-init0 <case>` to materialise the remaining stream files;
4. `runCase <case>`, read the log, iterate.

**Adding a missing component.** Two locations — pick the right tier for what you are adding:

- `data/standards/components/<name>.dat` — a contribution to the *shared catalogue* of well-curated chemicals (primary-cited, per-value provenance; the engine refuses to write here — promotion is a human act).
- `<case>/constant/components/<name>.dat` — *sample-specific or one-off data*: a particular powder's sorption isotherm, a laboratory measurement, a NASA-7 $C_p$ override. Case-local files are overlaid block-by-block on the standard entry of the same name, so a slim file with just the bespoke blocks is enough — and every overlay is announced in the log (`[overlay] ...`).

When a new file carries a `standardThermochemistry` block, declare the `referenceState` of the tabulated $\Delta h_f^\circ$ explicitly (`idealGas` / `pureLiquid` / `pureSolid`) — it tells the solver which rung of the enthalpy ladder the datum pins (Theory Guide § "Which rung does the data file pin?"). A component with no catalogue entry at all can be *estimated* from its molecular groups on the props bench (§13) and promoted as a dated, glass-box proposal.

**Using a reaction.** Declare it in `constant/reactions` and reference it by name (`reaction <name>;` or `reactions (...)`) — §5.3.

**Custom unit operations.** A case may carry its own C++ unit under `<case>/code/` (`MyUnit.H/.cpp` + an explicit registration file); `bin/buildCode` compiles it into a per-case binary. See `tutorials/steady/userops/userOp01_yield_reactor` and the Developer Guide.

**Archiving.** Seal the case (`bin/choupo-import`, §4.10) so it runs without the installation catalogue — the right form for a thesis appendix or a paper's supplementary material.

# 19 Troubleshooting

*What you'll learn.* The failure modes that account for nearly every support question, and exactly what to do about each.

## "0/ is incomplete" / missing or orphan stream file

The completeness contract (§3.4): every stream in the graph needs a file in `0/`, and every file must correspond to a graph stream. The error names the offending stream. Author the inlets, then `bin/choupo-init0 <case>` writes the rest; a leftover file from a renamed stream must be deleted (the validator refuses to guess which stream you meant).

## "Component does not exist"

```
ERROR: Database: component file not found: .../components/foo.dat
```

The component name is misspelt, or the file is missing. Names are case-sensitive and resolved exactly — check `data/standards/components/` and your `constant/components/` overlay.

## "moleFractions do not close"

Stream-state fractions must sum to 1 within $10^{-6}$ (§3.4); the error names the stream and the actual sum. This is deliberate — a state file is data, and data with a hole in it should stop the run, not be silently patched.

## Dimension mismatch on a parameter

```
parameter 'P' expected dimensions [1 -1 -2 0 0] (Pa) but the dict
declared [1 0 0 0 0] (kg).
```

A wrong unit suffix (§3.7). Fix the suffix; do not strip it (raw numbers pass unchecked).

## Build fails after pulling new code

```
make distclean && make all
```

Necessary when headers change incompatibly. If the GUI misbehaves after a source change, rebuild the WASM too (`make wasm-gui`) — it is a separate artefact.

## Simulator runs but a stream shows NaN

Most common: an upstream unit was fed an empty stream ($F = 0$ emptying the composition vector), or Antoine was evaluated far outside its range (e.g. $T$ so low the extrapolated $P^{\text{sat}}$ turns non-physical). Re-read the input echo of the first unit whose output is NaN; `bin/runTests` guards every tutorial against silent NaN/inf for exactly this reason.

## Newton fails to converge

- **Outer composition loop** ($\gamma$-model refresh): try `outerAccelerator directSubstitution` in `solverDict` for strongly non-ideal systems, or raise `maxOuterIter`.
- **Inner Newton** (Rachford–Rice, bubble-$T$): raise `maxIter`; near a phase boundary, tighten `compositionTol`.
- **Recycle**: give the tear a better `0/` seed (run `choupo-init0 -force` after improving the inlets), or switch `recycleSolver` between `Newton` and `Wegstein` — they have different failure modes. Every aid the solver applies (auto-seed, bound, fallback) is announced in the log — read what it did before overriding it.

## Wang–Henke column oscillates or crosses an azeotrope

The bubble-point method is not stable on strongly non-ideal systems. Select `model simultaneous;` on the column — the whole-block Newton converges quadratically and refuses to invent a "past-the-azeotrope" answer (§5.6).

## A sweep fails on some points

Almost always the solver's iteration caps are too small for the edge points (high reflux, high pressure). Raise the limits in `solverDict`; failed points are written as `nan` and the sweep continues, so the CSV tells you exactly where the envelope ends.

**Key idea.** If a case behaves unexpectedly, *read the log*. Every Newton step, every Wegstein update, every $\gamma$ value, every announced default is printed. Black-box debugging is exactly the failure mode Choupo refuses to participate in.

# 20 Where to look next

Choupo's documentation is a family of guides, each with its own job:

- `docs/theoryGuide.pdf` — every equation the engine solves, derived: flashes, MESH, kinetics, enthalpy ladders, population balances, the numerical methods.
- `docs/tutorialsGuide.pdf` — the long-form walk through the tutorial corpus, family by family.
- `docs/propsGuide.pdf` — the property workbench in depth: estimation, fitting, consistency, electrolytes.
- `docs/explorerGuide.pdf` — the property-explorer view of the GUI.
- `docs/designGuide.pdf` — sizing, costing, and design heuristics.
- `docs/developerGuide.pdf` — adding unit operations, thermo models, components, outer drivers, post-processors.
- `tutorials/<category>/<family>/<name>/` — every tutorial is a fully-worked, runnable example with an explanatory header.
- `src/` — the ultimate reference. Every model documented here is a readable C++ class; start from `src/applications/choupoSolve/main.cpp` and follow the calls.

*Colophon.* This manual was typeset in Latin Modern with the Choupo shared LaTeX preamble. Sources live in `docs/`; rebuild with `cd docs && make user`.