

# Choupo

The Open Source Chemical Process Simulator

# Process Design Heuristics

Choupo-dev

Copyright © 2026 Vítor Geraldes.

Authors: Vítor Geraldes.

This work is licensed under a Creative Commons Attribution-ShareAlike 4.0 International License.

Code examples, Choupo case files, and other machine-readable examples are licensed under GPL-3.0-or-later.

Typeset in LaTeX.

---

*Acknowledgment.* Choupo was conceived and architected by Vítor Geraldes. Substantial parts of the initial implementation, documentation, and tutorial corpus were produced with assistance from Anthropic Claude Code using Claude Opus/Fable models. This guide is published under human curation, review, and editorial responsibility by Vítor Geraldes.

# License

Attribution-ShareAlike 4.0 International

=======================================================================

Creative Commons Corporation ("Creative Commons") is not a law firm and
does not provide legal services or legal advice. Distribution of
Creative Commons public licenses does not create a lawyer-client or
other relationship. Creative Commons makes its licenses and related
information available on an "as-is" basis. Creative Commons gives no
warranties regarding its licenses, any material licensed under their
terms and conditions, or any related information. Creative Commons
disclaims all liability for damages resulting from their use to the
fullest extent possible.

Using Creative Commons Public Licenses

Creative Commons public licenses provide a standard set of terms and
conditions that creators and other rights holders may use to share
original works of authorship and other material subject to copyright
and certain other rights specified in the public license below. The
following considerations are for informational purposes only, are not
exhaustive, and do not form part of our licenses.

     Considerations for licensors: Our public licenses are
     intended for use by those authorized to give the public
     permission to use material in ways otherwise restricted by
     copyright and certain other rights. Our licenses are
     irrevocable. Licensors should read and understand the terms
     and conditions of the license they choose before applying it.
     Licensors should also secure all rights necessary before
     applying our licenses so that the public can reuse the
     material as expected. Licensors should clearly mark any
     material not subject to the license. This includes other CC-
     licensed material, or material used under an exception or
     limitation to copyright. More considerations for licensors:
    wiki.creativecommons.org/Considerations_for_licensors

     Considerations for the public: By using one of our public
     licenses, a licensor grants the public permission to use the
     licensed material under specified terms and conditions. If
     the licensor's permission is not necessary for any reason--for
     example, because of any applicable exception or limitation to
     copyright--then that use is not regulated by the license. Our
     licenses grant only permissions under copyright and certain
     other rights that a licensor has authority to grant. Use of
     the licensed material may still be restricted for other
     reasons, including because others have copyright or other
     rights in the material. A licensor may make special requests,
     such as asking that all changes be marked or described.
     Although not required by our licenses, you are encouraged to
     respect those requests where reasonable. More considerations
     for the public:
    wiki.creativecommons.org/Considerations_for_licensees

=======================================================================

Creative Commons Attribution-ShareAlike 4.0 International Public
License

By exercising the Licensed Rights (defined below), You accept and agree
to be bound by the terms and conditions of this Creative Commons
Attribution-ShareAlike 4.0 International Public License ("Public
License"). To the extent this Public License may be interpreted as a
contract, You are granted the Licensed Rights in consideration of Your
acceptance of these terms and conditions, and the Licensor grants You
such rights in consideration of benefits the Licensor receives from
making the Licensed Material available under these terms and
conditions.


Section 1 -- Definitions.

  a. Adapted Material means material subject to Copyright and Similar
     Rights that is derived from or based upon the Licensed Material
     and in which the Licensed Material is translated, altered,
     arranged, transformed, or otherwise modified in a manner requiring
     permission under the Copyright and Similar Rights held by the
     Licensor. For purposes of this Public License, where the Licensed
     Material is a musical work, performance, or sound recording,
     Adapted Material is always produced where the Licensed Material is
     synched in timed relation with a moving image.

  b. Adapter's License means the license You apply to Your Copyright
     and Similar Rights in Your contributions to Adapted Material in
     accordance with the terms and conditions of this Public License.

  c. BY-SA Compatible License means a license listed at
     creativecommons.org/compatiblelicenses, approved by Creative
     Commons as essentially the equivalent of this Public License.

  d. Copyright and Similar Rights means copyright and/or similar rights
     closely related to copyright including, without limitation,
     performance, broadcast, sound recording, and Sui Generis Database
     Rights, without regard to how the rights are labeled or
     categorized. For purposes of this Public License, the rights
     specified in Section 2(b)(1)-(2) are not Copyright and Similar

Rights.

e. Effective Technological Measures means those measures that, in the absence of proper authority, may not be circumvented under laws fulfilling obligations under Article 11 of the WIPO Copyright Treaty adopted on December 20, 1996, and/or similar international agreements.

f. Exceptions and Limitations means fair use, fair dealing, and/or any other exception or limitation to Copyright and Similar Rights that applies to Your use of the Licensed Material.

g. License Elements means the license attributes listed in the name of a Creative Commons Public License. The License Elements of this Public License are Attribution and ShareAlike.

h. Licensed Material means the artistic or literary work, database, or other material to which the Licensor applied this Public License.

i. Licensed Rights means the rights granted to You subject to the terms and conditions of this Public License, which are limited to all Copyright and Similar Rights that apply to Your use of the Licensed Material and that the Licensor has authority to license.

j. Licensor means the individual(s) or entity(ies) granting rights under this Public License.

k. Share means to provide material to the public by any means or process that requires permission under the Licensed Rights, such as reproduction, public display, public performance, distribution, dissemination, communication, or importation, and to make material available to the public including in ways that members of the public may access the material from a place and at a time individually chosen by them.

l. Sui Generis Database Rights means rights other than copyright resulting from Directive 96/9/EC of the European Parliament and of the Council of 11 March 1996 on the legal protection of databases, as amended and/or succeeded, as well as other essentially equivalent rights anywhere in the world.

m. You means the individual or entity exercising the Licensed Rights under this Public License. Your has a corresponding meaning.

Section 2 -- Scope.

a. License grant.

1. Subject to the terms and conditions of this Public License, the Licensor hereby grants You a worldwide, royalty-free, non-sublicensable, non-exclusive, irrevocable license to exercise the Licensed Rights in the Licensed Material to:

a. reproduce and Share the Licensed Material, in whole or in part; and

b. produce, reproduce, and Share Adapted Material.

2. Exceptions and Limitations. For the avoidance of doubt, where Exceptions and Limitations apply to Your use, this Public License does not apply, and You do not need to comply with its terms and conditions.

3. Term. The term of this Public License is specified in Section 6(a).

4. Media and formats; technical modifications allowed. The Licensor authorizes You to exercise the Licensed Rights in all media and formats whether now known or hereafter created, and to make technical modifications necessary to do so. The Licensor waives and/or agrees not to assert any right or authority to forbid You from making technical modifications necessary to exercise the Licensed Rights, including technical modifications necessary to circumvent Effective Technological Measures. For purposes of this Public License, simply making modifications authorized by this Section 2(a) (4) never produces Adapted Material.

5. Downstream recipients.

a. Offer from the Licensor -- Licensed Material. Every recipient of the Licensed Material automatically receives an offer from the Licensor to exercise the Licensed Rights under the terms and conditions of this Public License.

b. Additional offer from the Licensor -- Adapted Material. Every recipient of Adapted Material from You automatically receives an offer from the Licensor to exercise the Licensed Rights in the Adapted Material under the conditions of the Adapter's License You apply.

c. No downstream restrictions. You may not offer or impose any additional or different terms or conditions on, or apply any Effective Technological Measures to, the Licensed Material if doing so restricts exercise of the Licensed Rights by any recipient of the Licensed Material.

6. No endorsement. Nothing in this Public License constitutes or
   may be construed as permission to assert or imply that You
   are, or that Your use of the Licensed Material is, connected
   with, or sponsored, endorsed, or granted official status by,
   the Licensor or others designated to receive attribution as
   provided in Section 3(a)(1)(A)(i).

b. Other rights.

1. Moral rights, such as the right of integrity, are not
   licensed under this Public License, nor are publicity,
   privacy, and/or other similar personality rights; however, to
   the extent possible, the Licensor waives and/or agrees not to
   assert any such rights held by the Licensor to the limited
   extent necessary to allow You to exercise the Licensed
   Rights, but not otherwise.

2. Patent and trademark rights are not licensed under this
   Public License.

3. To the extent possible, the Licensor waives any right to
   collect royalties from You for the exercise of the Licensed
   Rights, whether directly or through a collecting society
   under any voluntary or waivable statutory or compulsory
   licensing scheme. In all other cases the Licensor expressly
   reserves any right to collect such royalties.

Section 3 -- License Conditions.

Your exercise of the Licensed Rights is expressly made subject to the
following conditions.

a. Attribution.

1. If You Share the Licensed Material (including in modified
   form), You must:

   a. retain the following if it is supplied by the Licensor
      with the Licensed Material:

      i. identification of the creator(s) of the Licensed
         Material and any others designated to receive
         attribution, in any reasonable manner requested by
         the Licensor (including by pseudonym if
         designated);

      ii. a copyright notice;

      iii. a notice that refers to this Public License;

      iv. a notice that refers to the disclaimer of
          warranties;

      v. a URI or hyperlink to the Licensed Material to the
         extent reasonably practicable;

   b. indicate if You modified the Licensed Material and
      retain an indication of any previous modifications; and

   c. indicate the Licensed Material is licensed under this
      Public License, and include the text of, or the URI or
      hyperlink to, this Public License.

2. You may satisfy the conditions in Section 3(a)(1) in any
   reasonable manner based on the medium, means, and context in
   which You Share the Licensed Material. For example, it may be
   reasonable to satisfy the conditions by providing a URI or
   hyperlink to a resource that includes the required
   information.

3. If requested by the Licensor, You must remove any of the
   information required by Section 3(a)(1)(A) to the extent
   reasonably practicable.

b. ShareAlike.

   In addition to the conditions in Section 3(a), if You Share
   Adapted Material You produce, the following conditions also apply.

1. The Adapter's License You apply must be a Creative Commons
   license with the same License Elements, this version or
   later, or a BY-SA Compatible License.

2. You must include the text of, or the URI or hyperlink to, the
   Adapter's License You apply. You may satisfy this condition
   in any reasonable manner based on the medium, means, and
   context in which You Share Adapted Material.

3. You may not offer or impose any additional or different terms
   or conditions on, or apply any Effective Technological
   Measures to, Adapted Material that restrict exercise of the
   rights granted under the Adapter's License You apply.

Section 4 -- Sui Generis Database Rights.

Where the Licensed Rights include Sui Generis Database Rights that
apply to Your use of the Licensed Material:

a. for the avoidance of doubt, Section 2(a)(1) grants You the right
   to extract, reuse, reproduce, and Share all or a substantial
   portion of the contents of the database;

b. if You include all or a substantial portion of the database
   contents in a database in which You have Sui Generis Database
   Rights, then the database in which You have Sui Generis Database
   Rights (but not its individual contents) is Adapted Material,
   including for purposes of Section 3(b); and

c. You must comply with the conditions in Section 3(a) if You Share
   all or a substantial portion of the contents of the database.

For the avoidance of doubt, this Section 4 supplements and does not
replace Your obligations under this Public License where the Licensed
Rights include other Copyright and Similar Rights.


Section 5 -- Disclaimer of Warranties and Limitation of Liability.

a. UNLESS OTHERWISE SEPARATELY UNDERTAKEN BY THE LICENSOR, TO THE
   EXTENT POSSIBLE, THE LICENSOR OFFERS THE LICENSED MATERIAL AS-IS
   AND AS-AVAILABLE, AND MAKES NO REPRESENTATIONS OR WARRANTIES OF
   ANY KIND CONCERNING THE LICENSED MATERIAL, WHETHER EXPRESS,
   IMPLIED, STATUTORY, OR OTHER. THIS INCLUDES, WITHOUT LIMITATION,
   WARRANTIES OF TITLE, MERCHANTABILITY, FITNESS FOR A PARTICULAR
   PURPOSE, NON-INFRINGEMENT, ABSENCE OF LATENT OR OTHER DEFECTS,
   ACCURACY, OR THE PRESENCE OR ABSENCE OF ERRORS, WHETHER OR NOT
   KNOWN OR DISCOVERABLE. WHERE DISCLAIMERS OF WARRANTIES ARE NOT
   ALLOWED IN FULL OR IN PART, THIS DISCLAIMER MAY NOT APPLY TO YOU.

b. TO THE EXTENT POSSIBLE, IN NO EVENT WILL THE LICENSOR BE LIABLE
   TO YOU ON ANY LEGAL THEORY (INCLUDING, WITHOUT LIMITATION,
   NEGLIGENCE) OR OTHERWISE FOR ANY DIRECT, SPECIAL, INDIRECT,
   INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY, OR OTHER LOSSES,
   COSTS, EXPENSES, OR DAMAGES ARISING OUT OF THIS PUBLIC LICENSE OR
   USE OF THE LICENSED MATERIAL, EVEN IF THE LICENSOR HAS BEEN
   ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS, EXPENSES, OR
   DAMAGES. WHERE A LIMITATION OF LIABILITY IS NOT ALLOWED IN FULL OR
   IN PART, THIS LIMITATION MAY NOT APPLY TO YOU.

c. The disclaimer of warranties and limitation of liability provided
   above shall be interpreted in a manner that, to the extent
   possible, most closely approximates an absolute disclaimer and
   waiver of all liability.


Section 6 -- Term and Termination.

a. This Public License applies for the term of the Copyright and
   Similar Rights licensed here. However, if You fail to comply with
   this Public License, then Your rights under this Public License
   terminate automatically.

b. Where Your right to use the Licensed Material has terminated under
   Section 6(a), it reinstates:

   1. automatically as of the date the violation is cured, provided
      it is cured within 30 days of Your discovery of the
      violation; or

   2. upon express reinstatement by the Licensor.

   For the avoidance of doubt, this Section 6(b) does not affect any
   right the Licensor may have to seek remedies for Your violations
   of this Public License.

c. For the avoidance of doubt, the Licensor may also offer the
   Licensed Material under separate terms or conditions or stop
   distributing the Licensed Material at any time; however, doing so
   will not terminate this Public License.

d. Sections 1, 5, 6, 7, and 8 survive termination of this Public
   License.


Section 7 -- Other Terms and Conditions.

a. The Licensor shall not be bound by any additional or different
   terms or conditions communicated by You unless expressly agreed.

b. Any arrangements, understandings, or agreements regarding the
   Licensed Material not stated herein are separate from and
   independent of the terms and conditions of this Public License.


Section 8 -- Interpretation.

a. For the avoidance of doubt, this Public License does not, and
   shall not be interpreted to, reduce, limit, restrict, or impose
   conditions on any use of the Licensed Material that could lawfully
   be made without permission under this Public License.

b. To the extent possible, if any provision of this Public License is
   deemed unenforceable, it shall be automatically reformed to the
   minimum extent necessary to make it enforceable. If the provision
   cannot be reformed, it shall be severed from this Public License
   without affecting the enforceability of the remaining terms and
   conditions.

```
  c. No term or condition of this Public License will be waived and no
     failure to comply consented to unless expressly agreed to by the
     Licensor.

  d. Nothing in this Public License constitutes or may be interpreted
     as a limitation upon, or waiver of, any privileges and immunities
     that apply to the Licensor or You, including from the legal
     processes of any jurisdiction or authority.


=======================================================================

Creative Commons is not a party to its public
licenses. Notwithstanding, Creative Commons may elect to apply one of
its public licenses to material it publishes and in those instances
will be considered the "Licensor." The text of the Creative Commons
public licenses is dedicated to the public domain under the CC0 Public
Domain Dedication. Except for the limited purpose of indicating that
material is shared under a Creative Commons public license or as
otherwise permitted by the Creative Commons policies published at
creativecommons.org/policies, Creative Commons does not authorize the
use of the trademark "Creative Commons" or any other trademark or logo
of Creative Commons without its prior written consent including,
without limitation, in connection with any unauthorized modifications
to any of its public licenses or any other arrangements,
understandings, or agreements concerning use of licensed material. For
the avoidance of doubt, this paragraph does not form part of the
public licenses.

Creative Commons may be contacted at creativecommons.org.
```

# Trademarks

Choupo is a trademark of TalentGround Lda.

Anthropic, Claude, and Claude Code are trademarks or registered trademarks of Anthropic, PBC.

## Disclaimer & scope — read before using any number in this guide

**These are engineering rules of thumb** — deliberately approximate, order-of-magnitude starting points for conceptual design and teaching, stated as ranges. They are **not** a substitute for, and must never override:

- the **governing codes and standards** (ASME, API, NFPA, IEC, ISO, EN, and local regulations);
- **detailed design and review by a qualified, licensed professional engineer**;
- a formal **process-hazard analysis** (HAZOP / LOPA) and the **manufacturer's data** for the specific equipment.

Nothing here is a recommendation for a real plant, and no value has been validated for any specific service. **Safety-critical decisions** — pressure relief, fired equipment, toxic or flammable inventories, electrical area classification, effluent limits — *can cost lives or breach the law if wrong* and MUST follow the applicable standard and competent review, never a rule of thumb. Where a number could touch safety or the environment, the controlling standard is named (see *Standards & further reading*).

To the maximum extent permitted by law, **Choupo, its authors, and its contributors accept no liability** for any use of this material; it is provided "as is", without warranty of any kind, for education. Professional responsibility for any design remains entirely with the engineer of record.

# Contents

**1 Process synthesis & flowsheet structure** **2**

**2 Reactors & reaction engineering** **3**
2.1 Type selection . . . 3
2.2 How far to push conversion . . . 3
2.3 Temperature, pressure & exotherm policy . . . 3
2.4 Sizing rules . . . 3

**3 Distillation & separation-train design** **5**
3.1 Internals selection (trays vs packing) . . . 5
3.2 Diameter from vapour load (flooding) . . . 5
3.3 Reflux and FUG sizing . . . 5
3.4 Sequencing multicomponent splits . . . 6
3.5 Azeotropes . . . 6

**4 Absorption, stripping & gas treating** **7**

**5 Liquid-liquid extraction** **8**

**6 Membranes & aqueous/advanced separations** **9**
6.1 Selecting the membrane class . . . 9
6.2 Recovery vs scaling — the master trade-off . . . 9
6.3 Crossflow, flux and polarisation . . . 9
6.4 Staging, trains, pretreatment . . . 9

**7 Solids processing & particle technology** **10**
7.1 Crystallisation route — pick by the solubility curve . . . 10
7.2 Solid–liquid separation — filtration vs centrifugation . . . 10
7.3 Dryer selection — by feed state and particle size . . . 10
7.4 Gas–solid separation & fluidisation velocities . . . 10

**8 Evaporation & multiple-effect** **11**

**9 Gas-liquid separators & process drums** **12**

**10 Heat exchangers — type selection & sizing** **13**
10.1 Type-selection table . . . 13
10.2 Gas-phase service . . . 13
10.3 Allocation & velocities . . . 13
10.4 Phase-change service . . . 13
10.5 ΔT_min, LMTD correction, fouling . . . 14

**11 Heat integration & pinch analysis** **15**

**12 Fired heaters & furnaces** **16**

**13 Compressors, expanders & pressure change** **18**
13.1 TYPE SELECTION . . . 18
13.2 Stages, ratio per stage & intercooling . . . 18
13.3 Efficiency, surge & turndown . . . 18
13.4 When an expander pays back . . . 18

**14 Drivers: electric motors, steam & gas turbines** **19**

**15 Fluid transport, line sizing & hydraulics** **20**
15.1 Driver selection by pressure ratio . . . 20
15.2 Recommended superficial velocities . . . 20
15.3 Economic pipe diameter & ΔP budget . . . 20
15.4 NPSH (the pump killer) . . . 20

**16 Control valves, pressure letdown & choking** **21**

**17 Refrigeration & vacuum systems** **23**
17.1 Refrigeration — pick the warmest level that works . . . 23
17.2 Vacuum — match the pump to the absolute pressure . . . 23

**18 Storage & intermediate tanks** **24**

**19 Process control & instrumentation heuristics** **25**

**20 Pressure relief, flare & safety basics** **27**

**21 Plant layout** **29**
21.1 Siting and the prevailing wind . . . 29
21.2 Separation distances and hazardous areas . . . 29
21.3 Blocks, roads, fence and battery limits . . . 30
21.4 Trucks, cars and the people on site . . . 30
21.5 Pipe racks . . . 31
21.6 Utility lines: cooling water, refrigerant and the flare header . . . 31
21.7 Tank farms and the choice of storage . . . 32
21.8 Secondary containment: bunds and impounding areas . . . 33
21.9 The distillation column group . . . 34
21.10NPSH and the elevations it fixes . . . 34
21.11Platforms, ladders and walkways . . . 35
21.12Maintenance and crane access . . . 35
21.13What Choupo checks, and what it does not . . . 35

**22 The operator panel of a batch run — declared, then reported** **38**

**23 Effluent treatment — liquid & gaseous** **39**
23.1 Liquid effluent (wastewater) . . . 39
23.2 Gaseous effluent (air emissions) . . . 39

**24 Pharmaceutical facilities — the GMP interior** **40**
24.1 What Choupo checks, and what it does not . . . 40
24.2 Batch and campaign operation — sizing per lot . . . 41

**25 Organising a multi-product plant** **43**
25.1 Trains, stages and the lot . . . 43
25.2 Cycle time, the limiting stage, units in and out of phase . . . 43
25.3 Campaigns and changeovers . . . 43
25.4 Single-product campaigns versus mixed sequencing . . . 43
25.5 Intermediate storage between trains . . . 44
25.6 A continuous unit in a lot regime . . . 44
25.7 The year's Gantt chart and the deliverables of the plan . . . 44

**26 Cost estimation & profitability** **46**

**27 Materials of construction & mechanical design** **48**

**28 Standards & further reading** **50**

**29 Equipment selection at a glance** **51**

**30 Equipment selection at a glance** **52**

This guide is Choupo's answer to the rules-of-thumb appendices you reach for in Turton, Seider, and Sinnott & Towler — but rebuilt for a simulator whose whole point is that *nothing is hidden*. Where a textbook table hands you a single number ("use $\Delta T_min = 10$ °C", "size liquid lines at 1–3 m/s"), this guide hands you a **range, a *why*, and a runnable hypothesis**. The eight faculty sections that follow cover the full sweep of decisions a student faces when a problem stops being "solve this flash" and becomes "what equipment do I even pick?": process structure, reactor type, separation train, exchanger type and velocity, line sizing and $\Delta P$ budgets, membranes, solids handling, and the metal envelope that contains all of it.

**How to read every rule here: a heuristic is a *hypothesis*, not a verdict.** "Pick a PFR when you need high conversion of a single reaction" (the reactor rule below) is a starting bet that buys you 80 % of the answer in 20 % of the effort — it is *not* a substitute for the run. Choupo is glass-box precisely so you can test the bet: build the case, watch the Newton iterations, read the KPIs, and confirm (or refute) the rule for *your* feed, *your* thermodynamics, *your* pressure level. Wherever a rule maps cleanly onto an existing tutorial, the section points you at it — run it, perturb it, and see the range move. A heuristic you have personally falsified once is worth ten you merely memorised.

**Why the sections are ordered the way they are — the design onion.** Process design proceeds from the inside out: the reactor sits at the core, the separation-and-recycle system wraps it, the heat-recovery network wraps that, and the utilities, hydraulics, and mechanical envelope wrap the whole. Each layer's decisions *constrain* the next — the reactor's conversion fixes what the separation train must handle; the separation train's streams fix the heating and cooling duties; those duties fix the pumping power and line sizes; and the worst temperature, pressure, and corrosivity anywhere inside fix the materials of construction on the outside. So we read **outermost framing first** (synthesis), then **inward to the core** (reactors), then **back out through the layers**: the full separation train kept together (distillation → membranes → solids), then heat recovery (heat exchangers), then the connective hydraulics, and finally the material envelope that contains everything. This keeps every decision in the order in which its inputs actually become available.

# 1 Process synthesis & flowsheet structure

Design the flowsheet **inside-out**, following Douglas' onion. Each layer fixes the degrees of freedom (DOF) of the next, so never optimise an inner layer against an outer-layer guess.

| Onion layer | What you DECIDE | Heuristic numbers / ranges | Physical/economic WHY |
|---|---|---|---|
| 1. Reactor | CSTR vs PFR, single-pass conversion X | Push X to **0.6–0.9** for cheap reactant; stop where recycle cost rises faster than reactor cost. Keep $\mathbf{X \leq 0.95}$ if selectivity falls (consecutive rxns) | Reactor cost $\propto$ V $\propto$ ln[1/(1−X)] for a first-order PFR; recycle/separation cost $\propto$ unconverted feed. The minimum-TAC X sits where $\partial$(reactor)/$\partial$X = −$\partial$(recycle)/$\partial$X |
| 2. Separation | Recover vs recycle; sequence | Recover species worth > ~**3–5**× its separation cost; aim **99%+** recovery of valuable product | Lost product is pure margin; over-purifying a recycle wastes reboiler duty |
| 3. Recycle/purge | Purge fraction for inerts | Purge so inert mole-frac in loop $\leq$ **0.10–0.30**; purge loss of reactant < **1–5%** of feed | Inert build-up raises recycle compressor/pump duty ($\propto$ total recycle flow); too-small purge → runaway loop inventory |
| 4. Heat recovery | HEN, ΔT_min | ΔT_min **10 °C** liquid–liquid, **20–40 °C** with a gas stream, **3–5 °C** cryogenic/refrigerated | Area $\propto 1/\Delta$T_min (U_gas ~15–60 W/m$^2$K vs U_liq ~300–1000); small ΔT buys energy but explodes area cost |
| 5. Utilities | Hot/cold service, fired vs salt | LP/MP/HP steam below ~250 °C; **Dowtherm A** to ~400 °C; **HiTec salt 142–535 °C**; fired heater only above salt range | Match utility T just above pinch; over-hot utility destroys exergy and over-sizes ΔT |

**Input–output structure first.** Before any unit, draw the I/O box: feeds in, products + purge + by-products out. Set **feed stoichiometric ratio** (slight excess, ~1.05–1.2, of the cheaper/limiting-safety reactant), decide which species **leave vs recycle**, and locate the **purge** (needed whenever a feed impurity or light by-product has no other exit). This fixes overall material balance DOF *before* you size anything.

**Reactor type.** Use a **PFR** when you need high conversion of a single reaction (plug flow → smaller volume for given X) or want a temperature/composition profile; use a **CSTR** for liquid-phase, exothermic, fast, or solids/biological systems needing isothermality and mixing. For series-parallel selectivity, a **CSTR-then-PFR** or staged CSTRs (3–4 stages approach PFR) is common. See `tutorials/steady/reactors` cases; for economics-driven X, `optim05_reactor_npv`.

**Distillation sequencing** (Lightest-out / direct sequence is the default): (1) remove **most plentiful** component early; (2) take the **lightest** (highest relative volatility, $\alpha$) split first when $\alpha >$ ~1.5; (3) leave the **hardest split** ($\alpha \to 1$) and the **highest-purity** product for last, alone, to avoid re-contaminating it; (4) favour **near-50/50** splits to balance column loads. Each ordering is a hypothesis — run the Wang-Henke / FUG shortcut cases (`tutorials/steady/distillation`) and compare reboiler+condenser duty.

**Degrees of freedom discipline.** A recycle adds one tear stream; Choupo's Newton-on-tears solver converges it, but **you** still own the design specs (purge fraction, reactor X, reflux). Count them: overall DOF = stream variables − independent balances − fixed specs. If the flowsheet won't close, you've under- or over-specified — the glass-box log tells you which. Sequence the whole sheet **reactor → separation → recycle → HEN → utilities**, re-pinching only after the recycle converges, because recycle flows change the composite curves.

# 2 Reactors & reaction engineering

The reactor is rarely the most expensive vessel, but it sets the composition every downstream unit must clean up — so its selection ripples through the whole flowsheet cost. Pick the **type** from mixing/kinetics, then size from **residence time** and **heat load**.

## 2.1 Type selection

| Criterion | Batch / semi-batch | CSTR | PFR / tubular | Fixed bed (catalytic) | Fluidised bed |
|---|---|---|---|---|---|
| Throughput | $<$ 500 t/yr, multiproduct | medium, liquid | medium–high | high, gas+solid cat. | high, fast-deactivating cat. |
| Phase | liquid, slurry | liquid, L–L, gas–liq | gas or liquid | gas/liquid + solid | gas + fine solid |
| Kinetics favoured | slow (hrs) | any; needs CSTR robustness | high order, fast | heterogeneous | very exo/endothermic, $\Delta$T-sensitive |
| Conversion per pass | high (time-driven) | **lowest for given V** | high | high | moderate |
| Heat control | jacket/coil, batchwise | excellent (isothermal, well-mixed) | hard (axial profile) | hot-spots; multitube | near-isothermal (solids mix) |
| $\tau$ for same X | — | **largest** | smallest | small | small |

The governing trade-off: a CSTR operates at the **outlet** (low-reactant) concentration, so for n>0 kinetics it needs the largest volume — typically **1.5–4**× a PFR for the same conversion (Choupo `cstr01_first_order` vs `pfr01_first_order` shows this head-to-head). You accept that penalty to buy near-perfect temperature control and the ability to run slurries/fouling systems a tube would plug. Use **CSTRs-in-series** (3–5 tanks) to approach plug-flow behaviour while keeping the mixing robustness.

## 2.2 How far to push conversion

Per-pass conversion is an **optimisation, not a maximisation**. Reactor volume scales roughly as `V` $\propto$ `ln[1/(1-X)]` (first order) — the last few percent of conversion cost disproportionate volume and, worse, residence time that breeds side products and erodes selectivity. **Heuristics:**

- Single-pass irreversible, valuable feed: target **X = 0.6–0.9**, then **recycle unconverted reactant** (recovery + recycle is almost always cheaper than the extra reactor volume; see `conversion01_hda` and the recycle flowsheet `process01_reactor_flash`).
- Reversible reactions: stop at **80–95% of equilibrium X**; chasing equilibrium needs infinite $\tau$ (`cstr02_reversible_wgs`, `pfr02_reversible_wgs`).
- The economic optimum trades reactor capital vs separation/recycle duty — run a sweep; `optim05_reactor_npv` does exactly this on NPV.

## 2.3 Temperature, pressure & exotherm policy

Run **as hot as selectivity and catalyst/material limits allow** — rate roughly doubles per **+10 °C** — but watch the Arrhenius gap: if the side reaction has higher $E_a$, hotter means *less* selective. For reversible exothermic reactions use a **declining T profile** (hot inlet for rate, cool outlet for equilibrium).

Heat removal sets the geometry. Estimate **adiabatic $\Delta T_{ad} = (-\Delta H_{rxn}) \cdot X \cdot C_{feed} / (\rho \cdot cp)$**; if $\Delta T_{ad}$ exceeds ~**20–50 °C**, an adiabatic vessel is unsafe — go to cooled multitube, CSTR with coil/jacket, or dilute/recycle. Jacket U for stirred liquids ≈ **300–1000 W/m²K**; internal coils **500–1500**. Keep the **adiabatic-temperature-rise / runaway** margin honest: the batch cases `batch26_cooling_failure` and `batch27_semibatch_dosing` demonstrate thermal runaway when cooling can't keep up (`batch06_adaptive_runaway` no longer does: its esterification is nearly thermoneutral).

## 2.4 Sizing rules

- **Liquid CSTR:** $\tau$ from kinetics; vessel **H/D ≈ 1–3**, fill to **70–85%**, freeboard for disengagement. Confirm against `batch01_first_order`.
- **Catalytic fixed bed:** superficial gas velocity **0.3–1.5 m/s**; keep **$\Delta P \leq$ 10–20%** of inlet P (Ergun); bed **L/D $\geq$ 5**, particle **3–6 mm** to balance $\Delta$P vs internal diffusion.

- **Fluidised bed:** operate at **2–7× U_mf**, typically **0.3–0.7 m/s**; tall freeboard to cut entrainment.
- **Space velocity** sanity check: gas catalytic **GHSV 500–10,000 $\mathbf{h^{-1}}$**; liquid **LHSV 0.5–5 $\mathbf{h^{-1}}$**.

# 3 Distillation & separation-train design

Distillation is the workhorse: ~90% of liquid separations, but also the plant's largest single energy sink (reboiler duty). Every heuristic below is a **range to verify** — run the case, read the diameter and reflux the solver reports, and decide.

## 3.1 Internals selection (trays vs packing)

The *why*: trays handle fouling, solids and wide turndown; structured packing gives low pressure drop and high efficiency per metre but is intolerant of fouling and expensive.

| Service / criterion | Pick | Typical numbers | Why |
|---|---|---|---|
| D > 0.8 m, clean, normal P | Sieve/valve trays | spacing 0.45–0.6 m, $\Delta$P ≈ 0.7 kPa/tray | cheap, robust, wide turndown (valve 4–5:1) |
| D < 0.8 m | Random packing | HETP ≈ column D | trays uneconomic to install in small shells |
| Vacuum (P < 0.3 bar) | Structured packing | $\Delta$P 0.1–0.4 kPa/m vs 0.7 kPa/tray | low $\Delta$P keeps reboiler T (and thermal-degradation) down |
| High purity / many stages | Structured packing | HETP 0.3–0.5 m, a 250–350 $m^2/m^3$ | most stages per metre of height |
| Fouling / solids / corrosive | Trays | — | cleanable, replaceable |
| Foaming, low $\Delta$P | Random (Pall/IMTP) | HETP 0.5–0.9 m | open area tolerates surging |

## 3.2 Diameter from vapour load (flooding)

Size on the controlling (usually top) vapour rate. Use the **C-factor / Souders-Brown** velocity: u_flood = C_sb · $\sqrt{((\rho_L-\rho_V)/\rho_V)}$, C_sb ≈ 0.07–0.12 m/s at 0.45–0.6 m spacing. **Design at 75–85% of flood** (70% for foaming systems). Equivalently the **F-factor** F = u · $\sqrt{\rho_V}$ should land at **1.2–2.5 (m/s)(kg/m³)^0.5** for trays, up to ~2.5–3 for structured packing. Typical superficial vapour velocities: **0.5–1.5 m/s** at atmospheric, **2–4 m/s** under vacuum (low $\rho$_V). Then A = V/u, D = $\sqrt{(4A/\pi)}$. Aspect ratio H/D ≈ 8–30; if H/D > 30 split into two shells. Weir loading and downcomer set the lower bound — turndown below ~50% of flood weeps. `column01_benzene_toluene` reports diameter and the flood fraction; halve the feed and watch it shrink.

**Why the top and the bottom of a column want different diameters.** The flooding diameter follows the **vapour VOLUMETRIC flow**, not the molar one, and the two sections differ in every term that turns one into the other: temperature, pressure, vapour molar mass and usually the vapour molar flow itself. Below the feed the liquid traffic is larger, which raises the flow parameter F_LV = (L/V)$\sqrt{(\rho_V/\rho_L)}$ and therefore LOWERS Fair's capacity parameter C_sb — so a stripping tray floods at a lower velocity than a rectifying one. Whether that makes the bottom the wider section is not a rule: the vapour volumetric flow may fall faster than the capacity does, and then the top governs. It is decided by whichever tray loses the argument, tray by tray, which is exactly what `column09_tray_hydraulics` prints. It reports **1.21 m** for its rectifying section against **1.32 m** for its stripping section, on the same trays and the same spacing.

**Swaging is an ECONOMIC decision, not a thermodynamic one.** Having two diameters, you may build a **swaged** tower — a narrow section, a transition cone and a wide section — or one **straight** shell at the larger diameter. The straight shell buys plate you do not need; the swaged one buys a transition, its fabrication, its extra weld inspection and a second set of tray sizes to hold in stores. The usual rule of thumb: **swage only when the two sections differ by roughly 15–20% in diameter**, and build straight below that, because under about 15% the transition costs more than the plate it saves. Judge it on DIAMETER, not on area — 20% in diameter is already 44% in cross-section. The 8% gap in the case above is comfortably inside the band, so that tower is built straight at 1.32 m, and Choupo says so without deciding for you: it publishes both section diameters and their difference and prices no transition, because it has no correlation for one.

## 3.3 Reflux and FUG sizing

Shortcut design (Fenske-Underwood-Gilliland, `shortcut01_benzene_toluene`): Fenske gives N_min at total reflux, Underwood gives R_min, Gilliland interpolates. **Heuristic R = 1.1–1.5 · R_min** — the cost optimum, because below 1.1 N (and column height) blows up, above 1.5 reboiler/condenser duty and diameter grow with little stage saving. **N ≈ 2 · N_min** at that reflux. Feed near the stage matching its composition. Validate the shortcut against the rigorous MESH run (`column02_simultaneous`).

## 3.4 Sequencing multicomponent splits

Direct sequence (lights overhead first) dominates. Heuristics, in priority: (1) remove **corrosive/hazardous** components early; (2) do the **most-plentiful** product split early; (3) save the **hardest split** ($\alpha < 1.2$) and the **highest-purity** split for last, alone; (4) favour **near-50/50** splits; (5) "lightest-first" when relative volatilities are ordered. Each saves reboiler duty by not re-boiling already-separated material.

## 3.5 Azeotropes

When $\alpha \to 1$ or an azeotrope blocks the split, ordinary distillation cannot cross it. Wang-Henke (bubble-point) goes **unstable near azeotropes — switch to `method simultaneous;`** (rigorous MESH Newton, `column03_azeotrope_mesh`). Options: pressure-swing (if the azeotrope moves $\geq$5 mol% over the P range), entrainer/extractive, or hybrid with the membrane unit. Set $\Delta$T_min $\geq$ 10 °C on the reboiler/condenser to keep utility cost sane.

# 4 Absorption, stripping & gas treating

Absorption transfers a gas-phase solute into a liquid solvent; stripping is the reverse. Reach for it instead of distillation when the species is DILUTE in a gas, or when no boil-up is available — you contact, you do not boil. **Hypothesis to run:** if the solute is < ~10 mol% of a gas and a solvent gives a low slope m = y/x, absorption is far cheaper than condensing and distilling the whole stream.

| Situation | Why absorption/stripping wins |
|---|---|
| Dilute solute in a large gas stream | no need to condense/boil the bulk inert |
| Acid-gas removal (CO2, H2S) | selective chemical solvent (amine) near ambient T |
| Solvent / VOC recovery from a vent | recover below its dew point without refrigeration |
| Heat-sensitive solute | ambient contacting, no reboiler |

**The absorption factor and Kremser.** The master group is $\mathbf{A = L/(m \cdot V)}$ (liquid rate / equilibrium-slope × gas rate); stripping uses $\mathbf{S = 1/A = mV/L}$. Design $\mathbf{A \approx 1.2–2.0}$: at A < 1 you can never reach a fixed recovery no matter how tall the tower; at A > 2 you waste solvent and the recovery curve flattens. The **Kremser equation** turns A and the target recovery into ideal stages — ~99% recovery at A = 1.4 needs roughly **6–10 ideal stages**.

**Minimum solvent.** The minimum L/V is where the operating line touches the equilibrium line; design at **L = 1.2–1.5 × L_min** — like reflux, less is infeasible and much more just inflates the downstream stripping duty. Always judge the absorber+stripper PAIR, never the absorber alone.

| Internals | Pick when | Numbers |
|---|---|---|
| Random / structured packing | corrosive, foaming, low ΔP, small diameter (< ~0.6 m) | HETP 0.3–0.6 m (structured), 0.5–1 m (random) |
| Trays | large diameter, high liquid load, side-draws, fouling | 0.3–0.6 m spacing, 60–80% stage efficiency |

Quote packed height as **HTU × NTU** (HTU ~0.3–1 m); run the gas at **60–80% of flooding** (the same F-factor/superficial-velocity idea as distillation). **Gas treating:** for CO2/H2S use a chemical solvent (MEA/MDEA, 15–50 wt%) — the reaction boosts capacity at low partial pressure, but regeneration costs **~1–4 MJ per kg CO2** and dominates the operating cost, so solvent choice is really a regeneration-energy decision. Cold + high-P favours absorption; hot + low-P favours stripping — the same column run in reverse.

# 5 Liquid-liquid extraction

Extraction (LLE) separates by *chemical affinity* to a second liquid phase, not by volatility — so it wins exactly where distillation struggles. **Hypothesis to run:** take a feed and check whether the relative volatility $\alpha$ and the solvent distribution coefficient K point the same way; if $\alpha \to 1$ but K is large, LLE is the cheaper route.

**When LLE beats distillation (the four classic triggers):**

| Trigger | Distillation symptom | Reach for LLE when |
|---|---|---|
| Close-boiling | $\alpha < 1.05$–$1.10 \to$ 80+ trays, high reflux | a solvent gives K $\geq$ 5–10 with selectivity $\beta > 20$ |
| Azeotrope | pinch, can't cross | solute partitions selectively (aromatics/aliphatics, acetic acid/water) |
| Heat-sensitive | thermal degradation > 100–150 °C | ambient-to-40 °C extraction protects the product (antibiotics, vitamins) |
| Dilute aqueous | boil-up energy $\propto$ whole stream | solute < 5–10 wt% and K · (S/F) $\gtrsim$ 5 (metals, phenol, caprolactam) |

The catch: LLE almost always needs a downstream distillation to *recover the solvent*, so judge the **combined** train, not the extractor alone.

**Solvent selection** — rank candidates on four numbers:

- **Distribution coefficient $\mathbf{K = y/x}$** (solute in solvent / in raffinate). Want K $\gtrsim$ 5–10; below ~1 the solvent flow balloons.
- **Selectivity $\beta$ = K_solute/K_carrier**, the LLE analogue of relative volatility. $\beta > 1$ is mandatory; $\beta >$ 20–50 lets you reach high purity in few stages. $\beta \to 1$ is the LLE "azeotrope."
- **Recoverability**: a 10–30 °C boiling-point gap (or a density/solubility swing) between solvent and solute so the recovery still is cheap.
- **Density difference $\Delta\rho \geq$ 50–150 kg/m$^3$** and **moderate interfacial tension $\gamma \approx$ 5–30 mN/m** for clean settling — too low $\gamma$ emulsifies, too high needs intense agitation.

**Number of stages.** Use the Kremser equation with the extraction factor $\mathbf{E = K \cdot (S/F)}$. Design for **E ≈ 1.3–2.0**: at E < 1 you can never reach high recovery regardless of stages; at E > 3 you are wasting solvent. For 99% solute recovery at E = 1.5, Kremser gives roughly **8–12 ideal stages**; raising E to 2 cuts it to ~5–7. Stage efficiencies are low (mixer-settler 75–95%, columns 20–40% per "stage"), so HETS dominates real height.

**Solvent-to-feed ratio (S/F).** Set by E and K: **S/F = E/K**. With K = 5 and E = 1.5, S/F ≈ 0.3; with a weak K = 1, the same E forces S/F ≈ 1.5 — and a big solvent-recovery column. Stay in **S/F ≈ 0.2–2**; outside it the economics flip back toward distillation.

**Equipment selection** by throughput and settling tendency:

| Contactor | Throughput | Stages (typ.) | Use when |
|---|---|---|---|
| Mixer-settler | low–very high | 1 per unit, trains of 3–6 | slow-settling, high efficiency, many stages, easy scale-up (footprint large) |
| Sieve-tray / packed column | medium–high | 5–10 | good $\Delta\rho$ & $\gamma$, few–moderate stages, low cost |
| RDC / pulsed / Karr (agitated) | medium | 8–15 | low $\gamma$, emulsifying systems, tall but compact footprint |
| Centrifugal (Podbielniak) | low–medium | 3–7 | tiny $\Delta\rho$, short residence (antibiotics), high cost |

**Why:** agitation buys mass transfer but fights settling — the design tension is always *contact intensity vs. phase disengagement*. In Choupo, sweep S/F and stage count on an absorber/extractor case and watch the Kremser recovery curve flatten past E ≈ 2 before committing solvent.

# 6 Membranes & aqueous/advanced separations

Membranes win where the separation is **isothermal and low-grade-energy-only**: aqueous streams, heat-sensitive or non-volatile solutes, and modest concentration ratios. The rule of thumb: **if the relative volatility is favourable and the solvent must be boiled anyway, distillation/evaporation wins; if you only need to *concentrate* an aqueous solution or strip ions/macromolecules at near-ambient T, a pressure-driven membrane is 5-20× cheaper in energy.** RO desalination runs ~3-4 kWh/m$^3$ vs ~10-15 kWh/m$^3$ (with vapour recompression) for thermal — because you pay only to overcome osmotic pressure (~0.78 bar per 1000 mg/L NaCl), not the latent heat of water.

## 6.1 Selecting the membrane class

| Class | Pore / MWCO | ΔP (bar) | Flux (LMH) | Rejects | Use when |
|---|---|---|---|---|---|
| MF | 0.1-10 µm | 0.5-2 | 50-1000 | suspended solids, bacteria | clarification, cell harvest, RO pretreatment |
| UF | 1-500 kDa | 1-5 | 30-150 | macromolecules, colloids, virus | protein concentration/-diafiltration, oily water |
| NF | 200-1000 Da | 5-25 | 15-60 | divalents, sugars, dyes; passes monovalents | softening, sugar/whey, colour removal |
| RO | <200 Da | 15-70 (BWRO 10-25, SWRO 55-70) | 12-30 | nearly all ions | desalination, final dewatering, ZLD |

Driving pressure scales with what you reject: as MWCO falls, osmotic back-pressure and fouling resistance rise, so flux drops and ΔP climbs. NF is the "selective" sweet spot — it passes NaCl (low osmotic penalty) while holding $SO_4^{2-}$/$Ca^{2+}$ (*membrane02_NF_sugar*).

## 6.2 Recovery vs scaling — the master trade-off

Higher single-pass recovery $r$ shrinks capital and brine volume, but concentrates sparingly-soluble salts at the wall by the **concentration factor CF = 1/(1−r)**. At r = 0.75, CF = 4; at r = 0.90, CF = 10. Cap recovery so the **scaling saturation index stays below the threshold**: keep **LSI < 0 (or < +1.8 with antiscalant)** for $CaCO_3$ and **S&DSI / IAP-Ksp ratio < 0.8** for $CaSO_4$, $BaSO_4$, $SiO_2$ (<120 mg/L). This is exactly the recovery-vs-SI sweep in *optim04_membrane_recovery_scaling* and *membrane07_scaling_si / membrane08_softened_scaling* (softening lifts the ceiling). Typical r: **SWRO 35-50% per pass, BWRO 75-85%, NF 80-90%** with antiscalant.

## 6.3 Crossflow, flux and polarisation

Concentration polarisation multiplies wall concentration by **CP = exp(Jw/k)**; keep it **< 1.3-1.5**. Push the mass-transfer coefficient $k$ up with crossflow: spiral-wound feed-channel **superficial velocity 0.1-0.4 m/s** (Re 100-1000, spacer-filled), tubular/UF **2-6 m/s**. Design flux conservatively below the **critical/limiting flux**: **SWRO 12-17 LMH, BWRO 18-27, NF 15-40, UF 30-100**. Over-fluxing collapses $k$ and locks in irreversible fouling. *membrane03_concentration_polarization* and *membrane04_spacer_schock_miquel* let you watch CP rise as velocity drops.

## 6.4 Staging, trains, pretreatment

Spiral-wound elements are 8"×40", ~37 m$^2$ each, 6-8 per pressure vessel. To hold velocity as permeate is removed, taper the **array (e.g. 2:1 → 6 then 3 vessels)**; add a **second pass** on permeate when you need <500 mg/L product. Run a tapered train in *membrane05_train*. Budget **per-vessel ΔP 1-3 bar** (replace at 15% rise). Always pretreat: MF/UF or coagulation to **$SDI_{15}$ < 3**, antiscalant, and cartridge filtration — fouling, not membrane area, sets RO lifetime.

# 7 Solids processing & particle technology

Solids units are governed by the **particle**, not the molecule: crystal habit, size distribution and mechanical strength dictate every downstream choice. Always carry a target median size (d50) and span as design specs.

## 7.1 Crystallisation route — pick by the solubility curve

The route follows how solubility varies with the achievable handle. Generate supersaturation (S = c/c*) gently: hold the **metastable zone width**, typically $\Delta c/c \approx$ *0.01–0.05** (S ≈ 1.01–1.05), so growth dominates nucleation and you get coarse, filterable crystals. Push S past ~1.1 and you nucleate a fine, hard-to-filter slurry.

| Route | Use when | Driving handle | Typical yield knob | Watch |
|---|---|---|---|---|
| Cooling | dc*/dT steep (>1 wt%/10 °C, e.g. $KNO_3$, KCl) | ΔT, 0.1–1 °C/min ramp | ΔT over solubility curve | wall encrustation; keep ΔT_wall<5–10 °C |
| Evaporative | flat solubility (NaCl, ~0.07 wt%/°C) | solvent boil-off | evaporation rate | scaling, foaming; vacuum to cut T |
| Antisolvent | high solubility, T-insensitive; heat-sensitive API | miscible non-solvent addition | solvent:antisolvent ratio | local high-S → fines; add slowly, well-mixed |
| Reactive/precip. | sparingly soluble product | reagent feed rate | stoichiometric excess | very fast nucleation → nanoparticles |

MSMPR sizing: mean residence $\tau$ = **1–4 h**; the population balance gives d43 ∝ G$\tau$, so longer $\tau \Rightarrow$ bigger crystals at fixed growth rate G (~$10^{-8}$–$10^{-7}$ m/s). See `crystalliser02_msmpr` (population balance), `crystalliser06_nacl_antisolvent` and `crystalliser07_nacl_antisolvent_cooled` for combined routes.

## 7.2 Solid–liquid separation — filtration vs centrifugation

Pick by particle size and solids fraction. Vacuum/pressure filtration suits **d50 > 10–20 µm**; below ~5 µm cake resistance explodes (specific cake resistance $\alpha$ rises) and you switch to centrifugation or add filter aid. Sedimenting centrifuges handle $\Delta\rho >$ **50 kg/m³** and feeds too fine or too compressible to filter; decanters take 5–40 wt% solids, disc-stacks <5 wt%. Rule: filter when cake washing/dryness matters and particles are coarse; centrifuge when fines, fragile crystals, or fast throughput dominate.

## 7.3 Dryer selection — by feed state and particle size

| Dryer | Feed | Product d50 | Residence | Notes |
|---|---|---|---|---|
| Spray | pumpable slurry/solution (<40% solids) | 10–200 µm | 5–30 s | hollow spheres; high T_gas but short → heat-sensitive OK. `sprayDryer01_sugar` |
| Fluid-bed | free-flowing granules | 50 µm–5 mm | 10–60 min | narrow size range; needs U above U_mf |
| Drum | viscous paste/slurry | flakes | 5–30 s | conductive, no carrier gas |
| Tray/batch | small lots, fragile | any | 2–24 h | cheap, labour-heavy |

`solidDryer01_sugar` shows a through-circulation solid dryer; `sprayDryer02_residence_sweep` sweeps $\tau$ vs moisture.

## 7.4 Gas–solid separation & fluidisation velocities

Cyclones are the workhorse for **d > 5–10 µm**; below that, efficiency falls and you add a bag filter (`bagFilter01_dust`). Design the **inlet velocity to 15–25 m/s** (>30 m/s re-entrains/erodes; <10 m/s drops cut size); body-to-inlet ΔP ≈ 0.5–2 kPa, 4–8 inlet velocity heads. See `cyclone01_dust_removal`, `cyclone02_leith_licht`.

Superficial-velocity targets: **fluid-bed operate at 2–4×U_mf** (above minimum fluidisation, below terminal U_t to avoid carryover); **pneumatic conveying dilute-phase 15–25 m/s**; settling-chamber gas <3 m/s. Always check the actual U_mf and U_t from particle d and $\Delta\rho$ rather than trusting the ratio blindly — that is the glass-box hypothesis to run.

# 8 Evaporation & multiple-effect

Evaporation concentrates a solution by boiling off solvent (usually water). The whole game is **steam economy** — kg water evaporated per kg live steam — and the way to raise it is to reuse each effect's vapour as the next effect's heating steam. **Hypothesis to run:** sweep the number of effects on Choupo's triple-effect case and watch economy climb while area and capital grow.

| Effects | Steam economy | Pick when |
|---|---|---|
| 1 | 0.8–0.95 | small duty, cheap steam, scaling/fouling service |
| 2–3 | 1.7–2.6 | medium duty — the common industrial choice |
| 4–6 | 3.5–5.0 | large water removal, expensive steam (sugar, paper, desal) |

Each added effect adds roughly **+0.8 kg evaporated per kg steam**. WHY it saturates: the available $\Delta$T (steam T minus the vacuum/condenser T) is **split** across the effects, so each has a smaller driving force and needs more area. Capital $\propto$ effects while the economy gain shrinks — the optimum is usually **2–5 effects**.

| Feed arrangement | Direction | Use when |
|---|---|---|
| Forward | feed with steam | feed near boiling; simplest, no inter-effect pumps |
| Backward | feed counter to steam | cold or viscous feed (the hottest effect handles the thickest, lowest-viscosity liquor) |
| Mixed | hybrid | balance viscosity and economy |

**Boiling-point elevation (BPE):** dissolved solids raise the boiling point above pure water — a few °C when dilute, **15–25 °C** for strong NaOH or brine — eating into the $\Delta$T and capping the last effect (Choupo's NaOH and sugar `evaporator` cases account for it). **Type selection:** falling-film for low-$\Delta$T, heat-sensitive, low-viscosity service (high U); **forced-circulation** (pumped 2–3 m/s) for viscous, scaling, or crystallising liquors; agitated/wiped-film for very viscous. **Vapour recompression** (electric MVR, or TVR with a steam ejector) recycles the vapour's latent heat into the same effect — one MVR effect can match a 4–6-effect train when electricity is cheap relative to steam.

# 9 Gas-liquid separators & process drums

Every flash, every reflux accumulator, every compressor suction line needs a vessel that lets vapour and liquid part ways. The physics is a settling race: a liquid droplet falls under gravity while the rising vapour drags it up. Size the vessel so the vapour goes slow enough that droplets above a cut size (~150 µm bare, ~10 µm with a mesh pad) rain out instead of carrying over.

**The Souders-Brown anchor.** The maximum allowable vapour velocity is `v_max = K·sqrt((ρ_L − ρ_V)/ρ_V)`. The square-root group is just the terminal-settling balance (gravity vs. drag); `K` (m/s) bundles droplet size, drag coefficient and a safety margin. The cross-section follows from `A = Q_V/v_max`, so K sets the diameter directly — get it wrong and you either spray liquid downstream or buy steel you didn't need.

| K-factor (m/s) | Service / condition | Why |
|---|---|---|
| 0.03–0.06 | No demister, bare gravity drum | Only ~150 µm+ drops settle; derate hard |
| 0.06–0.07 | Vacuum / low P (< 1 bar) | Low ρ_V makes the group large; cap velocity |
| 0.08–0.11 | Mesh demister pad, clean service | Pad coalesces 5–10 µm drops; run faster |
| ×0.7–0.8 | Foaming / fouling / glycol-amine | Foam re-entrains; cut K by 20–30 % |
| ×0.9 per | 0.5–1.0 m of disengagement below pad | Short disengaging height steals settling time |

Use the **vapour density at operating T,P**, not standard — a compressor suction drum at 5 bar has ~5× the ρ_V of atmospheric, shrinking `v_max` by ~2.2× and demanding more area than newcomers expect.

**Vertical vs. horizontal.** Choose by vapour-to-liquid loading and footprint.

| Pick | When | Why |
|---|---|---|
| Vertical | High vapour / low liquid; compressor **suction & K.O. drums**; tight plot | Settling distance = height is cheap to add; small liquid hold |
| Horizontal | High liquid load, large surge/holdup, **reflux accumulators**, slug catchers, 2 liquid phases | Big interfacial area per volume; long L for L-L decant; lower vessel |

For horizontal drums the disengagement area is `L·(D minus liquid level)`, so set the vapour space to ~40–50 % of the cross-section and check `v_max` against that reduced area.

**Geometry and holdup.** Aim for **L/D ≈ 3–5** (below 2 the heads dominate cost; above 6 it gets whippy and hard to support). Liquid **residence time 5–15 min** of working volume sets the length/level: ~5 min for a clean reflux drum feeding a good level controller, 10–15 min where downstream is a fired heater or compressor you must never starve or slug. Allow **vapour disengagement height ≈ 0.3 · D or 0.45 m (whichever larger)** between the high liquid level and the inlet/demister, plus ~0.15 m mesh pad. Inlet nozzle momentum $\rho \cdot v^2$ should stay **< 2250 kg/m · s²** (< ~1000 if no inlet device) or the jet shatters liquid faster than the pad can catch it.

**Glass-box hypotheses to run.** In Choupo a flash drum is just an `IsothermalFlash` at (T,P); the vapour and liquid rates it returns are your `Q_V` and holdup feed. Try `tutorials/steady/flash/flash01_benzene_toluene`: take the V and L rates, pick K = 0.08 (pad) vs. 0.04 (bare), and watch the required diameter roughly double when you drop the demister and halve K. Then re-flash at 5 bar and confirm the higher ρ_V forces a smaller `v_max` and a fatter drum — the Souders-Brown sqrt made visible.

# 10 Heat exchangers — type selection & sizing

Pick the *type* first — it sets cost, U, and ΔP before you ever size area. The driving question is the **overall coefficient U**: a gas film (h ≈ 30–300 W/m$^2$K) starves U, so the cheap-per-m$^2$ geometry wins; a clean liquid–liquid duty (h ≈ 1000–5000) lets you chase compactness and low ΔT_min.

## 10.1 Type-selection table

| Type | Best service | U (W/m$^2$K) | ΔP budget | T/P limit | Why |
|---|---|---|---|---|---|
| Shell-and-tube (TEMA) | Any phase, high P/T, fouling | 300–1200 (liq-liq), 30–300 (gas) | 0.3–0.7 bar | <40 bar, <600 °C | Rugged, mechanically cleanable, ASME default |
| Plate-and-frame (gasketed) | Clean liquid–liquid, close approach | 2000–7000 | 0.3–1 bar | <25 bar, <180 °C | Huge area/volume, ΔT_min ≈ 1–5 °C; gaskets limit T |
| Air-cooled (fin-fan) | Hot streams, no cooling water | 15–60 (bare-tube basis) | gas side ~0.005 bar | tube-side any | Saves water; approach to ambient ≥ 10–15 °C |
| Double-pipe | Small duty (<20 m$^2$), high P, dirty | 300–1000 | flexible | very high P | Cheap, true counter-current (F=1) |
| Spiral | Slurries, fouling, viscous | 700–2500 | self-scouring | <20 bar | Single channel resists plugging |
| Printed-circuit (PCHE) | Very high P, compact (LNG, $H_2$) | 1000–5000 | tight | <600 bar | Diffusion-bonded; near-zero fouling tolerance |

## 10.2 Gas-phase service

Shell-and-tube *still* makes sense for gas — but put the **gas on the shell side** with the gas film controlling, accept U ≈ 30–300, and expect large area. For sensible gas cooling against ambient, **air-cooled** usually beats shell-and-tube + cooling-water tower on TAC once duty > ~0.5 MW. For gas–gas (e.g. feed/effluent), a plate-fin or PCHE recovers heat that a shell-and-tube cannot economically reach.

## 10.3 Allocation & velocities

Put on the **tube side**: the dirtier, higher-pressure, more-corrosive, or lower-flow stream (easier to clean, cheaper to alloy small tubes).

- Tube-side liquid: **1–2.5 m/s** (>1 m/s suppresses fouling; <3 to limit erosion; <1.5 for SS to avoid erosion-corrosion).
- Shell-side liquid (cross-flow): **0.3–1 m/s**.
- Gas, tube or shell: **10–30 m/s** (process gas), up to 30 m/s for low-density vapour; chase the gas film, watch ΔP.
- Condensing vapour: keep below ~50% of erosion velocity; flooding governs.

## 10.4 Phase-change service

- **Condensers**: prefer shell-side condensation (vapour on shell, coolant in tubes); U ≈ 800–1500 for organics, 1500–4000 with steam. Total condenser → ΔT driven; allow vapour velocity de-rating.
- **Reboilers**: kettle (U ≈ 800–1200) for wide turndown and dirty bottoms; thermosiphon (U ≈ 1000–1500) cheaper but needs ΔT > a few °C and stable circulation. Cap heat flux below the **critical ~30–40 kW/m$^2$** to dodge film boiling. See Choupo `tutorials/steady/distillation` (condenser/reboiler duties) and `tutorials/steady/heat`.

## 10.5 $\Delta$T_min, LMTD correction, fouling

- **$\Delta$T_min**: 10–20 °C for hot utility/gas, 5–10 °C liquid–liquid, 3–5 °C refrigeration (energy vs area trade-off — verify via Choupo pinch composite curves).
- **LMTD correction F**: keep **$F > 0.8$**; $F < 0.75$ means add shell passes (2-4, 4-8) or go pure counter-current.
- **Fouling**: add $R_f \approx 0.0002$ (clean liquid) to 0.0005–0.001 $m^2K/W$ (cooling water, fouling organics); this can dominate 1/U and is why a glass-box run should report the clean-vs-fouled area split.

# 11 Heat integration & pinch analysis

Heat-exchanger SELECTION sizes one match; pinch analysis decides which streams should match AT ALL and sets the energy target before any network is drawn. It is the highest-leverage utility-saving tool — typically **20–30% off the energy bill** versus a naive design. **Hypothesis to run:** build the composite curves in Choupo's Pinch view and read the targets before placing a single exchanger.

**Composite curves and the pinch.** Combine all hot streams into one composite (T vs $\Sigma Cp \cdot \Delta T$) and all cold streams into another; slide them together until the closest vertical approach equals **$\Delta T_min$**. That point is the **PINCH**; the overshoots are the minimum hot and cold utilities (the **MER targets**), fixed before design.

| Service | $\Delta T_min$ | Why |
|---|---|---|
| Liquid–liquid | 10 °C | default; balanced area vs energy |
| Process with a gas stream | 20–40 °C | low U → area explodes at small $\Delta T$ |
| Refrigerated / cryogenic | 3–5 °C | cold is expensive; pay area to save it |
| Near a furnace / high-grade heat | 20–60 °C | high-grade heat is cheap relative to area |

Supertargeting plots total cost vs $\Delta T_min$ and picks the flat minimum (often **8–15 °C** for fluids).

**The three golden rules** — break any and you spend MORE than the target:

1. **No heat across the pinch** — a cross-pinch exchanger adds the same amount to BOTH utility bills.
2. **No hot utility below the pinch** — below it there is a heat surplus; adding heat just needs more cooling.
3. **No cold utility above the pinch** — above it there is a deficit; cooling there just needs more heating.

**The grand composite curve (GCC)** plots surplus/deficit vs shifted T: read it to place utilities at the RIGHT level — pick the cheapest steam/refrigerant the pockets allow, spot an intermediate utility (cheaper MP steam, or raising steam from recovered heat), and see where a fired heater or molten salt is GENUINELY needed versus where recovered heat suffices.

# 12 Fired heaters & furnaces

Reach for a fired heater when the duty is large (>3 MW) or the process temperature is above what your hottest utility can deliver. HP steam tops out near 250 C and 40 bar; HiTec molten salt reaches ~535 C; Dowtherm A ~400 C. Above that — crude-unit charge heaters (350-400 C), reformer feed, vacuum-tower heaters, reboilers on high-boiling bottoms — you must burn fuel directly, because the WHY is simple: a flame radiates at 1500-1900 C, so it can drive heat across a tube wall that no recirculated fluid can. Below ~535 C and a few MW, molten salt or fired-salt loops usually win on safety and turndown; don't fire directly if a utility reaches the target.

**Two heat-transfer zones, by mechanism.** The RADIANT section (firebox) absorbs 60-75% of the duty by flame radiation; tube-wall view factor and flame emissivity dominate, so the design knob is *flux*, not area. The CONVECTION section above it scavenges 25-40% of the duty from 700-900 C flue gas by convection over finned/studded tubes, dropping stack gas to 150-250 C. The split exists because radiant flux is capped: push too hard and you coke the film.

| Heater type | Duty range (MW) | Typical use | Radiant flux (kW/m2) | Why pick it |
|---|---|---|---|---|
| Vertical-cylindrical | 0.5-20 | Small/medium, plot-limited | 25-35 | Cheapest, smallest footprint, uniform firing |
| Box (cabin), horizontal tubes | 10-100 | Crude/vacuum charge, reboil | 30-40 | Big duty, even flux, many burners |
| Box, two-fired cell | 50-300+ | Reformers, ethylene cracking | 35-50 (cracking, short residence) | Highest duty, double-fired uniformity |
| Cylindrical helical-coil | 0.5-10 | Hot-oil / salt heaters | 20-30 | Compact, low-fouling clean service |


**Radiant flux — the master rule.** Design average radiant flux 30-40 kW/m2 (some references 25-45). Go higher and the *peak* local flux — typically 1.5-2x the average — drives the tube-wall film over its coking threshold (~430 C for crude oil, lower for residue), laying down coke that insulates, raises tube metal temperature, and shortens runlength. Average flux is therefore a runlength decision, not just an area decision: halving flux can double time-between-decokes.

**Efficiency, excess air, draft.** Thermal efficiency 75-82% bare; 85-92% with an air preheater recovering stack heat. Each 20 C of stack-gas drop is worth ~1% efficiency, and 1% excess-air reduction another ~0.5%. Run 10-15% excess air on gas, 15-25% on oil — enough to complete combustion, not so much you heat nitrogen up the stack. Draft: natural (buoyant stack, simplest, cheap) for small heaters; forced or balanced draft once you add an air preheater (the preheater's pressure drop demands a fan). Keep a slight negative draft (-2 to -5 mm H2O) at the arch so flue gas leaks in, not flame out.

**Tube metallurgy sets the limit.** Specify tubes by metal temperature = process T + flux-driven $\Delta$T (50-100 C) + fouling margin: carbon steel to ~400 C, 1.25Cr-0.5Mo to ~550 C, 9Cr-1Mo to ~650 C, HK/HP cast austenitics to 1000 C+ for reformers. NOx scales with flame temperature — low-NOx burners (staged air/fuel, flue-gas recirculation) cut it to 30-50 ppm but lengthen the flame, so check flame-to-tube clearance. Hypothesis to run in Choupo: model the heater as a W-equivalent duty against a fired-fuel stream, then sweep excess air and stack temperature to watch efficiency and fuel firing rate move — confirm each 20 C stack drop buys ~1%.

**Why the tubes do not melt at a 1900 °C flame.** Students reasonably ask how steel survives a flame far above its melting point. The answer: **the tube never sees the flame temperature.** The process fluid races through the inside and carries the heat away continuously, so the tube wall sits at roughly **process-T plus a small film rise** — typically **400–600 °C metal**, not 1900 °C. The radiant flux (30–40 kW/m$^2$) is balanced by the inside film: the film rise = flux / h_inside is only **30–120 °C** for a fast liquid (h ≈ 1000–3000 W/m$^2$K). The flame's heat is real, but it is removed as fast as it arrives.

Two lessons: (1) the metallurgy is specified for the **tube-metal temperature**, not the flame (carbon steel ~400 °C, 9Cr-1Mo ~650 °C, cast HK/HP austenitics to ~1000 °C); the firebox walls are protected by **refractory** lining, not bare metal. (2) If the process flow STOPS or drops (pump trip, coking), the heat is no longer removed and the tube temperature runs away in **seconds** — the tube ruptures. That is why a fired heater carries a **low-flow trip** and the flux is capped: a hot tube with no flow is the classic furnace failure.

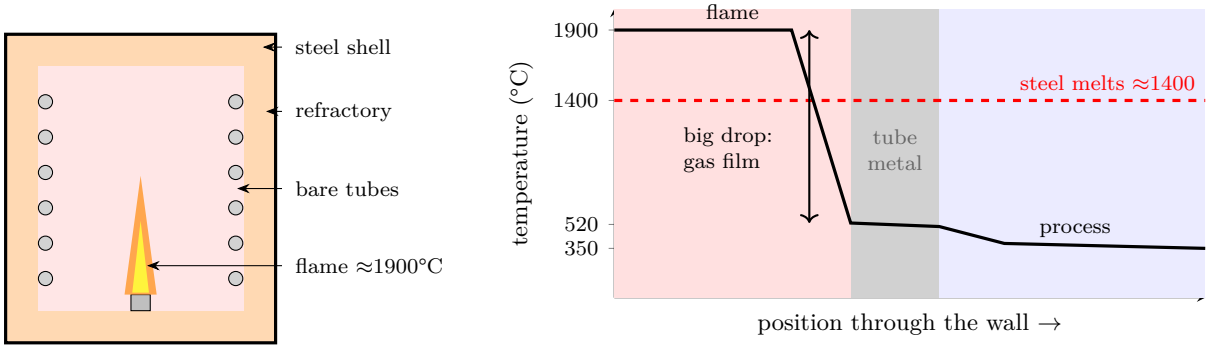


(a) firebox cross-section

(b) temperature profile

**Figure 1:** Why furnace tubes survive a 1900 °C flame. (a) The radiant tubes hang BARE along the firebox walls, exposed to the flame; the refractory lines the WALLS (protecting the steel shell and re-radiating heat), not the tubes. (b) Almost the whole temperature drop falls across the outer gas film, so the tube metal sits near 520 °C – far below its melting point – because the process fluid inside removes the heat as fast as it arrives. Lose the flow and the metal races toward the flame temperature.

# 13 Compressors, expanders & pressure change

Gas pressure change is governed by *volumetric flow at suction* and *required pressure ratio* `r = P_out/P_in` — not mass flow. Because gas density falls as you compress, machine choice tracks **actual inlet $m^3/h$** and `r`, then degrades to the next type as flow rises or `r` falls. Treat every heuristic below as a hypothesis: run the case in Choupo, read `W_shaft` and discharge T, and check you stayed inside the box.

## 13.1 TYPE SELECTION

| Type | Inlet flow (actual $m^3/h$) | r per body | Typical $\eta$_poly | Why / physics |
|---|---|---|---|---|
| Fan / blower | $10^3$–$10^6$ | <1.1 (fan), <2 (blower) | 0.55–0.75 | Low Δp; cheap; r limited before it becomes a "compressor" |
| Centrifugal | 1,700–340,000 | 1.5–3 per wheel, ~10 multi-stage | 0.75–0.85 | Dynamic; smooth, oil-free, high flow; surge limits turndown |
| Axial | >65,000 | 1.2–1.5 per stage | 0.80–0.88 | Highest flow, best $\eta$; narrow operating window |
| Reciprocating | <16,000 | up to 5–10 per stage | 0.75–0.90 | Positive-displacement; best for high r, low flow, high P (>200 bar) |
| Rotary screw | <5,000 | 3–4 (up to ~8 oil-flooded) | 0.70–0.78 | Robust, dirty/wet gas, modest r; oil carryover |

## 13.2 Stages, ratio per stage & intercooling

Split `r` across N stages with **equal ratio per stage** `r_stage = r^(1/N)`, kept to ~**2–4** (cap ~4 for recips, ~3 for centrifugals). Equal ratios minimise total shaft work and equalise per-stage discharge T. The driver of staging is the **discharge-temperature limit**: keep `T_out` $\lesssim$ `150-175 °C` (lube-oil coking, gasket and rod-packing life; ~200 °C absolute ceiling). Adiabatic `T_out = T_in·r_stage^((γ-1)/(γη))`, so a single jump from 1→16 bar on a $\gamma \approx 1.3$ gas blows past 250 °C — unacceptable. **Intercool back to ~40 °C** between stages: this cuts the next stage's volumetric work (you compress colder, denser gas) and typically saves 10–20 % total power for `r > ~5`. Pair an intercooler with a knock-out drum — cooling condenses water/heavy ends that would erode the next stage. In Choupo, model each stage as a `compressor` (W_shaft + $\eta$) feeding a cooler + flash; cooling-water or chilled-water utilities by T-level supply the intercooler duty.

## 13.3 Efficiency, surge & turndown

Quote **polytropic** efficiency (0.75–0.85 centrifugal, up to 0.88 axial) for design — it is path-independent and additive across stages, whereas isentropic $\eta$ drifts with `r`. Multiply by ~0.95 mechanical to get brake power. Dynamic machines **surge** at ~60–70 % of design flow (flow reversal, violent oscillation), so usable **turndown is only to ~70 %** without recycle/anti-surge; recips turn down to ~25 % via clearance pockets or speed. Size with ~10 % flow margin above the surge line.

## 13.4 When an expander pays back

If a hot, high-P stream must be let down (≥3–4 bar drop, ≥a few hundred kW recoverable), replace the throttle valve with a **turbo-expander** (model as `turbine`, W_shaft + $\eta \approx 0.80$–$0.85$). Recovered shaft work directly drives a generator or a companion compressor (common in refrigeration, FCC flue-gas, cryogenic $N_2$). The trade-off: expansion chills the stream (Joule–Thomson + work extraction), so verify you don't cross a dew/freeze point — a glass-box run shows the outlet T before you commit hardware.

# 14 Drivers: electric motors, steam & gas turbines

A pump or compressor is only as available as the machine that turns it. The *driver* is a separate selection from the hydraulic/thermodynamic duty: pick it by shaft power, by what HP steam or fuel gas the plant already has, and by what must keep running when the grid trips. In Choupo the rotating unit carries `W_shaft + eta`; the driver question is *where that shaft power comes from* and at what reliability.

**Rule — electric motor is the default below ~0.5–1 MW.** Standard TEFC induction motors are cheap, compact, ~93–97% efficient, and need no auxiliaries. WHY the ceiling: above ~1 MW you move to medium-voltage (4.16 kV+) switchgear and the incremental $/kWofmotor + variable - frequencydrive(VFD)climbs, whileasteamturbinethat * also * letsHPsteamdowntoausefullevelstartstowinoncombinedsteam - balanceeconomics.Hypothesistorun$ : $sizethemotorat$ 110 − −1250.06–0.10/kWh.

**Rule — steam turbine when HP steam exists, for very large duty, or as a trip-proof spare.** A back-pressure turbine taking HP→MP/LP steam "pays" for shaft work by letting steam down a pressure level you needed anyway — marginal cost is only the lost power-generation credit, so isentropic efficiency of 65–80% (small) to ~85% (large) is acceptable. A condensing turbine (exhaust to ~0.1 bar) maximises work but dumps ~2 MJ/kWh of latent heat to cooling water. Critically, a steam turbine keeps spinning on a grid blackout, so the boiler-feedwater pump and reactor-quench pump are classically *steam-turbine-driven spares* on a motor-driven main (or vice-versa).

**Rule — gas turbine only for very large power + heat (combined heat-and-power).** Below ~5 MW the heat-rate and capital rarely justify it; above ~10–15 MW a gas turbine with a heat-recovery steam generator delivers shaft power *and* the HP steam header — the cogeneration case Choupo models with steam utilities by T-level.

| Driver | Sweet-spot power | Efficiency | Pick it WHEN | Watch-out |
|---|---|---|---|---|
| Electric motor (fixed-speed) | < 0.5 MW | 93–97% | small/medium duty, throttled or constant flow | dumps control margin across a valve |
| Electric motor + VFD | 0.1–5 MW | 90–95% (incl. drive) | flow varies > ±20% | drive cost, harmonics, ~3–5% drive loss |
| Back-pressure steam turbine | 0.5–15 MW | 65–85% isentropic | HP steam available, want MP/LP let-down | power tied to steam demand |
| Condensing steam turbine | 1–30 MW | 70–85% isentropic | large duty, run-on-trip spare | condenser + cooling-water latent load |
| Gas turbine (CHP) | > 10 MW | 30–40% (≈80% w/ HRSG) | huge power + process steam | fuel-gas spec, NOx, hot-day derate |

**Rule — variable speed beats throttling when flow turndown exceeds ~±20%.** Power scales ~speed$^3$ on a centrifugal machine, so trimming flow by slowing the driver saves far more than burning the surplus head across a control valve. WHY not always: a VFD adds ~3–5% standing loss and capital, so for near-constant flow a fixed-speed motor + control valve is cheaper and simpler.

**Rule — spare to n+1 on critical service.** Install one extra parallel machine (e.g. 3×50% pumps, run 2) so a single failure or maintenance outage does not stop the plant; mix drivers (one motor, one turbine) so a *common-mode* loss — grid or steam — still leaves one runner. Verify by toggling a unit offline and re-running the flowsheet: does the remaining capacity still meet duty?

# 15 Fluid transport, line sizing & hydraulics

Moving fluid costs capital (pipe + driver) and power (friction). Every rule below trades a *bigger pipe / lower velocity* (more steel, less ΔP, less erosion) against a *smaller pipe / higher velocity* (cheap, but pumping power and noise climb as ~$v^2 \cdot {}^8$). Pick the driver by **pressure-ratio first, then flow**.

## 15.1 Driver selection by pressure ratio

| Service | Δp / ratio | Pick | Why (glass-box) |
|---|---|---|---|
| Incompressible liquid | any head | **Pump** (centrifugal <~3500 m, recip/PD for low-flow high-head, viscous, or metering) | $\rho \approx$const → head, not ratio, is the variable |
| Gas, ΔP < 0.03 bar | ratio ≈1.0–1.03 | **Fan** | $\rho$ change negligible, treat as incompressible |
| Gas, 0.03–3 bar | ratio ~1.03–1.3 | **Blower** (one stage) | mild heating, no intercool |
| Gas, ratio > ~1.3 | up to ~3–4/stage | **Compressor** (centrifugal; recip for very high ratio/low flow) | T_out rises with ratio^((γ−1)/γ) → **stage + intercool if total ratio > ~4** |

Multi-stage rule: keep per-stage ratio ≈ (total ratio)^(1/N) so each stage does equal work and discharge T stays below ~150–200 °C (lubricant/material limit). See `tutorials/steady/rotating/compressor01_air` and the multi-stage logic behind `compressorTurbine01_turbo_booster`; pumps in `pump01_water` / `pump02_pressure_spec`.

## 15.2 Recommended superficial velocities

| Line / service | v (m/s) | Note |
|---|---|---|
| Pump **suction** (liquid) | 0.5–1.5 | low to protect NPSH; ΔP_suction is precious |
| Pump **discharge** / process liquid | 1.5–3 (up to ~4.5) | economic optimum; >4 erosion-corrosion risk |
| Liquid, viscous/slurry | 0.5–1.5 | keep below settling; above abrasion limit |
| Gas / vapour, atmospheric–low P | 15–30 | density-limited |
| Gas, high pressure | 10–20 | $\rho$ high → same $\rho v^2$ at lower v |
| Steam (sat./superheat) | 20–40 (to 60) | erosion + wet-steam wire-drawing |
| Two-phase / flashing | 10–25 | avoid slug/annular; check $\rho v^2$ < ~6000 kg/m · $s^2$ |

The economic optimum tracks **constant $\rho v^2$** (kinetic head), which is why dense fluids run slower. A quick screen: **v_econ ≈ 2 m/s liquid, 20 m/s gas**, then verify ΔP in `tutorials/steady/hydraulics/pipe01_water_line`.

## 15.3 Economic pipe diameter & ΔP budget

- Rough optimum: **D_econ ≈ 0.26 · ṁ^0.5 · ρ^−0.37** (m, SI) for turbulent steel — the balance of pipe capital vs pumping power.
- **ΔP budget:** liquid lines **0.2–0.5 bar per 100 m** (≈0.5 kPa/m); gas lines **0.1–0.2 kPa/m**; long pipelines push lower (0.05). Total pump head = static lift + friction + equipment + **control-valve allowance**.
- **Control-valve ΔP:** allocate the *larger* of **20–33 % of dynamic (friction) ΔP** or **~0.7 bar (10 psi)**, so the valve keeps authority at high flow. Too little → loop goes open-loop; too much → wasted head.

## 15.4 NPSH (the pump killer)

Require **NPSH_available − NPSH_required ≥ 0.5–1 m** margin. NPSH_a = (P_suction − P_vap)/ρg + static head − suction friction. Levers: raise the suction vessel, fatten/shorten suction line (low v, see table), subcool, or cut speed. Hot/near-boiling liquids (reboiler bottoms, deaerator) are the classic cavitation traps — design suction generously.

**Always run it:** these are *hypotheses* — size the line, then let Choupo print the actual ΔP, T_out and head so the chosen velocity and driver prove themselves.

# 16 Control valves, pressure letdown & choking

A control valve is a deliberate, adjustable restriction — you spend pressure to gain control. Two questions fix the hardware: which valve body and trim, and whether the drop is so large it CHOKES.

| Valve | Rangeability | Use when |
|---|---|---|
| Globe (single / multi-stage trim) | 20–50:1 | throttling — the default; high ΔP; anti-cavitation / low-noise trim available |
| Ball / segmented | 100–300:1 | high rangeability, slurries, on-off-to-throttle |
| Butterfly | 20–50:1 | large lines, low ΔP, cheap |

Pick the **inherent characteristic** to linearise the loop: **equal-percentage** when most of the system ΔP is elsewhere (the common default — valve gain rises with flow to offset its falling ΔP); **linear** when valve ΔP dominates; **quick-opening** for on-off. Liquid sizing (non-flashing): Q = Cv · sqrt(ΔP/SG); size for ~80% open at max flow and ~20% at min, so the plug never sits on the seat (no control) or wide open (no margin).

**Choking — the answer to "is a big letdown done in one stage?"**

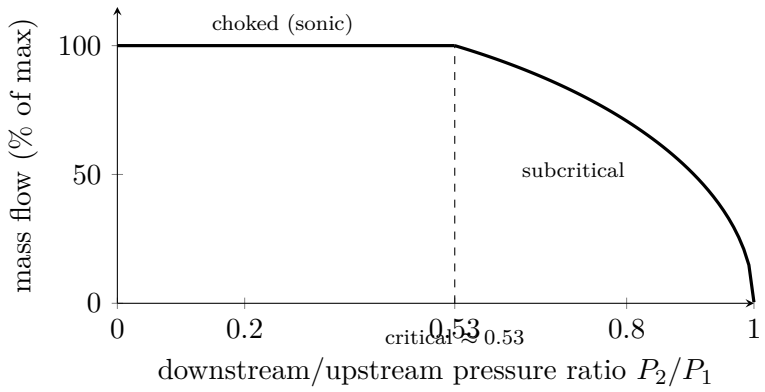



**Figure 2:** Gas flow through a valve vs the pressure ratio. Below the critical ratio (≈ 0.53 for air) the flow chokes – sonic at the vena contracta – and mass flow stops rising as $P_2$ falls; the surplus pressure drop becomes noise and erosion.

For a GAS, flow does NOT keep rising as you drop the downstream pressure. Once the pressure ratio falls below the **critical ratio** — r_c = [2/(γ+1)] raised to [γ/(γ−1)], **≈ 0.5 for most gases** (0.53 for air) — the velocity at the vena contracta reaches the speed of sound and the valve **CHOKES**: mass flow saturates, and the surplus ΔP buys no flow — it is dissipated downstream of the vena contracta in shocks and turbulence, as **noise (often > 110 dB), vibration and erosion**. Discharging 50 bar → 1 atm is a ratio of 0.02, i.e. deeply choked.

So a single standard valve CAN pass the flow, but across a deeply choked drop it screams, erodes its trim and shakes the pipe — which is why a large letdown is usually **staged**:

| Letdown situation | Do this |
|---|---|
| Small gas ΔP, sub-critical | one globe valve |
| Large gas ΔP, choked | multi-stage / labyrinth trim, or valves in series, + a downstream silencer (each stage takes a sub-critical drop) |
| Liquid, $P_2$ and the vena contracta both > Pvap | standard trim |
| Liquid, $P_2$ > Pvap but the vena contracta < Pvap (cavitation) | imploding bubbles pit the trim — anti-cavitation (multi-step) trim, or an orifice downstream to raise the valve's backpressure; harden it |

| Letdown situation | Do this |
|---|---|
| Liquid, $P_2 <$ Pvap (flashing) | the outlet state requires the vapour, so no trim, staging or orifice removes it (an orifice only moves the two-phase crossing to the last device) — harden the trim, use an angle body, put the valve at the receiving vessel or flash on purpose into a drum |

Rule of thumb: stage it when the predicted noise exceeds ~85–90 dBA or the trim-exit velocity is high. The glass-box check: drop the pressure across a `valve` in Choupo and read the outlet T and phase — a flashing liquid shows up as a vapour fraction at the outlet before you ever buy the trim.

# 17 Refrigeration & vacuum systems

Cold and vacuum are *bought power*. Both reject heat or pull gas against the ambient, so the design instinct is the same: **climb only as far down the ladder as the duty forces you, because every rung multiplies the shaft work.**

## 17.1 Refrigeration — pick the warmest level that works

Cooling water (CW) leaves a tower at ~30 C and can chill a process stream to ~35-40 C (10 C approach). The moment you need a process temperature **below ~40 C you have left the free zone** and pay for a compressor. The reason is the reverse-Carnot ceiling: ideal COP = T_cold/(T_hot−T_cold). Reject to 40 C cooling water and the COP collapses as the cold level drops — so shaft work per unit of cooling *rises* the colder you go.

| Cold level needed | Medium | Refrig. T (C) | Ideal COP (reject ~40 C) | Real shaft kW per kW cooling |
|---|---|---|---|---|
| > 40 C | Cooling water | n/a | — | ~0 (pump only) |
| 5-15 C | Chilled water | ~5 | ~6 | 0.15-0.25 (4-7 kW/kW) |
| −40 to 0 C | Ammonia / propane | −35 | ~2.5-3 | 0.30-0.45 (2-3 kW/kW) |
| −70 to −40 C | Propylene | −45 | ~2 | 0.45-0.55 |
| −100 to −70 C | Ethylene (cascade) | −90 | ~1.3 | 0.6-0.9 (~1.3 kW/kW) |
| < −100 C | Ethylene/methane cascade | −150 | < 1 | > 1 |

**Rule of thumb:** budget ~**1 kW shaft per 3-5 kW of cooling** at the −40 to 0 C levels, climbing past ~1 kW/kW below −100 C. A single-stage cycle is fine for a ~40-50 C lift; beyond that, **cascade** (ethylene rejecting into propylene rejecting into CW) because one compressor over a 5:1+ pressure ratio runs hot and inefficient. In Choupo the refrigeration compressor is just a `compressor` (W_shaft + eta) feeding the cold side of an exchanger; the warm reject side is `coolingWater`, so the power penalty appears explicitly in the work ledger — model it, don't assume it.

**When to refrigerate (not before):** a low-temperature condenser to recover a light product (C3/C2 overhead), a cold separator to hit a vapour-loss spec, or a reactor that must run cold for selectivity. Always ask first whether **higher pressure** buys the same condensation at a CW level — compressing the overhead is often cheaper than chilling it.

## 17.2 Vacuum — match the pump to the absolute pressure

Vacuum distillation earns its keep when the bottoms would **thermally crack or polymerise** at the atmospheric boiling point (heat-sensitive: glycols, fatty acids, monomers, vacuum gas oil). Dropping to **0.05-0.1 bar (40-75 mmHg)** can cut boiling points by 80-150 C, keeping the reboiler below the degradation limit and off the high-T utilities (Dowtherm A / fired heaters). Below ~0.1 bar the **column diameter balloons** (vapour density falls, so allowable mass velocity drops); use low-pressure-drop structured packing, not trays.

| Absolute pressure | Technology | Notes / WHY |
|---|---|---|
| 1-0.1 bar | Liquid-ring pump | Rugged, tolerates condensables; service water sets the floor (~30-50 mmHg) |
| 0.1-0.01 bar | Single-stage steam ejector | No moving parts, uses MP/HP steam; cheap but steam-hungry |
| < 0.01 bar (to ~1 mmHg) | 2-3 stage ejectors w/ intercondensers | Stages compound the ratio; condensers cut steam load |
| Clean, deep, dry | Dry screw pump | Electric, no steam/water effluent; higher capex, watch for fouling |

Size ejector **motive steam by the air/leakage load**, not the process vapour — a few kg/h of inleak through flanges sets the bill, so a tight column beats a big ejector.

# 18 Storage & intermediate tanks

Storage is inventory bought with steel: too little and a late truck or a tripped upstream unit starves the plant; too much and you pay for tankage, land, and a larger fire/spill exposure. Size by **days of stock** tied to the *logistics* of each stream, then pick a roof that matches the volatility. Run the hypothesis in Choupo by feeding the tank's design flow into a flash drum at storage T,P and watching the vapour fraction — if `vf > 0` you have a breathing/venting problem a cone roof cannot hold.

**Sizing by days of stock (the WHY = decoupling time-scale):**

- **Raw materials: ~7-30 days**. The driver is delivery reliability and shipment size — rail/marine (large parcels, long lead) push to 20-30 days; reliable pipeline or daily truck supply drops to 3-7. Hold enough that a missed delivery does not stop the reactor.
- **Products: ~7-30 days**, set by shipping cadence and demand swing. A monthly tanker means ~30 days plus working heel; spot-truck sales need only a few days.
- **Intermediate / surge: hours to ~2 days**. Purpose is to *decouple* two units so a transient in one does not propagate. Rule of thumb: **5-15 min** of holdup for pump-suction/control surge, **0.5-2 days** between batch and continuous sections (e.g. a reactor feeding a continuous still). More surge = looser control coupling but slower composition response and more off-spec inventory if upstream drifts.

Tank **working volume** = days × daily throughput, then divide by the **fill fraction**: never design to the brim. **Fill ~85-90%**, leaving **10-15% ullage** for thermal expansion (a 30 °C swing on a hydrocarbon adds ~3-4 vol%), foam, and high-level-alarm margin. Overfill is a top cause of major releases (Buncefield), so the ullage is a safety budget, not slack.

**Type selection (volatility & pressure drive the roof):**

| Tank type | Best for | Pressure / vapour-pressure range | Typical size | Why |
|---|---|---|---|---|
| **Cone (fixed) roof** | Non-volatile liquids: water, heavy oils, glycols, most products with RVP < ~10 kPa | Atmospheric, near-zero gauge | up to ~10,000 $m^3$ | Cheapest; vapour space breathes in/out — fine when there's little vapour to lose |
| **External floating roof** | Volatile liquids: gasoline, naphtha, light solvents (RVP ~10-80 kPa) | Atmospheric | ~1,000-100,000 $m^3$ | Roof rides on the liquid → **no vapour space**, cuts breathing/standing losses by ~95% vs cone roof; emissions + fire-risk reduction |
| **Internal floating roof** | Volatiles needing weather/rain protection | Atmospheric | medium | Floating deck under a fixed roof — losses control plus debris exclusion |
| **Sphere (Hortonsphere)** | LPG, propane, butane, light ends | ~2-18 barg (vapour pressure > atm) | ~1,000-10,000 $m^3$ | Sphere carries pressure with minimum steel/area; even stress distribution |
| **Bullet (horizontal cylinder)** | Smaller pressurised stock: LPG, $NH_3$, light ends | ~5-25 barg | < ~500 $m^3$ | Cheaper than a sphere below ~200-500 $m^3$; easy to transport and mound |

**The crossover rule:** if the stored fluid's true vapour pressure exceeds atmospheric at the *hottest* expected ambient (summer-skin ~45 °C), it **cannot** sit in an atmospheric tank — it must go pressurised (sphere/bullet). Between non-volatile and pressurised lives the floating-roof band, chosen to cut working+breathing losses you would otherwise vent or send to a flare/recovery unit. Always state the range and let throughput, RVP, and emissions cost decide — there is no single right tank.

# 19 Process control & instrumentation heuristics

A flowsheet that balances on paper still must hold steady against disturbances. The Pareto question is not tuning — it is **what to pair with what**.

**What Choupo can and cannot check for you, stated before you rely on it.** An earlier version of this paragraph invited you to "step a disturbance in `ctrl01` and watch whether your loop rejects it or fights another". That invitation was false three ways, and it is corrected here rather than quietly deleted, because a manual that has promised something owes the reader the correction: `ctrl01` carries no disturbance at all (it is a setpoint-tracking case — the disturbance cases are `ctrl02`, `ctrl05`, `ctrl09`); *no* case in the corpus carries more than one PID loop, so "fights another" cannot be watched anywhere; and this section is about *column* pairing, while the dynamic tier has no column in it. A pairing for a column cannot be tested dynamically in Choupo today.

What you *can* do, and it answers the sharpest question in this section — *which tray carries the temperature measurement* — is read it off the rigorous column you already ran. The steady profile gives the slope criterion directly, and re-solving with a manipulated variable nudged gives the sensitivity criterion. The EduTools *Column control* tool does exactly that (its derivation is the Theory Guide's section *Choosing a column control structure, and where the instruments go*) and reports something a single answer would hide: on a 15-stage column the slope criterion picks stage 10, the reflux handle picks stage 11, and the distillate handle picks stage 5 — a different section of the column, with a response fifteen times stronger. The same run shows the reflux response *changing sign* between stages 6 and 7, which no slope of the profile can reveal.

Choupo computes no relative-gain array, at any frequency: there is no steady-state gain matrix in the engine. The pairing heuristics below argue in terms of relative gains, and that argument is the literature's, not a number this simulator produced.

**Inventory first.** Control every inventory (level, pressure) before any quality — an unbounded inventory shuts the plant down.

| Controlled variable | Manipulate | Why |
|---|---|---|
| Level (drum, sump, tank) | the OUTflow | self-regulating; never control level by an inflow that sets production |
| Pressure (vapour) | vent / vapour outflow / condenser duty | fast; pins the vapour inventory |
| Feed flow / throughput | the feed valve directly | the master production handle |
| Reactor / column temperature | coolant or steam duty | the quality proxy |
| Column composition | a sensitive tray TEMPERATURE | direct composition is slow/expensive; tray T tracks it |

**Tuning starting points.** Process PID is **mostly PI** — derivative amplifies noise, so add D only on slow, lag-dominated (temperature) loops. Flow loops: fast and tight. Level loops: loose/averaging (the tank is a buffer). Use the open-loop step (gain, dead time $\theta$, time constant $\tau$) with an IMC/$\lambda$ rule rather than trial and error.

**Structure beyond single loops.**

- **Cascade** when a fast inner disturbance exists (jacket-T inside reactor-T rejects coolant upsets early).
- **Feedforward** when a disturbance is MEASURED (feed rate/composition) — act before the error appears, trim with feedback.
- **Ratio** to hold two streams in proportion (stoichiometry, reflux, fuel/air).
- **Override / constraint** to ride a limit (max T, min level) safely.

**Pairing discipline:** pair each manipulated variable with the controlled variable it affects most directly and with least interaction (a near-1 relative gain). Two loops that fight oscillate — the glass-box dynamic run shows it at once. Keep DOF honest: one independent manipulated variable per controlled variable, no more.

**Equipment-specific schemes.** Beyond single loops, each unit has a conventional strategy.

*Distillation* is the hard one: a column has **five** handles (condenser duty, distillate D, reflux L, boilup V, bottoms B) and **five** things to hold (pressure, reflux-drum level, sump level, a top and a bottom composition). Pressure is fixed first (condenser duty or a vent). Each level MUST then be held by an OUTFLOW — and the rule is **control a level with the LARGER stream leaving that drum**: if the reflux ratio R = L/D is high, reflux is the big stream, so hold reflux-drum level with reflux and set D for composition (the "LV" vs "DV" choice). Composition is inferred from a **sensitive tray TEMPERATURE** (fast, cheap) instead of a slow analyser. **Single-end** control

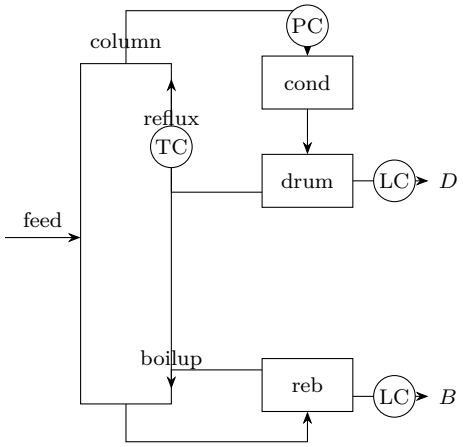



**Figure 3:** A conventional distillation control scheme: pressure (PC) on the condenser, each level (LC) held by an outflow, composition by a sensitive tray temperature (TC). Five handles, five controlled variables – the pairing is what makes it subtle.

(hold one composition, let the other float) is the robust default; **dual-composition** control saves energy but the two loops interact strongly (high relative gain) and usually need decoupling — which is exactly why students find column control hard. *Reactor:* temperature by coolant/steam duty, usually **cascade** (jacket-T inner, reactor-T outer). *Compressor:* an **anti-surge** recycle loop keeps flow above the surge line. *Fired heater:* outlet T trims the fuel, with an air/fuel **ratio** loop and a **low-flow trip** to protect the tubes.

# 20 Pressure relief, flare & safety basics

This is a Pareto orientation, not a safety course. The governing standards are **API STD 520/521/526** (sizing, scenarios, devices) and **API STD 537/NFPA 30**; treat the numbers below as where-to-start hypotheses, then run the controlling case.

**When a device is mandatory.** *Every* closed volume that can be isolated and over-pressured needs an independent overpressure-protection device — no exceptions for "small" vessels. The trigger is the credible-cause inventory, not size. A relief device is the last line of defence: it must work with zero operator action and zero instrument power, which is why a spring-loaded PSV (or rupture disc) is preferred over an instrumented trip for the primary case.

**Set vs design pressure (the WHY).** Design pressure is set ABOVE the maximum operating pressure so the PSV does not weep on normal swings. Heuristic: **design P = max(1.1 × operating P, operating P + 1.7 bar)**; the two rules cross at 17 barg (0.1 × 17 bar = 1.7 bar): below that the +1.7 bar floor dominates, above it the +10% rule does. The heuristic gives a *preliminary* design pressure, not a MAWP: the **maximum allowable working pressure (MAWP)** is a property of the built vessel — its actual wall, material, temperature and the code it is stamped to — and is at least the design pressure. A single PSV is set at or below the MAWP; at the preliminary stage the set pressure is *assumed* at the design pressure, the lowest MAWP the vessel can have, which is the conservative choice for the relief area. State every pressure as gauge or absolute: the accumulation percentages below apply to the gauge set pressure. Code allows accumulation above set — typically **+10%** for a single non-fire device, **+16%** for multiple devices, and **+21%** for the fire case — because momentary overshoot during full relief is tolerable but permanent yield is not.

**Sizing scenarios — size for the worst credible single cause (API 521).**

| Scenario | Typical controlling load | Why / note |
|---|---|---|
| External fire | Heat input to the wetted area, **Q = C · F · A^0.82** (Q in kW for A in $m^2$; C ≈ 43.2 with adequate drainage and fire-fighting, higher without; a total duty, not a flux) | Often controls vessels with large liquid inventory; sets a large orifice |
| Blocked outlet | Full pump/compressor/feed flow at shut-in | Common control case for pumped/compressed systems |
| Thermal expansion | Liquid trapped between two valves, heated | Tiny relief (¾"×1") — but mandatory; cheap to forget |
| Tube rupture (HX) | High-P side leaks to low-P side; full ΔP flow | The "2/3 rule": if low-side design P < 2/3 high-side, must relieve |
| Control-valve failure / loss of cooling | Failed-open bypass, reflux/condenser loss | Check fail-safe action of each valve |

Size each, then **the largest required orifice wins**; pick the next standard API-526 letter orifice (D through T).

**PSV vs rupture disc.**

| Device | Use when | Trade-off |
|---|---|---|
| Spring PSV | Reclosing wanted; clean service | Reseals, testable; can weep, can plug/foul |
| Rupture disc | Fast/large relief, fouling/corrosive, polymerising | Non-reclosing (full loss of inventory); cheap |
| Disc + PSV in series | Corrosive service needing reseal | Disc isolates/protects the PSV; best of both |

**Disposal — flare vs vent.** Vent to atmosphere only if the relieved fluid is **non-toxic, non-flammable** at grade and the discharge disperses safely (e.g. steam, air, inert). Flammable/toxic streams route to a **closed flare header → knockout drum → flare**, sized so flare-tip exit velocity stays below ~**0.5 Mach** and grade-level radiation stays under **~6.3 kW/$m^2$** at the fence (API 521). Choupo **sizes a relief valve but does not model relief**: the sizing pass's `reliefValve` item sizes one valve per protected item on its declared blocked-outlet and fire scenarios, by the same equations as the EduTool *Designing for overpressure* (worked case: `greenAmmonia03_basicDesign`), but no unit relieves a stream, and no PSV-vent enthalpy or flare duty appears in any ledger.

**Spacing/segregation (Pareto).** Fired heaters and flares are ignition sources — keep ~**15 m** from process units handling flammables; locate control rooms and the flare upwind/away. That figure is an order-of-magnitude orientation, not a value Choupo carries: the binding distances come from the spacing tables and standards the project adopts (insurance guidance such as IRI/GAP, API 521 §5 for flares — not read here), refined later by a dispersion/QRA study. Choupo ships no spacing table; a case's `system/layoutDict` declares its own distances, each with its source and reason, and the engine announces every pair closer than declared (EduTool *Plant layout*, witness `ammonia02_full_plant`). Siting, wind, hazardous areas and the rest of the plot plan are §21.

**Governing standards — go to the source; lives depend on it.** This section is an orientation only; the binding requirements live in, among others: pressure relief — **API STD 520 & 521**, tank venting — **API STD 2000**, overpressure protection — **ASME BPVC Section VIII** (UG-125+) and **Section I** (boilers); relief-device specs — **API STD 526**; flares — **API STD 521 & 537**; process-safety management — **OSHA 29 CFR 1910.119** and the **AIChE/CCPS** guideline series; functional safety / SIS — **IEC 61508 & 61511**; hazard-study method — **IEC 61882 (HAZOP)**; flammable liquids — **NFPA 30**; electrical area classification — **NFPA 70 / IEC 60079**; facility siting — **API RP 752/753**. Size and select to the standard, then have it independently reviewed. See the Disclaimer & scope at the front of this guide.

# 21 Plant layout

A flowsheet says what is connected to what; a layout says *where each item stands*, and that second question carries most of the safety, a good part of the piping cost and nearly all of the ease of operation and maintenance. It is also where several numbers the flowsheet never asks for are fixed: how high a column stands on its skirt, how far above its pump a reflux drum must sit, how long every pipe is. This section is a Pareto orientation for a student placing a first plant on a plot — the order in which to decide, and the *why* behind each rule — not a siting study. Every distance that touches safety comes from the standard or the risk study a real project adopts (named below, and see *Disclaimer & scope*); this guide transcribes none of their tables, and neither does Choupo.

**The order of decisions.** Site and wind first (where a release may drift), then the blocks (process, storage, utilities, loading, buildings) and the roads between them, then the pipe rack that ties the process block together, then the equipment along the rack, and only then the elevations inside each group — columns, drums, pumps — which the NPSH of the pumps decides. A late decision cannot repair an early one: no elevation trick fixes a control room placed downwind of the tank farm.

## 21.1 Siting and the prevailing wind

- **Read the wind rose.** A release drifts *downwind*, and an ignition source the cloud reaches turns a leak into a fire or an explosion. So the **ignition sources** — fired heaters, boilers, the flare, a workshop, any electrical equipment not certified for a hazardous area — go **upwind or crosswind** of the likely **release points** (pump seals, compressor packings, flanged equipment, sample points, loading arms, relief discharges). Lay out for the wind that blows most often, then check the others: a layout that is safe for one direction only is a bet on the weather.
- **Occupied buildings** — control room, offices, canteen, laboratory, workshop — stand **upwind of the process and the storage**, at the edge of the plant and **near the main gate**, so visitors, contractors and the canteen's deliveries never cross a process area. A control room that must stand close to the units it runs is designed for the blast and toxic exposure of that position (the question API RP 752 and 753 answer), not merely moved a few metres.
- **The flare is two things at once**: an ignition source (keep the flammable clouds from drifting onto it) and a source of radiation, noise and combustion products (keep it away from people). It goes at the edge of the site with its own sterile radius, set by the radiation at grade (§20; the EduTool *Pool-fire radiation and the distance it sets* shows how a radiation threshold becomes a distance).
- **Topography and drainage.** Heavy vapours — LPG, chlorine, a cold ammonia cloud — flow downhill and pool in hollows: keep ignition sources and occupied buildings off low ground, and grade the process areas so that a spill drains *away* from the equipment towards an impounding basin, never under the next unit.

## 21.2 Separation distances and hazardous areas

**Why a distance.** A separation does four jobs: it stops a fire or an explosion in one item from escalating to the next (the domino effect — radiation falls with distance, and the distance to a given blast overpressure grows only with the cube root of the explosive mass); it keeps the people in occupied buildings out of the consequence zone; it leaves room to fight a fire and to maintain the plant; and it keeps a released cloud away from ignition sources. Each job gives its own distance, and the largest governs.

**Two ways to get the number.** *Prescriptive* tables give a minimum edge-to-edge distance between pairs of equipment classes (fired heater to pump, storage tank to process unit, ...); they are quick, conservative for ordinary plants and silent about unusual ones. *Risk-based* siting computes the consequences of credible releases (radiation, overpressure, toxic dose) and, in a full study, their frequencies; it can justify a tighter plot or demand a wider one. A student design starts from a prescriptive table and checks its largest hazards by consequence. The published sources include the CCPS *Guidelines for Siting and Layout of Facilities*; Mecklenburgh (ed.), *Process Plant Layout* (IChemE); the insurers' *GAP.2.5.2 Oil and Chemical Plant Layout and Spacing*; NFPA 30 (flammable and combustible liquids, tank spacing included), NFPA 58 (liquefied petroleum gas) and API STD 2510 (LPG installations); and, for occupied buildings, API RP 752 and API RP 753.

**Hazardous-area classification** answers a different question: not "how far apart" but "where may a flammable atmosphere exist, and what electrical equipment may stand there". Around each *source of release* the zone system (IEC 60079-10-1; the Energy Institute *Model Code of Safe Practice Part 15*; API RP 505; in Europe the ATEX workplace directive 1999/92/EC) draws envelopes: **Zone 0**, where a flammable atmosphere is present continuously or for long periods; **Zone 1**, where it is likely in normal operation; **Zone 2**, where it is not likely and short-lived if it occurs. The extent of each envelope depends on the grade of release, the release rate and the ventilation — which is why flammable service prefers an open, well-ventilated structure to an enclosed building. Equipment inside a zone must be certified for it; open flames and uncertified equipment stay outside every envelope. (NFPA 70 and NFPA 497 carry the North-American Class/Division counterpart.)

**What a Choupo case declares.** The spacing and zoning tables above grant no redistribution, so Choupo ships none (the licence policy of this project). A case's `system/layoutDict` declares its own separation table between equipment kinds, each rule with a `source` and a `reason`; its own wind (the direction it blows from, the half-angle of the downwind sector, its reach); and, per release source, its own zone envelopes. Write as the source the table or study you actually read: "author-set assumption" is an honest source, a standard you have not opened is not.

**Where a pipe meets an item.** Each pipe ends on a *port* of its item, chosen from the item's kind, its sized dimensions and the role of the stream in its unit: a column's feed on the shell at the height of its stage, the overhead at the head, the bottoms at the sump; an exchanger's tube and shell nozzles; a drum's side inlet, top vapour and bottom liquid; a compressor's suction and discharge. The position is a drafting convention and the run says so; it is not a vendor's nozzle schedule. A `ports` block in `layoutDict` moves one. In the app, Reports → Plant layout (3D) draws the nozzles at those ports and offers a guided tour generated from the sectors and units, orbit, walk and drone cameras, a minimap, a click card on every item and pipe, and colour by phase, temperature, pressure or the mole fraction of a chosen component, all read from the published result.

**A store, and any bank of identical items, is piped by a header.** A unit realised by several identical items in parallel — the vessels of a gas buffer, the tanks of a product store, the trains of a trained plant — is not reached by one pipe to its first item. The engine lays a *header*: one main along the row the items stand in, and a branch from the main to each item's port. The main runs in the aisle between two rows, or beside a single row on the side facing the other end of the pipe, along the tips of the nozzles' 1 m stubs (the ports' own drafting value), at the elevation of the items' nozzle stubs; a store that stands in three rows or more is announced by name as not reached beyond the two the main serves. A store sized by `postDict` on a boundary stream (`storage`, `gasStorage`) is no unit of the flowsheet, and nothing in `layoutDict` repeats which stream it sits on: the sizer wrote it into every item's sheet, and the stream's pipe is routed *through* the store — fence crossing, main, process for a feed; process, main, fence crossing for a product — entering the main at the end nearer its upstream end. Each branch is published as a pipe of its own (`pipe:<stream>@<item>`) with the stream's state and no flow, because a store fills and empties by it and no number for that is computed; the pipe register and the 3D view carry them like any pipe, and the run says how many branches each header carries. A declared `pipes` route and a header cannot both hold (the engine refuses the pair); a branch's port on one item is moved with `ports`.

A plant of identical trains is declared the way a drawing office draws it: one train in full and a repeat. `typicals ( { typical "train"; index "train"; count 6; pitch { x 19 m; y 0 m; } members ( ... ); source "..."; reason "..."; } );` repeats the sized items of train 1 (placed in `items` as usual) at the pitch, each sized from its own train's sizing and standing in the room the building lists for train 1's item. The repeated items are checked and piped as if declared — overlap, separations, zones, roads, and a branch per train on every header — so an outline cannot hide a clash; the result keeps every item and adds one *outline* per repeated train and room, marked as typical of train 1, which a plan may draw as a dashed box. Equipment that steps on a different pitch is a second group.

## 21.3 Blocks, roads, fence and battery limits

- **Blocks.** Group the plant into blocks of similar hazard — process units, tank farm, loading, utilities, buildings — each block bounded by roads. Grouping concentrates the hazardous-area envelopes and the fire protection, and the roads double as fire breaks.
- **Roads.** A **perimeter road** and roads between the blocks let a fire tender reach every block from at least two sides and a mobile crane reach every heavy item; avoid dead ends. Keep heavy traffic — trucks, deliveries — at the perimeter, off the process roads.
- **Gates and trucks.** A main gate with a guardhouse, and a second, emergency exit, so that one blocked road does not trap everybody inside. Where raw materials or products move by road, the **weighbridge** and the loading bays sit close to the gate, so a truck is weighed in, loaded and weighed out without entering the process area. A plant whose feeds and products move by pipeline needs neither.
- **Fence and battery limits.** The fence is the security and legal boundary of the site; the **battery limit** is where the plant's scope ends — every feed, product and utility crosses it at a defined point with an isolation valve, a blind and usually a meter. Name what is on the other side (the adjacent park's pipeline, the site cooling-water return): a battery limit nobody labelled is a scope nobody owns.

## 21.4 Trucks, cars and the people on site

A plant whose feeds and products move by pipe still receives trucks: catalyst at every recharge, chemicals and lubricants, spares, a turnaround's contractors and their cranes, and the waste it sends away. And every shift brings people in cars. Lay out for both before the process block is final, because both need ground and both must stay out of the process.

- **A one-way truck loop.** The truck comes in at the gate, is weighed, drives to where it unloads, and leaves — without reversing and without turning round. A loop driven one way does that with no manoeuvre at all; a dead end needs a **turning circle** at least as large as the truck turns in, and every reversal near people and equipment is an accident waiting. Make the yard roads one-way and wide enough to pass a truck stopped at a door.

- **The design vehicle.** Every corner on the loop must hold the largest truck that may come. In the European Union the law fixes the envelope: any vehicle combination in motion must turn within a swept circle of outer radius 12.50 m and inner radius 5.30 m (Council Directive 96/53/EC, Annex I, point 1.5). So a corner's pavement must reach at least 12.5 m from its centre on the outside, and two corners need straight road between them — one turn must end before the next begins. A swept-path study (the trailer cutting in on the inside of the turn) is the next step a real project takes.
- **The weighbridge** sits on the loop near the gate, on a straight stretch so the truck stops square on the deck, and is passed by every truck the site weighs: weighed in, what a supplier delivers is checked; a site that also ships by road weighs out as well, and needs a second deck on the outbound leg or a deck both directions cross. Cars should not use it.
- **The car park** goes near the gate and away from the process — the first turn after the gate barrier, or outside the security line altogether — so a private car never drives a process road and never meets the truck loop. Its bays are oriented so that a car leaves *forward*: reverse-in bays (the manoeuvre is made on arrival, with time) or drive-through bays. In an evacuation every car leaves at once, and a car park where all of them reverse out blind is a hazard of its own. A car is also an ignition source: keep the car park out of every hazardous area and out of the downwind sector of the release points.
- **Offices and the visitors' entrance** stand by the main gate, upwind and outside every separation from the process, so a visitor or a supplier reaches them without crossing the plant.
- **Two ways in.** A second gate on another side, normally locked, is the fire brigade's way in when the main gate is blocked — by the fire, by a tanker, by the evacuation leaving.
- **Muster points** — where people gather and are counted — are on the upwind side and away from every release point, and there are at least two, on opposite sides of the site, because the wind turns: when it puts one in the cloud, the other is clear. A **windsock**, in sight of the control room and of the muster points, tells people which way to walk.
- **Fire water.** The fire-water reserve and its pumps stand where a fire in the plant cannot reach them — upwind and well separated from the process — because the water is needed most when the process is burning. The ring main and its hydrants follow the roads round every block.
- **A laydown area** — hard standing beside the process block and on the truck loop — takes the catalyst bins, the exchanger bundles, the scaffolding and a crane's outriggers during a turnaround.

## 21.5 Pipe racks

Most of a process block's piping runs on one **main rack** — the plant's spine — with the equipment lined up on **both sides** of it. The rule that follows is simple: items joined by large or expensive lines stand *close* and in *flow order* along the rack, so most lines run straight along it.

- **Pumps** stand in a row under or just beside the rack edge, their suction vessels on the outer side, their motors towards an access way.
- **Air coolers** usually sit **on top of the rack**: they need air, not plot area, and their condensate drains down to drums at the rack side.
- **Tiers.** Lines running one way on one tier and the other way on another, so that a change of direction is a change of elevation and no line clashes with another; hot and large lines on the side nearest the columns, utility headers on their own tier; spare width for the lines a later revamp will need.
- **Headroom.** Wherever the rack (or any pipe) crosses a road it must clear the largest vehicle that uses that road — a fire tender, a mobile crane — by the owner's standard. Where it cannot, the road moves, not the rule.

## 21.6 Utility lines: cooling water, refrigerant and the flare header

A utility is not a flowsheet stream. The engine routes every material stream by itself, but it routes nothing for the cooling water that a cooler takes, the refrigerant that boils in a chiller or the relief gas that goes to the flare, and a plot plan that shows the cooling tower, the refrigeration package and the flare standing apart from everything is not finished: it is missing the lines that tie them to the process. The case therefore *declares* each utility line in `system/layoutDict`, and the engine routes and checks what was declared.

**What is declared.** One entry of `utilityLines` per line:

```
utilityLines
(
  {
    name     "CW-N2Cooler-supply";            // unique
    service  coolingWaterSupply;              // see below
    from     "coolingTower";                  // a placed item: the flow leaves it
    to       "N2Cooler";                      // a placed item: the flow reaches it
    [fromPort { side top|bottom|east|west|north|south; [elevation 2 m;] }]
    [toPort   { side west; elevation 2 m; }]
```

```
    [carries  { unit N2Cooler; utility coolingWater; }]
    reason   "the nitrogen cooler's cooling water, from the tower";
  }
);
```

The `service` is one of `coolingWaterSupply`, `coolingWaterReturn`, `refrigerantSupply`, `refrigerantReturn` and `flareHeader`: the services the reference plant has, and no others. A word the layout does not know, a line whose two ends are one item, an item that is not placed, a name used twice, a face that is not a face and an `elevation` off the item are refused by name. Steam and nitrogen are not services of this layout until a case has a line for them.

**How it is routed.** By the rule of a process pipe, on the same rack: up from the port's one-metre stub to the line's lane, across, along the rack, across, down to the port of the other item (the ports are the ones of §21.5; a line lands on the item's top unless the case declares a face). Three things differ, and the run says each. The *lane*: a utility line takes a lane on a tier above every process pipe's, so no process route moves, and the lines of one family (cooling water, refrigerant, flare header) share a tier of their own, a supply beside its return; a family with more lines than a tier has lanes goes on to the next tier. The *ports*: several lines on one item are spread across its cross extent (a cooling tower takes eight), not stood off by a fifth of its narrow dimension, which would put the eighth outside the footprint. The *size*: there is none.

**No line is sized, and the result says so.** The layout carries no diameter, no velocity and no pressure drop for any pipe, process or utility, so there is no sizing rule to reuse, and writing a second one for utility lines alone would be the first and only one. Every line is published `sizeState unsized`, with the sentence that says why. A real project sizes its lines from the flow below on its own velocity limit; Choupo draws them all at one thin constant tube radius, so that no thickness claims a size.

**What a line carries.** Where the run publishes it, the line says it: `carries` names the unit and the utility, and the engine reads *that* row of the run's utility allocation (the mass flow in kg/s, $|Q|$ divided by the utility's duty per kilogram) and publishes it as the line's `utilityFlow`, with the row it was read from. A name the run does not carry is refused. Nothing is inferred from the service word. On the reference plant the four coolers carry 47.3, 123.9, 131.2 and 169.1 kg/s, the chiller's two lines 15.06 kg/s, and the three flare lines nothing: the case declares no relief valve, and the three vent gases that leave the loop are already piped to the fence as process streams, so a flow to the flare has no number in that run.

**What is checked.** As for a process pipe, each a finding (a draft to move, never a refusal), named by the case's own name for the line: `utilityClash` (a segment through an item below its top; the router steers round nothing), `utilityCrossesRoad` (below the roads' declared headroom over paved ground), `utilityThroughBund` (a run below a containment's wall top through the wall) and `utilityNotRouted` (an end stands inside the declared building, where piping is not routed). A line against another line is not checked, as for process pipes. The lines enter the plot's envelope, so a line that leaves the declared plot grows it.

**What is published and drawn.** Beside the pipe register: one record per line with its service, its ends and ports, its lane and tier, its length and its size state; the run's summary counts them. Reports → Plant layout (3D) draws each line as a thin tube in the colour of its service — the cyan the flowsheet canvas gives a cooling duty for cooling water, its orange for the flare header, and a violet for the refrigerant, because nothing else on the canvas means a refrigerant — with the service written in words in the tooltip, the register and the exported page (colour is one channel of two), and lists the lines in a table under the pipe register.

**What is not here.** A pressure drop, a size, a cost, the steam and the nitrogen headers, the cooling-water make-up and blowdown, and the line's own supports. The reference plant (`greenAmmoniaPEQ_baseCase`) declares thirteen lines: eight of cooling water between the tower and the four coolers, two of refrigerant between the package and the chiller, and three of flare header from the separator and the two let-down drums; its header says what it does not declare.

## 21.7 Tank farms and the choice of storage

Storage holds the largest inventories on the site, so the tank farm goes at the edge of the plot, away from the process and the occupied buildings, on lower ground and downwind where the site allows, and close to the loading area. The tank type follows from the vapour pressure at the hottest storage temperature (the crossover rule of §18); a liquefied gas has three answers:

| Storage | When | Why (glass-box) |
|---|---|---|
| **Pressurised** at ambient temperature (sphere, bullet, mounded bullet) | small to medium inventories | no refrigeration plant; the wall carries the vapour pressure at the hottest ambient, so the steel per tonne stored stays high however large the store |

| Storage | When | Why (glass-box) |
|---|---|---|
| **Semi-refrigerated** (moderate pressure, below ambient) | medium inventories | a modest refrigeration duty buys a lower design pressure and a thinner wall |
| **Fully refrigerated** at about atmospheric pressure, at the normal boiling point | large inventories | a thin-walled, insulated tank of almost any size; the boil-off is recompressed and recondensed by a refrigeration unit that runs for the life of the tank |

**Ammonia is the textbook case.** Its vapour pressure is about 8.6 bar at 20 °C and close to 18 bar at 45 °C, so storage at ambient temperature needs pressure vessels designed for the summer. A few hundred tonnes sit comfortably in bullets or a sphere; tens of thousands of tonnes would need a field of spheres, so large inventories are stored **refrigerated at about −33 °C**, the normal boiling point, in insulated atmospheric tanks with a refrigeration unit for the boil-off. The crossover is economic, not physical, and is usually placed in the low thousands of tonnes, where either answer can be argued. Choupo carries both: `greenAmmoniaPEQ_baseCase` stores its product refrigerated at atmospheric pressure, and `ammonia02_full_plant` keeps two days of product as a pressurised liquid in bullets.

**Why gas is rarely stored.** Compressed hydrogen at 200 bar and 25 °C holds about 15 kg/m$^3$; liquid ammonia about 600–680 kg/m$^3$. And a gas store gives back only the gas between its full and its emptied pressure, so a gas is *buffered* for hours, not stored for weeks — which is why plants move gases by pipeline and store liquids. The hydrogen buffer of `greenAmmoniaPEQ_baseCase`, between an intermittent electrolyser and a steady synthesis loop, is the exception that shows the rule.

**Containment.** Atmospheric tanks of flammable or toxic liquid stand in a **bund** (dike) that holds at least the largest tank's contents, with the margin the applicable code requires; group compatible products in one bund, leave fire-fighting access round it, and route no process pipe through it. Refrigerated tanks of liquefied gas are often double- or full-containment, the outer wall acting as the bund. Orient bullets so their ends do not point at occupied buildings or other vessels: a bullet that fails in a fire travels along its axis. Detailed tank spacing is again a code question (NFPA 30, NFPA 58, API STD 2510; API STD 620 for low-pressure and refrigerated tanks).

## 21.8 Secondary containment: bunds and impounding areas

Every vessel that holds a liquid will one day leak: a flange, a drain left open, a tank overfilled, a shell that fails. **Secondary containment** decides where that liquid goes. It is the layout decision that limits three things at once: how far the liquid spreads (into the drains, the soil, the river), how large a pool evaporates (the size of the toxic or flammable cloud follows the pool's surface), and how large a fire can burn (a pool fire's radiation scales with the pool, the EduTool *Pool-fire radiation and the distance it sets*).

- **A bund** (dike, retention basin) is a wall round the tanks, on an impermeable floor: the spill is held *where it falls*. Its **net capacity** is its floor area times its wall height, less the volume the tanks and their foundations occupy below the wall's top — a low wall round tall tanks loses a large share of its volume to them. The usual form of the capacity rule is a margin over the **largest** tank (the largest tank fails, not all of them at once), sometimes with a second term on the **total** that governs when it is larger, plus an **allowance** for the rain the bund collects and the fire water poured into it during a fire. Which margin, which allowance and which design rainfall is the applicable code's or guideline's: read it and cite it.
- **Low or high wall.** A low wall spreads the pool over a large floor (more evaporation, a larger fire, but fire-fighting reaches over it); a high wall keeps the pool small and under the tanks, and makes access and escape harder. Ramps or stairs over the wall, never a gap in it; pipes carried *over* the wall, never through it (a penetration the spill can leave by).
- **The drain.** Rain collects in every bund; it leaves through a valve that is kept **closed** and opened by hand only when the water is seen to be clean, or by a sump pump. A drain left open to the sewer empties the bund on the day it is needed.
- **Impounding** (a remote catch basin) is the other answer: a kerbed, sloped catch area under the vessels leads the spill *away* to a pit at a distance, so the pool — and any fire on it — forms clear of the vessels, and its small surface limits evaporation. It suits liquefied gases stored under pressure, where a spill flashes in part and the rest pools cold: the liquid must not be allowed to lie under the bullets. Refrigerated tanks are often double- or full-containment, the outer wall acting as the bund.
- **Compatibility and grouping.** Liquids that react together never share a bund; a large tank farm is divided by intermediate walls so that one spill does not cover every tank.

**In a Choupo case.** A bund or an impounding area is a *declared region* in `system/layoutDict` (`bunds ( { name; kind bund|impounding; items ( ... ); region { ... } or polygon ( ... ); wall {`

`height; } [pit { x; y; length; width; depth; }] capacityRule { basis vesselVolume|heldLiquid; terms ( { fraction; of largest|total; } ... ); [allowances ( ... );] source; reason; } drain; source; reason; } );`), not a placed item, so the overlap rule does not apply to it. The engine (`src/postProcessing/layout/PlantLayout.cpp`, `readBunds`) **refuses** a wall that cannot be built — a listed item outside it, an unlisted item inside it, a wall through a footprint, a pit under an item or a road, two containments sharing a floor, one across the fence — and a containment that declares no capacity rule: Choupo ships no code's table, so the rule, its terms and its source are the case's. It computes the net volume (the displaced volume of a vertical cylinder, a lying cylinder's circular segment, a box), the required volume (the largest of the declared terms on the declared basis, plus the allowances; a `depth` allowance is a rainfall over the catch area and the pit) and publishes the verdict. It **announces** a containment short of its rule, a drain open to the sewer, an impounding pit inside its own catch area, a road through a wall, a pipe through one below its top — and, on every layout, an item in the open that holds liquid by the run's own inventory and that no containment encloses. The witnesses: `greenAmmoniaPEQ_baseCase` (a 4 m bund round the two refrigerated tanks, and a kerbed slab under the loop's three liquid vessels draining to a remote pit; lower the bund's wall to 2 m and read the shortfall) and `ammonia02_full_plant` (an impounding area under the seven bullets, its pit remote). Not checked: the floor's slope and its impermeability, the wall's strength and thickness, intermediate walls, the evaporation from the pool, and whether a declared margin or rainfall is the right one.

The EduTool *Secondary containment: designing a bund* teaches the same arithmetic — its TypeScript is held to the engine's (`src/postProcessing/layout/BundArithmetic.H`) by `check_bund_arithmetic` — and goes beyond it on the page: the useful capacity in which the failing tank's own footprint is free (the engine deducts every footprint, the safe side), a sloped floor, a freeboard, the level a spill reaches, and a rupture, a leak, rain and an open drain integrated in time until the bund overtops.

## 21.9 The distillation column group

A column is not one item but a **group**: the shell, its reboiler, the overhead condenser, the reflux drum and two pumps (reflux and bottoms). They are laid out together, beside the rack, and their elevations follow from two rules: liquid must reach every pump with enough NPSH, and vapour must flow without trapping liquid.

**The reboiler stands at the base.**

- **Vertical thermosiphon** (the common choice for clean service): bolted beside the column, close-coupled; the liquid head between the column sump and the reboiler drives the circulation, so their relative elevation is a design variable, not a detail.
- **Kettle**: a horizontal exchanger at grade or on a low structure, fed from the column bottom by gravity; it is itself an equilibrium stage, and the bottoms product leaves from its overflow compartment — so the *kettle*, not the column, is the bottoms pump's suction vessel, and it is the kettle that must be elevated for NPSH.
- **Forced circulation**: a pump drives the reboiler loop (viscous or fouling bottoms, or too little head for a thermosiphon) — one more pump to place and to give NPSH.

**The overhead runs, from the top down: column top → condenser → reflux drum → reflux pump.**

- **Pumped reflux** (the common case): the condenser sits on an exchanger structure beside the column, or as an air cooler on top of the rack; the reflux drum stands below it, so the condensate drains by gravity; the reflux pump stands at grade below the drum and sends both the reflux (back up to the top tray) and the distillate. The condenser need *not* be above the column top: the overhead vapour line falls from the column to the condenser.
- **Gravity reflux** (small columns): the condenser is mounted above the column top, on the column or on a structure, and the reflux runs back by gravity through a liquid seal — no pump, but a heavy exchanger high in the air and awkward to maintain, acceptable only when it is small.
- **The overhead vapour line** is short, large and **self-draining**: it slopes continuously towards the condenser, with no low point where condensate can collect and slug. The same holds for every two-phase line in the group.

## 21.10 NPSH and the elevations it fixes

The NPSH rule of §15.4 is where the layout and the pump meet. The net positive suction head *available* is

$$\mathrm{NPSH}_a \;=\; \frac{P_{\mathrm{surface}} - P_{\mathrm{vap}}}{\rho\, g} \;+\; z \;-\; h_f,$$

where $P_{\mathrm{surface}}$ is the pressure on the liquid surface in the suction vessel, $P_{\mathrm{vap}}$ the vapour pressure of the liquid at the pumping temperature, $\rho$ its density, $g$ the acceleration of gravity, $z$ the height of the *lowest* operating liquid level above the pump's impeller centreline, and $h_f$ the suction losses (pipe friction, entrance, fittings, strainer) in metres

of the liquid pumped. The pump runs without cavitating while $\mathrm{NPSH}_a$ exceeds the $\mathrm{NPSH}_r$ its maker measured, by a margin (§15.4; ANSI/HI 9.6.1 is the guideline on NPSH margin).

**The key observation.** A column sump, a kettle and a reflux drum all hold liquid at its **bubble point**: the vapour above it is in equilibrium with it, so $P_{\mathrm{surface}} = P_{\mathrm{vap}}$ and the first term vanishes:

$$\mathrm{NPSH}_a \;=\; z - h_f .$$

Pure geometry: no pressure, however high, and no density enters. The only lever left is *height* — which is why a column stands on a tall skirt and a reflux drum on a structure. Subcooling the reflux adds the first term back ($\Delta P_{\mathrm{vap}} \approx (\mathrm{d}P_{\mathrm{vap}}/\mathrm{d}T)\,\Delta T_{\mathrm{sub}}$), but most designers take no credit for it: the liquid surface in the drum sits under its own vapour and re-saturates.

**Worked example (illustrative numbers, not the data of any real pump or column).** A bottoms pump has $\mathrm{NPSH}_r = 3.0$ m at its rated flow; take a margin of 1.0 m and suction losses $h_f = 0.7$ m. Then $z \geq 3.0 + 1.0 + 0.7 = 4.7$ m. With the impeller centreline 0.6 m above grade, the low liquid level must stand at least $0.6 + 4.7 = 5.3$ m above grade; if that level is 0.4 m above the column's bottom tangent line, the tangent line stands at 4.9 m — a skirt of about 5 m. For the reflux pump, with $\mathrm{NPSH}_r = 2.0$ m, the same 1.0 m margin and $h_f = 0.5$ m, $z \geq 3.5$ m: the drum's low level stands at least 4.0 m above grade (centreline at 0.5 m) and, that level being 0.3 m above the bottom of a horizontal drum, the drum bottom at 3.7 m. The drum therefore sits on the first floor of the exchanger structure and the condenser on the floor above, so the condensate still drains by gravity. Had subcooling been credited, 5 K of it on a liquid with $\mathrm{d}P_{\mathrm{vap}}/\mathrm{d}T \approx 3$ kPa/K and $\rho = 750$ kg/m$^3$ would have added $15\,000/(750 \times 9.81) \approx 2.0$ m — the size of the whole margin, and the reason a hot pump suction is never designed on a subcooling that may not be there.

**Levers when the elevation costs too much**: a low-NPSH pump (a larger eye, an inducer, a lower speed), a vertical can pump whose impeller sits below grade, a shorter and fatter suction line (low velocity, an eccentric reducer flat side up, no high point where vapour can gather), or a booster pump. Each lever has a price; the extra metre of skirt is often the cheapest.

## 21.11 Platforms, ladders and walkways

- **Each tall column is self-supporting** on its own foundation, carrying its own wind and seismic loads; it is not hung from a structure. Where it passes through the floors of an adjacent structure, the opening leaves clearance for the different thermal growth of a hot shell and cold steelwork.
- **Platforms** go wherever somebody must stand: at every manhole, at the valves and instruments that are operated or maintained, at the relief valves, and at the top, usually with a davit to lift internals and valves. A column therefore has a **piping side**, facing the rack, where the risers run, and an **access side** with the manholes and platforms.
- **Ladders** are caged above a set height and broken by rest landings at set intervals; both are fixed by the applicable regulation (ISO 14122-4 for fixed ladders in Europe, OSHA 29 CFR 1910 Subpart D in the United States, or the local code) — read it rather than guess the number. A long climb is often better served by a stair tower.
- **Walkways** join adjacent columns, or a column and the exchanger structure, at common platform elevations. They give every high platform a **second escape route** — a single ladder is a single way down — and let an operator move from one column to the next without descending to grade.

## 21.12 Maintenance and crane access

Lay out for the day the plant is opened, not only for the day it runs:

- **Tube bundles** are pulled: leave a clear space in front of each shell-and-tube exchanger's channel end at least as long as the bundle, on the road side, with room for the extractor.
- **Column internals and catalyst** come out through the manholes and the top: a mobile crane must reach the column, so keep its access side free, **opposite the rack**, with hard standing for the crane and room to lay down trays, packing or catalyst bins.
- **Pumps and compressors** need room to pull a rotor and a motor, and lifting beams or crane access over the larger machines.
- **Removable spools** and blinds at every exchanger, vessel and pump, so an item can be isolated and taken out without cutting pipe.

## 21.13 What Choupo checks, and what it does not

A case declares its plot plan in `system/layoutDict` (the grammar is in `docs/ai/case-layout.md`, the design record in `docs/design/a-plant-layout-is-declared-and-checked.md`); the check lives in `src/postProcessing/layout/PlantLayout.cpp`. Read against that code:

**Checked.**

- Every *sized* item is placed at a declared plan position (x, y) and base elevation z; its footprint is the item's own published diameter and length, or a box the case declares where the sizer published none. Two footprints that **overlap** in plan and in height are **refused**, and so is a tray stack, a catalyst charge or a relief valve placed on its own (the refusal names its host).
- A pair closer than its **declared separation**, an item outside its sector's declared area, and an ignition source inside a declared **zone envelope** or **downwind** of a release source are **announced**: the run continues, because a short distance is a layout the student must defend, while an overlap is not a layout at all.
- Every material stream is **routed** orthogonally over one pipe rack (declared, or a stated default that is announced), or listed as not routed with its reason; each route's length is published.
- **Utility lines** the case declares (cooling water, refrigerant, flare header; §21.6) are routed on the same rack, on tiers above the process pipes', checked for a clash with an item, a road below the headroom and a bund wall, and published *unsized*, with the flow the run's own utility allocation gives where the case names one.
- **Roads** are checked against the footprints, the rack and the pipes (a road through an item, or under a rack or pipe lower than the declared headroom, is refused), and an item farther than the declared access distance from a road the gate reaches is announced. The **fence** is derived from the plot and opens at the gates; a road that meets it anywhere else is refused, and every boundary stream crosses it at a battery-limit point carrying the label the case declared (an unlabelled crossing is announced).
- The **plot area** is published (grown by a declared margin; absent one, a lower bound, announced), and the economics prices it as land when the case declares a land price.
- **Truck routes** are walked against a declared **design vehicle** (its turning diameter, with its source): a declared route — an ordered list of roads from a gate back to a gate — is followed from one road onto the next where they meet, and the engine announces a reversal with no turning area big enough, a corner whose pavement (the declared corner radius plus half the narrower road) is short of half the turning diameter, two corners closer than their two radii, a one-way road driven backwards, a weighbridge or a declared stop the route misses, and a route that starts or ends anywhere but at a gate. Each road is carried on from its end to its gate's opening in the fence.
- A **car park** declares its bays (size, aisle, angle, arrangement, how a car enters); the engine lays the rows out, refuses a count the footprint cannot hold, and announces bays a car leaves by reversing. A muster point or the fire-water pump house inside a release source's zone or downwind of it is announced, and so is a site with a single entrance.
- **Secondary containment**: a declared **bund** or **impounding area** is held to its own declared capacity rule (net volume against the required one, the verdict published), a wall that cannot be built is refused, and an item in the open that holds liquid with no containment round it is announced (§21.8).
- On storage: the atmospheric tank sizer refuses a gas and a liquid above 1.5 bar, and prices a tank below 0 °C as a lower bound (`src/postProcessing/sizing/StorageTankSize.cpp`); a gas buffer is sized as pressure vessels (`gasStorage`, `src/postProcessing/sizing/GasStoreSize.cpp`) and a liquefied gas as a pressurised liquid store (`liquefiedGasStorage`).

**Not checked — yours to do by hand.**

- **The vertical order of a column group, and the NPSH of every pump.** The column's shell, condenser, reboiler and reflux drum are separate sized items (`src/postProcessing/sizing/ColumnSize.cpp`), each placed at the z the case declares; nothing relates those elevations to one another or to a pump, and the engine publishes no NPSH of either kind. A condenser placed at grade beside its column is accepted (`aceticAcid02_plant` does exactly that, and its `layoutDict` says so). Do the worked example above for your own pumps.
- **The column's own piping.** A unit that realises several items is piped through the first of them the case places, so the overhead loop and the reboiler circuit are not drawn and their lengths are not counted.
- **The separation and zoning values themselves.** The engine tests the distances and envelopes the case declares; it never says whether they are right. Neither the pressure drop nor the cost of a pipe is computed from its route.
- **Occupied buildings and containment.** A control room, office or canteen is tested only as a declared ignition source (and against the separations the case declares), never for blast or toxic exposure; escape routes, crane and bundle-pulling space are not modelled. Bunds and impounding areas *are* checked (§21.8), but only their volume and their geometry: not the floor's slope, the wall's strength, nor the pool that would evaporate.
- **What a truck sweeps.** The corner check is the outer edge only: the trailer cutting in on the inside of a turn (the swept path), the road's gradient and load class, a truck stopped at a door blocking the loop, and the fire-water ring main and its hydrants are not modelled; the car-park rule lays out straight rows between end aisles and does not check how a car reaches them.
- **Ladders and platforms are drawing, not data.** The 3D view gives every vertical item taller than a fixed height a caged ladder and platforms at a fixed spacing, flagged as decoration (`gui/src/case/equipmentModel.ts`); a column shell is stamped `vessel` like every drum, so the view cannot tell a tower from a tall drum. No platform, ladder or walkway is placed, counted or checked by the engine.

**Run it.** Open `tutorials/plant/ammonia02_full_plant` (declared rack, roads, two gates, offices, car park, weighbridge and a one-way truck loop, laydown, muster points, fire water, a windsock, the fence and labelled battery limits), move the control room into the downwind sector of a release source, and read the finding; then lower the main road's `cornerRadius` to 5 m and read what the truck route says. Then open `tutorials/plant/aceticAcid02_plant`, lift its column's condenser onto a structure, and work out by hand the skirt and the drum elevation its pumps would need. The EduTool *Plant layout: where each item stands, and why* walks the same ground with guided moves; *Pump vs system curve* treats NPSH on its own.

**Further reading.** Mecklenburgh (ed.), *Process Plant Layout*, IChemE; CCPS, *Guidelines for Siting and Layout of Facilities*, AIChE; Bausbacher & Hunt, *Process Plant Layout and Piping Design*, Prentice Hall; Kister, *Distillation Operation*, McGraw-Hill (the column group in operation); and, for anything that touches safety, the standards named above.

# 22 The operator panel of a batch run — declared, then reported

A panel is the answer to a question a person asks at the rig: *what is the process doing, and what should I do about it?* It is good when the person can tell, and no engine can grade that. Choupo therefore treats a panel like the plant layout above: the case *declares* it, the engine *reads* it and reports *facts* about it, and the student decides whether the panel is good. Nothing in the file can change a number of the run, because the engine opens it only after the time loop has ended and reads only the series the run already writes.

**The file.** `system/panelDict`, optional, read by `choupoBatch` (the other binaries refuse it by name). It holds `elements`: each has a `name`, a display `kind` (`number`, `bar`, `trend` or `lamp`), a `measurement` (`unit u; cv key;` — a column of `trajectory.csv` — or `controller C; cv SP|PV|MV;`), an optional `range {min; max;}`, an optional `limit {low; high; source; reason;}`, an optional `alarm {on; delay; action;}` and a mandatory `reason`: why this element is on the panel. A limit says where it comes from; an alarm says which action it asks for. Optional blocks give a `grid` with placements, a `style`, a `lock {by; date; reason;}` (present means locked) and `messages` to someone not looking at the panel. A `range` or `limit` written without a named unit is in the unit the column is published in (its name says so: `U_V`, `i_A_per_m2`); no trajectory column declares its dimension, so the engine cannot check it. The column's unit is published on the element as a word: the writer's own where the column is the writer's (time in s, a vessel's temperature in K and amounts in kmol), else what the case declares with `measurement { ...; cvUnit "V"; }`, else none — never guessed from the column's name. A declaration that disagrees with the writer is published beside it, with the fact *unit differs*.

**Refused, by name.** What makes the file not a panel: an unknown key, unit, controller or kind, an element with no `reason`, a limit with neither end or with no `source` or `reason`, an alarm with no limit or no action, a time without its unit, a placement outside the grid or on another element, a duplicate name, a message that names no element.

**The facts.** What makes it a panel to defend. Each is a record of the result (the `panel` block), a `[panel]` line of the log, and a row a case can pin with the golden kind `panel`. With $n$ written instants $t_k$ and values $v_k$ of the element's column:

- *not published*: the column is absent from the run. The panel is drawn with "not published", never a zero.
- *constant*: $\max v - \min v \le 10^{-8}\ \max(1, |\max v|)$ — the last digit `trajectory.csv` writes. The element shows a quantity that never moved in this run.
- *out of range*: a value below `range.min` or above `range.max`; the scale hides part of the run. *Limit outside range*: the limit cannot be seen on its own scale.
- *violated*: the count $k$ of instants with $v_k >$ high or $v_k <$ low (strictly), and the first and last such instant; $k = 0$ is *never violated* and $k = n$ *always violated*. The closest approach is $d = \min(\text{high} - \max v,\ \min v - \text{low})$, published with its fraction of the range. The periods of violation are published on every element with a limit (`limitIntervals`, no delay), apart from the periods its alarm is active (`intervals`, the delay applied).
- *never approached*: $k = 0$ and $d/(\text{range.max} - \text{range.min}) > 0.5$. The 0.5 is a default of the design record, not taken from a practice or a standard.
- *controller without element*: a PID of the flowsheet whose measured value no element shows. *Same quantity alarms*: more than one alarm on the same column (two columns that are functions of each other are not detected).
- *alarms active*: per instant the number of alarms in alarm, an alarm being active once its condition has held for its `delay`. Published: the maximum and the first instant it is reached (which can be the last written instant, so it is not when the alarms began), the first instant any alarm is active, the number of written instants with at least one active, and those periods as intervals. *Messages*: the first instant each message's trigger holds (or that it never does).

Every crossing is resolved to the *write grid*: a crossing between two writes is seen at the next one and an excursion shorter than one `writeInterval` is missed; the remedy is a smaller interval.

**What is not claimed.** The practice of alarm management — one cause one alarm, an action per alarm, the count of active alarms always in view — is written here as good practice from reasoning, *not verified against a standard*: none is held. The thresholds are the record's defaults. A fact is not a mark: a panel with two constant elements is not wrong, it shows a mode of operation in which two quantities do not move.

**Worked example.** `edbatch01_constant_current` carries a panel of six elements. At constant current the current density and the temperature never move (two *constant* facts); the lamp on $i/i_{\text{lim}}$ is the only limit the run crosses, from 1600 s on the write grid (the unit's own step-resolved crossing is 1593 s). Design record: `docs/design/operator-panel-in-the-case.md`; reference for authors: `docs/ai/case-layout.md`.

# 23 Effluent treatment — liquid & gaseous

Every flowsheet has a back door: the streams you do NOT sell. Design them with the same care as the product train — environmental limits are *legal* limits, and an untreated vent or outfall can shut a plant down. **Hypothesis to run:** before sizing any treatment, MINIMISE the load at source (recycle, substitution, leak reduction) — the cheapest effluent is the one never made.

## 23.1 Liquid effluent (wastewater)

A train of increasing cost and specificity; stop when you meet the discharge limit (typically COD, BOD, suspended solids, pH, oil & grease, specific toxics):

| Stage | Removes | Typical numbers | Use when |
|---|---|---|---|
| Equalisation + neutralisation | surges, pH | discharge pH 6–9; hours of buffer | always first |
| API separator / DAF | free oil, solids | oil to $<$ 10–50 mg/L | oily / heavy-solids water |
| Biological (activated sludge) | BOD / COD | 85–98% BOD removal; F/M 0.2–0.5 | biodegradable organics |
| Adsorption (GAC) / advanced oxidation | refractory toxics | polishing to ppb | non-biodegradable, colour |
| Membrane (UF/RO) / evaporation | dissolved salts | water reuse, zero-liquid-discharge | reuse or brine concentrate |

WHY a train: each stage is cheap *only* for what it targets — biology cannot take free oil, carbon is wasted on bulk BOD. Match the stage to the contaminant.

## 23.2 Gaseous effluent (air emissions)

| Pollutant | Control | Typical numbers |
|---|---|---|
| Particulates | cyclone → bag filter / ESP | baghouse to $<$ 10 mg/m$^3$; cyclone only $>$ 5–10 µm |
| Acid gases (SOx, HCl) | wet / dry scrubber | 90–99% removal; L/G 5–15 L/m$^3$ |
| VOC, dilute & high-flow | thermal / regenerative oxidiser | 95–99% destruction at 760–820 °C; RTO recovers ~95% heat |
| VOC, concentrated / valuable | condensation / carbon / absorption | recover the solvent if it pays |
| NOx | low-NOx burner + SCR | SCR 80–90% at 300–400 °C with ammonia |

The master rule: **dilute-and-high-flow favours destruction (oxidiser); concentrated-and-valuable favours recovery (condense/absorb)** — the same see-then-decide trade-off as everywhere else. Choupo's cyclone, absorber, and combustion duties size the front end; the discharge limit is the spec and the local regulation is the law (see *Standards & further reading*).

# 24 Pharmaceutical facilities — the GMP interior

A chemical plant is laid out on a plot (*Plant layout* above); a pharmaceutical plant is laid out *inside a building*, and the questions change. Where an item stands matters less than which *room* it stands in, how clean that room is held, which way the air moves through its doors, and who and what walks through it. This section is the Pareto orientation for an oral-solid-dose (tablet) facility — the case a student group meets first — and it says what Choupo checks when the case declares the interior, and what it leaves to the student.

**Cleanliness grades.** EU GMP Annex 1 (European Commission, EudraLex Volume 4, *Manufacture of Sterile Medicinal Products*, C(2022) 5938, para. 4.4) defines four grades: **A**, the critical zone for high-risk aseptic operations; **B**, the background room for grade A; **C** and **D**, cleanrooms for the less critical stages. Annex 1 is written for *sterile* products. A tablet plant is not sterile, and its rooms are usually specified by the company's own risk assessment, often as "controlled, not classified" (CNC) or by analogy with grade D; the grade a case declares is therefore the *case's* statement, with its source and reason, never a fact the software looks up.

**The pressure cascade.** Air must move from the cleaner room to the less clean one, so the cleaner room is held at the higher pressure. Annex 1 para. 4.14 gives a guidance value: adjacent rooms of different grades differ by at least 10 Pa. Choupo takes the step from the case (`cascade { minimumStep; source; reason; }`) and announces every door across which the cleaner side is not higher by that step.

**Airlocks.** Annex 1 calls an airlock "an enclosed space with interlocked doors" (glossary) and asks for one wherever people or material move between different grades, separate for personnel and material where possible (para. 4.12). An airlock is a *room* with its own pressure, and its pressure decides what it does:

- a **cascade** airlock sits between its two neighbours, a step in the cascade;
- a **bubble** airlock is higher than both, pushing air out through both doors — it keeps the dust of a contained room in *and* the corridor's air out;
- a **sink** airlock is lower than both, drawing air in through both doors and exhausting it.

A changing (gowning) room is a personnel airlock in stages of increasing cleanliness (para. 4.12 (i)); its final stage, at rest, is of the grade of the room it leads to.

**Containment.** A potent or toxic powder — the active ingredient while it is dispensed, sprayed or blended — must stay in its room. The room is held *negative* to its neighbours and reached through bubble or sink airlocks, Annex 1 para. 4.14's "positively or negatively pressurized airlocks". This is where the cascade and the containment pull in opposite directions, and the airlock is how a design reconciles them.

**Flows.** Three flows are laid out and kept apart: *personnel* (street clothes in, gowned to the work room), *material* (raw material in, product out — one way, never back through a room it has left) and *waste* (out by its own route). Where two flows must share a room (one clean corridor in a small plant), the design says so and why (closed containers, time separation by procedure).

**Solvents.** An amorphous solid dispersion is often made by spray drying from an organic solvent. The suite is then a hazardous area (gas zone 0, 1 or 2; a dust zone 20, 21 or 22 where powder clouds form) and is kept apart from ignition sources (switchgear, non-rated motors) by a separation the project's own classification sets.

**Escape.** Every room has a way out — doors and stairs, not a lift.

## 24.1 What Choupo checks, and what it does not

A case declares the interior as `building { ... }` in `system/layoutDict` (grammar: `docs/ai/case-layout.md`; engine: `src/postProcessing/layout/BuildingLayout.cpp`). The engine **refuses** a building that cannot exist: two rooms sharing a volume, a door between rooms with no common wall, an item that does not fit its room, a road through a room. It **announces** — on the console, in the caveat block and in the result — every door that breaks the cascade, every airlock whose pressures do not realise its declared regime, every change of grade with no airlock, a person who enters a graded room un-gowned, a contained room that is not negative or is reached directly, a flow through a wall, a material flow that goes back, two flows crossing where nobody declared they may, an ATEX room too close to an ignition room, and a room with no way out. The GUI draws the building in cutaway, coloured by grade, with the flows as arrows. Each of these rules is taught as an exercise, one changed declaration at a time, on a small teaching building the engine checks in the browser (EduTool *The GMP interior of a tablet plant*, beside *Plant layout*); the corpus witness with a whole building declared is `apalutamide01_tablets`.

**Air and water, sized from the building.** A case's `cleanUtilities` pass reads the rooms the layout has just checked (plan area, floor height, grade) and sizes the air plant from *air-change rates the case declares, one per grade, each with its source and reason*: supply flow, fan power and the sensible heating and cooling of the fresh-air share. The air is sensible only — no humidity, no latent load, no room heat gain, and the run says so — and the purified-water generator and storage follow from the water the batch plan draws and the cleans the plan counts

(below). No table of air changes is shipped (the published ones are standards that grant no redistribution), so the rates in the two tablet witnesses are author-set and marked so.

**The air has a price.** Design reports typically carry the HVAC as one lump; here its capital follows from the supply air just computed. The case *declares an installed cost per $m^3/h$ of supply air for each grade* (a `costing { quotes }` entry `hvacGrade`, `valuePerSupplyAir`, with its currency, year, source and reason), and the costing multiplies it by the supply air the pass sized for that grade: the HVAC capital is published per grade and in total. A grade with no declared cost is refused by name and the capital total reads incomplete — nothing is defaulted, and the two witnesses' figures are author-set placeholders, to be replaced by a quotation. The building quote must not carry the HVAC as well.

**Not checked — yours to do.** The air-change rate each grade needs, HVAC zoning and the filter classes behind each grade; particle and microbial limits; door widths, corridor widths and travel distances to an exit; the interlocks themselves; and whether a declared grade, step or separation is right for the product — that is the project's risk assessment.

**Further reading.** European Commission, *EudraLex Volume 4, Annex 1: Manufacture of Sterile Medicinal Products* (2022), whose reuse the Commission's document-reuse policy allows with acknowledgement of the source; ISPE, *Baseline Guide Volume 2: Oral Solid Dosage Forms*; ISPE, *Baseline Guide Volume 7: Risk-Based Manufacture of Pharmaceutical Products*; WHO, *Good manufacturing practices: guidelines on heating, ventilation and air-conditioning systems for non-sterile pharmaceutical products*. The ISPE guides are cited by title only: their tables grant no redistribution and none is transcribed here.

## 24.2 Batch and campaign operation — sizing per lot

A drug-product plant does not run at a steady rate. Its steps are done in **lots** — a blend of a few hundred kilograms, released by quality control before the next step uses it — and its continuous machines (a closed-loop spray dryer) in **campaigns** of several lots between full cleans. Sizing a blender for the plant's *average* hourly flow designs a machine no lot ever fills; it must be sized for one lot.

The classical method for a single-product batch plant works on the material balance *per kilogram of product*, which a steady flowsheet gives exactly. For each step (*stage*) $j$:

- the mass it handles per kg of product, $f_j$, from the balance; the **size factor** of a vessel is $S_j = f_j/(\rho_j \varphi_j)$ (bulk density, fill fraction), and the vessel for a lot of $B$ kg of product holds $V_j = S_j B$; a semicontinuous machine (press, compactor, packaging line) is sized by its rate, $f_j B$ over its operating time;
- its **cycle** $t_j$ is charge + process + discharge + clean; a vessel that empties through the step it feeds is held for that step's whole run;
- the **limiting cycle time** of a train is $T_L = \max_j t_j/N_{op,j}$ — the slowest step paces every lot, and a second unit *out of phase* (taking alternate lots) halves its share, while a unit *in phase* (sharing a lot) halves its size;
- an **intermediate store** decouples two trains, so each keeps its own cycle, campaigns and shifts (the spray dryer round the clock, the tablet suite on two shifts);
- lots a year are $N = \lceil Q/B \rceil$; a campaign takes the first lot's pass through every step, then one lot every $T_L$, then the changeover; a step's **occupancy** is its busy hours over its train's available hours.

A step that never limits and is busy a small fraction of the cycle is oversized or could be shared (one blender for both blends); a step that would be busy longer than the year cannot run the plan.

**In Choupo** a `batchPlan {}` pass in `system/postDict` does this on the converged flowsheet (grammar: `docs/ai/case-layout.md`; method: `src/postProcessing/BatchPlanPass.H`): it reads every stage's mass from the run, takes every time, density, fill, lot and shift pattern from the case with its source, refuses an impossible plan and announces a poor one; a vessel may take its volume from it, a quoted machine's price may scale with its size (the cost-capacity exponent is the case's), and the economics takes the year's flows from its production. **Cleaning, counted by the plan.** A plan may declare, for each wet-cleaned machine, the purified water of *one clean of one instance* (after a lot, and at a campaign changeover) and the fraction of that water that leaves as effluent (`cleaning`, each with its source and reason). The plan itself counts the cleans — one after every lot of each instance the lot is split over, and one of every installed instance at each changeover — and publishes, per machine, per full campaign of each train and per year, the cleans, the purified water and the *volume* of effluent ($m^3$ a year; its load is not computed). The purified-water generator and tank of `cleanUtilities` draw these cleans in the plan's Gantt: there is one water ledger, so a lump "cleaning" use beside them would count it twice. Without a `cleaning` declaration nothing is counted, and the run says so. A `ratedMachine` entry then asks, of each machine the flowsheet carries as a mass balance only, *does it fit the lot and the shift*: the load (working volume, kg/h, tablets/h or packs/h) read from the plan and the run, over a vendor rating the case declares with its source — never defaulted — and refused above 100 %, announced above 85 %. A batch machine has *one* size, the one installed (`nominalVolume`): the plan's volume at its target fill is the requirement held against it, the fill at the installed size is published and checked against `maxFill` (no minimum is declared), and a scaled quote is priced on the installed size. The app's Reports tab draws it: a machine-utilisation table, the bottleneck first, with the engine's own utilisation,

its "announced" mark and the batch plan's stage utilisation beside it, and the Gantt chart of the first campaign (SVG download); nothing in it is recomputed by the app. It computes no machine physics (no blend uniformity); a tablet press is checked for dwell time and compaction force only where the case declares the formulation's data (the paragraph below). **Not computed:** the intermediate store's size, QC release times; several products sharing the line are in the next section (Organising a multi-product plant), with what that plan still does not do. Worked case: `tutorials/batch/plant/apalutamide01_tablets`. The method is taught in the batch-process chapters of design textbooks (Biegler, Grossmann & Westerberg, *Systematic Methods of Chemical Process Design*; Seider et al., *Product and Process Design Principles*) — cited by title only.

**The tablet press on dwell time and compaction force (DEV.md 4c C270).** A press bought on its catalogue speed may not run at it. The punch flat of length $L$ stays under the roll for $t = L/(\pi D n)$ on a pitch circle $D$ at $n$ revolutions per second, so a formulation needing a minimum dwell $t_{\min}$ caps the speed at $n_{\max} = L/(\pi D t_{\min})$. Declared in the press's `designRules` as `dwell { punchFlat; pitchCircle; minimumDwellTime; source; reason; }`, the sizer publishes the dwell at the catalogue speed, the dwell-limited speed and capacity, and rates the press on the LOWER capacity, announcing a binding limit. An optional `effectiveness { availability; performance; quality; }` scales the capacity; a quality below 1 on a press whose flowsheet already splits off rejects is announced as the rejects counted twice. A `compaction {}` block reads ONE material's fitted Heckel and Ryshkewitch-Duckworth constants (from the `compactionFit` bench; no mixture rule) and inverts them: the porosity a target tensile strength needs, the pressure that gives it, the force on one punch against the press's maximum (Theory Guide, *From the fitted curves to the press*). Absent, the run says the press was not checked. Worked case: `tutorials/batch/plant/tabletPress01_dwell_and_force`: a 75 rpm catalogue press runs at 51 rpm for a 10 ms dwell, and a 2 MPa tablet of MCC needs about 30 MPa, 3 kN on an 11.28 mm punch. The batch plan is not re-timed by the dwell limit: the press's operating time stays the case's declaration, and a press that no longer fits it is refused.

# 25 Organising a multi-product plant

A pharmaceutical or fine-chemicals site rarely makes one product. It makes several strengths, forms or intermediates on *one* set of equipment, and the design question changes from "how big is each machine" to "how is the year's time divided between the products, and what does it cost to change from one to the next". This section is the method Choupo's batch plan uses, in the order a student should think it through, with the engine's lines and the standards behind each step. The worked cases are `tutorials/batch/plant/donepezil02_two_strengths` (two strengths of one tablet, one product after another) and `tutorials/batch/plant/apalutamide01_tablets` (a continuous spray dryer inside a lot regime). The method is taught in the batch-process chapters of design textbooks (Biegler, Grossmann & Westerberg, *Systematic Methods of Chemical Process Design*; Douglas, *Conceptual Design of Chemical Processes*) — cited by title only: neither was read for the engine, and the arithmetic is stated in full in `src/postProcessing/BatchPlanPass.H`.

## 25.1 Trains, stages and the lot

A **stage** is one step of the recipe done in one kind of machine (binder preparation, granulation, drying, compression, coating, packaging). Stages that run lot by lot together form a **train**; two trains are decoupled by an intermediate store, so each has its own shifts, cycle and campaigns (`BatchPlanPass.H`:133–136). The flowsheet is the material balance *per kg of product*; each stage's mass per lot is $f_j B$, $f_j$ read from the converged run and never typed (`BatchPlanPass.H`:92–100).

The **lot** is the unit quality control releases: a quantity of material made in one process run, with uniform character and quality (ICH Q7, *Good Manufacturing Practice Guide for Active Pharmaceutical Ingredients*, definitions of "batch" and "lot"). Its size is therefore a regulatory as well as an equipment choice. In Choupo the case declares it (`lot { rule declared; stream finalBlend; mass 300 kg; }`) or takes it from the largest vessel (`rule largestEquipment`), and it is the $B$ of every size factor (`BatchPlanPass.H`:59–64, 98). Lots a year are $N = \lceil Q/B \rceil$ (`BatchPlanPass.cpp`:518).

## 25.2 Cycle time, the limiting stage, units in and out of phase

A stage's cycle $t_j$ is charge + process + discharge + clean. The stage with the longest cycle per operating unit *limits* its train: $T_L = \max_j t_j/N_{op,j}$ is the interval at which a lot can leave the train (`BatchPlanPass.H`:104–113; `BatchPlanPass.cpp`:575–583 picks the limiting stage). Two ways to shorten it: a second unit *out of phase* takes alternate lots, so the stage's share is $t_j/2$; a second unit *in phase* shares each lot, so each vessel is half the size and the cycle is unchanged. The limiting stage is a property of the *product* as well as the plant: in `donepezil02_two_strengths` the 5 mg tablet is the 10 mg tablet at half the weight, so the same 300 kg bin holds twice the tablets and the press and the packaging line run twice as long (the case's per-product `stages`), and the packaging line limits the tableting train for *both* products but at 11 h for one and 20 h for the other. A stage busy a small fraction of its cycle and never limiting is oversized or could be shared; the plan announces it (`lowUtilisation`).

## 25.3 Campaigns and changeovers

Between lots of one product a stage is cleaned (`cleanTime`). Between *campaigns* the whole train is cleaned and cleared (`changeover`); between campaigns of *different* products every stage declares its own clean (`productChangeover`) and the train waits until the *slowest* stage is clean (`BatchPlanPass.H`:195–217; `BatchPlanPass.cpp`:602). A change of product is the campaign clean and line clearance *plus* the product's own part, so it is declared as the train's `changeover` plus an increment, never less; a product clean declared below it is announced (`productCleanShort`). Why a changeover costs hours, not minutes: the next product may only start on equipment shown to be clean, and that is **cleaning validation** — documented evidence, by swab or rinse sampling against limits fixed for the product that follows, that residues of the previous product are removed (EU GMP *Annex 15: Qualification and Validation*, the cleaning-validation section; the line clearance before the next lot is part of Chapter 5 of the EU GMP *Guide*, Production). The case declares the hours with a source and reason; Choupo does not compute them.

The clean can depend on the *direction*. In the donepezil case the 10 mg coat is yellow (iron oxide), the 5 mg is white: a trace of yellow in a white coat shows, a trace of white in a yellow one does not. So the clean *before the white product* is the long one (the 24 h campaign clean plus 12 h at the pan) and the clean before the yellow one short (24 h plus 6 h): the case declares it as `changeoverTo { strength5 36 h; }` on the product that has just finished (grammar `BatchPlanPass.H`:173–177; `BatchPlanPass.cpp`:476–482).

## 25.4 Single-product campaigns versus mixed sequencing

Two ways to share a plant between products. Choupo ships one.

- **Single-product campaigns**: all of product A's lots in campaigns of $n_c$ lots, then all of B's; the train is cleaned between campaigns of one product (`changeover`) and between products (`productChangeover`). The classical flow-shop form for a plant with few products and long runs (`BatchPlanPass.H`:195–217).

- **Mixed (interleaved) sequencing**: A, B, A, B… lot by lot. It shortens the inventory of each product but pays a changeover *per lot*, and needs a scheduling optimiser. Not built (`BatchPlanPass.H`:286–297).

Choupo ships the first because it is the one whose arithmetic can be written on a page and checked by hand, and because for a drug product the cleaning validation makes every changeover expensive. Its honest consequence, stated in the engine: *the order of the campaigns moves the year only through the direction-dependent cleans* (`BatchPlanPass.H`:219–224). With cleans that depend on the stage alone, any order costs the same and the order sets only the Gantt chart. With *two* products the plan also wraps the clean after the last campaign round to the first product (`BatchPlanPass.H`:208–210), so both directions are paid once whichever goes first, and the order is still free; from three products on it becomes a real decision, and it is the student's: the engine never takes it (`BatchPlanPass.H`:159–162). One rotation a year is built (each product's campaigns back to back); several rotations, trading changeovers for finished-goods inventory, are not (`BatchPlanPass.H`:286–297).

The equipment is sized for the product that needs the most: each vessel for $\max_i S_{ij} B_i$, and the case names which product that is (`sizingProduct`, `BatchPlanPass.cpp`:700).

## 25.5 Intermediate storage between trains

The textbook policies (Biegler et al.; cited by title) are **ZW** (zero wait: the product leaves the stage straight into the next, or is lost), **NIS** (no intermediate storage: the product waits in the unit that made it, blocking it) and **UIS** (unlimited intermediate storage: a tank between every pair of stages). What Choupo assumes: *within* a train, a stage hands to the next as one event seen from both ends, and a vessel that empties through the stage it feeds is held for that stage's processing time (`dischargeTime throughFedStage`) — the NIS behaviour; *between* trains, an intermediate store of unlimited size decouples them, each with its own campaigns (UIS), **but the store is not sized** (`BatchPlanPass.H`:264). A solid-dose plant's final-blend store is the IBCs in which the blend waits for QC release, which is the physical reason the two trains are decoupled.

## 25.6 A continuous unit in a lot regime

A spray dryer, a roller compactor or a packaging line runs *continuously*, yet the plant must release *lots*. The industrial arrangement, and the one the batch plan models, has three parts. Worked example: the spray-drying train of `apalutamide01_tablets`.

1. The continuous machine is a **semicontinuous stage** whose operating time is its own rate over the lot: `type semicontinuous; operatingTime fromFlowsheet;`, valid for a stage whose unit's throughput its declared hardware fixes (`BatchPlanPass.cpp`:423–428; `apalutamide01_tablets/system/postDict`:175–179). The machine is *not* cleaned between lots (`cleanTime 0 h`), but at the campaign's changeover (`lotsPerCampaign 7; changeover 48 h;`, same file, 110–113).
2. It is **fed from a batch tank**: the solution is made lot by lot in a vessel, and the vessel is held while it feeds the dryer, so its discharge is `dischargeTime throughFedStage` (`BatchPlanPass.cpp`:453–458; same file, 165–171). The tank, not the dryer, is where the lot's identity lives.
3. The train has **its own available time**: the dryer runs round the clock (7 920 h) while the solid-dose suite runs two day shifts (3 840 h), decoupled by the store of dried powder.

**What is a lot of a continuous stage?** Not the machine's hours. ICH Q13, *Continuous Manufacturing of Drug Substances and Drug Products* (2023), allows the batch (lot) to be defined by a quantity of material, by a run time, or by the quantity of input material — the batch-definition discussion of the guideline's continuous-manufacturing section (the section number is not given here: the text was not verified clause by clause). The plan's practice is the *input* definition: the lot is the dryer's feed from *one tank of solution* (one lot of dispersion), and the dryer's output over the time that takes carries that lot's identity; a time-window lot is the alternative, and in the plan it is the declared operating time and the lots per campaign. Whichever is chosen is a regulatory decision the case must state.

## 25.7 The year's Gantt chart and the deliverables of the plan

The plan publishes, per train, the stage cycles, $T_L$ and the limiting stage; per product, the lots, campaigns and spans; per stage, the busy hours and occupancy; the year as a Gantt chart of campaigns and changeovers, with each clean named by the direction it goes. The GUI's Batch plan section draws it from the engine's own numbers, and nothing is recomputed there. A plan whose busiest stage needs more hours than its train has is refused with the remedy named (an out-of-phase unit, a larger lot, more hours), and the year's flows for the economics are $Q/r_P$ (`streamFactor fromBatchPlan`).

**Not computed**: the intermediate store's size, mixed-product campaigns, several rotations a year, an optimiser of the order, stochastic QC release times, and any labour or utility schedule following the plan.

**The tools of a single-product plan, over several products** (`donepezil02_two_strengths`). The per-machine cleaning water, the machines' fit to their ratings and the clean-utilities pass all run on a multiproduct plan, each announcing that it ran over $N$ products. *Cleaning* counts, for each product $i$ on a machine of $N_{ip}$ instances in phase and $N_{op}$ out of phase: $N_i N_{ip}$ cleans after its lots, $(c_i - 1)N_{ip}N_{op}$ at its campaign changeovers and $N_{ip}N_{op}$ at the

one product changeover after its last campaign (a lone product: a changeover after every campaign); water and effluent are those counts times the declared volumes, summed over the products, and the log and `kpis.cleaning` carry one row per product beside the totals. The *rated machine* is checked against the lot and the operating time of *each* product; the refusal names the product that does not fit, the published utilisation is the binding product's, and a strength with its own tablet weight declares it (`itemMassByProduct`). The *HVAC* is room-based, so it does not depend on the product mix and is computed once; the *purified water* is drawn per lot of each product and summed over the year, the peak being the largest overlap of the multiproduct Gantt. What the case declares is still the case's: the volumes, the ratings and the air changes are assumptions to replace.

**References** (by title; none transcribed). Biegler, Grossmann & Westerberg, *Systematic Methods of Chemical Process Design* (batch-process chapters); Douglas, *Conceptual Design of Chemical Processes*; ICH Q7, *Good Manufacturing Practice Guide for Active Pharmaceutical Ingredients*; ICH Q13, *Continuous Manufacturing of Drug Substances and Drug Products* (2023); EU GMP, *Annex 15: Qualification and Validation* (cleaning validation) and *Chapter 5: Production*.

# 26 Cost estimation & profitability

Costing in Choupo is a *post-processing pass* (`CostingPass`, Guthrie/Turton models) feeding `EconomicsPass` (see `optim05_reactor_npv`). The numbers below are heuristics to be *run and checked*, never final verdicts — accuracy depends entirely on the AACE estimate class.

**Capital (CAPEX).** Two routes, increasing in effort:

- *Lang factor* — fixed capital = Lang factor × Σ(delivered equipment cost). Hypothesis to verify: a fluids plant lands near 4.7×; solids-handling near 3.1×; mixed 3.6×. The factor absorbs piping, instrumentation, civil, and indirects, so it is crude (±30-40%) but fast.
- *Bare-module (Guthrie/Turton)* — per-unit: $C_{BM} = C_p^0 \, F_{BM}$, with $F_{BM} = (B_1 + B_2 F_M F_P)$. Pressure ($F_P$) and material ($F_M$) multipliers are *itemised*, so this is the glass-box default. Verify: a SS316 vessel at 30 bar shows $F_{BM} \approx 5 - 7$ vs ~3 for carbon steel at 1 bar.

| Item | Typical range | Why |
|---|---|---|
| Lang factor (fluids) | 4.5-5.0 | Indirects dominate fluid plants |
| Lang factor (solids) | 3.0-3.6 | Less piping/instrumentation |
| Bare-module $F_{BM}$ (CS, low-P) | 2.5-4.0 | Base installation overhead |
| Six-tenths exponent $n$ | 0.5-0.7 (≈0.6) | Economy of scale on area/volume |
| CEPCI escalation | index ratio | ~600 (2019)→~800 (2023) |
| Site/auxiliary uplift | +10-25% | Grassroots vs battery-limit |

*Six-tenths rule:* $C_2 = C_1 (S_2/S_1)^{0.6}$. Doubling capacity raises cost only ~52% (2^0.6) — verify before sizing a redundant train. *CEPCI:* $C_{now} = C_{base} \, (I_{now}/I_{base})$; skipping a 4-year escalation understates CAPEX ~25%.

**Operating cost (COM).** Rule of thumb (Turton): $COM \approx 0.18\, FCI + 2.73\, C_{OL} + 1.23(C_{UT} + C_{WT} + C_{RM})$. Verify the dominant term:

| COM component | Typical share | Why |
|---|---|---|
| Raw materials | 40-80% | Usually dominant; selectivity is king |
| Utilities | 10-30% | Steam/cooling/power — pinch can cut 20-30% |
| Labour + supervision | 5-15% | Headcount × shift factor 4.5 |
| Maintenance | 3-6% of FCI | Wear-driven |

Because raw materials dominate, a 1% yield gain often beats any utility optimisation — test it against a pinch retrofit in the same case.

**Profitability.** Three lenses, never one:

- *Payback period* (FCI / annual after-tax cash flow): attractive <3 yr, marginal 3-5 yr, suspect >5-6 yr. Ignores time value, so it is a screen only.
- *NPV* at a hurdle rate (10-15% typical): positive ⇒ value-adding; verify sensitivity to discount rate and a 10-year horizon.
- *IRR/DCFROR*: the rate where NPV=0; want it 5-10 points above WACC. Below the hurdle even a short payback fails.

**Estimate class governs everything.** Report the band, not a point:

| AACE class | Maturity | Accuracy | Method |
|---|---|---|---|
| Class 5 | 0-2% | −30/+50% | Capacity-factored, six-tenths |
| Class 4 | 1-15% | −20/+30% | Equipment-factored (Lang) |
| Class 3 | 10-40% | −15/+20% | Bare-module / budget |
| Class 2 | 30-70% | −10/+15% | Detailed, semi-quantitative |

| AACE class | Maturity | Accuracy | Method |
|---|---|---|---|
| Class 1 | 50-100% | −5/+10% | Definitive, quote-based |

Quoting an NPV to four significant figures off a Class-5 estimate is the classic glass-box failure: the ±50% CAPEX band swamps the answer. Always run the case at both error bounds. In Choupo the economics pass does it for you: a `sensitivity` block inside the postDict's `economics` block moves each declared input *alone* to two ends and prices the same converged run again — a *tornado*, sorted by NPV swing. `FCI { relative accuracyBand; }` takes the capital to the two ends of the declared band; `price.<stream> { relative ( -0.2 0.2 ); }`, `utility.<name>`, `discountRate`, `streamFactor`, `taxRate` and `labourRate` move the rest (`relative` ends are fractions of the base value, `absolute` ends are values of the input). Read it as a *sensitivity*, not an uncertainty analysis: no probability is attached to either end, and inputs that move together in the market (the hydrogen and the electricity price) are moved one at a time. See `greenAmmonia02_feasibility150bar`, where a ±20% move of the hydrogen or the ammonia price swings the NPV some fourteen times as far as the whole $-30/+50$% capital band.

# 27 Materials of construction & mechanical design

Material choice is a *climb-the-ladder* decision: start with the cheapest metal that survives the duty, and step up only when corrosion rate, chlorides, temperature, or hydrogen force you. Each rung is roughly 1.5–4× the cost of the one below, so an unjustified jump from carbon steel to SS316 can double a vessel's bare cost (see Choupo's Guthrie/Turton material-factor `f_M` in the costing pass; carbonSteel/SS304/SS316/aluminium are the reference `data/materials/*.dat`).

**The selection ladder.** The governing rule of thumb is a target corrosion rate **< 0.1 mm/yr** (≈ 5 mil/yr) for a 20-year life; 0.1–0.5 mm/yr is tolerable with a fat allowance; above 0.5 mm/yr step up.

| Service / limit | Pick | Why (the WHY) |
|---|---|---|
| Dry hydrocarbons, steam, mild T < 400 °C | Carbon steel | Cheapest; ~0.1 mm/yr in benign duty |
| Dilute acids, oxidising, T < 60 °C, **chloride-free** | SS304 | $Cr_2O_3$ passive film; loses it to $Cl^-$ |
| Chlorides, dilute $H_2SO_4$, food/pharma | SS316 (2–3% Mo) | Mo resists pitting; PREN ≈ 24 vs 18 |
| Hot chloride + tensile stress | Duplex 2205 / Ni alloy | **Austenitic SCC** kills 304/316 |
| Strong HCl, wet $Cl_2$, HF | Hastelloy C-276 / lined | General attack defeats stainless |
| High-purity water, weight-critical | Aluminium | Cheap, light, but soft & low-T only |

**Chlorides & stress-corrosion (the silent killer).** Austenitic 304/316 suffer chloride **SCC** above ≈ **60 °C** with tensile stress and even ppm-level $Cl^-$ — failures look like brittle cracking with no wall loss, so a corrosion allowance does *not* protect you. Below 60 °C or for hot chlorides, jump to duplex (ferritic-austenitic, immune) or nickel alloys. Pitting resistance scales with $\mathbf{PREN = \%Cr + 3.3 \cdot \%Mo + 16 \cdot \%N}$ (304 ≈ 18, 316 ≈ 24, 2205 ≈ 35).

**High-T creep & hydrogen.** Carbon steel is creep-limited to ≈ **425 °C**; above this design stress collapses, so 1¼Cr–½Mo, 9Cr, or austenitics take over (relevant for fired-heater tubes and HiTec-salt service to 535 °C). In $H_2$ at pressure, consult **Nelson curves** (API 941): below the curve carbon steel is safe; above it, hydrogen attacks carbides → decarburisation and fissuring, demanding Cr-Mo steels.

**Corrosion allowance.** Add **3.0 mm** standard (1.5 mm benign, up to 6 mm aggressive). It is sacrificial metal, *not* an SCC or hydrogen fix.

**Wall thickness vs pressure.** Thin-wall (ASME VIII Div. 1): $\mathbf{t = P \cdot R/(S \cdot E - 0.6 \cdot P) + CA}$, with weld efficiency E = 0.85–1.0 and S the allowable stress (≈ 138 MPa for SS316 at moderate T). Design pressure margin: **max(operating + 10%, +1.7 bar)**; design temperature: operating + **25 °C**. A minimum shell of ~6–8 mm is set by handling, not pressure.

**Aspect ratios.** Vertical process vessels and knockout drums: **L/D ≈ 3** (range 2–5) — minimises wall metal at fixed volume while giving disengaging height. Distillation columns run **L/D up to 20–30**, capped by wind/seismic moment. Atmospheric storage tanks favour **L/D ≈ 0.5–1** (squat, cheap floor). Horizontal drums sit at **L/D ≈ 3–4**.

Glass-box check: re-run the Choupo sizing/costing pass swapping `material carbonSteel;` → `SS316;` and watch `f_M` and shell mass move; that is the cost of one rung.

**Corrosion allowance — how many millimetres?** Wall thickness = the pressure-stress thickness (from ASME) **plus a sacrificial corrosion allowance**: CA = corrosion rate × design life. Carbon steel corroding at ~0.1–0.25 mm/yr over a 20–25 year life gives the familiar **3 mm** (1/8 in) allowance; severe service runs to **6 mm**, clean/inert service to **0–1.5 mm**, and a corrosion-resistant alloy needs **none** (it is chosen so the rate is ~0).

| Corrosion rate | Verdict |
|---|---|
| < 0.1 mm/yr | excellent — carbon steel, 1.5–3 mm allowance |
| 0.1–0.5 mm/yr | acceptable with allowance + inspection |
| > 0.5 mm/yr | do NOT just thicken the steel — upgrade the alloy or line it |

The rule: a corrosion allowance buys time, not safety — above ~0.5 mm/yr the economics flip to a better material.

**Gaskets — the small part that floods the floor.** A gasket seals a flange by being squeezed between the faces; it must survive the **pressure, the temperature, AND every fluid the joint ever sees — including cleaning.** Select by P–T–fluid:

| Gasket | P–T window | Use when |
|---|---|---|
| Compressed fibre / PTFE sheet | to ~20 bar, ~200 °C | low duty; PTFE for chemical resistance |
| Spiral-wound (metal + graphite/PTFE filler) | to ~100+ bar, ~450 °C+ | the workhorse for process flanges |
| Ring-joint (RTJ, solid metal) | very high P (> 100 bar) | high-pressure gas, wellheads |

The wetted material — the winding and the filler — must resist the worst fluid, and the worst fluid is often **not** the product but the **CLEANING** step. A gasket chosen only for cold wine will corrode through during a **40 °C acid CIP wash**, and then the wine runs out of the joint on the next batch — a real and classic failure. **Specify the gasket (and the bolt load) for the most aggressive condition the joint ever sees, cleaning included**, never for normal operation alone.

# 28 Standards & further reading

This guide distils the classic references below. For any real design go to the primary source — and for anything safety- or environment-critical, the governing standard is the authority, not this guide (see *Disclaimer & scope*).

**General process design & heuristics**

- Turton, Shaeiwitz, Bhattacharyya & Whiting, *Analysis, Synthesis, and Design of Chemical Processes*, Prentice Hall.
- Seider, Seader, Lewin & Widagdo, *Product and Process Design Principles*, Wiley.
- Sinnott & Towler, *Chemical Engineering Design* (Coulson & Richardson, Vol. 6), Butterworth-Heinemann.
- Green & Perry, *Perry's Chemical Engineers' Handbook*, McGraw-Hill.
- Douglas, *Conceptual Design of Chemical Processes*, McGraw-Hill.
- Branan, *Rules of Thumb for Chemical Engineers*; Walas, *Chemical Process Equipment*.

**By topic**

- Heat integration / pinch — Smith, *Chemical Process Design and Integration*, Wiley; Kemp, *Pinch Analysis and Process Integration*.
- Distillation — Kister, *Distillation Design* & *Distillation Operation*, McGraw-Hill.
- Heat transfer — Kern, *Process Heat Transfer*; **TEMA** standards.
- Reactors — Fogler, *Elements of Chemical Reaction Engineering*; Levenspiel, *Chemical Reaction Engineering*.
- Membranes — Baker, *Membrane Technology and Applications*, Wiley.
- Plant layout — Mecklenburgh (ed.), *Process Plant Layout*, IChemE; Bausbacher & Hunt, *Process Plant Layout and Piping Design*, Prentice Hall; CCPS, *Guidelines for Siting and Layout of Facilities*, AIChE.
- Materials / corrosion — **NACE/AMPP** standards; **API RP 571** (damage mechanisms).
- Effluent — Metcalf & Eddy, *Wastewater Engineering*; **US EPA** and **EU Industrial Emissions Directive (BAT / BREF)** guidance.

**Safety & environmental standards — binding, not optional**

- Pressure relief & venting — **API STD 520 / 521 / 526 / 2000**; **ASME BPVC Sec. VIII & I**.
- Flares — **API STD 521 / 537**.
- Process-safety management — **OSHA 29 CFR 1910.119**; **AIChE CCPS** guideline series.
- Functional safety / SIS — **IEC 61508 / 61511**; HAZOP — **IEC 61882**.
- Flammables — **NFPA 30**; electrical area classification — **NFPA 70 / IEC 60079**.
- Siting & spacing — **API RP 752 / 753** (occupied buildings); **NFPA 30 / 58**, **API STD 2510** (tank and LPG spacing); hazardous areas — **IEC 60079-10-1**, **EI Model Code Part 15**, **API RP 505**, **NFPA 497**, **ATEX 1999/92/EC**.
- Emissions & discharge — the local regulator's limits (e.g. **US EPA**, **EU IED / BAT-BREF**).

# 29 Equipment selection at a glance

# 30 Equipment selection at a glance

This one-page table is the *index of bets* — each row is a duty you will face, the default pick, the one-line reason, and the range to start from. Treat every "typical number" as a hypothesis to verify by running the linked Choupo case. When two picks compete, the table gives the **default**; the section explains the crossover.

| Duty / situation | Pick this | Because | Typical numbers |
|---|---|---|---|
| Overall flowsheet structure | Reactor → separation → recycle, with a purge on any loop that accumulates inerts | The "onion": fix conversion + recycle before heat/utilities; purge bleeds what recycle would otherwise trap | Purge loses 1–5 % of recycle; target recycle so single-pass conversion ≠ overall conversion |
| Equilibrium-limited reaction | Push reactor to ~90–95 % of equilibrium, recycle the rest | Last few % of approach costs disproportionate volume; recycle is cheaper than oversizing | Single-pass X = 0.6–0.9; overall X > 0.99 via recycle |
| Fast liquid-phase reaction, high conversion | PFR (or CSTR-in-series) | Plug flow needs least volume for a given conversion; back-mixing penalises high X | PFR vol ≈ 1/3–1/2 of one CSTR at X = 0.9 |
| Autocatalytic, biological, solids-laden, or strong heat-removal duty | CSTR (or CSTR train) | Back-mixing dilutes feed, eases T control and solids handling | 3–4 CSTRs in series ≈ PFR; $\tau$ set by k and target X |
| Gas-phase catalytic reaction | Packed-bed (PFR model) | Heterogeneous catalyst + plug flow; watch $\Delta$P across bed | Superficial gas 0.3–1 m/s; bed $\Delta$P a few % of P |
| Separate close-boiling liquids | Distillation | Cheapest workhorse whenever relative volatility allows | Viable for $\alpha$ > ~1.05; easy for $\alpha$ > 1.5 |
| Distillation column operating point | Reflux R = 1.1–1.3 × R_min | Optimum trades reflux (energy) vs trays (capital); flat-bottomed cost curve | R/R_min ≈ 1.1–1.3; N ≈ 2–2.5 × N_min |
| Heat-sensitive / high-boiling bottoms | Vacuum distillation | Lowers boiling T below decomposition; protects product | Run at 0.05–0.3 bar when T_bottom > ~150–200 °C at 1 atm |
| Column vapour loading | Size to F-factor / fraction of flooding | Avoids flooding (carry-over) and weeping | $F = u \cdot \sqrt{\rho}_v$ ≈ 1–2.5; design at 70–85 % of flood |
| Dilute aqueous dewatering / desalination | Reverse osmosis (spiral-wound) | Pressure-driven, no phase change; rejects monovalent salts | $\Delta$P 15–70 bar (seawater); flux 15–30 LMH |
| Recover solvent / reject divalent ions, pass monovalent | Nanofiltration | Looser membrane, lower pressure than RO, partial-rejection selectivity | $\Delta$P 5–20 bar; rejects multivalent > 90 %, monovalent 20–70 % |
| Remove particles from a gas | Cyclone (coarse) → bag filter (fine) | Cyclone is cheap above ~5–10 µm; fabric filter takes sub-micron | Cyclone $\eta$ high > 5–10 µm; bag filter to < 1 µm |
| Produce a crystalline solid | MSMPR cooling crystalliser (or evaporative if solubility flat with T) | Cooling exploits steep solubility-T slope; evaporative when it is flat | Supersaturation low (metastable); residence min–hours |
| Clean liquid–liquid heat transfer | Shell-and-tube (or gasketed plate if T,P moderate) | Robust, costed, high U; plates beat it on area/cost when clean & < ~25 bar | U ≈ 250–750 W/m$^2$K; $\Delta$T_min ≈ 10 °C |
| Heat transfer with a gas on one/both sides | Extended/compact surface — **not** a bare shell-and-tube | Gas-side h is the bottleneck; gas–gas shell-and-tube needs huge area | U_gas–gas ≈ 10–50 W/m$^2$K; $\Delta$T_min ≈ 20 °C |

| Duty / situation | Pick this | Because | Typical numbers |
|---|---|---|---|
| Condense overhead / reboil bottoms | Kettle/thermosiphon reboiler; shell-side condenser | Phase change gives very high h; match utility to T-level | U_cond ≈ 1000–3000 $W/m^2K$; $\Delta T_min \approx$ 5–10 °C |
| Process duty above ~400 °C | Fired heater (very high T) or molten-salt loop (250–535 °C) | Steam tops out ~250 °C; salt covers the gap, fired heater above | HiTec salt 142–535 °C; Dowtherm A to ~400 °C |
| Size a pumped liquid line | Velocity 1–3 m/s (suction lower) | Balances pumping ΔP vs pipe capital; avoids settling/erosion | Discharge 1–3 m/s; suction 0.5–1.5 m/s; ΔP ~0.5 bar/100 m |
| Size a gas/vapour line | Velocity 15–30 m/s, capped by $\rho u^2$ | Low-density fluid → high velocity OK; erosion-corrosion limits $\rho u^2$ | 15–30 m/s; steam 30–60 m/s; $\rho u^2 <$ ~10000 $kg/m \cdot s^2$ |
| Default material of construction | Carbon steel | Cheapest; specify up only when corrosion/T demands it | Use to ~425 °C, non-corrosive, no chlorides |
| Chloride or aqueous-corrosive service | SS316 (not SS304) | Mo content resists chloride pitting that defeats 304 | 316 for chlorides/acids; 304 for mild aqueous/atmospheric |

**Use this guide as a map, not a destination.** Every range here is a place to *start* a Choupo case, not a number to copy onto a P&ID. The discipline the guide is teaching is the loop itself: form the heuristic bet, build the smallest case that tests it, run it, read what the solver actually does, and let the KPIs confirm or move the range for your system. The rules that survive that loop become judgment; the ones that fail teach you where your problem lives outside the textbook's assumptions. That is the whole point of a glass-box simulator — and the reason a heuristic you have personally falsified once is worth ten you merely memorised. Read the sections in the onion order, keep the at-a-glance table beside the keyboard, and verify everything by running it.