

Air Mode

Gestures	Mac/Macbook	Windows	iPad/Tablet
Tap On Surface	Left Click	Left Click	Left Click
			
Long Press Bottom	Right Click	Right Click	Right Click
			
Press Top Button	Next Page	Next Page	Next Page
			
Press Bottom Button	Previous Page	Previous Page	Previous Page
			
Scroll Left Bar	Scroll Up /Down	Scroll Up /Down	Scroll Up /Down
			
Scroll Top Bar	Scroll Left /Right	Scroll Left /Right	Scroll Left /Right
			
Pinch with 2 Fingers	Zoom In/Out	Zoom In/Out	Zoom In/Out
			
Slide Left/Right with 2 Fingers	Switch between Multi-tasks	Switch between virtual desktops	Switch between Multi-tasks


Air Mode

Gestures	Mac/Macbook	Windows	iPad/Tablet
Slide Up/Down with 2 Fingers 	Switch between Multi-tasks	Show Desktop/Windows	Switch between Multi-tasks
Tap with 3 Fingers 	Open/CLOSE Mission Control	/	/
Double-tap with 3 Fingers 	Look Up /Date Detectors	/	/
Mid-click 	Laser Pointer	Laser Pointer	Laser Pointer
Double tap & move 	Select/Drag	Select/Drag	Select/Drag

Note:

If your Mac OS does not support the “Launchpad” feature , follow these steps to enable it

- 1、Open “System Preference”
- 2、Type “keyboard shortcuts” in the search bar
- 3、Select “Launchpad & Dock” and “Show Launchpad”
- 4、Press fn+F4 It will show like this:

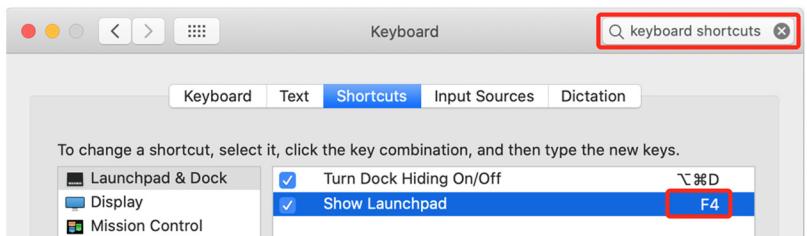

Ground Mode

Gestures	Mac/Macbook	Windows	iPad/Tablet
Left Click 	Left Click	Left Click	Left Click
Right Click 	Right Click	Right Click	Right Click
Mid-click + Move Up/Down 	Scroll Up/Down	Scroll Up/Down	Scroll Up/Down
Pinch with 2 Fingers 	Zoom In/Out	Zoom In/Out	Zoom In/Out
Tap with 3 Fingers 	Look Up/ Date Detectors	/	/
Double-tap with 3 Fingers 	Launcher	/	/
Left/Right Drag with 4 Fingers 	Switch between Multi-tasks	Switch between virtual desktops	Switch between Multi-tasks
Drag Up/Down with 4 Fingers 	Open/Close Mission Control	Show Desktop/Windows	Open/Close Mission Control

Indicator Light



	Function	LED state
Power	Charging	Red breathing
	Charged	Green on
Bluetooth	Broadcasting	Blue breathing
	Connected	Blue off
Laser	Laser on	Blue on
Finger	Four finger	Yellow on

Press & hold
middle button

Turn on device &
hold 2 seconds

Blue LED
blinks twice

Enjoy your
CheerPod!


Connect
to host

"CheerPod" can
be found by host

Reset Bluetooth & Connect to New Host

Note: will erase all bounded devices

Basic Operations

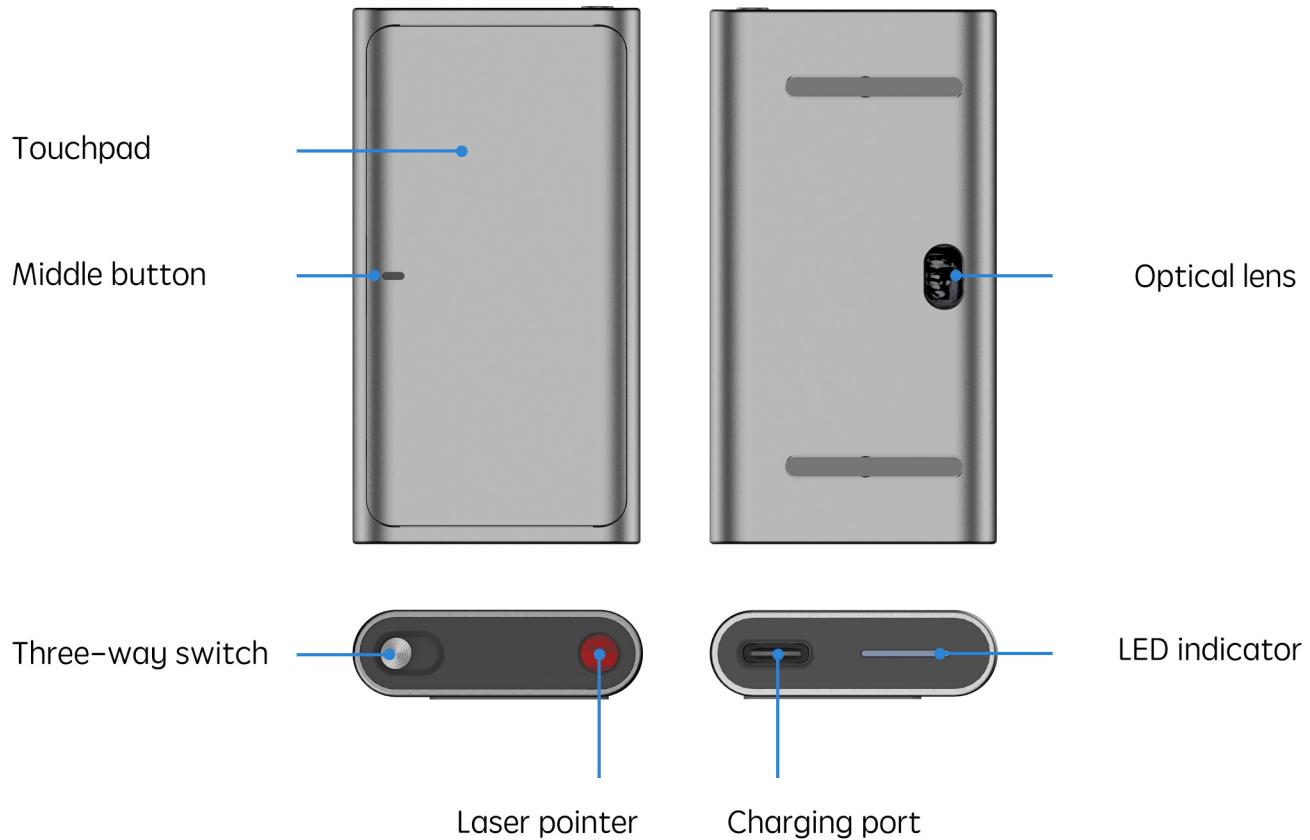

Off



Ground Mode



Air Mode

Mode Switch