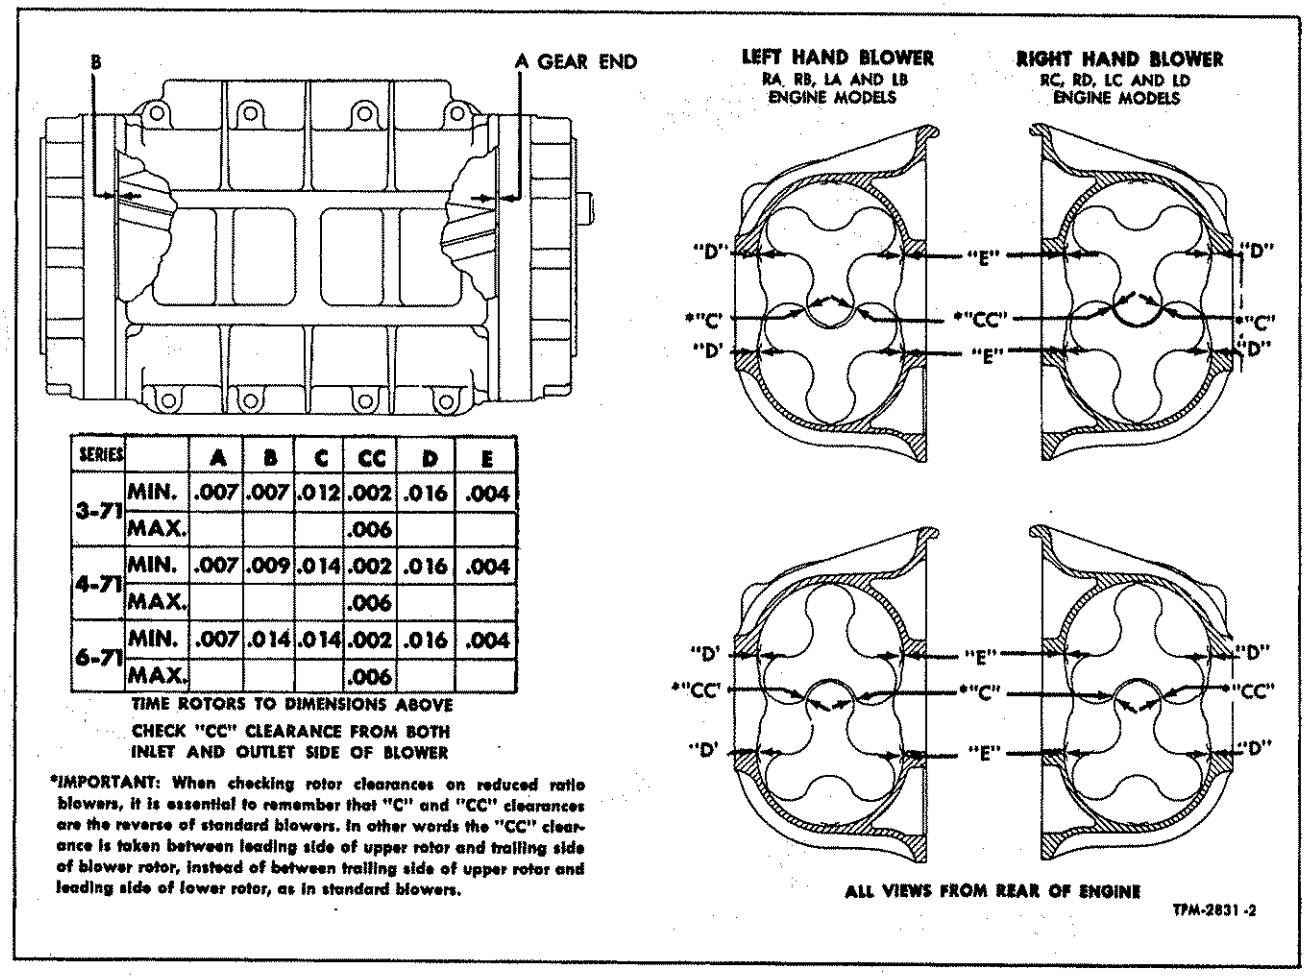


SERIES		A	B	C	CC	D	E
3-71	MIN.	.007	.007	.012	.002	.016	.004
	MAX.				.006		
4-71	MIN.	.007	.009	.014	.002	.016	.004
	MAX.				.006		
6-71	MIN.	.007	.014	.014	.002	.016	.004
	MAX.				.006		

TIME ROTORS TO DIMENSIONS ABOVE
CHECK "CC" CLEARANCE FROM BOTH INLET AND OUTLET SIDE OF BLOWER

*IMPORTANT: When checking rotor clearances on reduced ratio blowers, it is essential to remember that "C" and "CC" clearances are the reverse of standard blowers. In other words the "CC" clearance is taken between leading side of upper rotor and trailing side of blower rotor, instead of between trailing side of upper rotor and leading side of lower rotor, as in standard blowers.

Figure 24—Diagram of Blower Clearances

in their original positions before pressing gears onto shafts. If new gears or rotors are used, assemble without shims, and use later if necessary when timing rotors.

NOTE: Rotor timing gears are matched. Replace as a complete set when necessary.

1. Be sure that both rotor shafts with the omitted serrations, as shown in figure 19, point toward top of blower; that the gear with six tapped holes in hub, is located on the upper rotor shaft; and, if old parts are being reinstalled that original shims are placed on their respective shafts.

2. Start both gears onto shafts with omitted serrations on shafts and gears registering. An "O" mark is indented into end of shaft at omitted serration to assist in locating gears properly.

CAUTION: Gears must be pressed to position at the same time to avoid damage to gears and rotors. Do not pull gears up tight if rotors are in contact.

3. Attach blower gear installing tools J-6270-6 and J-6270-7 with puller screws J-6270-8 and J-6270-9 threaded into blower shafts as illustrated in figure 23. Install lower gear first until ⅝" of splines protrude.

4. Turn puller screw nuts evenly and alternately until gears are tight against bearing inner races. Torque puller screw nuts to 55-65 ft. lbs. to be sure that gears are fully seated.

ROTOR TIMING AND CLEARANCES

At this stage of the blower assembly, the blower rotors must be timed.

The three lobes on each blower rotor are spiral (helical) relative to the center line of the rotor shaft. The teeth on the timing gears are also helical, and, as previously stated, the rotor with the right-hand helical lobe is driven with a gear having right-hand helical teeth (fig. 19).