
Part 4


Assembling the Top threaded rods


Slide one of the threaded rods through one side of one of the top vertices. Put a washer, two nuts, and another washer on the part of the rod between the top vertices.

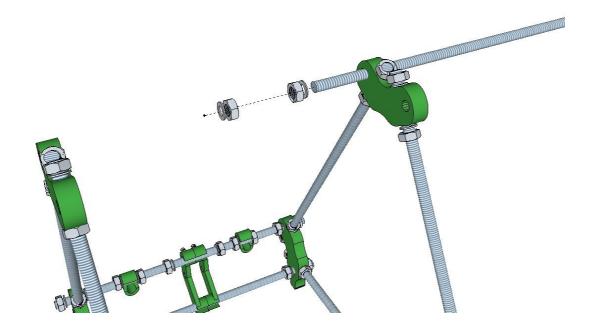


Repeat for the other rod.

2

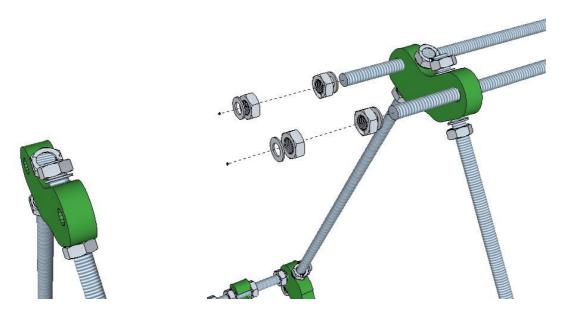

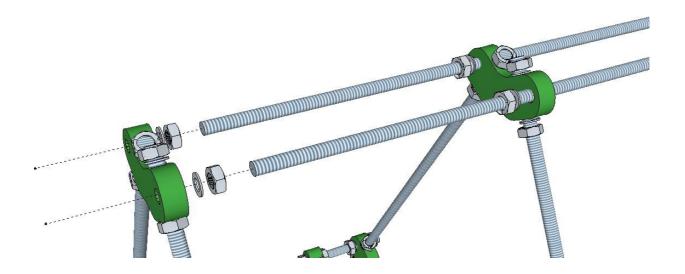


Slide the rods through the opposite side vertex. Thread the nuts up to the vertices on each side.

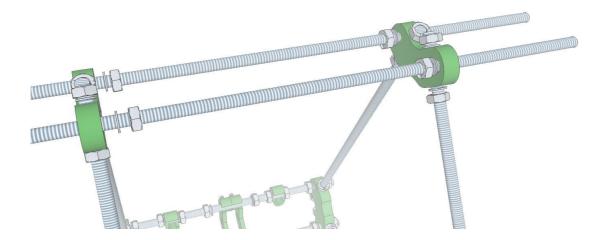


4


To each of the four ends of the threaded rod, add a washer, a nut and another washer.

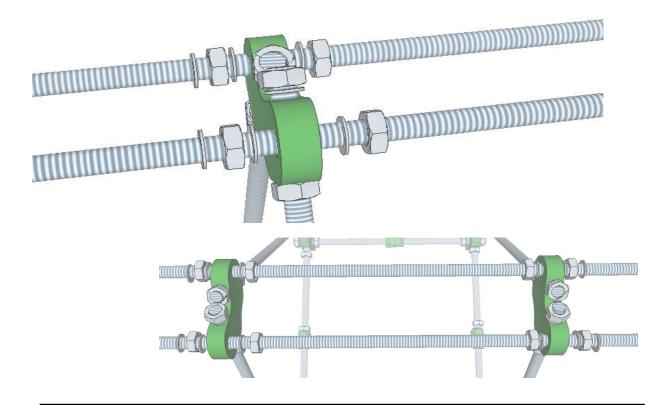

5

Take one of the RP z motor mounts and attach it to the ends of the threaded rod. The side with the two holes and the indentation should point towards the *outside*. Add a washer and nut to the end of each

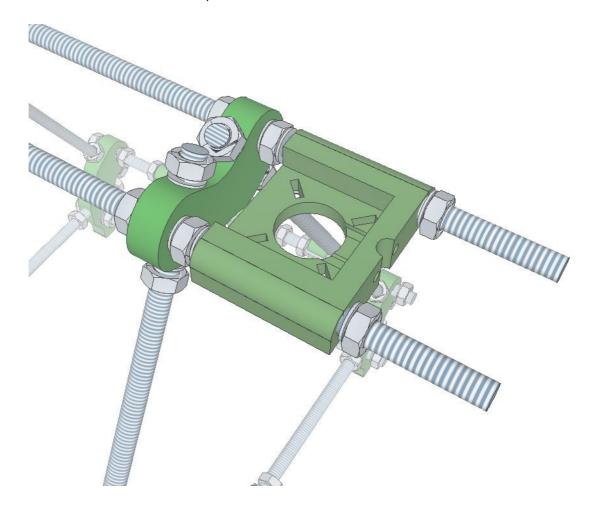

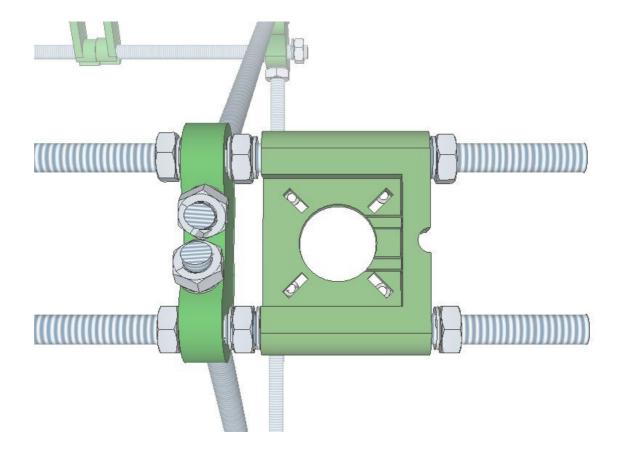

Repeat this on the other side.

