

CDL Class A

Commercial Driver Training Manual

A complete operator's curriculum for Class A Commercial Driver's License holders. Core fundamentals of safe tractor-trailer operation, followed by specialized modules for the five most common equipment types operating on U.S. highways.

01 · DRY VAN

02 · FLATBED

03 · CONTAINERS

04 · DUMP TRUCKS

05 · REFRIGERATED

Table of Contents

Part I — Core CDL Fundamentals3

1.1 The Class A License Explained3

1.2 Getting Licensed — The Process3

1.3 Hours of Service (HOS) — The 14-Hour Clock4

1.4 The Pre-Trip Inspection4

1.5 No-Zones — Eliminating Blind-Spot Crashes6

1.6 Coupling & Uncoupling7

1.7 Air Brake System Basics8

1.8 Managing Speed, Space, and Turns8

1.9 Backing & Docking9

1.10 Hours, Drug Testing & Professional Conduct9

Part II — Specialty Equipment Modules10

Module 01 — Dry Van11

1. Equipment & Specifications11

2. Typical Cargo11

3. Core Skills You Must Master12

4. Hazards & Daily Procedures12

Module 02 — Flatbed14

1. Equipment & Specifications14

2. Typical Cargo15

3. Core Skill: Cargo Securement15

4. Hazards & Daily Procedures16

Module 03 — Containers / Intermodal17

1. Equipment & Specifications17

2. Typical Cargo17

3. Core Skills18

4. Hazards & Daily Procedures18

Module 04 — Dump Trucks20

1. Equipment & Specifications	20
2. Typical Cargo	20
3. Core Skill: Safe Dumping	21
4. Hazards & Daily Procedures	21
Module 05 — Refrigerated (Reefer)	23
1. Equipment & Specifications	23
2. Typical Cargo	23
3. Core Skill: Temperature Control	24
4. Hazards & Daily Procedures	24
Appendix — Quick Reference	26
A. Critical Weight & Dimension Limits	26
B. Hours-of-Service Quick Card	26
C. Pre-Trip Core (memorize)	26
D. Securement Formula (Flatbed)	27
E. Emergency Contacts & Resources	27

EVERY CLASS A DRIVER · REQUIRED FOR ALL EQUIPMENT TYPES

Part I — Core CDL Fundamentals

This section covers the universal knowledge every Class A Commercial Driver's License holder must master before operating any combination vehicle on public roads. These fundamentals apply regardless of the trailer type you will eventually specialize in. Study this part thoroughly — every specialty module in Part II builds directly on it.

1.1 The Class A License Explained

A **Class A CDL** authorizes you to operate any combination of vehicles with a Gross Combination Weight Rating (GCWR) of **26,001 pounds or more**, provided the towed vehicle exceeds 10,000 pounds. This is the most versatile commercial license and covers tractor-trailers (semi-trucks), truck and trailer combinations, and most heavy equipment transports.

License class	Class A CDL
Minimum age	21 (interstate); 18+ in some states (intrastate only)
Vehicle covered	GCWR ≥ 26,001 lb, towed unit > 10,000 lb
Typical vehicles	Tractor-trailers, flatbeds, tankers, doubles/triples
Key endorsement: air brakes	Required for nearly all Class A work

1.2 Getting Licensed — The Process

- 1 Obtain a Commercial Learner's Permit (CLP).** Pass the general knowledge, combination vehicle, and air-brake written tests at your state DMV. Hold the CLP for a minimum of 14 days before the skills test.
- 2 Complete Entry-Level Driver Training (ELDT).** Federal regulations require certified theory and behind-the-wheel (BTW) training from a provider listed in the FMCSA Training Provider Registry before you can take the skills test.
- 3 Pass the three-part skills test:** (1) Pre-trip vehicle inspection, (2) Basic vehicle control (straight back, offset back, alley dock), and (3) On-road driving.
- 4 Add endorsements** as needed for your career path: Air Brakes (most Class A), Hazmat (H), Tanker (N), Doubles/Triples (T), Passenger (P), School Bus (S).
- 5 Pass a DOT medical exam** with a certified Medical Examiner and carry the Medical Examiner's Certificate. Re-certify every 1–2 years depending on health.
- 6 Clear the Drug & Alcohol Clearinghouse** — a negative pre-employment test is required, and you remain in the random pool afterward.

NOTE ELDT is mandatory.

Since February 7, 2022, all new CDL applicants must complete Entry-Level Driver Training through an FMCSA-listed provider. Your state DMV cannot issue the skills-test results until the provider reports your completion to the Training Provider Registry.

1.3 Hours of Service (HOS) — The 14-Hour Clock

The Hours-of-Service rules (49 CFR Part 395) exist to prevent fatigue, the leading contributor to fatal truck crashes. Master the clocks below — violations carry civil penalties and place your CDL at risk.

Rule	Limit	What it means
Drive time	11 hours	Maximum driving after 10 consecutive hours off duty.
Window	14 hours	Once you start (on-duty, not driving counts), you have 14 hours to drive. You cannot drive after the window closes even with breaks.
Duty cycle (60/70)	60 hr / 7 days · 70 hr / 8 days	Maximum on-duty time in any 7- or 8-day period, depending on your carrier's operation.
Rest	10 hours off	Required off-duty/sleeper time before restarting the 11/14-hour clocks.
30-min break	Required	If more than 8 hours have passed since your last off-duty period, take a 30-minute break before driving again.
Restart	34 hours	A 34-hour consecutive off-duty reset restarts the 60/70-hour clock.


Record your status on an **Electronic Logging Device (ELD)**. The device automatically captures driving time through the engine; you must annotate on-duty (not driving), off-duty, and sleeper-berth status. Never falsify logs — ELDs retain tamper-evident records.

1.4 The Pre-Trip Inspection

A thorough pre-trip inspection is your single best defense against roadside breakdowns, citations, and crashes. It is also the first part of your CDL skills test — fail it and the test ends immediately. Walk the vehicle in a consistent clockwise pattern so you never skip an area. The diagram below shows the standard 7-point sequence.

PRE-TRIP INSPECTION — CAB + TRAILER

The 7-step clockwise walk-around (DOT-required, every shift)

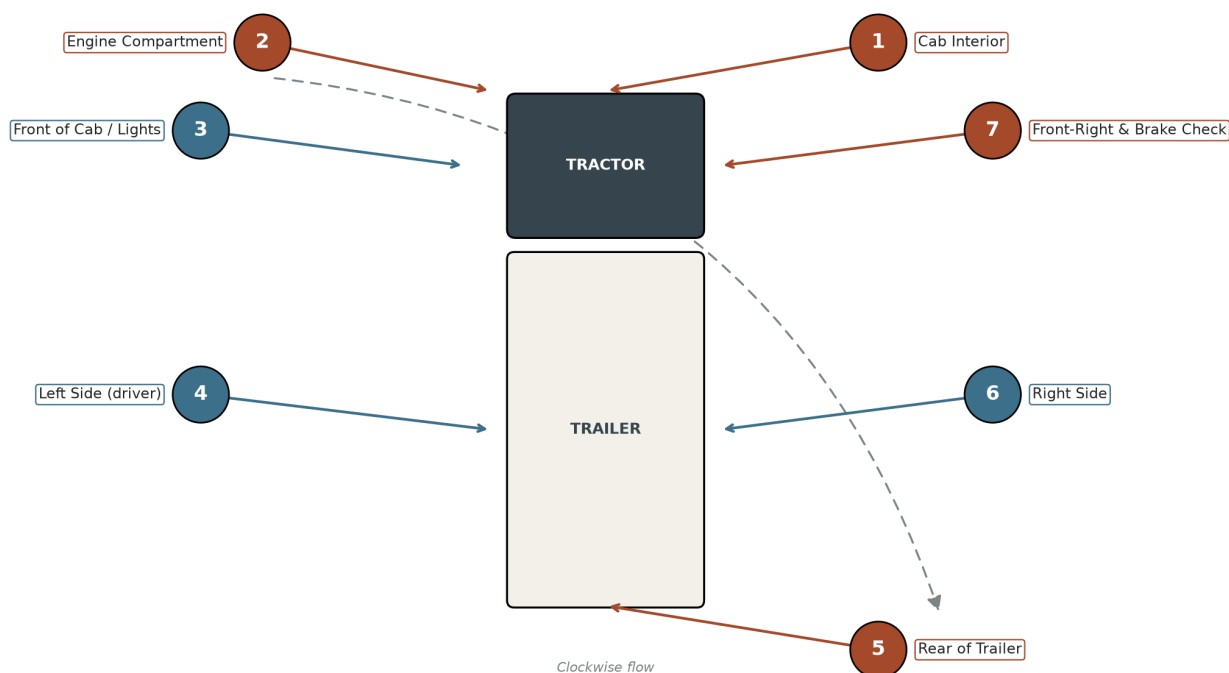

Key items: tires & pressure · wheels/rims · brakes/hoses · lights/lenses · suspension/air bags · fluid leaks · coupling · doors/latches · registration & permits

Figure 1.1 — The clockwise 7-point pre-trip walk-around

Items you must verify (memorize these)

- **Engine compartment (engine off):** oil, coolant, power-steering fluid; belts and hoses free of cracks/fraying; leaks on the ground; wiring intact.
- **Cab (engine on):** all gauges in normal range, air pressure builds to 120–140 psi and alarm/buzzer stops; parking brake holds; service brake responds; horn, wipers, washers, lights, defroster, mirrors clean.
- **Brake check:** with full pressure, shut off engine and hold 1 minute — pressure drop must be < 4 psi (single vehicle) or < 6 psi (combination); low-pressure alarm activates at 55–60 psi; spring (parking) brakes pop out at 20–45 psi.
- **Lights:** all clearance, marker, headlight (high/low), turn-signal, brake, and hazard lamps work and lenses are clean and uncracked.
- **Tires:** minimum 4/32-inch tread on steer axle, 2/32 on others; no cuts, bulges, regrooving, or mismatched sizes; inflation to rated pressure.
- **Wheels/rims:** no cracks, missing lug nuts, or rust streaks (a sign of loose/failed lugs).
- **Suspension:** springs not broken or shifted; air bags inflated and not leaking; U-bolts tight.
- **Coupling:** fifth-wheel jaws closed around the kingpin; release arm latched; locking pin in; no space between skid plate and fifth wheel; air and electrical lines connected and undamaged.
- **Trailer:** doors latched and locked; cargo secure; landing gear raised and cranked up; no leaks underneath; glad-hand connections tight.

- **Paperwork:** current registration, insurance, annual DOT inspection sticker, and any required permits (oversize, hazmat, IFTA).

CAUTION Never skip the pre-trip to save time.


A defect you miss in the yard becomes a roadside violation — or worse, a crash — on the highway. The 15 minutes you invest can prevent a 6-hour breakdown and a career-altering accident.

1.5 No-Zones — Eliminating Blind-Spot Crashes

Because of the trailer's length and height, a tractor-trailer has enormous blind spots called **No-Zones**. A passenger car hidden in a No-Zone is completely invisible to the driver — not in the mirrors, not in peripheral vision. Roughly one-third of multi-vehicle truck crashes involve a car traveling in a No-Zone.

NO-ZONES — TRUCK BLIND SPOTS

Where your trailer cannot see a car. Stay out of these zones.

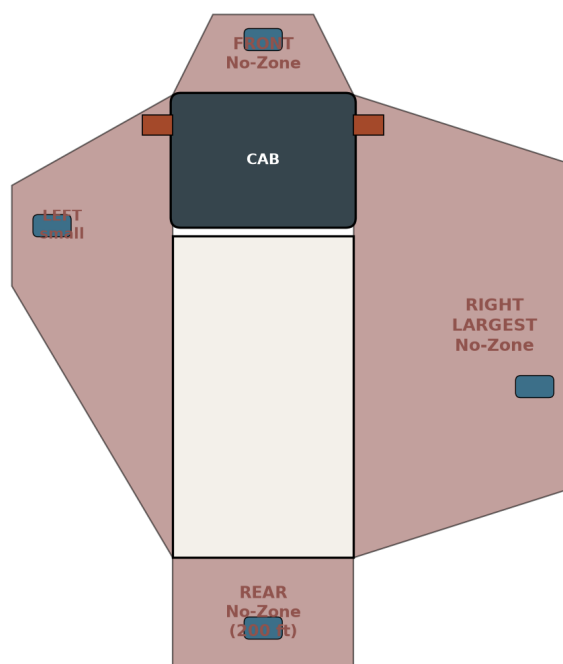

Rule of thumb: If you can't see the driver's face in the truck's mirrors, the driver CANNOT see you.

Figure 1.2 — The four No-Zones around a tractor-trailer

- **Front No-Zone:** the long hood blocks vehicles directly ahead and close. Do not tailgate — keep a minimum 4–6 second following distance.
- **Rear No-Zone (≈200 ft):** the trailer hides everything directly behind. If a car is following too closely, you cannot see its headlights; ease off and let it pass.
- **Left (passenger-side) No-Zone:** smaller, but still blind for one lane. Always check the West Coast (large) mirror before merging left.
- **Right No-Zone (LARGEST):** spans up to 3 lanes on the right. **Never** attempt a right turn while a vehicle is alongside — make wide turns and watch the convex mirror constantly.

NOTE The mirror rule.


If you cannot see the driver's face in the truck's mirrors, the driver cannot see you. For drivers sharing the road with trucks: pass on the left, pass promptly, and never linger alongside.

1.6 Coupling & Uncoupling

Connecting and disconnecting the trailer is a task you will perform daily. Done wrong, it causes **dropped trailers** — the trailer separates from the tractor, often destroying the fifth wheel and damaging the landing gear or the trailer itself. The diagram and checklist below cover the correct sequence.

COUPLING — FIFTH WHEEL & KINGPIN

How the tractor locks onto the trailer

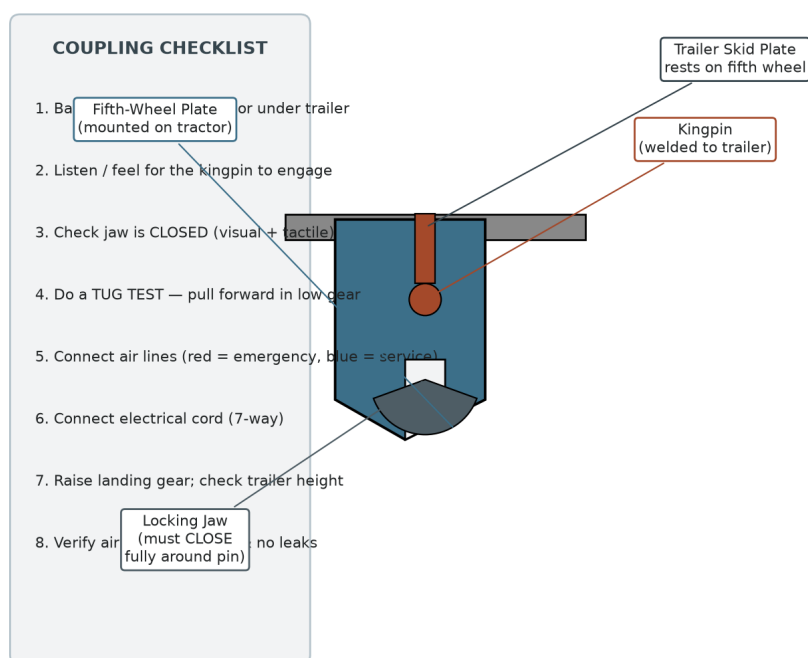

A failed tug test = the kingpin is NOT locked. The trailer can drop onto the fifth wheel (a 'dropped trailer').

Figure 1.3 — Fifth-wheel and kingpin engagement

Coupling procedure (never skip the tug test)

- 1 Position the tractor in line with the trailer; inspect the fifth wheel is greased and the jaws are fully open.
- 2 Back slowly until the kingpin engages and locks. You will hear a loud clunk and feel the tractor take the weight.
- 3 Get out and **visually verify** the locking jaw is closed around the kingpin and the release arm is in the locked position.
- 4 Perform the **tug test**: put the tractor in low gear and gently pull forward against the locked fifth wheel. The trailer must NOT separate. If it does, recouple.

- 5 Connect the air lines — red (emergency) and blue (service) — to the correct glad hands, and connect the 7-way electrical cord.
- 6 Fully raise and stow the landing gear; check the trailer is level with the fifth wheel (kingpin height $\approx$ flush with the skid plate).
- 7 Build air pressure and check for leaks; verify trailer brakes apply and release. You are ready to roll.

DANGER The tug test is non-negotiable.

Each year, hundreds of dropped trailers occur because a driver trusted the clunk sound instead of performing the tug test. A trailer that drops at speed can swing into oncoming traffic. Always tug-test before you raise the landing gear.

1.7 Air Brake System Basics

Nearly every Class A vehicle uses **air brakes**. Understanding how the system holds and releases the brakes is essential — a brake failure on a 80,000-lb vehicle is catastrophic.

Component	Function	Critical fact
Compressor	Builds air pressure (driven by the engine)	Pumps air into the tanks whenever the engine runs.
Air tanks (wet & dry)	Store air, drain moisture	Drain daily; water in the system causes freeze-ups and corrosion.
Governor	Cycles the compressor (cut-in $\sim$ 100 psi, cut-out $\sim$ 125–135 psi)	Keeps tank pressure within the safe working range.
Service brakes	Foot pedal applies brakes on all wheels	Air pressure pushes the pushrod, rotating the S-cam to force shoes against the drum.
Spring (parking) brakes	Large springs apply the brakes when air is released	Fail-safe: if air pressure is lost, springs automatically apply the brakes at 20–45 psi.
Low-pressure alarm	Warns of pressure loss	Must activate by 60 psi; if it sounds, stop safely and immediately.
Tractor protection valve	Prevents tractor air loss if trailer line breaks	Closes automatically to preserve tractor brakes.

1.8 Managing Speed, Space, and Turns

- **Following distance:** maintain at least 1 second of following distance for every 10 ft of vehicle length at speeds under 40 mph; add 1 second over 40 mph. For a 60-ft combination at 55 mph, that's about 7 seconds.
- **Speed on curves:** posted advisory speeds are for passenger cars. Reduce by 5–10 mph below the advisory; a trailer can roll over (jackknife or rollover) well below the car-safe speed.

- **Right turns:** swing wide left and keep the trailer's rear close to the right curb (off-track). Watch the right convex mirror the entire turn — never turn blind.
- **Left turns:** reach the intersection before turning; keep the trailer's rear to the right of the center line to avoid clipping oncoming traffic.
- **Downhill braking:** select a low gear at the top; use short (snub) brake applications to hold speed rather than constant light braking, which overheats drums and causes fade.
- **Jackknife prevention:** if the trailer starts to swing out, ease off the brake and accelerate slightly to straighten; never stab the brakes.

1.9 Backing & Docking

Backing is the most common maneuver that causes damage. The cardinal rules: **Get Out And Look (GOAL)** whenever you are unsure, back slowly, and use a spotter when available. On the skills test you will demonstrate the **alley dock** and **offset back**.

- Set up squarely before backing; align the tractor with the space.
- Back **slowly** — never faster than a walking pace — using both mirrors.
- Steer toward the mirror where you want the trailer to go (the trailer reverses direction).
- Stop and GOAL at the first sign of doubt: dock height, obstacles, pedestrians, other vehicles.
- At a dock, ensure the trailer is flush against the bumpers before the forklift boards; never let anyone board a trailer not restrained by a dock lock.

1.10 Hours, Drug Testing & Professional Conduct

- You are subject to **pre-employment, random, post-accident, reasonable-suspicion, and return-to-duty** drug & alcohol testing. A positive test suspends your CDL and requires a SAP (Substance Abuse Professional) process to return.
- Always carry: CDL, current medical card, registration, proof of insurance, and ELD credentials.
- At any weigh station or DOT inspection, cooperate fully; defects found become part of your carrier's CSA (Compliance, Safety, Accountability) score.
- Report crashes, injuries, and hazardous spills to DOT (and to your carrier immediately).

FIVE TRAILER TYPES · CHOOSE YOUR LANE

Part II — Specialty Equipment Modules

After mastering Part I, you will specialize in one or more equipment types. Each module below covers the equipment, typical cargo, key skills, hazards, and daily procedures for that trailer type. Read every module even if you specialize in one — on the road you will share lanes with all five, and understanding their behavior keeps you safe around them.


#	Equipment	Typical Cargo	Signature Skill
01	Dry Van	Palletized dry freight, boxes	Dock backing & load distribution
02	Flatbed	Steel, lumber, machinery	Cargo securement & tarping
03	Container	Intermodal port/rail freight	Chassis handling & twist-locks
04	Dump Truck	Sand, gravel, asphalt	Hydraulic dumping & site safety
05	Refrigerated	Food, produce, pharma	Temperature control & reefer care

ENCLOSED VAN TRAILER · THE INDUSTRY WORKHORSE

Module 01 — Dry Van

DRY VAN

Enclosed, weather-tight van trailer — the industry standard

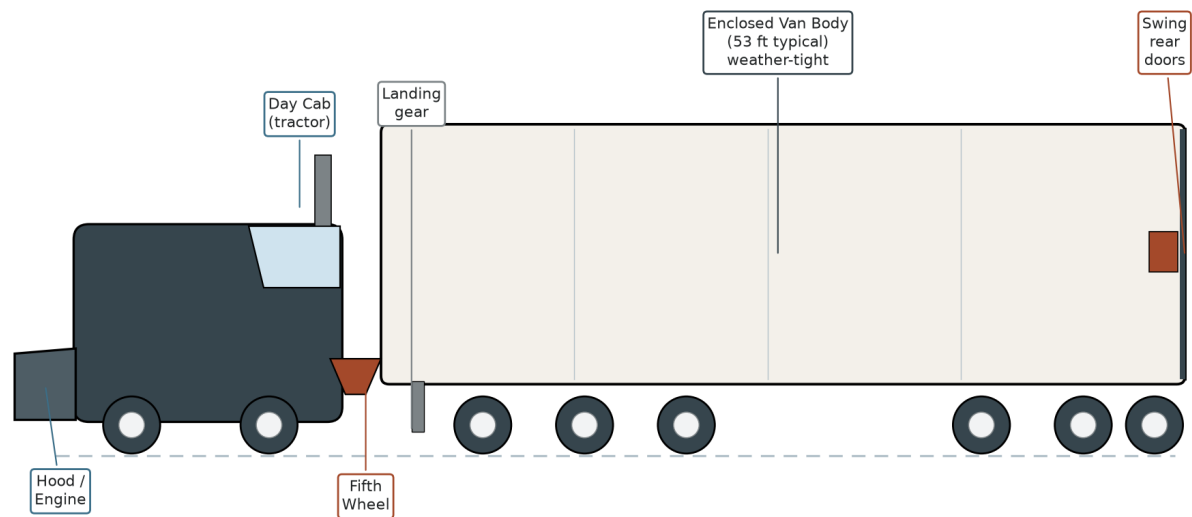

Cargo: palletized goods, boxes, dry freight | Typical length: 53 ft | No temperature control

Figure 2.1 — Dry van anatomy: enclosed box, swing rear doors, fifth-wheel coupling

The **dry van** is the most common trailer on U.S. highways — an enclosed, weather-tight rectangular box, typically **53 feet** long, hauled by a day-cab or sleeper tractor. It protects freight from the elements and is the entry point for most new CDL drivers. Because the cargo is hidden, your job centers on **load distribution**, **dock backing**, and **protecting the freight** from shifting and damage.

1. Equipment & Specifications

Trailer length	53 ft (most common); also 48 ft, 45 ft
Interior height	≈ 110 in (standard); up to 117 in (high-cube)
Floor type	Hardwood or aluminum plank; forklift-rated
Doors	Swing rear doors (two-leaf), occasionally roll-up
Securement	E-track, load bars, shoring beams, dunnage, air bags
Empty weight (trailer)	≈ 14,000–16,000 lb

2. Typical Cargo

- Palletized consumer goods, electronics, packaged food, and retail merchandise.
- Paper rolls, building materials (drywall, packaged), and non-perishable beverages.
- Anything requiring **dry, clean** transport but no temperature control.

3. Core Skills You Must Master

3.1 Weight Distribution & Bridge Law

The **bridge law** (Federal Bridge Formula) limits how much weight you may carry per axle group based on axle spacing, to protect pavement and bridges. For a standard 5-axle tractor-trailer the legal cap is **80,000 lb GVWR** (12,000 steer + 34,000 drives + 34,000 trailer tandems). As a dry-van driver you constantly **slide the trailer's tandem axle** and the fifth wheel to balance the load and stay legal on each axle group.

CAUTION Balance the load front-to-rear.

Place the heaviest freight over the drive axles and toward the front of the trailer. Too much weight on the trailer's rear causes the tractor's steer axle to go light (loss of steering); too much forward overloads the steer axle.

3.2 Dock Backing

- 1 Approach the dock door slowly, using your mirrors; sound the horn and watch for pedestrians and dock workers.
- 2 Align the trailer squarely with the dock; small steering inputs only — backing magnifies every wheel movement.
- 3 Back until the trailer's rear is flush against the dock bumpers; set the parking brake before anyone boards.
- 4 Confirm the dock lock (or chocks) is engaged before the forklift enters; never move the trailer while it is being loaded.
- 5 After loading, re-check axle weights; slide tandems if needed to legal out before departure.

3.3 Load Securement Inside the Van

- Use **load locks / shoring beams** across the trailer to prevent pallets from shifting forward under braking.
- Stack to the roof only with freight rated for it; band or shrink-wrap unstable loads.
- Fill voids with **dunnage** (air bags, cardboard, lumber) so cargo cannot slide.
- Heavy pallets at the bottom; light, fragile goods on top.

4. Hazards & Daily Procedures

Hazard	Prevention
Shifting load → rollover or freight damage	Lock every load; inspect after first 50 miles and at each stop.
Slip/trip at the dock	Chock wheels; use 3-point contact climbing in/out; keep the floor clear.


Hazard	Prevention
Pallet jack / forklift injury during loading	Stay in the cab or a safe zone; never between trailer and dock.
Trailer doors jammed / wind-slam	Use door straps; open both doors fully and secure before backing or leaving.
Roof leaks damaging freight	Pre-trip the roof for holes; report any water stains immediately.

BEST PRACTICE Dry-van daily flow.

Pre-trip → confirm BOL (Bill of Lading) and seal number → load/seal → re-check axle weights → drive legally → arrive → break seal in front of receiver (or per carrier policy) → unload → inspect trailer for damage → next load.

OPEN DECK · CARGO SECUREMENT IS YOUR CRAFT

Module 02 — Flatbed

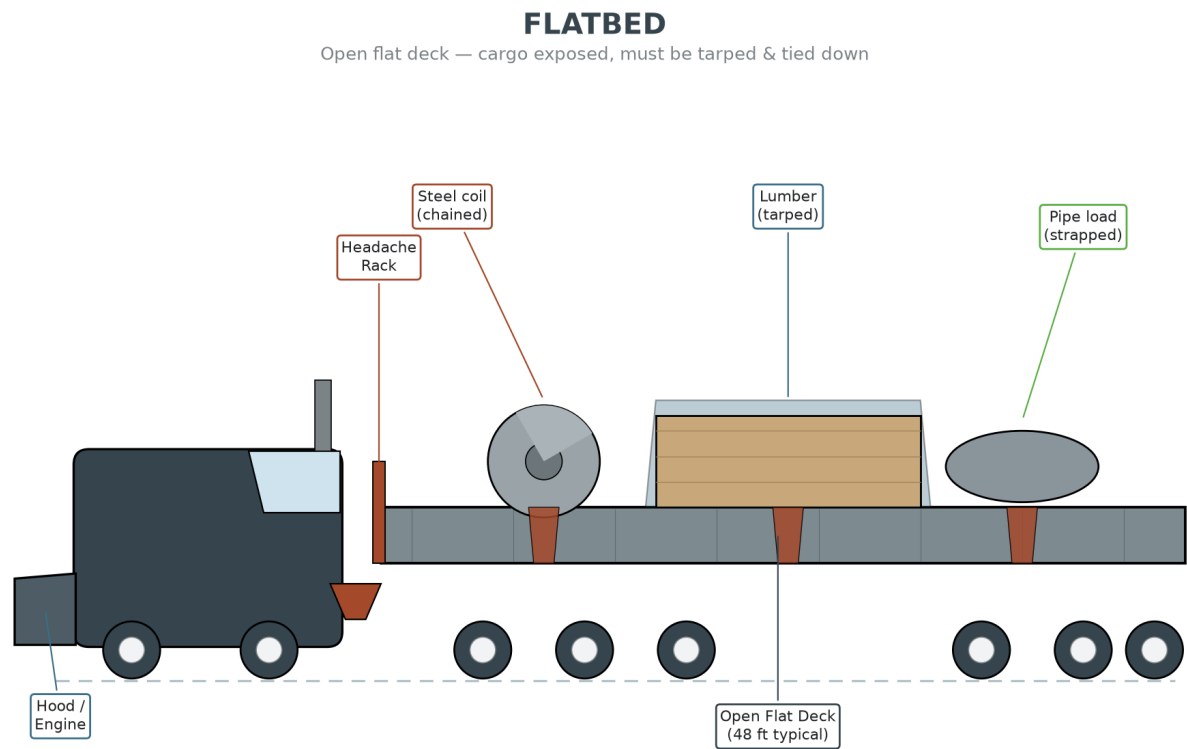

Cargo: steel, lumber, machinery, building materials | Deck: 48 ft | Tarping & securement skills required

Figure 2.2 — Flatbed with mixed cargo: steel coil (chained), lumber (tarped), pipe (strapped)

A **flatbed** is an open deck trailer — no walls, no roof — used for cargo too large, heavy, or irregular for a van: steel, lumber, machinery, building materials, and oversized loads. The freight is fully exposed to weather and to the highway, so **cargo securement** and **tarping** are the defining skills of this trade. Flatbed pays more than dry van precisely because of the physical, technical work involved.

1. Equipment & Specifications

Deck length	48 ft (standard); also 45 ft, 53 ft
Deck type	Flat, step-deck (drop), RGN (removable gooseneck) for oversize
Deck surface	Apitong hardwood or steel plate
Securement hardware	Chain (Grade 70 transport), ratchet binders, web straps, edge protectors, dunnage
Rub rails	Side rails with stake pockets and anchor points
Headache rack	Steel barrier behind the cab to stop forward-shifting cargo

2. Typical Cargo

- Steel coils, beams, plate, and rebar.
- Lumber, drywall, roofing materials, and precast concrete.
- Heavy machinery, vehicles, transformers, and oversized equipment (often permit loads).

3. Core Skill: Cargo Securement

CARGO SECUREMENT — TIE-DOWN FUNDAMENTALS

FMCSA 393.110: Working Load Limit (WLL) rules

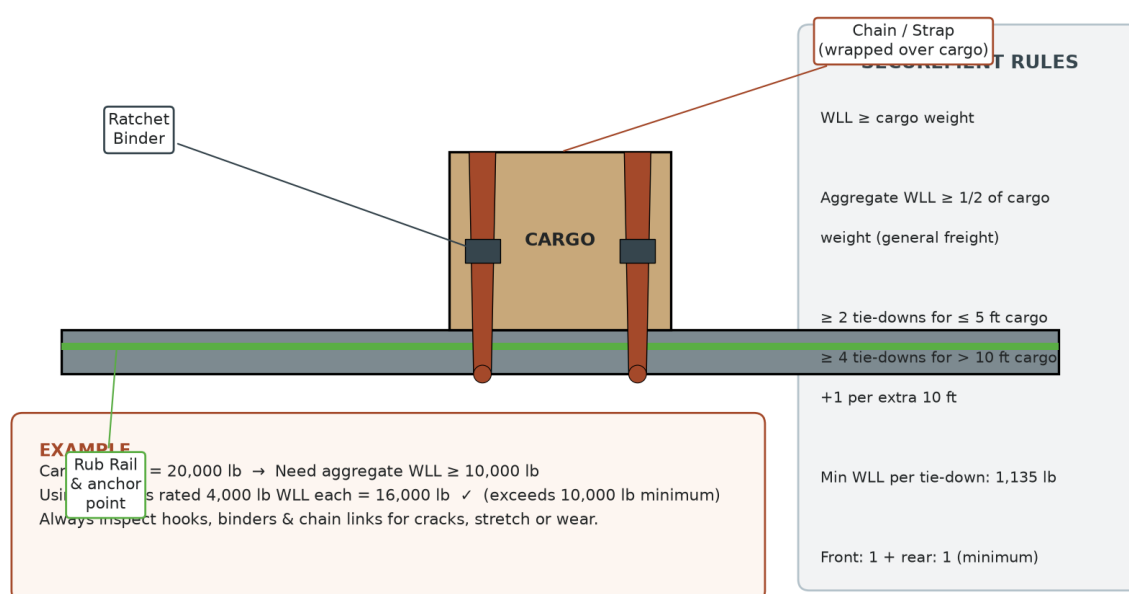


Figure 2.3 — Tie-down fundamentals: WLL rules, anchor points, and the aggregate-WLL calculation

Federal securement rules (49 CFR 393.110) require that tie-downs restrain the cargo against forward, rearward, sideways, and vertical movement. The key metric is the **Working Load Limit (WLL)** — the maximum force a chain, strap, or binder is rated to hold — marked on every transport chain.

The securement math

- 1 Sum the WLL of all tie-downs to get the **aggregate WLL**.
- 2 **Aggregate WLL must be $\geq$ half (1/2) the cargo weight** for general freight. (Some articles require the full weight — check the commodity rules.)
- 3 Minimum number of tie-downs: 1 per 10 ft of cargo length; 4 minimum over 10 ft. Cargo $\leq$ 5 ft long needs $\geq$ 2; 5–10 ft needs $\geq$ 2.
- 4 Every chain/strap WLL must be $\geq$ 1,135 lb (500 kg).
- 5 Use edge protectors where chain/strap contacts sharp cargo edges — they prevent cutting and load shifting.

CAUTION The 50-mile re-check.

Within the first 50 miles after loading, stop and re-tighten every binder. Vibration always loosens chains. Re-check at every stop thereafter. A loose load is a roadside violation and a crash waiting to happen.

3.1 Steel Coil (Suicide / Shotgun Coils)

Steel coils are dangerous: a 20-ton coil that breaks free will demolish the cab. Coil securement is highly regulated. A coil carried **eyes-forward (shotgun)** needs cradles and 4+ chains; **eyes-to-the-side (suicide)** requires blocking plus chains through the eye. Always follow the shipper's coil-rack configuration and the Steel Coil Toolkit rules.

3.2 Tarping

- Tarp protects lumber, steel, and dry goods from rain and road grime. Use the correct tarp size and type (lumber, steel, machinery).
- Tarp on level ground when possible; never climb on a wet or icy load without fall protection.
- Fold and bungee tarp edges to the rub rail to prevent wind from ballooning it (which costs fuel and can tear the tarp).
- Tarping is physically demanding — learn to use your legs, not your back, and avoid working in high winds.

4. Hazards & Daily Procedures

Hazard	Prevention
Cargo shifting / falling off deck	Correct WLL; pre-trip securement; 50-mi re-check; edge protectors.
Crush injury from coils/machinery	Never stand in the line of travel; use coil racks; follow shipper rigging plan.
Fall from the deck / load	3-point contact; non-slip boots; fall protection above 4 ft (OSHA).
Overhead power lines / low bridges	Know your loaded height; never exceed 13 ft 6 in without a permit; check clearance.
Tarp wind-tear & fuel loss	Secure all edges; pull over if wind exceeds ~40 mph to inspect.

BEST PRACTICE Flatbed daily flow.


Pre-trip deck & headache rack → receive load plan & weights → load per shipper config → chain/strap to WLL → apply edge protectors & tarp → 50-mile re-tighten → drive → unload per receiver plan → inspect chains/binders for wear before reuse.

ISO SHIPPING CONTAINERS ON CHASSIS

Module 03 — Containers / Intermodal

CONTAINER / INTERMODAL

ISO shipping container on a skeletal chassis

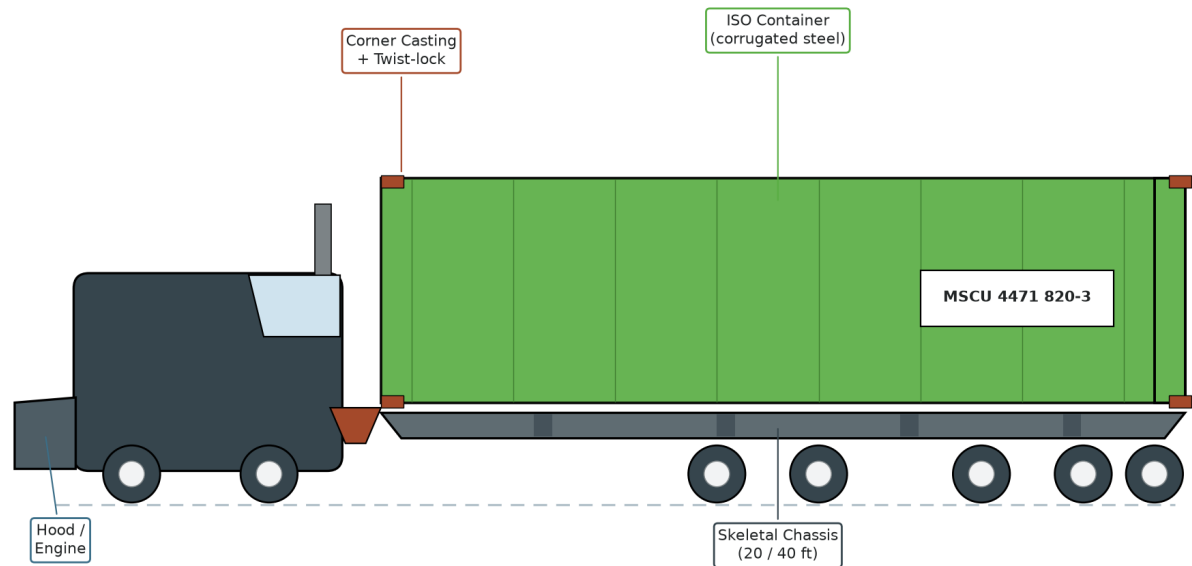

Cargo: port/rail intermodal freight | Sizes: 20 ft / 40 ft / 40HC | Twist-lock securement to chassis

Figure 2.4 — ISO container on a skeletal chassis, locked at the corner castings

Container (intermodal) hauling moves standardized **ISO shipping containers** between ports, rail yards, and distribution centers. The container rides on a lightweight **skeletal chassis** and locks in place at four corner **twist-locks**. The work is fast-paced, schedule-driven, and demands precision backing under overhead gantry cranes and into tight chassis yards.

1. Equipment & Specifications

Container sizes	20 ft, 40 ft, 40 ft High-Cube (HC), 45 ft
Container weight (empty)	≈ 4,000 lb (20 ft) · ≈ 8,000 lb (40 ft)
Max payload	≈ 60,000 lb (limited by road laws & chassis)
Chassis	Skeletal steel frame with twist-locks at corner castings
Twist-locks	Quarter-turn locks that engage the container's corner castings
Genset (reefer containers)	Clip-on generator for refrigerated containers on chassis

2. Typical Cargo

- Imported consumer goods from ports; exported industrial and agricultural products.
- Rail-intermodal freight moving coast-to-coast in containers.
- Refrigerated ('reefer') containers carrying produce, seafood, and pharmaceuticals.

3. Core Skills

3.1 Chassis Inspection — Different From a Van

Intermodal chassis are often **interchanged between carriers** and can be poorly maintained. A rigorous chassis inspection is critical. Verify: all four twist-locks are present and engage fully; landing legs are functional; tires, brakes, lights, and ABS lamp work; no cracked welds on the frame; glad-hands and the 7-way connect cleanly.

3.2 Locking & Verifying the Container

- 1 Back under the chassis until the fifth wheel engages; perform the tug test.
- 2 Confirm all four corner twist-locks are **turned and locked** — never transport a container with an unlocked corner.
- 3 Check the container number and seal match the paperwork; photograph the seal.
- 4 For a reefer container, set and verify the genset is running and temperature is on set-point before departure.

3.3 Port & Rail Yard Procedures

- Follow the terminal's pace and rules strictly — gates, scanners, and queues move on schedule.
- Back precisely under gantry cranes / reach stackers; the operator lifts the container off — hold position, brake set.
- Maintain your TWIC® card for port access; keep your state-issued CDL and DOT medical current.
- Watch container weight — overloaded 'heavy-test' 20-ft boxes can exceed legal axle limits; redistribute or obtain permits.

4. Hazards & Daily Procedures

Hazard	Prevention
Container shifts / unlocks	Verify all 4 twist-locks every pickup; tug test; never move unlocked.
Chassis defect (brakes, tires, lights)	Full chassis pre-trip; reject defective chassis via interchange.
Crane / reach-stacker collision	Stay in cab with brake set during lift; obey ground spotters.
Overweight container	Weigh at terminal scale; refuse illegal loads; arrange permits or re-stow.
Reefer temperature excursion	Set & verify genset; record temp hourly; report deviations immediately.

BEST PRACTICE Intermodal daily flow.

Pick up chassis at yard → pre-trip chassis → gate-in at terminal → back under crane → container loaded & twist-locked → verify seal & paperwork → deliver → chassis interchange inspection at destination → return chassis to pool.

END-DUMP, BELLY-DUMP, AND TRANSFER TRAILERS

Module 04 — Dump Trucks

DUMP TRUCK (End-Dump Trailer)

Hydraulic lift tilts the bed to discharge aggregate

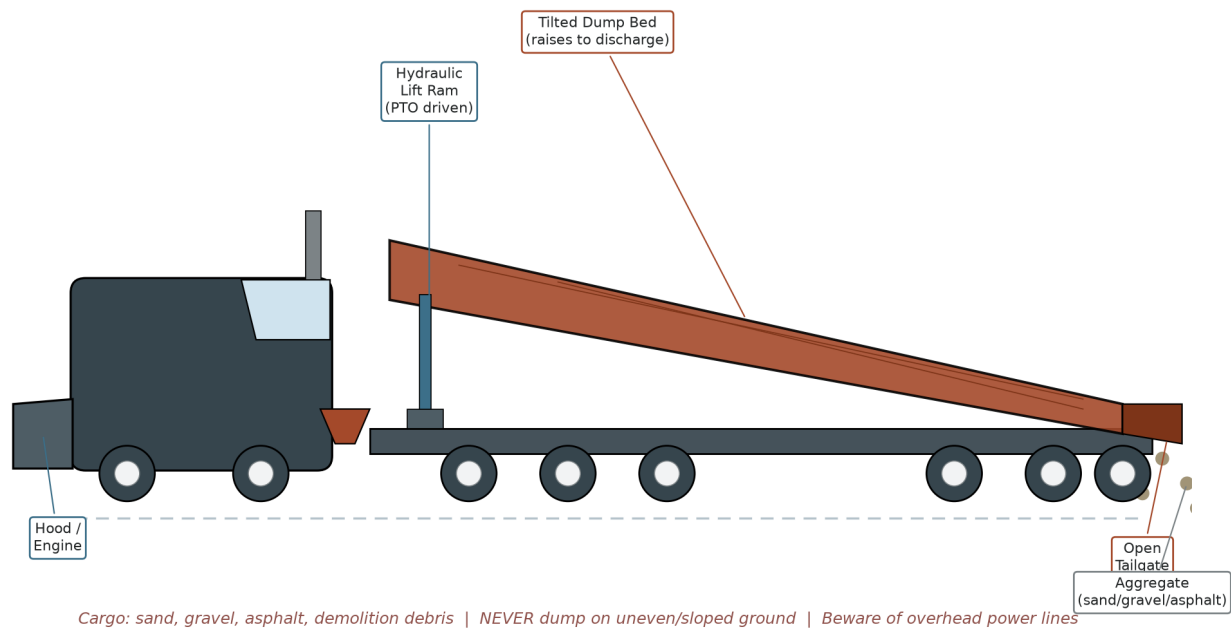


Figure 2.5 — End-dump trailer raised by a hydraulic ram; aggregate discharges at the rear

Dump trucks haul loose material — sand, gravel, asphalt, demolition debris, and coal — and discharge it by raising the bed with a **hydraulic cylinder** powered by the tractor's Power Take-Off (PTO). The raised bed creates a high center of gravity and is the single greatest source of dump-truck rollovers. This module focuses on the discipline that keeps these machines upright.

1. Equipment & Specifications

Types	End-dump (raises & tips rear), belly-dump (bottom dump), transfer (pup) trailer
Bed material	Steel or aluminum; steel for abrasive rock, aluminum for lighter aggregate
Lift mechanism	Front-mounted hydraulic cylinder (end-dump); PTO-driven pump
Typical capacity	20–26 tons (tractor-trailer end-dump)
Tarp	Electric or manual roll-tarp required by most states to prevent spillage
Tailgate	Hinged rear gate opens during dump; latch must release fully before raising

2. Typical Cargo

- Construction aggregates: sand, gravel, crushed stone.
- Hot-mix asphalt (insulated beds) and concrete materials.
- Demolition debris, fill dirt, coal, and agricultural bulk.

3. Core Skill: Safe Dumping

Most dump-truck fatalities occur during the dump. The bed is tall, the truck is unstable, and wind, slope, or a stuck load can flip the rig in seconds. Follow this sequence exactly.

Pre-dump checklist

- 1 Park on **firm, level ground** — never on a slope, soft soil, or fill that can give way.
- 2 Confirm the area is clear of people, equipment, and **overhead power lines** (a raised bed contacting a line is lethal).
- 3 Open / release the tailgate latch; deploy the tarp.
- 4 Raise the bed slowly and smoothly; watch both mirrors and the bed in the rear-view; stop immediately if the truck begins to lean.
- 5 Once empty, lower the bed **completely** and confirm the bed-rest indicator before moving. Never drive with the bed raised.

DANGER Power lines kill.

A raised dump bed that contacts an overhead line energizes the entire truck. If it happens: stay in the cab, call 911, and warn others away. If you must exit (fire), jump clear without touching truck and ground at the same time, then shuffle away in small steps.

3.1 Belly-Dump (Bottom Dump)

Belly dumps spread material through a bottom gate while moving — used for road base and windrowing aggregate. The bed never rises, so rollover risk is low, but you must control the gate precisely to lay an even layer. Practice spreading on a closed surface before working live construction.

3.2 Transfer (Pup) Trailers

A transfer system moves a second dump box from a trailer into the main truck's frame to dump it. Secure the pup correctly during transport; an unsecured pup can shift into the tractor during hard braking.

4. Hazards & Daily Procedures

Hazard	Prevention
Rollover during dump	Level ground only; raise slowly; watch mirrors; stop at any lean.
Overhead power line contact	Survey lines first; never raise under or near lines; assume all lines are live.
Bed stuck / material hang-up	Do not rock the truck with the bed up; lower and loosen the load.

Hazard	Prevention
Driving with bed raised	Verify bed fully down & indicator on before every move.
Spillage on the road	Always cover with the tarp; clean the bed's rear edge before leaving the pit.
Hot asphalt burn	Wear PPE; never stand behind the bed during discharge.

BEST PRACTICE Dump-truck daily flow.


Pre-trip (hydraulics, PTO, bed, gate, cylinder pins) → load at pit/plant → tarp → weigh → drive carefully (high CG, slow on turns) → dump on level ground per checklist → lower bed completely → inspect cylinder & gate before next load.

TEMPERATURE-CONTROLLED FREIGHT · SET IT, MONITOR IT, PROVE IT

Module 05 — Refrigerated (Reefer)

REFRIGERATED VAN (Reefer)

Insulated box trailer with front-mounted refrigeration unit

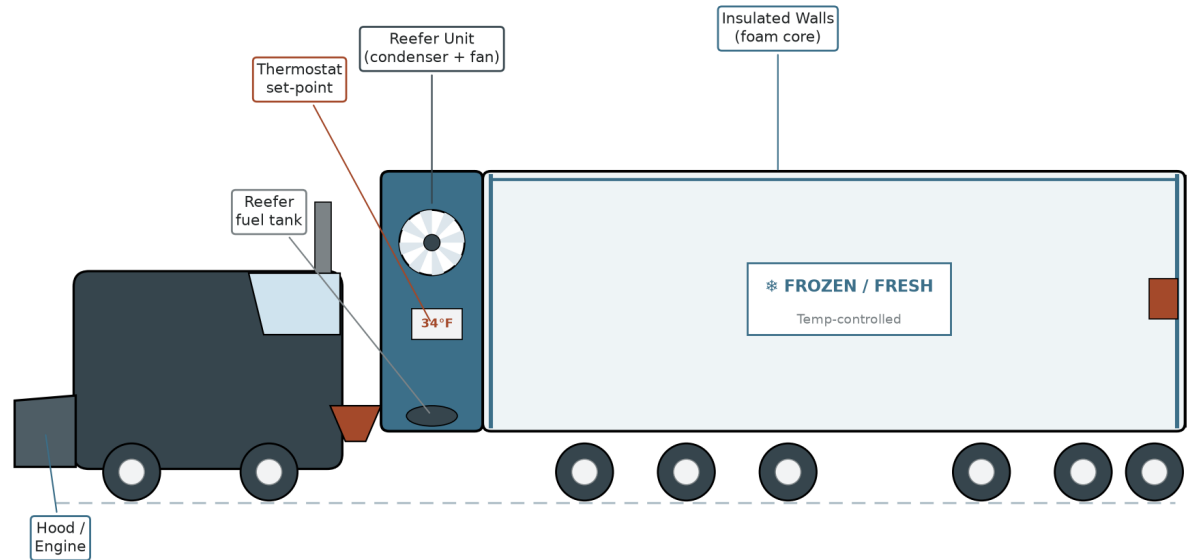

Cargo: food, pharmaceuticals, produce | Range: -20°F to +70°F | Pre-cool the box & monitor reefer hourly

Figure 2.6 — Reefer unit (condenser + fan) on the trailer nose; insulated box; thermostat display

A **reefer** is an insulated van with a self-contained **refrigeration unit** mounted on the front that can hold the box anywhere from **−20 °F to +70 °F**. It hauls food, produce, and pharmaceuticals — cargo that spoils, freezes, or loses potency when the temperature drifts. As a reefer driver you are not just moving freight; you are **preserving it**, and you will document the temperature continuously to prove it.

1. Equipment & Specifications

Box length	53 ft (typical); insulated walls (foam core) ≈ 3 in thick
Reefer unit	Carrier Transicold or Thermo King; diesel-driven, thermostat-controlled
Temperature range	−20 °F (deep frozen) to +70 °F (warm produce)
Fuel	Dedicated reefer fuel tank (50–60 gal); separate from the tractor
Air chute / bulkhead	Chute distributes cold air; bulkhead separates zones for multi-temp
Data recorder	Onboard sensor logs temperature; download reports for shippers/receivers

2. Typical Cargo

- Frozen: ice cream, meat, seafood, prepared foods ($\leq 0^{\circ}\text{F}$, often -10 to -20°F).
- Refrigerated: dairy, deli, produce, beverages ($33\text{--}40^{\circ}\text{F}$).
- Pharmaceuticals & biologics: tightly controlled ranges, often with continuous monitoring.

3. Core Skill: Temperature Control

3.1 Pre-Cool the Box

Before loading, run the reefer to bring the **inside of the trailer** to set-point temperature. Loading warm freight into a warm box overworks the unit and may not recover in time — a common cause of rejected loads. The shipper will refuse to load into an un-pre-cooled trailer.

3.2 The Continuous Monitor

- 1 Set the thermostat precisely per the BOL (Bill of Lading) — some loads specify exact $^{\circ}\text{F}$; never round.
- 2 Verify the set-point on the reefer display matches the paperwork before you pull away.
- 3 Check the reefer gauge and the temperature reading **at every pre-trip, fuel stop, and break** — at minimum once every 1–2 hours when stationary.
- 4 If the temperature drifts or the reefer alarms, **stop and act immediately**: diagnose, call breakdown, and record the deviation. An hour of drifting can ruin a full load.
- 5 Keep the reefer fueled — running out of reefer fuel mid-trip is a top cause of lost loads.

3.3 Multi-Temp Loads

Some reefers have **bulkheads** that divide the trailer into 2–3 zones, each at a different temperature (e.g., frozen in front, fresh in the rear). Confirm each zone's set-point and that the evap coil and chute serve each zone correctly. Load in zone order to preserve each product.

4. Hazards & Daily Procedures

Hazard	Prevention
Temperature excursion → rejected / spoiled load	Pre-cool; verify set-point; check hourly; act on any alarm instantly.
Reefer fuel run-out	Top off reefer tank every fuel stop; track hours of run-time.
Condenser airflow blocked	Keep the nose clear of debris/ice; check the fan turns freely.
Cross-contamination (odors/bacteria)	Wash-out the box between loads; sanitize for food.
Frozen-coil / defrost failure	Run defrost cycles; inspect coil for ice build-up.
Hot loading dock → box warms	Close doors at the dock; do not leave doors open unnecessarily.

BEST PRACTICE Reefer daily flow.

Pre-trip reefer (fuel, oil, belts, condenser) → pre-cool box to set-point → verify BOL temperature → load with doors minimized → confirm set-point → drive, monitoring hourly → arrive & document temperature (download report) → unload → wash-out for next load.

KEY NUMBERS & REGULATIONS

Appendix — Quick Reference

A. Critical Weight & Dimension Limits

Item	Federal Limit	Notes
Gross weight (5-axle)	80,000 lb	12k steer + 34k drives + 34k trailer tandems
Single axle	20,000 lb	Bridge Formula applies
Tandem axle group	34,000 lb	Most common group
Maximum width	102 in (8 ft 6 in)	Excludes mirrors
Maximum height	13 ft 6 in	Varies by state; measure your loaded height
Combination length	Tractor + 53 ft trailer typical	Longer combination vehicles need permits
Steer tire tread	4/32 in minimum	Other tires: 2/32 in minimum

B. Hours-of-Service Quick Card

Clock	Limit
Drive	11 hours
On-duty window	14 hours
Off-duty before restart	10 hours
30-minute break	After 8 hours since last off-duty (if driving)
Duty cycle	60 hr / 7 days · 70 hr / 8 days
Restart	34 consecutive hours off

C. Pre-Trip Core (memorize)

- Fluids, belts, hoses, leaks (engine off).
- Gauges, build air to cut-out, low-pressure alarm at 55–60 psi, spring brakes pop at 20–45 psi.
- All lights & lenses clean and working.
- Tires: tread depth, inflation, no cuts/bulges.
- Wheels/rims: no cracks, all lug nuts, no rust streaks.
- Brakes: pushrod travel, slack adjusters, drums/shoes, no leaks.
- Coupling: jaw closed, release arm latched, no gap, tug-tested.
- Trailer: doors latched, cargo secure, landing gear up, no leaks.
- Paperwork: CDL, medical card, registration, insurance, permits.

D. Securement Formula (Flatbed)

Aggregate Working Load Limit $\geq \frac{1}{2} \times \text{cargo weight}$. Minimum tie-down count: 1 per 10 ft (4 minimum over 10 ft). Each tie-down WLL $\geq 1,135$ lb. Re-tighten within 50 miles.

E. Emergency Contacts & Resources

- **FMCSA:** [fmcsa.dot.gov](https://www.fmcsa.dot.gov) — regulations, CSA scores, ELD, clearinghouse.
- **DOT Drug & Alcohol Clearinghouse:** clearinghouse.dot.gov.
- **ELDT Training Provider Registry:** tpr.fmcsa.dot.gov.
- **Highway emergency:** 911. Report all crashes with injury or hazmat release to DOT.
- **Your carrier's safety department** — keep the number programmed; call for accidents, breakdowns, and HOS questions.

BEST PRACTICE Final word.

The professional driver's edge is **consistency**: the same careful pre-trip on day 1,000 as on day 1. Speed and shortcuts kill. Inspect every time, secure every load, respect every clock — and you will have a long, safe, profitable career behind the wheel.