4th Slide Set Computer Networks

Prof. Dr. Christian Baun

Frankfurt University of Applied Sciences (1971–2014: Fachhochschule Frankfurt am Main) Faculty of Computer Science and Engineering christianbaun@fb2.fra-uas.de

Learning Objectives of this Slide Set


Data Link Layer (part 1)

Devices of the Data Link Layer

- Devices of the Data Link Layer
 - Learning Bridges
 - Loops on the Data Link Layer
 - Spanning Tree Protocol
 - Impact on the collision domain
- Addressing in the Data Link Layer
 - Format of MAC addresses
 - Uniqueness of MAC addresses
 - Security aspects of MAC addresses

Data Link Layer

- Functions of the Data Link Layer
 - Sender: Pack packets of the Network Layer into frames
 - Receiver: Identify the frames in the bit stream from the Physical Layer
 - Ensure correct transmission of the frames inside a physical network from one network device to another one via error detection with checksums
 - Provide physical addresses (MAC addresses)
 - Control access to the transmission medium

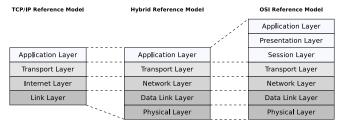


- Devices: Bridge, Layer-2-Switch (Multiport-Bridge), Modem
- Protocols: Ethernet, Token Ring, WLAN, Bluetooth, PPP

Devices of the Data Link Layer: Bridges

- Devices of the Physical Layer increase the length of physical networks
 - For connecting different physical networks, **Bridges** are required because they forward frames from one physical network to another one
- A Bridge has only 2 ports
- Simple Bridges forward all incoming frames



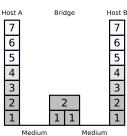

- Bridges with > 2 ports are called **Multiport Bridge** or **Layer-2-Switch**
 - They typically provide 4-48 Interfaces

Functioning of Bridges and Layer-2-Switches

- Bridges and Switches check the correctness of the frames via checksums
- Bridges do not need addresses for filtering and forwarding the frames, because they do not actively participate in the communication
 - They work transparent, just like the devices of the Physical Layer
 - Reason: They do not communicate on a higher protocol layer as the Data Link Layer

Example of Bridges in everyday Life - WLAN Bridge

- Integrates network devices with RJ45 jacks (e.g. network printers, desktops, gaming consoles,...) into a wireless local area network (WLAN)
- Connects a cable-based network with a wireless network



Image source: Google image search

Example of Bridges in everyday Life - Laser Bridge

- Connect 2 buildings via laser
 - Each building is equipped with a send and receive unit
 - The Bridges forward frames on layer 2 (Data Link Layer), according to the MAC addresses of network devices
 - Both Bridges operate in the same logical network on Layer 3 (Network Layer)








Image source: http://www.made-in-zelenograd.com

Learning Bridges (1/2)




- Optimization: Learning Bridges
- The figure shows that it is not useful when a Bridge forwards all frames
- Example: If a frame from participant B for participant A arrives at port 1, it is not required that the Bridge forwards this frame via port 2

Device	Port		
Α	1		
В	1		
С	1		
Х	2		
Y	2		
Z	2		

- Bridges need to learn which network devices are accessible via which port
- Administrators could maintain the tables inside the Bridges
 - This would be very time consuming
- Manual intervention is not required, because the Bridges maintain their forwarding tables themselves

Learning Bridges (2/2)

- Strategy:
 - Bridges store the sources of the frames they receive
 - If device A sends a frame to another host, the Bridge stores the information that the frame from device A was received on port 1
 - This way, the forwarding table is populated over time with entries that specify what network devices are connected to which physical networks




- During bootup of a Bridge, its forwarding table is empty
 - The entry are recorded over time
 - Each entrie has an expiration date (Time To Live – TTL)
 - They are only valid for a certain period of time
- The forwarding table is not complete all the time
 - This is not a problem, because the table is only used for **optimization**
 - If for a network device, no entry exists in the forwarding table, the Bridge forwards the frame in every case

Loops on the Data Link Layer

- Loops are a potential issue on the Data Link Layer
 - Computer networks should always provide only a single path to each possible destination on the Data Link Layer
 - That is to avoid that frames are duplicated and arrive multiple times at the destination
 - Loops can reduce the performance of the network or even lead to a network failure
 - On the other hand, redundant connections serve as a backup in case of a connection loss
- Reasons why loops can occur:
 - Careless administrators
 - Intention to prevent that connections can fail via redundant cables

Example of Loops in a LAN (1/6)

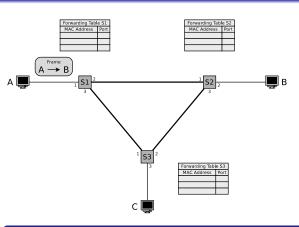


- A local area network has loops on the Data Link Layer
- The forwarding tables of the Switches are empty
- Node A wants to send a frame to node B

Similar examples can be found here:


- Olivier Bonaventure. http://cnp3book.info.ucl.ac.be/2nd/html/protocols/lan.html
- Rüdiger Schreiner. Computernetzwerke. Hanser (2009)

Example of Loops in a LAN (2/6)

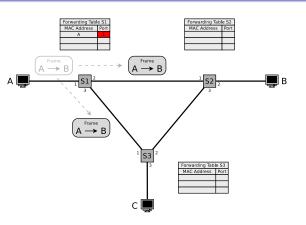


- The frame passes
 Switch 1
- Switch 1 stores the port to node A in its table
- Switch 1 don't know the path to node C
 - Therefore, it sends copies of the frame to all ports (except port 1)

Example of Loops in a LAN (3/6)

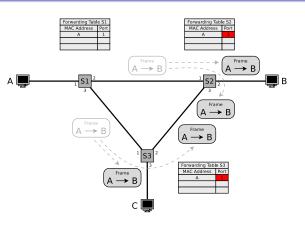


- The frame passes Switch 2 and 3
- Switch 2 and 3 store the port to node A in their tables
- Switch 2 and 3 both don't know the path to node C
 - Therefore, Switch 2 and 3 both send copies the frame to all ports except to ones, where the frame reached Switch 2 and 3

Example of Loops in a LAN (4/6)

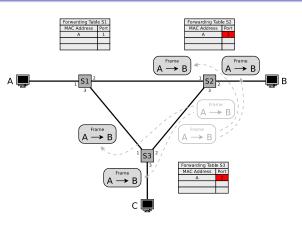

- Copies of the frame again pass Switch 2 and 3
- Switch 2 and 3 update their tables


Example of Loops in a LAN (5/6)

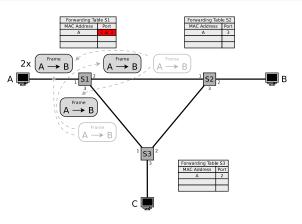

- 2 copies of the frame reach Switch 1
 ⇒ Loop!
- Switch 1 sends copies of the frame, received on...
 - port 2 via port 1 and 3
 - port 3 via port 1 and 2
- Switch 1 updates its table 2 times

• It is impossible to predict the order in which the frames reach Switch 1

Example of Loops in a LAN (6/6)

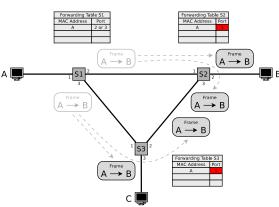



- Each frame of node A causes 2 copies, which infinitely circulate in the network
 - If node A sends futher frames, the network gets flooded and will collapse at some point in time

- Copies of the frame again pass Switch 2 and 3
- Switch 2 and 3 update their tables
- Ethernet does not contain any TTL or HopLimit
 - Therefore, this loop will not stop until the tables in the switches contain an entry for node B

Handle Loops in the LAN

- Bridges need to be able to handle loops
- Solution: Spanning Tree Algorithm






- A computer network, which consists of multiple physical networks, is a graph that may contain loops
 - The spanning tree is a subgraph of the graph that covers all nodes, but is cycle-free, because edges have been removed
 - The implementation of the algorithm is the Spanning Tree Protocol (STP)

Spanning Tree Protocol

Image source: Peterson, Davie. Computernetze

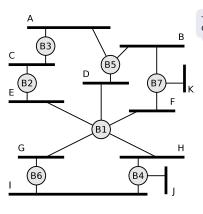

The STP was developed in the 1980s by Radia Perlman at Digital Equipment Corporation (DEC)

- The figure contains multiple loops
 - Via the STP, a group of Bridges can reach an agreement for creating a spanning tree
 - By removing single ports of the Bridges, the computer network is reduced to a cycle-free tree
- The algorithm works in a dynamic way
 - If a Bridge fails, a new spanning tree is created

The protocol and format of the configuration messages are described in detail in the standard IEEE 802.1D

The Spanning Tree Protocol will only be discussed in this course in a simplified way

Spanning Tree Protocol – Precondition (1/2)

- For the functioning of STP, each Bridge needs an unique identifier
 - Length of the identifier (Bridge ID): 8 bytes
 - 2 different implementations of the Bridge ID exist


Bridge ID according to IEEE

- The Bridge ID consists of the Bridge priority (2 bytes) and MAC address (6 bytes) of the Bridge port with the lowest port ID
 - The Bridge priority can be set by the administrator himself and can have any between 0 and 65,536
 - Default value: 32,768

Bridge	MAC addres of the bridge port
priority	with the lowest port ID
16 bits	48 bits


Spanning Tree Protocol – Precondition (2/2)


- ② Cisco extension of the Bridge ID, introducing the Extended System ID
 - Cisco supports for its Bridges that each virtual LAN (VLAN) creates its own spanning tree
 - The original 2 bytes long part for the Bridge priority is subdivided
 - 4 bits now represent the Bridge priority
 - ⇒ only 16 values can be represented
 - ⇒ the value of the Bridge priority need to be zero or a multiple of 4,096
 - \implies 0000 = 0, 0001 = 4,096 ... 1110 = 57,344, 1111 = 61,440
 - 12 bits are called Extended System ID and encode the VLAN ID
 - \implies The content matches the VLAN tag of the Ethernet frames
 - \implies With 12 bits, 4,096 different VLANs can are addressed



Spanning Tree Protocol – Functioning (1/2)

- The Bridges exchange information about Bridge IDs and path costs via special data frames, called Bridge Protocol Data Unit (BPDU)
 - They are sent in the payload field of Ethernet frames via broadcast to the neighboring Bridges

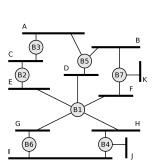



- First, the Bridges have to determine the Bridge with the lowest Bridge Priority value inside the Bridge ID
 - This Bridge is the Root Bridge of the spanning tree to be generated
 - If the Bridge priority is equal for multiple Bridges, the Bridge with the lowest MAC address becomes the Root Bridge


Spanning Tree Protocol – Functioning (2/2)

- For each physical network, a single one of the directly connected Bridges needs to be selected as responsible for forwarding the frames into the direction of the Root Bridge
 - The Bridge is called **Designated Bridge** for this network
 - Always the Bridge with the lowest path costs to the Root Bridge becomes the Designated Bridge
 - The path cost to the Root Bridge is the sum of the path costs of the different physical networks on the path to the Root Bridge

Data rate	Path costs
10.000 Mbps	2
1.000 Mbps	4
100 Mbps	19
16 Mbps	62
10 Mbps	100
4 Mbps	250


The path costs have been standardized by the IEEE, but can be adjusted manually $\,$

The exchange of the BPDU messages will not be discussed in detail in this course

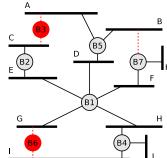

Collision Domain – Bridges and Layer-2-Switches

- Bridges and Switches operate on Data Link Layer and forward frames from one physical network to other ones
- Each physical network is a separate collision domain
 - If a physical network is split by a Bridge or a Switch, also the collision domain is split
 - As effect, the number of collisions drops
- For Bridges and Switches, each port forms its own collision domain



- In a switched network, each port of the Switches is connected with just a single network device
 - Such a network is collision-free and state of the art

Addressing in the Data Link Layer

- The Data Link Layer protocols specify the format of the physical network addresses
- Terminal devices (Hosts), Routers and Layer-3-Switches require physical network addresses
 - Such devices must be addressable on Data Link Layer because they provide services at upper protocol layers
- Bridges and Layer-2-Switches do not actively participate in the communication
 - Therefore, they don't require physical network addresses for their basic functionality, which is the filtering and forwarding of frames
 - Bridges and Switches require physical network addresses, when they implement the STP to avoid loops, or when they offer services from an upper protocol layer
 - Examples are monitoring services or graphical web interfaces for administration tasks
- Repeaters and Hubs that operate only at the Physical Layer, have no network addresses

MAC Addresses (1/2)

- The physical network address are called MAC addresses (Media Access Control)
 - They are independent from the logical addresses of the Network Layer
- Ethernet uses the Address Resolution Protocol (ARP) to resolute the logical addresses of the Network Layer (IPv4 addresses) to MAC addresses
 - For IPv6, the Neighbor Discovery Protocol (NDP) provides the identical functionality is identical and works in a similar way
- MAC addresses have a length of 48 bits (6 bytes)
 - Thus, the address space contains 2⁴⁸ possible addresses
- In order to make the representation compact and human-friendly to read, MAC addresses are usually written in hexadecimal notation
 - The bytes are separated by dashes (-) or colons (:)
- Example of the notation: 00-16-41-52-DF-D7

MAC Addresses (2/2)

- Each MAC address is intended to be permanently assigned to a network device and unique
 - But it is often possible to change MAC addresses by software
 - However, this change applies only until the next reboot of the computer

MAC broadcast address

- If a network device wants to send a frame to all other devices on the same physical network, it inserts MAC broadcast address in the destination address field of the frame
- All 48 bits of this MAC address have the value 1
- Hexadecimal notation: FF-FF-FF-FF-FF
- Bridges and Switches do not forwarded Frames to other physical networks, that contain the MAC broadcast address in the destination address field

Uniqueness of MAC Addresses (1/2)

- The first 24 bits of the MAC address space are managed by the Institute of Electrical and Electronics Engineers (IEEE)
 - These 24 bits long addresses are called **OUI** (Organizationally Unique Identifier)
 - The OUIs can be checked in this IEEE database:
 http://standards.ieee.org/develop/regauth/oui/public.html
- The remaining 24 bits are specified by the manufacturers independently for their network devices
 - \bullet That address space allows $2^{24}=16.777.216$ individual device addresses per OUI

MAC addresses	Manufacturer	MAC addresses	Manufacturer	MAC addresses	Manufacturer
00-20-AF-xx-xx-xx	3COM	00-03-93-xx-xx-xx	Apple	00-0C-6E-xx-xx-xx	Asus
00-00-0C-xx-xx-xx	Cisco	00-50-8B-xx-xx-xx	Compaq	08-00-2B-xx-xx-xx	DEC
00-01-E6-xx-xx-xx	Hewlett-Packard	00-02-55-xx-xx-xx	IBM	00-02-B3-xx-xx-xx	Intel
00-04-5A-xx-xx-xx	Linksys	00-09-5B-xx-xx-xx	Netgear	00-04-E2-xx-xx-xx	SMC

Uniqueness of MAC Addresses (2/2)

- In addition to the OUIs, a small MAC address range exist, that is designed for individuals and small companies or organizations, which require only a few MAC addresses
 - This address space is called IAB (Individual Address Block)
- The address space starts with 00-50-C2
- This is followed by 3 hexadecimal digits (12 bits) that are assigned to the organizations
 - This means the address space per IAB contains $2^{12} = 4.096$ possible addresses for the owner to assign to individual network devices

Still looking for a Christmas present for your girlfriend or mom?

- IEEE knows the prices (2013) for registering an own MAC address range http://standards.ieee.org/develop/regauth/oui/index.html http://standards.ieee.org/develop/regauth/iab/index.html
- Price per Organizationally Unique Identifier (OUI): \$1,885
- Price per Individual Address Block (IAB): \$645

Security Aspects of MAC Addresses

- For WLAN, MAC filters are often used to protect the Access Point
 - In principle, this makes sense, because the MAC address is the unique identifier of a network device
- The security level of MAC filters is low because MAC addresses can be modified via software
 - The method is called MAC spoofing

Working with MAC addresses under Linux

- Read out the own MAC address(es): ip link or ifconfig
- Read out the MAC address(es) of the neighbors (mostly the Routers): ip neigh
- Set MAC address: ip link set dev <Interface> address <MAC Address>
- Alternative: ifconfig <Interface> promisc and next: ifconfig <Interface> hw ether <MAC Address>