
DUB-1 THE SPACE

FX: the tape echo, the plate and the cloud, dub's own instrument, as of 1.4.0 (build eceec65). FM-1 firmware.

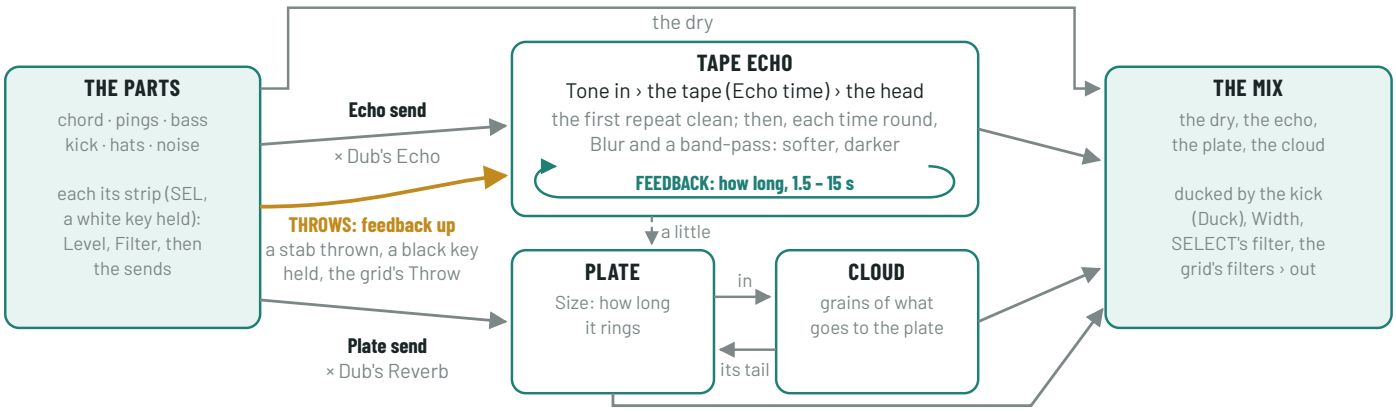

1 · THE DUB PAGE FX

ECHO KNOB 1	How much goes into the echo: each part's Echo send times this. 0 – 100
ECHO TIME KNOB 2	The tape loop's length, on the beat. Under ~43 BPM a bar won't fit the 5.6 s tape: it shows 5.6 s. 1/8 corchea (8th) · 1/8. con puntillo · 1/4 negra (quarter) · 1/4. · 1/2 blanca (half) · 1 bar
FEEDBACK KNOB 3	How long the repeats go on, as the tail's time to -60 dB: a long echo fades as soon as a short one. Resting, kept under 90%: the tails die out. 1.5 s – 15 s
REVERB KNOB 4	How much goes into the plate: each part's Plate send times this. 0 – 100

2 · THE ECHO PAGE FX again

The space's colour. 50 is the echo as the pieces have it.

BLUR KNOB 1	How much each repeat dissolves. 0 clean copies · 50 softer each time · 100 a wash
TONE KNOB 2	A low-pass on what goes into the tape: the repeats darker or brighter, an octave every 25. 0 ~500 Hz · 50 ~2 kHz · 100 ~5 kHz
SIZE KNOB 3	How long the plate rings. 0 – 100
CLOUD KNOB 4	How much of the reverb goes through the grain cloud. 0 the plate alone – 100 a thick wash

3 · THE ECHO, HOW IT PLAYS

THE REPEATS	The first comes back clean, on its time; then each softer and darker, melting into a wash.
IN THE GAPS	Each new stab pushes the returns down (up to 6 dB, back over ~150 ms); a thrown stab's ride over.
THE FIELD	One head, its right side a few ms later (Width, SEL: 8 ms at 50); a second head, at three quarters, while a thrown stab rings. Mono under ~80 Hz.
DRIFT	Form's Drift: the heads wander; now and then the second slides to 2/3, 1/2, 3/8 or 1/4 of the loop, bending its pitch.

4 · THE CLOUD

WHAT	The last 0.74 s of what goes to the plate, played back in grains: up to six, each 80 to 250 ms, anywhere in it, anywhere in the field; now and then an octave down, rarely up.
WHERE	Into the plate (they bloom in its tail) and out; the tail back into the cloud: a wash that grows on itself.
MORE	Thicker as the filter opens, and in a Break. It listens as if Reverb were at least 63.

5 · WHAT FEEDS THEM

THE STRIPS SEL, white held	Each part's Echo and Plate: 0 none · 50 as the piece sends · 100 twice. The bass sends no echo in any piece; the kick none, its 100 a full send.
THROWS	A stab thrown (the Chord page's Throws): its dry 6 dB down, the feedback up. A black key held (SEL): the part slammed in at its own level, the feedback towards 93%, the repeats stacking. A soft clip holds it.
PUSHES	The Arrangement page's Echo key, the grid's Throw and Swell, Wash (sheet 10).
WET SEL KNOB 3	The whole music dry, or drowned; for playing, not saved.

6 · DUB HOLD REC, a tap



ON	The echo plays what it holds, the loop as it is: nothing in, nothing lost. The plate rings on, closing to new sound; the cloud stops listening, its grains over what it held. The chord holds.
SHOWN	REC lit, HOLD in red in the header, the rings and the chord's name red.
OFF	REC again. (Held 0.3 s instead: the effects grid, sheet 10.)

FX HELD

0.5 s, a nudge: Echo, Feedback (smaller steps), Reverb, Size, Cloud. 1.5 s, a shake: a new echo time.

THE SCREEN

The ripples are the echo: a ring a repeat, as strong as it comes back. The lanes' rings: where the repeats land.