
CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

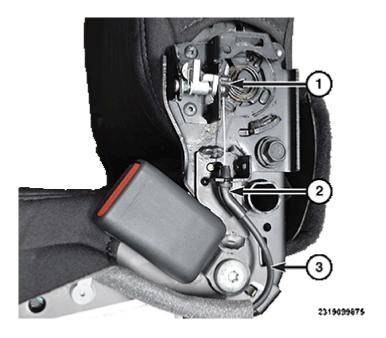

- 1. Remove the seat cushion cover (Refer to Body/Seats/COVER, Seat Cushion, Stow-N-Go/Removal and Installation)(Refer To List 1).
- 2. On the inboard side of the seat, release the cable end (1) and unclip the cable from the bracket (2).

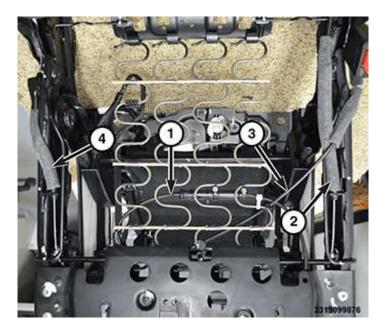


- 3. Unclip the cable (3) from the seat frame, disconnect the cable ends and remove.
- 4. Unclip the cable (4) from the seat frame, disconnect the cable ends and remove.
- 5. Unclip the cable (1) from the seat frame, disconnect the cable ends and remove.

INSTALLATION



- 1. Clip the cable (1) to the seat frame and connect the cable ends.
- 2. Clip the cable (4) to the seat frame and connect the cable ends.
- 3. Clip the cable (3) to the seat frame and connect the cable ends.

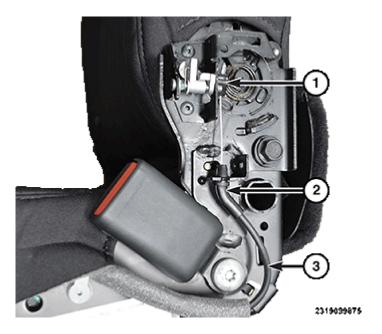

- 4. On the inboard side of the seat, connect the cable end (1) and clip the cable to the bracket (2).
- 5. Install the seat cushion cover (Refer to 23 Body/Seats/COVER, Seat Cushion, Stow-N-Go/Removal and Installation)(Refer To List 1).

Refer To List:

List 1

- 23 Body / Seats, First Row / COVER, Seat Cushion, Front / Removal and Installation
- 23 Body / Seats, Second Row / COVER, Seat Cushion Second Row Center / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / COVER, Seat Cushion, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / COVER, Seat Cushion / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / COVER, Seat Cushion / Removal and Installation