# **CHILTON**LIBRARY




## **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**




- 1. If PHEV, power down the 12-volt system (Refer to 08 Electrical/Standard Procedure).
- 2. Disconnect and isolate the negative battery cable.
- 3. Lower the steering column to the lowest position and pull the steering wheel to the full rear position.
- 4. Using a trim stick, release the center vent bezel (1) from the instrument panel. Disconnect the wire harness connector and remove.

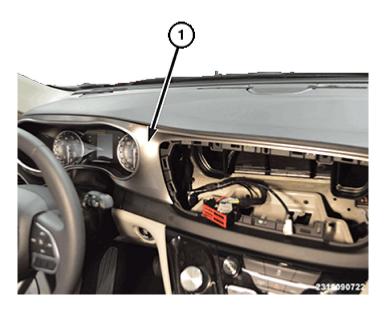

5. Using a trim stick or equivalent, carefully remove the instrument cluster bezel (1).

### **INSTALLATION**

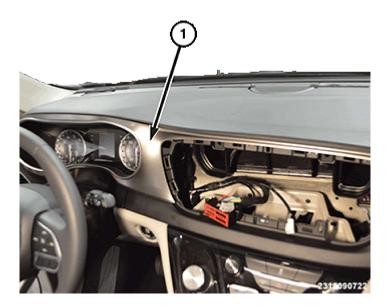

1. Position the instrument cluster bezel (1) and hand tap to engage the retaining clips.



- 2. Connect the wire harness connector, then position the center vent bezel (1) and hand tap to engage the retaining clips.
- 3. Connect the negative battery terminal.
- 4. If PHEV, power up the 12-volt system (Refer to 08 Electrical/Standard Procedure).