
# **CHILTON**LIBRARY



# **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**

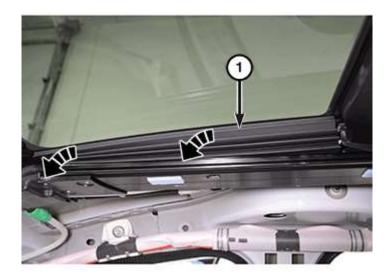


2321104739

- 1. Move the front glass into the full closed position.
- 2. Open the sunshade into the full open position.
- 3. Separate the mechanism cover (1) from the front glass.

### NOTE

The mechanism cover snaps into the frame. It cannot be removed

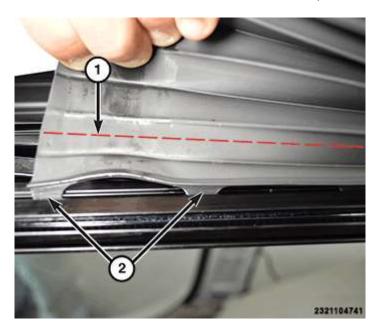

- 4. Hold the mechanism covers down and open the front glass into the full open position.
- 5. Using scissors, cut the mechanism cover (1) along the entire length at the lowest fold.
- 6. Close the sunroof glass.
- 7. Slide the mechanism cover out the REAR of the frame. As you slide it out the end of the frame, bend it inboard and remove.

## **INSTALLATION**

#### NOTE

The mechanism covers are different on each side, make sure you install them into the correct side.

- 1. With the sunroof in the open position, snap the mechanism cover into the lower guide channel.
- 2. Hold down each cover and close the sunroof.
- 3. Secure the mechanism cover onto the front glass.