CHILTONLIBRARY



Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

WARNING


Disable the airbag system before attempting any front seat diagnosis or service. Disconnect and isolate the negative battery (ground) cable and wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to follow these instructions may result in accidental airbag deployment and possible serious or fatal injury.

- 1. Position the seat being serviced all the way forward.
- 2. Remove the outboard seat cushion side trim panel from the seat. (Refer to Body/Seats/SIDE SHIELDS, Seat Cushion, Front/Removal and Installation).

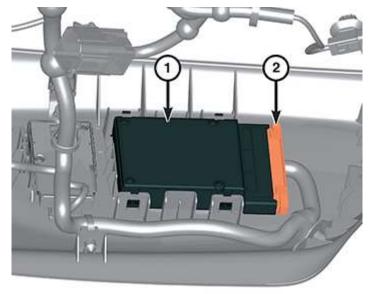


0818094959

3. Disconnect the electric connector (2) from the power seat switch (1).

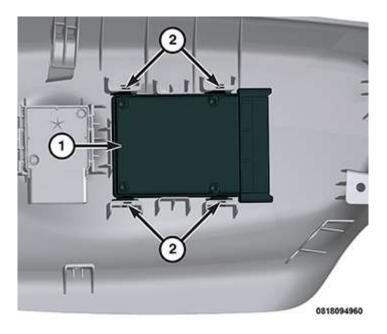


4. Using Trim Stick

Trim Stick

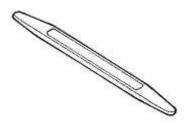

or equivalent, carefully disengage the four tabs (2) that secure the power seat switch (1) to the seat cushion side trim panel.

INSTALLATION

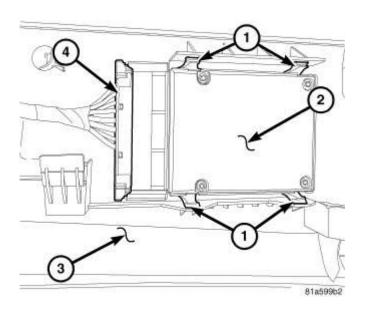

- 1. Position the power seat switch (2) onto the seat cushion side shield (3). Gently apply pressure to the switch until the four mounting tabs (1) are fully seated into place.
- 2. Connect the power seat switch electrical connector (4).
- 3. Install the seat cushion side shield, (Refer to Body/Seats/SIDE SHIELDS, Seat Cushion, Front/Removal and Installation).
- 4. Verify normal operation of the power seat assembly.