
CHILTONLIBRARY



Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

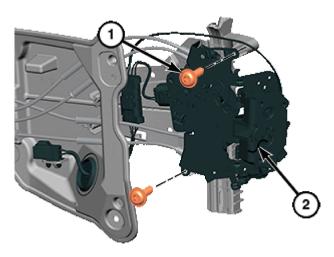


2312062004

- 1. Remove the rear carrier plate (Refer to Body/Doors Sliding/PLATE, Carrier/Removal and Installation). (Refer To List 1)
- 2. Remove the screws (1) and separate the latch assembly (2) from the presenter bracket.

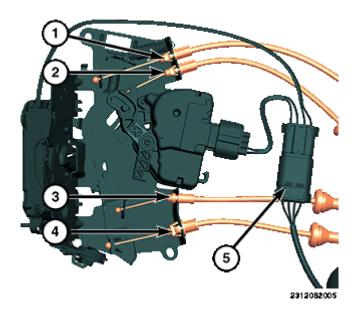


- 3. Disconnect the wire harness connector (5).
- 4. Disconnect the control cables (1 4).

INSTALLATION

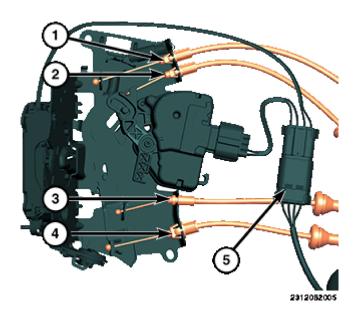

- 1. Connect the control cables as indicated:
 - 1. Hold open latch primary cable (1).
 - 2. Lock cable (2).
 - 3. Interior handle cable (3).
 - 4. Front latch primary cable (4).

2. Connect the wire harness connector (5).

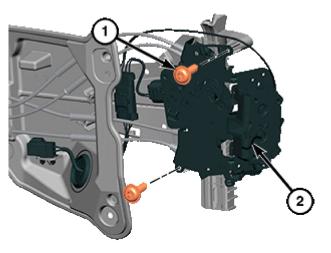

- 2312062004
- 3. Position the latch assembly (2) onto the presenter bracket and install the screws (1).
- 4. Install the rear carrier plate (Refer to 23 Body/Doors Sliding/PLATE, Carrier/Removal and Installation). (Refer To List 1)

Refer To List:

List 1

- 23 Body / Doors Sliding / PLATE, Carrier Front / Removal and Installation
- 23 Body / Doors Sliding / PLATE, Carrier Rear / Removal and Installation