
CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL

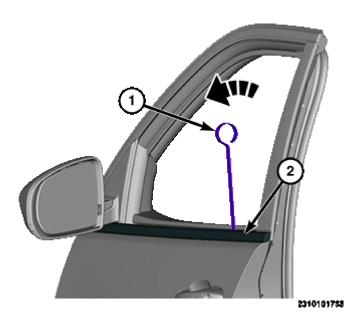

- 1. Lower the door glass fully.
- Using special toolRemover, Belt Moldings




(1) between belt molding and glass, push down on outer belt molding (2) and rotate upper part of tool outward from vehicle approximately 6 - 8 cm (2.5 - 3 in.) then lift up on molding to disengage from locking tabs.

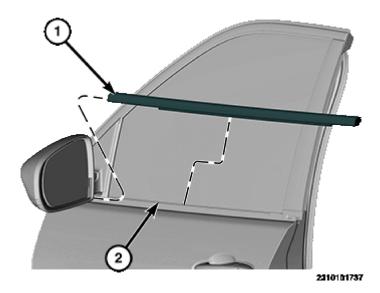

3. Remove the belt molding (1) from the glass opening flange (2).

INSTALLATION

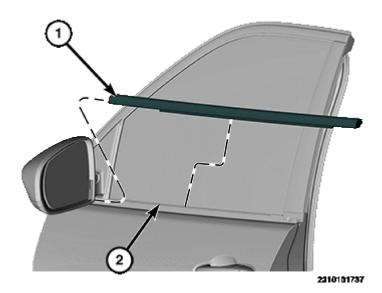

1. Position the molding (1) onto the glass opening flange (2) and seat fully.