
CHILTONLIBRARY



Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

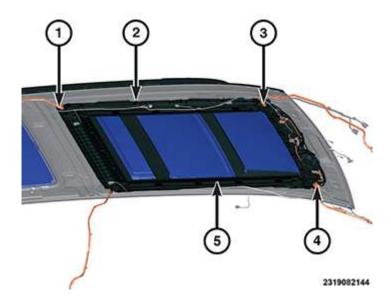

- 1. Remove the headliner (Refer to Body/Interior/HEADLINER/Removal and Installation).
- 2. Detach the rear drain tubes (1) from the sunroof (5).
- 3. Detach the front drain tubes (3) from the sunroof.
- 4. Disconnect the sunroof harness connector (4).
- 5. With the help of an assistant holding the sunroof, remove all the sunroof bolts (2).
- 6. With the help of an assistant, carefully remove the sunroof.

INSTALLATION

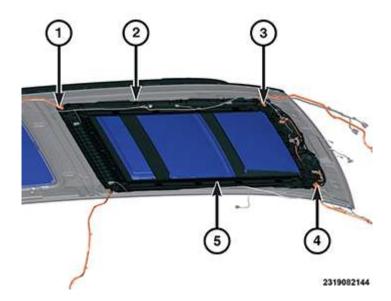

- 1. With the help of an assistant, position the sunroof into the vehicle and loosely install the sunroof to body bolts (2). Make sure the seal around the perimeter of the sunroof is seated evenly around the roof opening.
- 2. Tighten the sunroof to body bolts to the proper (Torque Specifications).
- 3. Attach the front drain tubes (3) to the sunroof.
- 4. Connect the sunroof harness connector (4).
- 5. Attach the rear drain tubes (1) to the sunroof.
- 6. Install the headliner (Refer to Body/Interior/HEADLINER/Removal and Installation).