
# **CHILTON**LIBRARY



## **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**

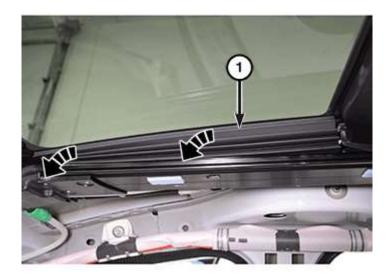


2321104739

- 1. Separate the mechanism cover (1) from the front glass.
- 2. Put the sunroof in the vented position.


### NOTE

Be careful when prying apart the vertical uprights. If the uprights get damaged, the entire sunroof assembly must be replaced.

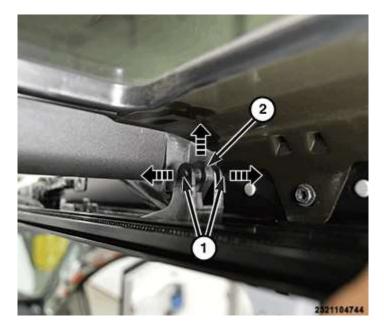


- 3. Remove each side of the drain channel (2) by prying apart the two vertical uprights (1), and lifting it.
- 4. Do this on each side of the drain channel, then remove.

#### **INSTALLATION**

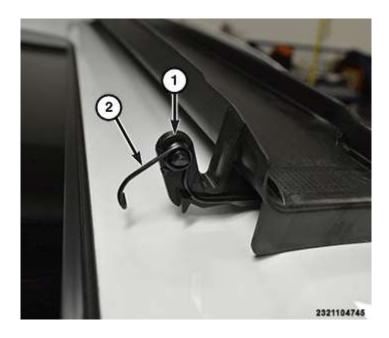

1. Place channel spring (2) over channel axle (1).

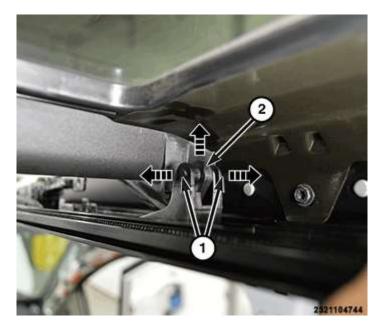

- 2. Carefully snap the drain channel (2) into the support (1) by pushing down on the channel while holding the spring in place.
- 3. Install the mechanism cover to the front glass.