
# **CHILTON**LIBRARY



## **Removal & Installation**


### **REMOVAL AND INSTALLATION**

### **REMOVAL**

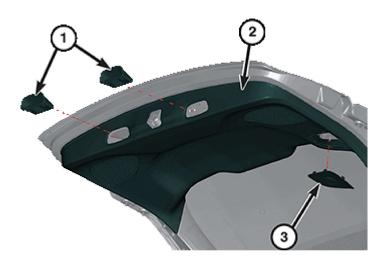


2309081027

- 1. Open the liftgate.
- 2. Using a trim stick or equivalent, remove the liftgate lamp (3) and disconnect the wire harness connector.
- 3. Using a trim stick or equivalent, release the top of the pull cup (1) first then the bottom and remove. Remove both pull cups.
- 4. Using a trim stick or equivalent, release the retaining clips and remove the lower liftgate trim panel (2).

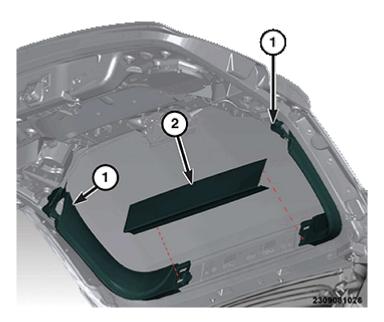


- 5. Using a trim stick or equivalent, release the retaining clips and remove the upper liftgate trim panel (2).
- 6. Using a trim stick or equivalent, release the retaining clips and remove the side liftgate trim panels (1).

### **INSTALLATION**

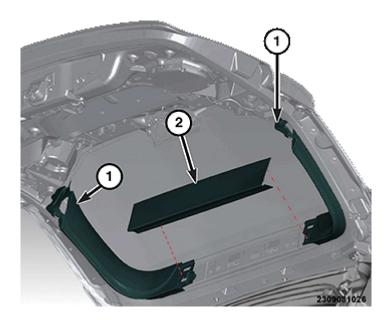

- 1. Position the side liftgate trim panels (1) onto the liftgate. Using hand pressure, press firmly to engage the retaining clips.
- 2. Position the upper liftgate trim panel (2) onto the liftgate. Using hand pressure, press firmly to engage the retaining clips.

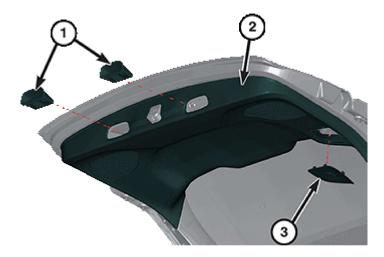

2309081027

- 3. Position the lower liftgate trim panel (2) onto the liftgate. Using hand pressure, press firmly to engage the retaining clips.
- 4. Install both pull cups (1).
- 5. Connect the wire harness connector to the liftgate lamp (3) and install.