# **CHILTON**LIBRARY




# **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**

**REMOVAL** 

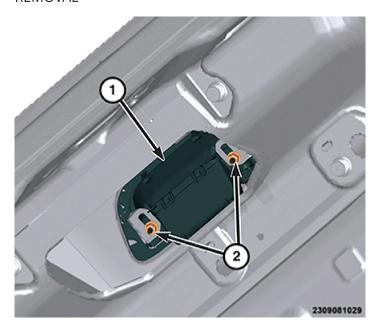


1. Remove the lower liftgate trim panel (Refer to 23 - Body/Decklid/Hatch/Liftgate/Tailgate/PANEL, Trim, Liftgate/Removal and Installation).

## **NOTE**

The liftgate latch is removed for clarity, but not necessary.

- 2. Remove the two nuts (2) and remove the liftgate handle (1).
- 3. Pull the liftgate handle out and disconnect the wire harness connector.

### **INSTALLATION**

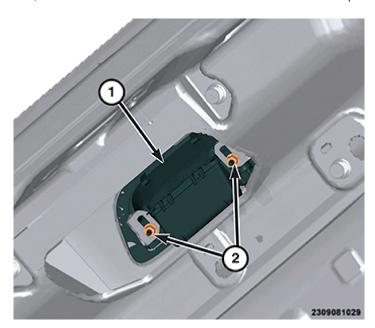

- 1. Connect the wire harness connector to the liftgate handle (1) and insert the liftgate handle into the opening.
- 2. Install the two nuts (2) and tighten securely.
- 3. Install the lower liftgate trim panel (Refer to 23 Body/Decklid/Hatch/Liftgate/Tailgate/PANEL, Trim, Liftgate/Removal and Installation).