CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL




- 1. Using a hook tool, remove the clip from behind the recline handle (2) then pull outward to remove the handle.
- 2. Remove the two screws (1).
- 3. Using a trim stick, release the front of the outboard side shield (3) then lift and remove.

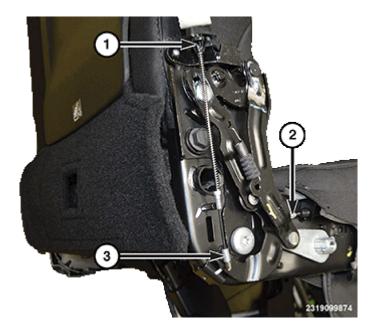

- 4. Using pliers, squeeze the cable tabs (1) and remove the cable from the bracket.
- 5. Rotate the cable end (3) and remove it from the mechanism.

INSTALLATION

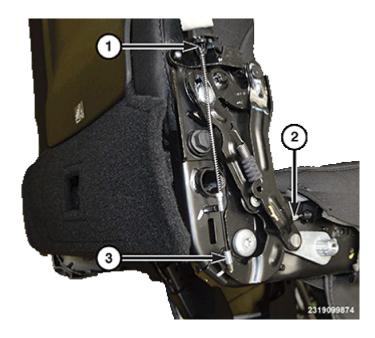

1. Install the cable end (3) and clip the cable into the bracket (1).



- 2. Install the outboard side shield (3) and screws (1).
- 3. Install the recline handle (2)