CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

NOTE

Take the proper precautions to protect the door handle and bezel from cosmetic damage while performing this procedure.

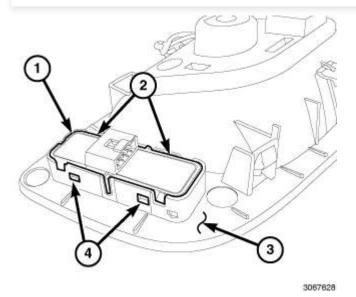


- 1. Remove the driver door handle and place it on a workbench (Refer to Body/Door-Front/HANDLE/Removal and Installation)(Refer To List 1).
- 2. Using an appropriate flat bladed tool, gently disengage the four retaining tabs (2 and 4) that secure the memory seat switch (1) to the back of the driver door handle bezel (3).
- 3. Remove the memory seat switch from the driver door handle bezel.

INSTALLATION

NOTE

Take the proper precautions to protect the door handle and bezel from cosmetic damage while performing this procedure.

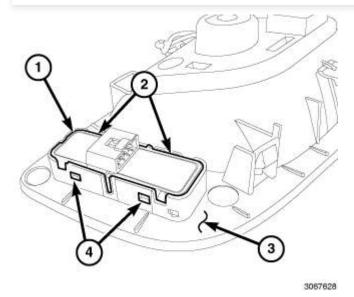

- 1. Install the memory seat switch (1) into the driver door handle bezel (3). Push the switch firmly into the bezel until the retaining tabs (2 and 4) are fully engaged.
- 2. Install the driver door handle and bezel (Refer to 23 Body/Door Front/HANDLE/Removal and Installation)(Refer To List 1).
- 3. Using a scan tool, perform the Power Seat System Verification test (Refer to DTC-Based Diagnostics/MODULE, Memory Seat (MSMD) Standard Procedure)(Refer To List 2).
- 4. Verify proper memory seat system operation.

Refer To List:

List 1

- 23 Body / Door Front / HANDLE, Exterior / Removal and Installation
- 23 Body / Door Front / HANDLE, Interior / Removal and Installation

List 2

- 28 DTC-Based Diagnostics / MODULE, Memory Seat, Driver (MSMD) / Standard Procedure
- 28 DTC-Based Diagnostics / MODULE, Memory Seat, Passenger (MSMP) / Standard Procedure