# **CHILTON**LIBRARY




# **Removal & Installation**

#### **REMOVAL AND INSTALLATION**


### **REMOVAL**

## NOTE

Take note of the cable routing for correct installation.

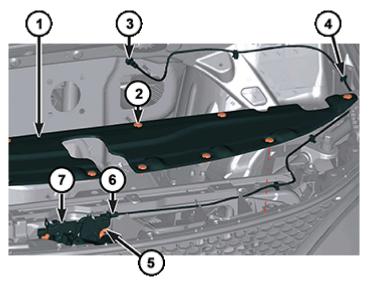


- 2314081016
- 1. Remove the hood latch (7) (Refer to Body/Hood/LATCH, Hood/Removal and Installation).
- 2. Unclip the hood latch release cable from the body (4).
- 3. Release the cable grommet (3) from the body.
- 4. Remove the driver side instrument panel closeout.

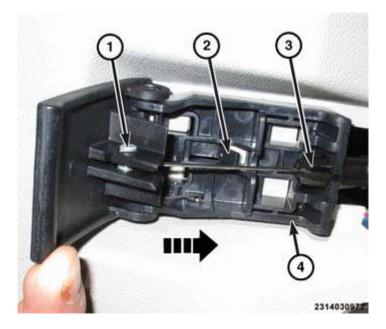


- 5. Remove the hood release handle (4) from the steering column opening cover by lifting the retaining tab (2) and slide the hood release handle forward.
- 6. Press the tabs (3) and remove the hood latch release cable from the handle, then remove the cable end (1).
- 7. Remove the hood latch release cable from the vehicle.

#### **INSTALLATION**

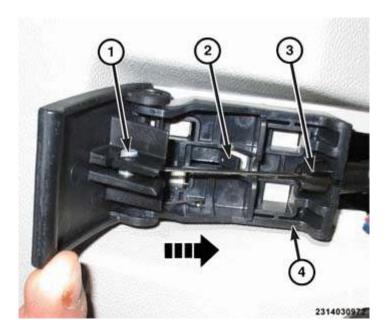

- 1. Install the hood latch release cable through the hole in the dash panel and seat the cable grommet.
- 2. Install the cable end (1) then engage the cable (3) into the hood release handle (4).

3. Position the hood release handle on the steering column opening cover and slide it rearward until the retaining tab (2) snaps into place.

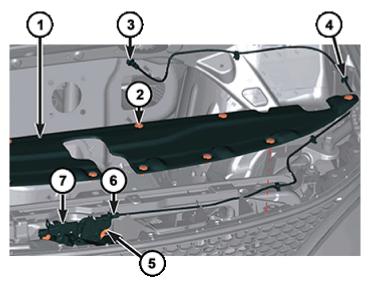

2314081016

- 4. Route the hood latch release cable (4) and clip into place.
- 5. Install the hood latch (7) (Refer to Body/Hood/LATCH, Hood/Removal and Installation).
- 6. Install the front fascia upper cover (1) and the push fasteners (2).