# **CHILTON**LIBRARY




## **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**



1. Using a trim stick (2), release the top of the seat back panel (1), then lift and remove.

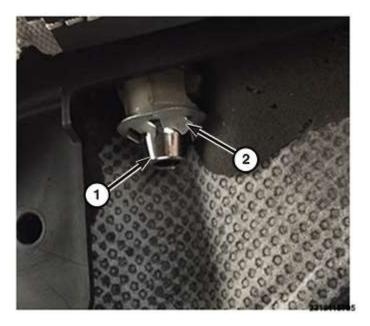

2. Using cutters, cut the metal retainer (2) and remove.



- 3. Open the cable junction box (3) and separate the headrest release cable end.
- 4. Press the headrest guide buttons (1) and lift the headrest (2) out.
- 5. Feed the headrest release cable (4) through the headrest guide.

### **INSTALLATION**



- 1. Feed the headrest release cable (4) through the headrest guide.
- 2. Install the headrest (2) fully and route the headrest release cable.
- 3. Open the cable junction box (3) and install the headrest release cable end.



4. Install a **NEW** metal retainer (2).



5. Install the bottom of the seat back panel (1), then engage the retaining clips at the top.