
CHILTONLIBRARY



Rear


REAR

REMOVAL

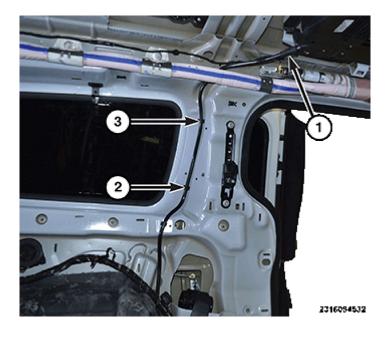

- 1. Remove the headliner (Refer to Body/Interior/HEADLINER/Removal and Installation).
- 2. Disconnect the rear drain tube (1) from the sunroof.
- 3. Remove the drain tube grommet out of the rear quarter panel.
- 4. Remove the rear drain tube from the retaining clips (2 and 3) and remove.

INSTALLATION

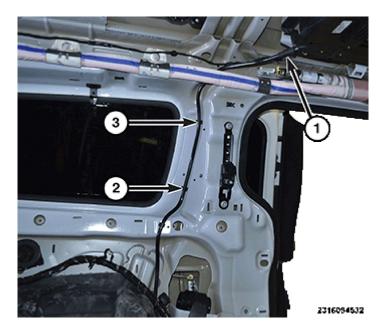

- 1. Route the rear drain tube and install the grommet into the inner quarter panel. Make sure the grommet is fully seated.
- 2. Install the rear drain tube into the retaining clips (2 and 3).
- 3. Connect the rear drain tube (1) to the sunroof.
- 4. Install the headliner (Refer to Body/Interior/HEADLINER/Removal and Installation).