# **CHILTON**LIBRARY




## **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**




- 1. Stow the second row Stow-n-Go seats.
- 2. Remove the second row center seat, if equipped.
- 3. Move the front seats to the full forward position and remove the seat track covers (1).

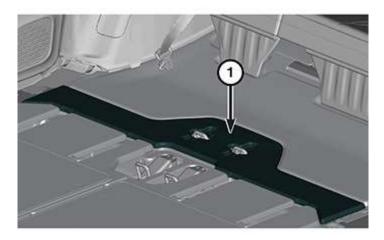

2319082137


- 4. Using a trim stick or equivalent, release the retaining clips and remove the rear center filler panel (1).
- 5. Remove the lower B-pillar trim panel (Refer to 23 Body/Interior/PANEL, B-Pillar Trim/Removal and Installation)(Refer To List 1).

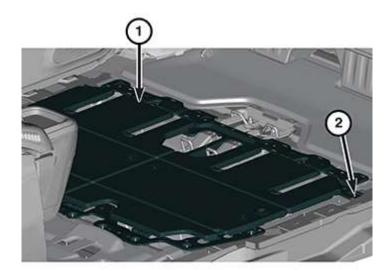

2319082138


6. Remove the nuts (2) around the perimeter, then the load floor frame (1).

### **INSTALLATION**

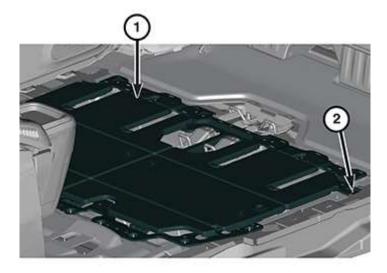

2319082138

- 1. Position the load floor frame (1) into the vehicle and install the nuts (2). Tighten securely.
- 2. Install the lower B-pillar trim panel (Refer to 23 Body/Interior/PANEL, B-Pillar Trim/Removal and Installation)(Refer To List 1).

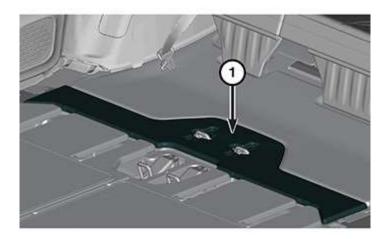

2319082137

3. Install the rear center filler panel (1).



4. Install the seat track covers (1).

#### **Refer To List:**

#### List 1

- 23 Body / Interior / PANEL, B-Pillar Trim, Lower / Removal and Installation
- 23 Body / Interior / PANEL, B-Pillar Trim, Upper / Removal and Installation