
CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

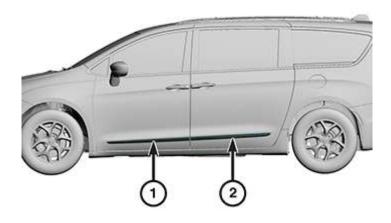

2313083318

NOTE

The procedure for the front door body side molding (1) and the sliding door bodyside molding (2) are the same.


- 1. As a guide for installation, apply a length of masking tape on the bodyside, parallel to the top edge.
- 2. Warm the effected adhesive type molding and body metal to approximately 38°C (100°F) using a suitable heat lamp or heat gun.
- 3. Using a trim stick
 Trim Stick



, carefully separate the body side molding from the body panel.

4. Pull the body side molding from the body panel.

INSTALLATION

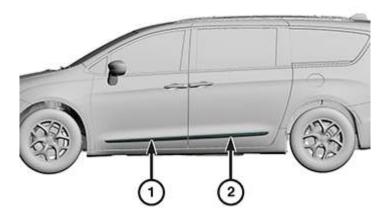

2313083318

NOTE

The procedure for the front door body side molding (1) and the sliding door bodyside molding (2) are the same.

NOTE

Install a new molding within 20 minutes of body panel cleaning.

- 1. Clean body surface with MOPAR® Super Kleen solvent or equivalent. Wipe surface dry with lint free cloth.
- 2. Remove protective cover from adhesive tape on back of molding.
- 3. Apply the body side molding to the body panel below and aligned to the masking tape guide.

- 4. Firmly press the body side molding to body panel surface to assure adhesion.
- 5. Remove masking tape guide.