CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

NOTE

Note that the cable has a white end and a black end, and must be installed in the same orientation.




- 1. With the seat in the upright position, locate the white cable end (2) under the rear of the seat.
- 2. Using a suitable tool (1) pull down on the cable end to unclip it.
- 3. Lower the seat into the floor.



2319101639


- 4. Using a trim stick, release the clips and remove the hinge cover (1).
- 5. Using a trim stick, release the clips and loosen the leg cover (3), then remove the seat panel (2).

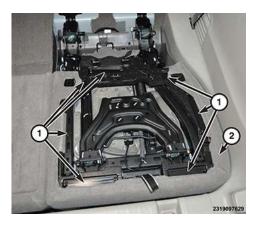

6. Using a hook tool, release all the seat cushion cover retainers (1).

NOTE

It is easier to loosen the seat cover if the seat is raised slightly.

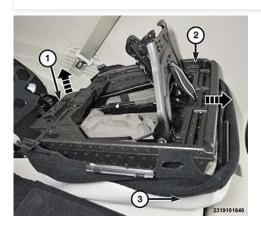

- 7. Pull the seat cover (3) from around the trim support (2).
- 8. Lift the trim support at the front (1), then push rearward and remove it from the frame.

NOTE

Be careful not to damage the cable, if it is to be reused.



9. Using a flat bladed tool and hammer, drive the pulley (2) out of the seat frame. **DISCARD** the pulley, and make sure the spacer (3) does not fall out or get lost.



- 10. Unclip the opposite cable end (1), that is black, and remove the pulley (2) as described in the previous step. **DISCARD** the pulley (2), and make sure the spacer below it does not fall out or get lost.
- 11. Slide the cable from the guide tube and remove.

INSTALLATION

NOTE

Make sure the cable is oriented with the white end at the rear seat leg, and the black end at the front seat leg.




- 1. Feed the cable through $\,$ the tube guide and route the cable (2) on the spacer.
- 2. Using a suitable tool (1), install a **NEW** pulley (3). Grease the pulley groove using Blue Evolube R602D.



- 3. Route the cable on the spacer.
- 4. Using a suitable tool, install a **NEW** pulley (2). Grease the pulley groove using Blue Evolube R602D.
- 5. Clip the black cable end (1) to the front seat leg.



6. Install the $\,$ trim support (2) and pull the seat cover into place.

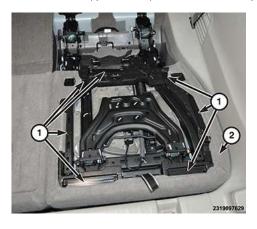

7. Install all the cover retainers (1).



2319101639

- 8. Install the seat panel (2) and the snap the leg cover (3) into place.
- 9. Install the hinge cover (1).



- 10. Raise the seat into the upright position, locate the white cable end (1) under the rear of the seat.
- 11. Using a suitable tool (2), clip the cable end to the rear seat leg.