CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION


REMOVAL




- 1. Remove the 2nd row Stow-N-Go seat (Refer to 23 Body/Seats/SEAT/Removal and Installation)(Refer To List 1).
- 2. Remove the headrest (Refer to Body/Seats/HEADREST/Removal and Installation)(Refer To List 2).
- 3. Remove the armrest (Refer to Body/Seats/ARMREST/Removal and Installation)(Refer To List 3).
- 4. Using a hook tool, remove the clip from behind the recline handle (2) then pull outward to remove the handle.
- 5. Remove the two screws (1).
- 6. Using a trim stick, release the front of the outboard side shield (3) then lift and remove.



- 7. Remove the screw $\,$ (2) at the backside of the inboard side shield $\,$ (1).
- 8. Using a trim stick, release the front of the inboard side shield then lift and remove.

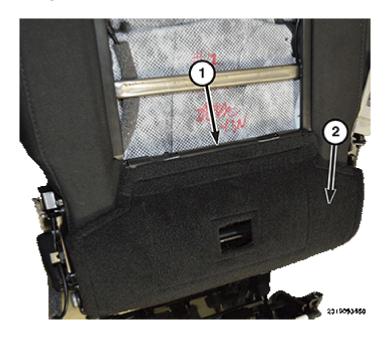

9. Release the J-hooks (1) and remove the lower cover panel (2).

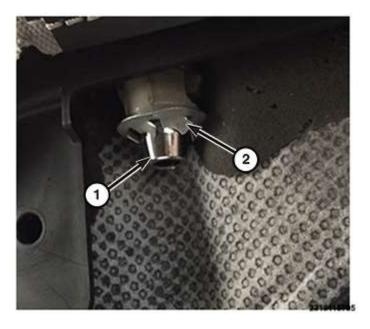

NOTE

The sleeve without the headrest cable has a metal retainer that needs to be removed first.

10. Using cutters, cut the metal retainer (2) and remove. Then remove the headrest sleeve (1).



- 2319093546
- 11. Reach up behind the seat back cover and push the tabs of the headrest sleeves (3) and pull out to remove.
- 12. Release the J-hooks (2) from the seat frame.
- 13. Remove the screw and remove the fold flat handle bezel (1).



14. Remove the screw (1) under the fold flat handle bezel.

NOTE

Be careful not to tear the cover or damage the stiffener. Replace the cover if a stiffener gets torn or damaged.

- 15. Pull the cover stiffeners (2) loose from the fold flat handle housing.
- 16. Remove the seat back cover and the seat back foam as an assembly, from the seat back frame.
- 17. Pull the seat back cover away from the seat back foam, releasing the hook and loop fasteners first.
- 18. Using a hook tool, start at one end to release the clip strips and the seat back cover.

NOTE

Be careful not to damage the clips molded into the seat cushion. If the clips or cushion are damaged during removal, replace the cushion.

INSTALLATION



- 1. Position the seat back cover onto the seat back foam and engage the clip strips.
- 2. Pull the seat cover tight and engage the hook and loop fasteners.
- 3. Position the seat back cushion assembly onto the seat frame.
- 4. Route the seat belt through the seat back cover and position the cushion assembly onto the seat back frame.
- 5. Install the cover stiffeners (2) into the fold flat handle housing.
- 6. Install the screw (1) under the fold flat handle bezel.



NOTE


The sleeve without the headrest cable has a metal retainer that needs to be installed first.

7. Install the headrest sleeve (1), then install a **NEW** metal retainer (2).



2319093546

- 8. Pull the seat back cover tight and fasten all the J-hook fasteners (2).
- 9. Install the push fastener under the fold flat handle bezel (1).
- 10. Install the fold flat handle bezel and screw.
- 11. Install the headrest sleeves (3) and hand tap to engage the tabs.

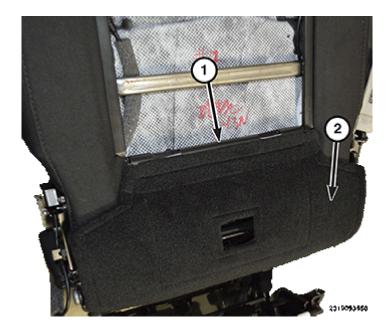

12. Install the lower cover panel (2) and fasten the J-hook fasteners (1).



13. Install the inboard side shield (1) and the screw (2).



- 14. Install the outboard side shield (3) and the two screws (1).
- 15. Install the recline handle (2).
- 16. Install the armrest (Refer to Body/Seats/ARMREST/Removal and Installation)(Refer To List 3).
- 17. Install the headrest (Refer to Body/Seats/HEADREST/Removal and Installation)(Refer To List 2).
- 18. Install the 2nd row Stow-N-Go seat (Refer to 23 Body/Seats/SEAT/Removal and Installation)(Refer To List 1).

Refer To List:

List 1

- 23 Body / Seats, First Row / SEAT, Front / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / SEAT, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / SEAT / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / SEAT / Removal and Installation

List 2

- 23 Body / Seats, Second Row, Stow-n-Go / HEADREST, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / HEADREST, Third Row / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / HEADREST, Third Row / Removal and Installation

List 3

- 23 Body / Seats, First Row / ARMREST, Front / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / ARMREST, Stow-n-Go / Removal and Installation