CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL



- 1. Remove the third row seat from the vehicle (Refer to 23 Body/Seats/SEAT/Removal and Installation) (Refer To List 1).
- 2. Using a trim tool, remove the end clip from the soft cover (2), and remove the screw (1).
- 3. Pull at the front of the side cover (3) to release the clip, then lift off the recliner to remove. Remove both side covers.

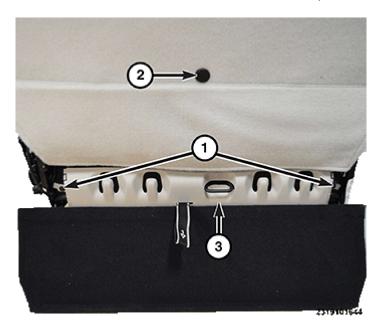


- 4. Remove the two screws (1).
- 5. Pull at the bottom of the cover (3) to release the clips, then lift to remove from the seat frame.



2319101639


- 6. Using a trim stick, release the clips and remove the hinge cover (1).
- 7. Using a trim stick, release the clips and loosen the leg cover (3), then remove the seat panel (2).

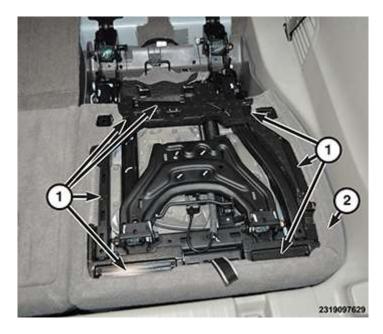

8. Using a hook tool, release all the seat cushion cover retainers (1).



- 9. Pull the seat cover (3) from around the trim support (2).
- 10. Lift the trim support at the front (1), then push rearward and remove it from the frame.
- 11. Remove the seat cushion and cover from the seat cushion frame as an assembly.

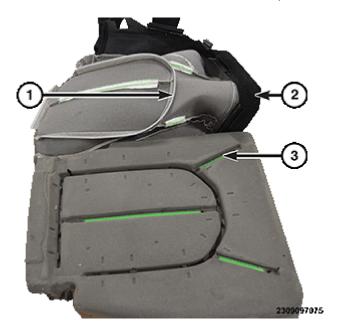

NOTE

Be careful not to damage the clips molded into the seat cushion. If the clips or cushion are damaged during removal, replace the cushion.

12. Pull the cover (2) from the foam. Use a hook tool to release the clip strip (1). Pull to release the hook and loop fasteners (3).


INSTALLATION



- 1. Assemble the cover (2) to the foam.
- 2. Install the seat cushion as an assembly, onto the seat frame.



3. Install the trim support (1) and pull the trim cover (2) over the trim support.

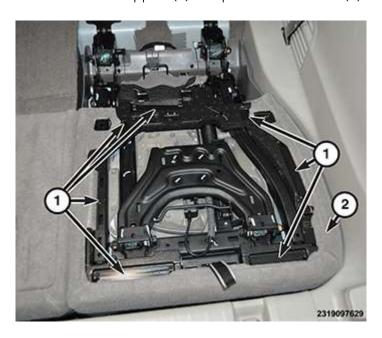


4. Secure all the seat cushion cover retainers (1).



2319101639

- 5. Install the seat panel (2) and the snap the leg cover (3) into place.
- 6. Install the hinge cover (1).

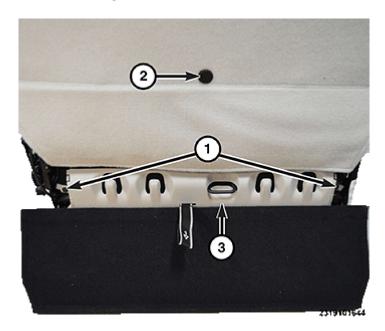

7. Install the cover (3) the two screws (1).



- 8. Install the side cover (3) and the screw (1) on both sides of the seat.
- 9. Clip the soft cover (2) into place.
- 10. Install the third row seat into the vehicle (Refer to Body/Seats/SEAT/Removal and Installation)(Refer To List 1).

Refer To List:

List 1

- 23 Body / Seats, First Row / SEAT, Front / Removal and Installation
- 23 Body / Seats, Second Row, Stow-n-Go / SEAT, Stow-n-Go / Removal and Installation
- 23 Body / Seats, Third Row, Stow-n-Go / SEAT / Removal and Installation
- 23 Body / Seats, Third Row, Power Folding / SEAT / Removal and Installation