
# **CHILTON**LIBRARY




## **Removal & Installation**

#### **REMOVAL AND INSTALLATION**

#### **REMOVAL**

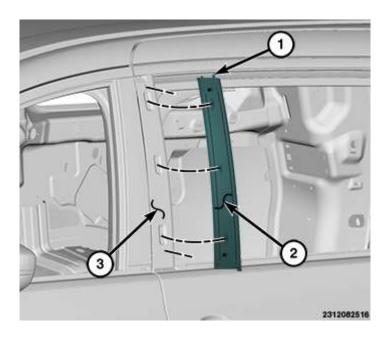

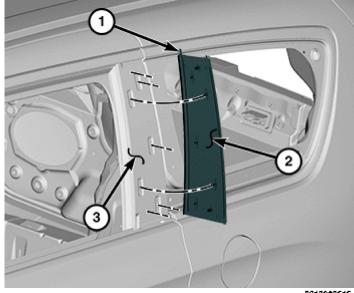

2312082515

- 1. Use a plastic putty knife or equivalent, along the edges of the applique (2) to cut the two sided tape (1).
- 2. Use trim tool


### Remover, Trim




or equivalent to release the spring retainers.

- 3. Remove the applique.
- 4. Remove adhesive tape residue from painted surface of vehicle (3). Use a 3M Scotch-Brite™ Molding Adhesive and Stripe Removal Discs, or equivalent, to clean adhesive residue from painted surfaces. The adhesive removal discs are available from automotive paint suppliers. Refer to instructions supplied with the discs for proper usage.

#### **INSTALLATION**

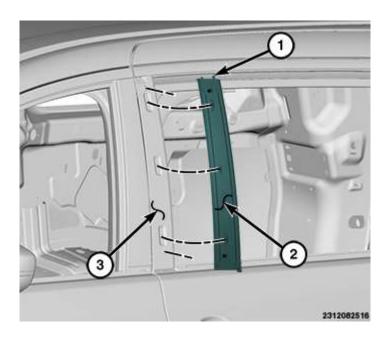

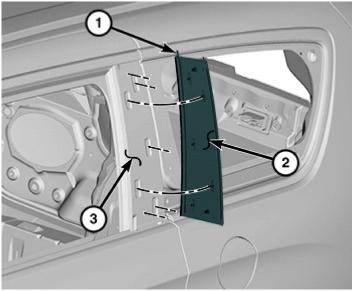

2312082515

- 1. If the applique is to be reused:
  - a. Remove two sided tape residue from the applique.
  - b. Clean back of the applique with Mopar® Super Kleen solvent, or equivalent.
  - c. Wipe dry with lint free cloth.
  - d. Apply new two sided adhesive tape (1) to back of applique.
- 2. Clean the painted surface (3) with Mopar® Super Kleen solvent, or equivalent. Wipe surface dry with lint free cloth.
- 3. Remove the protective cover from the tape (1) on back of the applique (2).
- 4. Align the spring retainers on the applique (2) to the appropriate slots on the door frame (3) and with the use of hand pressure seat the clips fully.
- 5. Using a roller tool or equivalent, roll along the applique where the two sided tape is applied with enough force to guarantee adhesion.