




YOUR CURRENT VEHICLE

2018 Chrysler Pacifica

Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

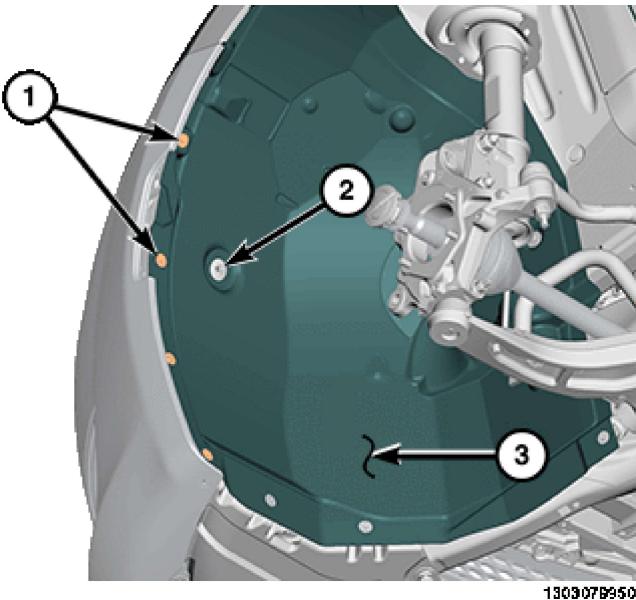


WARNING

On vehicles equipped with the high voltage system, disconnecting the 12-volt battery negative cable alone will not power down the 12-volt system. You must perform the 12-volt Power Down procedure before proceeding. Failure to follow these instructions may result in possible serious or fatal injury.


1. For PHEV vehicles, power down the 12-volt system (Refer to 08 - Electrical/Standard Procedure).
2. Disconnect and isolate the negative battery cable.
3. Raise and support the vehicle (Refer to Vehicle Quick Reference/Hoisting/Standard Procedure).
4. Remove the front belly pan (Refer to Frame and Bumpers/Under Body Protection/BELLY PAN/Removal and Installation).(Refer To List 1)

5. Remove the four screws (1) and the nut (2) attaching the wheelhouse splash shields (3) to the front fascia.

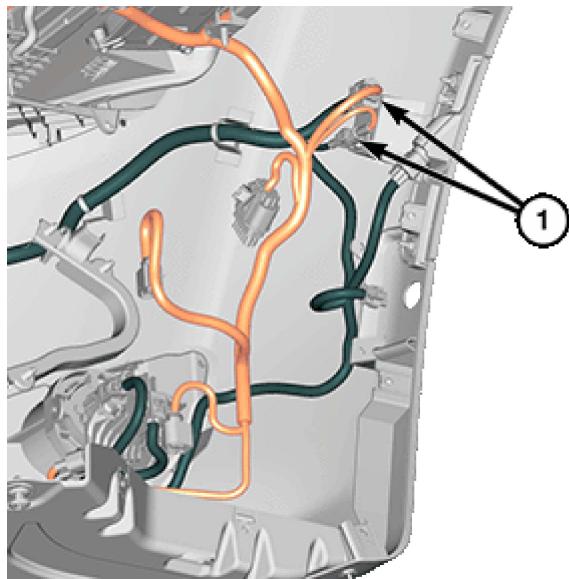

1303086863

6. Disconnect the front fascia wire harness connector (1) on the right side.

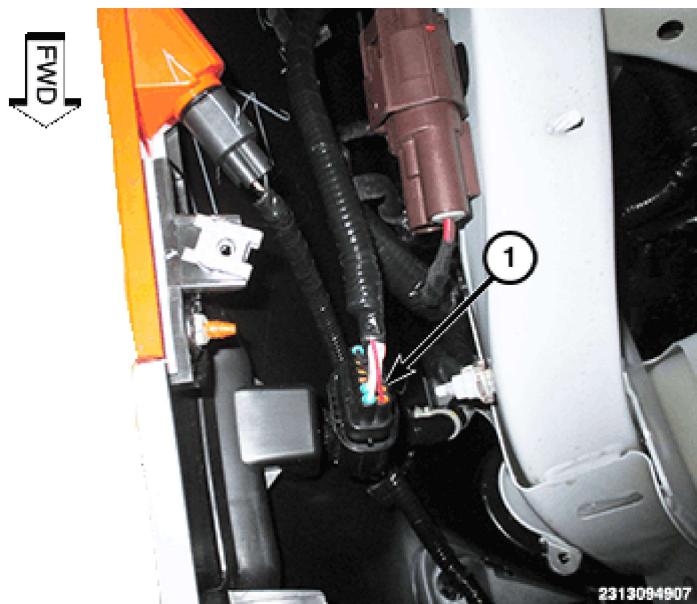


2313084907

7. Disconnect the front fascia wire harness connector (1) on the left side.




130907B090

8. Position aside the wheelhouse splash shields and remove the screws (1) attaching the fascia to the fenders.

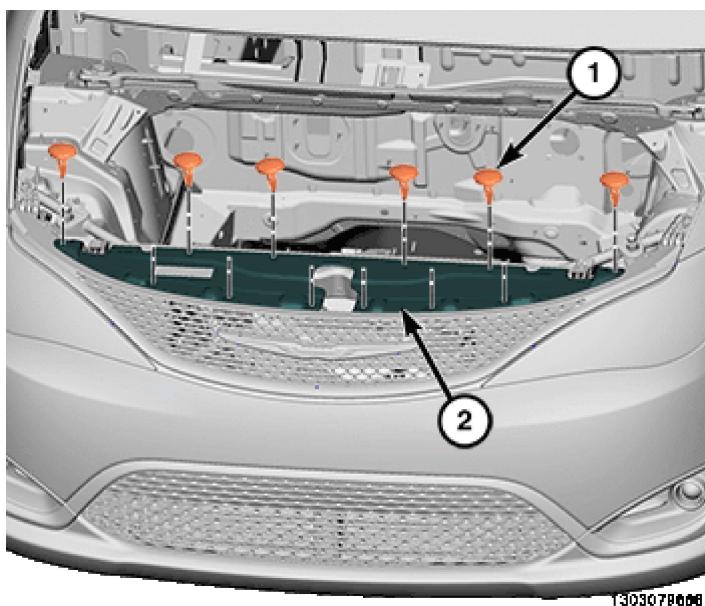


130907B060

9. Remove the 12 push pins (1) and remove the upper fascia closeout panel (2).

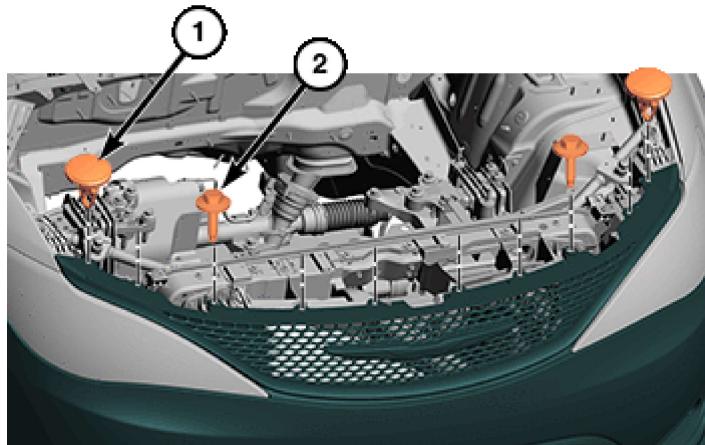

13030786B2


10. Remove the 10 upper grille push pin fasteners (1).

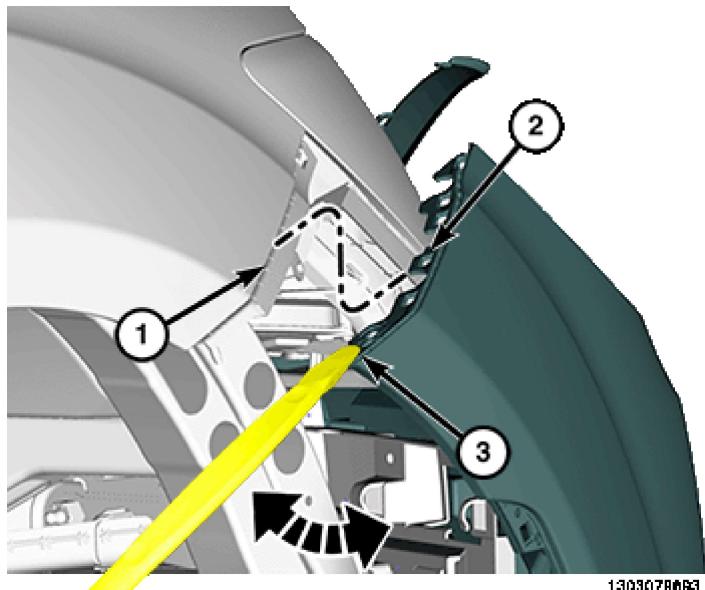

13030786B3


11. Using trim stick

Trim Stick

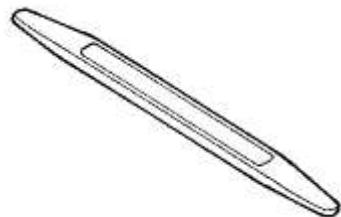


or equivalent, release the rear of the fascia support clip (3).

12. Carefully pull out and release the fascia attachments (2) from the fender attachment and the headlight brackets (1).

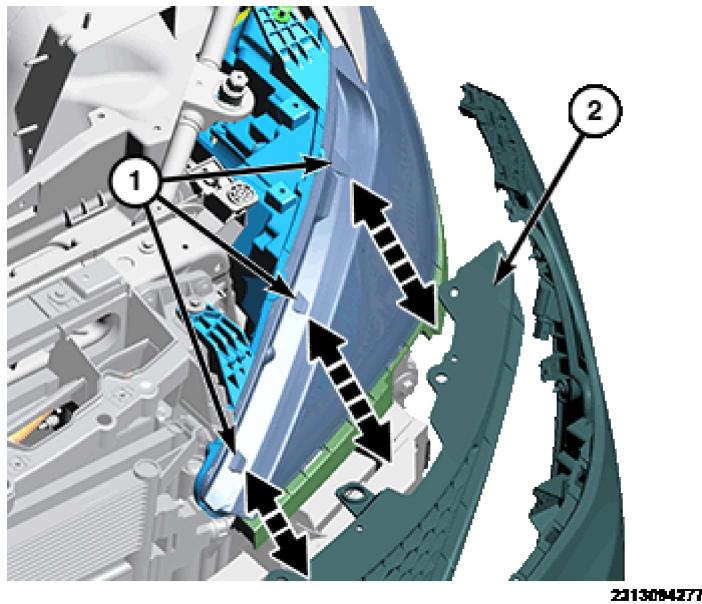

2113084277


13. Separate the upper grille (2) from the headlight tabs (1) by pulling straight ahead gently.

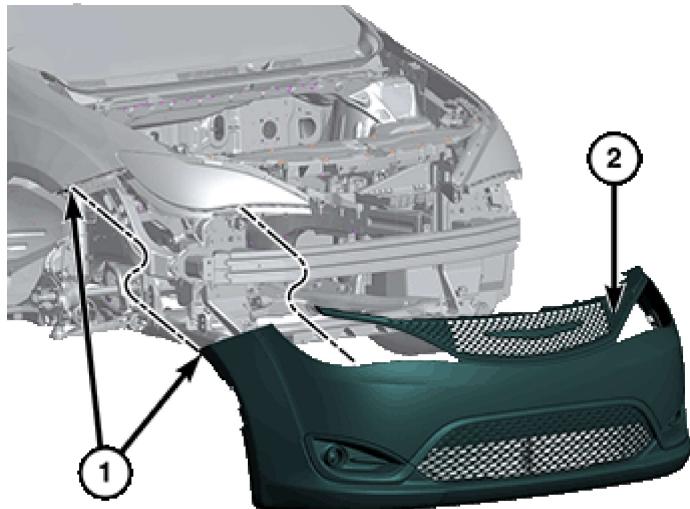

1309079867


14. Position the fascia (2) off the vehicle and disconnect any wire harness connectors as necessary.

15. Remove the fascia (2).

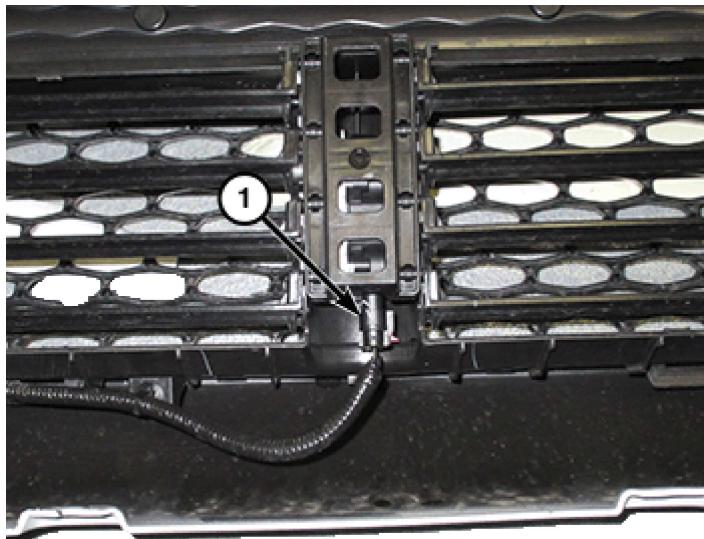


1303046005

16. Disconnect the adjustable grille shutter wire harness connector (1).

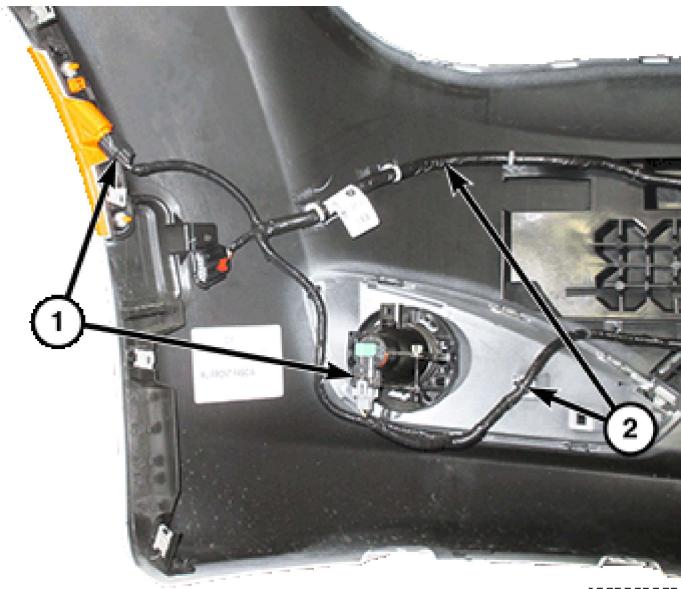


1303046006

17. Disconnect the remaining wire harness connectors (1) and remove the wire harness (2).

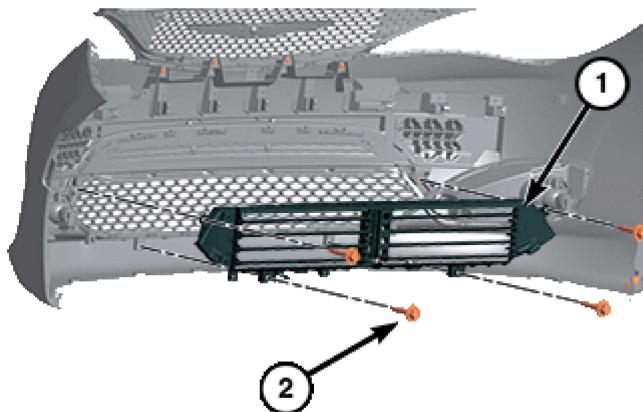


1303078888

18. Remove the screws (2) and remove the adjustable grille shutter assembly (1).

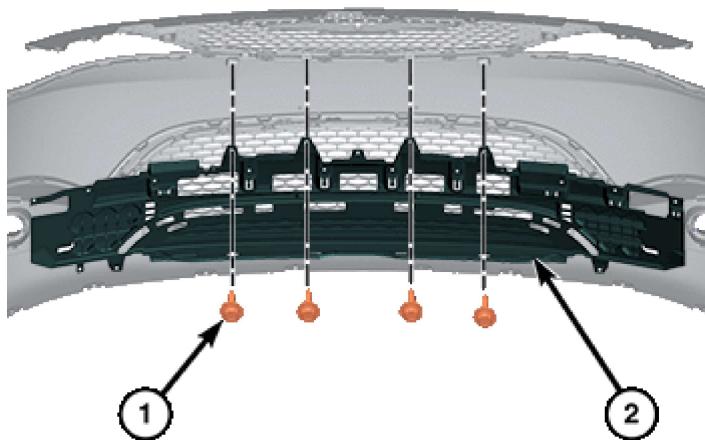


1303078888

19. Remove the screws (1) and remove the energy absorber (2).

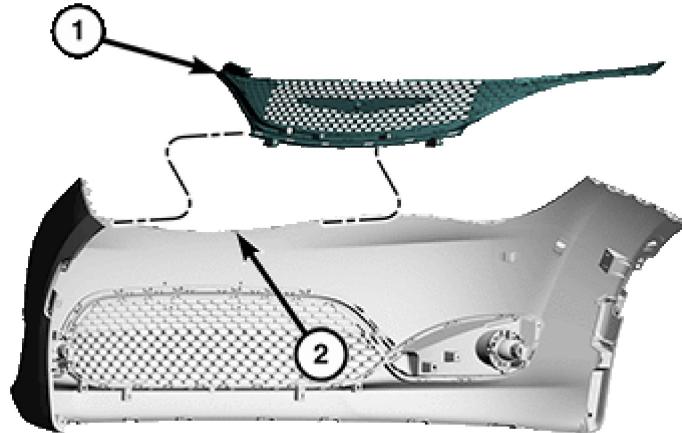

1303079090


20. Separate the clips (2) and remove the upper grille (1).

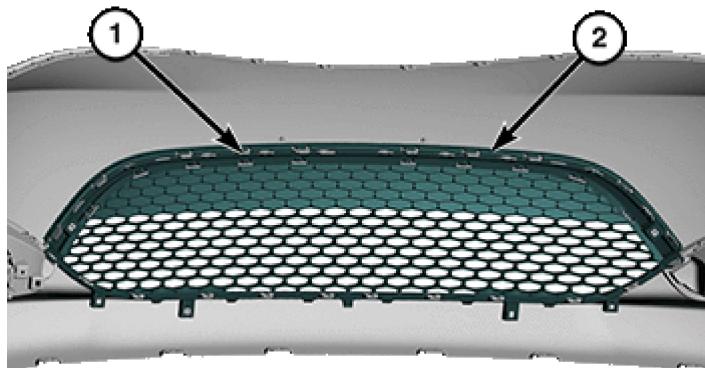

1303079091


21. Separate the clips (1) and remove the lower grille (2).

INSTALLATION

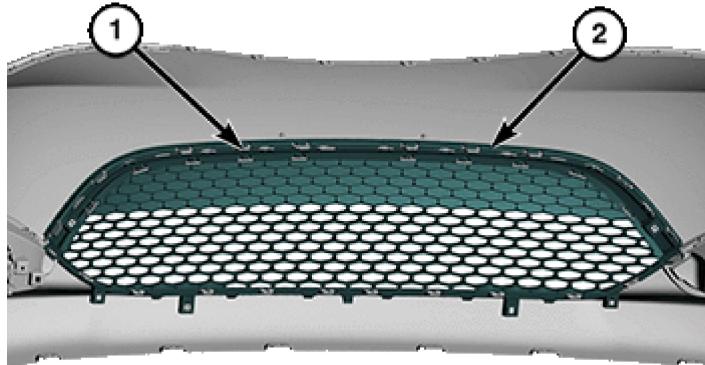


1303079091

1. Install the lower grille (2) onto the fascia and seat the attachment clips (1) fully.

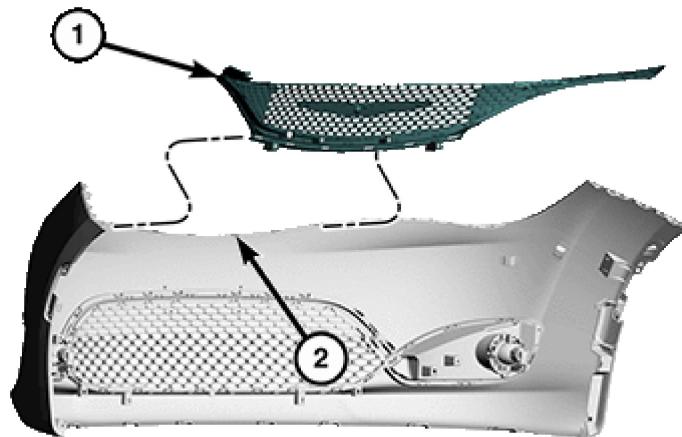


1303079090

2. Position the upper grille (1) onto the fascia and seat the attachment clips (2) fully.

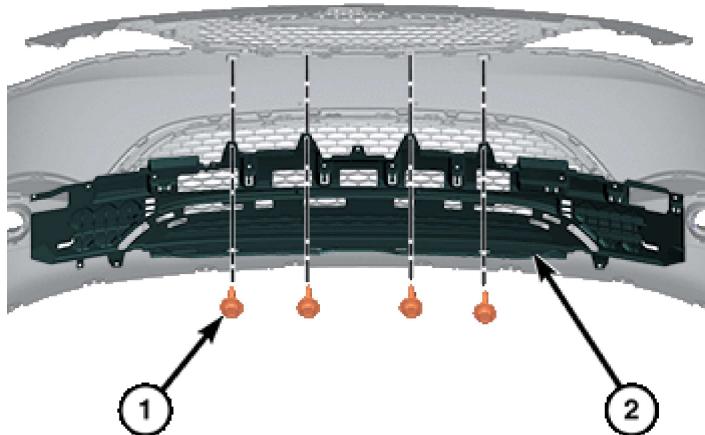


1303079808

3. Install the energy absorber (2) onto the fascia assembly and install the screws (1).

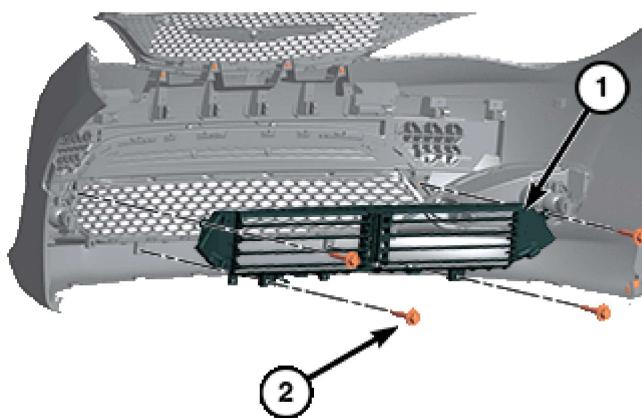


1303079808

4. Install the adjustable grille shutter assembly (1) onto the fascia assembly and install the screws (2).

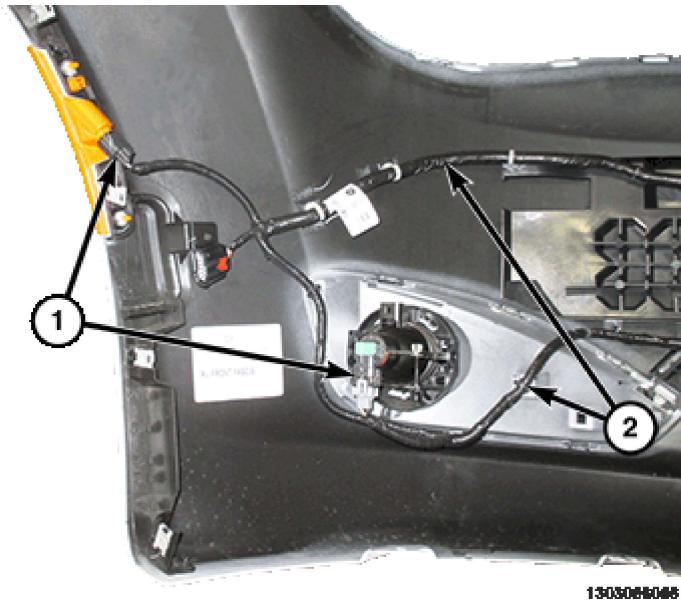


1303046048

5. Install the wire harness (2) and connect all the wire harness connectors (1).

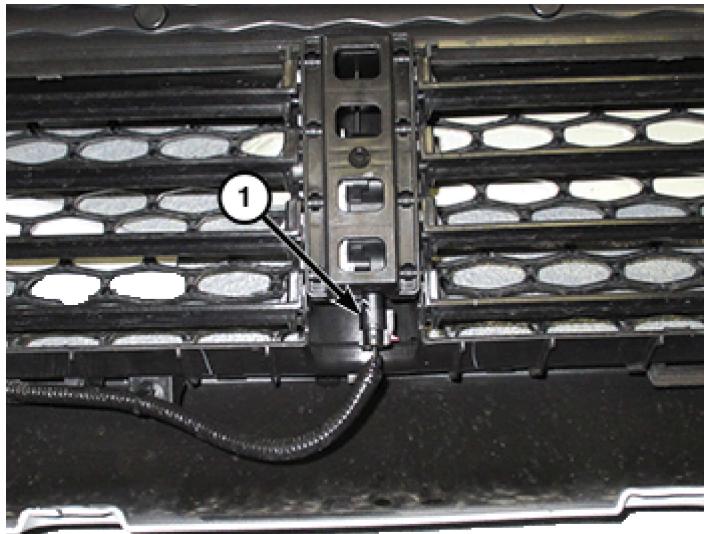


1303046045

6. Connect the adjustable grille shutter wire harness connector (1).

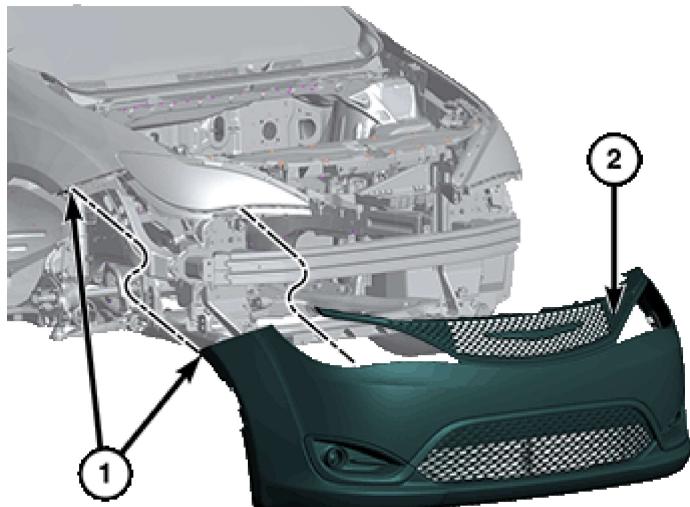


1303078867

7. Position the fascia (2) onto the vehicle and connect the wire harness connectors as necessary.
8. Position the fascia up onto the fender and headlight support clips (1).

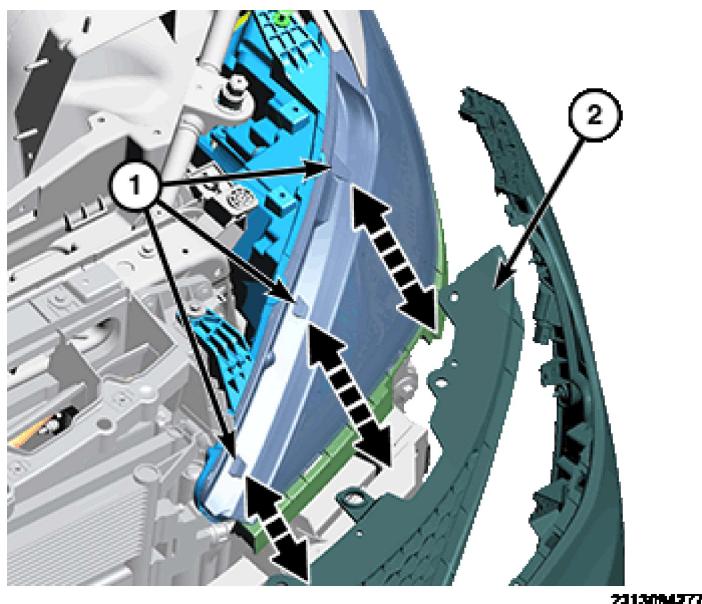


2113084277


9. Position the upper grille (2) onto the headlight tabs (1).

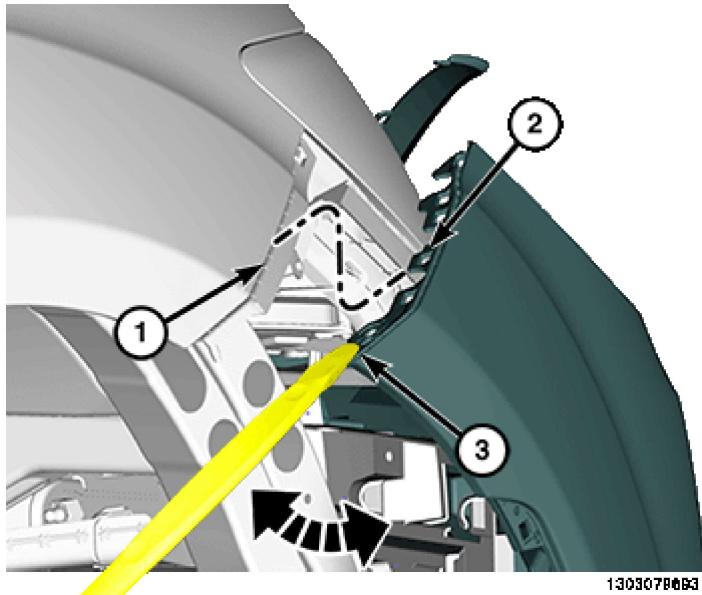

10. Seat the support clips (2) onto the fender and headlight attachment clips (1) and seat fully.

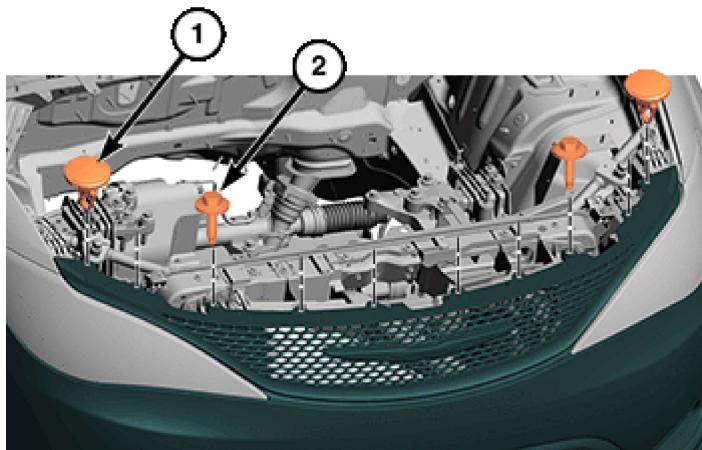

11. Install the 10 upper grille push pin fasteners (1).

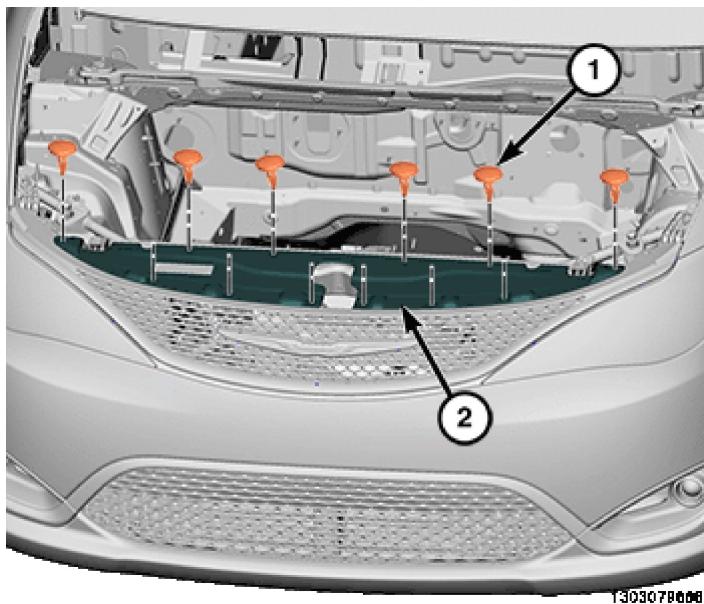


130307B000

12. Install the upper fascia closeout panel (2) and install the 12 push pin fasteners (1).




130307B000


13. Install the screws (1) attaching the fascia to the fenders.

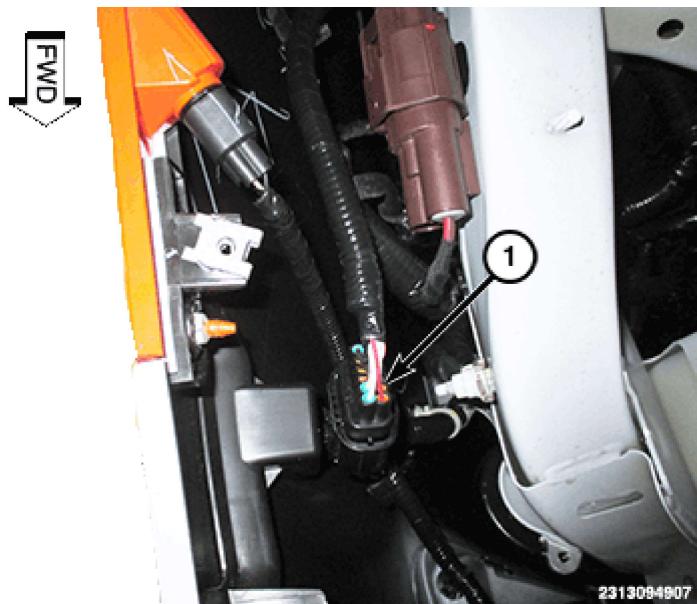

14. Connect the front fascia wire harness connector (1) on the left side.

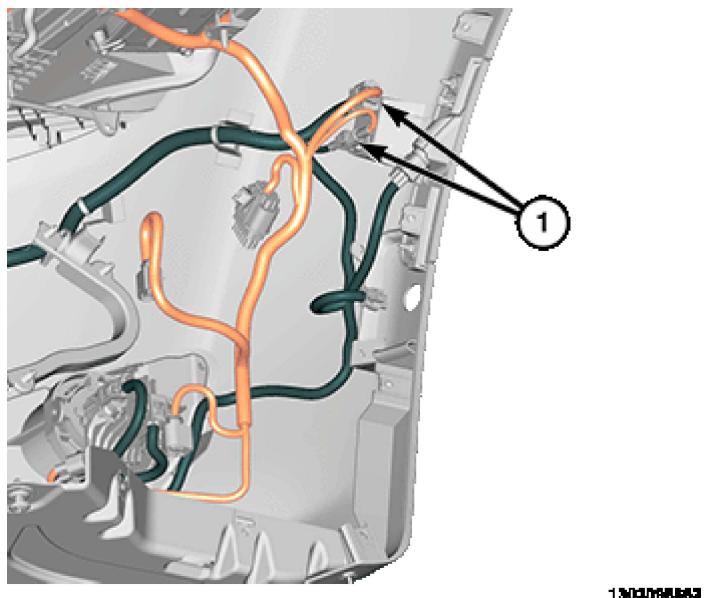

15. Connect the front fascia wire harness connector (1) on the right side

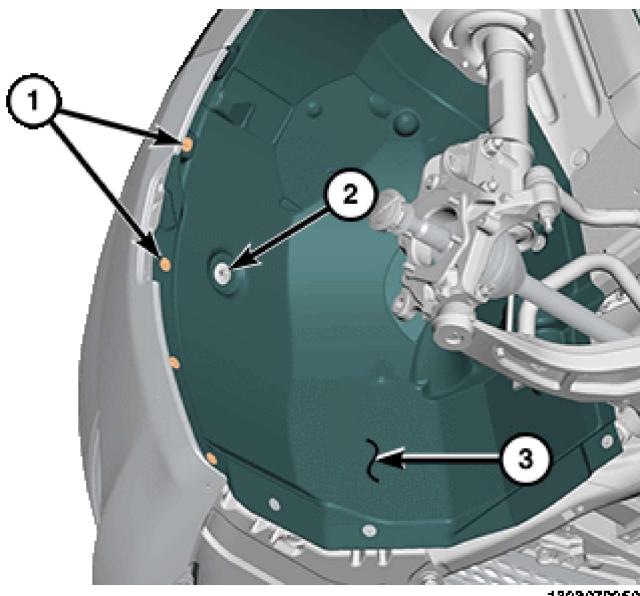

16. Position the wheelhouse splash shield (3) back and install the nut (2) and the four screws (1).
17. Install the front belly pan ([Refer to 13 - Frame and Bumpers/Under Body Protection/BELLY PAN/Removal and Installation](#)).([Refer To List 1](#))
18. For PHEV vehicles, power up the 12-volt system ([Refer to 08 - Electrical/Standard Procedure](#)).
19. Connect the negative battery cable.

Refer To List:**List 1**

- [13 - Frame and Bumpers / Under Body Protection / BELLY PAN, Engine / Removal and Installation](#)
- [13 - Frame and Bumpers / Under Body Protection / BELLY PAN, Front / Removal and Installation](#)
- [13 - Frame and Bumpers / Under Body Protection / BELLY PAN, Rear / Removal and Installation](#)
- [13 - Frame and Bumpers / Under Body Protection / BELLY PAN, Rear Suspension / Removal and Installation](#)
- [13 - Frame and Bumpers / Under Body Protection / BELLY PAN, Side / Removal and Installation](#)