# **CHILTON**LIBRARY




## **Removal & Installation**

### **REMOVAL AND INSTALLATION**


**REMOVAL** 



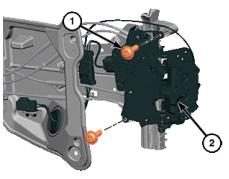


312002004

- 1. Remove the rear carrier plate (Refer to Body/Doors Sliding/PLATE, Carrier/Removal and Installation).(Refer To List 1)
- 2. Remove the screws (1) and separate the latch assembly (2) from the presenter bracket.

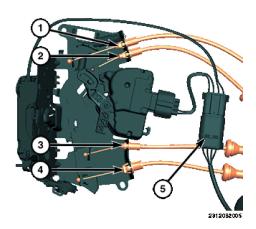


3. Disconnect the hold open latch control cable (1) and remove the cable from the carrier plate.

# INSTALLATION

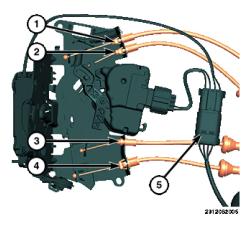

- 1. Install the front cable onto the carrier plate.
- 2. Install the front latch (Refer to Body/Doors Sliding/LATCH/Removal and Installation).(Refer To List 2)
- 3. Install the hold open latch control cable (1) onto the carrier plate and connect it to the latch.

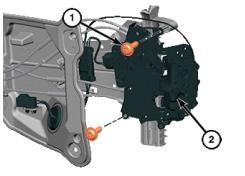

2312062004

- 4. Install the latch assembly (2) onto the presenter bracket and install the screws (1).
- 5. Install the rear carrier plate (Refer to 23 Body/Doors Sliding/PLATE, Carrier/Removal and Installation).(Refer To List 1)

### Refer To List:

#### List 1

- 23 Body / Doors Sliding / PLATE, Carrier Front / Removal and Installation
- 23 Body / Doors Sliding / PLATE, Carrier Rear / Removal and Installation

### List 2

- 23 Body / Doors Sliding / LATCH, Front / Removal and Installation
- 23 Body / Doors Sliding / LATCH, Rear / Removal and Installation