
CHILTONLIBRARY



Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

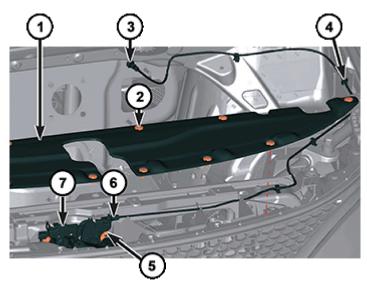

- 2314081016
- 1. Remove the 11 push fasteners (2) and the front fascia upper cover (1).
- 2. Using a grease pencil or equivalent, mark the position of the hood latch (7) to aid in installation.
- 3. Remove the two three bolts (5).
- 4. Turn the hood latch over and remove the hood latch release cable (6) from the hood latch.

INSTALLATION

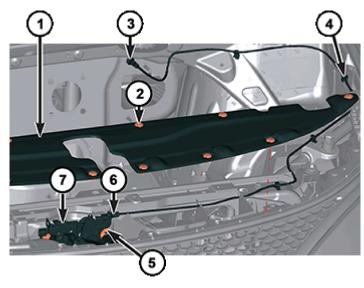

2314081016

- 1. Install the hood latch release cable (6) into the hood latch (7).
- 2. Position the hood latch and loosely install the bolts (5).
- 3. Align the hood latch with the reference mark made previously and tighten the hood latch bolts to the proper (Torque Specifications).
- 4. Verify proper hood latch operation and fit of hood. Adjust if necessary (Refer to Body/Body Structure/Gap and Flush/Specifications).
- 5. Install the front fascia upper cover (1) and the push fasteners (2).