
CHILTONLIBRARY



Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

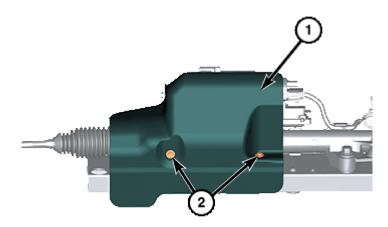


1904080039

- 1. Remove the front suspension crossmember (Refer to 13 Frame and Bumpers/Frame/CROSSMEMBER, Front Suspension/Removal and Installation).(Refer To List 1)
- 2. Remove the screws (2) and remove the heat shield (1).

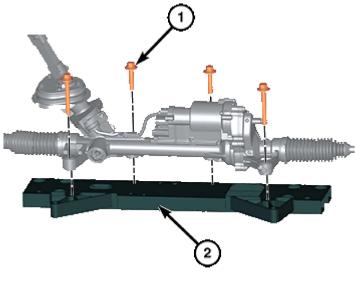


- 1304080034
- 3. Remove the sway bar (Refer to Front Suspension/Front/STABILIZER BAR, Front/Removal and Installation).
- 4. Remove the bolts (1) and remove the crossmember (2) from the steering gear.

INSTALLATION

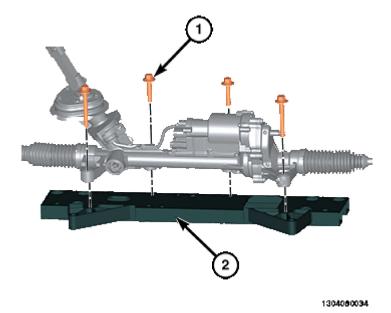

- 1. Install the crossmember (2) onto the steering gear and install the bolts (1).
- 2. Tighten the bolts (1) to the proper (Torque Specifications).
- 3. Install the sway bar (Refer to Front Suspension/Front/STABILIZER BAR, Front/Removal and Installation).

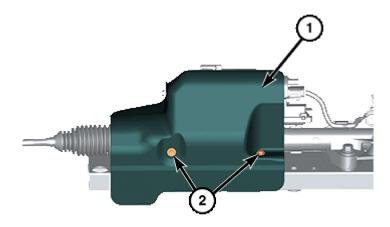

1904080039

- 4. Install the heat shield (1) and install the screws (2).
- 5. Install the front suspension crossmember (Refer to Frame and Bumpers/Frame/CROSSMEMBER, Front Suspension/Removal and Installation).(Refer To List 1)

Refer To List:

List 1

- 13 Frame and Bumpers / Frame / CROSSMEMBER, Front Suspension / Removal and Installation
- 13 Frame and Bumpers / Frame / CROSSMEMBER, Rear Suspension / Removal and Installation
- 13 Frame and Bumpers / Frame / CROSSMEMBER, Steering Gear / Removal and Installation