CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

REMOVAL




NOTE

The sunshade can be removed without removing the sunroof assembly. The sunshade retraction spring force is significant. Firmly hold onto the sunshade while releasing the sunshade.


- 1. Open the sunshade fully.
- 2. Remove the front sunroof glass panel (Refer to Body/Sunroof/GLASS, Sunroof/Removal and Installation)(Refer To List 1).
- 3. Remove the six screws (1) from the rear glass, and slide the glass forward as far as possible.

NOTE


The remainder of this procedure will require an assistant.

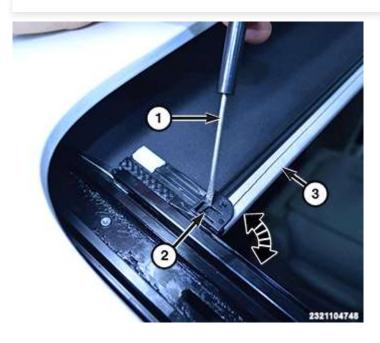


- 4. With the assistant, hold the sunshade beam (3) tension.
- 5. Using a flat bladed tool (1), release the tab (2) and roll the sunshade beam off the guide. Do this on both sides of the sunroof.

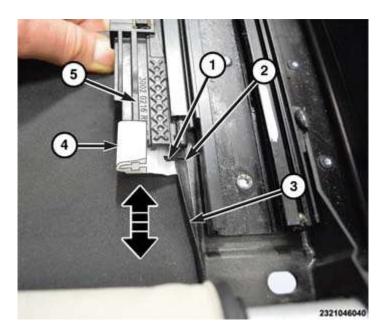


- 6. Using a small flat bladed tool, carefully pry at the front of the white clip (4) and slide it rearward off the guide (5). Do this on both sides of the sunroof.
- 7. Remove the white clip from the fabric, taking note of the sew line (2) and slot (1) for installation.

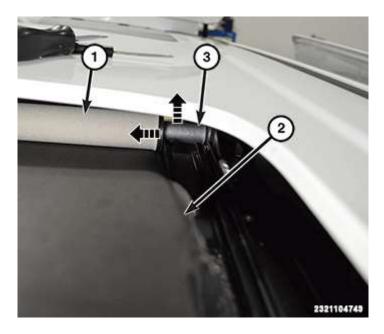

8. Grasp the sunshade on the left side of the vehicle and slide it to the right, then lift the end off the pivot.

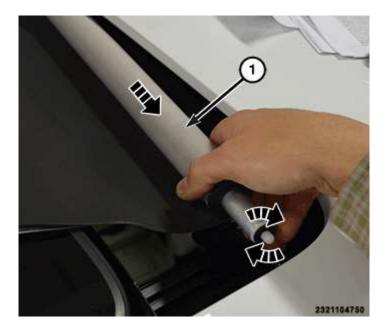


9. Pull the sunshade forward but do not fully remove the sunshade until the spring tension on the shade is locked.

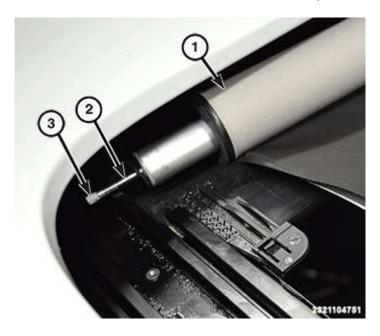


- 10. Apply light pulling pressure on the sunshade assembly (1), while twisting clockwise until the steel rod (2) on the right hand side of the sunshade extends to the locked position.
- 11. When at least one inch of the steel rod is exposed it can be removed from the bracket without the spring unwinding. If the sunshade spring lock is released before it engages in the internal slot, the sunshade spring will completely unwind and will need to be re-wound prior to installation (Refer to Body/Sunroof/SUNSHADE, Sunroof/Standard Procedure)


INSTALLATION

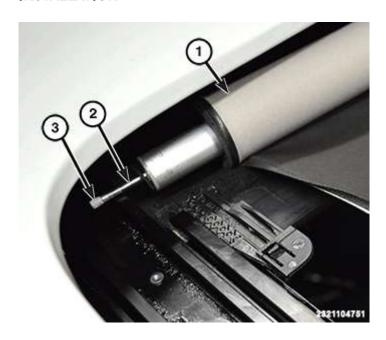


1. Locate the flattened end of the steel rod (3) on the right hand side of the sunshade and insert it into the slot in the bracket.

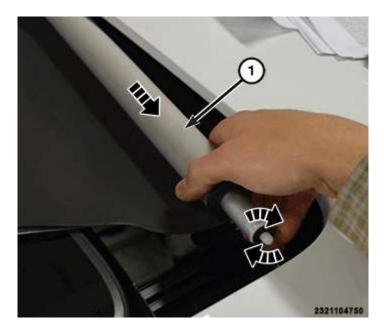


- 2. With the sunshade (1) held firmly, push the sunshade inward to release the sunshade spring lock.
- 3. If the steel pin is pushed in before it engages in the bracket, the sunshade has to be re-wound (Refer to 23 Body/Sunroof/SUNSHADE, Sunroof/Standard Procedure).

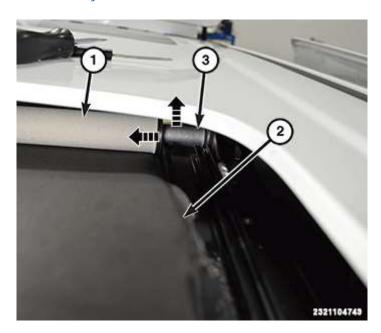

4. Push the left side of the sunshade (3) down until the white pivot pin snaps into the pivot bracket.

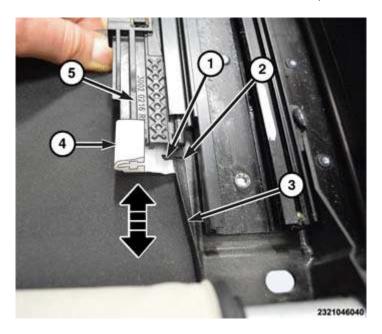

- 5. Insert the white clip (4) with the slot (1) located at the sew line (2). Do this on both sides of the sunshade.
- 6. Extend the front sunshade beam forward and work the fabric (3) under the guide.
- 7. Slide the sunshade and white clips forward onto the guide (5). Do this on both sides of the sunshade.

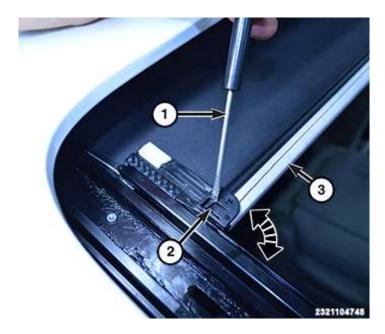

- 8. Rotate the front sunshade beam (3) onto the retainer until the tab (2) snaps into place.
- 9. Position the rear glass and loosely install the six screws.
- 10. Install the front glass panel (Refer to 23 Body/Sunroof/GLASS, Sunroof/Removal and Installation) (Refer To List 1).

11. Adjust the glass panes (Refer to Body/Sunroof/GLASS, Sunroof - Adjustments)(Refer To List 2).

Refer To List:

List 1

- 23 Body / Sunroof, Dual Pane / GLASS, Sunroof, Front / Removal and Installation
- 23 Body / Sunroof, Dual Pane / GLASS, Sunroof, Rear / Removal and Installation

List 2

- 23 Body / Sunroof, Dual Pane / GLASS, Sunroof, Front / Adjustments
- 23 Body / Sunroof, Dual Pane / GLASS, Sunroof, Rear / Adjustments