
CHILTONLIBRARY



Removal & Installation


REMOVAL AND INSTALLATION

REMOVAL

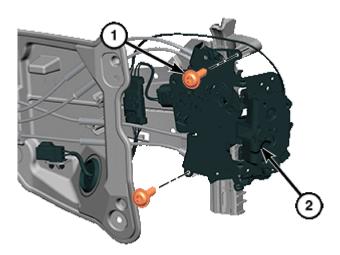


2312062004

- 1. Remove the rear carrier plate (Refer to Body/Doors Sliding/PLATE, Carrier/Removal and Installation). (Refer To List 1)
- 2. Remove the screws (1) and separate the latch assembly (2) from the presenter bracket.

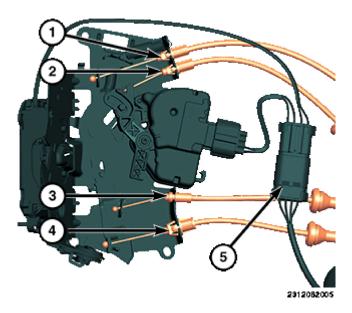


- 3. Disconnect the front latch control cable (4) and remove the rear cable from the carrier plate.
- 4. Remove the front latch (Refer to Body/Doors Sliding/LATCH/Removal and Installation).(Refer To List 2)
- 5. Remove the front cable from the carrier plate.

INSTALLATION

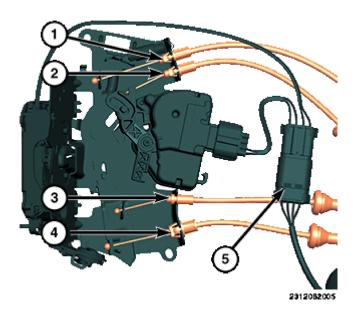

- 1. Install the front cable onto the carrier plate.
- 2. Install the front latch (Refer to Body/Doors Sliding/LATCH/Removal and Installation).(Refer To List 2)
- 3. Install the front latch control cable (4) onto the carrier plate and connect it to the latch.

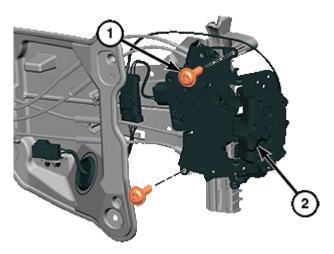

- 2312062004
- 4. Install the latch assembly (2) onto the presenter bracket and install the screws (1).
- 5. Install the rear carrier plate (Refer to 23 Body/Doors Sliding/PLATE, Carrier/Removal and Installation). (Refer To List 1)

Refer To List:

List 1

- 23 Body / Doors Sliding / PLATE, Carrier Front / Removal and Installation
- 23 Body / Doors Sliding / PLATE, Carrier Rear / Removal and Installation

List 2

- 23 Body / Doors Sliding / LATCH, Front / Removal and Installation
- 23 Body / Doors Sliding / LATCH, Rear / Removal and Installation