
# **CHILTON**LIBRARY



# **Removal & Installation**


# **REMOVAL AND INSTALLATION**

# **REMOVAL**

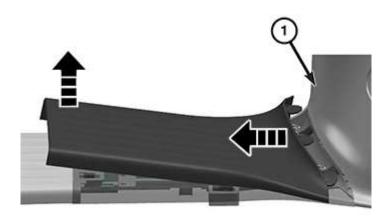

#### 2316130327


- 1. Using a trim stick or equivalent, lift the front edge of the scuff plate extension then pull forward to remove the three tabs from the quarter trim panel (1).
- 2. Move the front seat to the full forward position.

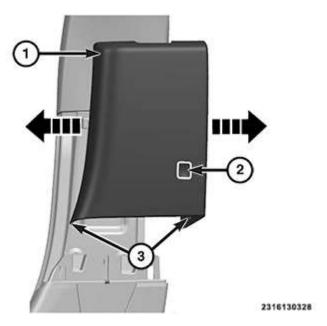

3. Spread the bottom flanges of the B-pillar extension apart to disengage the lower side snaps, then use a trim stick or equivalent to disengage the remaining two clips (2). Pull at the top edge seat belt opening to disengage the top four retainers (1).

# NOTE

Disconnect the front seat position switch (2), if equipped.

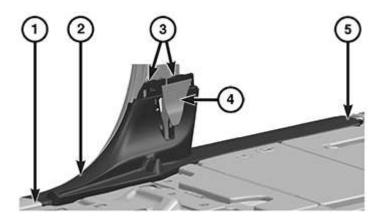


2316130329

- 4. Pull inboard on upper edge of cover (4), then pull up to remove.
- 5. Pull clips of B-Pillar Lower/Scuff (3) inboard with hands along each side of each clip.


- 6. Use trim stick or equivalent, to disengage two forward edge clips of B-Pillar Lower/Scuff (1) from Cowl/Scuff (2) and lift at forward edge to disengage remaining four forward fasteners from wire trough.
- 7. Lift up on rearward edge (5) of B-Pillar Lower/Scuff to disengage remaining six rearward fasteners from wire trough.

# **INSTALLATION**

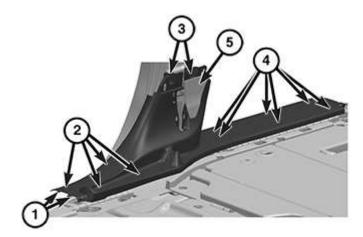

#### 2316130330

- 1. Install two forward fasteners of Lower B-Pillar/Rear Scuff (1) to mating Cowl/Scuff retainers.
- 2. Align the remaining four forward fasteners (2) to mating sockets of wire trough and press in.
- 3. Align the six rearward fasteners of Lower B-Pillar/Rear Scuff (4) to mating sockets in wire trough and press in.
- 4. Align the two metal clips (3) to the slots of the B-Pillar column and press in.
- 5. Install cover (5) to B-Pillar/Rear Scuff Belt opening.

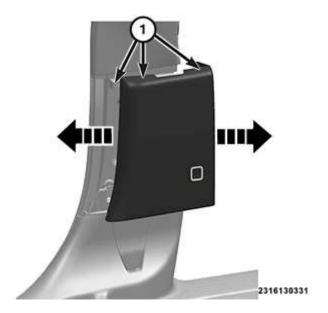


6. Spread the side flanges of the B-Pillar extension apart at the upper edge and align the two upper clips to the retainer sockets of the B-Pillar column (2). Pull from outside vehicle to install.

# NOTE

Connect the front seat position switch electrical connector, if equipped.

- 7. Spread the side flanges of the B-Pillar extension apart at the lower edge and pull from outside vehicle to install.
- 8. Press in lower side flanges to seat side snaps.

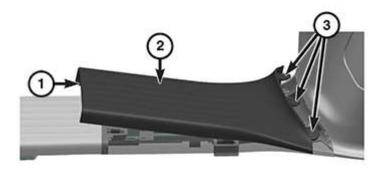

2316130332

- 9. Install the three rearward tabs into rear quarter trim (3) slots and push Scuff extension rearward (1) to engage clips
- 10. Align forward snap of scuff extension to rear retention slot of Lower B-Pillar/Rear Scuff. Press down (2) to install all 5 retention clips