
# **CHILTON**LIBRARY




# **Removal & Installation**

### **REMOVAL AND INSTALLATION**

### **REMOVAL**

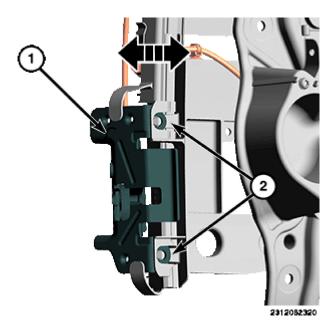


- 1. Remove the front carrier plate assembly (Refer to 23 Body/Doors Sliding/PLATE, Carrier/Removal and Installation).(Refer To List 1)
- 2. Release the retaining tabs (2) and twist the latch (1) out away from the tabs.

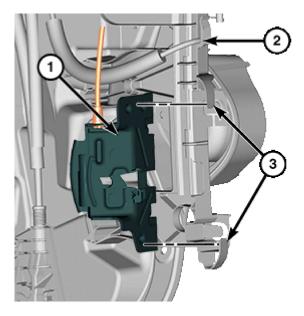


2312062041

3. Separate the latch assembly (1) from the retaining tabs (3) on the presenter bracket (2).

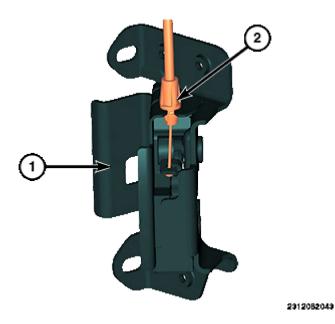


4. Disconnect the control cable (2) and remove the latch (1).

## **INSTALLATION**

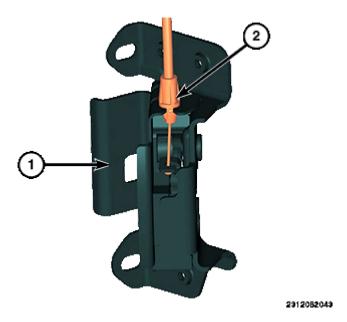


1. Connect the control cable (2) to the latch assembly (1).

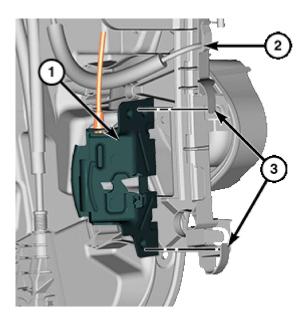

2312062041

2. Position the latch assembly (1) onto the presenter bracket (2) and slide under the retaining tabs (3).

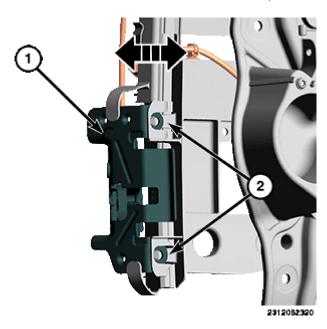

- 3. Seat the latch assembly (1) onto the retaining tabs (2) and seat fully.
- 4. Install the front carrier plate assembly (Refer to Body/Doors Sliding/PLATE, Carrier/Removal and Installation).(Refer To List 1)

#### **Refer To List:**

#### List 1

- 23 Body / Doors Sliding / PLATE, Carrier Front / Removal and Installation
- 23 Body / Doors Sliding / PLATE, Carrier Rear / Removal and Installation