CHILTONLIBRARY




Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL


NOTE

This applies to the outboard headrests only.

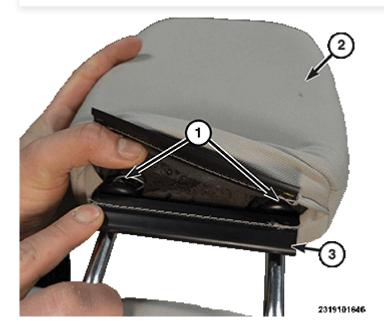

- 1. Release the headrest and fold it down slightly.
- 2. Open the trim cover clip strip (3).
- 3. Using a small flat bladed tool, remove the two metal clips (1) that are in the plastic guide.
- 4. Pull the headrest (2) off the posts.
- 5. The headrest trim cover can now be removed, if necessary.

INSTALLATION

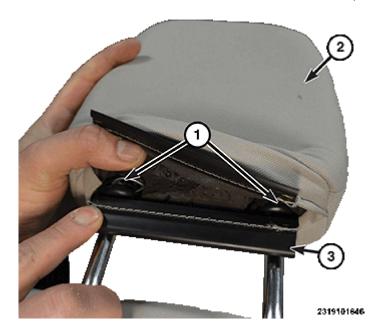

- 1. Install the metal clips (1) fully into the plastic guides, **before** installing it onto the posts.
- 2. Slide the headrest onto the posts until the clips engage into the notches in the posts. An audible click will be heard.
- 3. Pull on the headrest to make sure it is fully engaged.
- 4. Close the trim cover clip strip (3).