
CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

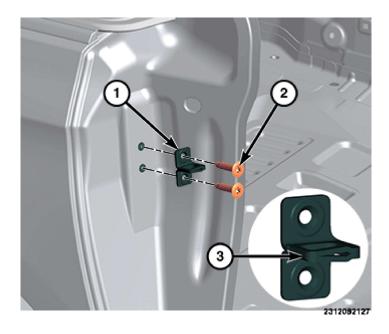


NOTE

Right side shown, left side similar.

- 1. Using a grease pencil or equivalent, mark the location of the door latch striker (2) on the C-pillar.
- 2. Remove screws (1) attaching door latch striker to C-pillar and remove the striker.

INSTALLATION

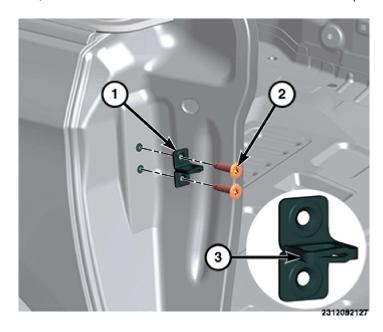

NOTE

Right side shown, left side similar.

NOTE

Make sure the narrow protrusion (3) is orientated towards the exterior of the vehicle.

- 1. Position the door latch striker (1) onto the C-pillar and loosely install the bolts (2).
- 2. Align the door latch striker to the C-pillar using the reference marks made during the removal procedure and tighten the bolts to the proper (Torque Specifications).