
CHILTONLIBRARY



Removal & Installation

REMOVAL AND INSTALLATION

REMOVAL

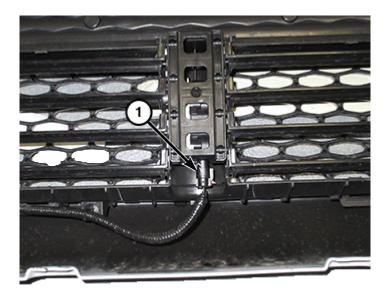


1303096005

CAUTION

Damage can occur to the actuator's gears by twisting the active grille shutter's louvers/vanes.


- 1. Remove the front fascia (Refer to Frame and Bumpers/Bumpers/FASCIA, Front/Removal and Installation).
- 2. Disconnect the actuator wire harness connector from the Active Grill Shutter (AGS) (1).
- 3. Unclip the wiring harness routing clips from the AGS.

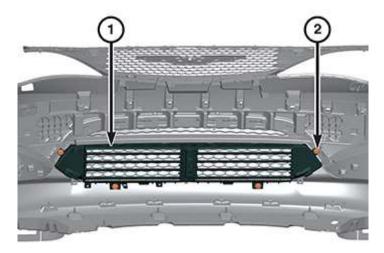

2313083317

- 4. Remove the four fasteners (2) from the AGS (1).
- 5. Remove the AGS (1) from the front fascia.

INSTALLATION

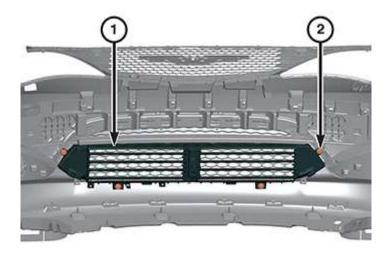


2313083317

CAUTION

Damage can occur to the actuator's gears by twisting the active grille shutter's louvers/vanes.

- 1. Position the AGS (1) to the front fascia.
- 2. Install the four fasteners (2) and tighten securely.

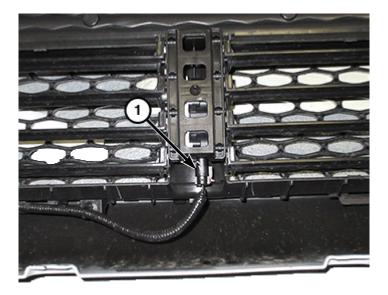

1309096005

- 3. Clip wiring harness routing clips to the AGS.
- 4. Connect the AGS wire harness connector (1).
- 5. Install the front fascia (Refer to Frame and Bumpers/Bumpers/FASCIA, Front/Removal and Installation).