

**ANSI/ASHRAE Standard 135-2008**

(Including ANSI/ASHRAE addenda listed in the History of Revisions)



# **ASHRAE STANDARD**



## **A Data Communication Protocol for Building Automation and Control Networks**

See the History of Revisions at the end of this standard for approval dates by the ASHRAE Standards Committee, the ASHRAE Board of Directors, and the American National Standards Institute.

This standard is under continuous maintenance by a Standing Standard Project Committee (SSPC) for which the Standards Committee has established a documented program for regular publication of addenda or revisions, including procedures for timely, documented, consensus action on requests for change to any part of the standard. The change submittal form, instructions, and deadlines may be obtained in electronic form from the ASHRAE Web site, <http://www.ashrae.org>, or in paper form from the Manager of Standards. The latest edition of an ASHRAE Standard may be purchased from ASHRAE Customer Service, 1791 Tullie Circle, NE, Atlanta, GA 30329-2305. E-mail: [orders@ashrae.org](mailto:orders@ashrae.org). Fax: 404-321-5478. Telephone: 404-636-8400 (worldwide), or toll free 1-800-527-4723 (for orders in US and Canada).

© Copyright 2008 American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc.

ISSN 1041-2336



**American Society of Heating, Refrigerating  
and Air-Conditioning Engineers, Inc.**

1791 Tullie Circle NE, Atlanta, GA 30329

[www.ashrae.org](http://www.ashrae.org)

**ASHRAE Standing Standard Project Committee 135**  
**Cognizant TC: TC 1.4, Control Theory and Application**  
**SPLS Liaison: Frank E. Jakob**

William O. Swan, III, *Chair*  
David Robin, *Vice-Chair*  
Carl Neilson, *Secretary*  
Donald P. Alexander  
Ron E. Anderson  
Beauford W. Atwater  
David J. Branson  
Barry B. Bridges  
Coleman L. Brumley, Jr.  
Ernest C. Bryant  
Steven T. Bushby  
James F. Butler  
A. J. Capowski  
Keith A. Corbett  
Jeffrey Cosiol  
Troy Cowan

Harsha M. Dabholkar  
Sharon E. Dinges  
Dana R. Epperson  
Thomas Ertsgaard  
Craig P. Gemmill  
Daniel P. Giorgis  
Ira G. Goldschmidt  
Winston I. Hetherington  
David G. Holmberg  
Anthony J. Icenhour  
Robert L. Johnson  
Stephen Karg  
J. Damian Ljungquist  
James G. Luth  
John J. Lynch

Jerald P. Martocci  
H. Michael Newman  
Cherisse M. Nicastro  
Robert L. Old  
Mark A. Railsback  
Carl J. Ruther  
Ernest Senior  
Patrick F. Sheridan  
David G. Shike  
Kevin Sweeney  
David B. Thompson  
Daniel A. Traill  
J. Michael Whitcomb  
David F. White  
Grant N. Wichenko  
Robert J. Zamojcin

**Consultants to the Project Committee**

Alexander Andreyev  
Martin Burns  
Christopher Chapman  
Howard Coleman  
Clifford H. Copass  
Stuart Donaldson  
Peter Fischer  
David Fisher  
Wilson Fowlie  
Rokuro Fujii  
Andrey Golovin  
Don Gottschalk  
John L. Hartman  
Daniel Heine  
Yoshiyuki Honda  
Ted Humpal  
Cuong Huynh

Koichi Ikeda  
Bernhard Isler  
Hiroshi Ito  
René Kälin  
Micheal Kintner-Myers  
Roland Laird  
Simon Lemaire  
Joseph S. Majewski  
Jerald Martocci  
Les Mather  
Kornelia Mergner  
Hans-Joachim Mundt  
Masahara Nakamura  
Jack Neyer  
Duffy O'Craven  
Masahiro Ogawa  
Michael Olson  
René Quirighetti

Dave Richards  
David H. Ritter  
Frank Schubert  
Randy Shaull  
Takeji Toyoda  
Steven Treado  
Ketki Vahalia  
Alan Vinh  
Bruce Westphal  
David White  
Graham Whiting  
Todd Wiese  
Cameron Williams  
Ove Wiuff  
Christoph Zeller  
Chad Ziehm  
Rob Zivney

## CONTENTS

FOREWORD .....	vii
1 PURPOSE .....	1
2 SCOPE .....	1
3 DEFINITIONS .....	1
3.1 Terms Adopted from International Standards.....	1
3.2 Terms Defined for this Standard.....	2
3.3 Abbreviations and Acronyms Used in this Standard.....	5
4 BACnet PROTOCOL ARCHITECTURE .....	8
4.1 The BACnet Collapsed Architecture.....	9
4.2 BACnet Network Topology.....	11
4.3 Security .....	13
5 THE APPLICATION LAYER.....	14
5.1 The Application Layer Model.....	14
5.2 Segmentation of BACnet Messages.....	18
5.3 Transmission of BACnet APDUs .....	19
5.4 Application Protocol State Machines .....	23
5.5 Application Protocol Time Sequence Diagrams .....	37
5.6 Application Layer Service Conventions.....	45
6 THE NETWORK LAYER.....	47
6.1 Network Layer Service Specification.....	47
6.2 Network Layer PDU Structure.....	48
6.3 Messages for Multiple Recipients.....	53
6.4 Network Layer Protocol Messages .....	54
6.5 Network Layer Procedures .....	56
6.6 BACnet Routers.....	58
6.7 Point-To-Point Half-Routers .....	63
7 DATA LINK/PHYSICAL LAYERS: ISO 8802-3 ("Ethernet") LAN .....	68
7.1 The Use of ISO 8802-2 Logical Link Control (LLC).....	68
7.2 Parameters Required by the LLC Primitives .....	68
7.3 Parameters Required by the MAC Primitives .....	68
7.4 Physical Media .....	68
8 DATA LINK/PHYSICAL LAYERS: ARCNET LAN .....	70
8.1 The Use of ISO 8802-2 Logical Link Control (LLC).....	70
8.2 Parameters Required by the LLC Primitives .....	70
8.3 Mapping the LLC Services to the ARCNET MAC Layer.....	70
8.4 Parameters Required by the MAC Primitives .....	70
8.5 Physical Media .....	70
9 DATA LINK/PHYSICAL LAYERS: MASTER-SLAVE/TOKEN PASSING (MS/TP) LAN .....	72
9.1 Service Specification.....	72
9.2 Physical Layer .....	74
9.3 MS/TP Frame Format .....	76
9.4 Overview of the MS/TP Network .....	77
9.5 MS/TP Medium Access Control .....	78
9.6 Cyclic Redundancy Check (CRC) .....	94
9.7 Interfacing MS/TP LANs with Other BACnet LANs .....	95
9.8 Responding BACnet User Processing of Messages from MS/TP .....	95
9.9 Repeaters .....	96
10 DATA LINK/PHYSICAL LAYERS: POINT-TO-POINT (PTP) .....	98
10.1 Overview .....	98
10.2 Service Specification.....	98
10.3 Point-to-Point Frame Format.....	103
10.4 PTP Medium Access Control Protocol.....	105
11 DATA LINK/PHYSICAL LAYERS: EIA/CEA-709.1 ("LonTalk") LAN .....	126
11.1 The Use of ISO 8802-2 Logical Link Control (LLC).....	126
11.2 Parameters Required by the LLC Primitives .....	126

11.3	Mapping the LLC Services to the LonTalk Application Layer.....	126
11.4	Parameters Required by the Application Layer Primitives.....	126
11.5	Physical Media .....	127
12	MODELING CONTROL DEVICES AS A COLLECTION OF OBJECTS.....	128
12.1	Accumulator Object Type .....	132
12.2	Analog Input Object Type .....	140
12.3	Analog Output Object Type.....	145
12.4	Analog Value Object Type.....	150
12.5	Averaging Object Type .....	155
12.6	Binary Input Object Type .....	158
12.7	Binary Output Object Type .....	163
12.8	Binary Value Object Type .....	169
12.9	Calendar Object Type .....	174
12.10	Command Object Type .....	176
12.11	Device Object Type .....	180
12.12	Event Enrollment Object Type .....	188
12.13	File Object Type .....	193
12.14	Group Object Type .....	195
12.15	Life Safety Point Object Type .....	197
12.16	Life Safety Zone Object Type .....	203
12.17	Loop Object Type .....	209
12.18	Multi-state Input Object Type.....	216
12.19	Multi-state Output Object Type .....	220
12.20	Multi-state Value Object Type.....	224
12.21	Notification Class Object Type.....	229
12.22	Program Object Type .....	232
12.23	Pulse Converter Object Type.....	237
12.24	Schedule Object Type .....	244
12.25	Trend Log Object Type .....	249
12.26	Access Door Object Type.....	257
12.27	Event Log Object Type .....	264
12.28	Load Control Object Type.....	270
12.29	Structured View Object Type .....	279
12.30	Trend Log Multiple Object Type .....	281
13	ALARM AND EVENT SERVICES.....	289
13.1	Change of Value Reporting .....	290
13.2	Intrinsic Reporting .....	292
13.3	Algorithmic Change Reporting.....	296
13.4	Alarm and Event Occurrence and Notification .....	304
13.5	AcknowledgeAlarm Service .....	306
13.6	ConfirmedCOVNotification Service.....	308
13.7	UnconfirmedCOVNotification Service .....	310
13.8	ConfirmedEventNotification Service .....	311
13.9	UnconfirmedEventNotification Service .....	314
13.10	GetAlarmSummary Service .....	316
13.11	GetEnrollmentSummary Service .....	318
13.12	GetEventInformation Service .....	321
13.13	LifeSafetyOperation Service .....	323
13.14	SubscribeCOV Service.....	325
13.15	SubscribeCOVProperty Service.....	327
14	FILE ACCESS SERVICES.....	330
14.1	AtomicReadFile Service.....	331
14.2	AtomicWriteFile Service.....	334
15	OBJECT ACCESS SERVICES.....	336
15.1	AddListElement Service.....	336
15.2	RemoveListElement Service .....	338
15.3	CreateObject Service.....	340

15.4	DeleteObject Service.....	342
15.5	ReadProperty Service.....	343
15.6	ReadPropertyConditional Service.....	345
15.7	ReadPropertyMultiple Service.....	350
15.8	ReadRange Service .....	353
15.9	WriteProperty Service .....	357
15.10	WritePropertyMultiple Service.....	359
<b>16</b>	<b>REMOTE DEVICE MANAGEMENT SERVICES .....</b>	<b>362</b>
16.1	DeviceCommunicationControl Service.....	362
16.2	ConfirmedPrivateTransfer Service.....	364
16.3	UnconfirmedPrivateTransfer Service.....	366
16.4	ReinitializeDevice Service .....	367
16.5	ConfirmedTextMessage Service .....	369
16.6	UnconfirmedTextMessage Service .....	371
16.7	TimeSynchronization Service.....	372
16.8	UTCTimeSynchronization Service .....	373
16.9	Who-Has and I-Have Services.....	374
16.10	Who-Is and I-Am Services .....	376
<b>17</b>	<b>VIRTUAL TERMINAL SERVICES .....</b>	<b>378</b>
17.1	Virtual Terminal Model.....	378
17.2	VT-Open Service .....	382
17.3	VT-Close Service.....	384
17.4	VT-Data Service .....	385
17.5	Default-terminal Characteristics .....	387
<b>18</b>	<b>ERROR, REJECT, and ABORT CODES .....</b>	<b>391</b>
18.1	Error Class - DEVICE.....	391
18.2	Error Class - OBJECT.....	391
18.3	Error Class - PROPERTY .....	391
18.4	Error Class - RESOURCES.....	392
18.5	Error Class - SECURITY .....	393
18.6	Error Class - SERVICES.....	393
18.7	Error Class – COMMUNICATION.....	394
18.8	Error Class - VT.....	395
18.9	Reject Reason .....	396
18.10	Abort Reason .....	396
<b>19</b>	<b>BACnet PROCEDURES .....</b>	<b>398</b>
19.1	Backup and Restore .....	398
19.2	Command Prioritization .....	401
19.3	Device Restart Procedure .....	404
<b>20</b>	<b>ENCODING BACnet PROTOCOL DATA UNITS .....</b>	<b>405</b>
20.1	Encoding the Fixed Part of BACnet APDUs .....	405
20.2	Encoding the Variable Part of BACnet APDUs.....	415
<b>21</b>	<b>FORMAL DESCRIPTION OF APPLICATION PROTOCOL DATA UNITS .....</b>	<b>429</b>
<b>22</b>	<b>CONFORMANCE AND INTEROPERABILITY .....</b>	<b>477</b>
22.1	Conformance to BACnet .....	477
22.2	BACnet Interoperability .....	478
<b>23</b>	<b>EXTENDING BACnet TO ACCOMMODATE VENDOR PROPRIETARY INFORMATION .....</b>	<b>480</b>
23.1	Extending Enumeration Values .....	480
23.2	Using the PrivateTransfer Services to Invoke Non-Standardized Services .....	481
23.3	Adding Proprietary Properties to a Standardized Object .....	481
23.4	Adding Proprietary Object Types to BACnet .....	481
23.5	Restrictions on Extending BACnet .....	482
<b>24</b>	<b>NETWORK SECURITY .....</b>	<b>483</b>
24.1	Security Architecture .....	483
24.2	Authentication Mechanisms .....	484
24.3	Data Confidentiality Mechanism .....	486
24.4	RequestKey Service .....	487

24.5	Authenticate Service .....	488
25	REFERENCES .....	491
	ANNEX A - PROTOCOL IMPLEMENTATION CONFORMANCE STATEMENT (NORMATIVE).....	494
	ANNEX B - GUIDE TO SPECIFYING BACnet DEVICES (INFORMATIVE).....	496
	ANNEX C - FORMAL DESCRIPTION OF OBJECT TYPE STRUCTURES (INFORMATIVE) .....	497
	ANNEX D - EXAMPLES OF STANDARD OBJECT TYPES (INFORMATIVE).....	512
D.1	Example of an Accumulator Object .....	512
D.2	Example of an Analog Input Object.....	512
D.3	Example of an Analog Output Object .....	513
D.4	Example of an Analog Value Object.....	513
D.5	Example of an Averaging Object.....	514
D.6	Example of a Binary Input Object .....	514
D.7	Example of a Binary Output Object .....	515
D.8	Example of a Binary Value Object .....	516
D.9	Example of a Calendar Object .....	517
D.10	Example of a Command Object.....	517
D.11	Example of a Device Object .....	518
D.12	Example of an Event Enrollment Object.....	520
D.13	Example of a File Object.....	522
D.14	Example of a Group Object .....	522
D.15	Example of a Life Safety Point Object.....	522
D.16	Example of a Life Safety Zone Object .....	523
D.17	Example of a Loop Object.....	524
D.18	Example of a Multi-state Input Object .....	525
D.19	Example of a Multi-state Output Object.....	526
D.20	Example of a Multi-state Value Object .....	527
D.21	Example of a Notification Class Object .....	527
D.22	Example of a Program Object.....	527
D.23	Example of a Pulse Converter Object .....	529
D.24	Example of a Schedule Object.....	529
D.25	Example of a Trend Log Object.....	530
D.23	Example of a Trend Log Object.....	533
ANNEX E	- EXAMPLES OF BACnet APPLICATION SERVICES (INFORMATIVE) .....	535
E.1	Alarm and Event Services .....	535
E.2	File Access Services.....	539
E.3	Object Access Services .....	541
E.4	Remote Device Management Services.....	548
E.5	Virtual Terminal Services.....	551
E.6	Security Services.....	552
ANNEX F	- EXAMPLES OF APDU ENCODING (INFORMATIVE) .....	554
F.1	Example Encodings for Alarm and Event Services.....	554
F.2	Example Encodings for File Access Services.....	563
F.3	Example Encodings for Object Access Services.....	565
F.4	Example Encodings for Remote Device Management Services .....	579
F.5	Example Encodings for Virtual Terminal Services.....	584
F.6	Example Encodings for Security Services .....	586
ANNEX G	- CALCULATION OF CRC (INFORMATIVE) .....	588
G.1	Calculation of the Header CRC .....	588
G.2	Calculation of the Data CRC .....	594
ANNEX H	- COMBINING BACnet NETWORKS WITH NON-BACnet NETWORKS (NORMATIVE) .....	599
H.1	Mapping Non-BACnet Networks onto BACnet Routers.....	599
H.2	Multiple 'Virtual' BACnet Devices in a Single Physical Device.....	599
H.3	Using BACnet with the DARPA Internet Protocols .....	599
H.4	Using BACnet with the IPX Protocol .....	600
H.5	Using BACnet with EIB/KNX.....	602
ANNEX I	- COMMANDABLE PROPERTIES WITH MINIMUM ON AND OFF TIMES (INFORMATIVE) .....	615
ANNEX J	- BACnet/IP (NORMATIVE) .....	617

J.1	General.....	617
J.2	BACnet Virtual Link Layer .....	617
J.3	BACnet/IP Directed Messages .....	621
J.4	BACnet/IP Broadcast Messages .....	621
J.5	Addition of Foreign B/IP Devices to an Existing B/IP Network .....	623
J.6	Routing Between B/IP and non-BP/IP BACnet Networks .....	624
J.7	Routing Between Two B/IP BACnet Networks.....	625
J.8	Use of IP Multicast within BACnet/IP .....	627
J.9	Sources for Internet Information.....	628
ANNEX K - BACnet INTEROPERABILITY BUILDING BLOCKS (BIBBs) (NORMATIVE).....		629
K.1	Data Sharing BIBBs.....	629
K.1.1	BIBB - Data Sharing - ReadProperty - A (DS-RP-A) .....	629
K.1.2	BIBB-Data Sharing-ReadProperty-B (DS-RP-B).....	629
K.1.3	BIBB - Data Sharing-ReadPropertyMultiple-A (DS-RPM-A).....	629
K.1.4	BIBB - Data Sharing-ReadPropertyMultiple-B (DS-RPM-B) .....	629
K.1.5	BIBB - Data Sharing-ReadPropertyConditional-A (DS-RPC-A).....	629
K.1.6	BIBB - Data Sharing-ReadPropertyConditional-B (DS-RPC-B) .....	630
K.1.7	BIBB - Data Sharing-WriteProperty-A (DS-WP-A) .....	630
K.1.8	BIBB - Data Sharing-WriteProperty-B (DS-WP-B).....	630
K.1.9	BIBB - Data Sharing-WritePropertyMultiple-A (DS-WPM-A).....	630
K.1.10	BIBB - Data Sharing-WritePropertyMultiple-B (DS-WPM-B) .....	630
K.1.11	BIBB - Data Sharing-COV-A (DS-COV-A).....	630
K.1.12	BIBB - Data Sharing-COV-B (DS-COV-B) .....	631
K.1.13	BIBB - Data Sharing-COVP-A (DS-COVP-A) .....	631
K.1.14	BIBB - Data Sharing-COVP-B (DS-COVP-B).....	631
K.1.15	BIBB - Data Sharing-COV-Unsolicited-A (DS-COVU-A) .....	631
K.1.16	BIBB - Data Sharing-COV-Unsolicited-B (DS-COVU-B).....	631
K.2	Alarm and Event Management BIBBs.....	631
K.2.1	BIBB - Alarm and Event-Notification-A (AE-N-A) .....	632
K.2.2	BIBB - Alarm and Event-Notification Internal-B (AE-N-I-B).....	632
K.2.3	BIBB - Alarm and Event-Notification External-B (AE-N-E-B) .....	632
K.2.4	BIBB - Alarm and Event-ACK-A (AE-ACK-A) .....	632
K.2.5	BIBB - Alarm and Event-ACK-B (AE-ACK-B).....	632
K.2.6	BIBB - Alarm and Event-Alarm Summary-A (AE-ASUM-A) .....	632
K.2.7	BIBB - Alarm and Event-Alarm Summary-B (AE-ASUM-B).....	633
K.2.8	BIBB - Alarm and Event-Enrollment Summary-A (AE-ESUM-A) .....	633
K.2.9	BIBB - Alarm and Event-Enrollment Summary-B (AE-ESUM-B).....	633
K.2.10	BIBB - Alarm and Event-Information-A (AE-INFO-A).....	633
K.2.11	BIBB - Alarm and Event-Information-B (AE-INFO-B) .....	633
K.2.12	BIBB - Alarm and Event-LifeSafety-A (AE-LS-A) .....	633
K.2.13	BIBB - Alarm and Event-LifeSafety-B (AE-LS-B) .....	633
K.3	Scheduling BIBBs .....	634
K.3.1	BIBB - Scheduling-A (SCHED-A) .....	634
K.3.2	BIBB - Scheduling-Internal-B (SCHED-I-B) .....	634
K.3.3	BIBB - Scheduling-External-B (SCHED-E-B) .....	634
K.4	Trending BIBBs.....	634
K.4.1	BIBB - Trending-Viewing and Modifying Trends-A (T-VMT-A).....	634
K.4.2	BIBB - Trending-Viewing and Modifying Trends Internal-B (T-VMT-I-B).....	634
K.4.3	BIBB - Trending-Viewing and Modifying Trends External-B (T-VMT-E-B).....	635
K.4.4	BIBB - Trending-Automated Trend Retrieval-A (T-ATR-A).....	635
K.4.5	BIBB - Trending-Automated Trend Retrieval-B (T-ATR-B) .....	635
K.4.1	BIBB - Trending-Viewing and Modifying Trends-A (T-VMT-A).....	635
K.4.2	BIBB - Trending-Viewing and Modifying Trends Internal-B (T-VMT-I-B).....	635
K.4.3	BIBB - Trending-Viewing and Modifying Trends External-B (T-VMT-E-B).....	635
K.4.4	BIBB - Trending-Automated Trend Retrieval-A (T-ATR-A).....	635
K.4.5	BIBB - Trending-Automated Trend Retrieval-B (T-ATR-B) .....	636
K.5	Device and Network Management BIBBs .....	636

K.5.1	BIBB - Device Management-Dynamic Device Binding-A (DM-DDB-A) .....	636
K.5.2	BIBB - Device Management-Dynamic Device Binding-B (DM-DDB-B).....	636
K.5.3	BIBB - Device Management-Dynamic Object Binding-A (DM-DOB-A).....	636
K.5.4	BIBB - Device Management-Dynamic Object Binding-B (DM-DOB-B) .....	637
K.5.5	BIBB - Device Management-DeviceCommunicationControl-A (DM-DCC-A) .....	637
K.5.6	BIBB - Device Management-DeviceCommunicationControl-B (DM-DCC-B).....	637
K.5.9	BIBB - Device Management-Text Message-A (DM-TM-A) .....	637
K.5.10	BIBB - Device Management-Text Message-B (DM-TM-B) .....	637
K.5.11	BIBB - Device Management-TimeSynchronization-A (DM-TS-A).....	637
K.5.12	BIBB - Device Management-TimeSynchronization-B (DM-TS-B) .....	638
K.5.13	BIBB - Device Management-UTCTimeSynchronization-A (DM-UTC-A).....	638
K.5.14	BIBB - Device Management-UTCTimeSynchronization-B (DM-UTC-B) .....	638
K.5.15	BIBB - Device Management-ReinitializeDevice-A (DM-RD-A) .....	638
K.5.16	BIBB - Device Management-ReinitializeDevice-B (DM-RD-B).....	638
K.5.17	BIBB - Device Management-Backup and Restore-A (DM-BR-A) .....	638
K.5.18	BIBB - Device Management-Backup and Restore-B (DM-BR-B).....	639
K.5.19	BIBB - Device Management-Restart-A (DM-R-A).....	639
K.5.20	BIBB - Device Management-Restart-B (DM-R-B) .....	639
K.5.21	BIBB - Device Management-List Manipulation-A (DM-LM-A).....	639
K.5.22	BIBB - Device Management-List Manipulation-B (DM-LM-B) .....	639
K.5.23	BIBB - Device Management-Object Creation and Deletion-A (DM-OCD-A) .....	640
K.5.24	BIBB - Device Management-Object Creation and Deletion-B (DM-OCD-B).....	640
K.5.25	BIBB - Device Management-Virtual Terminal-A (DM-VT-A) .....	640
K.5.26	BIBB - Device Management-Virtual Terminal-B (DM-VT-B).....	640
K.5.27	BIBB - Network Management-Connection Establishment-A (NM-CE-A).....	640
K.5.28	BIBB - Network Management-Connection Establishment-B (NM-CE-B) .....	640
K.5.29	BIBB - Network Management-Router Configuration-A (NM-RC-A).....	641
K.5.30	BIBB - Network Management-Router Configuration-B (NM-RC-B) .....	641
ANNEX L - DESCRIPTIONS AND PROFILES OF STANDARDIZED BACnet DEVICES (NORMATIVE).....		642
L.1	BACnet Operator Workstation (B-OWS).....	642
L.2	BACnet Building Controller (B-BC) .....	642
L.3	BACnet Advanced Application Controller (B-AAC).....	643
L.4	BACnet Application Specific Controller (B-ASC) .....	643
L.5	BACnet Smart Actuator (B-SA) .....	644
L.6	BACnet Smart Sensor (B-SS).....	644
L.7	Profiles of the Standard BACnet Devices.....	645
ANNEX M – GUIDE TO EVENT NOTIFICATION PRIORITY ASSIGNMENTS (INFORMATIVE) .....		646
M.1	Life Safety Message Group (0-31).....	646
M.2	Property Safety Message Group (32-63) .....	647
M.3	Supervisory Message Group (64-95) .....	647
M.4	Trouble Message Group (96-127).....	648
M.5	Miscellaneous Higher Priority Message Group (128-191).....	649
M.5	Miscellaneous Lower Priority Message Group (192-255).....	649
HISTORY OF REVISIONS.....		683

## **FOREWORD**

*BACnet, the ASHRAE building automation and control networking protocol, has been designed specifically to meet the communication needs of building automation and control systems for applications such as heating, ventilating, and air-conditioning control, lighting control, access control, and fire detection systems. The BACnet protocol provides mechanisms by which computerized equipment of arbitrary function may exchange information, regardless of the particular building service it performs. As a result, the BACnet protocol may be used by head-end computers, general-purpose direct digital controllers, and application specific or unitary controllers with equal effect.*

*The motivation for this Standard was the widespread desire of building owners and operators for "interoperability," the ability to integrate equipment from different vendors into a coherent automation and control system - and to do so competitively. To accomplish this, the Standard Project Committee (SPC) solicited and received input from dozens of interested firms and individuals; reviewed all relevant national and international data communications standards, whether de facto or the result of committee activity; and spent countless hours in debate and discussion of the pros and cons of each element of the protocol.*

*What has emerged from the committee deliberations is a network protocol model with these principal characteristics:*

*(a) All network devices (except MS/TP slaves) are peers, but certain peers may have greater privileges and responsibilities than others.*

*(b) Each network device is modeled as a collection of network-accessible, named entities called "objects." Each object is characterized by a set of attributes or "properties." While this Standard prescribes the most widely applicable object types and their properties, implementors are free to create additional object types if desired. Because the object model can be easily extended, it provides a way for BACnet to evolve in a backward compatible manner as the technology and building needs change.*

*(c) Communication is accomplished by reading and writing the properties of particular objects and by the mutually acceptable execution of other protocol "services." While this Standard prescribes a comprehensive set of services, mechanisms are also provided for implementors to create additional services if desired.*

*(d) Because of this Standard's adherence to the ISO concept of a "layered" communication architecture, the same messages may be exchanged using various network access methods and physical media. This means that BACnet networks may be configured to meet a range of speed and throughput requirements with commensurately varying cost. Multiple BACnet networks can be interconnected within the same system forming an internetwork of arbitrarily large size. This flexibility also provides a way for BACnet to embrace new networking technologies as they are developed.*

*BACnet was designed to gracefully improve and evolve as both computer technology and demands of building automation systems change. Upon its original publication in 1995, a Standing Standards Project Committee was formed to deliberate enhancements to the protocol under ASHRAE rules for "continuous maintenance." Much has happened since the BACnet standard was first promulgated. BACnet has been translated into Chinese, Japanese, and Korean, and embraced across the globe. BACnet devices have been designed, built and deployed on all seven continents. Suggestions for enhancements and improvements have been continually received, deliberated, and, ultimately, subjected to the same consensus process that produced the original standard. This publication is the result of those deliberations and brings together all of the corrections, refinements, and improvements that have been adopted.*

*Among the features that have been added to BACnet are: increased capabilities to interconnect systems across wide area networks using internet protocols, new objects and services to support fire detection and other life safety applications, capabilities to backup and restore devices, standard ways to collect trend data, new tools to make specifying BACnet systems easier, a mechanism for making interoperable extensions to the standard visible, and many others. The successful addition of these features demonstrates that the concept of a protocol deliberately crafted to permit extension of its capabilities over time as technology and needs change is viable and sound.*

*All communication protocols are, in the end, a collection of arbitrary solutions to the problems of information exchange and all are subject to change as time and technology advance. BACnet is no exception. Still, it is the hope of those who have contributed their time, energies, and talents to this work that BACnet will help to fulfill, in the area of building automation and control, the promise of the information age for the public good!*

## 1 PURPOSE

The purpose of this standard is to define data communication services and protocols for computer equipment used for monitoring and control of HVAC&R and other building systems and to define, in addition, an abstract, object-oriented representation of information communicated between such equipment, thereby facilitating the application and use of digital control technology in buildings.

## 2 SCOPE

**2.1** This protocol provides a comprehensive set of messages for conveying encoded binary, analog, and alphanumeric data between devices including, but not limited to:

- (a) hardware binary input and output values,
- (b) hardware analog input and output values,
- (c) software binary and analog values,
- (d) text string values,
- (e) schedule information,
- (f) alarm and event information,
- (g) files, and
- (h) control logic.

**2.2** This protocol models each building automation and control computer as a collection of data structures called "objects," the properties of which represent various aspects of the hardware, software, and operation of the device. These objects provide a means of identifying and accessing information without requiring knowledge of the details of the device's internal design or configuration.

## 3 DEFINITIONS

### 3.1 Terms Adopted from International Standards

The following terms used in this standard are defined by international standards or draft standards for open system interconnection (OSI). The definitions are repeated here and a reference to the appropriate standard is provided. Clause 25 contains the titles of all national and international standards referenced in this clause and elsewhere in this standard. Words or phrases in italics refer to terms defined elsewhere in this clause.

**3.1.1 abstract syntax:** the specification of application layer data or *application-protocol-control-information* by using notation rules which are independent of the encoding technique used to represent them (ISO 8822).

**3.1.2 application:** a set of a USER's information processing requirements (ISO 8649).

**3.1.3 application-entity:** the aspects of an *application-process* pertinent to OSI (ISO 7498).

**3.1.4 application-process:** an element within a *real open system* which performs the information processing for a particular *application* (ISO 7498).

**3.1.5 application-protocol-control-information:** information exchanged between *application-entities*, using presentation services, to coordinate their joint operation (ISO 9545).

**3.1.6 application-protocol-data-unit:** a unit of data specified in an application protocol and consisting of *application-protocol-control-information* and possibly application-user-data (ISO 9545).

**3.1.7 application-service-element:** that part of an *application-entity* which provides an OSI environment capability, using underlying services when appropriate (ISO 7498).

**3.1.8 concrete syntax:** those aspects of the rules used in the formal specification of data which embody a specific representation of that data (ISO 7498).

**3.1.9 peer-entities:** *entities* within the same layer (ISO 7498).

**3.1.10 real open system:** a *real system* which complies with the requirements of OSI standards in its communication with other *real systems* (ISO 7498).

**3.1.11 real system:** a set of one or more computers, the associated software, peripherals, terminals, human operators, physical processes, information transfer means, etc., that forms an autonomous whole capable of performing information processing and/or information transfer (ISO 7498).

**3.1.12 (N)-service-access-point:** the point at which (N)-services are provided by an (N)-*entity* to an (N+1)-*entity* (ISO 7498).

**3.1.13 (N)-service-data-unit:** an amount of (N)-interface-data whose identity is preserved from one end of an (N)-connection to the other (ISO 7498).

**3.1.14 service-user:** an *entity* in a single open system that makes use of a service through *service-access-points* (ISO TR 8509).

**3.1.15 service-provider:** an abstract of the totality of those entities which provide a service to peer *service-users* (ISO TR 8509).

**3.1.16 transfer-syntax:** that *concrete syntax* used in the transfer of data between open systems (ISO 7498).

**3.1.17 service-primitive; primitive:** an abstract, implementation-independent representation of an interaction between the *service-user* and the *service-provider* (ISO TR 8509).

**3.1.18 request (primitive):** a representation of an interaction in which a *service-user* invokes some procedure (ISO TR 8509).

**3.1.19 indication (primitive):** a representation of an interaction in which a *service-provider* either

- (a) indicates that it has, on its own initiative, invoked some procedure; or
- (b) indicates that a procedure has been invoked by the *service-user* at the peer *service-access-point* (ISO TR 8509).

**3.1.20 response (primitive):** a representation of an interaction in which a *service-user* indicates that it has completed some procedure previously invoked by an interaction represented by an *indication primitive* (ISO TR 8509).

**3.1.21 confirm (primitive):** a representation of an interaction in which a *service-provider* indicates, at a particular *service-access-point*, completion of some procedure previously invoked, at that *service-access-point*, by an interaction represented by a *request primitive* (ISO TR 8509).

**3.1.22 user element:** the representation of that part of an *application-process* which uses those *application-service-elements* needed to accomplish the communications objectives of that *application-process* (ISO 7498).

## **3.2 Terms Defined for this Standard**

**3.2.1 access control:** a method for regulating or restricting access to *network resources*.

**3.2.2 alarm:** **1.** An annunciation, either audible or visual or both, that alerts an operator to an off-normal condition that may require corrective action. **2.** An abnormal condition detected by a device or controller that implements a rule or logic specifically designed to look for that condition.

**3.2.3 algorithmic change reporting:** the detection and reporting of an alarm or event, based on an algorithm specified in an Event Enrollment object. See *intrinsic reporting* in 3.2.27.

**3.2.4 BACnet device:** any device, real or virtual, that supports digital communication using the BACnet protocol.

**3.2.5 BACnet-user:** that portion of an *application-process* that is represented by the BACnet *user element*.

**3.2.6 bridge:** a device that connects two or more *segments* at the physical and data link layers. This device may also perform message filtering based upon MAC layer addresses.

**3.2.7 broadcast:** a message sent as a single unit, which may apply to more than one device.

**3.2.8 change of state:** an event that occurs when a measured or calculated Boolean or discrete enumerated value changes.

**3.2.9 change of value:** an event that occurs when a measured or calculated analog value changes by a predefined amount.

**3.2.10 client:** a system or device that makes use of another device for some particular purpose via a service *request* instance. A client requests service from a *server*.

**3.2.11 context:** a set of data or information that completely describes a particular communication environment at a particular point in time.

**3.2.12 controller:** a device for regulation or management of a system or component.

**3.2.13 data confidentiality:** the property that information is not made available or disclosed to unauthorized individuals, entities, or processes.

**3.2.14 data integrity:** the property that data has not been altered or destroyed in an unauthorized manner.

**3.2.15 data origin authentication:** the corroboration that the source of data received is as claimed.

**3.2.16 directly connected network:** a network that is accessible from a router without messages being relayed through an intervening router. A PTP connection is to a directly connected network if the PTP connection is currently active and no intervening router is used.

**3.2.17 download:** a particular type of file transfer that refers to the transfer of an executable program or database to a remote device where it may be executed.

**3.2.18 entity:** something that has a separate and distinct existence. An identifiable item that is described by a set or collection of properties.

**3.2.19 error detection:** a procedure used to identify the presence of errors in a communication.

**3.2.20 error recovery:** a procedure invoked in response to a detected error that permits the information exchange to continue.

**3.2.21 gateway:** a device that connects two or more dissimilar *networks*, permitting information exchange between them.

**3.2.22 global:** pertaining to all devices or nodes on a communication *internetwork*.

**3.2.23 global broadcast:** a message addressed to all devices or *nodes* on all *networks* in a BACnet *internet*.

**3.2.24 half router:** a device or *node* that can participate as one partner in a PTP connection. The two half-router partners that form an active PTP connection together make up a single *router*.

**3.2.25 initialization:** the process of establishing a known state, usually from a power up condition. Initialization may require re-establishment of a node's logical or physical address.

**3.2.26 internetwork:** a set of two or more *networks* interconnected by *routers*. In a BACnet *internetwork*, there exists exactly one message path between any two nodes.

**3.2.27 intrinsic reporting:** the detection and reporting of an alarm or event, based on an algorithm defined as part of the *object type* specification. No external reference to an Event Enrollment is involved. See *algorithmic change reporting* in 3.2.3.

**3.2.28 key:** a sequence of symbols that controls the operations of encipherment and decipherment.

**3.2.29 local:** pertaining to devices on the same *network* as the referenced device.

### **3. DEFINITIONS**

**3.2.30 local broadcast:** a message addressed to all devices or *nodes* on the same *network* as the originator.

**3.2.31 medium:** the physical transmission *entity*. Typical media are twisted-pair wire, fiber optic cable, and coaxial cable.

**3.2.32 medium access control:** a process used to maintain order and provide access to the communication *medium*.

**3.2.33 network:** a set of one or more *segments* interconnected by *bridges* that have the same network address.

**3.2.34 network resource:** any physical or logical *entity* that may be accessed via a communication *medium*.

**3.2.35 node:** an addressable device connected to the communication *medium*.

**3.2.36 object:** a specific instance of an *object type*. While an object type is identified by a unique Object\_Type property, an object is identified by its Object\_Identifier property.

**3.2.37 object profile:** an object profile is a means of defining objects beyond those defined in Clause 12. A profile defines the set of properties, behavior, and/or requirements for a proprietary object, or for proprietary extensions to a standard object.

**3.2.38 object type:** a generic classification of data that is defined by a set of *properties*.

**3.2.39 operator authentication:** the corroboration that the operator logging on to a device is as claimed.

**3.2.40 peer entity authentication:** the corroboration that a peer entity in an association is the one claimed.

**3.2.42 physical segment:** a single contiguous *medium* to which BACnet nodes are attached.

**3.2.42 printable character:** a character that represents a printable symbol as opposed to a device control character. These include, but are not limited to, upper- and lowercase letters, punctuation marks, and mathematical symbols. The exact set depends upon the character set being used. In ANSI X3.4 the printable characters are represented by single octets in the range X'20' - X'7E'.

**3.2.43 property:** a particular characteristic of an *object type*.

**3.2.44 proprietary:** within the context of BACnet, any extension of or addition to *object types*, *properties*, PrivateTransfer services, or enumerations specified in this standard.

**3.2.45 receiving BACnet-user:** the *BACnet-user* that receives an *indication* or *confirm* service primitive.

**3.2.46 remote:** pertaining to devices or *nodes* on a different *network* than the referenced device.

**3.2.47 remote broadcast:** a message addressed to all devices or *nodes* on a different *network* than the originator.

**3.2.48 repeater:** a device that connects two or more *physical segments* at the physical layer.

**3.2.49 requesting BACnet-user:** the *BACnet-user* that assumes the role of a *client* in a confirmed service.

**3.2.50 responding BACnet-user:** the *BACnet-user* that assumes the role of a *server* in a confirmed service.

**3.2.51 router:** a device that connects two or more *networks* at the network layer.

**3.2.52 security:** any of a variety of procedures used to ensure that information exchange is guarded to prevent disclosure to unauthorized individuals. Security measures are intended to prevent disclosure of sensitive information even to those who have valid access to the communication *network*. Security is distinct from access control, although some security can be provided by limiting physical access to the communication medium itself.

**3.2.53 segment:** a segment consists of one or more *physical segments* interconnected by repeaters.

**3.2.54 sending BACnet-user:** the *BACnet-user* that issues a *request* or *response* service primitive.

**3.2.55 server:** a system or device that responds to a service *request* instance for some particular purpose. The server provides service to a *client*.

**3.2.56 synchronization:** a facility that allows processes to define and identify specific places in a transmission or exchange that can be used to reset a communication session to a predefined state.

**3.2.57 timestamp:** the date and time recorded for and accompanying the record of an event or operation.

**3.2.58 unit\_time:** the length of time required to transmit one octet with a start bit and a single stop bit. Ten bit-times.

**3.2.59 upload:** the process of transferring an executable program image or a database from a remote device in such a manner as to allow subsequent download.

### 3.3 Abbreviations and Acronyms Used in this Standard

<b>A</b>	application layer (prefix)
<b>AE</b>	application entity
<b>ANSI</b>	American National Standards Institute
<b>APCI</b>	application protocol control information
<b>APDU</b>	application layer protocol data unit
<b>API</b>	application program interface
<b>ARCNET</b>	attached resource computer network
<b>ASE</b>	application service element
<b>ASN.1</b>	Abstract Syntax Notation One (ISO 8824)
<b>B' '</b>	denotes that binary notation is used between the single quotes
<b>BAC</b>	building automation and control
<b>BBMD</b>	BACnet/IP broadcast management device
<b>BDT</b>	broadcast distribution table
<b>B/IP</b>	BACnet/IP
<b>B/IP-M</b>	BACnet/IP multicast
<b>BVLC</b>	BACnet virtual link control
<b>BVLCI</b>	BACnet virtual link control information
<b>BVLL</b>	BACnet virtual link layer
<b>C</b>	conditional
<b>C(=)</b>	conditional (The parameter is semantically equivalent to the parameter in the service primitive to its immediate left in the table.)
<b>CNF</b>	confirm primitive
<b>COV</b>	change of value
<b>CRC</b>	cyclic redundancy check
<b>D' '</b>	denotes that decimal notation is used between the single quotes
<b>DA</b>	local destination MAC layer address
<b>DADR</b>	ultimate destination MAC layer address
<b>DER</b>	data expecting reply
<b>DES</b>	Data Encryption Standard (FIPS 46-1)
<b>DID</b>	ARCNET destination MAC address
<b>DLEN</b>	1-octet length of ultimate destination MAC layer address
<b>DNET</b>	2-octet ultimate destination network number
<b>DSAP</b>	LLC destination service access point (X'82' for BACnet)
<b>EIB</b>	European Installation Bus
<b>EIBA</b>	European Installation Bus Association
<b>EXEC</b>	capable of executing a service request
<b>FDT</b>	foreign device table
<b>ICI</b>	interface control information
<b>IL</b>	ARCNET information length field

### 3. DEFINITIONS


<b>IND</b>	indication primitive
<b>INF</b>	"Infinity", a unique binary pattern representing positive infinity (see ANSI/IEEE 754-1985)
<b>-INF</b>	"Negative infinity", a unique binary pattern representing negative infinity (see ANSI/IEEE 754-1985)
<b>IEEE</b>	Institute of Electrical and Electronics Engineers
<b>INIT</b>	capable of initiating a service request
<b>IP</b>	Internet Protocol - RFC 791
<b>ISO</b>	International Organization for Standardization
<b>KNX</b>	The Konnex System Specification: EIB is the core protocol of the Konnex standard. The Konnex System Specification reflects the current status for EIB.
<b>L</b>	data link (prefix)
<b>LAN</b>	local area network
<b>LLC</b>	logical link control (ISO 8802-2)
<b>LPCI</b>	link protocol control information
<b>LPDU</b>	link protocol data unit
<b>LSAP</b>	link service access point (X'82' for BACnet)
<b>LSDU</b>	link service data unit
<b>M</b>	mandatory
<b>M(=)</b>	mandatory (The parameter is semantically equivalent to the parameter in the service primitive to its immediate left in the table.)
<b>MA</b>	medium access (prefix)
<b>MAC</b>	medium access control
<b>MPCI</b>	MAC protocol control information
<b>MPDU</b>	MAC layer protocol data unit
<b>MSDU</b>	MAC service data unit
<b>MS/TP</b>	master-slave/token-passing
<b>N</b>	network layer (prefix)
<b>NaN</b>	"Not a Number", a unique binary pattern representing an invalid number (see ANSI/IEEE 754-1985)
<b>NP</b>	network priority
<b>NPCI</b>	network protocol control information
<b>NPDU</b>	network layer protocol data unit
<b>NRZ</b>	non-return to zero
<b>NSAP</b>	network service access point
<b>NSDU</b>	network service data unit
<b>O</b>	indicates that support of a property is optional
<b>OSI</b>	open systems interconnection
<b>P</b>	physical layer (prefix)
<b>PAC</b>	ARCNET data packet header octet
<b>PCI</b>	protocol control information
<b>PDU</b>	protocol data unit
<b>PICS</b>	protocol implementation conformance statement
<b>PK</b>	Private Key
<b>PPCI</b>	physical layer protocol control information
<b>PPDU</b>	physical protocol data unit
<b>PPP</b>	Point-To-Point protocol - RFC 1661
<b>PSDU</b>	physical service data unit
<b>PTP</b>	point-to-point
<b>R</b>	indicates that a property shall be supported and readable using BACnet services
<b>REQ</b>	request primitive
<b>RFC</b>	request for comment
<b>RSP</b>	response primitive
<b>S</b>	selection
<b>S(=)</b>	selection (The parameter is semantically equivalent to the parameter in the service primitive to its immediate left in the table.)
<b>SA</b>	local network source MAC layer address
<b>SAP</b>	service access point
<b>SC</b>	ARCNET system code (X'CD' for BACnet)

<b>SDU</b>	service data unit
<b>SID</b>	ARCNET source MAC address
<b>SK</b>	Session Key
<b>SLEN</b>	1-octet length of original source MAC layer address
<b>SLIP</b>	Serial Line Internet Protocol -RFC 1055
<b>SNET</b>	2-octet original source network number
<b>SPC</b>	standard project committee
<b>SSAP</b>	LLC source service access point (X'82' for BACnet)
<b>TSM</b>	transaction state machine
<b>U</b>	user option
<b>U(=)</b>	user option (The parameter is semantically equivalent to the parameter in the service primitive to its immediate left in the table.)
<b>UART</b>	universal asynchronous receiver/transmitter
<b>UDP</b>	User Datagram Protocol - RFC 768
<b>VT</b>	virtual terminal
<b>W</b>	indicates that a property shall be supported, readable, and writable using BACnet services
<b>X'</b>	denotes that hexadecimal notation is used between the single quotes
<b>XID</b>	eXchange IDentification (ISO 8802-2)

#### 4 BACnet PROTOCOL ARCHITECTURE

The Open System Interconnection (OSI) - Basic Reference Model (ISO 7498) is an international standard that defines a model for developing multi-vendor computer communication protocol standards. The OSI model addresses the general problem of computer-to-computer communication and breaks this very complex problem into seven smaller, more manageable sub-problems, each of which concerns itself with a specific communication function. Each of these sub-problems forms a "layer" in the protocol architecture.

The seven layers are arranged in a hierarchical fashion as shown in Figure 4-1. A given layer provides services to the layers above and relies on services provided to it by the layers below. Each layer can be thought of as a black box with carefully defined interfaces on the top and bottom. An application process connects to the OSI application layer and communicates with a second, remote application process. This communication appears to take place between the two processes as if they were connected directly through their application layer interfaces. Minimal knowledge or understanding of the other layers is required. In a similar manner, each layer of the protocol relies on lower layers to provide communication services and establishes a virtual peer-to-peer communication with its companion layer on the other system. The only real connection takes place at the physical layer.

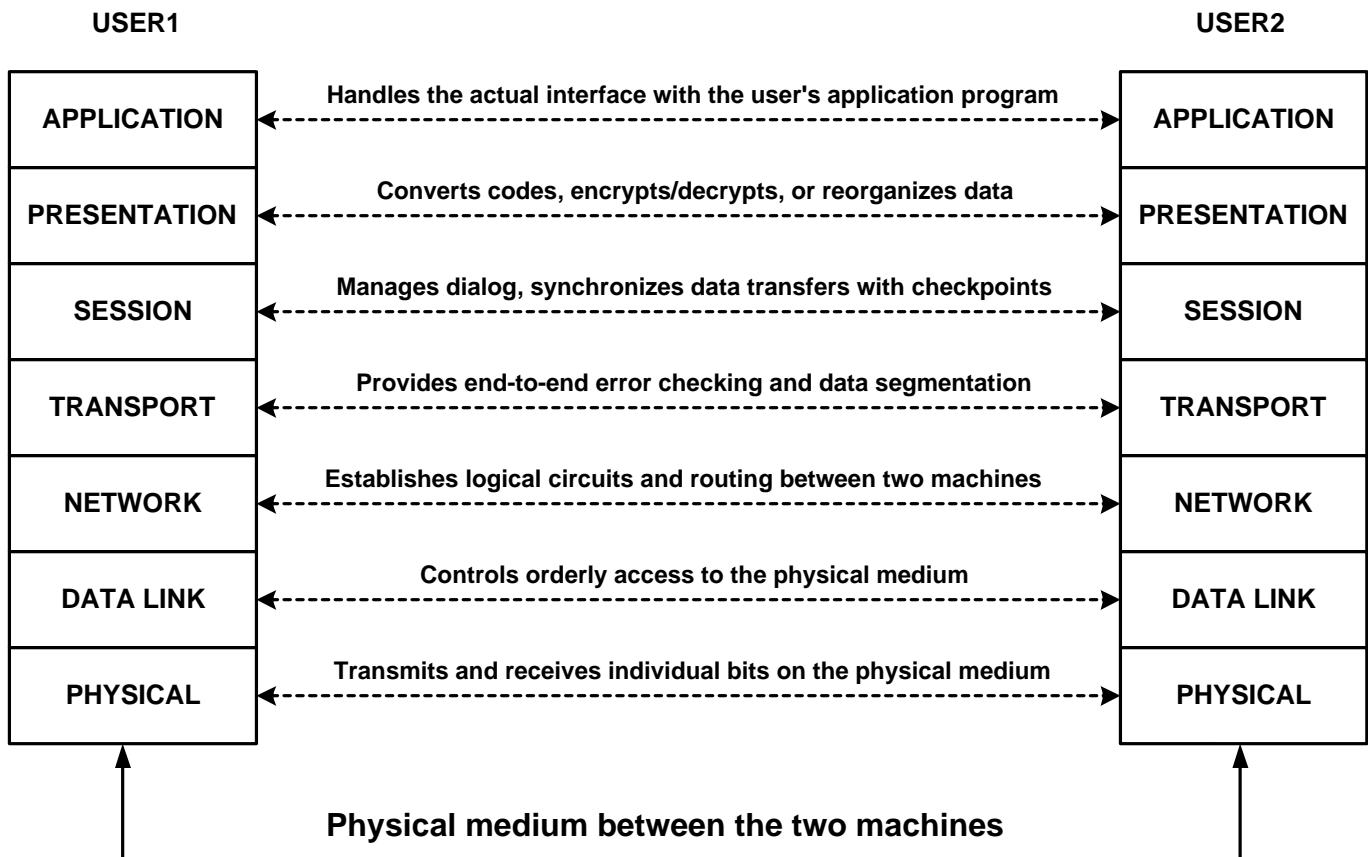

**Figure 4-1.** The ISO Open Systems Interconnection Basic Reference Model.

The OSI model addresses computer-to-computer communication from a very general perspective. It was designed to deal with the problems associated with computers in large, complex networks communicating with other computers in networks anywhere in the world. In this environment, computers can be separated by long distances and the messages might pass through several intermediate points, each of which may have to make routing decisions or perform some type of translation. Complex synchronization and error recovery schemes may also be needed.

The cost of implementing such a protocol today is prohibitively high for most building automation applications and is not generally required. Nevertheless, the OSI model is a good one to use for a building automation protocol if consideration is

given to including only the OSI functionality that is actually needed, thereby collapsing the seven-layer architecture. In a collapsed architecture, only selected layers of the OSI model are included. The other layers are effectively null, thus reducing message length and communication processing overhead. Such a collapsed architecture permits the building automation industry to take advantage of lower cost, mass-produced processor and local area network technologies such as have been developed for the process control and office automation industries. The use of readily available, widespread technologies, such as Ethernet,<sup>1</sup> ARCNET,<sup>2</sup> and LonTalk,<sup>3</sup> will lower the cost, increase performance, and open new doors to system integration.

#### 4.1 The BACnet Collapsed Architecture

BACnet is based on a four-layer collapsed architecture that corresponds to the physical, data link, network, and application layers of the OSI model as shown in Figure 4-2. The application layer and a simple network layer are defined in the BACnet standard. BACnet provides six options that correspond to the OSI data link and physical layers. Option 1 is the logical link control (LLC) protocol defined by ISO 8802-2 Type 1, combined with the ISO 8802-3 medium access control (MAC) and physical layer protocol. ISO 8802-2 Type 1 provides unacknowledged connectionless service only. ISO 8802-3 is the international standard version of the well-known "Ethernet" protocol. Option 2 is the ISO 8802-2 Type 1 protocol combined with ARCNET (ATA 878.1). Option 3 is a Master-Slave/Token-Passing (MS/TP) protocol designed specifically for building automation and control devices as part of the BACnet standard. The MS/TP protocol provides an interface to the network layer that looks like the ISO 8802-2 Type 1 protocol and controls access to an EIA-485 physical layer. Option 4, the Point-To-Point protocol, provides mechanisms for hardwired or dial-up serial, asynchronous communication. Option 5 is the LonTalk protocol. Option 6, BACnet/IP, permits BACnet devices to use standard Internet Protocols (UDP and IP) as a virtual data link layer. Collectively these options provide a master/slave MAC, deterministic token-passing MAC, high-speed contention MAC, dial-up access, star and bus topologies, and a choice of twisted-pair, coax, or fiber optic media. The details of these options are described in Clauses 7 through 11 and Annex J.

A four-layer collapsed architecture was chosen after careful consideration of the particular features and requirements of BAC networks, including a constraint that protocol overhead needed to be as small as possible. The reasoning behind the selection of the physical, data link, network, and application layers for inclusion in the BACnet architecture is outlined in this subclause.

What layers are required for the proper operation of a BAC network? BAC networks are local area networks. This is true even though in some applications it is necessary to exchange information with devices in a building that is very far away. This long-distance communication is done through telephone networks. The routing, relaying, and guaranteed delivery issues are handled by the telephone system and can be considered external to the BAC network. BAC devices are static. They don't move from place to place and the functions that they are asked to perform do not change in the sense that a manufacturing device may make one kind of part today and some very different part tomorrow. These are among the features of BAC networks that can be used to evaluate the appropriateness of the layers in the OSI model.

BACnet Layers						Equivalent OSI Layers
BACnet Application Layer						Application
BACnet Network Layer						Network
ISO 8802-2 (IEEE 802.2) Type 1	MS/TP	PTP	BVLL	LonTalk	UDP/IP	Data Link
ISO 8802-3 (IEEE 802.3)	ARCNET	EIA-485	EIA-232			Physical

Figure 4-2. BACnet collapsed architecture.

<sup>1</sup> Ethernet is a registered trademark of Digital Equipment Corporation, Intel, and Xerox and is the basis for international standard ISO 8802-3.

<sup>2</sup> ARCNET is a registered trademark of Datapoint Corporation.

<sup>3</sup> LonTalk is a registered trademark of Echelon Corporation.

The physical layer provides a means of connecting the devices and transmitting the electronic signals that convey the data. Clearly the physical layer is needed in a BAC protocol.

The data link layer organizes the data into frames or packets, regulates access to the medium, provides addressing, and handles some error recovery and flow control. These are all functions that are required in a BAC protocol. The conclusion is that the data link layer is needed.

Functions provided by the network layer include translation of global addresses to local addresses, routing messages through one or more networks, accommodating differences in network types and in the maximum message size permitted by those networks, sequencing, flow control, error control, and multiplexing. BACnet is designed so that there is only one logical path between devices, thus eliminating the need for optimal path routing algorithms. A network is made up of one or more physical segments connected by repeaters or bridges but with a single local address space. In the case of a single network, most network layer functions are either unnecessary or duplicate data link layer functions. For some BACnet systems, however, the network layer is a necessity. This is the case when two or more networks in a BACnet internet use different MAC layer options. When this occurs, there is a need to recognize the difference between local and global addresses and to route messages to the appropriate networks. BACnet provides this limited network layer capability by defining a network layer header that contains the necessary addressing and control information.

The transport layer is responsible for guaranteeing end-to-end delivery of messages, segmentation, sequence control, flow control, and error recovery. Most of the functions of the transport layer are similar to functions in the data link layer, though different in scope. The scope of transport layer services is end-to-end whereas the scope of data link services is point-to-point across a single network. Since BACnet supports configurations with multiple networks, the protocol must provide the end-to-end services of the transport layer. Guaranteed end-to-end delivery and error recovery are provided in the BACnet application layer via message retry and timeout capabilities. Message segmentation and end-to-end flow control is required for buffer and processor resource management. This is because potentially large amounts of information may be returned for even simple BACnet requests. These functions are provided in the BACnet application layer. Last, sequence control is required in order to properly reassemble segmented messages. This is provided in the BACnet application layer within the segmentation procedure. Since BACnet is based on a connectionless communication model, the scope of the required services is limited enough to justify implementing these at a higher layer, thus saving the communication overhead of a separate transport layer.

The session layer is used to establish and manage long dialogues between communicating partners. Session layer functions include establishing synchronization checkpoints and resetting to previous checkpoints in the event of error conditions to avoid restarting an exchange from the beginning. Most communications in a BAC network are very brief. For example, reading or writing one or a few values, notifying a device about an alarm or event, or changing a setpoint. Occasionally longer exchanges take place, such as uploading or downloading a device. The few times when the services of this layer would be helpful do not justify the additional overhead that would be imposed on the vast majority of transactions, which are very brief and do not need them.

The presentation layer provides a way for communicating partners to negotiate the transfer syntax that will be used to conduct the communication. This transfer syntax is a translation from the abstract user view of data at the application layer to sequences of octets treated as data at the lower layers. If only one transfer syntax is permitted, then the presentation layer function reduces to an encoding scheme for representing the application data. BACnet defines such a fixed encoding scheme and includes it in the application layer, making an explicit presentation layer unnecessary.

The application layer of the protocol provides the communication services required by the applications to perform their functions, in this case monitoring and control of HVAC&R and other building systems. Clearly an application layer is needed in the protocol.

In summary:


- (a) The resource and overhead costs for implementing a full OSI seven-layer architecture make it impractical for current building automation devices.
- (b) Following the OSI model offers advantages in terms of adopting existing computer networking technology. This can result in cost savings and make integration with other computer network systems easier.

- (c) The expectations and environment of building automation systems permit simplification of the OSI model by eliminating the functionality of some of the layers.
- (d) A collapsed architecture made up of the physical, data link, network, and application layers is the optimum solution for today's building automation systems.

## 4.2 BACnet Network Topology

In the interest of application flexibility, BACnet does not prescribe a rigid network topology. Rather, BACnet devices are physically connected to one of four types of local area networks (LANs) or via dedicated or dial-up serial, asynchronous lines. These networks may then be further interconnected by BACnet routers as described in Clause 6.

In terms of LAN topology, each BACnet device is attached to an electrical medium or *physical segment*. A BACnet *segment* consists of one or more physical segments connected at the physical layer by *repeaters*. A BACnet *network* consists of one or more segments interconnected by *bridges*, devices that connect the segments at the physical and data link layers and may perform message filtering based upon MAC addresses; a network forms a single MAC address domain. Multiple networks, possibly employing different LAN technologies, may be interconnected by BACnet *routers* to form a BACnet *internetwork*. In a BACnet internetwork, there exists exactly one message path between any two nodes. These concepts are shown graphically in Figure 4-3.

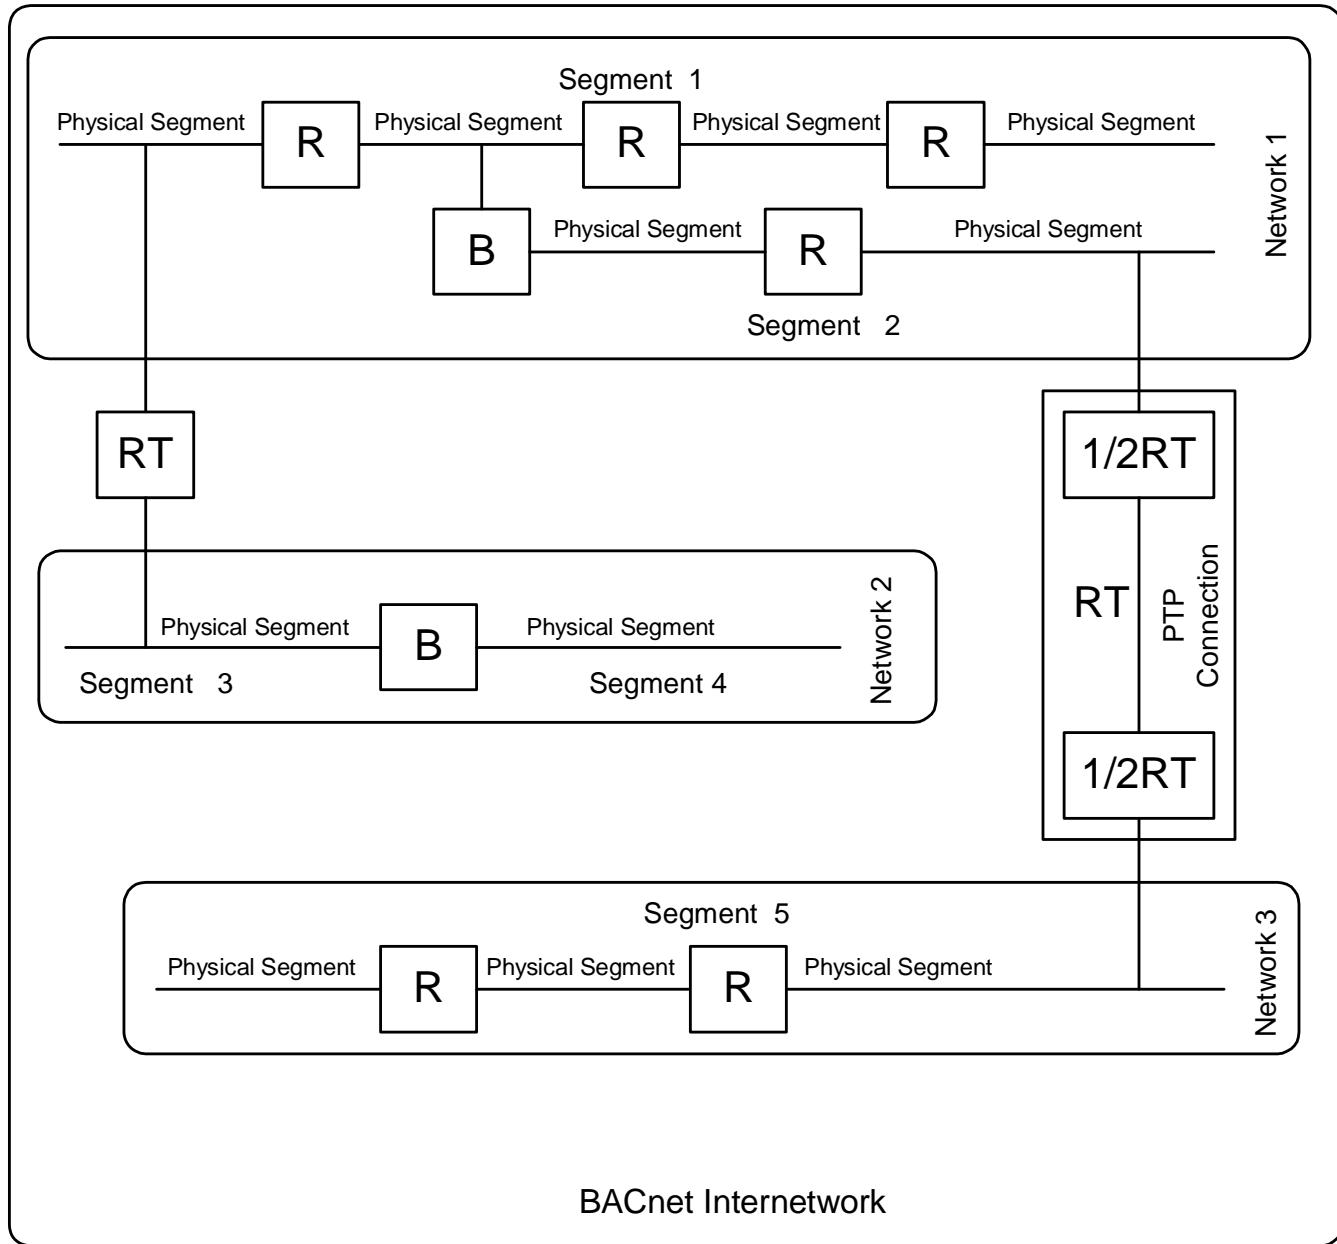

B = Bridge

R = Repeater

RT = Router

1/2RT = Half Router

**Figure 4-3.** A BACnet internetwork illustrating the concepts of Physical Segments, Repeaters, Segments, Bridges, Networks, Half Routers, and Routers.

#### 4.3 Security


The principal security threats to BACnet systems are people who, intentionally or by accident, modify a device's configuration or control parameters. Problems due to an errant computer are outside the realm of security considerations. One important place for security measures is the operator-machine interface. Since the operator-machine interface is not part of the communication protocol, vendors are free to include password protection, audit trails, or other controls to this interface as needed. In addition, write access to any properties that are not explicitly required to be "writable" by this standard may be restricted to modifications made only in virtual terminal mode or be prohibited entirely. This permits vendors to protect key properties with a security mechanism that is as sophisticated as they consider appropriate. BACnet also defines services that can be used to provide peer entity, data origin, and operator authentication. See Clause 24.

## 5 THE APPLICATION LAYER

### 5.1 The Application Layer Model

This clause presents a model of the BACnet application layer. The purpose of the model is to describe and illustrate the interaction between the application layer and application programs, the relationship between the application layer and lower layers in the protocol stack, and the peer-to-peer interactions with a remote application layer. This model is not an implementation specification.

An Application Process is that functionality within a system that performs the information processing required for a particular application. All parts of the Application Process outside the Application Layer, (i.e., those that do not concern the communication function) are outside the scope of BACnet. The part of the Application Process that is within the Application Layer is called the Application Entity. In other words, an Application Entity is that part of the Application Process related to the BACnet communication function. An application program interacts with the Application Entity through the Application Program Interface (API). This interface is not defined in BACnet, but it would probably be a function, procedure, or subroutine call in an actual implementation. These concepts are illustrated in Figure 5-1. The shaded region indicates the portion of the Application Process that is within the BACnet Application Layer.

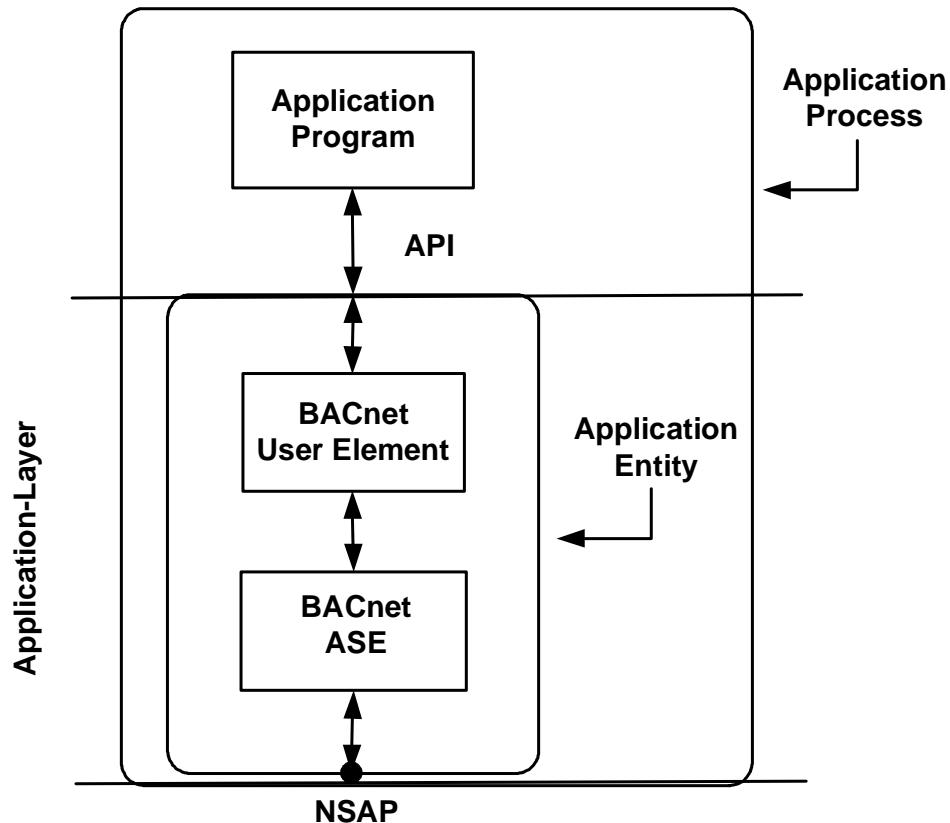

**Figure 5-1.** Model of a BACnet Application Process.

The Application Entity is itself made up of two parts: the BACnet User Element and the BACnet Application Service Element (ASE). The BACnet ASE represents the set of functions or application services specified in Clauses 13 through 17 and Clause 24. The BACnet User Element carries out several functions in addition to supporting the local API. It represents the implementation of the "service procedure" portion of each application service. It is responsible for maintaining information about the context of a transaction, including generating invoke IDs and remembering which invoke ID goes with which application service request (response) to (from) which device. It is also responsible for maintaining the time-out counters that are required for the retrying of a transmission. The BACnet User Element also presides over the mapping of a device's activities into BACnet objects.

Information exchanged between two peer application processes is represented in BACnet as an exchange of abstract service primitives, following the ISO conventions contained in the OSI technical report on service conventions, ISO TR 8509. These primitives are used to convey service-specific parameters that are defined in Clauses 13 through 17 and Clause 24. Four service primitives are defined: request, indication, response, and confirm. The information contained in the primitives is conveyed using a variety of protocol data units (PDUs) defined in this standard. In order to make clear which BACnet PDU is being used, the notation will be as follows:

CONF_SERV.request	CONF_SERV.indication	CONF_SERV.response	CONF_SERV.confirm
UNCONF_SERV.request	UNCONF_SERV.indication		
SEGMENT_ACK.request	SEGMENT_ACK.indication		
REJECT.request	REJECT.indication		
ABORT.request	ABORT.indication		

The designation CONF\_SERV indicates that BACnet confirmed service PDUs are being used. Similarly, the designations UNCONF\_SERV, SEGMENT\_ACK, ERROR, REJECT, and ABORT indicate that unconfirmed service PDUs, segment acknowledge PDUs, error PDUs, reject PDUs, and abort PDUs, respectively, are being used.

An application program that needs to communicate with a remote application process accesses the local BACnet User Element through the API. Some of the API parameters, such as the identity (address) of the device to which the service request is to be sent and protocol control information, is passed directly down to the network or data link layers. The remainder of the parameters make up an application service primitive that is passed from the BACnet User Element to the BACnet ASE. Conceptually, the application service primitive results in the generation of an APDU that becomes the data portion of a network service primitive, which is passed to the network layer through the Network Service Access Point (NSAP). Similarly this request passes down through the lower layers of the protocol stack in the local device. This process is illustrated in Figure 5-2. The message is then transmitted to the remote device, where it is passed up through the protocol stack in the remote device, eventually appearing as an indication primitive passed from the remote BACnet ASE to the remote BACnet User Element. The response from the remote device, if any, returns to the initiator of the service in a similar fashion (see 5.5).

In addition to the service primitives and the service specific parameters, the application entity exchanges interface control information (ICI) parameters with the application program via the API. The content of the ICI is dependent upon the service primitive type. The ICI parameters received by the application entity provide the information that is passed on to the lower layers (as ICI across layer interfaces) to help them construct their PDUs. The ICI parameters that are provided by the application entity to the application programs contain information recovered by the lower layers from their respective PDUs.

The following ICI parameters are exchanged with the various service primitives across an API:

'destination\_address' (DA): the address of the device(s) intended to receive the service primitive. Its format (device name, network address, etc.) is a local matter. This address may also be a multicast, local broadcast or global broadcast type.

'source\_address' (SA): the address of the device from which the service primitive was received. Its format (device name, network address, etc.) is a local matter.

'network\_priority' (NP): a four-level network priority parameter described in 6.2.2.

'data\_expecting\_reply' (DER): a Boolean parameter that indicates whether (TRUE) or not (FALSE) a reply service primitive is expected for the service being issued.

## BACnet Protocol Stack and Data Flow

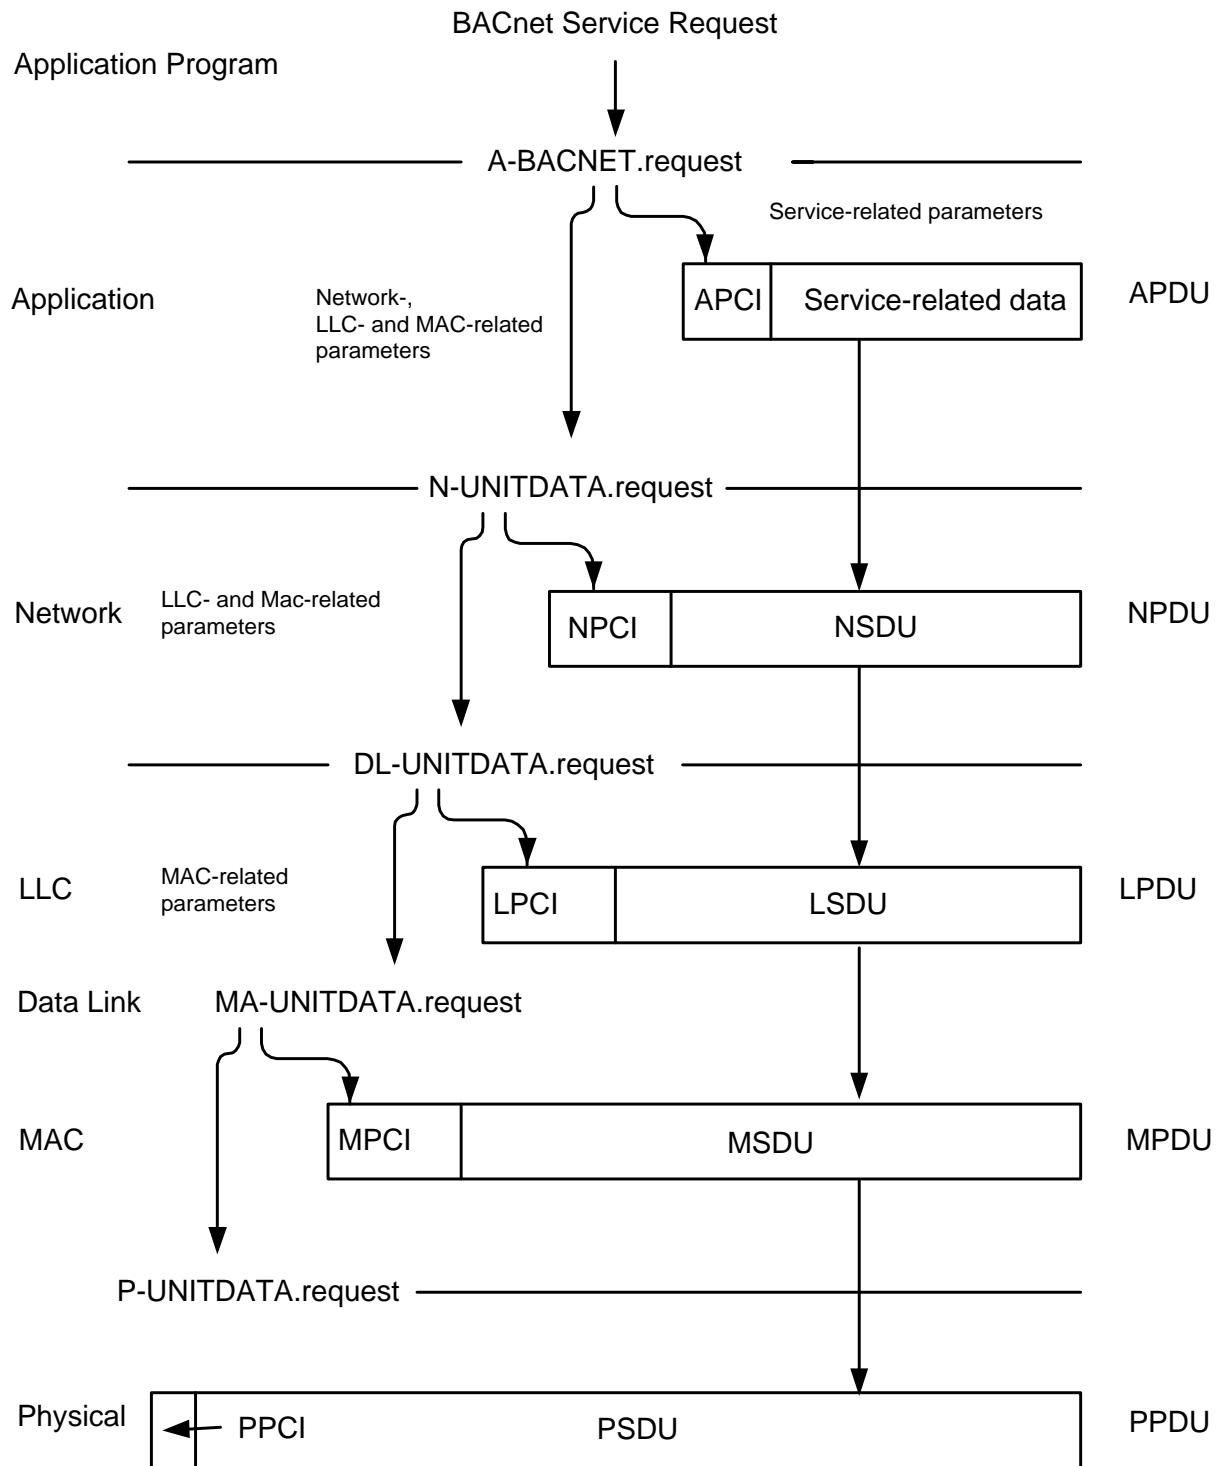


Figure 5-2. BACnet protocol stack and data flow.

Table 5-1 describes the applicability of the ICI parameters to the service primitives.

**Table 5-1.** Applicability of ICI parameters for abstract service primitives


Service Primitive	DA	SA	NP	DER
CONF_SERV.request	Yes	No	Yes	Yes
CONF_SERV.indication	Yes	Yes	Yes	Yes
CONF_SERV.response	Yes	No	Yes	Yes
CONF_SERV.confirm	Yes	Yes	Yes	No
UNCONF_SERV.request	Yes	No	Yes	No
UNCONF_SERV.indication	Yes	Yes	Yes	No
REJECT.request	Yes	No	Yes	No
REJECT.indication	Yes	Yes	Yes	No
SEGMENT_ACK.request	Yes	No	Yes	No
SEGMENT_ACK.indication	Yes	Yes	Yes	No
ABORT.request	Yes	No	Yes	No
ABORT.indication	Yes	Yes	Yes	No

A "BACnetDevice" is any device, real or virtual, that supports digital communication using the BACnet protocol. Each BACnet Device contains exactly one Device object, as defined in 12.11. A BACnet Device is uniquely located by an NSAP, which consists of a network number and a MAC address.

In most cases, a physical device will implement a single BACnet Device. It is possible, however, that a single physical device may implement a number of "virtual" BACnet Devices. This is described in Annex H.

### 5.1.1 Confirmed Application Services

BACnet defines confirmed application services based on a client and server communication model. A client requests service from a server via a particular service request instance. The server provides service to a client and responds to the request. This relationship is illustrated in Figure 5-3. The BACnet-user that assumes the role of a client is called the "requesting BACnet-user" and the BACnet-user that assumes the role of the server is called the "responding BACnet-user."

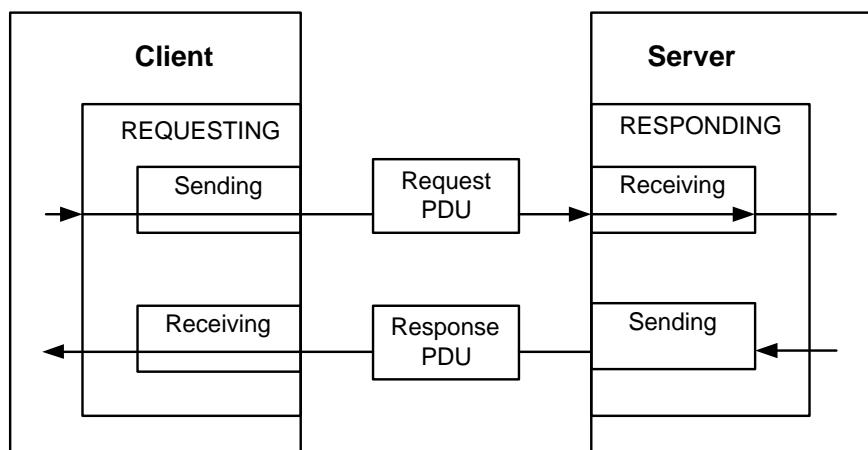

**Figure 5-3.** Relationship of a client and server.

A requesting BACnet-user issues a CONF\_SERV.request primitive, which causes a request PDU to be sent. When a response PDU arrives, the requesting BACnet-user receives a CONF\_SERV.confirm primitive. When a request PDU arrives, the

responding BACnet-user receives a CONF\_SERV.indication primitive. The responding BACnet-user issues a CONF\_SERV.response primitive, which causes a response PDU to be sent. Thus, the requesting BACnet-user and the responding BACnet-user play a role in both sending and receiving PDUs. The term "sending BACnet-user" applies to a BACnet user that initiates the sending of a PDU. The term "receiving BACnet-user" applies to a BACnet-user that receives an indication that a PDU has arrived.

### 5.1.2 Unconfirmed Application Services

The client and server model, and the terms "requesting BACnet-user" and "responding BACnet-user," do not apply to unconfirmed services. The terms "sending BACnet-user" and "receiving BACnet-user" do apply, however, and they are used to define the service procedure for unconfirmed services.

## 5.2 Segmentation of BACnet Messages

To provide for messages that are longer than the maximum length supported by a communications network, or by the sending or receiving device, BACnet provides a method to perform application layer segmentation. In BACnet, only Confirmed-Request and ComplexACK messages may be segmented. Segmentation is an optional feature of BACnet.

### 5.2.1 Message Segmentation Rules

This subclause prescribes rules for dividing a message into segments.

#### 5.2.1.1 Rules for Segmenting APDU Data Streams

Each BACnet message is encoded into a sequence of tags and values according to the relevant ASN.1 definitions in Clause 21 and the encoding rules of Clause 20. The following rules apply to segmenting this data stream:

- (a) If possible, an entire message shall be sent in a single APDU.
- (b) If an entire message cannot be sent in a single APDU, the message shall be segmented into the minimum number of APDUs possible.
- (c) Messages shall be segmented only at octet boundaries.

#### 5.2.1.2 Maximum APDU Length

The maximum length of a BACnet APDU shall be the smallest of

- (a) the maximum APDU size transmittable by a device, which may be restricted by local buffer limitations and is a local matter;
- (b) the maximum APDU size conveyable by the internetwork to the remote device, which is constrained by the maximum NPDU length permitted by the data links used by the local, remote, and any intervening networks, as specified in Clause 6;
- (c) the maximum APDU size accepted by the remote peer device, which must be at least 50 octets.

If the sending device is the requesting BACnet-user, i.e., the APDU to be sent is a BACnet-Confirmed-Request-PDU or a BACnet-Unconfirmed-Request-PDU, then the maximum APDU size accepted by the remote peer is specified by the Max\_APDU\_Length\_Accepted property of the remote peer's Device object. The value of this property may be read using the read property services described in Clause 15 or the value may be obtained from the 'Max APDU Length Accepted' parameter of an I-Am service request received from the remote device. The remote peer may be solicited to transmit an I-Am service request by sending it a Who-Is service request, as described in 16.9

If the sending device is not the requesting BACnet-user, i.e., the APDU to be sent is a BACnet-ComplexACK-PDU, then the maximum APDU size accepted by the remote peer is specified in the 'Max APDU Length Accepted' parameter of the BACnet-Confirmed-Request-PDU for which this is a response.

The value determined by the above constraints will be designated the maximum-transmittable-length. Note that maximum-transmittable-length will in general not be a constant unless minimum values are used for each constraint.

### 5.2.1.3 Maximum Segments Accepted

The maximum number of segments transmitted in a Confirmed-Request or ComplexACK message shall be the smallest of:

- (a) the maximum number of segments transmittable by a device, which may be restricted by local limitations and is a local matter;
- (b) the maximum number of segments accepted by the remote peer device.

If the sending device is the requesting BACnet-user, i.e., the message to be sent is a Confirmed-Request, then the maximum number of segments accepted by the remote peer device is specified in the Max\_Segments\_Accepted property of the remote peer's Device object.

If the sending device is not the requesting BACnet-user, i.e., the message to be sent is a ComplexACK, then the maximum number of segments accepted by the remote peer device is specified in the 'Max Segments Accepted' parameter of the BACnet-Confirmed-Request-PDU for which this is a response.

### 5.2.2 Segmentation Protocol Control Information (PCI)

To provide for the possibility of segmented messages, the headers of the BACnet-Confirmed-Request-PDU and BACnet-ComplexACK-PDU contain two Boolean parameters called 'Segmented Message' and 'More Follows.'

If the length of a fully encoded message of the type conveyed by one of the above APDUs results in an APDU whose length is less than or equal to the maximum-transmittable-length as determined according to 5.2.1, the 'Segmented Message' and 'More Follows' parameters shall both be set to FALSE.

If, however, the encoded length of a message would result in an APDU length greater than the maximum-transmittable-length as determined according to 5.2.1, the 'Segmented Message' parameter shall be set to TRUE for all segments, and the 'More Follows' parameter shall be set to TRUE for all segments except the last.

Two additional parameters are also present, conditionally, in the header of each APDU carrying a segment of a Confirmed-Request message or a ComplexACK message. The first conditional parameter is the 'Sequence Number.' This one-octet unsigned integer is used by the segment transmitter to indicate the position of the current segment in the series of segments composing the complete message. The second conditional parameter is the 'Proposed Window Size.' This one-octet unsigned integer is used by the segment transmitter to indicate the maximum number of message segments that it is prepared to transmit before it must receive a SegmentACK. The use of these parameters in the transmission of segmented messages is described in 5.3 and 5.4.

The 'Sequence Number' of the initial segment shall be zero. The segment receiver may request the transmission of the next segment or group of segments by sending a SegmentACK-PDU containing the 'Sequence Number' parameter of the last successfully received segment. Such a request shall also serve as an acknowledgment of this segment. If the Window Size is greater than one, such a SegmentACK-PDU shall also serve to acknowledge any previously transmitted but unacknowledged segments.

If either party in a segmented transaction wishes to terminate the transaction, that party may issue an Abort-PDU.

## 5.3 Transmission of BACnet APDUs

The formal description of the transmission and reception protocol for BACnet APDUs is contained in the Transaction State Machine description given in 5.4. This subclause is intended only as an overview of the protocol.

### 5.3.1 Confirmed-Request Message Transmission

Upon transmitting a complete unsegmented Confirmed-Request message or upon receiving the SegmentACK acknowledging the final segment of a segmented Confirmed-Request message, a client device shall start a timer that indicates the length of time the message has been outstanding. The timer shall be canceled upon the receipt of an Error, Reject, Abort, SimpleACK, or ComplexACK APDU for the outstanding Confirmed-Request message, and the client application shall be notified. If the timer exceeds the value of the APDU\_Timeout property in the client's Device object, then the complete Confirmed-Request message shall be retransmitted and the timer shall be reset to zero. All retransmitted Confirmed-Request messages shall follow this same procedure until the message has been retransmitted the number of times indicated in the

Number\_Of\_APDU\_Retries property of the client's Device object. If, after the Confirmed-Request message is retransmitted the appropriate number of times, a response is still not received, the message shall be discarded and the client application shall be notified.

### 5.3.2 Segmented Confirmed-Request Message Transmission

Before sending the first segment of a segmented Confirmed-Request-PDU, a client device shall choose a Proposed Window Size to indicate the maximum number of message segments it is prepared to transmit before it must receive a SegmentACK. The means of choosing the Proposed Window Size are a local matter, except that the value shall be in the range 1 to 127, inclusive. The Proposed Window Size shall be carried by the parameter of that name in each segment of the Confirmed-Request-PDU. The value of Proposed Window Size shall be the same in each segment of the Confirmed-Request-PDU.

Upon transmitting the first segment of a Confirmed-Request message, a client device shall start a timer that indicates the length of time this message segment has been outstanding. The timer shall be canceled upon the receipt of a Reject, Abort, or SegmentACK APDU for the outstanding Confirmed-Request message segment. If the timer exceeds the value of the APDU\_Segment\_Timeout property in the client's Device object, then the segment shall be retransmitted and the timer shall be reset to zero. All retransmitted segments shall follow this same procedure until the message segment has been retransmitted the number of times indicated in the Number\_Of\_APDU\_Retries property of the client's Device object. If, after the message segments are retransmitted the appropriate number of times, a response is still not received, the message shall be discarded and the client application shall be notified.

Upon receipt of the first segment of a segmented Confirmed-Request-PDU, the server device shall choose an Actual Window Size to indicate the number of sequential message segments it expects to receive before it transmits a SegmentACK. The means of choosing the Actual Window Size are a local matter, except that the value shall be less than or equal to the 'proposed-window-size' parameter contained in the Confirmed-Request-PDU and shall be in the range 1 to 127, inclusive. The value of Actual Window Size shall be the same in each SegmentACK sent in response to a given Confirmed-Request. Regardless of the value of Actual Window Size, a SegmentACK shall be sent in response to the first segment of a Confirmed-Request.

Upon receipt of a SegmentACK APDU, the client device shall set its Actual Window Size equal to the value associated with the 'actual-window-size' parameter in the SegmentACK APDU. After this point, the client has authorization to send as many segments as the 'actual-window-size' parameter indicates before waiting for a SegmentACK APDU. No more than  $T_{seg}$  may be allowed to elapse between the receipt of a SegmentACK APDU and the transmission of a segment. No more than  $T_{seg}$  may be allowed to elapse between the transmission of successive segments of a group. After transmitting a set of segments that fills the window or completes the message, a client device shall start a timer that indicates the length of time these message segments have been outstanding. The timer shall be canceled upon receipt of a Reject, Abort, or SegmentACK APDU for some or all of the outstanding Confirmed-Request message segments. If the timer exceeds the value of the APDU\_Segment\_Timeout property in the client's Device object, then the segments shall be retransmitted and the timer shall be reset to zero. All retransmitted segments shall follow this same procedure until the message segments have been retransmitted the number of times indicated in its Device object's Number\_Of\_APDU\_Retries property. If, after the Confirmed-Request message segments are retransmitted the appropriate number of times, a response is still not received, the message shall be discarded and the client application shall be notified.

It is possible to receive a Reject, Abort, or SegmentACK APDU during the sending of a sequence of Confirmed-Request segments even though the number of outstanding segments is less than indicated by the Actual Window Size. In this case, receipt of a Reject or Abort APDU shall terminate the Confirmed-Request transaction. Receipt of a SegmentACK APDU shall be considered as an acknowledgment for the segments up to and including the number indicated in the 'sequence-number' parameter of the SegmentACK APDU. Any unacknowledged segments shall be retransmitted following the above procedure.

It is recognized that in some cases where a Reject, Abort, or SegmentACK APDU is received, the client device may have sent, or irretrievably queued for sending, one or more (but less than Actual Window Size) additional Confirmed-Request-PDU segments.

### 5.3.3 Segmented ComplexACK Message Transmission

Before sending the first segment of a segmented ComplexACK-PDU, a server device shall choose a Proposed Window Size to indicate the maximum number of message segments it is prepared to transmit before it must receive a SegmentACK. The

means of choosing the Proposed Window Size are a local matter, except that the value shall be in the range 1 to 127, inclusive. The Proposed Window Size shall be carried by the parameter of that name in each segment of the Confirmed-Request-PDU. The value of Proposed Window Size shall be the same in each segment of the ComplexACK-PDU.

Upon transmitting the first segment of a ComplexACK message, a server device shall start a timer that indicates the length of time this message segment has been outstanding. The timer shall be canceled upon the receipt of an Abort or SegmentACK APDU for the outstanding ComplexACK message segment. If the timer exceeds the value of the APDU\_Segment\_Timeout property in the server's Device object, then the segment shall be retransmitted and the timer shall be reset to zero. All retransmitted segments shall follow this same procedure until the message segment has been retransmitted the number of times indicated in the Number\_Of\_APDU\_Retries property of the server's Device object. If, after the message segments are retransmitted the appropriate number of times, a response is still not received, the message shall be discarded.

Upon receipt of the first segment of a segmented ComplexACK-APDU, the client device shall choose an Actual Window Size to indicate the number of sequential message segments it expects to receive before it transmits a SegmentACK. The means of choosing the Actual Window Size are a local matter, except that the value shall be less than or equal to the 'proposed-window-size' parameter contained in the ComplexACK-PDU and shall be in the range 1 to 127, inclusive. The value of Actual Window Size shall be the same in each SegmentACK sent in response to a given ComplexACK. Regardless of the value of Actual Window Size, a SegmentACK shall be sent in response to the first segment of a ComplexACK.

Upon receipt of a SegmentACK APDU, the server device shall set its Actual Window Size equal to the value associated with the 'actual-window-size' parameter in the SegmentACK APDU. After this point, the server has authorization to send as many segments as the 'actual-window-size' parameter indicates before waiting for a SegmentACK APDU. No more than  $T_{seg}$  may be allowed to elapse between the receipt of a SegmentACK APDU and the transmission of a segment. No more than  $T_{seg}$  may be allowed to elapse between the transmission of successive segments of a group. After transmitting a set of segments that fills the window or completes the message, a server device shall start a timer that indicates the length of time these message segments have been outstanding. The timer shall be canceled upon receipt of an Abort or SegmentACK APDU for some or all of the outstanding ComplexACK message segments. If the timer exceeds the value of the APDU\_Segment\_Timeout property in the server's Device object, then the segments shall be retransmitted and the timer shall be reset to zero. All retransmitted segments shall follow this same procedure until the message segments have been retransmitted the number of times indicated in the Number\_Of\_APDU\_Retries property of the server's Device object. If, after the ComplexACK message segments are retransmitted the appropriate number of times, a response is still not received, the message shall be discarded.

It is possible to receive an Abort or SegmentACK APDU during the sending of a sequence of ComplexACK segments even though the number of outstanding segments is less than indicated by the Actual Window Size. In this case, receipt of an Abort APDU shall terminate the ComplexACK transaction. Receipt of a SegmentACK APDU shall be considered as an acknowledgment for the segments up to and including the number indicated in the 'sequence-number' parameter of the SegmentACK APDU. Any unacknowledged segments shall be retransmitted following the above procedure.

It is recognized that in some cases where an Abort or SegmentACK APDU is received, the server device may have sent, or irretrievably queued for sending, one or more (but less than Actual Window Size) additional ComplexACK segments.

### 5.3.4 SegmentACK APDU Transmission

A device shall transmit a SegmentACK upon any of the following conditions:

- (a) The device receives the initial segment of a segmented message. In this case, the 'negative-ACK' parameter of the SegmentACK shall have a value of FALSE, indicating that this is a positive acknowledgment, and the 'sequence-number' parameter of the SegmentACK shall have a value of zero, indicating that the first segment has been acknowledged and that the segment transmitter may continue sending, commencing with the next sequential segment.
- (b) The device receives a quantity of unacknowledged, sequentially numbered segments for this transaction equal to the Actual Window Size. In this case, the 'negative-ACK' parameter of the SegmentACK shall have a value of FALSE, indicating that this is a positive acknowledgment, and the 'sequence-number' parameter of the SegmentACK shall have a value equal to the 'sequence-number' parameter of the last received segment, indicating that all segments up to and including 'sequence-number' have been acknowledged and that the segment transmitter may continue sending, commencing with the next sequential segment.

- (c) The device receives a segment out of order (possibly indicating that a segment has been missed). In this case, the segment receiver shall discard the out-of-order segment. In this context, "out of order" means a segment whose 'sequence-number' is not equal to the next expected 'sequence-number.' The 'negative-ACK' parameter of the SegmentACK shall have a value of TRUE, indicating that this is a negative acknowledgment. The 'sequence-number' parameter of the SegmentACK shall have a value equal to the 'sequence-number' parameter of the last received correctly ordered segment, indicating that all segments up to and including 'sequence-number' have been acknowledged and that the segment transmitter should resend, commencing with the next sequential segment after that indicated by the 'sequence-number' parameter contained in the SegmentACK.
- (d) The device receives the final segment of a message. In this case, the 'negative-ACK' parameter of the SegmentACK shall have a value of FALSE, indicating that this is a positive acknowledgment, and the 'sequence-number' parameter of the SegmentACK shall have a value equal to the 'sequence-number' parameter of the final message segment, indicating that all segments up to and including the final segment have been acknowledged.

### 5.3.5 Duplicate APDUs and Message Segments

#### 5.3.5.1 Terminating Client TSMs

When using the BACnet error recovery procedures there is a possibility of the reception of duplicate messages or message segments during a transaction. At the client, a transaction begins, and a Transaction State Machine is created, when the first or only segment of a Confirmed-Request APDU is sent. The transaction ends when the client discards the Transaction State Machine due to one of the following circumstances:

- (a) after reception from the server of a SimpleACK, unsegmented ComplexACK, Error, Reject, or Abort APDU containing the transaction's invokeID;
- (b) after transmission to the server of a SegmentACK APDU for the final segment of a segmented ComplexACK APDU received from the server;
- (c) after exhausting the timeout and retry logic described in the previous subclauses;
- (d) after transmission to the server of an Abort APDU containing the transaction's invokeID (i.e., the client aborts the transaction).

#### 5.3.5.2 Terminating Server TSMs

At the server, a transaction begins, and a Transaction State Machine is created when the first or only segment of a Confirmed-Request APDU is received. The transaction ends when the server discards the Transaction State Machine due to one of the following circumstances:

- (a) after transmission to the client of a SimpleACK, unsegmented ComplexACK, Error, Reject, or Abort APDU containing the transaction's invokeID;
- (b) after reception from the client of a SegmentACK APDU for the final segment of a segmented ComplexACK APDU transmitted by the server;
- (c) after reception from the client of an Abort APDU containing the transaction's invokeID;
- (d) after exhausting the timeout and retry logic described in the previous subclauses during the transmission of a segmented ComplexACK APDU.

#### 5.3.5.3 Duplicate Message Procedures

The procedure for handling duplicate messages and message segments is as follows:

- (a) The server receives a duplicate Confirmed-Request message. If the server has the capability of detecting a duplicate Confirmed-Request message, the message shall be discarded. If the server cannot distinguish between duplicate and

non-duplicate messages, then the Confirmed-Request message shall be serviced. In this case, the client shall discard the server's response since the Invoke ID of the response will not bind to an active state transaction state machine.

- (b) The server receives a duplicate Confirmed-Request message segment, that is, one that has already been acknowledged with a SegmentACK. In this case, the server shall discard the duplicate segment but shall return an appropriate SegmentACK APDU. A segment can be identified uniquely by the peer address, Invoke ID, and Sequence Number of the segment.
- (c) The client receives a duplicate ComplexACK segment, that is, one that has already been acknowledged with a SegmentACK. In this case, the client shall discard the duplicate segment but shall return an appropriate SegmentACK APDU. A segment can be identified uniquely by the peer address, Invoke Id, and Sequence Number of the segment.
- (d) A Device receives a duplicate SegmentACK APDU. In this case, the device shall discard the duplicate SegmentACK APDU. Other actions, including the possible re-sending of message segments, shall occur as specified in 5.4.

### **5.3.6 Stale Resource Disposal**

The error recovery procedure described here requires resources from both the server and the client. In the event that the error recovery process fails, the resources dedicated to this process need to be freed. In general, the resources that need to be freed are transaction specific and consist of a Transaction State Machine (TSM), timers, and APDU or APDU segment buffers. The exact time period before the resources should be freed is a local matter dependent upon the system design. As a design suggestion, it is recommended that resources should be considered stale and consequently freed:

- (a) at the client, when a complete response to the Confirmed-Request APDU is received;
- (b) at the client, when a Confirmed-Request APDU has been retransmitted the number of times specified in the Number\_Of\_APDU\_Retries property without success;
- (c) at the client, when a Confirmed-Request APDU segment has been retransmitted the number of times specified in the Number\_Of\_APDU\_Retries property without success;
- (d) at the server, when a complete response to a Confirmed-Request APDU has been transmitted and any associated SegmentACK received;
- (e) at the server, when a ComplexACK APDU segment has been retransmitted the number of times specified in the Number\_Of\_APDU\_Retries property without success;
- (f) at any device, when a SegmentACK APDU has been transmitted and additional segments have not been received before the segment timeout expires.

## **5.4 Application Protocol State Machines**

BACnet APDUs may be divided into two classes: those sent by requesting BACnet-users (clients) and those sent by responding BACnet-users (servers). All BACnet devices shall be able to act as responding BACnet-users and therefore shall be prepared to receive APDUs sent by requesting BACnet-users. Many devices will also be able to act as requesting BACnet-users, and such devices shall be prepared to receive APDUs sent by responding BACnet-users.

### APDUs sent by requesting BACnet-users (clients):

BACnet-Unconfirmed-Request-PDU  
 BACnet-Confirmed-Request-PDU  
 BACnet-SegmentACK-PDU with 'server' = FALSE  
 BACnet-Abort-PDU with 'server' = FALSE

APDUs sent by responding BACnet-users (servers):

BACnet-SimpleACK-PDU  
 BACnet-ComplexACK-PDU  
 BACnet-Error-PDU  
 BACnet-Reject-PDU  
 BACnet-SegmentACK-PDU with 'server' = TRUE  
 BACnet-Abort-PDU with 'server' = TRUE

Both the requesting and the responding BACnet-user shall create and maintain a Transaction State Machine (TSM) for each transaction. The TSM shall be created when the transaction begins and shall be disposed of when the transaction ends. In the state machine descriptions that follow, the creation of a TSM is represented by a transition out of the IDLE state, and the disposal of a TSM is represented by a transition into the IDLE state. A transaction is uniquely identified by the client BACnetAddress, the server BACnetAddress, and the Invoke ID (if any).

When a PDU is received from the network layer, the PDU type, the source and destination BACnetAddresses, and the Invoke ID (if any) of the PDU shall be examined to determine the type (requesting BACnet-user or responding BACnet-user) and the identity of the TSM to which the PDU shall be passed. If no such TSM exists, one shall be created.

When a request is received from the application program, the request type, the source and destination BACnetAddresses, and the Invoke ID (if any) of the request shall be examined to determine the type (requesting BACnet-user or responding BACnet-user) and the identity of the TSM to which the request shall be passed. If no such TSM exists, one shall be created.

In order to simplify the state machine description, only the case of segmentation by the Application Entity is shown. Segmentation by the Application Program is possible as well. In this case, wherever the current TSM receives a segment or group of segments and sends SegmentACK, the modified TSM would instead pass the segments to the Application Program, and SegmentACK would be sent only upon direction from the Application Program via the SEGMENT\_ACK.request primitive. Reception by the modified state machine of a SegmentACK-PDU would cause it to pass a SEGMENT\_ACK.indication primitive to the Application Program.

**5.4.1 Variables And Parameters**

The following variables are defined for each instance of Transaction State Machine:

<b>RetryCount</b>	used to count APDU retries
<b>SegmentRetryCount</b>	used to count segment retries
<b>SentAllSegments</b>	used to control APDU retries and the acceptance of server replies
<b>LastSequenceNumber</b>	stores the sequence number of the last segment received in order
<b>InitialSequenceNumber</b>	stores the sequence number of the first segment of a sequence of segments that fill a window
<b>ActualWindowSize</b>	stores the current window size
<b>ProposedWindowSize</b>	stores the window size proposed by the segment sender
<b>SegmentTimer</b>	used to perform timeout on PDU segments
<b>RequestTimer</b>	used to perform timeout on Confirmed Requests

The following parameters are used in the description:

**T<sub>seg</sub>** This parameter is the length of time a node shall wait for a SegmentACK-PDU after sending the final segment of a sequence. Its value is the value of the APDU\_Segment\_Timeout property of the node's Device object.

<b>T<sub>wait_for_seg</sub></b>	This parameter is the length of time a node shall wait after sending a SegmentACK-PDU for an additional segment of the message. Its value is equal to four times the value of the APDU_Segment_Timeout property of the node's Device object.
<b>T<sub>out</sub></b>	This parameter represents the value of the APDU_Timeout property of the node's Device object.
<b>N<sub>retry</sub></b>	This parameter represents the value of the Number_Of_APDU_Retries property of the node's Device object.

#### 5.4.2 Function InWindow

The function "InWindow" performs a modulo 256 compare of two unsigned eight-bit sequence numbers. All computations and comparisons are modulo 256 operations on unsigned eight-bit quantities.

function InWindow(seqA, seqB)

- (a) if seqA minus seqB, modulo 256, is less than ActualWindowSize, then return TRUE
- (b) else return FALSE.

Example (not normative): if ActualWindowSize is equal to 4, then

InWindow(0, 0) returns TRUE  
 InWindow(1, 0) returns TRUE  
 InWindow(3, 0) returns TRUE  
 InWindow(4, 0) returns FALSE  
 InWindow(4, 5) returns FALSE (since the modulo 256 difference  $4 - 5 = 255$ )  
 InWindow(0, 255) returns TRUE (since the modulo 256 difference  $0 - 255 = 1$ )

#### 5.4.3 Function FillWindow

The function "FillWindow" sends PDU segments either until the window is full or until the last segment of a message has been sent. No more than T<sub>seg</sub> may be allowed to elapse between the receipt of a SegmentACK APDU and the transmission of a segment. No more than T<sub>seg</sub> may be allowed to elapse between the transmission of successive segments of a sequence.

function FillWindow(sequenceNumber)

- (a) Set local variable ix to zero.
- (b) If the next segment to transmit (the segment numbered sequenceNumber plus ix) is the final segment, goto step (g).
- (c) Issue an N-UNITDATA.request with 'data.expecting\_reply' = TRUE to transmit the next BACnet APDU segment, with 'segmented-message' = TRUE, 'more-follows' = TRUE, 'proposed-window-size' equal to ProposedWindowSize, and 'sequence-number' = sequenceNumber plus ix, modulo 256.
- (d) Set ix equal to ix plus one.
- (e) If ix is less than ActualWindowSize, goto step (b).
- (f) Goto step (i).
- (g) Issue an N-UNITDATA.request with 'data.expecting\_reply' = TRUE to transmit the final BACnet APDU segment with 'segmented-message' = TRUE, 'more-follows' = FALSE, 'proposed-window-size' = ProposedWindowSize, and 'sequence-number' = sequenceNumber plus ix, modulo 256.
- (h) Set SentAllSegments to TRUE, indicating that all segments have been transmitted at least once.
- (i) Return to the caller.

#### 5.4.4 State Machine for Requesting BACnet User (client)

##### 5.4.4.1 IDLE

In the IDLE state, the device waits for the local application program to request a service.

###### SendUnconfirmed

If UNCONF\_SERV.request is received from the local application program,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Unconfirmed-Request-PDU, and enter the IDLE state.

###### SendConfirmedUnsegmented

If CONF\_SERV.request is received from the local application program and the length of the APDU is less than or equal to maximum-transmittable-length as determined according to 5.2.1,

then assign an 'invokeID' to this transaction; set SentAllSegments to TRUE; set RetryCount to zero; start RequestTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = TRUE to transmit a BACnet-Confirmed-Request-PDU with 'segmented-message' = FALSE; and enter the AWAIT\_CONFIRMATION state to await a reply.

###### CannotSend

If CONF\_SERV.request is received from the local application program and the length of the APDU is greater than maximum-transmittable-length as determined according to 5.2.1 and the Max\_Segments\_Accepted property of the destination's Device object is known and the total APDU cannot be transmitted without exceeding the maximum number of segments accepted,

then send an ABORT.indication to the local application program and enter the IDLE state.

###### SendConfirmedSegmented

If CONF\_SERV.request is received from the local application program and the length of the APDU is greater than maximum-transmittable-length as determined according to 5.2.1, and the Max\_Segments\_Accepted property of the destination's Device object is not known, or Max\_Segments\_Accepted is known and the total APDU can be transmitted without exceeding the maximum number of segments accepted,

then assign an 'invokeID' to this transaction; set SentAllSegments to FALSE; set RetryCount to zero; set SegmentRetryCount to zero; set InitialSequenceNumber to zero; set ProposedWindowSize to whatever value is desired; set ActualWindowSize to 1; start SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = TRUE to transmit a BACnet-Confirmed-Request-PDU containing the first segment of the message, with 'segmented-message' = TRUE, 'more-follows' = TRUE, 'sequence-number' = zero, and 'proposed-window-size' = ProposedWindowSize; and enter the SEGMENTED\_REQUEST state to await an acknowledgment. (The method used to determine ProposedWindowSize is a local matter, except that the value shall be in the range 1 to 127, inclusive.)

###### UnexpectedSegmentInfoReceived

If an unexpected PDU indicating the existence of an active server TSM (BACnet-ComplexACK-PDU with 'segmented-message' = TRUE or BACnet-SegmentACK-PDU with 'server' = TRUE) is received from the network layer,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = FALSE and enter the IDLE state.

###### UnexpectedPDU\_Received

If an unexpected PDU not indicating the existence of an active server TSM (BACnet-SimpleACK-PDU, BACnet-ComplexACK-PDU with 'segmented-message' = FALSE, BACnet-Error-PDU, BACnet-Reject-PDU, or BACnet-Abort-PDU with 'server' = TRUE) is received from the network layer,

then enter the IDLE state. (There is no reason to issue REJECT.indication, ABORT.indication, etc., as the client has no knowledge of the transaction in question.)

#### 5.4.4.2 SEGMENTED\_REQUEST

In the SEGMENTED\_REQUEST state, the device waits for a BACnet-SegmentACK-PDU for one or more segments of a BACnet-Confirmed-Request-PDU.

##### DuplicateACK\_Received

If a BACnet-SegmentACK-PDU whose 'server' parameter is TRUE is received from the network layer and InWindow ('sequence-number' parameter of the BACnet-SegmentACK-PDU, InitialSequenceNumber) returns a value of FALSE,

then restart SegmentTimer and enter the SEGMENTED\_REQUEST state to await an acknowledgment.

##### NewACK\_Received

If a BACnet-SegmentACK-PDU whose 'server' parameter is TRUE is received from the network layer and InWindow ('sequence-number' parameter of the BACnet-SegmentACK-PDU, InitialSequenceNumber) returns a value of TRUE and there is at least one segment remaining to send,

then set InitialSequenceNumber equal to the 'sequence-number' parameter of the BACnet-SegmentACK-PDU plus one, modulo 256; set ActualWindowSize equal to the 'actual-window-size' parameter of the BACnet-SegmentACK-PDU; set SegmentRetryCount to zero; call FillWindow(InitialSequenceNumber) to transmit one or more BACnet-Confirmed-Request-PDUs containing the next ActualWindowSize segments of the message; restart SegmentTimer; and enter the SEGMENTED\_REQUEST state to await an acknowledgment.

##### FinalACK\_Received

If a BACnet-SegmentACK-PDU whose 'server' parameter is TRUE is received from the network layer and InWindow ('sequence-number' parameter of the BACnet-SegmentACK-PDU, InitialSequenceNumber) returns a value of TRUE and there are no more segments to send,

then stop SegmentTimer; start RequestTimer; and enter the AWAIT\_CONFIRMATION state to await a reply.

##### Timeout

If SegmentTimer becomes greater than  $T_{seg}$  and SegmentRetryCount is less than  $N_{retry}$ ,

then increment SegmentRetryCount; call FillWindow(InitialSequenceNumber) to retransmit one or more BACnet-Confirmed-Request-PDUs containing the next ActualWindowSize segments of the message; restart SegmentTimer; and enter the SEGMENTED\_REQUEST state to await an acknowledgment.

##### FinalTimeout

If SegmentTimer becomes greater than  $T_{seg}$  and SegmentRetryCount is greater than or equal to  $N_{retry}$ ,

then stop SegmentTimer; send CONF\_SERV.confirm(-) to the local application program; and enter the IDLE state.

##### AbortPDU\_Received

If a BACnet-Abort-PDU whose 'server' parameter is TRUE is received from the network layer,

then stop SegmentTimer; send ABORT.indication to the local application program; and enter the IDLE state.

##### SimpleACK\_Received

If a BACnet-SimpleACK-PDU is received from the network layer and SentAllSegments is TRUE,

then stop SegmentTimer; send CONF\_SERV.confirm(+) to the local application program; and enter the IDLE state.

**UnsegmentedComplexACK\_Received**

If a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is FALSE and SentAllSegments is TRUE,

then stop SegmentTimer; send CONF\_SERV.confirm(+) to the local application program; and enter the IDLE state.

**SegmentedComplexACK\_Received**

If a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is TRUE and whose 'sequence-number' parameter is zero and this device supports segmentation and SentAllSegments is TRUE,

then stop SegmentTimer; compute ActualWindowSize based on the 'proposed-window-size' parameter of the received BACnet-ComplexACK-PDU and on local conditions; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = FALSE, 'server' = FALSE, and 'actual-window-size' = ActualWindowSize; start SegmentTimer; set LastSequenceNumber to zero; set InitialSequenceNumber to zero; and enter the SEGMENTED\_CONF state to receive the remaining segments. (The method used to determine ActualWindowSize is a local matter, except that the value shall be less than or equal to the 'proposed-window-size' parameter of the received BACnet-ComplexACK-PDU and shall be in the range 1 to 127, inclusive.)

**ErrorPDU\_Received**

If a BACnet-Error-PDU is received from the network layer and SentAllSegments is TRUE,

then stop SegmentTimer; send CONF\_SERV.confirm(-) to the local application program; and enter the IDLE state.

**RejectPDU\_Received**

If a BACnet-Reject-PDU is received from the network layer and SentAllSegments is TRUE,

then stop SegmentTimer; send REJECT.indication to the local application program; and enter the IDLE state.

**UnexpectedPDU\_Received**

If a BACnet-SimpleACK-PDU, BACnet-ComplexACK-PDU, BACnet-Error-PDU, or BACnet-Reject-PDU is received from the network layer and SentAllSegments is FALSE, or if a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is TRUE and this device does not support segmentation,

or if a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is TRUE and whose 'sequence-number' parameter is not zero,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = FALSE; send CONF\_SERV.confirm(-) to the local application program; and enter the IDLE state.

**SendAbort**

If ABORT.request is received from the local application program,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = FALSE; and enter the IDLE state.

**5.4.4.3 AWAIT\_CONFIRMATION**

In the AWAIT\_CONFIRMATION state, the device waits for a response to a BACnet-Confirmed-Request-PDU.

**SimpleACK\_Received**

If a BACnet-SimpleACK-PDU is received from the network layer,

then stop RequestTimer; send CONF\_SERV.confirm(+) to the local application program; and enter the IDLE state.

**UnsegmentedComplexACK\_Received**

If a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is FALSE,

then stop RequestTimer; send CONF\_SERV.confirm(+) to the local application program; and enter the IDLE state.

**SegmentedComplexACK\_Received**

If a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is TRUE and whose 'sequence-number' parameter is zero and this device supports segmentation,

then stop RequestTimer; compute ActualWindowSize based on the 'proposed-window-size' parameter of the received BACnet-ComplexACK-PDU and on local conditions; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = FALSE, 'server' = FALSE, and 'actual-window-size' = ActualWindowSize; start SegmentTimer; set LastSequenceNumber to zero; set InitialSequenceNumber to zero; and enter the SEGMENTED\_CONF state to receive the remaining segments. (The method used to determine ActualWindowSize is a local matter, except that the value shall be less than or equal to the 'proposed-window-size' parameter of the received BACnet-ComplexACK-PDU and shall be in the range 1 to 127, inclusive.)

**ErrorPDU\_Received**

If a BACnet-Error-PDU is received from the network layer,

then stop RequestTimer; send CONF\_SERV.confirm(-) to the local application program; and enter the IDLE state.

**RejectPDU\_Received**

If a BACnet-Reject-PDU is received from the network layer,

then stop RequestTimer; send REJECT.indication to the local application program; and enter the IDLE state.

**AbortPDU\_Received**

If a BACnet-Abort-PDU whose 'server' parameter is TRUE is received from the network layer,

then stop RequestTimer; send ABORT.indication to the local application program; and enter the IDLE state.

**SegmentACK\_Received**

If a BACnet-SegmentACK-PDU whose 'server' parameter is TRUE is received from the network layer,

then discard the PDU as a duplicate, and re-enter the current state.

**UnexpectedPDU\_Received**

If an unexpected PDU (BACnet-ComplexACK-PDU with 'segmented-message' = TRUE and 'sequence-number' not equal to zero or 'segmented-message' = TRUE and this device does not support segmentation) is received from the network layer,

then stop RequestTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = FALSE; send CONF\_SERV.confirm(-) to the local application program; and enter the IDLE state.

**TimeoutUnsegmented**

If RequestTimer becomes greater than  $T_{out}$  and RetryCount is less than Number\_of\_APDU\_Retries and the length of the Confirmed Request APDU is less than or equal to maximum-transmittable-length as determined according to 5.2.1,

then stop RequestTimer; increment RetryCount; issue an N-UNITDATA.request with 'data\_expecting\_reply' = TRUE to transmit a BACnet-Confirmed-Request-PDU with 'segmented-message' = FALSE; start RequestTimer; and enter the AWAIT\_CONFIRMATION state to await a reply.

#### TimeoutSegmented

If RequestTimer becomes greater than  $T_{out}$  and RetryCount is less than Number\_of\_APDU\_Retries and the length of the Confirmed-Request APDU is greater than maximum-transmittable-length as determined according to 5.2.1,

then stop RequestTimer; increment RetryCount; set SegmentRetryCount to zero; set SentAllSegments to FALSE; start SegmentTimer; set InitialSequenceNumber to zero; set ActualWindowSize to 1; issue an N-UNITDATA.request with 'data\_expecting\_reply' = TRUE to transmit a BACnet-Confirmed-Request-PDU containing the first segment of the message, with 'segmented-message' = TRUE, 'more-follows' = TRUE, and 'sequence-number' = zero; and enter the SEGMENTED\_REQUEST state to await an acknowledgment.

#### FinalTimeout

If RequestTimer becomes greater than  $T_{out}$  and RetryCount is greater than or equal to Number\_of\_APDU\_Retries, then stop RequestTimer; send CONF\_SERV.confirm(-) to the local application program; and enter the IDLE state.

#### SendAbort

If ABORT.request is received from the local application program,

then stop RequestTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = FALSE; and enter the IDLE state.

#### 5.4.4.4 SEGMENTED\_CONF

In the SEGMENTED\_CONF state, the device waits for one or more segments in response to a BACnet-SegmentACK-PDU.

#### NewSegmentReceived\_NoSpace

If a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is TRUE; whose 'sequence-number' parameter is equal to LastSequenceNumber plus 1, modulo 256; and the segment cannot be saved due to local conditions,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = FALSE; send CONF\_SERV.confirm(-) to the local application program; and enter the IDLE state.

#### NewSegmentReceived

If a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is TRUE; whose 'more-follows' parameter is TRUE; whose 'sequence-number' parameter is equal to LastSequenceNumber plus 1, modulo 256; and whose 'sequence-number' parameter is not equal to InitialSequenceNumber plus ActualWindowSize, modulo 256,

then save the BACnet-ComplexACK-PDU segment; increment LastSequenceNumber, modulo 256; restart SegmentTimer; and enter the SEGMENTED\_CONF state to receive additional segments.

#### LastSegmentOfGroupReceived

If a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is TRUE; whose 'sequence-number' parameter is equal to LastSequenceNumber plus 1, modulo 256; whose 'more-follows' parameter is TRUE; and whose 'sequence-number' parameter is equal to InitialSequenceNumber plus ActualWindowSize, modulo 256,

then save the BACnet-ComplexACK-PDU segment; increment LastSequenceNumber, modulo 256; set InitialSequenceNumber to LastSequenceNumber; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = FALSE, server = FALSE, and 'actual-

'window-size' = ActualWindowSize; restart SegmentTimer; and enter the SEGMENTED\_CONF state to receive additional segments.

#### LastSegmentOfComplexACK\_Received

If a ComplexACK PDU is received from the network layer whose 'segmented-message' parameter is TRUE; whose 'sequence-number' parameter is equal to LastSequenceNumber plus 1, modulo 256; and whose 'more-follows' parameter is FALSE (i.e., the final segment),

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = FALSE, 'server' = FALSE, and 'actual-window-size' = ActualWindowSize; send CONF\_SERV.confirm(+) containing all of the received segments to the local application program; and enter the IDLE state.

#### SegmentReceivedOutOfOrder

If a BACnet-ComplexACK-PDU is received from the network layer whose 'segmented-message' parameter is TRUE and whose 'sequence-number' parameter is not equal to LastSequenceNumber plus 1, modulo 256,

then discard the BACnet-ComplexACK-PDU segment; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = TRUE, 'server' = FALSE, 'sequence-number' = LastSequenceNumber, and 'actual-window-size' = ActualWindowSize; restart SegmentTimer; and enter the SEGMENTED\_CONF state to receive the remaining segments.

#### AbortPDU\_Received

If a BACnet-Abort-PDU whose 'server' parameter is TRUE is received from the network layer,

then stop SegmentTimer; send ABORT.indication to the local application program; and enter the IDLE state.

#### UnexpectedPDU\_Received

If an unexpected PDU (BACnet-SimpleACK-PDU, BACnet-ComplexACK-PDU with 'segmented-message' = FALSE, BACnet-Error-PDU, BACnet-Reject-PDU, or BACnet-SegmentACK-PDU with 'server' = TRUE) is received from the network layer,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = FALSE; send CONF\_SERV.confirm(-) to the local application program; and enter the IDLE state.

#### Timeout

If SegmentTimer becomes greater than  $T_{seg}$  times four,

then stop SegmentTimer; send CONF\_SERV.confirm(-) to the local application program; and enter the IDLE state.

#### SendAbort

If ABORT.request is received from the local application program,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = FALSE; and enter the IDLE state.

### 5.4.5 State Machine for Responding BACnet User (server)

#### 5.4.5.1 IDLE

In the IDLE state, the device waits for a PDU from the network layer.

#### UnconfirmedReceived

If a BACnet-Unconfirmed-Request-PDU is received from the network layer,

then send an UNCONF\_SERV.indication to the local application program, and enter the IDLE state.

#### ConfirmedBroadcastReceived

If a BACnet-Confirmed-Request-PDU whose destination address is a multicast or broadcast address is received from the network layer,

then enter the IDLE state.

#### ConfirmedUnsegmentedReceived

If a BACnet-Confirmed-Request-PDU whose 'segmented-message' parameter is FALSE is received from the network layer,

then send a CONF\_SERV.indication to the local application program, start RequestTimer; and enter the AWAIT\_RESPONSE state.

#### ConfirmedSegmentedReceivedNotSupported

If a BACnet-Confirmed-Request-PDU whose 'segmented-message' parameter is TRUE is received from the network layer, and this device does not support the reception of segmented messages,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE and 'abort-reason' = SEGMENTATION\_NOT\_SUPPORTED, and enter the IDLE state.

#### ConfirmedSegmentedReceived

If a BACnet-Confirmed-Request-PDU whose 'segmented-message' parameter is TRUE and whose 'sequence-number' parameter is zero is received from the network layer and the local device supports the reception of segmented messages,

then compute ActualWindowSize based on the 'proposed-window-size' parameter of the received BACnet-Confirmed-Request-PDU and on local conditions; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = FALSE, 'server' = TRUE, and 'actual-window-size' = ActualWindowSize; start SegmentTimer; set LastSequenceNumber to zero; set InitialSequenceNumber to zero; and enter the SEGMENTED\_REQUEST state to receive the remaining segments. (The method used to determine ActualWindowSize is a local matter, except that the value shall be less than or equal to the 'proposed-window-size' parameter of the received BACnet-Confirmed-Request-PDU and shall be in the range 1 to 127, inclusive.)

#### AbortPDU\_Received

If a BACnet-Abort-PDU whose 'server' parameter is FALSE is received from the network layer,

then enter the IDLE state.

#### UnexpectedPDU\_Received

If an unexpected PDU (BACnet-Confirmed-Request-PDU with 'segmented-message' = TRUE and 'sequence-number' not equal to zero or BACnet-SegmentACK-PDU with 'server' = FALSE) is received from the network layer,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE; and enter the IDLE state.

### 5.4.5.2 SEGMENTED\_REQUEST

In the SEGMENTED\_REQUEST state, the device waits for segments of a BACnet-Confirmed-Request-PDU.

#### NewSegmentReceived

If a BACnet-Confirmed-Request-PDU is received from the network layer whose 'segmented-message' parameter is TRUE; whose 'more-follows' parameter is TRUE; whose 'sequence-number' parameter is equal to

LastSequenceNumber plus 1, modulo 256; and whose 'sequence-number' parameter is not equal to InitialSequenceNumber plus ActualWindowSize, modulo 256,

then save the BACnet-Confirmed-Request-PDU segment; increment LastSequenceNumber, modulo 256; restart SegmentTimer; and enter the SEGMENTED\_REQUEST state to receive the remaining segments.

#### LastSegmentOfGroupReceived

If a BACnet-Confirmed-Request-PDU is received from the network layer whose 'segmented-message' parameter is TRUE; whose 'sequence-number' parameter is equal to LastSequenceNumber plus 1, modulo 256; whose 'more-folows' parameter is TRUE; and whose 'sequence-number' parameter is equal to InitialSequenceNumber plus ActualWindowSize, modulo 256,

then save the BACnet-Confirmed-Request-PDU segment; increment LastSequenceNumber, modulo 256; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = FALSE, 'server' = TRUE, 'sequence-number' = LastSequenceNumber, and 'actual-window-size' = ActualWindowSize; restart SegmentTimer; set InitialSequenceNumber = LastSequenceNumber; and enter the SEGMENTED\_REQUEST state to receive the remaining segments.

#### LastSegmentOfMessageReceived

If a BACnet-Confirmed-Request-PDU is received from the network layer whose 'segmented-message' parameter is TRUE; whose 'sequence-number' parameter is equal to LastSequenceNumber plus 1, modulo 256; and whose 'more-folows' parameter is FALSE (i.e., the final segment),

then save the BACnet-Confirmed-Request-PDU segment; increment LastSequenceNumber, modulo 256; stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = FALSE, 'server' = TRUE, 'sequence-number' = LastSequenceNumber, and 'actual-window-size' = ActualWindowSize; set InitialSequenceNumber = LastSequenceNumber; send CONF\_SERV.indication(+) containing all of the received segments to the local application program; start RequestTimer; and enter the AWAIT\_RESPONSE state.

#### SegmentReceivedOutOfOrder

If a BACnet-Confirmed-Request-PDU is received from the network layer whose 'segmented-message' parameter is TRUE and whose 'sequence-number' parameter is not equal to LastSequenceNumber plus 1, modulo 256,

then discard the PDU; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = TRUE, 'server' = TRUE, 'sequence-number' = LastSequenceNumber, and 'actual-window-size' = ActualWindowSize; restart SegmentTimer; set InitialSequenceNumber = LastSequenceNumber; and enter the SEGMENTED\_REQUEST state to receive the remaining segments.

#### AbortPDU\_Received

If a BACnet-Abort-PDU whose server parameter is FALSE is received from the network layer,

then stop SegmentTimer and enter the IDLE state.

#### UnexpectedPDU\_Received

If an unexpected PDU (BACnet-Confirmed-Request-PDU with 'segmented-message' = FALSE or BACnet-SegmentACK-PDU with 'server' = FALSE) is received from the network layer,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE; and enter the IDLE state.

#### Timeout

If SegmentTimer becomes greater than  $T_{seg}$  times four,

then stop SegmentTimer and enter the IDLE state.

**SendAbort**

If ABORT.request is received from the local application program,

then stop SegmentTimer, issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE, and enter the IDLE state.

**5.4.5.3 AWAIT\_RESPONSE**

In the AWAIT\_RESPONSE state, the device waits for the local application program to respond to a BACnet-Confirmed-Request-PDU. See 9.8 for specific considerations in MS/TP networks.

**SendSimpleACK**

If a CONF\_SERV.response(+) is received from the local application program, which is to be conveyed via a BACnet-SimpleACK-PDU,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SimpleACK-PDU and enter the IDLE state.

**SendUnsegmentedComplexACK**

If a CONF\_SERV.response(+) is received from the local application program, which is to be conveyed via a BACnet-ComplexACK-PDU, and the length of the APDU is less than or equal to maximum-transmittable-length as determined according to 5.2.1,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-ComplexACK-PDU with 'segmented-message' = FALSE and enter the IDLE state.

**CannotSendSegmentedComplexACK**

If a CONF\_SERV.response(+) is received from the local application program, which is to be conveyed via a BACnet-ComplexACK-PDU, and the length of the APDU is greater than maximum-transmittable-length as determined according to 5.2.1, and either

- (a) this device does not support the transmission of segmented messages or
- (b) the client will not accept a segmented response (the 'segmented-response-accepted' parameter in BACnet-ConfirmedRequest-PDU is FALSE), or
- (c) the client's max-segments-accepted parameter in the BACnet-ConfirmedRequest-PDU is fewer than required to transmit the total APDU or,
- (d) the number of segments transmittable by this device is fewer than required to transmit the total APDU,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE and 'abort-reason' = SEGMENTATION\_NOT\_SUPPORTED for case (a) and (b), or BUFFER\_OVERFLOW for case (c) and (d), and enter the IDLE state.

**SendSegmentedComplexACK**

If a CONF\_SERV.response(+) is received from the local application program that is to be conveyed via a BACnet-ComplexACK-PDU, and the length of the APDU is greater than maximum-transmittable-length as determined according to 5.2.1, and the device supports the transmission of segmented messages, and the client will accept a segmented response ('segmented-response-accepted' parameter in BACnet-ConfirmedRequest-PDU is TRUE),

then set SegmentRetryCount to zero; set InitialSequenceNumber to zero; set ProposedWindowSize to whatever value is desired; set ActualWindowSize to 1; start SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = TRUE to transmit a BACnet-ComplexACK-PDU containing the first segment of the message, with 'segmented-message' = TRUE, 'more-follows' = TRUE, 'sequence-number' = zero, and 'proposed-window-size' = ProposedWindowSize; and enter the SEGMENTED\_RESPONSE state to await an acknowledgment.

**SendErrorPDU**

If a CONF\_SERV.response(-) is received from the local application program,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Error-PDU and enter the IDLE state.

**SendAbort**

If ABORT.request is received from the local application program,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE; and enter the IDLE state.

**SendReject**

If REJECT.request is received from the local application program,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Reject-PDU; and enter the IDLE state.

**AbortPDU\_Received**

If a BACnet-Abort-PDU whose 'server' parameter is FALSE is received from the network layer,

then send ABORT.indication to the local application program; and enter the IDLE state.

**DuplicateRequestReceived**

If a BACnet-Confirmed-Request-PDU whose 'segmented-message' parameter is FALSE is received from the network layer,

then discard the PDU as a duplicate request, and re-enter the current state.

**DuplicateSegmentReceived**

If a BACnet-Confirmed-Request-PDU whose 'segmented-message' parameter is TRUE is received from the network layer,

then discard the PDU as a duplicate segment; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-SegmentACK-PDU with 'negative-ACK' = FALSE, 'server' = TRUE, 'sequence-number' = LastSequenceNumber, and 'actual-window-size' = ActualWindowSize; and re-enter the current state.

**UnexpectedPDU\_Received**

If an unexpected PDU (BACnet-SegmentACK-PDU whose 'server' parameter is FALSE) is received from the network layer,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE; send ABORT.indication to the local application program; and enter the IDLE state.

**Timeout**

If RequestTimer becomes greater than  $T_{out}$ ,

then issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE; send ABORT.indication to the local application program; and enter the IDLE state.

**5.4.5.4 SEGMENTED\_RESPONSE**

In the SEGMENTED\_RESPONSE state, the device waits for a BACnet-SegmentACK-PDU for a segment or segments of a BACnet-ComplexACK-PDU.

**DuplicateACK\_Received**

If a BACnet-SegmentACK-PDU whose 'server' parameter is FALSE is received from the network layer and InWindow('sequence-number' parameter of the BACnet-SegmentACK-PDU, InitialSequenceNumber) returns a value of FALSE,

then restart SegmentTimer and enter the SEGMENTED\_RESPONSE state to await an acknowledgment or timeout.

**NewACK\_Received**

If a BACnet-SegmentACK-PDU whose 'server' parameter is FALSE is received from the network layer and InWindow('sequence-number' parameter of the BACnet-SegmentACK-PDU, InitialSequenceNumber) returns a value of TRUE and there is at least one segment remaining to send,

then set InitialSequenceNumber equal to the 'sequence-number' parameter of the BACnet-SegmentACK-PDU plus one, modulo 256; set ActualWindowSize equal to the 'actual-window-size' parameter of the BACnet-SegmentACK-PDU; set SegmentRetryCount to zero; call FillWindow(InitialSequenceNumber) to issue an N-UNITDATA.request with 'data.expecting\_reply' = TRUE to transmit one or more BACnet-ComplexACK-PDUs containing the next ActualWindowSize segments of the message; restart SegmentTimer; and enter the SEGMENTED\_RESPONSE state to await an acknowledgment.

**FinalACK\_Received**

If a BACnet-SegmentACK-PDU whose 'server' parameter is FALSE is received from the network layer and InWindow('sequence-number' parameter of the BACnet-SegmentACK-PDU, InitialSequenceNumber) returns a value of TRUE and there are no more segments to send,

then stop SegmentTimer and enter the IDLE state.

**Timeout**

If SegmentTimer becomes greater than  $T_{seg}$  and SegmentRetryCount is less than Number\_OF\_APDU\_Retries,

then increment SegmentRetryCount; call FillWindow(InitialSequenceNumber) to reissue an N-UNITDATA.request with 'data.expecting\_reply' = TRUE to transmit one or more BACnet-ComplexACK-PDUs containing the next ActualWindowSize segments of the message; restart SegmentTimer; and enter the SEGMENTED\_RESPONSE state to await an acknowledgment.

**FinalTimeout**

If SegmentTimer becomes greater than  $T_{seg}$  and SegmentRetryCount is greater than or equal to Number\_OF\_APDU\_Retries,

then stop the SegmentTimer, and enter the IDLE state.

**AbortPDU\_Received**

If a BACnet-Abort-PDU whose 'server' parameter is FALSE is received from the network layer,

then stop SegmentTimer; send ABORT.indication to the local application program; and enter the IDLE state.

**UnexpectedPDU\_Received**

If an unexpected PDU (BACnet-Confirmed-Request-PDU) is received from the network layer,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data.expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE; and enter the IDLE state.

**SendAbort**


If ABORT.request is received from the local application program,

then stop SegmentTimer; issue an N-UNITDATA.request with 'data\_expecting\_reply' = FALSE to transmit a BACnet-Abort-PDU with 'server' = TRUE; and enter the IDLE state.

### 5.5 Application Protocol Time Sequence Diagrams


The flow sequence of service primitives can be represented by time-sequence diagrams. Each diagram is partitioned into three or four fields. The field labeled "Provider" represents the service-provider and the two fields labeled "User" represent the two service-users. The fourth field, if present, represents an application program. For the application layer, the vertical lines between user and provider represent the interface between the BACnet User Element and the BACnet ASE. For lower layers these vertical lines represent the service-access-points between the service-users and the service-provider. Moving from top to bottom in the diagram represents the passage of time. Arrows, placed in the areas representing the service-user, indicate the main flow of information during the execution of an interaction described by a service-primitive (i.e., to or from the service-user). Figures 5-4 through 5-13 illustrate the various sequences of application service primitives defined in BACnet.

## Normal Unconfirmed Service

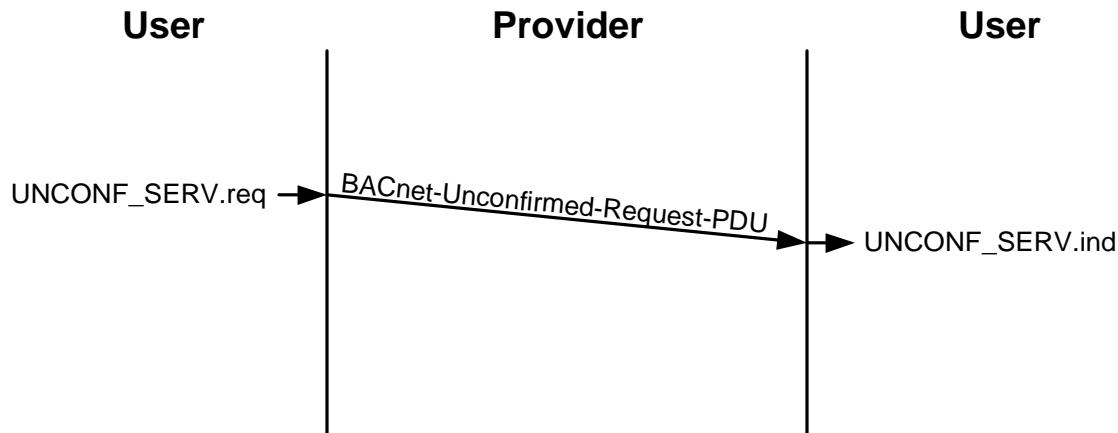


**Figure 5-4.** Time sequence diagram for a normal unconfirmed service.

## Abnormal Unconfirmed Service

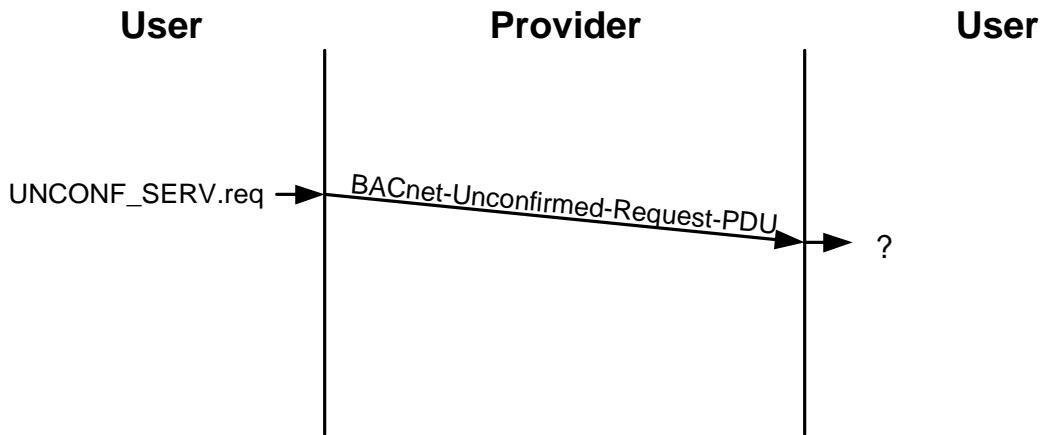


**Figure 5-5.** Time sequence diagram for an abnormal unconfirmed service. Unconfirmed service requests that are in some way flawed are ignored by the receiving user as indicated by the symbol "?".

## Normal Confirmed Service (No Segmentation)

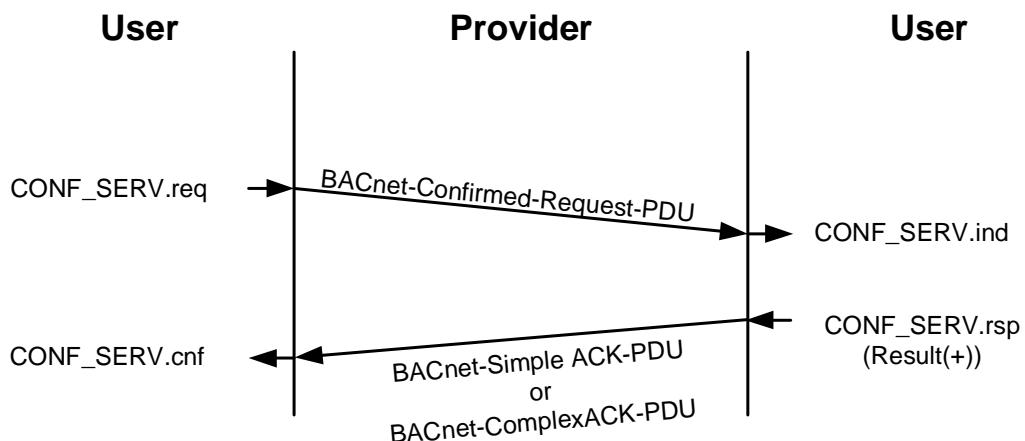

**Figure 5-6.** Time sequence diagram for normal confirmed services.


# Normal Confirmed Service (Segmented Request)

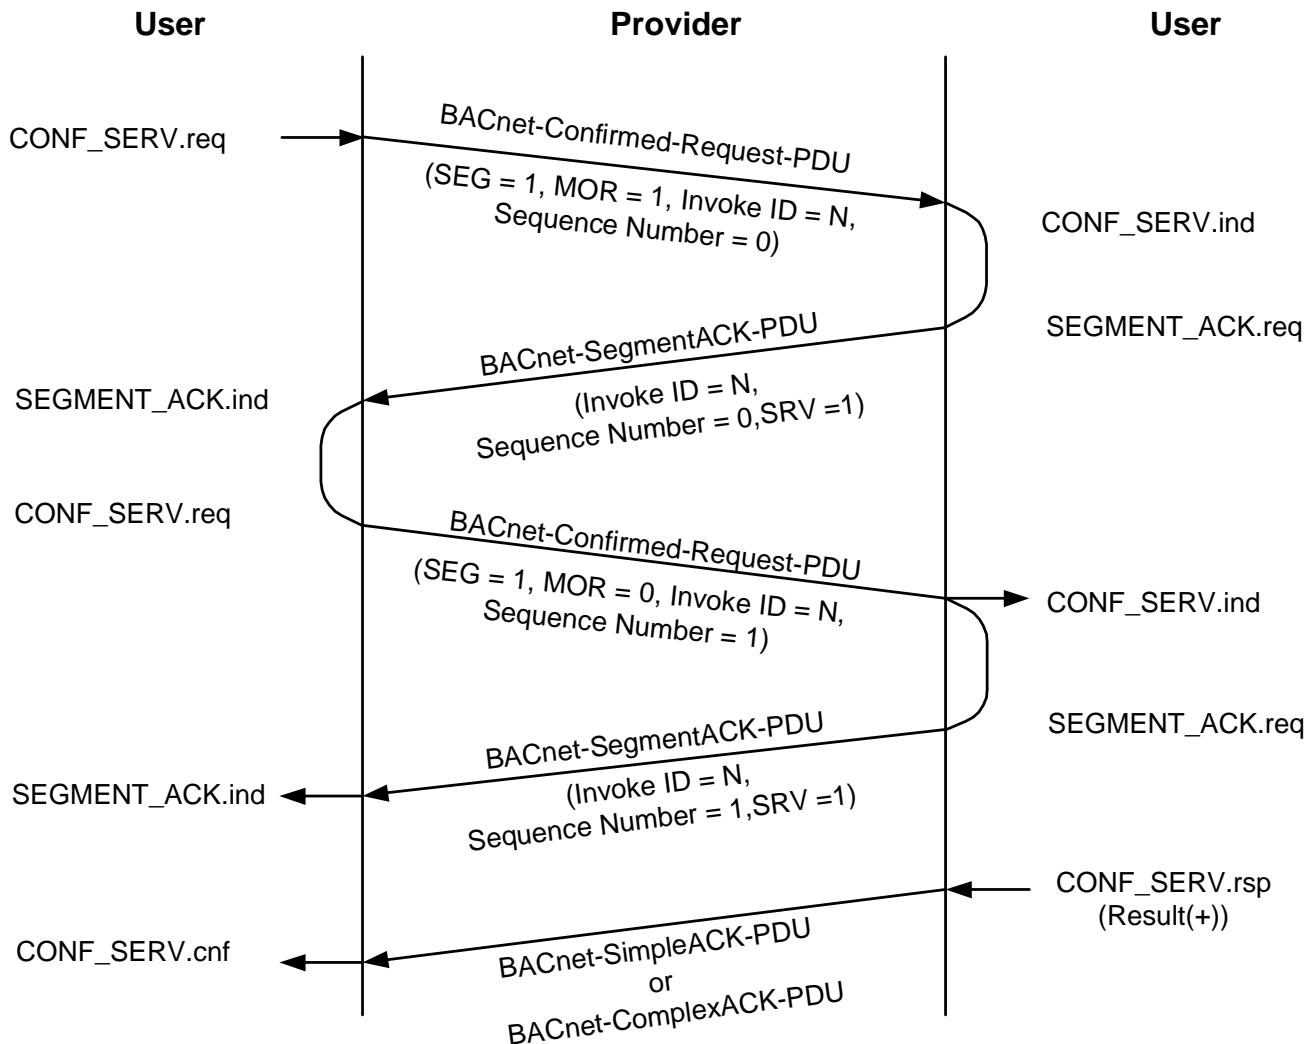

**Figure 5-7.** Time sequence diagram for a normal confirmed service with a segmented request.


Figure 5-7 illustrates two separate, interleaved exchanges of service primitives. One exchange is the usual confirmed service request, indication, response, and confirm sequence. Because the request is segmented it takes several CONF\_SERV.request primitives to convey the entire request. The segment acknowledge service primitives, which are an independent exchange, are used to signal the client that the server is ready for the next segment.

# Normal Confirmed Service (Segmented Response)

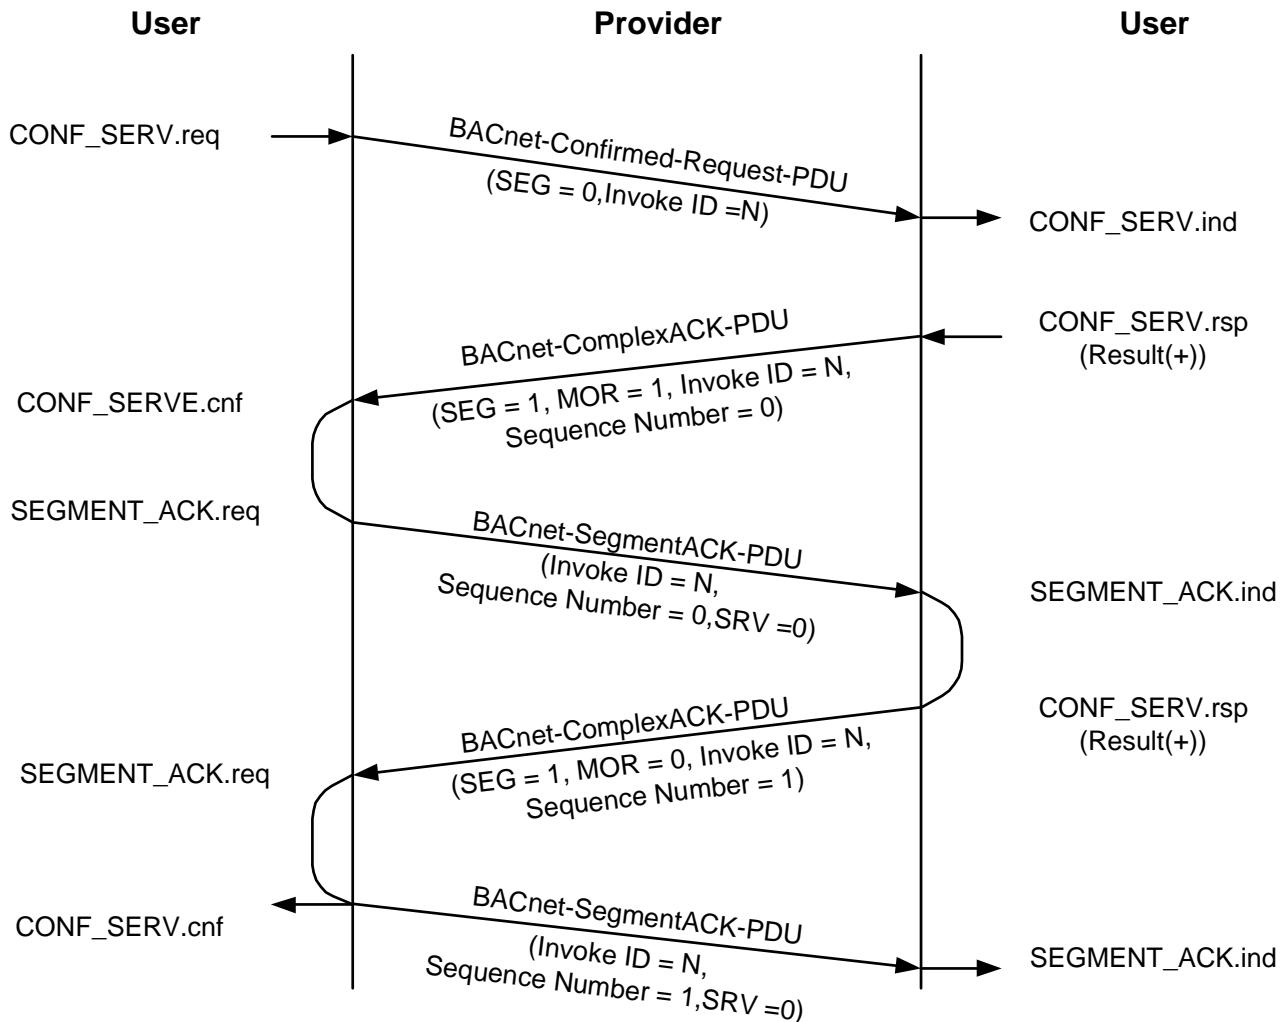

**Figure 5-8.** Time sequence diagram for a normal confirmed service with segmented response.


## Normal Confirmed Service (Segmented Response, with Application Program Flow Control)

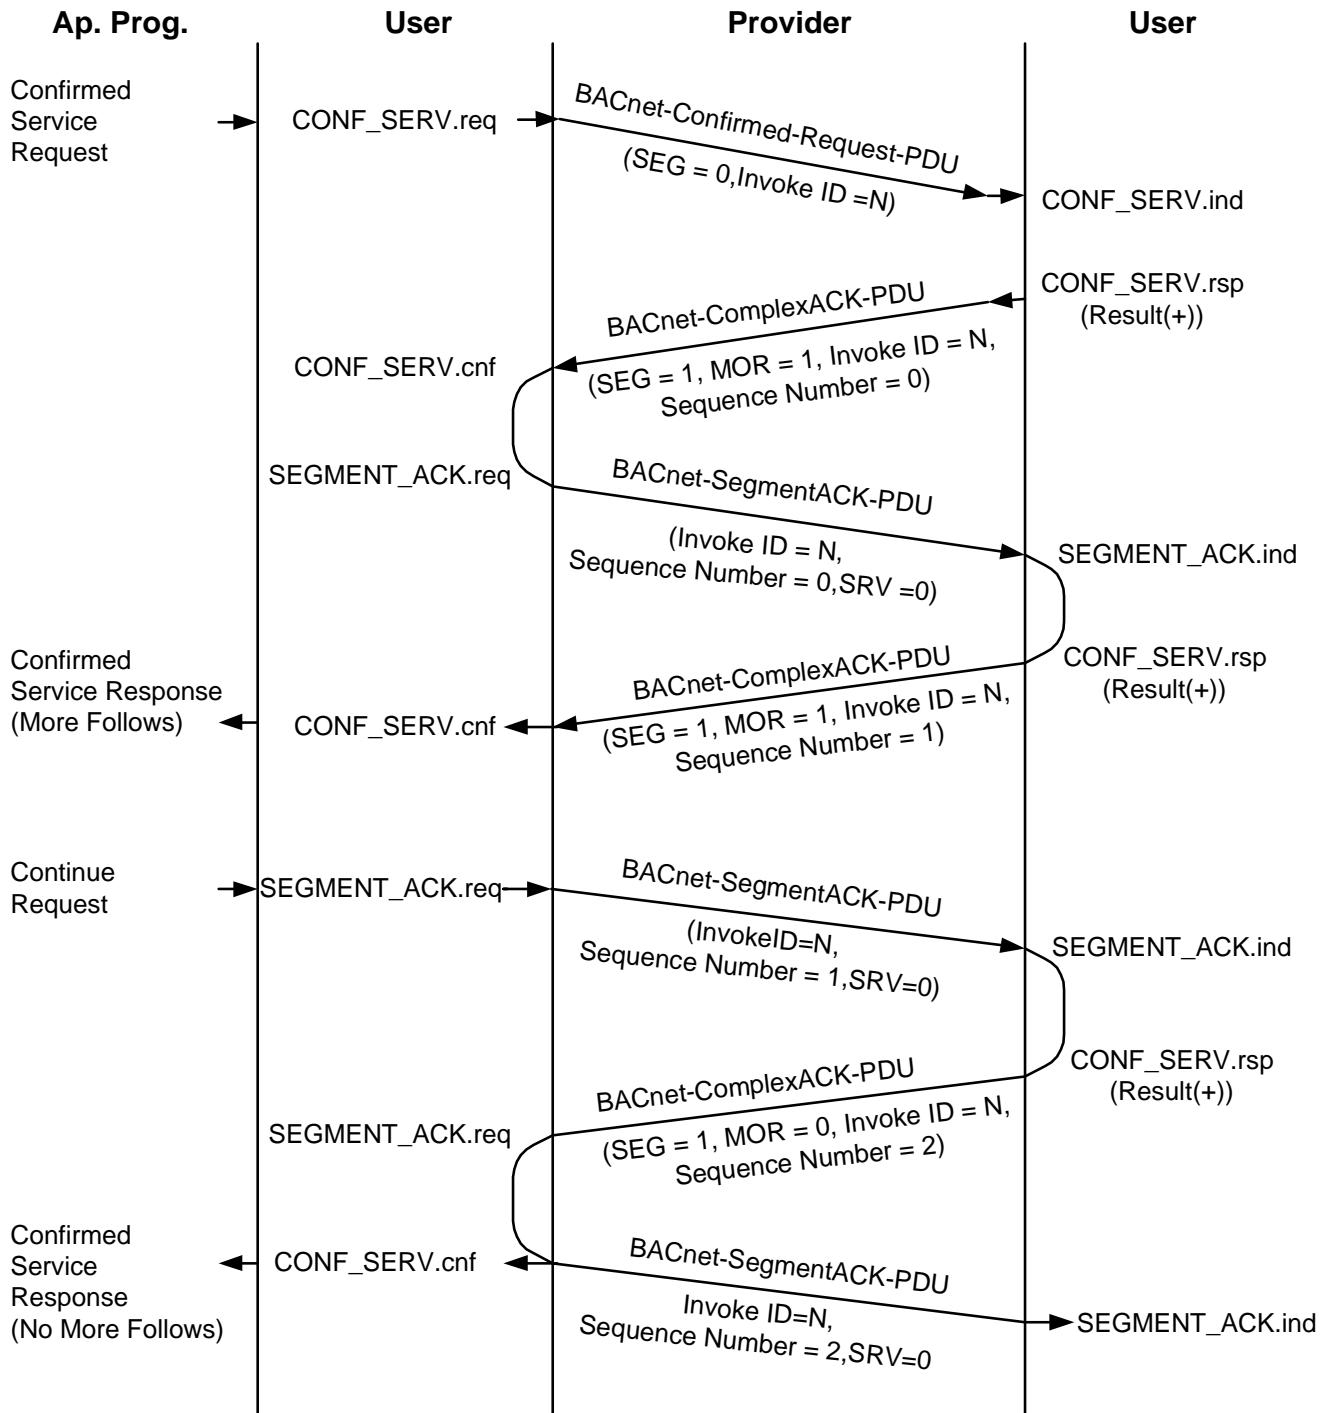

**Figure 5-9.** Time sequence diagram for a normal confirmed service with application flow control.

# Normal Confirmed Service

(Segmented Response, with Application Program Flow Control and Requester Abort)

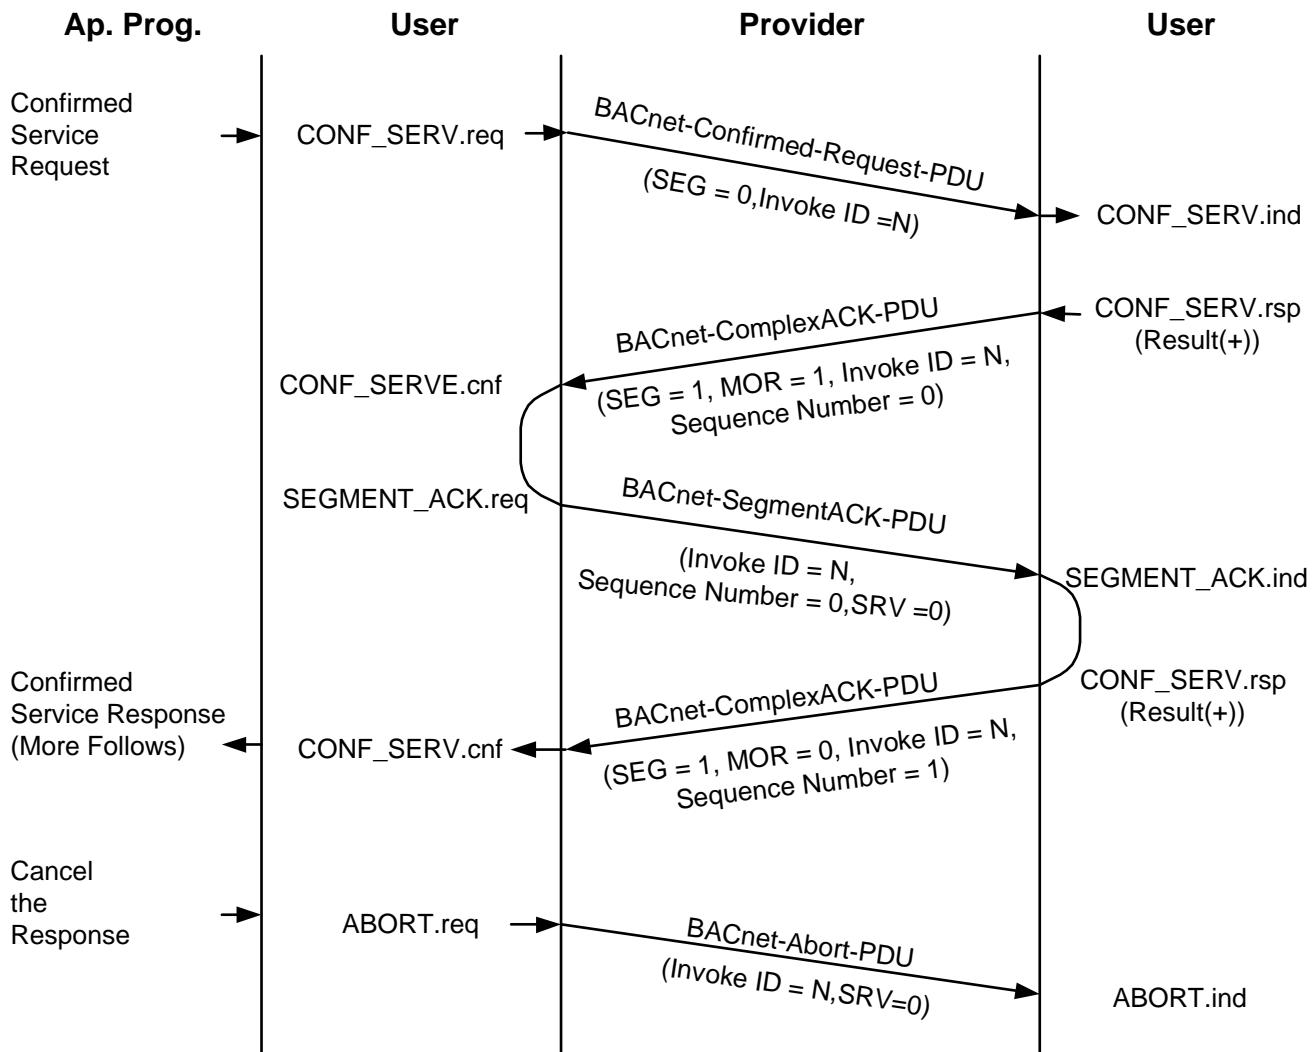

**Figure 5-10.** Time sequence diagram for a normal confirmed service with segmented response, application program flow control, and response cancellation.

# Abnormal Confirmed Service

(Segmented Response and Requester Abort)


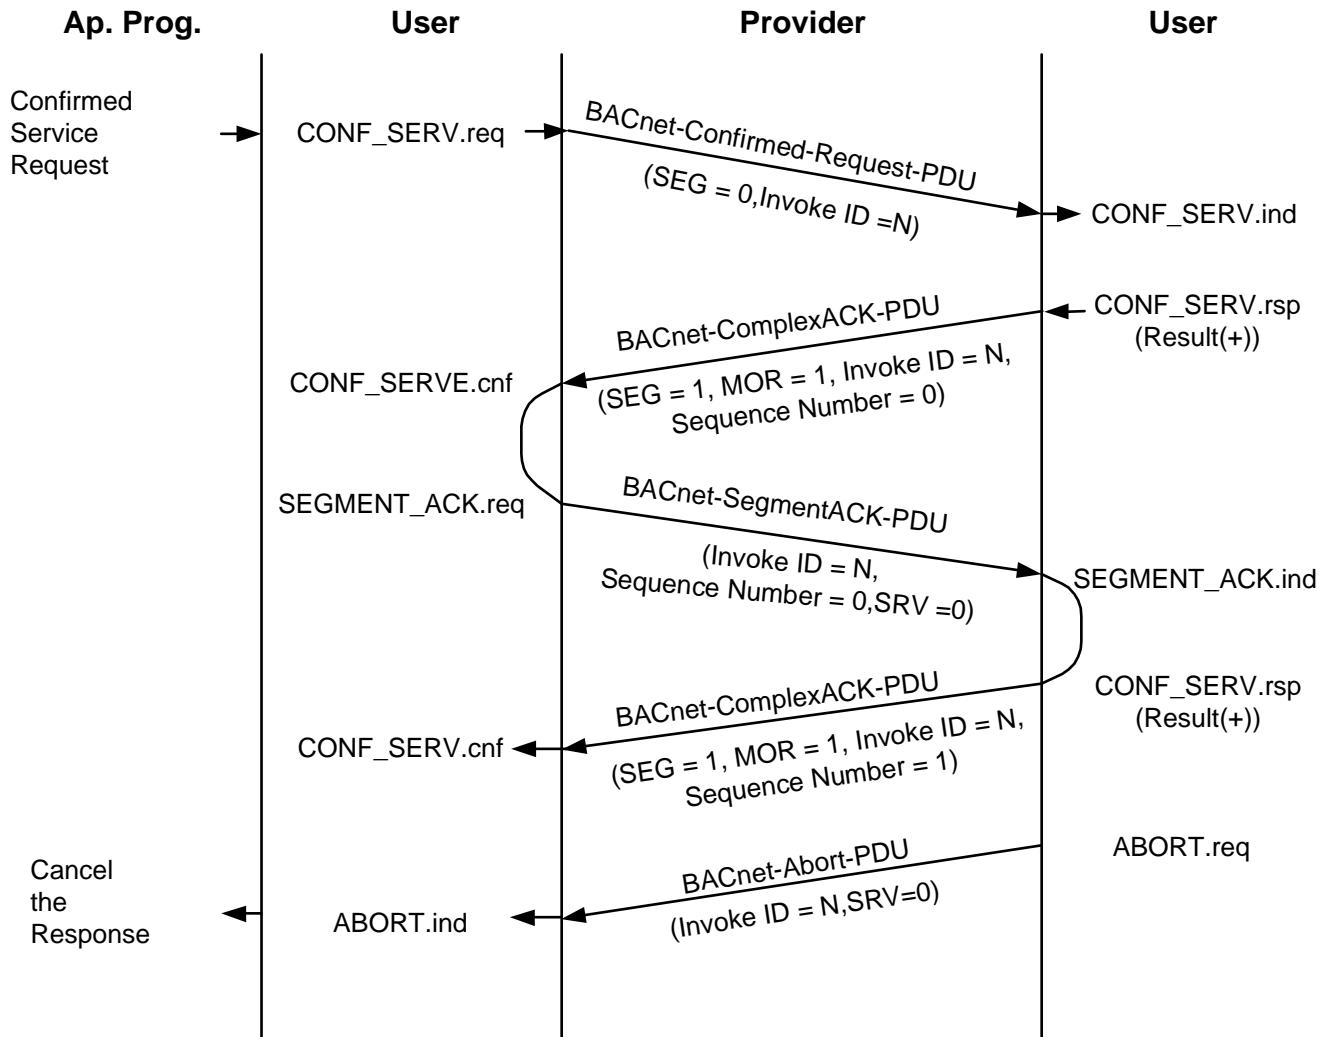



Figure 5-11. Time sequence diagram for an abnormal confirmed service.

## Abnormal Confirmed Service (No Segmentation, Service Error)

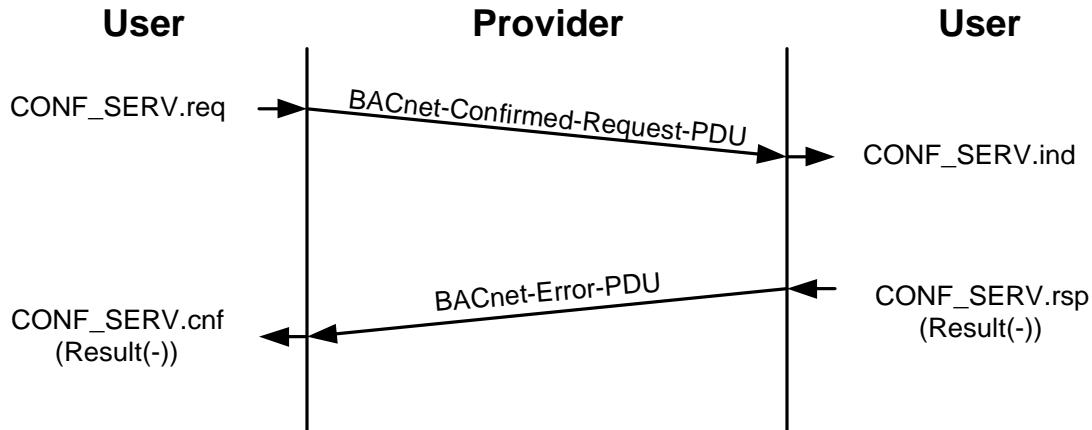

**Figure 5-12.** Time sequence diagram for an abnormal confirmed service.

## Abnormal Service Request or Response (Protocol Error)

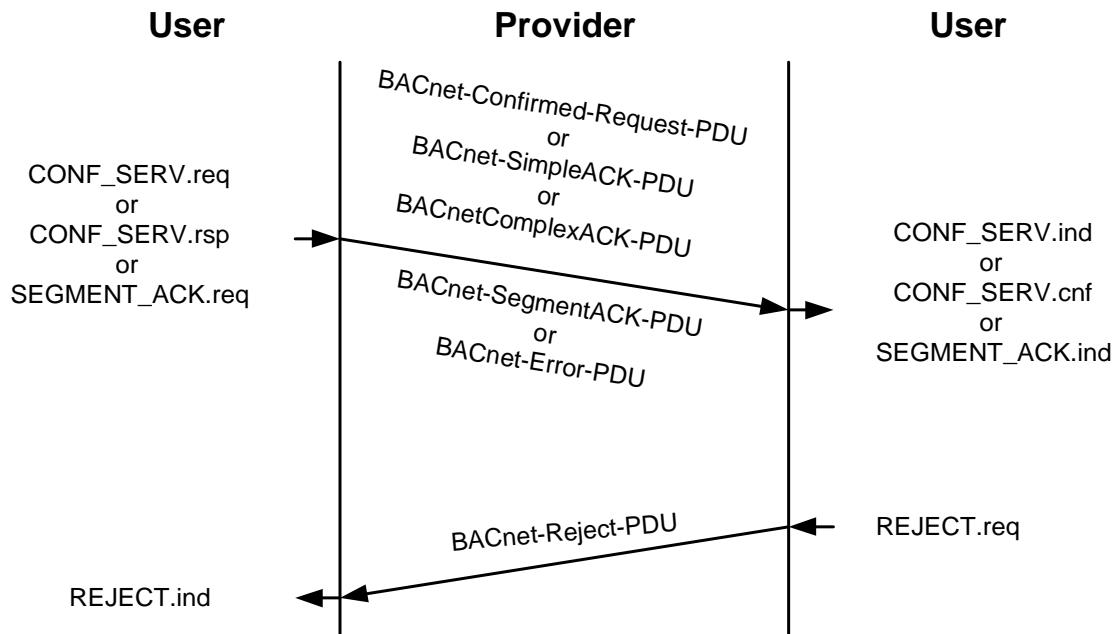

**Figure 5-13.** Time sequence diagram for an abnormal service request or response with a protocol error.

## 5.6 Application Layer Service Conventions

This standard uses the descriptive conventions contained in the OSI technical report on service conventions, ISO TR 8509. The OSI conventions define the interactions between a protocol service user and a protocol service provider. Information passed between the protocol service user and the protocol service provider is represented abstractly as an exchange of "service primitives." The service primitives are an abstraction of the functional specification and the user-layer interaction. The abstract definition does not contain local detail of the user/provider interaction. Each primitive has a set of zero or more parameters, representing data elements that are passed to qualify the functions invoked by the primitive. Parameters indicate information available in a user/provider interaction; in any particular interface, some parameters may be explicitly stated (even though not explicitly defined in the primitive) or implicitly associated with the service access point. Similarly, in any particular protocol specification, functions corresponding to a service primitive may be explicitly defined or implicitly available.

Clauses 13 through 17 and 24 use a tabular format to describe the component parameters of the BACnet service primitives. Each table consists of five columns, containing the name of the service parameter and a column each for the request ("Req"), indication ("Ind"), response ("Rsp"), and confirm ("Cnf") primitives. The "Rsp" and "Cnf" columns are absent for unconfirmed services. Each row of the table contains one parameter or subparameter. Under the appropriate service primitive columns, a code is used to specify the type of use of the parameter on the primitive specified in the vertical column. These codes follow the conventions suggested in the ISO technical report on conventions, ISO TR 8509, namely:

- |   |                                                                                                                                                                     |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| M | - parameter is Mandatory for the primitive.                                                                                                                         |
| U | - parameter is a User option and may not be provided.                                                                                                               |
| C | - parameter is Conditional upon other parameters.                                                                                                                   |
| S | - parameter is a Selection from a collection of two or more possible parameters. The parameters that make up this collection are indicated in the table as follows: |
- (a) each parameter in the collection is specified with the code "S";
  - (b) the name of each parameter in the collection is at the same table indentation from the beginning of the parameter column in the table; and
  - (c) either
    1. each parameter is at the leftmost (outer) indentation in the table or
    2. each parameter is part of the same parameter group. A parameter group is a collection of parameters where each member has a common parent parameter. The parent parameter for any group member is the first parameter above the member that is not indented as far as that member. In the following example, ParameterA and ParameterB form a parameter group:

```

ParameterX
  ParameterA
  ParameterB
ParameterY
  ParameterC

```

Informally, for parameters involved in a selection, the indentation in the service tables signifies which parameters are involved in a selection. All parameters at the same level of indentation under a common "higher level" parameter are part of the same selection.

The code "(=)" following one of the codes M, U, C, or S indicates that the parameter is semantically equivalent to the parameter in the service primitive to its immediate left in the table. For instance, an "M(=)" code in the indication service primitive column and "M" in the request service primitive column means that the parameter in the indication primitive is semantically equivalent to that in the request primitive.

Some parameters may contain subparameters. Subparameters are indicated by indenting them with respect to the parent parameter. The presence of subparameters is always dependent on the presence of the parent parameter. In the example above, ParameterA and ParameterB are subparameters of ParameterX and ParameterC is a subparameter of ParameterY. If ParameterX is optional and is not supplied in a service primitive, then the subparameters (ParameterA and ParameterB) shall not be supplied.

Some service parameters are named using a "List of ..." convention. Unless otherwise noted, all parameters whose name begins with "List of ..." specify a list of zero or more of the item specified after the "List of" keyword phrase.

## 6 THE NETWORK LAYER

The purpose of the BACnet network layer is to provide the means by which messages can be relayed from one BACnet network to another, regardless of the BACnet data link technology in use on that network. Whereas the data link layer provides the capability to address messages to a single device or broadcast them to all devices on the local network, the network layer allows messages to be directed to a single remote device, broadcast on a remote network, or broadcast globally to all devices on all networks. A BACnet Device is uniquely located by a network number and a MAC address.

Devices that interconnect two disparate BACnet LANs, e.g., ISO 8802-3 and ARCNET, and provide the relay function described in this clause are called "BACnet routers." Devices that interconnect two disparate BACnet networks through a point-to-point (PTP) connection (see Clause 10) are also BACnet routers. BACnet routers build and maintain their routing tables automatically using the network layer protocol messages defined in this clause. Network layer protocol messages facilitate both the auto-configuration of routers and the flow of messages to, and between, routers. BACnet routing capability may be implemented in stand-alone devices or, alternatively, in devices that carry out other building automation and control functions.

Some functions assigned to the network layer by the OSI Basic Reference Model are not required in BACnet. One such function involves selecting a communications path between source and destination machines based on an optimization algorithm. This is not required because BACnet internetworks shall be designed and installed with at most a single, active path between any two devices, a constraint that greatly reduces the complexity of the network layer. Another common network layer function is message segmentation and reassembly. To obviate the need for these capabilities at the network layer, BACnet imposes a limitation on the length of the NPDU in messages passed through a BACnet router. The maximum NPDU length shall not exceed the capability of any data link technology encountered along the path from source to destination. A list of the maximum NPDU lengths for BACnet data link technologies is given in Table 6-1.

**Table 6-1.** Maximum NPDU Lengths When Routing Through Different BACnet Data Link Layers

Data Link Technology	Maximum NPDU Length
ISO 8802-3 ("Ethernet"), as defined in Clause 7	1497 octets
ARCNET, as defined in Clause 8	501 octets
MS/TP, as defined in Clause 9	501 octets
Point-To-Point, as defined in Clause 10	501 octets
LonTalk, as defined in Clause 11	228 octets
BACnet/IP, as defined in Annex J	1497 octets

### 6.1 Network Layer Service Specification

Conceptually, the BACnet network layer provides an unacknowledged connectionless form of data unit transfer service to the application layer. The primitives associated with the interaction are the N-UNITDATA request and indication. These primitives provide parameters as follows:

```
N-UNITDATA.request (
    destination_address,
    data,
    network_priority,
    data_expecting_reply
)
```

```
N-UNITDATA.indication (
    source_address,
    destination_address,
    data,
    network_priority,
    data_expecting_reply
)
```

The 'destination\_address' and 'source\_address' parameters provide the logical concatenation of 1) an optional network number, 2) the MAC address appropriate to the underlying LAN technology, and the 3) the link service access point. A network number of X'FFFF' indicates that the message is to be broadcast "globally" to all devices on all currently reachable networks. Currently reachable networks are those networks to which an active connection is already established within the BACnet internet. In particular, a global broadcast shall not trigger any attempts to establish PTP connections. The 'data' parameter is the network service data unit (NSDU) passed down from the application layer and is composed of a fully encoded BACnet APDU. The 'network\_priority' is a numeric value used by the network layer in BACnet routers to determine any possible deviations from a first-in-first-out approach to managing the queue of messages awaiting relay. The data\_expecting\_reply parameter indicates whether (TRUE) or not (FALSE) a reply data unit is expected for the data unit being transferred.

Upon receipt of an N-UNITDATA.request primitive from the application layer, the network layer shall attempt to send an NSDU using the procedures described in this clause. Upon receipt of an NSDU from a peer network entity, a network entity shall either 1) send the NSDU to its destination on a directly connected network, 2) send the NSDU to the next BACnet router en route to its destination, and/or 3) if the destination address matches that of one of its own application entities, issue an N-UNITDATA.indication primitive to the appropriate entity in its own application layer to signal the arrival of the NSDU.

## 6.2 Network Layer PDU Structure

### 6.2.1 Protocol Version Number

Each NPDU shall begin with a single octet that indicates the version number of the BACnet protocol, encoded as an 8 bit unsigned integer. The present version number of the BACnet protocol is one (1).

### 6.2.2 Network Layer Protocol Control Information

The second octet in an NPDU shall be a control octet that indicates the presence or absence of particular NPCI fields. Figure 6-1 shows the order of the NPCI fields in an encoded NPDU. Use of the bits in the control octet is as follows.

Bit 7: 1 indicates that the NSDU conveys a network layer message. Message Type field is present.  
0 indicates that the NSDU contains a BACnet APDU. Message Type field is absent.

Bit 6: Reserved. Shall be zero.

Bit 5: Destination specifier where:  
0 = DNET, DLEN, DADR, and Hop Count absent  
1 = DNET, DLEN, and Hop Count present  
DLEN = 0 denotes broadcast MAC DADR and DADR field is absent  
DLEN > 0 specifies length of DADR field

Bit 4: Reserved. Shall be zero.

Bit 3: Source specifier where:  
0 = SNET, SLEN, and SADR absent  
1 = SNET, SLEN, and SADR present  
SLEN = 0 Invalid  
SLEN > 0 specifies length of SADR field

Bit 2: The value of this bit corresponds to the data\_expecting\_reply parameter in the N-UNITDATA primitives.

- 1 indicates that a BACnet-Confirmed-Request-PDU, a segment of a BACnet-ComplexACK-PDU, or a network layer message expecting a reply is present.
- 0 indicates that other than a BACnet-Confirmed-Request-PDU, a segment of a BACnet-ComplexACK-PDU, or a network layer message expecting a reply is present.


Bits 1,0: Network priority where:

- B'11' = Life Safety message
- B'10' = Critical Equipment message
- B'01' = Urgent message
- B '00' = Normal message

In this standard:

- DNET = 2-octet ultimate destination network number.
- DLEN = 1-octet length of ultimate destination MAC layer address  
(A value of 0 indicates a broadcast on the destination network.)
- DADR = Ultimate destination MAC layer address.
- DA = Local network destination MAC layer address.
- SNET = 2-octet original source network number.
- SLEN = 1-octet length of original source MAC layer address.
- SADR = Original source MAC layer address.
- SA = Local network source MAC layer address.

Figures 6-2(a) - 6-2(e) provide examples of NPDU containing APDUs for various combinations of addressing information.

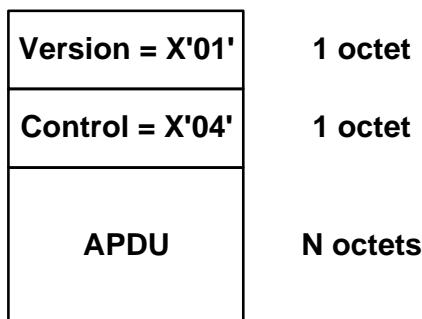

**Figure 6-2(a).** Example of a typical "Local" BACnet NPDUs for which a reply is expected.

<b>Version</b>	<b>1 octet</b>
<b>Control</b>	<b>1 octet</b>
<b>DNET</b>	<b>2 octets</b>
<b>DLEN</b>	<b>1 octet</b>
<b>DADR</b>	<b>variable</b>
<b>SNET</b>	<b>2 octets</b>
<b>SLEN</b>	<b>1 octet</b>
<b>SADR</b>	<b>variable</b>
<b>Hop Count</b>	<b>1 octet</b>
<b>Message Type</b>	<b>1 octet</b>
<b>Vendor ID</b>	<b>2 octets</b>
<b>APDU</b>	<b>N octets</b>

**Figure 6-1.** NPDUs field format. Which fields are present is determined by the bits in the control octet.

<b>Version = X'01'</b>	<b>1 octet</b>
<b>Control = X'24'</b>	<b>1 octet</b>
<b>DNET</b>	<b>2 octets</b>
<b>DLEN = M</b>	<b>1 octet</b>
<b>DADR</b>	<b>M octets</b>
<b>Hop Count</b>	<b>1 octet</b>
<b>APDU</b>	<b>N octets</b>

**Figure 6-2(b).** Example of a typical "Remote" BACnet NPDUs directed to a router. Network Priority is NORMAL and a reply is expected.

<b>Version = X'01'</b>	1 octet
<b>Control = X'29'</b>	1 octet
<b>DNET</b>	2 octets
<b>DLEN</b>	1 octet
<b>DADR</b>	1 octet
<b>SNET</b>	2 octets
<b>SLEN = 6</b>	1 octet
<b>SADR</b>	6 octets
<b>Hop Count</b>	1 octet
<b>APDU</b>	N octets


**Figure 6-2(c).** Example of a typical BACnet NPDUs as passed between routers. Network Priority is URGENT, original MAC Address is 6 octets, and the ultimate Destination MAC Address is 1 octet.

<b>Version = X'01'</b>	1 octet
<b>Control = X'0B'</b>	1 octet
<b>SNET</b>	2 octets
<b>SLEN = 6</b>	1 octet
<b>SADR</b>	6 octets
<b>APDU</b>	N octets

**Figure 6-2(d).** Example of a typical "Remote" BACnet NPDUs as sent from a Router to its ultimate destination on a directly connected network. Network Priority is LIFE SAFETY.

<b>Version =X'01'</b>	1 octet
<b>Control = X'28'</b>	1 octet
<b>DNET = X'FFFF'</b>	2 octets
<b>DLEN = 0</b>	1 octet
<b>SNET</b>	2 octets
<b>SLEN</b>	1 octet
<b>SADR</b>	1 octet
<b>Hop Count</b>	1 octet
<b>APDU</b>	N octets

**Figure 6-2(e).** Example of a typical Broadcast message of NORMAL Network Priority as broadcast by a Router.

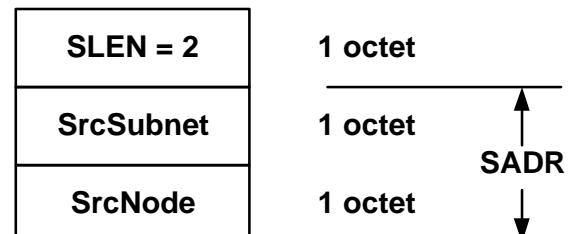

**Figure 6-3.** Encoding of the SLEN and SADR for NPDUs destined for LonTalk devices being routed through BACnet.

### 6.2.2.1 DNET, SNET, and Vendor ID Encoding


The multi-octet fields, DNET, SNET, and Vendor ID, shall be conveyed with the most significant octet first. Allowable network number values for DNET shall be from 1 to 65535 and for SNET from 1 to 65534.

### 6.2.2.2 DADR and SADR Encoding

The DADR and SADR fields are encoded as shown in Table 6-2, Figure 6-3, and Figure 6-4.

**Table 6-2.** BACnet DADR and SADR encoding rules based upon data link layer technology

BACnet Data Link Layer	DLEN	SLEN	Encoding Rules
ISO 8802-3 ("Ethernet"), as defined in Clause 7	6	6	Encoded as in their MAC layer representations
ARCNET, as defined in Clause 8	1	1	Encoded as in their MAC layer representations
MS/TP, as defined in Clause 9	1	1	Encoded as in their MAC layer representations
LonTalk domain wide broadcast	2	2	The encoding for the SADR is shown in Figure 6-3
LonTalk multicast	2	2	The encoding for the DADR is shown in Figure 6-4
LonTalk unicast	2	2	
LonTalk, unique Neuron_ID	7	2	
BACnet/IP, as defined in Annex J	6	6	Encoded as specified in J.1.2

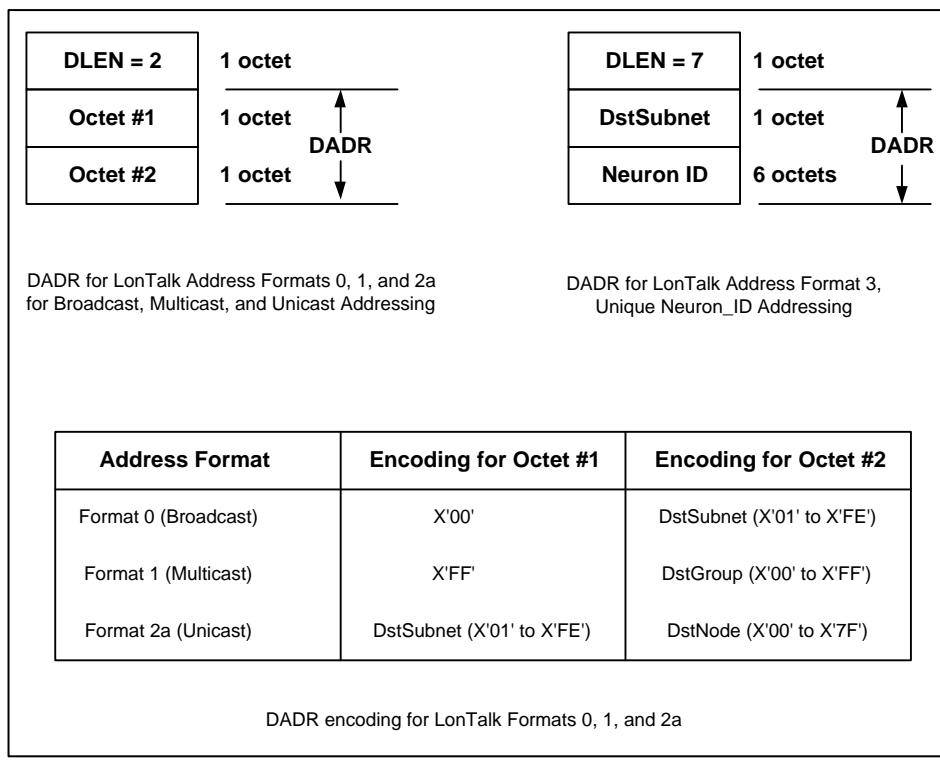

**Figure 6-4.** Encoding of the DLEN and DADR for NPDUs destined for LonTalk devices being routed through BACnet. The different LonTalk address formats are encoded as shown.

### 6.2.3 Hop Count

The Hop Count is a decrementing counter value used to ensure that a message cannot be routed in a circular path indefinitely. Such a circular path can only occur if the configuration rule that allows only a single path between any two BACnet nodes is violated. See 4.2.

The Hop Count field shall be present only if the message is destined for a remote network, i.e., if DNET is present. This is a one-octet field that is initialized to a value of X'FF'. Each router the message passes through shall decrement the Hop Count by at least one. If the Hop Count reaches a value of zero, the router shall discard the message and not forward it to the next router.

#### 6.2.4 Network Layer Message Type


If Bit 7 of the control octet described in 6.2.2 is 1, a message type octet shall be present as shown in Figure 6-1. The following message types are indicated:

- X'00': Who-Is-Router-To-Network
- X'01': I-Am-Router-To-Network
- X'02': I-Could-Be-Router-To-Network
- X'03': Reject-Message-To-Network
- X'04': Router-Busy-To-Network
- X'05': Router-Available-To-Network
- X'06': Initialize-Routing-Table
- X'07': Initialize-Routing-Table-Ack
- X'08': Establish-Connection-To-Network
- X'09': Disconnect-Connection-To-Network
- X'0A' to X'7F': Reserved for use by ASHRAE
- X'80' to X'FF': Available for vendor proprietary messages


Figures 6-5 through 6-10 provide examples of NPDUs containing network layer messages.

#### 6.2.5 Vendor Proprietary Network Layer Messages

If Bit 7 of the control octet is 1 and the Message Type field contains a value in the range X'80' – X'FF', then a Vendor ID field shall be present as shown in Figure 6-1. Otherwise, the Vendor ID shall be omitted. The Vendor ID is defined in Clause 23. The Vendor ID shall be encoded in two octets.

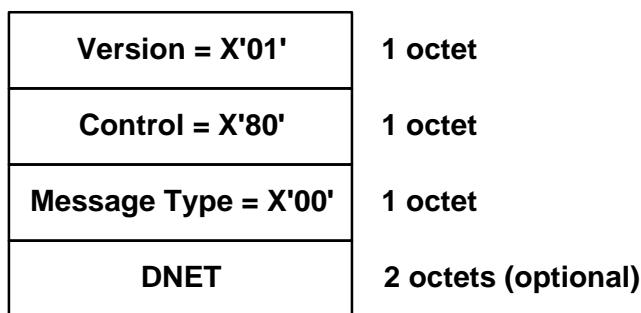

**Figure 6-5.** Example of a Who-Is-Router-To-Network message. If DNET is omitted, a router receiving this message shall return a list of all reachable DNETs.

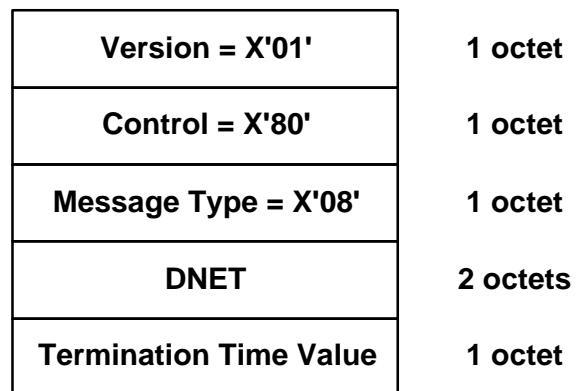

**Figure 6-6.** Example of an Establish-Connection-To-Network message directed to a local router.

<b>Version = X'01'</b>	<b>1 octet</b>
<b>NPCI = X'80'</b>	<b>1 octet</b>
<b>Message Type = X'03'</b>	<b>1 octet</b>
<b>Rejection Reason</b>	<b>1 octet</b>
<b>DNET</b>	<b>2 octets</b>

**Figure 6-7.** Example of a Reject-Message-To-Network DNET.

<b>Version = X'01'</b>	<b>1 octet</b>
<b>Control = X'80'</b>	<b>1 octet</b>
<b>Message Type = X'05'</b>	<b>1 octet</b>
<b>List of DNETs</b>	<b>2N octets (optional)</b>

**Figure 6-8.** Example of a Router-Available-To-Network for one or more DNETs. If the list of DNETs is not present, flow control is being eased on all networks normally reached through the router.

<b>Version = X'01'</b>	<b>1 octet</b>
<b>Control = X'80'</b>	<b>1 octet</b>
<b>Message Type = X'04'</b>	<b>1 octet</b>
<b>List of DNETs</b>	<b>2N octets (optional)</b>

**Figure 6-9.** Example of a Router-Busy-To-Network for one or more DNETs. If the list of DNETs is not present, flow control is being imposed on all networks normally reachable through the router.

<b>Version = X'01'</b>	<b>1 octet</b>
<b>Control = X'80'</b>	<b>1 octet</b>
<b>Message Type = X'02'</b>	<b>1 octet</b>
<b>DNET</b>	<b>2 octets</b>
<b>Performance Index</b>	<b>1 octet</b>

**Figure 6-10.** Example of an I-Could-Be-Router-To-Network Message.

## 6.2.6 Network Layer Messages Conveying Data

If there are data octets to be conveyed for the message type specified in 6.2.4, these data octets shall follow the message type octet in the manner prescribed for each message type.

## 6.3 Messages for Multiple Recipients

BACnet supports the transmission of messages to multiple recipients through the use of multicast and broadcast addresses. Multicasting results in a message being processed by a group of recipients. Broadcasting results in a message being processed by all of the BACnet Devices on the local network, a remote network, or all networks. The use of broadcast or multicast addressing for network layer protocol messages is described in 6.5. Of the BACnet APDUs, only the BACnet-Unconfirmed-Request-PDU may be transmitted using a multicast or broadcast address.

### 6.3.1 Multicast Messages

At present only ISO 8802-3 and LonTalk support multicast addresses. The method by which a BACnet Device is assigned to a specific multicast group shall be a local matter.

### 6.3.2 Broadcast Messages

Three forms of broadcast transmission are provided by BACnet: local, remote, and global. A local broadcast is received by all stations on the local network. A remote broadcast is received by all stations on a single remote network. A global broadcast is received by all stations on all networks comprising the BACnet internetwork.

A local broadcast makes use of the broadcast MAC address appropriate to the local network's LAN technology, i.e., X'FFFFFFFFFFFF' for ISO 8802-3, X'00' for ARCNET, X'FF' for MS/TP, or X'00' in the DstSubnet field of Address Format 0 in LonTalk.

A remote broadcast is made on behalf of the source device on a specific distant network by a router directly connected to that network. In this case, DNET shall specify the network number of the remote network and DLEN shall be set to zero.

A global broadcast, indicated by a DNET of X'FFFF', is sent to all networks through all routers. Upon receipt of a message with the global broadcast DNET network number, a router shall decrement the Hop Count. If the Hop Count is still greater than zero, then the router shall broadcast the message on all directly connected networks except the network of origin, using the broadcast MAC address appropriate for each destination network. If the Hop Count is zero, then the router shall discard the message. In order for the message to be disseminated globally, the originating device shall use a broadcast MAC address on the originating network so that all attached routers may receive the message and propagate it further.

If a router has one or more ports that represent PTP connections as defined in Clause 10, global broadcasts shall be processed as follows. If the PTP connection is currently established, that is, the Connection State Machine is in the Connected state (see 10.4.9), then the global broadcast message shall be transmitted through the PTP connection. If the PTP connection is not currently established, then no action shall be taken by the router to transmit the broadcast message through the PTP connection.

## 6.4 Network Layer Protocol Messages

This subclause describes the format and purpose of the ten BACnet network layer protocol messages. These messages provide the basis for router auto-configuration, router table maintenance, and network layer congestion control.

### 6.4.1 Who-Is-Router-To-Network

This message is indicated by a Message Type of X'00' optionally followed by a 2-octet network number. Who-Is-Router-To-Network is used by both routing and non-routing nodes to ascertain the next router to a specific destination network or, in the case of routers, as an aid in building an up-to-date routing table. See Figure 6-5.

### 6.4.2 I-Am-Router-To-Network

This message is indicated by a Message Type of X'01' followed by one or more 2-octet network numbers. It is used to indicate the network numbers of the networks accessible through the router generating the message. It shall always be transmitted with a broadcast MAC address.

### 6.4.3 I-Could-Be-Router-To-Network

This message is used to respond to a Who-Is-Router-To-Network message containing a specific 2-octet network number when the responding half-router has the capability of establishing a PTP connection that can be used to reach the desired network but this PTP connection is not currently established.

This message is indicated by a Message Type of X'02'. The complete format of the NPDU is shown in Figure 6-10. The 2-octet network number indicates the DNET that could be reached by this half-router. The 1-octet "Performance Index" is a locally determined number that gives an indication of the quality and performance of this proposed connection. A low value in this field indicates a high performance index. Typically, the Performance Index would be established at installation time and set relative to the performance of other PTP half-routers in the system.

### 6.4.4 Reject-Message-To-Network

This message is indicated by a Message Type of X'03' followed by an octet indicating the reason for the rejection and a 2-

octet network number (see Figure 6-7). It is directed to the node that originated the message being rejected, as indicated by the source address information in that message. The rejection reason octet shall contain an unsigned integer with one of the following values:

- 0: Other error.
- 1: The router is not directly connected to DNET and cannot find a router to DNET on any directly connected network using Who-Is-Router-To-Network messages.
- 2: The router is busy and unable to accept messages for the specified DNET at the present time.
- 3: It is an unknown network layer message type.
- 4: The message is too long to be routed to this DNET.

#### 6.4.5 Router-Busy-To-Network

This message is indicated by a Message Type of X'04' optionally followed by a list of 2-octet network numbers. It shall always be transmitted with a broadcast MAC address appropriate to the network on which it is broadcast. Router-Busy-To-Network is used by a router to curtail the receipt of messages for specific DNETs or all DNETs. See Figure 6-9.

#### 6.4.6 Router-Available-To-Network

This message is indicated by a Message Type of X'05' optionally followed by a list of 2-octet network numbers. It shall always be transmitted with a broadcast MAC address. Router-Available-To-Network is used by a router to enable or re-enable the receipt of messages for a specific list of DNETs or all DNETs. See Figure 6-8.

#### 6.4.7 Initialize-Routing-Table

This message is indicated by a Message Type of X'06'. It is used to initialize the routing table of a router or to query the contents of the current routing table.

The format of the data portion of the Initialize-Routing-Table message is shown in Figure 6-11.

The Number of Ports field of this NPDU indicates how many port mappings are being provided in this NPDU. This field permits routing tables to be incrementally updated as the network changes. Valid entries in this field are 0-255. Following this field are sets of data indicating the DNET directly connected to this port or accessible through a dial-up PTP connection, Port ID, Port Info Length, and, in the case Port Info Length is non-zero, Port Info. If an Initialize-Routing-Table message is sent with the Number of Ports equal to zero, the responding device shall return its complete routing table in an Initialize-Routing-Table-Ack message without updating its routing table. If the Port ID field has a value of zero, then all table entries for the specified DNET shall be purged from the table. If the Port ID field has a non-zero value, then the routing information for this DNET shall either replace any previous entry for this DNET in the routing table or, if no such entry exists, be appended to the routing table.

The Port Info Length is an unsigned integer indicating the length of the Port Info field.

<b>Number of Ports</b>	<b>1 octet</b>
<b>Connected DNET</b>	<b>2 octets</b>
<b>Port ID</b>	<b>1 octet</b>
<b>Port Info Length</b>	<b>1 octet</b>
<b>Port Info</b>	<b>J octets</b>
.	.
.	.
<b>Connected DNET</b>	<b>2 octets</b>
<b>Port ID</b>	<b>1 octet</b>
<b>Port Info Length</b>	<b>1 octet</b>
<b>Port Info</b>	<b>K octets</b>

**Figure 6-11.** Format of the data portion of an Initialize-Routing-Table or Initialize-Routing-Table-Ack.

The Port Info field, if present, shall contain an octet string. A typical use would be to convey modem control and dial information for accessing a remote network via a dial-up PTP connection.

The Initialize-Routing-Table message shall be transmitted with the DER = TRUE.

#### **6.4.8 Initialize-Routing-Table-Ack**

This message is indicated by a Message Type of X'07'. It is used to indicate that the routing table of a router has been changed or the table has been queried through the receipt of an Initialize-Routing-Table message with the Number of Ports field set equal to zero. The data portion of this message, returned only in response to a routing table query, conveys the routing table information, and it has the same format as the data portion of an Initialize-Routing-Table message. See 6.4.7 and Figure 6-11.

#### **6.4.9 Establish-Connection-To-Network**

This message is used to instruct a half-router to establish a new PTP connection that creates a path to the indicated network.

This message is indicated by a Message Type of X'08'. The complete format of the NPDU is shown in Figure 6-6. The 2-octet network number indicates the DNET that should be connected to by this half-router. The 1-octet "Termination Time Value" specifies the time, in seconds, that the connection shall remain established in the absence of NPDUs being sent on this connection. A value of 0 indicates that the connection should be considered to be permanent. See 6.7.1.4.

#### **6.4.10 Disconnect-Connection-To-Network**

This message is indicated by a Message Type of X'09' followed by a 2-octet network number. This message is used to instruct a router to disconnect an established PTP connection. The disconnection process shall follow the procedures described in Clause 10.

### **6.5 Network Layer Procedures**

This subclause describes the network layer procedures to be followed by BACnet router and non-router nodes for both local and remote data transfer. "Local" means that the source and destination devices are on the same BACnet network. "Remote" means that the source and destination devices are on different BACnet networks. The source and destination networks are interconnected by zero or more intervening networks joined by BACnet routers to form a BACnet internetwork. See Figure 4-3.

#### **6.5.1 Network Layer Procedures for the Transmission of Local Traffic**

Upon receipt of an N-UNITDATA.request primitive, the network entity (NE) shall inspect the DNET portion of the 'destination\_address' parameter. The absence of DNET indicates that the destination device resides on the same BACnet network as the device issuing this transmission request. The value of the 'network\_priority' parameter shall be included in the NPCI control octet although its use by receiving non-router entities is unspecified. The NE shall prepare a control NPCI octet indicating the absence of DNET, DADR, HOP COUNT, SNET, and SADR, concatenate it with the 'data' parameter conveyed in the N-UNITDATA.request primitive, and issue a DL-UNITDATA data link request primitive. The concatenation of the NPCI and the NSDU (the 'data' parameter from the N-UNITDATA.request), the NPDU, is passed as the 'data' parameter of the data link primitive.

#### **6.5.2 Network Layer Procedures for the Receipt of Local Traffic**

Upon receipt of an NPDU from the data link layer (conveyed by the 'data' parameter of the DL-UNITDATA data link indication primitive) whose first octet indicates BACnet version one, the destination NE shall interpret the second octet of the NPDU as control NPCI. If bit 7 of the control NPCI indicates that the message contains an APDU, then the procedure in 6.5.2.1 is followed. Otherwise, a network layer message is being conveyed and the procedure in 6.5.2.2 applies.

##### **6.5.2.1 Receipt of Local APDUs**

If the control NPCI octet indicates the absence of a DNET field or a DNET field is present and contains the global broadcast address X'FFFF', the NE shall attempt to locate a BACnet application entity. If a BACnet application entity is found, the NE shall issue an N-UNITDATA.indication primitive with the portion of the data link data following the NPCI as the 'data' parameter. If the application entity is not found and the NE resides in a non-routing node, the data link data shall be discarded. If the DNET is present and not equal to the global broadcast address X'FFFF' and the NE resides in a non-routing node, the data link data shall likewise be discarded and no further action taken. If the DNET is present and the NE resides in a BACnet router, the NE shall take the actions specified in 6.5.4.

### 6.5.2.2 Receipt of Local Network Layer Messages

If the control NPCI octet indicates the absence of a DNET field or a DNET field is present and contains the global broadcast address X'FFFF', the NE shall attempt to interpret the network layer message. If the DNET field is present and the NE resides in a routing node and the network layer message can be interpreted, then the NE shall take the actions specified in 6.5.4. If the message cannot be interpreted, a Reject-Message-To-Network shall be returned to the device that sent the message.

If the DNET is present and not equal to the global broadcast address X'FFFF' and the NE resides in a non-routing node, the data link data shall be discarded and no further action taken. If the DNET is present and the NE resides in a BACnet router, the NE shall take the actions specified in 6.5.4.

### 6.5.3 Network Layer Procedures for the Transmission of Remote Traffic

Upon receipt of an N-UNITDATA.request primitive, the NE shall inspect the DNET portion of the 'destination\_address' parameter. The presence of a DNET signifies that the destination device resides on a different BACnet network than the device issuing this transmission. A DNET value of X'FFFF' signifies a global broadcast and indicates that the message is to be directed to all local routers via a broadcast message on the local network. The NE shall prepare an NPCI control octet indicating the presence of DNET, DADR, and Hop Count but the absence of SNET and SADR. The NE shall also fill in the network priority field using the supplied parameter. The resulting control, priority, and address information shall then be concatenated with the 'data' parameter conveyed in the N-UNITDATA.request primitive and issued as a DL-UNITDATA data link request primitive. The concatenation of the NPCI and the 'data' parameter from the N-UNITDATA.request (the NSDU), the NPDU, is passed as the 'data' parameter of the data link primitive. The DA portion of the 'destination\_address' parameter passed to the data link layer shall be the MAC address of the BACnet router corresponding to the DNET parameter or the appropriate broadcast DA if the address of the router is initially unknown. The broadcast DA is also to be used if the DNET global broadcast network number is present.

Note that four methods exist for establishing the address of a BACnet router for a particular DNET: 1) the address may be established manually at the time a device is configured, 2) the address may be learned by issuing a Who-Is request and noting the SA associated with the subsequent I-Am message (assuming the device specified in the Who-Is is located on a remote DNET and the I-Am message was handled by a router on the local network), 3) by using the network layer message Who-Is-Router-To-Network, and 4) by using the local broadcast MAC address in the initial transmission to a device on a remote DNET and noting the SA associated with any subsequent responses from the remote device. Which method is used shall be a local matter.

### 6.5.4 Network Layer Procedures for the Receipt of Remote Traffic

Upon receipt of an NPDU from the data link layer (conveyed by the 'data' parameter of the DL-UNITDATA indication primitive) whose first octet indicates BACnet version one, the NE shall interpret the second octet of the NPDU as control NPCI. If the NPCI control octet indicates the presence of a DNET field whose value is not X'FFFF' and the NE resides in a BACnet device that is not a router, the message shall be discarded. If the NPCI control octet indicates the presence of a DNET field and the NE resides in a BACnet router, it shall place the NPDU in its message queue (or queues, if separate queues are maintained for each DNET), arranged in order by priority. Within each priority, the messages shall be arranged in first-in-first-out order. If the NPCI control octet indicates that the NPDU contains a network layer message, the NE shall, in addition, inspect the Message Type field. If this field indicates the presence of a Reject-Message-To-Network message, the NE shall carry out the processing specified in 6.6.3.5. If the SNET and SADR fields are present, the message has arrived from a peer router. If the SNET and SADR fields are absent, the message originated on a network directly connected to the router. In the latter case, the router shall add the SNET and SADR to the NPCI based on the router's knowledge of the network number of the network from which the message arrived, alleviating the requirement that the originating station know its own network number. The SADR field shall be set equal to the SA of the incoming NPDU.

Three possibilities exist: either the router is directly connected to the network referred to by DNET, the message must be relayed to another router for further transmission, or a global broadcast is required. In the first case, DNET, DADR, and Hop Count shall be removed from the NPCI and the message shall be sent directly to the destination device with DA set equal to DADR. The control octet shall be adjusted accordingly to indicate only the presence of SNET and SADR. In the second case, the Hop Count shall be decremented. If the Hop Count is still greater than zero, the message shall be sent to the next router on the path to the destination network. If the next router is unknown, an attempt shall be made to identify it using a Who-Is-Router-To-Network message. If the Hop Count is zero, then the message shall be discarded. If the DNET global broadcast network number is present and the Hop Count is greater than zero, the router shall broadcast the message on each network to

which the router is directly connected, except the network of origin, using the broadcast address appropriate to each data link. If the DNET global broadcast network number is present and the Hop Count is zero, then the message shall be discarded.

#### **6.6 BACnet Routers**

BACnet routers are devices that interconnect two or more BACnet networks to form a BACnet internetwork. A router may, or may not, provide BACnet application layer functionality. BACnet routers make use of BACnet network layer protocol messages to maintain their routing tables. Routers perform the routing tasks described in 6.5. See Figure 6-12 for a flow chart of router operation.

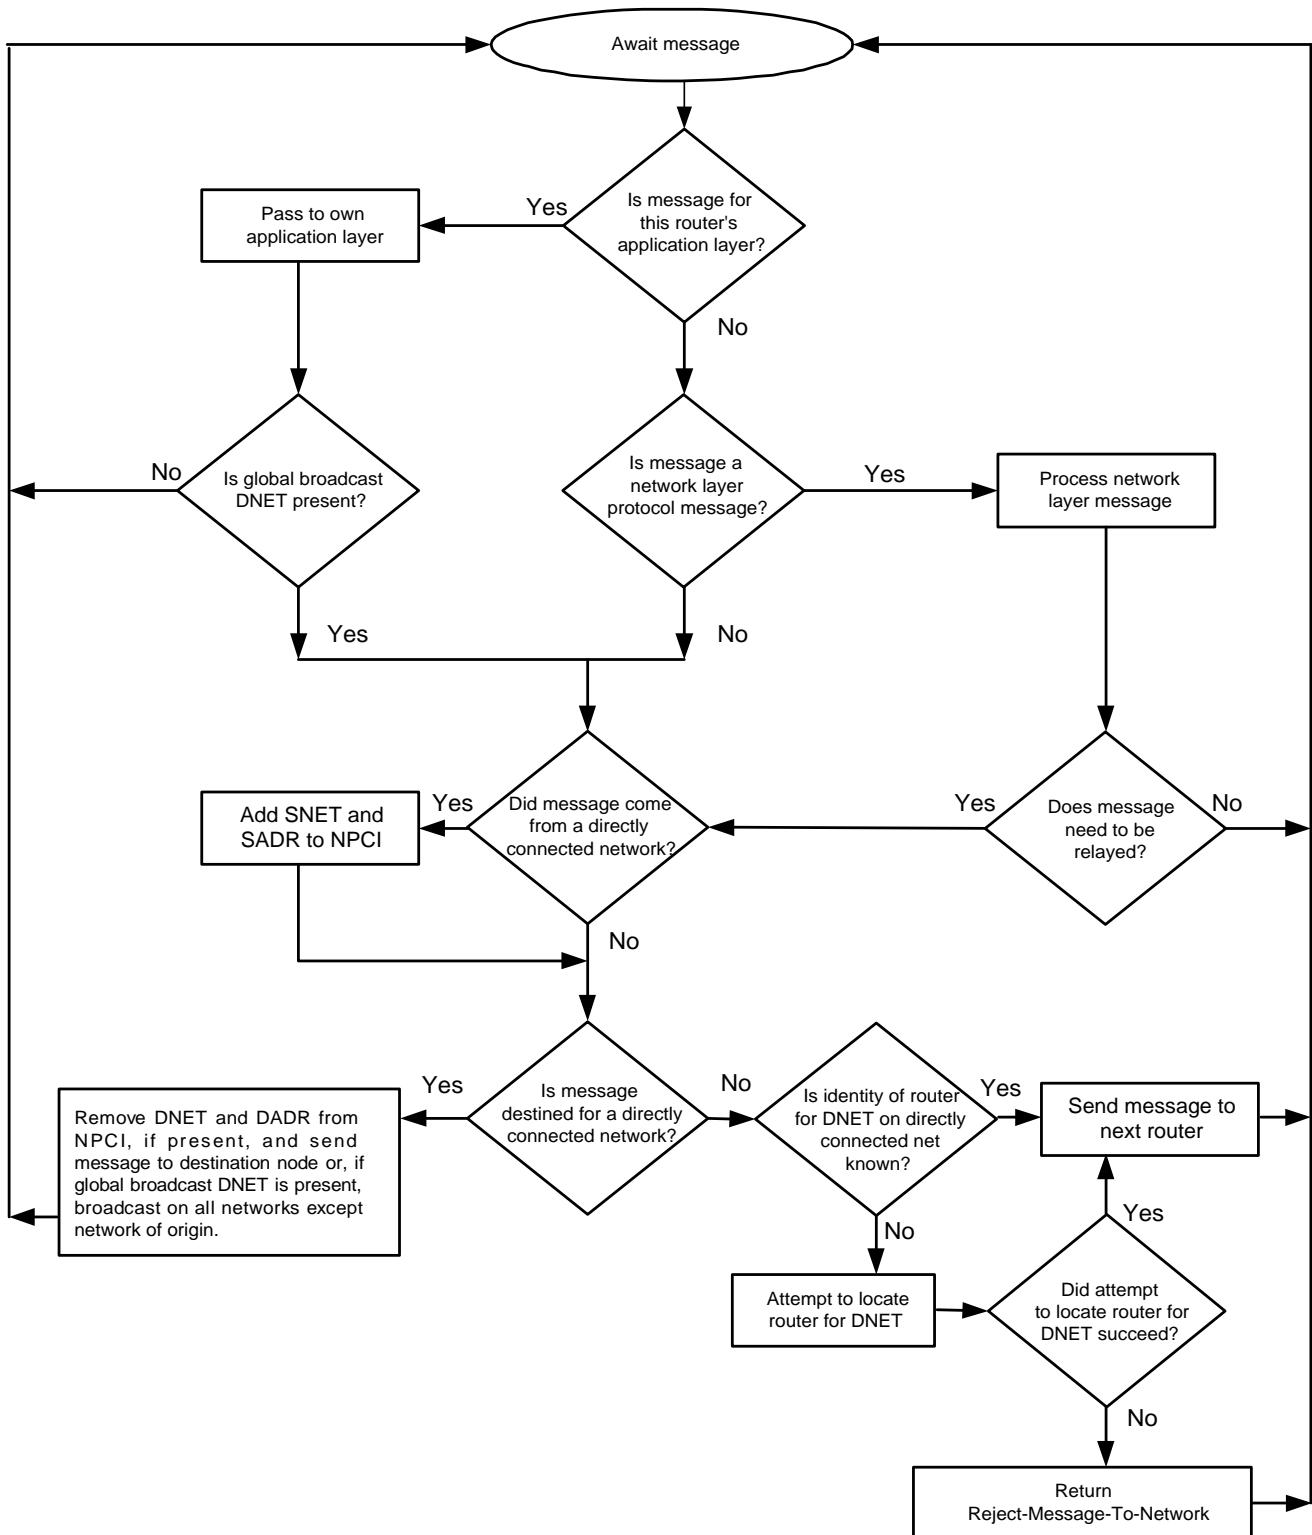


Figure 6-12. BACnet message routing.

### 6.6.1 Routing Tables

By definition, a router is a device that is connected to at least two BACnet networks. Each attachment is through a "port." A "routing table" consists of the following information for each port:

- (a) the MAC address of the port's connection to its network;
- (b) the 2-octet network number of the directly connected network;
- (c) a list of network numbers reachable through the port along with the MAC address of the next router on the path to each network number and the reachability status of each such network.

The "reachability status" is an implementation-dependent value that indicates whether the associated network is able to receive traffic. The reachability status shall be able to distinguish, at a minimum, between "permanent" failures of a route, such as might result from the failure of a router, and "temporary" unreachability due to the imposition of a congestion control restriction.

### 6.6.2 Start-up Procedures

Upon start-up, each router shall broadcast out each port an I-Am-Router-To-Network message containing the network numbers of each accessible network except the networks reachable via the network on which the broadcast is being made. This enables routers to build or update their routing table entries for each of the network numbers contained in the message.

### 6.6.3 Router Operation

This subclause describes the operation of BACnet routers.

#### 6.6.3.1 BACnet NPDUs - General

If a BACnet NPDU is received with NPCI indicating that the message should be relayed by virtue of the presence of a non-broadcast DNET, the router shall search its routing table for the indicated network number. Normal routing procedures are described in 6.5. If, however, the network number cannot be found in the routing table or through the use of the Who-Is-Router-To-Network message, the router shall generate a Reject-Message-To-Network message and send it to the node that originated the BACnet NPDU. If the NPCI indicates either a remote or global broadcast, the message shall be processed as described in 6.3.2.

#### 6.6.3.2 Who-Is-Router-To-Network

This message may be generated by a non-routing BACnet node or by a BACnet router. If the message is broadcast with a specific network number, one I-Am-Router-To-Network message should be returned at most, originating at the router on the local network that is the next router to the specified destination network. If the 2-octet network number is omitted, each responding router shall reply with an I-Am-Router-To-Network message containing all networks reachable through it, including those that may be temporarily unreachable due to the imposition of a congestion control restriction and excluding the networks reachable through the port from which the Who-Is-Router-To-Network message was received. Who-Is-Router-To-Network will generally be broadcast but may be directed to a specific router to learn the contents of its router table. In the event a router receives multiple I-Am-Router-To-Network messages pertaining to the same network, the router shall assume that each new I-Am-Router-To-Network message represents a modification in the system configuration and shall update its routing information. If the router has an established PTP connection (see Clause 10) that conflicts with this new information, the PTP connection shall be terminated using the disconnect procedures defined in Clause 10. Thus the last message received shall take precedence over all previous messages.

When a router receives a Who-Is-Router-To-Network message specifying a particular network number, it shall search its routing table for the network number contained in the message. If the specified network number is found in its table and the port through which it is reachable is not the port from which the Who-Is-Router-To-Network message was received, the router shall construct an I-Am-Router-To-Network message containing the specified network number and send it to the node that generated the request using a broadcast MAC address, thus allowing other nodes on this network to take advantage of the routing information.

If the network number is not found in the routing table, the router shall attempt to discover the next router on the path to the indicated destination network by generating a Who-Is-Router-To-Network message containing the specified destination network number and broadcasting it out all its ports other than the one from which the Who-Is-Router-To-Network message

arrived. Two cases are possible. In case one the received Who-Is-Router-To-Network message was from the originating device. For this case, the router shall add SNET and SADR fields before broadcasting the subsequent Who-Is-Router-To-Network. This permits an I-Could-Be-Router-To-Network message to be directed to the originating device. The second case is that the received Who-Is-Router-To-Network message came from another router and it already contains SNET and SADR fields. For this case, the SNET and SADR shall be retained in the newly generated Who-Is-Router-To-Network message.

If the Who-Is-Router-To-Network message does not specify a particular destination network number, the router shall construct an I-Am-Router-To-Network message containing a list of all the networks it is able to reach through other than the port from which the Who-Is-Router-To-Network message was received and transmit it in the same manner as described above. The message shall list all networks not flagged as permanently unreachable, including those that are temporarily unreachable due to the imposition of congestion control restrictions. Networks that may be reachable through a PTP connection shall be listed only if the connection is currently established.

#### **6.6.3.3 I-Am-Router-To-Network**

At router start-up, each router shall broadcast locally an I-Am-Router-To-Network message on each directly connected network as specified in 6.6.2. Each such message shall list each accessible network number except the number of the network on which the broadcast is being made. This broadcast allows other routers to update their routing tables whenever a new router joins the internetwork. In addition, an I-Am-Router-To-Network message shall be broadcast locally upon the receipt of a Who-Is-Router-To-Network message containing a network number matching a network number contained in the router's routing table, provided that the port through which it is reachable is not the port from which the Who-Is-Router-To-Network message was received.

If one or more of the reachable networks listed in the I-Am-Router-To-Network message is reached through a directly connected PTP connection, transmitting the I-Am-Router-To-Network message shall start or restart a connection termination delay timer. The PTP connection shall not be terminated before this delay timer expires. The connection termination delay timer shall be configurable with a default value of sixty seconds.

Upon receipt of an I-Am-Router-To-Network message, the router shall search its routing table for entries corresponding to each network number contained in the message. If no entry is found for a particular network number, a new entry shall be created. If an entry is found but the MAC address or port of the next router on the path to the indicated network differs from that found in the table, the MAC address in the table shall be replaced with that of the router originating the I-Am-Router-To-Network message. This ensures that all routers will have the most current information in their tables. Whether the router table was updated or not, the router shall then generate an I-Am-Router-To-Network message for all the network numbers contained in the received I-Am-Router-To-Network message and broadcast the new message, using the local broadcast MAC address, out all ports other than the one from which the previous message was received.

#### **6.6.3.4 I-Could-Be-Router-To-Network**

This message is generated by a half-router in response to a Who-Is-Router-To-Network message containing a specific 2-octet network number when the responding half-router has the capability of establishing a PTP connection that can be used to reach the desired network but this PTP connection is not currently established. In the event that a Who-Is-Router-To-Network message is received in which the 2-octet network number field is absent, such as is used to determine lists of networks reachable through active routers, the I-Could-Be-Router-To-Network message shall not be returned. The I-Could-Be-Router-To-Network message shall be directed to the device that originated the Who-Is-Router-To-Network message. The procedures to be used to establish a PTP connection are described in 6.7 and Clause 10.

#### **6.6.3.5 Reject-Message-To-Network**

Reject-Message-To-Network is generated by a router when it receives a message that it is unable to relay to the DNET specified in the NPCI or if it receives an unknown network layer message directed specifically to that router. The reasons for rejecting the message are set forth in 6.4.4.

When a router receives a Reject-Message-To-Network message with a rejection reason octet containing a value of 1 or 2, it shall search its routing table for the network number specified in the Reject-Message-To-Network message. If the network number is found, the status information for this network number shall be updated to indicate that the network is permanently unreachable if the reject reason was 1 or unreachable due to flow control if the reject reason was 2. In addition, regardless of the contents of the rejection reason octet, the router shall relay the message in the normal manner to the originating node

specified in the NPCI using the procedures of 6.5. A rejection reason of 1 is to be considered a serious error condition and should be reported to a local or remote network management entity. The nature of this reporting procedure is a local matter.

#### **6.6.3.6 Router-Busy-To-Network**

If a router wishes to curtail the receipt of messages for specific DNETs or all DNETs, it shall generate a Router-Busy-To-Network message.

If a router temporarily wishes to receive no more traffic for one or more specific DNETs, it shall broadcast a Router-Busy-To-Network message with a list of the 2-octet network numbers corresponding to these DNETs. If the 2-octet network numbers are omitted, it means the router wishes to stop the flow of messages to all the networks it normally serves.

Each router receiving a Router-Busy-To-Network message shall update its routing table to indicate that the specified DNETs are not reachable, set or reset a 30-second timer for this status, and broadcast a Router-Busy-To-Network message out each port other than the one on which it was received so that all routers may learn of the congestion control restriction. Normally, a Router-Busy-To-Network message should be followed in a short time by a Router-Available-To-Network message indicating that the congestion control restriction has been lifted. In the event that this does not happen within a timeout period of 30 seconds or if a node that has recently joined the network did not receive a previous Router-Busy-To-Network message, it may attempt a transmission to the "busy" router. If the router is able to accept the message, it shall do so and, at its discretion, again broadcast a Router-Busy-To-Network message for the benefit of this node and any others that may not have received the previous transmission. If the router is unable to accept the message, it shall immediately return a Reject-Message-To-Network to the sender. It may then also broadcast another Router-Busy-To-Network message for the reasons cited above.

#### **6.6.3.7 Router-Available-To-Network**

When a router wishes to re-enable the receipt of messages for a specific list of DNETs, or all DNETs, previously curtailed by a Router-Busy-To-Network message, it shall broadcast a Router-Available-To-Network message. If the message is broadcast with a list of 2-octet network numbers, it means that the router is now able to receive traffic for these specific DNETs. If the 2-octet network numbers are omitted, the router wishes to re-enable the flow of messages to all the networks it serves.

Each router receiving a Router-Available-To-Network message shall update its routing table to indicate that the specified DNETs are now reachable and broadcast a Router-Available-To-Network message out each port other than the one on which it arrived so that all routers may learn of the lifting of the congestion control restriction.

#### **6.6.3.8 Initialize-Routing-Table**

The Initialize-Routing-Table message is generated by any node that has been programmed to provide the initial routing table information to one or more BACnet routers or wishes to query the contents of the current routing tables. The establishment of the contents of the routing table and the circumstances under which Initialize-Routing-Table messages are generated are local matters. In addition, an Initialize-Routing-Table message with Number of Ports set equal to zero shall cause the responding device to return its complete routing table in an Initialize-Routing-Table-Ack message without updating its routing table.

When a router receives this message containing a routing table, indicated by a non-zero value in the Number of Ports field, it shall update its current port-to-network-number mappings for each network specified in the NPDU with the information contained in the NPDU and return an Initialize-Routing-Table-Ack message without any routing table data to the source. When a router receives this message in the form of a routing table query, indicated by a zero value in the Number of Ports field, it shall return an Initialize-Routing-Table-Ack message to the source containing a complete copy of its routing table as described in 6.6.3.9.

#### **6.6.3.9 Initialize-Routing-Table-Ack**

This message is sent by a router after the reception and servicing of an Initialize-Routing-Table message. If the router is acknowledging a table update message, signified by a non-zero value in the Number of Ports field, it shall return an Initialize-Routing-Table-Ack without data. If the router is acknowledging a table query message, indicated by a zero value in the Number of Ports field, it shall return a complete copy of its routing table. If a complete copy of the table cannot be returned in a single acknowledgment, the router shall send multiple acknowledgments, each containing a portion of the routing table until the entire table has been sent.

### 6.6.3.10 Establish-Connection-To-Network

Upon receipt of an Establish-Connection-To-Network message, a half-router shall attempt to establish a PTP connection using the procedures described in 6.7 and Clause 10.

### 6.6.3.11 Disconnect-Connection-To-Network

Upon receipt of a Disconnect-Connection-To-Network message, a half-router shall terminate an established PTP connection using the procedures described in 6.7 and Clause 10.


## 6.6.4 Router Congestion Control

Routers may wish to temporarily suspend the receipt of messages destined for a specific network or, possibly, all networks. Normally, this would be the result of impending buffer overflow in the router itself but could also occur because of a buffer problem with a downstream router on the path to a particular network. The messages used to impose and remove congestion control restrictions are Router-Busy-To-Network and Router-Available-To-Network. The algorithm for determining that congestion control should be imposed or removed is not specified in this standard but would most likely involve such factors as the percentage of buffer space currently occupied and, possibly, the rate at which new messages have been arriving at the router.

## 6.7 Point-To-Point Half-Routers

In BACnet networks that are interconnected across PTP connections (as defined in Clause 10), the procedures for half-router establishment and synchronization are different from those for normal routers. This is due to two unique characteristics of this type of connection. First, since a PTP connection may be established over a wide area network, such as the public telephone network, it is sometimes advantageous to limit the duration of these connections. This causes temporary half-router connections that must be controlled by BACnet. Secondly, PTP connections are always established between two half-routers that together form a single router. A diagram of this router architecture is shown in Figure 6-13. When a connection is established, both half-routers also need to update their routing tables to reflect any new or updated routing information stored by the partner half-router.

To control the link establishment, link termination, and route-learning functions of a PTP half-router, BACnet has defined five network layer messages. The I-Could-Be-Router-To-Network message announces that a half-router has the capability to connect to a requested network but does not have an active connection. The Establish-Connection-To-Network message requests that a connection be established. The Disconnect-Connection-To-Network message requests that an active connection be disconnected. Routing table initialization may be performed using the Initialize-Routing-Table and Initialize-Routing-Table-ACK messages. Thereafter, the half-router maintains its table using the same procedures as other active routers regardless of whether any active PTP connections exist.

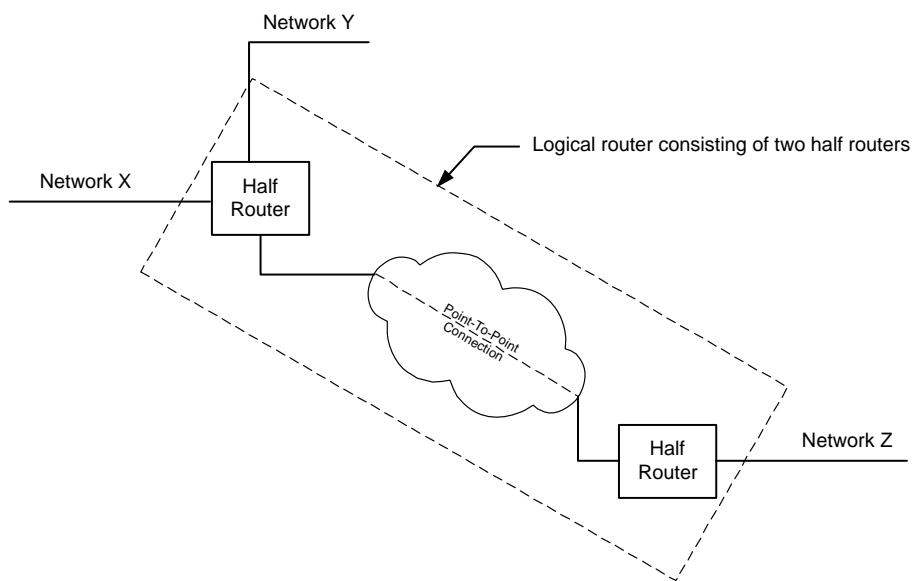

**Figure 6-13.** Upon a PTP connection, two half-routers combine to become a router.

### 6.7.1 Procedures for Establishing a New PTP Connection Between Two Half-Routers

As specified in 6.5.3, one of the methods of establishing the address of a BACnet router for a particular DNET is by having the initiating Network Entity (NE) send a Who-Is-Router-To-Network message for the DNET. A router that has an active connection to the DNET, either directly connected or over an established PTP connection, shall respond with an I-Am-Router-To-Network message. A half-router that does not have an active connection but could initiate a PTP connection to the requested DNET shall respond with an I-Could-Be-Router-To-Network message.

#### 6.7.1.1 Initiating Network Entity (NE) Procedure

To determine a new route, the NE shall issue a Who-Is-Router-To-Network message for the unknown DNET. After a locally specified time period, the initiating NE shall determine the most suitable half-router to the DNET. The algorithm for selecting the most suitable half-router is a local matter. As an aid to help select the most suitable half-router, each I-Could-Be-Router-To-Network message has a 1-octet field to indicate the expected performance of the half router's PTP connection. Upon selection of a suitable half-router, the initiating NE shall send an Establish-Connection-To-Network message to this half-router and wait to receive an I-Am-Router-To-Network message for this DNET. When the I-Am-Router-To-Network message is received, the initiating NE may send NPDUs for this DNET. If, after a locally specified time period, an I-Am-Router-To-Network message is not received by the initiating NE, the initiating NE shall send a Disconnect-Connection-To-Network to the selected half-router and may try this procedure again to find another half-router.

#### 6.7.1.2 Initiating Half-Router Procedure

Upon receipt of an Establish-Connection-To-Network message, a half-router shall try to establish the requested connection. If the connection is established, the initiating half-router shall forward the Establish-Connection-To-Network message to the answering half-router, synchronize its routing table with the routing table of the answering half-router partner using the procedures in 6.7.3, broadcast an I-Am-Router-To-Network message containing all of the DNETs accessible through the answering half-router to all directly connected networks, and start an activity timer ( $T_{active}$ ).

When the connection is established, the initiating half-router shall adjust its routing table to indicate that any DNETs accessible from the answering half-router have a "reachability status" that is "reachable" and continue with other normal operations.

If the connection cannot be established, the initiating half-router shall adjust its routing table to indicate that any DNETs accessible from the answering half-router have a "reachability status" that is "temporarily unreachable" and continue with other normal operations. If a Disconnect-Connection-To-Network message is received, the half-router shall ignore the message.

If the connection is in the process of being established and a Disconnect-Connection-To-Network message is received, the half-router shall immediately end the connection establishment procedure.

If the connection is in the process of being established and a Who-Is-Router-To-Network message is received for a DNET accessible through the PTP connection, the half-router shall respond with an I-Am-Router-To-Network, followed by a Router-Busy-To-Network message. If a message is received for the DNET before the connection is established, it shall be rejected with a rejection reason = 2. When the connection is established, the initiating half-router shall issue a Router-Available-To-Network message. If the connection cannot be established, the half-router shall issue a Router-Available-To-Network message but reject, with a rejection reason = 1, any message received for the DNET. The reason for rejecting the message is to expedite error handling.

If the connection is in the process of being established and a I-Am-Router-To-Network message is received for the DNET to which the initiating half-router is attempting a connection, the connection establishment shall be immediately terminated.

If the connection is in the process of being established and an Establish-Connection-To-Network message to the same DNET is received, the Termination Time Value shall be evaluated. If the new Termination Time Value is greater than the Termination Time Value of the original Establish-Connection-To-Network message, the new Termination Time Value shall be used by the Activity Timer. The connection process shall then proceed normally.

#### 6.7.1.3 Answering Half-Router Procedure

Upon connection establishment from a PTP half-router, the answering half-router shall set an activity timer ( $T_{active}$ ) based upon a received Establish-Connection-To-Network message from the initiating half-router, synchronize its routing table with

the routing table of the initiating half-router partner using the procedures in 6.7.3, and broadcast an I-Am-Router-To-Network message containing all of the DNETs accessible through the initiating half-router to all directly connected networks. If the connection is terminated, the answering half-router's routing table shall be adjusted to indicate that any DNET accessible from the initiating half-router has a "reachability status" that is "temporarily unreachable," if the answering half-router is able to re-establish the connection or "permanently unreachable" if the answering half-router is unable to re-establish the connection. If the connection is established, the answering half-router's routing table shall be adjusted to indicate that any DNET accessible from the initiating half-router has a "reachability status" that is "reachable."

#### **6.7.1.4 Activity Timer ( $T_{active}$ )**

The activity timer ( $T_{active}$ ) is the time that a half-router shall wait for the absence of any messages being routed over its PTP connection before it attempts to automatically disconnect the connection. This timer shall be set to the Termination Time Value field from the Establish-Connection-To-Network message. If the Termination Time Value is set to zero, the activity time shall be considered infinite.

##### **6.7.1.4.1 Initiating Half-Router Procedure**

Upon receipt of an Establish-Connection-To-Network message, an initiating half-router shall set the activity timer ( $T_{active}$ ) to the Termination Time Value field from the Establish-Connection-To-Network message. If the Termination Time Value is set to zero, the activity time shall be considered infinite.

##### **6.7.1.4.2 Answering Half-Router Procedure**

Upon receipt of an Establish-Connection-To-Network message from the initiating half-router, the answering half-router shall set the activity timer ( $T_{active}$ ) to the Termination Time Value field from the Establish-Connection-To-Network message. If the Termination Time Value is set to zero, the activity time shall be considered infinite.

#### **6.7.2 Procedures for Disconnecting a PTP Connection in a Half-Router**

There are three bases for disconnecting a PTP connection established by a half-router. The first is by a Network Entity (NE) initiating a Disconnect-Connection-To-Network message. The second is by a timer expiration indicating that the connection has been inactive for an abnormal period of time. The third basis for disconnecting a connection is to compensate for a configuration error. The specification of this procedure is given in 6.7.4.

##### **6.7.2.1 Active Disconnection of a PTP Connection**

###### **6.7.2.1.1 Initiating Network Entity (NE) Procedure**

If the initiating NE determines that the half-router connection is no longer needed, it may send a Disconnect-Connection-To-Network message to the half-router. The routing table entry for this DNET shall be immediately set to "disconnected."

###### **6.7.2.1.2 Initiating/Answering Half-Router Procedure**

Upon receipt of a Disconnect-Connection-To-Network message, a half-router shall disconnect the PTP connection as specified in Clause 10. When the connection is terminated, the half-router shall adjust its routing table to indicate that any DNETs accessible from the previously connected half-router have a "reachability status" that is "temporarily unreachable" if the half-router is able to re-establish the connection, or "permanently unreachable" if the half-router is unable to re-establish the connection.

###### **6.7.2.2 Timed Disconnection of a PTP Connection**

If the activity timer ( $T_{active}$ ) expires, a half-router shall disconnect the PTP connection as specified in Clause 10. When the connection is terminated, the half-router shall adjust its routing table to indicate that any DNETs accessible from the previously connected half-router have a "reachability status" that is "temporarily unreachable" if the half-router is able to re-establish the connection, or "permanently unreachable" if the half-router is unable to re-establish the connection.

###### **6.7.2.3 Restarting of the Activity Timer ( $T_{active}$ )**

The Activity Timer ( $T_{active}$ ) in each half-router shall be restarted to its original value contained in the initiating Establish-Connection-To-Network whenever an NPDU is transferred over the PTP link.

#### **6.7.3 Procedures for Synchronizing Half-Router Routing Tables**

Upon the establishment of a PTP connection between two half-routers, the routing tables of the half-routers shall be synchronized. This is accomplished using the I-Am-Router-To-Network message.

Upon connection establishment, the two half-routers shall exchange I-Am-Router-To-Network messages. Each message shall contain all of the reachable (before the connection was established) DNETs connected through this router. In the event that a duplicate network connection is discovered by the procedure specified in 6.7.4.2, synchronization of routing tables shall fail, causing the routing table entry for any DNET accessible from the peer half-router to have a reachability status of "temporarily unreachable."

## 6.7.4 Error Recovery Procedures

### 6.7.4.1 Recovering from Routing Requests to Unconnected Networks

Since PTP connections may be temporary in nature, there is a possibility that a half-router may receive a message bound for a DNET connection that has been disconnected. If another route is not in place through a different port than the one from which the message was received, this is considered an error. To recover from this situation, the receiving half-router shall reject this message with a Reject-Message-To-Network message using rejection reason = 1. The initiating Network Entity shall recover from this error by initiating the procedure for establishing a new PTP connection through a half-router as described in 6.7.1.

#### 6.7.4.1.1 Disconnected Half-Router Procedure

Upon receipt of a message that is requested to be routed across a PTP connection that is disconnected, the half-router shall determine if another route is in place. If no other route is in place or if the next hop of this route is identical to the path from which the message was received, the half-router shall issue a Reject-Message-To-Network for this message with a rejection reason = 1 and discard the message. If another acceptable route is in place, the message shall be forwarded on this route.

#### 6.7.4.1.2 Initiating Network Entity (NE) Procedure

If the initiating NE receives a Reject-Message-To-Network, it shall attempt to determine a new route to the DNET after waiting for a random back-off period. The random back-off period, in seconds, is determined by the initiating NE through the generation of a random number of either 0 or 1 and then multiplying this number by 40. The initiating NE shall not try to re-establish the network connection until the back-off period has expired. If during the back-off period the initiating NE learns of a valid route to the required DNET, the initiating NE shall use this path and consider the network connection re-established. Upon expiration of the back-off period, if the network connection has not been re-established, the initiating NE shall attempt to determine a new route to the DNET using the procedure for establishing a new PTP connection through a half-router as described in 6.7.1.

### 6.7.4.2 Recovering from Duplicate Network Connections

In the unlikely event that two or more PTP connections are made to single DNET, at least one of the connections shall be terminated and the routing tables in all routers shall be made consistent. The procedure to ensure that no loop exists consists of having every half-router examine each received I-Am-Router-To-Network message for another path to any of the half-router's directly connected networks. The existence of a second path to a directly connected network indicates that a loop is formed. If a loop is detected, the half-router shall disconnect its PTP connection thereby breaking the loop.

#### 6.7.4.2.1 Half-Router Procedure for Receipt of Conflicting I-Am-Router-To-Network Messages

If during the initialization or lifetime of a PTP connection a half-router hears an I-Am-Router-To-Network message from the PTP connection containing a DNET to one of the half-router's directly connected networks, the half-router shall immediately terminate the connection.

#### 6.7.4.2.2 Half-Router Procedure for Initiation of I-Am-Router-To-Network Messages

As an added safety measure to ensure that duplicate paths are discovered in a timely manner, a half-router shall broadcast one or more I-Am-Router-To-Network message(s) once every five minutes when a PTP connection is in place. The DNETs in this message shall be all of the DNETs accessible through the PTP connection. In the event this list of DNETs would exceed the maximum NPDU length of the network being utilized, the list shall be divided into segments that fit on the network and sent in consecutive I-Am-Router-To-Network messages.

#### 6.7.4.2.3 Half-Router Procedure for Decrementing the Hop Count

To reduce the number of circularly routed messages in a misconfigured system, BACnet NPDUs contain a hop count that limits the number of routers that shall forward the NPDUs. In routers that provide the capability to configure the amount that the Hop Count field shall be decremented when an NPDUs is forwarded, a network administrator may optimize the damping

of looping messages. One method to do this is to find the path in the network that requires the maximum number of router hops. The amount to decrement the NPDUs Hop Count field in every router on the network is then calculated as the integer division of  $255/(\text{maximum number of router hops})$ . On a PTP connection, the half of the router that forwards the NPDUs onto a non-PTP network shall decrement the Hop Count field.

## 7 DATA LINK/PHYSICAL LAYERS: ISO 8802-3 ("Ethernet") LAN

This clause describes the transport of BACnet LSDUs using the services of the data link and physical mechanisms described in International Standards ISO 8802-2: *Information processing systems- Local area networks- Part 2: Logical link control* and ISO/IEC 8802-3: *Information processing systems- Local area networks- Part 3: Carrier sense multiple access with collision detection (CSMA/CD) access method and physical layer specifications*. The clauses of ISO 8802-2 pertaining to Class I LLC and Type 1 Unacknowledged Connectionless-Mode Service as well as all of ISO/IEC 8802-3, as amended and extended by the International Organization for Standardization, are deemed to be included in this standard by reference.

### 7.1 The Use of ISO 8802-2 Logical Link Control (LLC)

Standard BACnet networks may pass BACnet link service data units (LSDUs) using the data link services of ISO 8802-2 Logical Link Control (LLC). A BACnet LSDU consists of an NPDU constructed as described in Clause 6. BACnet devices using ISO 8802-3 LAN technology shall conform to the requirements of LLC Class I, subject to the constraints specified in this clause. Class I LLC consists of Type 1 LLC - Unacknowledged Connectionless-Mode service. LLC parameters shall be conveyed using the DL-UNITDATA primitives as described in the referenced standards.

All BACnet devices conforming to this section shall be capable of accepting properly formed Unnumbered Information (UI) commands and responding to XID Exchange Identification and TEST commands.

### 7.2 Parameters Required by the LLC Primitives


The DL-UNITDATA primitive requires source address, destination address, data, and priority parameters. The source and destination addresses each consist of the logical concatenation of a medium access control (MAC) address and a link service access point (LSAP). The MAC address is a 6-octet value determined by the network interface hardware. The LSAP is the single-octet value X'82' and is used to indicate that an LSDU contains BACnet data. The data parameter is the NPDU from the network layer. Since the ISO 8802-3 MAC layer only operates at a single priority with only one class of service, the value of the priority parameter is not specified in this standard.

### 7.3 Parameters Required by the MAC Primitives

The ISO/IEC 8802-3 MAC layer primitives are the MA-DATA.request and MA-DATA.indication. These convey the encoded LLC data using the source and destination MAC addresses described above. Again, since only one class of service is provided, the value of the 'service\_class' parameter is unspecified. See Figure 7-1.

### 7.4 Physical Media

The physical media specified by ISO 8802-3 and subsequent addenda are equally acceptable.

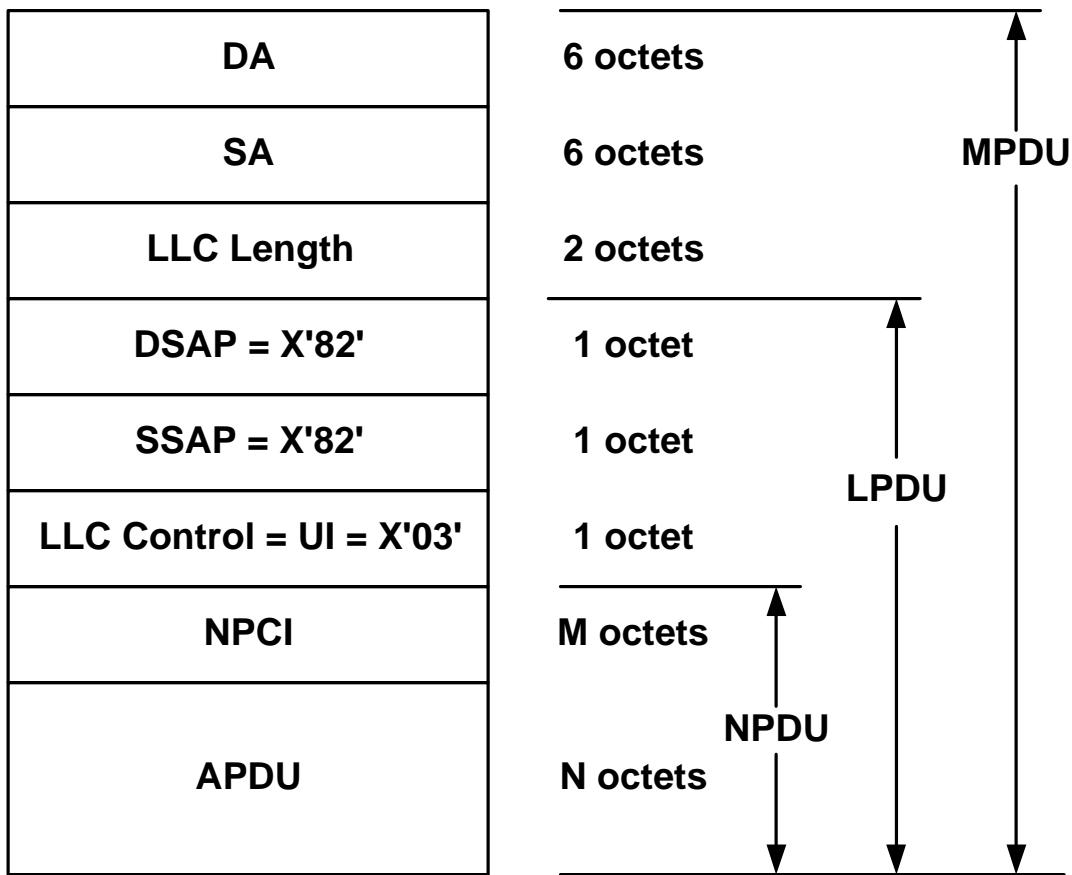

**Figure 7-1.** Format of an MPDU on an ISO 8802-3 LAN.

## 8 DATA LINK/PHYSICAL LAYERS: ARCNET LAN

This clause describes the transport of BACnet LSDUs using the services of the data link and physical mechanisms described in ATA 878.1, *ARCNET Local Area Network Standard*. The *ARCNET Local Area Network Standard*, as amended and extended by the ARCNET Trade Association, is deemed to be included in this standard by reference.

### 8.1 The Use of ISO 8802-2 Logical Link Control (LLC)

Standard BACnet networks may pass BACnet link service data units (LSDUs) using the data link services of ISO 8802-2 LLC. A BACnet LSDU consists of an NPDU constructed as described in Clause 6. BACnet devices using ARCNET LAN technology shall conform to the requirements of LLC Class I, subject to the constraints specified in this clause. Class I LLC service consists of Type 1 LLC - Unacknowledged Connectionless-Mode service. LLC parameters shall be conveyed using the DL-UNITDATA primitives as described in the referenced standards.

The mapping of these primitives onto the ARCNET MAC layer primitives is described in 8.3.

All BACnet devices conforming to this section shall be capable of accepting and responding to XID Exchange Identification and TEST commands.

### 8.2 Parameters Required by the LLC Primitives

The DL-UNITDATA primitive requires source address, destination address, data, and priority parameters. The source and destination addresses each consist of the logical concatenation of a medium access control (MAC) address, link service access point (LSAP), and a system code (SC). The MAC address is a 1-octet value determined by the network interface hardware; the LSAP used to indicate that an LSDU contains BACnet data is the single octet value X'82'; and the SC used to indicate a BACnet frame is the single-octet value X'CD'. The data parameter is the NPDU from the network layer. Since the ARCNET MAC sublayer only operates at a single priority with only one class of service, the value of the priority parameter is not specified in this standard.

### 8.3 Mapping the LLC Services to the ARCNET MAC Layer

The Type 1 Unacknowledged Connectionless LLC service shall map directly onto the ARCNET MA\_DATA request primitive. Although a successful transmission results in an acknowledgment from the destination MAC sublayer, no indication is expected, or provided, to the LLC sublayer.

ARCNET does not permit MSDUs of length 253, 254, or 255 octets. A BACnet LPDU of length 0 to 252 octets shall be conveyed as the entire MSDU of an ARCNET MPDU (frame) with a single Information length (IL) octet. A BACnet LPDU of length 253 to 504 octets shall be conveyed as the initial octets of the MSDU of an ARCNET MPDU with two Information length (IL) octets. In this case, the LPDU shall be followed by three octets of unspecified value, such that the net length of the MSDU is 256 to 507 octets. When an ARCNET MPDU with two Information length octets is received, the final 3 octets of the MSDU shall be ignored.


An LPDU longer than 504 octets cannot be conveyed via ARCNET.

### 8.4 Parameters Required by the MAC Primitives

The ARCNET MAC layer primitives are MA-DATA.request, MA-DATA.indication, and MA-DATA.confirmation. These convey the encoded LLC data (MSDU) using the source and destination MAC addresses described above in conjunction with the BACnet system code. See Figure 8-1.

### 8.5 Physical Media

The physical media specified by the ARCNET standard are equally acceptable.

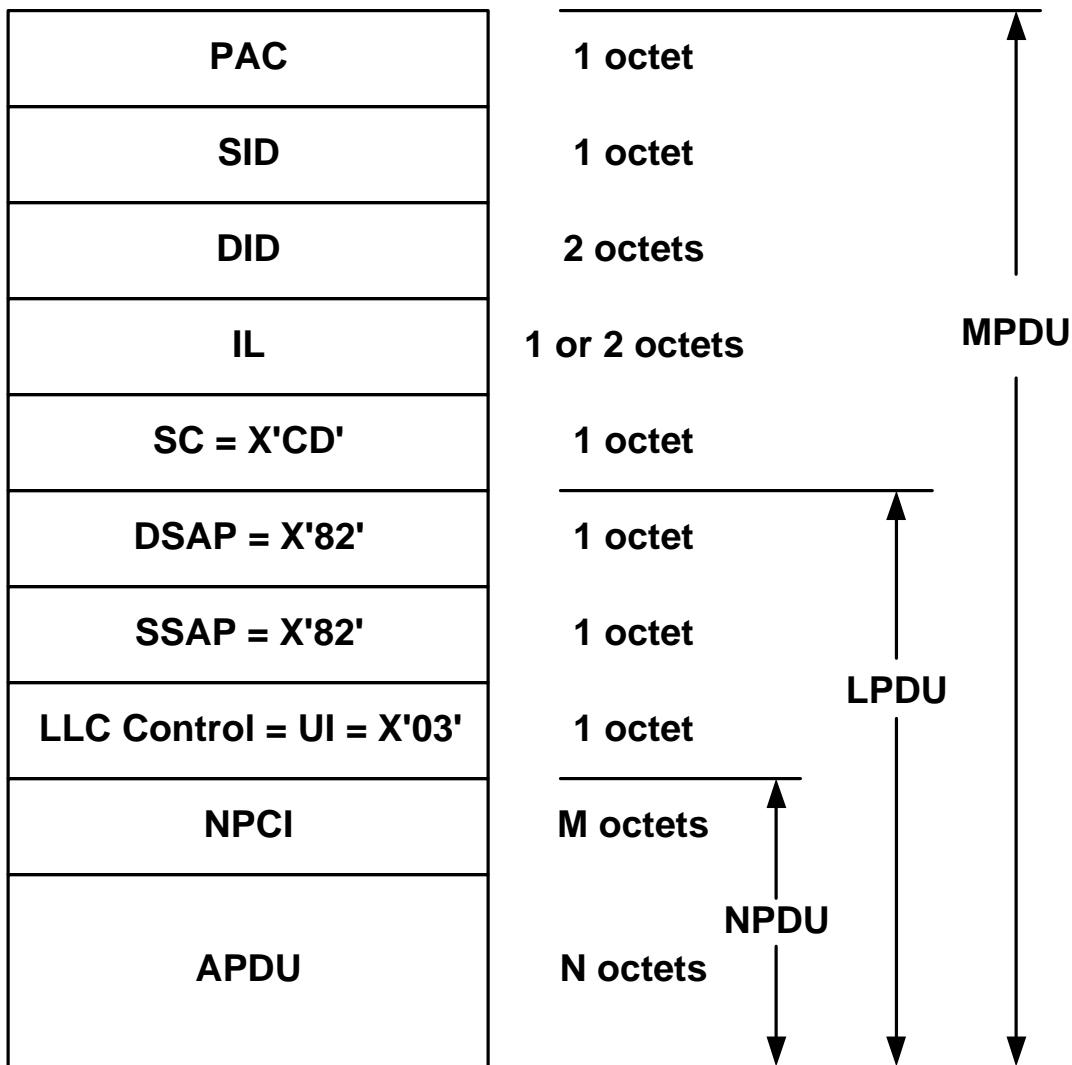

**Figure 8-1.** Format of an MPDU on an ARCNET LAN.

## 9 DATA LINK/PHYSICAL LAYERS: MASTER-SLAVE/TOKEN PASSING (MS/TP) LAN

This clause describes a Master-Slave/Token-Passing (MS/TP) data link protocol, which provides the same services to the network layer as ISO 8802-2 Logical Link Control. It uses services provided by the EIA-485 physical layer. Relevant clauses of EIA-485 are deemed to be included in this standard by reference. The following hardware is assumed:

- (a) A UART (Universal Asynchronous Receiver/Transmitter) capable of transmitting and receiving eight data bits with one stop bit and no parity.
- (b) An EIA-485 transceiver whose driver may be disabled.
- (c) A timer with a resolution of five milliseconds or less.

### 9.1 Service Specification

MS/TP is not intended to be a general purpose LAN under ISO 8802-2. Instead, MS/TP includes a data link layer sufficient to provide to the BACnet network layer the same services as are offered by ISO 8802-2 Type 1.

This subclause describes the primitives and parameters associated with the provided services. The parameters are described in an abstract sense, which does not constrain the implementation method. Primitives and their parameters are described in a form that echoes their specification in ISO 8802-2. This is intended to provide a consistent interface to the BACnet network layer.

#### 9.1.1 DL-UNITDATA.request

##### 9.1.1.1 Function

This primitive is the service request primitive for the unacknowledged connectionless-mode data transfer service.

##### 9.1.1.2 Semantics of the Service Primitive

The primitive shall provide parameters as follows:

```
DL-UNITDATA.request (
    source_address,
    destination_address,
    data,
    priority,
    data_expecting_reply
)
```

Each source and destination address consists of the logical concatenation of a medium access control (MAC) address and a link service access point (LSAP). For the case of MS/TP devices, since MS/TP supports only the BACnet network layer, the LSAP is omitted and these parameters consist of only the device MAC address.

The 'data' parameter specifies the link service data unit (LSDU) to be transferred by the MS/TP entity.

The 'priority' parameter specifies the priority desired for the data unit transfer. The priority parameter is ignored by MS/TP.

The 'data\_expecting\_reply' parameter specifies whether or not the data unit to be transferred expects a reply.

##### 9.1.1.3 When Generated

This primitive is passed from the network layer to the MS/TP entity to request that a network protocol data unit (NPDU) be sent to one or more remote LSAPs using unacknowledged connectionless-mode procedures.

##### 9.1.1.4 Effect on Receipt

Receipt of this primitive causes the MS/TP entity to attempt to send the NPDU using unacknowledged connectionless-mode procedures.

## 9.1.2 DL-UNITDATA.indication

### 9.1.2.1 Function

This primitive is the service indication primitive for the unacknowledged connectionless-mode data transfer service.

### 9.1.2.2 Semantics of the Service Primitive

DL-UNITDATA.indication (

```
source_address,  
destination_address,  
data,  
priority,  
data_expecting_reply  
)
```

Each source and destination address consists of the logical concatenation of a medium access control (MAC) address and a link service access point (LSAP). For the case of MS/TP devices, since MS/TP supports only the BACnet network layer, the LSAP is omitted and these parameters consist of only the device MAC address.

The 'data' parameter specifies the link service data unit that has been received by the MS/TP entity.

The 'priority' parameter specifies the priority desired for the data unit transfer. The priority parameter is ignored by MS/TP.

The 'data\_expecting\_reply' parameter specifies whether or not the data unit that has been received expects a reply.

### 9.1.2.3 When Generated

This primitive is passed from the MS/TP entity to the network layer to indicate the arrival of an NPDU from the specified remote entity.

### 9.1.2.4 Effect on Receipt

The effect of receipt of this primitive by the network layer is unspecified.

## 9.1.3 Test\_Request and Test\_Response

ISO 8802-2 Type 1 defines XID and TEST PDUs and procedures but does not define an interface to invoke them from the network layer. Test\_Request and Test\_Response PDUs and procedures have been defined for MS/TP to accomplish the same functions. Because MS/TP supports only the equivalent of a single LSAP, these PDUs are sufficient to implement the relevant aspects of XID as well.

The response with Test\_Response to a received Test\_Request PDU is mandatory for all MS/TP nodes. The origination of a Test\_Request PDU is optional.

### 9.1.3.1 Use of Test\_Request and Test\_Response for ISO 8802-2 TEST Functions

The TEST function provides a facility to conduct loopback tests of the MS/TP to MS/TP transmission path. Successful completion of the test consists of sending a Test\_Request PDU with a particular information field to the designated destination and receiving, in return, the identical information field in a Test\_Response PDU.

If a receiving node can successfully receive and return the information field, it shall do so. If it cannot receive and return the entire information field but can detect the reception of a valid Test\_Request frame (for example, by computing the CRC on octets as they are received), then the receiving node shall discard the information field and return a Test\_Response containing no information field. If the receiving node cannot detect the valid reception of frames with overlength information fields, then no response shall be returned.

### 9.1.3.2 Use of Test\_Request and Test\_Response for ISO 8802-2 XID Functions

ISO 8802-2 describes seven possible uses of XID:

- (a) XID can be used with a null DSAP and null SSAP as an "Are You There" test. Since MS/TP supports only the equivalent of a single LSAP, the Test\_Request PDU with no data can perform this function.
- (b) XID can be used with a group or global DSAP to identify group members or all active stations. Since MS/TP supports only the equivalent of a single LSAP, the Test\_Request PDU with no data can perform this function.
- (c) XID can be used for a duplicate address check. This function is not applicable to MS/TP. EIA-485 token bus networks such as MS/TP will generally not achieve reliable operation if multiple nodes exist with the same address, since collisions will occur during token passing.
- (d) Class II LLCs may use XID to determine window size. MS/TP does not support Class II operation.
- (e) XID may be used to identify the class of each LLC. Since MS/TP supports only Class I operation, this is a trivial operation.
- (f) XID may be used to identify the service types supported by each LSAP. Since MS/TP supports only Class I operation, this is a trivial operation.
- (g) An LLC can announce its presence by broadcasting an XID with global DSAP. Since MS/TP supports only one LSAP, the equivalent may be accomplished by broadcasting a Test\_Response PDU.

## 9.2 Physical Layer

### 9.2.1 Medium

An MS/TP EIA-485 network shall use shielded, twisted-pair cable with characteristic impedance between 100 and 130 ohms. Distributed capacitance between conductors shall be less than 100 pF per meter (30 pF per foot). Distributed capacitance between conductors and shield shall be less than 200 pF per meter (60 pF per foot). Foil or braided shields are acceptable. The maximum recommended length of an MS/TP segment is 1200 meters (4000 feet) with AWG 18 (0.82 mm<sup>2</sup> conductor area) cable. The use of greater distances and/or different wire gauges shall comply with the electrical specifications of EIA-485.


### 9.2.2 Connections and Terminations

The maximum number of nodes per segment shall be 32 (as specified by the EIA-485 standard). Additional nodes may be accommodated by the use of repeaters, as described in 9.9.

Because MS/TP uses NRZ encoding, the polarity of the connection to the cable is important. The non-inverting input of the EIA-485 transceiver is designated in this specification as "plus" or "+" and the inverting input as "minus" or "-". It is recommended, but not required, that the black or red insulated wire of the twisted pair be designated as "plus" and the white, clear, or green insulated wire be designated as "minus." The method of connection between the interface and the cable is not part of this specification.

An MS/TP EIA-485 network shall have no T connections. A termination resistance of 120 ohms plus or minus 5% shall be connected at each of the two ends of the segment medium. No other termination resistors are allowed at intermediate nodes.

Each MS/TP segment shall be provided with network bias resistors, connected as shown in Figure 9-1, such that an undriven communications line will be held in a guaranteed logical one state. The bias provides a reliable way for stations to detect the presence or absence of signals on the line. An unbiased line will take an indeterminate state in the absence of any driving node. Under some conditions, noise or cross-talk might result in some nodes receiving spurious octets from the undriven idle line.

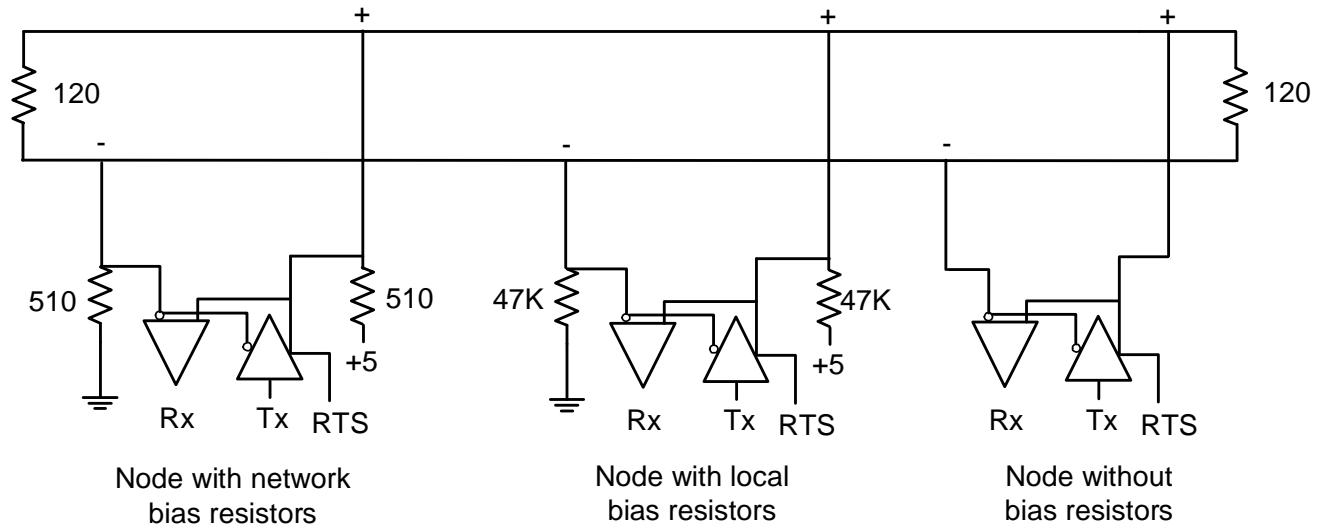

**Figure 9-1.** EIA-485 network showing three types of nodes.

At least one set, and no more than two sets, of network bias resistors shall exist for each segment. Each set of network bias resistors shall consist of two resistors, each having a value of 510 ohms, plus or minus 5%, connected as shown in Figure 9-1. If two sets of network bias resistors are provided, they shall be placed at two distinct nodes, preferably at the ends of the segment, so that proper bias levels can be maintained even if one of the bias nodes loses power. Other nodes may be provided with local bias resistors as long as each local bias resistor value is 47K ohms or greater. The use of local bias resistors is optional.

For any physical segment that runs between buildings there shall be at least 1500 V of electrical isolation between the EIA-485 signal conductors and the digital ground of any node on that physical segment.

The shield shall be grounded at one end only to prevent ground currents from being created.

### 9.2.3 Timing


Octets shall be transmitted using non-return to zero (NRZ) encoding with one start bit, eight data bits, no parity, and one stop bit. The start bit shall have a value of zero, while the stop bit shall have a value of one. The data bits shall be transmitted with the least significant bit first. This is illustrated in Figure 9-2.

Although asynchronous framing is used, there shall be no more than  $T_{frame\_gap}$  of idle line (logical ones or stop bits) between any two octets of a frame.

The standard baud rate shall be 9600, plus or minus 1%. Any or all of the additional baud rates 19200, 38400, and 76800 may be supported at the vendor's option, but the 9600 baud shall be selectable.

**Transmitter enable:** A node shall enable its EIA-485 driver before it generates the leading edge of the first start bit of a frame. The node shall drive the line to the logical one state during the time between the enable and the leading edge of the first start bit of a frame.

Transmitter disable: A node shall not disable its EIA-485 driver until the stop bit of the final octet of a frame has been generated. The node shall disable its EIA-485 driver within  $T_{postdrive}$  after the beginning of the stop bit of the final octet of a frame in order that it not interfere with any subsequent frame transmitted by another node. This specification allows, but does not encourage, the use of a "padding" octet after the final octet of a frame in order to facilitate the use of common UART transmit interrupts for driver disable control. If a "padding" octet is used, its value shall be X'FF. The "padding" octet is not considered part of the frame, that is, it shall be included within  $T_{postdrive}$ .

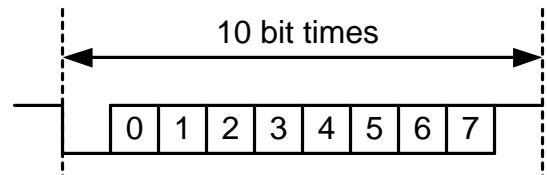

**Figure 9-2.** Octet framing.

Receive to Transmit turn-around: A node shall not enable its EIA-485 driver for at least  $T_{turnaround}$  after the node receives the final stop bit of any octet.

### 9.3 MS/TP Frame Format

All frames are of the following format:

Preamble	two octet preamble: X'55', X'FF'
Frame Type	one octet
Destination Address	one octet address
Source Address	one octet address
Length	two octets, most significant octet first
Header CRC	one octet
Data	(present only if Length is non-zero)
Data CRC	(present only if Length is non-zero) two octets, least significant octet first
(pad)	(optional) at most one octet of padding: X'FF'

The Frame Type is used to distinguish between different types of MAC frames. Defined types are:

00	Token
01	Poll For Master
02	Reply To Poll For Master
03	Test_Request
04	Test_Response
05	BACnet Data Expecting Reply
06	BACnet Data Not Expecting Reply
07	Reply Postponed

Frame Types 8 through 127 are reserved by ASHRAE. Frame Types 128 through 255 are available to vendors for proprietary (non-BACnet) frames. Use of proprietary frames might allow a Brand-X controller, for example, to send proprietary frames to other Brand-X controllers that do not implement BACnet while using the same medium to send BACnet frames to a Brand-Y panel that does implement BACnet. Token, Poll For Master, and Reply To Poll For Master frames shall be understood by both proprietary and BACnet master nodes.

The Destination and Source Addresses are one octet each. A Destination Address of 255 (XFF) denotes broadcast. A Source Address of 255 is not allowed. Addresses 0 to 127 are valid for both master and slave nodes. Addresses 128 to 254 are valid only for slave nodes.

The Length field specifies the length in octets of the Data field.

The Data and Data CRC fields are conditional on the Frame Type and the Length, as specified in the description of each Frame Type. If the Length field is zero, that is, if both length octets are zero, then the Data and Data CRC fields shall not be present.

The length of the Data field shall be between 0 and 501 octets.

Subclause 9.6 and Annex G describe in detail the generation and checking of the Header and Data CRC octets.

#### 9.3.1 Frame Type 00: Token

The Token frame is used to pass network mastership to the destination node. The use of the Token frame is described in detail in 9.5.

There are no data octets in Token frames.

### 9.3.2 Frame Type 01: Poll For Master

The Poll For Master frame is transmitted by master nodes during configuration and periodically during normal network operation. It is used to discover the presence of other master nodes on the network and to determine a successor node in the token ring. The use of the Poll For Master frame in the token network is described in detail in 9.5.

There are no data octets in Poll For Master frames.

Both master and slave nodes shall expect to receive Poll For Master frames. Master nodes shall respond to Poll For Master Frames as described in 9.5.6.2. Slave nodes shall ignore Poll For Master frames, as described in 9.5.7.2.

### 9.3.3 Frame Type 02: Reply To Poll For Master

This frame is transmitted as a reply to the Poll For Master frame. It is used to indicate that the node sending the frame wishes to enter the token ring. The use of this frame in the token network is described in detail in 9.5.

There are no data octets in Reply To Poll For Master frames.

### 9.3.4 Frame Type 03: Test\_Request

This frame is used to initiate a loopback test of the MS/TP to MS/TP transmission path. The use of this frame in the token network is described in detail in 9.1.3. The length of the data portion of a Test\_Request frame may range from 0 to 501 octets.

### 9.3.5 Frame Type 04: Test\_Response

This frame is used to reply to Test\_Request frames. The use of this frame in the token network is described in detail in 9.1.3. The length of the data portion of a Test\_Response frame may range from 0 to 501 octets. The data, if present, shall be that which was present in the initiating Test\_Request.

### 9.3.6 Frame Type 05: BACnet Data Expecting Reply

This frame is used by master nodes to convey the data parameter of a DL\_UNITDATA.request whose DER parameter is TRUE. The length of the data portion of a BACnet Data Expecting Reply frame may range from 0 to 501 octets.

### 9.3.7 Frame Type 06: BACnet Data Not Expecting Reply

This frame is used to convey the data parameter of a DL\_UNITDATA.request whose DER parameter is FALSE. The length of the data portion of a BACnet Data Not Expecting Reply frame may range from 0 to 501 octets.

### 9.3.8 Frame Type 07: Reply Postponed

This frame is used by master nodes to defer sending a reply to a previously received BACnet Data Expecting Reply frame. The use of this frame in the token network is described in detail in 9.5.6.

There are no data octets in Reply Postponed frames.

### 9.3.9 Frame Types 128 through 255: Proprietary Frames

These frames are available to vendors as proprietary (non-BACnet) frames. The first two octets of the Data field shall specify the unique vendor identification code, most significant octet first, for the type of vendor-proprietary frame to be conveyed. The length of the data portion of a Proprietary frame shall be in the range of 2 to 501 octets.

## 9.4 Overview of the MS/TP Network

MS/TP uses a token to control access to a bus network. A master node may initiate the transmission of a data frame when it holds the token. Both master and slave nodes may transmit data frames in response to requests from master nodes. After sending at most  $N_{max\_info\_frames}$  data frames (and awaiting any expected replies), a master node shall pass the token to the next master node.

It is generally easier to deal with a lost token than with the presence of two tokens in a ring: a simple timeout will detect token loss, and regeneration of the token and recovery of the ring may proceed in an orderly fashion. If more than one token exists, however, collisions are likely. These will disrupt communications and slow throughput but may not be severe enough to cause loss of the tokens. In such a case, a persistent reduction in throughput might result. For this reason, the ring maintenance rules in this clause favor the loss of the token over the creation of a second token.

Token frames are not acknowledged. If the acknowledgment of a token were lost, the token's sender might retry, resulting in the creation of two tokens. Instead, after a node passes the token, it listens to see if the intended receiver node begins using the token. Usage in this case is defined as the reception of  $N_{min\_octets}$  octets from the network within  $T_{usage\_timeout}$  after the final octet of the token frame is transmitted.

Most token bus networks, such as ARCNET, do not distinguish between requests and replies: both are passed in the same type of frames, which are sent only when the sending node has the token. Since MS/TP defines slave nodes that never hold the token, a means must be provided to allow replies to be returned from slave devices. For simplicity, the same mechanism is used for replies returned from master nodes.

When a request that expects a reply is sent to an MS/TP node, the sender shall wait for the reply to be returned before passing the token. If the responding node is a master, it may return the reply or it may return a Reply Postponed frame, indicating that the actual reply will be returned later, when the replying node holds the token.

## 9.5 MS/TP Medium Access Control

The description that follows defines variables and procedures that may in some ways resemble the variables and procedures used in various computer languages. This description is in no way intended to prescribe the method of implementation. An implementation may be constructed in any fashion desired as long as it matches the behavior described by this standard. The description that follows is intended only to specify that behavior clearly and precisely.

### 9.5.1 UART Receiver Model

In this subclause, we present a model of the receiver interface to a UART as a data register and two Boolean flags. These are intended to closely resemble the functions of commercial UART chips but in a generic and non-prescriptive fashion. The model is used by the procedural and state machine descriptions.

#### 9.5.1.1 DataRegister

The DataRegister holds the octet most recently received. The contents of this register after the occurrence of a framing or overrun error are not specified.

#### 9.5.1.2 DataAvailable

The flag DataAvailable is TRUE if an octet is available in DataRegister. A means of setting this flag to FALSE when the associated data have been read from DataRegister shall be provided. Many common UARTs set DataAvailable FALSE automatically when DataRegister is read.

#### 9.5.1.3 ReceiveError

The flag ReceiveError is TRUE if an error is detected during the reception of an octet. Many common UARTs detect several types of receive errors, in particular framing errors and overrun errors. ReceiveError shall be TRUE if any of these errors is detected.

A framing error occurs if a logical zero is received when a stop bit (logical one) is expected.

An overrun error occurs if an octet is received before an earlier octet is read from DataRegister. In general, the occurrence of overrun errors is evidence of improper design. However, it is recognized that critical system events may cause overrun errors to occur from time to time. The inclusion of this error in the state machine processing ensures that such errors are handled in a well-defined fashion.

A means of setting ReceiveError to FALSE when the associated error has been recognized shall be provided.

### 9.5.2 Variables

A number of variables and timers are used in the descriptions that follow:

**DataCRC**      Used to accumulate the CRC on the data field of a frame.

**DataLength**      Used to store the data length of a received frame.

<b>DestinationAddress</b>	Used to store the destination address of a received frame.
<b>EventCount</b>	Used to count the number of received octets or errors. This is used in the detection of link activity.
<b>FrameType</b>	Used to store the frame type of a received frame.
<b>FrameCount</b>	The number of frames sent by this node during a single token hold. When this counter reaches the value $N_{max\_info\_frames}$ , the node must pass the token.
<b>HeaderCRC</b>	Used to accumulate the CRC on the header of a frame.
<b>Index</b>	Used as an index by the Receive State Machine, up to a maximum value of InputBufferSize.
<b>InputBuffer[]</b>	An array of octets, used to store octets as they are received. InputBuffer is indexed from 0 to InputBufferSize-1. The maximum size of a frame is 501 octets. A smaller value for InputBufferSize may be used by some implementations.
<b>InputBufferSize</b>	The number of elements in the array InputBuffer[].
<b>NS</b>	"Next Station," the MAC address of the node to which This Station passes the token. If the Next Station is unknown, NS shall be equal to TS.
<b>PS</b>	"Poll Station," the MAC address of the node to which This Station last sent a Poll For Master. This is used during token maintenance.
<b>ReceivedInvalidFrame</b>	A Boolean flag set to TRUE by the Receive State Machine if an error is detected during the reception of a frame. Set to FALSE by the main state machine.
<b>ReceivedValidFrame</b>	A Boolean flag set to TRUE by the Receive State Machine if a valid frame is received. Set to FALSE by the main state machine.
<b>RetryCount</b>	A counter of transmission retries used for Token and Poll For Master transmission.
<b>SilenceTimer</b>	A timer with nominal 5 millisecond resolution used to measure and generate silence on the medium between octets. It is incremented by a timer process and is cleared by the Receive State Machine when activity is detected and by the SendFrame procedure as each octet is transmitted. Since the timer resolution is limited and the timer is not necessarily synchronized to other machine events, a timer value of N will actually denote intervals between N-1 and N.
<b>SoleMaster</b>	A Boolean flag set to TRUE by the master machine if this node is the only known master node.
<b>SourceAddress</b>	Used to store the Source Address of a received frame.
<b>TokenCount</b>	The number of tokens received by this node. When this counter reaches the value $N_{poll}$ , the node polls the address range between <b>TS</b> and <b>NS</b> for additional master nodes. <b>TokenCount</b> is set to one at the end of the polling process.
<b>TS</b>	"This Station," the MAC address of this node. TS is generally read from a hardware DIP switch, or from nonvolatile memory. Valid values for TS are 0 to 254. The value 255 is used to denote broadcast when used as a destination address but is not allowed as a value for TS.

### 9.5.3 Parameters


Parameter values used in the description:

$N_{max\_info\_frames}$	This parameter represents the value of the Max_Info_Frames property of the node's Device object. The value of Max_Info_Frames specifies the maximum number of information frames the node may send before it must
-------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	pass the token. Max_Info_Frames may have different values on different nodes. This may be used to allocate more or less of the available link bandwidth to particular nodes. If Max_Info_Frames is not writable in a node, its value shall be 1.
N <sub>max_master</sub>	This parameter represents the value of the Max_Master property of the node's Device object. The value of Max_Master specifies the highest allowable address for master nodes. The value of Max_Master shall be less than or equal to 127. If Max_Master is not writable in a node, its value shall be 127.
N <sub>poll</sub>	The number of tokens received or used before a Poll For Master cycle is executed: 50.
N <sub>retry_token</sub>	The number of retries on sending Token: 1.
N <sub>min_octets</sub>	The minimum number of DataAvailable or ReceiveError events that must be seen by a receiving node in order to declare the line "active": 4.
T <sub>frame_abort</sub>	The minimum time without a DataAvailable or ReceiveError event within a frame before a receiving node may discard the frame: 60 bit times. (Implementations may use larger values for this timeout, not to exceed 100 milliseconds.)
T <sub>frame_gap</sub>	The maximum idle time a sending node may allow to elapse between octets of a frame the node is transmitting: 20 bit times.
T <sub>no_token</sub>	The time without a DataAvailable or ReceiveError event before declaration of loss of token: 500 milliseconds.
T <sub>postdrive</sub>	The maximum time after the end of the stop bit of the final octet of a transmitted frame before a node must disable its EIA-485 driver: 15 bit times.
T <sub>reply_delay</sub>	The maximum time a node may wait after reception of a frame that expects a reply before sending the first octet of a reply or Reply Postponed frame: 250 milliseconds.
T <sub>reply_timeout</sub>	The minimum time without a DataAvailable or ReceiveError event that a node must wait for a station to begin replying to a confirmed request: 255 milliseconds. (Implementations may use larger values for this timeout, not to exceed 300 milliseconds.)
T <sub>roff</sub>	Repeater turnoff delay. The duration of a continuous logical one state at the active input port of an MS/TP repeater after which the repeater will enter the IDLE state: 29 bit times < T <sub>roff</sub> < 40 bit times.
T <sub>slot</sub>	The width of the time slot within which a node may generate a token: 10 milliseconds.
T <sub>turnaround</sub>	The minimum time after the end of the stop bit of the final octet of a received frame before a node may enable its EIA-485 driver: 40 bit times.
T <sub>usage_delay</sub>	The maximum time a node may wait after reception of the token or a Poll For Master frame before sending the first octet of a frame: 15 milliseconds.
T <sub>usage_timeout</sub>	The minimum time without a DataAvailable or ReceiveError event that a node must wait for a remote node to begin using a token or replying to a Poll For Master frame: 20 milliseconds. (Implementations may use larger values for this timeout, not to exceed 100 milliseconds.)

#### 9.5.4 Receive Frame Finite State Machine

This section describes the reception of an MS/TP frame by a BACnet device. The description of operation is as a finite state machine. Figure 9-3 shows the Receive Frame state machine, which is described fully in this clause. Each state is given a name, specified in all capital letters. Transitions are also named, in mixed upper- and lowercase letters. Transitions are described as a series of conditions followed by a series of actions to be taken if the conditions are met. The final action in each transition is entry into a new state, which may be the same as the current state.

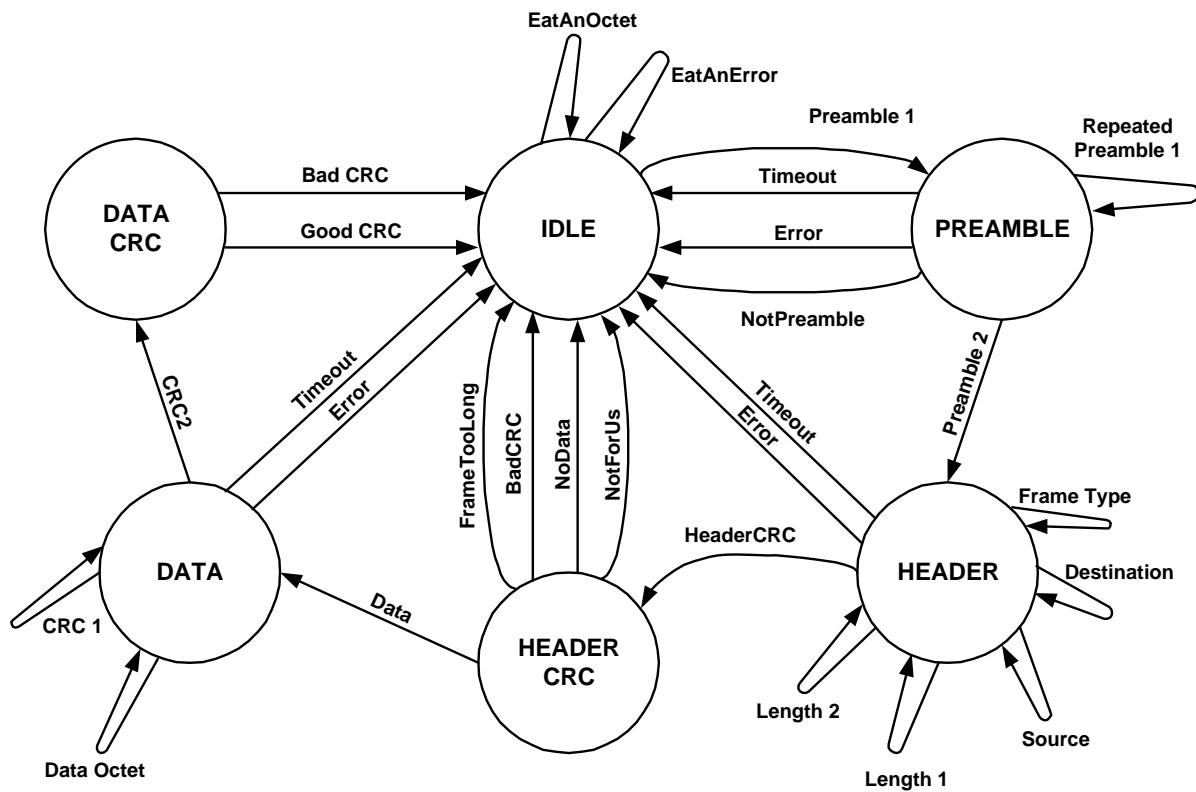

**Figure 9-3.** Receive Frame State Machine.

The Receive Frame state machine operates independently from the MS/TP Master Node or Slave Node machine, communicating with it by means of flags and other variables. The description assumes that the Master Node or Slave Node state machine can process received frames and other indications from the Receive Frame state machine before the next frame begins. The means by which this behavior is implemented are a local matter.

This description assumes that the node will not receive its own transmissions. If a given implementation does receive its own transmissions, then the implementation shall be constructed so that the Receive Frame machine will ignore the transmissions.

#### 9.5.4.1 IDLE

In the IDLE state, the node waits for the beginning of a frame.

##### EatAnError

If ReceiveError is TRUE,

then set ReceiveError to FALSE; set SilenceTimer to zero; increment EventCount; and enter the IDLE state to wait for the start of a frame.

##### EatAnOctet

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is not X'55',

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; and enter the IDLE state to wait for the start of a frame.

##### Preamble1

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is X '55', then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; and enter the PREAMBLE state to receive the remainder of the frame.

#### 9.5.4.2 PREAMBLE

In the PREAMBLE state, the node waits for the second octet of the preamble.

Timeout

If SilenceTimer is greater than  $T_{frame\_abort}$ ,

then a correct preamble has not been received. Enter the IDLE state to wait for the start of a frame.

Error

If ReceiveError is TRUE,

then set ReceiveError to FALSE; set SilenceTimer to zero; increment EventCount; and enter the IDLE state to wait for the start of a frame.

RepeatedPreamble1

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is X '55',

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; and enter the PREAMBLE state to wait for the second preamble octet.

NotPreamble

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is not X 'FF' or X '55',

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; and enter the IDLE state to wait for the start of a frame.

Preamble2

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is X 'FF',

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; set Index to zero; set HeaderCRC to X 'FF'; and enter the HEADER state to receive the remainder of the frame.

#### 9.5.4.3 HEADER

In the HEADER state, the node waits for the fixed message header.

Timeout

If SilenceTimer is greater than  $T_{frame\_abort}$ ,

then set ReceivedInvalidFrame to TRUE to indicate that an error has occurred during the reception of a frame, and enter the IDLE state to wait for the start of a frame.

Error

If ReceiveError is TRUE,

then set ReceiveError to FALSE; set SilenceTimer to zero; increment EventCount; set ReceivedInvalidFrame to TRUE to indicate that an error has occurred during the reception of a frame; and enter the IDLE state to wait for the start of a frame.

**FrameType**

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 0,

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; accumulate the contents of DataRegister into HeaderCRC; save the contents of DataRegister as FrameType; set Index to 1; and enter the HEADER state.

**Destination**

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 1

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; accumulate the contents of DataRegister into HeaderCRC; save the contents of DataRegister as DestinationAddress; set Index to 2; and enter the HEADER state.

**Source**

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 2,

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; accumulate the contents of DataRegister into HeaderCRC; save the contents of DataRegister as SourceAddress; set Index to 3; and enter the HEADER state.

**Length1**

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 3,

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; accumulate the contents of DataRegister into HeaderCRC; multiply the contents of DataRegister by 256 and save the result as DataLength; set Index to 4; and enter the HEADER state.

**Length2**

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 4,

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; accumulate the contents of DataRegister into HeaderCRC; add the contents of DataRegister to DataLength and save the result as DataLength; set Index to 5; and enter the HEADER state.

**HeaderCRC**

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 5,

then set DataAvailable to FALSE; set SilenceTimer to zero; increment EventCount; accumulate the contents of DataRegister into HeaderCRC; and enter the HEADER\_CRC state.

**9.5.4.4 HEADER\_CRC**

In the HEADER\_CRC state, the node validates the CRC on the fixed message header.

**BadCRC**

If the value of HeaderCRC is not X '55',

then set ReceivedInvalidFrame to TRUE to indicate that an error has occurred during the reception of a frame, and enter the IDLE state to wait for the start of the next frame.

**NotForUs**

If the value of the HeaderCRC is X '55' and the value of DestinationAddress is not equal to either TS (this station) or 255 (broadcast),

then enter the IDLE state to wait for the start of the next frame.

**FrameTooLong**

If the value of the HeaderCRC is X '55' and the value of DestinationAddress is equal to either TS (this station) or 255 (broadcast) and DataLength is greater than InputBufferSize,

then set ReceivedInvalidFrame to TRUE to indicate that a frame with an illegal or unacceptable data length has been received, and enter the IDLE state to wait for the start of the next frame.

**NoData**

If the value of HeaderCRC is X '55' and the value of DestinationAddress is equal to either TS (this station) or 255 (broadcast) and DataLength is zero,

then set ReceivedValidFrame to TRUE to indicate that a frame with no data has been received, and enter the IDLE state to wait for the start of the next frame.

**Data**

If the value of HeaderCRC is X'55' and the value of DestinationAddress is equal to either TS (this station) or 255 (broadcast) and DataLength is not zero and DataLength is less than or equal to InputBufferSize,

then set Index to zero; set DataCRC to X'FFFF'; and enter the DATA state to receive the data portion of the frame.

**9.5.4.5 DATA**

In the DATA state, the node waits for the data portion of a frame.

**Timeout**

If SilenceTimer is greater than  $T_{frame\_abort}$ ,

then set ReceivedInvalidFrame to TRUE to indicate that an error has occurred during the reception of a frame, and enter the IDLE state to wait for the start of the next frame.

**Error**

If ReceiveError is TRUE,

then set ReceiveError to FALSE; set SilenceTimer to zero; set ReceivedInvalidFrame to TRUE to indicate that an error has occurred during the reception of a frame; and enter the IDLE state to wait for the start of the next frame.

**DataOctet**

If ReceiveError is FALSE and DataAvailable is TRUE and Index is less than DataLength,

then set DataAvailable to FALSE; set SilenceTimer to zero; accumulate the contents of DataRegister into DataCRC; save the contents of DataRegister at InputBuffer[Index]; increment Index by 1; and enter the DATA state.

**CRC1**

If ReceiveError is FALSE and DataAvailable is TRUE and Index is equal to DataLength,

then set DataAvailable to FALSE; set SilenceTimer to zero; accumulate the contents of DataRegister into DataCRC; increment Index by 1; and enter the DATA state.

**CRC2**

If ReceiveError is FALSE and DataAvailable is TRUE and Index is equal to DataLength plus 1,

then set DataAvailable to FALSE; set SilenceTimer to zero; accumulate the contents of DataRegister into DataCRC; and enter the DATA\_CRC state.

**9.5.4.6 DATA\_CRC**

In the DATA\_CRC state, the node validates the CRC of the message data.

**BadCRC**

If the value of DataCRC is not X'F0B8',

then set ReceivedInvalidFrame to TRUE to indicate that an error has occurred during the reception of a frame, and enter the IDLE state to wait for the start of the next frame.

**GoodCRC**

If the value of DataCRC is X'F0B8',

then set ReceivedValidFrame to TRUE to indicate the complete reception of a valid frame, and enter the IDLE state to wait for the start of the next frame.

**9.5.5 The SendFrame Procedure**

The transmission of an MS/TP frame proceeds as follows:

## Procedure SendFrame

- (a) If SilenceTimer is less than  $T_{turnaround}$ , wait ( $T_{turnaround} - \text{SilenceTimer}$ ) in order to avoid line contention.
- (b) Disable the receiver, and enable the transmit line driver.
- (c) Transmit the preamble octets X'55', X'FF'. As each octet is transmitted, set SilenceTimer to zero.
- (d) Initialize HeaderCRC to X'FF'.
- (e) Transmit the Frame Type, Destination Address, Source Address, and Data Length octets. Accumulate each octet into HeaderCRC. As each octet is transmitted, set SilenceTimer to zero.
- (f) Transmit the ones-complement of HeaderCRC. Set SilenceTimer to zero.
- (g) If there are data octets, initialize DataCRC to X'FFFF'.
- (h) Transmit any data octets. Accumulate each octet into DataCRC. As each octet is transmitted, set SilenceTimer to zero.
- (i) Transmit the ones-complement of DataCRC, least significant octet first. As each octet is transmitted, set SilenceTimer to zero.
- (j) Wait until the final stop bit of the most significant CRC octet has been transmitted but not more than  $T_{postdrive}$ .
- (k) Disable the transmit line driver.
- (l) Return.

**9.5.6 Master Node Finite State Machine**

The description of operation is as a finite state machine. Figure 9-4 shows the Master Node state machine, which is described fully in this clause. Each state is given a name, specified in all capital letters. Transitions are also named, in mixed upper- and lowercase letters. Transitions are described as a series of conditions followed by a series of actions to be taken if the conditions are met. The final action in each transition is entry into a new state, which may be the same as the current state.

A master node that supports segmentation shall not use a segmentation window size greater than one.

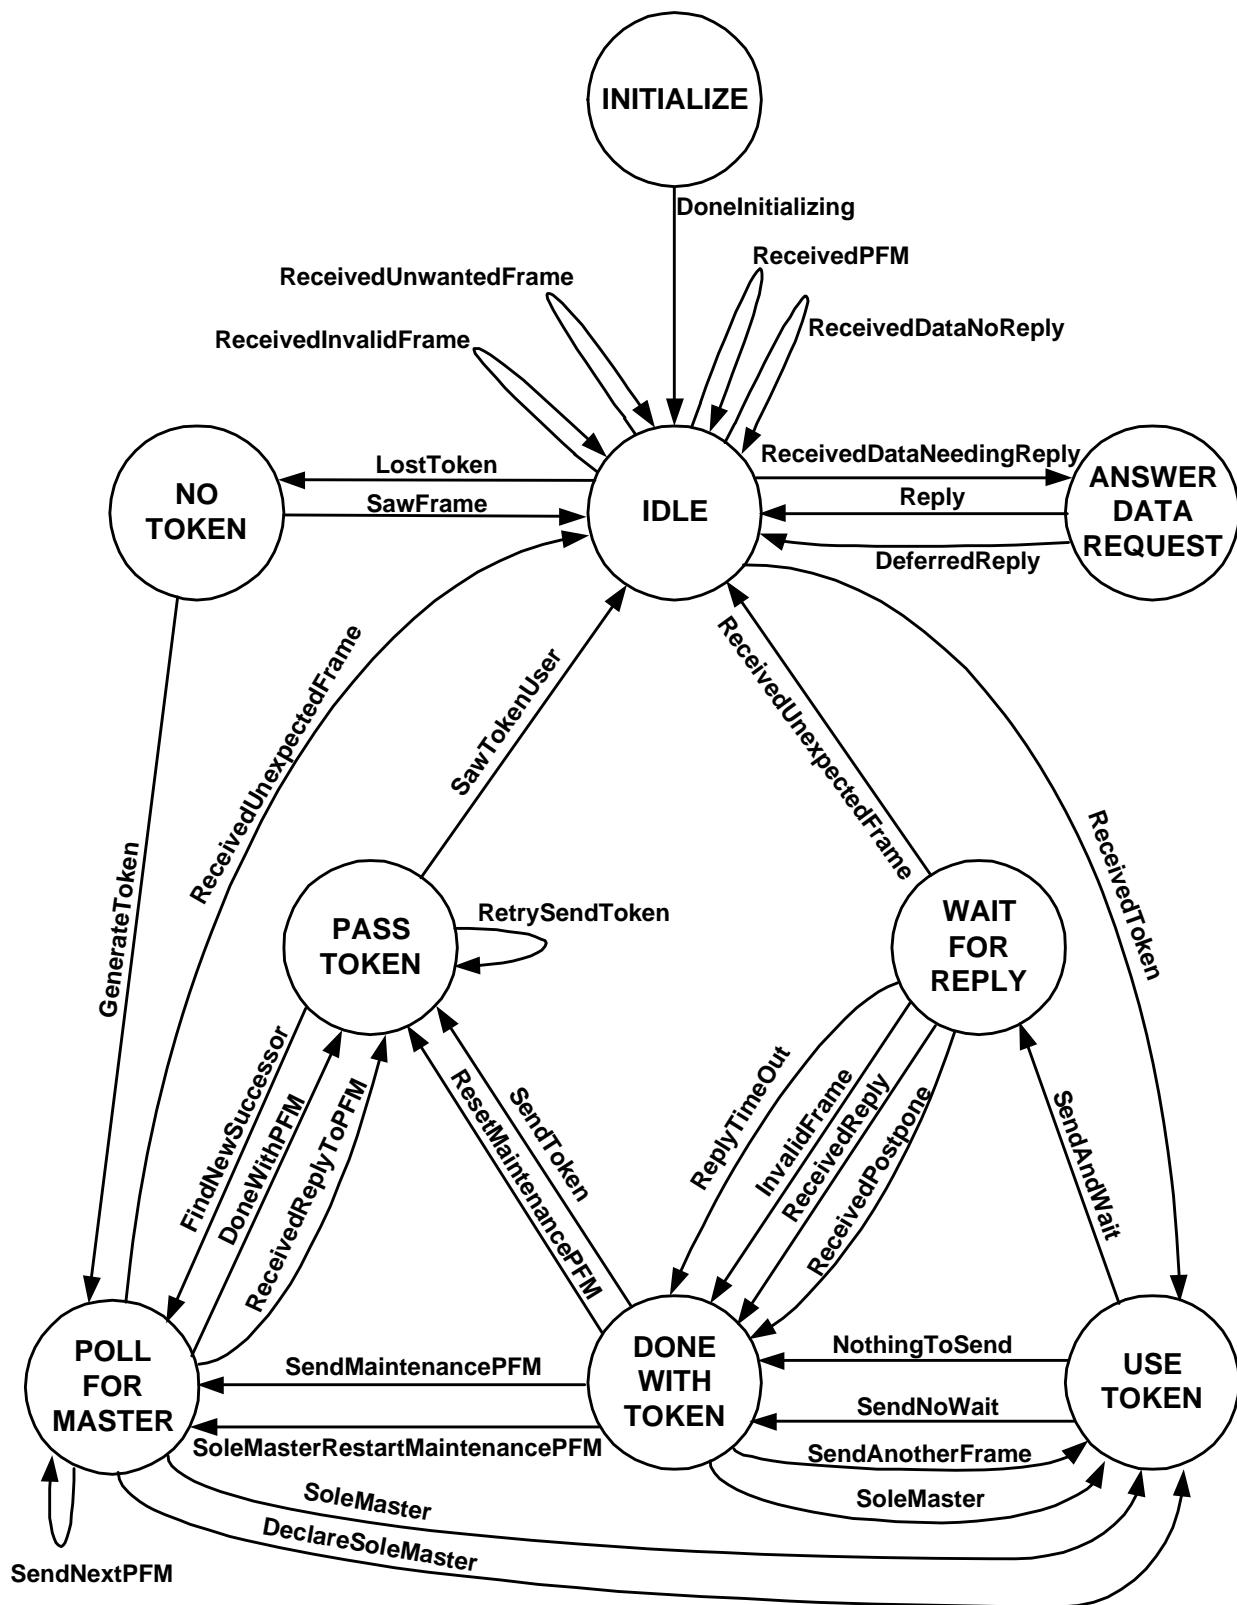


Figure 9-4. Master Node State Machine.

### 9.5.6.1 INITIALIZE

When a master node is powered up or reset, it shall unconditionally enter the INITIALIZE state.

#### DoneInitializing

Unconditionally,

set TS to the node's station address, set NS equal to TS (indicating that the next station is unknown), set PS equal to TS, set TokenCount to  $N_{poll}$  (thus causing a Poll For Master to be sent when this node first receives the token), set SoleMaster to FALSE, set ReceivedValidFrame and ReceivedInvalidFrame to FALSE, and enter the IDLE state.

### 9.5.6.2 IDLE

In the IDLE state, the node waits for a frame.

#### LostToken

If SilenceTimer is greater than or equal to  $T_{no\_token}$ ,

then assume that the token has been lost. Set EventCount to zero and enter the NO\_TOKEN state.

#### ReceivedInvalidFrame

If ReceivedInvalidFrame is TRUE,

then an invalid frame was received. Set ReceivedInvalidFrame to FALSE, and enter the IDLE state to wait for the next frame.

#### ReceivedUnwantedFrame

If ReceivedValidFrame is TRUE and either

(a) DestinationAddress is not equal to either TS (this station) or 255 (broadcast) or

(b) DestinationAddress is equal to 255 (broadcast) and FrameType has a value of Token, Test\_Request, or a proprietary type known to this node that expects a reply (such frames may not be broadcast) or

(c) FrameType has a value that indicates a standard or proprietary type that is not known to this node,

then an unexpected or unwanted frame was received. Set ReceivedValidFrame to FALSE, and enter the IDLE state to wait for the next frame.

#### ReceivedToken

If ReceivedValidFrame is TRUE and DestinationAddress is equal to TS (this station) and FrameType is equal to Token,

then set ReceivedValidFrame to FALSE; set FrameCount to zero; set SoleMaster to FALSE; and enter the USE\_TOKEN state.

#### ReceivedPFM

If ReceivedValidFrame is TRUE and DestinationAddress is equal to TS (this station) and FrameType is equal to Poll For Master,

then call SendFrame to transmit a Reply To Poll For Master frame to the node whose address is specified by SourceAddress (Source Address of the Poll); set ReceivedValidFrame to FALSE; and enter the IDLE state.

#### ReceivedDataNoReply

If ReceivedValidFrame is TRUE and DestinationAddress is equal to either TS (this station) or 255 (broadcast) and FrameType is equal to BACnet Data Not Expecting Reply, Test\_Response, or a proprietary type known to this node that does not expect a reply,

then indicate successful reception to the higher layers; set ReceivedValidFrame to FALSE; and enter the IDLE state.

#### ReceivedDataNeedReply

If ReceivedValidFrame is TRUE and DestinationAddress is equal to TS (this station) and FrameType is equal to BACnet Data Expecting Reply, Test Request, or a proprietary type known to this node that expects a reply,

then indicate successful reception to the higher layers (management entity in the case of Test\_Request); set ReceivedValidFrame to FALSE; and enter the ANSWER\_DATA\_REQUEST state.

#### BroadcastDataNeedReply

If ReceivedValidFrame is TRUE and DestinationAddress is equal to 255 (broadcast) and FrameType is equal to BACnet Data Expecting Reply,

then indicate successful reception to the higher layers; set ReceivedValidFrame to FALSE; and enter the IDLE state to wait for the next frame.

### 9.5.6.3 USE\_TOKEN

In the USE\_TOKEN state, the node is allowed to send one or more data frames. These may be BACnet Data frames or proprietary frames.

#### NothingToSend

If there is no data frame awaiting transmission,

then set FrameCount to  $N_{max\_info\_frames}$  and enter the DONE\_WITH\_TOKEN state.

#### SendNoWait

If the next frame awaiting transmission is of type Test\_Response, BACnet Data Not Expecting Reply, a proprietary type that does not expect a reply, or a frame of type Data Expecting Reply with a DestinationAddress that is equal to 255 (broadcast),

then call SendFrame to transmit the frame; increment FrameCount; and enter the DONE\_WITH\_TOKEN state.

#### SendAndWait

If the next frame awaiting transmission is of type Test\_Request, BACnet Data Expecting Reply, a proprietary type that expects a reply, or a frame of type Data Expecting Reply with a DestinationAddress that is not equal to 255 (broadcast),

then call SendFrame to transmit the data frame; increment FrameCount; and enter the WAIT\_FOR\_REPLY state.

### 9.5.6.4 WAIT\_FOR\_REPLY

In the WAIT\_FOR\_REPLY state, the node waits for a reply from another node.

#### ReplyTimeout

If SilenceTimer is greater than or equal to  $T_{reply\_timeout}$ ,

then assume that the request has failed. Set FrameCount to  $N_{max\_info\_frames}$  and enter the DONE\_WITH\_TOKEN state. Any retry of the data frame shall await the next entry to the USE\_TOKEN state. (Because of the length of the timeout, this transition will cause the token to be passed regardless of the initial value of FrameCount.)

#### InvalidFrame

If SilenceTimer is less than  $T_{reply\_timeout}$  and ReceivedInvalidFrame is TRUE,

then there was an error in frame reception. Set ReceivedInvalidFrame to FALSE and enter the DONE\_WITH\_TOKEN state.

**ReceivedReply**

If SilenceTimer is less than  $T_{\text{reply\_timeout}}$  and ReceivedValidFrame is TRUE and DestinationAddress is equal to TS (this station) and FrameType is equal to Test\_Response, BACnet Data Not Expecting Reply, or a proprietary type that indicates a reply,

then indicate successful reception to the higher layers; set ReceivedValidFrame to FALSE; and enter the DONE\_WITH\_TOKEN state.

**ReceivedPostpone**

If SilenceTimer is less than  $T_{\text{reply\_timeout}}$  and ReceivedValidFrame is TRUE and DestinationAddress is equal to TS (this station) and FrameType is equal to Reply Postponed,

then the reply to the message has been postponed until a later time. Set ReceivedValidFrame to FALSE and enter the DONE\_WITH\_TOKEN state.

**ReceivedUnexpectedFrame**

If SilenceTimer is less than  $T_{\text{reply\_timeout}}$  and ReceivedValidFrame is TRUE and either

- (a) DestinationAddress is not equal to TS (the expected reply should not be broadcast) or
  - (b) FrameType has a value other than Test\_Response, BACnet Data Not Expecting Reply, or proprietary reply frame,
- then an unexpected frame was received. This may indicate the presence of multiple tokens. Set ReceivedValidFrame to FALSE, and enter the IDLE state to synchronize with the network. This action drops the token.

**9.5.6.5 DONE\_WITH\_TOKEN**

The DONE\_WITH\_TOKEN state either sends another data frame, passes the token, or initiates a Poll For Master cycle.

**SendAnotherFrame**

If FrameCount is less than  $N_{\text{max\_info\_frames}}$ ,

then this node may send another information frame before passing the token. Enter the USE\_TOKEN state.

**SoleMaster**

If FrameCount is greater than or equal to  $N_{\text{max\_info\_frames}}$  and TokenCount is less than  $N_{\text{poll}}-1$  and SoleMaster is TRUE,

then there are no other known master nodes to which the token may be sent (true master-slave operation). Set FrameCount to zero, increment TokenCount, and enter the USE\_TOKEN state.

**SendToken**

If FrameCount is greater than or equal to  $N_{\text{max\_info\_frames}}$  and TokenCount is less than  $N_{\text{poll}}-1$  and SoleMaster is FALSE, or if NS is equal to  $(TS+1)$  modulo  $(N_{\text{max\_master}}+1)$ ,

then increment TokenCount; call SendFrame to transmit a Token frame to NS; set RetryCount and EventCount to zero; and enter the PASS\_TOKEN state. (The comparison of NS and  $TS+1$  eliminates the Poll For Master if there are no addresses between TS and NS, since there is no address at which a new master node may be found in that case).

**SendMaintenancePFM**

If FrameCount is greater than or equal to  $N_{\text{max\_info\_frames}}$  and TokenCount is greater than or equal to  $N_{\text{poll}}-1$  and  $(PS+1)$  modulo  $(N_{\text{max\_master}}+1)$  is not equal to NS,

then set PS to  $(PS+1)$  modulo  $(N_{\text{max\_master}}+1)$ ; call SendFrame to transmit a Poll For Master frame to PS; set RetryCount to zero; and enter the POLL\_FOR\_MASTER state.

**ResetMaintenancePFM**

If FrameCount is greater than or equal to  $N_{max\_info\_frames}$  and TokenCount is greater than or equal to  $N_{poll}-1$  and  $(PS+1)$  modulo  $(N_{max\_master}+1)$  is equal to NS, and SoleMaster is FALSE,

then set PS to TS; call SendFrame to transmit a Token frame to NS; set RetryCount and EventCount to zero; set TokenCount to one; and enter the PASS\_TOKEN state.

**SoleMasterRestartMaintenancePFM**

If FrameCount is greater than or equal to  $N_{max\_info\_frames}$ , TokenCount is greater than or equal to  $N_{poll}$ ,  $(PS+1)$  modulo  $(N_{max\_master}+1)$  is equal to NS, and SoleMaster is TRUE,

then set PS to  $(NS+1)$  modulo  $(N_{max\_master}+1)$ ; call SendFrame to transmit a Poll For Master to PS; set NS to TS (no known successor node); set RetryCount and EventCount to zero; set TokenCount to one; and enter the POLL\_FOR\_MASTER state to find a new successor to TS.

**9.5.6.6 PASS\_TOKEN**

The PASS\_TOKEN state listens for a successor to begin using the token that this node has just attempted to pass.

**SawTokenUser**

If SilenceTimer is less than  $T_{usage\_timeout}$  and EventCount is greater than  $N_{min\_octets}$ ,

then assume that a frame has been sent by the new token user. Enter the IDLE state to process the frame.

**RetrySendToken**

If SilenceTimer is greater than or equal to  $T_{usage\_timeout}$  and RetryCount is less than  $N_{retry\_token}$ ,

then increment RetryCount; call SendFrame to transmit a Token frame to NS; set EventCount to zero; and re-enter the current state to listen for NS to begin using the token.

**FindNewSuccessor**

If SilenceTimer is greater than or equal to  $T_{usage\_timeout}$  and RetryCount is greater than or equal to  $N_{retry\_token}$ ,

then assume that NS has failed. Set PS to  $(NS+1)$  modulo  $(N_{max\_master}+1)$ ; call SendFrame to transmit a Poll For Master frame to PS; set NS to TS (no known successor node); set RetryCount and TokenCount to zero; and enter the POLL\_FOR\_MASTER state to find a new successor to TS.

**9.5.6.7 NO\_TOKEN**

The NO\_TOKEN state is entered if SilenceTimer becomes greater than  $T_{no\_token}$ , indicating that there has been no network activity for that period of time. The timeout is continued to determine whether or not this node may create a token.

**SawFrame**

If SilenceTimer is less than  $T_{no\_token}+(T_{slot}*TS)$  and EventCount is greater than  $N_{min\_octets}$ ,

then some other node exists at a lower address. Enter the IDLE state to receive and process the incoming frame.

**GenerateToken**

If SilenceTimer is greater than or equal to  $T_{no\_token}+(T_{slot}*TS)$  and SilenceTimer is less than  $T_{no\_token}+(T_{slot}*(TS+1))$ ,

then assume that this node is the lowest numerical address on the network and is empowered to create a token. Set PS to  $(TS+1)$  modulo  $(N_{max\_master}+1)$ ; call SendFrame to transmit a Poll For Master frame to PS; set NS to TS (indicating that the next station is unknown); set RetryCount and TokenCount to zero; and enter the POLL\_FOR\_MASTER state to find a new successor to TS.

### 9.5.6.8 POLL\_FOR\_MASTER

In the POLL\_FOR\_MASTER state, the node listens for a reply to a previously sent Poll For Master frame in order to find a successor node.

#### ReceivedReplyToPFM

If ReceivedValidFrame is TRUE and DestinationAddress is equal to TS (this station) and FrameType is equal to Reply To Poll For Master,

then set SoleMaster to FALSE; set NS equal to SourceAddress; set EventCount to zero; call SendFrame to transmit a Token frame to NS; set PS to the value of TS; set TokenCount and RetryCount to zero; set ReceivedValidFrame to FALSE; and enter the PASS\_TOKEN state.

#### ReceivedUnexpectedFrame

If ReceivedValidFrame is TRUE and either

- (a) DestinationAddress is not equal to TS or
- (b) FrameType is not equal to Reply To Poll For Master,

then an unexpected frame was received. This may indicate the presence of multiple tokens. Set ReceivedValidFrame to FALSE and enter the IDLE state to synchronize with the network. This action drops the token.

#### SoleMaster

If SoleMaster is TRUE and either

- (a) SilenceTimer is greater than or equal to  $T_{usage\_timeout}$  or
- (b) ReceivedInvalidFrame is TRUE,

then there was no valid reply to the periodic poll by the sole known master for other masters. Set FrameCount to zero, set ReceivedInvalidFrame to FALSE, and enter the USE\_TOKEN state.

#### DoneWithPFM

If SoleMaster is FALSE and NS is not equal to TS and either:

- (a) SilenceTimer is greater than or equal to  $T_{usage\_timeout}$  or
- (b) ReceivedInvalidFrame is TRUE,

then there was no valid reply to the maintenance poll for a master at address PS. Set EventCount to zero; call SendFrame to transmit a Token frame to NS; set RetryCount to zero; set ReceivedInvalidFrame to FALSE; and enter the PASS\_TOKEN state.

#### SendNextPFM

If SoleMaster is FALSE and NS is equal to TS (no known successor node) and  $(PS+1)$  modulo  $(N_{max\_master}+1)$  is not equal to TS and either:

- (a) SilenceTimer greater than or equal to  $T_{usage\_timeout}$  or
- (b) ReceivedInvalidFrame is TRUE,

then set PS to  $(PS+1)$  modulo  $(N_{max\_master}+1)$ ; call SendFrame to transmit a Poll For Master frame to PS; set RetryCount to zero; set ReceivedInvalidFrame to FALSE; and re-enter the current state.

**DeclareSoleMaster**

If SoleMaster is FALSE and NS is equal to TS (no known successor node) and  $(PS+1)$  modulo  $(N_{max\_master}+1)$  is equal to TS and either

- (a) SilenceTimer is greater than or equal to  $T_{usage\_timeout}$  or
- (b) ReceivedInvalidFrame is TRUE,

then set SoleMaster TRUE to indicate that this station is the only master; set FrameCount to zero; set ReceivedInvalidFrame to FALSE; and enter the USE\_TOKEN state.

**9.5.6.9 ANSWER\_DATA\_REQUEST**

The ANSWER\_DATA\_REQUEST state is entered when a BACnet Data Expecting Reply, a Test\_Request, or a proprietary frame that expects a reply is received.

**Reply**

If a reply is available from the higher layers within  $T_{reply\_delay}$  after the reception of the final octet of the requesting frame (the mechanism used to determine this is a local matter),

then call SendFrame to transmit the reply frame and enter the IDLE state to wait for the next frame.


**DeferredReply**

If no reply will be available from the higher layers within  $T_{reply\_delay}$  after the reception of the final octet of the requesting frame (the mechanism used to determine this is a local matter),

then an immediate reply is not possible. Any reply shall wait until this node receives the token. Call SendFrame to transmit a Reply Postponed frame, and enter the IDLE state.

**9.5.7 Slave Node Finite State Machine**

The state machine for a slave node is similar to, but considerably simpler than, that for a master node. A slave node shall neither transmit nor receive segmented messages. If a slave node receives a segmented BACnet-Confirmed-Request-PDU, the node shall respond with a BACnet-Abort-PDU specifying abort-reason "segmentation not supported." Figure 9-5 shows the Slave Node state machine, which is described fully in the following text.

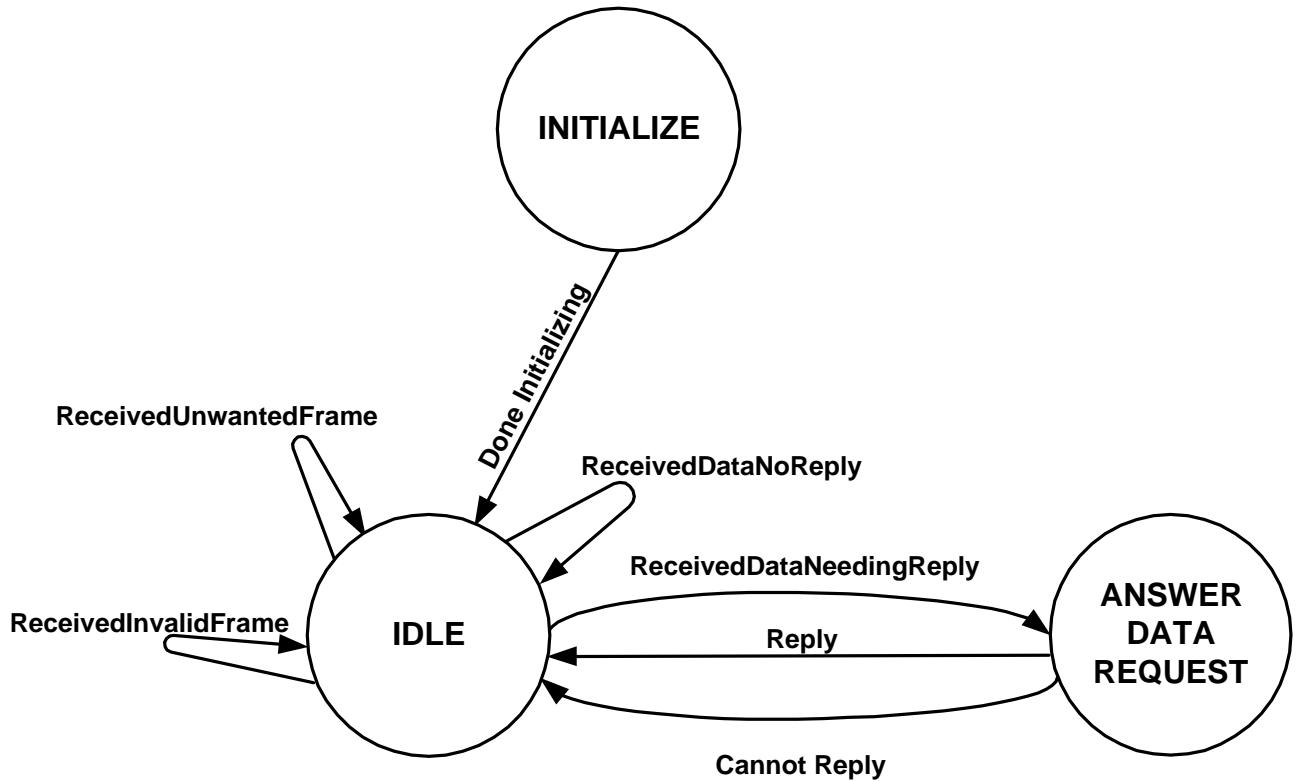

**Figure 9-5.** Slave Node State Machine

#### 9.5.7.1 INITIALIZE

When a slave node is powered up or reset, it shall unconditionally enter the INITIALIZE state.

DoneInitializing

    Unconditionally,

        set TS to the node's station address; set ReceivedValidFrame and ReceivedInvalidFrame to FALSE; and enter the IDLE state.

#### 9.5.7.2 IDLE

In the IDLE state, the node waits for a frame.

ReceivedInvalidFrame

    If ReceivedInvalidFrame is TRUE,

        then an invalid frame was received. Set ReceivedInvalidFrame to FALSE, and enter the IDLE state to wait for the next frame.

ReceivedUnwantedFrame

    If ReceivedValidFrame is TRUE and either

        (a) DestinationAddress is not equal to either TS (this station) or 255 (broadcast) or

        (b) DestinationAddress is equal to 255 (broadcast) and FrameType has a value of BACnet Data Expecting Reply, Test Request, or a proprietary type known to this node that expects a reply (such frames may not be broadcast) or

- (c) FrameType has a value of Token, Poll For Master, Reply To Poll For Master, Reply Postponed, or a standard or proprietary frame type not known to this node,

then an unexpected or unwanted frame was received. Set ReceivedValidFrame to FALSE, and enter the IDLE state to wait for the next frame.

#### ReceivedDataNoReply

If ReceivedValidFrame is TRUE and DestinationAddress is equal to either TS (this station) or 255 (broadcast) and FrameType is equal to BACnet Data Not Expecting Reply, Test\_Response, or a proprietary type known to this node that does not expect a reply,

then indicate successful reception to the higher layers, set ReceivedValidFrame to FALSE, and enter the IDLE state.

#### ReceivedDataNeedingReply

If ReceivedValidFrame is TRUE and DestinationAddress is equal to TS (this station) and FrameType is equal to BACnet Data Expecting Reply, Test Request, or a proprietary type known to this node that expects a reply,

then indicate successful reception to the higher layers (management entity in the case of Test\_Request), set ReceivedValidFrame to FALSE, and enter the ANSWER\_DATA\_REQUEST state.

### 9.5.7.3 ANSWER\_DATA\_REQUEST

The ANSWER\_DATA\_REQUEST state is entered when a BACnet Data Expecting Reply, a Test\_Request, or a proprietary frame that expects a reply is received.

#### Reply

If a reply is available from the higher layers within  $T_{\text{reply\_delay}}$  after the reception of the final octet of the requesting frame (the mechanism used to determine this is a local matter),

then call SendFrame to transmit the reply frame, and enter the IDLE state to wait for the next frame.

#### CannotReply

If no reply will be available from the higher layers within  $T_{\text{reply\_delay}}$  after the reception of the final octet of the requesting frame (the mechanism used to determine this is a local matter),

then no reply is possible. Enter the IDLE state.

## 9.6 Cyclic Redundancy Check (CRC)

MS/TP uses Cyclic Redundancy Checks (CRC) to provide error-detection. CRCs have a number of advantages over simpler error detection methods, such as parity or checksums, which are commonly used with UART-based networks. The major drawbacks of parity are that it adds one bit of overhead to each transmitted octet and that it will not detect an even number of errors within one octet. Exclusive OR checksums, sometimes called longitudinal parity, offer reduced overhead over octet parity but suffer from the same inability to detect an even number of errors in a given bit position. Additive checksums are similar but the exact error detection characteristics are dependent on bit position.

ISO 8802-3, ARCNET, and many other standard and proprietary communications systems use more robust CRCs. Mathematically, a CRC is the remainder that results when a data stream (such as a frame) taken as a binary number is divided modulo two by a generator polynomial. The proof of the error-detecting properties of the CRC and the selection of appropriate polynomials are beyond the scope of this document.

The MS/TP frame header CRC uses the polynomial

$$G(X) = X^8 + X^7 + 1$$

In operation, at the transmitter, the initial content of the CRC register of the device computing the remainder of the division is preset to all ones. The register is then modified by division by the generator polynomial  $G(x)$  of the Frame Type, Destination

Address, Source Address, and Length fields. The ones-complement of the resulting remainder is transmitted as the 8-bit Header CRC.

At the receiver, the initial content of the CRC register of the device computing the remainder of the division is preset to all ones. The register is then modified by division by the generator polynomial  $G(x)$  of the Frame Type, Destination Address, Source Address, Length, and Header CRC fields of the incoming message. In the absence of transmission errors, the resultant remainder will be:

$$0101\ 0101\ (x^0 \text{ through } x^7, \text{ respectively}).$$

The MS/TP data CRC uses the CRC-CCITT polynomial

$$G(X) = X^{16} + X^{12} + X^5 + 1$$

In operation, at the transmitter, the initial content of the CRC register of the device computing the remainder of the division is preset to all ones. The register is then modified by division by the generator polynomial  $G(x)$  of the Data field. The ones-complement of the resulting remainder is transmitted, least significant octet first, as the 16 bit Data CRC.

At the receiver, the initial content of the CRC register of the device computing the remainder of the division is preset to all ones. The register is then modified by division by the generator polynomial  $G(x)$  of the Data and Data CRC fields of the incoming message. In the absence of transmission errors, the resultant remainder will be

$$1111\ 0000\ 1011\ 1000\ (x^0 \text{ through } x^{15}, \text{ respectively}).$$

*NOTE: The initialization of the CRC register to all ones and the complementing of the register before transmission prevent the CRC from having a value of zero if the covered field is all zeros.*

Annex G describes the implementation of the CRC algorithms in software.

## 9.7 Interfacing MS/TP LANs with Other BACnet LANs

### 9.7.1 Routing of Messages from MS/TP

When a network entity with routing capability receives from a directly connected MS/TP data link an NPDUs whose 'data\_expecting\_reply' parameter is TRUE and the NPDUs is to be routed to another network according to the procedures of Clause 6, the network entity shall direct the MS/TP data link to transmit a Reply Postponed frame before attempting to route the NPDUs. This allows the routing node to leave the ANSWER\_DATA\_REQUEST state and the sending node to leave the WAIT\_FOR\_REPLY state before the potentially lengthy process of routing the NPDUs is begun.

### 9.7.2 Routing of Messages to MS/TP

When a network entity issues a DL\_UNITDATA.request to a directly connected MS/TP data link, it shall set the 'data\_expecting\_reply' parameter of the DL\_UNITDATA.request equal to the value of the 'data\_expecting\_reply' parameter of the network protocol control information of the NPDUs, which is transferred in the 'data' parameter of the request.

## 9.8 Responding BACnet User Processing of Messages from MS/TP

In 5.4.5.3, AWAIT\_RESPONSE, the following transition shall be added:

### PostponeReply

If a CONF\_SERV.response will not be received from the local application layer early enough that a reply MS/TP frame would be received by the remote node within  $T_{reply\_timeout}$  (defined in 9.5.3) after the transmission of the original BACnet-Confirmed-Request-PDU (the means of this determination are a local matter),

then direct the MS/TP data link to transmit a Reply Postponed frame and enter the AWAIT\_RESPONSE state.

In 5.4.5.3, AWAIT\_RESPONSE, in the transition SendSegmentedComplexACK, the text "transmit a BACnet-ComplexACK-PDU..." shall be replaced by "direct the MS/TP data link to transmit a Reply Postponed frame; transmit a BACnet-

ComplexACK-PDU...." (It is necessary to postpone the reply because transmission of the segmented ComplexACK cannot begin until the node holds the token.)

## 9.9 Repeaters

If any of the limits in 9.2.1 and 9.2.2 are exceeded, one or more repeaters are required. An MS/TP EIA-485 Repeater is defined as an active device that provides selective interconnection between two or more segments of MS/TP cable. The repeater contains logic that detects and passes signals received from one segment onto all other segments. The segment from which signals are received is determined according to a priority algorithm.

The method used by a repeater to detect signals and to distinguish them from noise is a local matter, subject to the following constraints:

- (a) The repeater may not lengthen or shorten the duration of any bit of the output data stream by more than 2% relative to the input data stream.
- (b) The repeater may not delay the output data stream by more than two bit times relative to the input data stream.

No more than 10 bit times of delay shall exist in the path between any two nodes of an MS/TP network. This corresponds to five repeaters with worst-case delays (if delay by the medium is negligible, as it will be at all except the highest baud rates) or a greater number of repeaters with smaller delays.

The minimum value of repeater turnoff delay  $T_{roff}$  is dictated by the maximum amount of idle line allowed during a single frame,  $T_{frame\_gap}$ . If the value of the octet immediately preceding the idle is XFF, then there may be up to  $9+T_{frame\_gap} = 29$  bit times of one state between zero (start) bits. Thus,  $T_{roff}$  must be larger than 29 bit times if it is not to turn off during the transmission of a frame.

In order to avoid contention between repeater turnoff and the beginning of the next frame, the repeater turnoff delay  $T_{roff}$  may be no larger than  $T_{turnaround}$  bit times, and a node may not enable its driver until a minimum of  $T_{turnaround}$  after the end of the previous frame. Thus

$$29 \text{ bit times} < T_{roff} < 40 \text{ bit times.}$$

An N-way repeater may be represented by an N+1 state finite state machine. One state is the IDLE state, and the others each receive from one segment and re-transmit on all other segments. The repeater state machine uses the timer PortIdle to control the return to the IDLE state. PortIdle shall have a resolution of one bit time or finer.

### 9.9.1 IDLE

In the IDLE state, all receivers are enabled and all transmitters are disabled. The repeater remains in the IDLE state until a logical zero (i.e., the beginning of a start bit) is detected on some port.

When a zero is detected, the repeater disables all receivers, except the one on which the zero was detected, and enables all transmitters, except the one associated with the port on which the zero was detected. The repeater then enters the state associated with the active receiver port. If a zero is detected simultaneously on more than one port, the method used to arbitrate between them is a local matter.

#### Port1Active

If a zero is detected on Port 1,

then disable all receivers except Port 1; enable all transmitters except Port 1; pass the zero to all enabled transmitters; set PortIdle to zero; and enter the PORT\_1\_ACTIVE state.

#### Port2Active

If a zero is detected on Port 2,

then disable all receivers except Port 2; enable all transmitters except Port 2; pass the zero to all enabled transmitters; set PortIdle to zero; and enter the PORT\_2\_ACTIVE state.

This may be extended to as many ports as desired simply by adding transitions and PORT\_N\_ACTIVE states.

### 9.9.2 PORT\_i\_ACTIVE

In the PORT\_i\_ACTIVE state, the Repeater passes signals from Port i to all other ports. The Repeater will remain in this state until Port i becomes idle. Idleness is defined as the absence of the logical zero state at Port i for more than  $T_{roff}$  bit times.

When idleness is detected, all transmitters are disabled, all receivers are enabled, and the Repeater enters the IDLE state to await renewed activity.

#### PortActive0

If a zero is detected on Port i,

then pass the zero to all other ports, set PortIdle to zero, and re-enter the current state.

#### PortActive1

If PortIdle is less than  $T_{roff}$  and a one is detected at Port i,

then pass the one to all other ports and re-enter the current state.

#### PortInactive

If PortIdle is greater than or equal to  $T_{roff}$ ,

then disable all transmitters, enable all receivers, and enter the IDLE state.

## 10 DATA LINK/PHYSICAL LAYERS: POINT-TO-POINT (PTP)

This clause defines a data link layer protocol by which two BACnet devices may communicate using a variety of point-to-point (PTP) communication mechanisms. These mechanisms may be accessed through an EIA-232 or bus-level interface to modems, line drivers, or other data communication equipment. The specific physical connection composing the PTP connection is a local matter.

This clause does not attempt to specify the means by which the virtual or physical connection is established. Rather, it specifies a protocol that allows two BACnet network layer entities to establish a BACnet PTP data link connection, reliably exchange BACnet PDUs, and perform an orderly termination of a BACnet PTP connection using an already established physical connection.

This data link layer protocol addresses the particular characteristics associated with a PTP connection. A PTP connection differs from other BACnet data link/physical layer options in several ways: it is capable of full duplex operation, it may be temporary in nature, and it may be significantly slower. The PTP protocol is only used between devices that are half-routers. See 6.7.

This protocol does not assume that the answering device is in a state where it can accept BACnet PDUs containing binary information. For instance, the same serial device port that is dialed into by a BACnet device may also be dialed into and logged onto by a human operator using a simple ANSI X3.4 terminal. Therefore, the connection establishment procedure is initiated using an ANSI X3.4 printable character sequence.

The connection process also provides for optional password protection. The configuration and checking of the password parameter is considered to be a local matter.

### 10.1 Overview

Once a physical connection has been established between the calling device and the answering device, a sequence of frames are exchanged to establish a BACnet connection. If the connection is established, the two devices may freely exchange BACnet PDUs. Either the calling device or the answering device may initiate a termination of the connection. The connection remains until a request for termination has been issued by either device, either device determines that the physical layer connection has been lost, or until a local timer expires, indicating that the peer device is no longer active. Unlike other BACnet data link protocols, the PTP protocol is acknowledged using an alternating bit approach. It should be noted that the protocol allows PDUs to be exchanged between the two devices simultaneously to take advantage of full duplex operation.

Note that it is also possible that two devices are permanently connected at the physical layer in which case the BACnet connect sequence is performed only once, at initialization time. In this case both devices would be running the PTP data link layer and would always be capable of sending and receiving BACnet PTP data link frames.

### 10.2 Service Specification

PTP includes a data link layer sufficient to provide to the BACnet network layer the same services as are offered by ISO 8802-2 Type 1. Because PTP is a connection-oriented data link layer, additional primitives are needed to manage the connection establishment and termination phases. PTP does not provide all of the functionality of ISO 8802-2 Type 2.

This subclause describes the primitives and parameters associated with the provided services. The parameters are described in an abstract sense, which does not constrain the implementation method. These primitives provide an interface to the BACnet network layer consistent with the other BACnet data link options except for the addition of connection management primitives.

#### 10.2.1 DL-UNITDATA.request

##### 10.2.1.1 Function

This primitive is the service request primitive for the unacknowledged connectionless-mode data transfer service.

##### 10.2.1.2 Semantics of the Service Primitive

The primitive shall provide parameters as follows:

```
DL-UNITDATA.request (
    source_address,
    destination_address,
    data,
    priority
)
```

Each source and destination address consists of the logical concatenation of a medium access control (MAC) address and a link service access point (LSAP). However, since PTP does not define or use MAC addresses and since it supports only the BACnet network layer, the 'source\_address' and 'destination\_address' parameters are ignored.

The 'data' parameter specifies the link service data unit (LSDU) to be transferred by the PTP entity.

The 'priority' parameter specifies the priority desired for the data unit transfer. The priority parameter is ignored by PTP.

#### **10.2.1.3 When Generated**

This primitive is passed from the network layer to the PTP entity to request that a network protocol data unit (NPDU) be sent to one or more remote LSAPs using unacknowledged connectionless-mode procedures.

#### **10.2.1.4 Effect on Receipt**

Receipt of this primitive causes the PTP entity to attempt to send the NPDU using unacknowledged connectionless-mode procedures.

### **10.2.2 DL-UNITDATA.indication**

#### **10.2.2.1 Function**

This primitive is the service indication primitive for the unacknowledged connectionless-mode data transfer service.

#### **10.2.2.2 Semantics of the Service Primitive**

The primitive shall provide the following parameters:

```
DL-UNITDATA.indication (
    source_address,
    destination_address,
    data,
    priority
)
```

Each source and destination address consists of the logical concatenation of a medium access control (MAC) address and a link service access point (LSAP). However, since PTP does not define or use MAC addresses, and since it supports only the BACnet network layer, the 'source\_address' and 'destination\_address' parameters are ignored.

The 'data' parameter specifies the link service data unit that has been received by the PTP entity.

The 'priority' parameter specifies the priority desired for the data unit transfer. The priority parameter is ignored by PTP.

#### **10.2.2.3 When Generated**

This primitive is passed from the PTP entity to the network layer to indicate the arrival of an NPDU from the specified remote entity.

#### **10.2.2.4 Effect on Receipt**

The effect of receipt of this primitive by the network layer is unspecified.

### **10.2.3 Test\_Request and Test\_Response**

ISO 8802-2 Type 1 defines XID and TEST PDUs and procedures but does not define an interface to invoke them from the network layer. Test\_Request and Test\_Response PDUs and procedures have been defined for PTP to accomplish the same

functions. Because PTP supports only the equivalent of a single LSAP, these PDUs are sufficient to implement the relevant aspects of XID as well.

The response with Test\_Response to a Test\_Request PDU is mandatory for all PTP nodes. The origination of a Test\_Request PDU is optional.

#### **10.2.3.1 Use of Test\_Request and Test\_Response for ISO 8802-2 TEST Functions**

The TEST function provides a facility to conduct loopback tests of the PTP to PTP transmission path. Successful completion of the test consists of sending a Test\_Request PDU with a particular information field to the designated destination, and receiving, in return, the identical information field in a Test\_Response PDU.

If a receiving node can successfully receive and return the information field, it shall do so. If it cannot receive and return the entire information field but can detect the reception of a valid Test\_Request frame (for example, by computing the CRC on octets as they are received), then the receiving node shall discard the information field and return a Test\_Response containing no information field. If the receiving node cannot detect the valid reception of frames with overlength information fields, then no response shall be returned.

#### **10.2.3.2 Use of Test\_Request and Test\_Response for ISO 8802-2 XID functions**

ISO 8802-2 describes seven possible uses of XID:

- (a) XID can be used with a null DSAP and null SSAP as an "Are You There" test. Since PTP supports only the equivalent of a single LSAP, the Test\_Request PDU with no data can perform this function.
- (b) XID can be used with a group or global DSAP to identify group members or all active stations. Since PTP supports only the equivalent of a single LSAP, the Test\_Request PDU with no data can perform this function.
- (c) XID can be used for a duplicate address check.
- (d) Class II LLCs may use XID to determine window size. PTP does not support Class II operation.
- (e) XID may be used to identify the class of each LLC. Since PTP supports only Class I operation, this is a trivial operation.
- (f) XID may be used to identify the service types supported by each LSAP. Since PTP supports only Class I operation, this is a trivial operation.
- (g) An LLC can announce its presence by transmitting an XID with global DSAP. Since PTP supports only one LSAP, the equivalent can be accomplished by transmitting a Test\_Response PDU.

#### **10.2.4 DL-CONNECT.request**

##### **10.2.4.1 Function**

This primitive is the service request primitive for the connection establishment service.

##### **10.2.4.2 Semantics of the Service Primitive**

The primitive shall provide the following parameters:

```
DL-CONNECT.request (
    destination_address,
    password
)
```

The 'destination\_address' parameter specifies the information required by the PTP entity to initiate the establishment of a physical connection between the local and remote BACnet devices. Although, as stated at the beginning of this clause, the establishment of the physical connection is a local matter, it is likely that this parameter would convey information such as

contained in the Port Info field of the Initialize-Routing-Table network layer message and subsequently stored in a node's routing table. See 6.4.7.

The 'password' parameter specifies the password to be used in the PTP connection process described in 10.4.8.

#### **10.2.4.3 When Generated**

This primitive is passed from the network layer to the PTP entity to request that a logical link connection be established.

#### **10.2.4.4 Effect on Receipt**

The receipt of this primitive causes the PTP entity to initiate establishment of a connection with the remote PTP entity.

### **10.2.5 DL-CONNECT.indication**

#### **10.2.5.1 Function**

This primitive is the service indication primitive for the connection establishment service.

#### **10.2.5.2 Semantics of the Service Primitive**

The primitive provides no parameters.

#### **10.2.5.3 When Generated**

This primitive is passed from the PTP entity to the network layer to indicate that a logical link connection has been established.

#### **10.2.5.4 Effect on Receipt**

The network layer entity may use this connection for data unit transfer.

### **10.2.6 DL-CONNECT.confirm**

#### **10.2.6.1 Function**

This primitive is the service confirmation primitive for the connection establishment service.

#### **10.2.6.2 Semantics of the Service Primitive**

The primitive shall provide the following parameter:

```
DL-CONNECT.confirm (
    status
)
```

The 'status' parameter specifies whether or not the connection has been successfully established.

#### **10.2.6.3 When Generated**

This primitive is passed from the PTP entity to the network layer to indicate that a logical link connection has been established.

#### **10.2.6.4 Effect on Receipt**

The network layer entity may use this connection for data unit transfer if the 'status' parameter indicates the successful establishment of a PTP connection.

### **10.2.7 DL-DISCONNECT.request**

#### **10.2.7.1 Function**

This primitive is the service request primitive for the connection termination service.

#### **10.2.7.2 Semantics of the Service Primitive**

The primitive shall provide the following parameters:

```
DL-DISCONNECT.request (
    destination_address
)
```

The 'destination\_address' parameter specifies the information required by the PTP entity to initiate the establishment of a physical connection between the local and remote BACnet devices. The PTP entity uses this same information to identify the particular PTP connection instance that is to be terminated.

#### **10.2.7.3 When Generated**

This primitive is passed from the network layer to the PTP entity to request that a logical link connection be terminated.

#### **10.2.7.4 Effect on Receipt**

The receipt of this primitive causes the PTP entity to initiate termination of a connection with the remote PTP entity.

### **10.2.8 DL-DISCONNECT.indication**

#### **10.2.8.1 Function**

This primitive is the service indication primitive for the connection termination service.

#### **10.2.8.2 Semantics of the Service Primitive**

The primitive shall provide the following parameters:

```
DL-DISCONNECT.indication (
    reason
)
```

The 'reason' parameter specifies the reason for the disconnection. The reasons for disconnection may include a request by the remote entity, loss of physical connection, or an error internal to the PTP sublayer.

#### **10.2.8.3 When Generated**

This primitive is passed from the PTP entity to the network layer to indicate that a logical link connection has been terminated.

#### **10.2.8.4 Effect on Receipt**

The network layer entity may no longer use this connection for data unit transfer.

### **10.2.9 DL-DISCONNECT.confirm**

#### **10.2.9.1 Function**

This primitive is the service confirmation primitive for the connection termination service.

#### **10.2.9.2 Semantics of the Service Primitive**

The primitive shall provide the following parameters:

```
DL-DISCONNECT.confirm (
    destination_address
)
```

The 'destination\_address' parameter specifies the information required by the PTP entity to initiate the establishment of a physical connection between the local and remote BACnet devices. The network layer entity uses this same information to identify the particular PTP connection instance that has been terminated.

#### **10.2.9.3 When Generated**

This primitive is passed from the PTP entity to the network layer to indicate that a logical link connection has been terminated.

#### 10.2.9.4 Effect on Receipt

The network layer entity may no longer use this connection for data unit transfer.

### 10.3 Point-to-Point Frame Format

All PTP data link frames, with the exception of the ANSI X3.4 sequence used to initiate a PTP connection, have the following format:

Preamble	two octet preamble X'55FF'
Frame Type	one octet
Length	length of data field not including CRC, two octets, most significant octet first
Header CRC	one octet
Data	varies with frame type; variable length
Data CRC	(if data is present) two octets, least significant octet first

The Preamble, Frame Type, Length, and Header CRC are collectively known as the header segment of the frame. The Data and Data CRC are collectively known as the data segment of the frame. The Frame Type is used to distinguish between different types of MAC frames. Defined types are:

X'00'	Heartbeat XOFF
X'01'	Heartbeat XON
X'02'	Data 0
X'03'	Data 1
X'04'	Data Ack 0 XOFF
X'05'	Data Ack 1 XOFF
X'06'	Data Ack 0 XON
X'07'	Data Ack 1 XON
X'08'	Data Nak 0 XOFF
X'09'	Data Nak 1 XOFF
X'0A'	Data Nak 0 XON
X'0B'	Data Nak 1 XON
X'0C'	Connect Request
X'0D'	Connect Response
X'0E'	Disconnect Request
X'0F'	Disconnect Response
X'14'	Test_Request
X'15'	Test_Response

Frame Types X'00' through X'7F' are reserved by ASHRAE. Frame types X'10', X'11', and X'13' shall never be used for a valid frame type because of the character transparency method described in 10.3.1. Frame Types X'80' through X'FF' are available to vendors for proprietary (non-BACnet) frames. Proprietary PTP frames shall follow the same state machine transitions defined for Data frames.

The Data field is conditional on the Frame Type, as specified in the description of each Frame Type. If there is no Data field, then the length field shall be zero and the Data and Data CRC (data segment) shall be omitted.

The header CRC octet is the ones complement of the remainder that results when the Frame Type and Length fields are divided by the CRC polynomial

$$G(X) = X^8 + X^7 + 1.$$

The data CRC octets are the ones complement of the remainder that results when the Data field is divided by the CRC-CCITT polynomial

$$G(X) = X^{16} + X^{12} + X^5 + 1.$$

Annex G describes in detail the generation and checking of the CRCs.

### 10.3.1 Character Transparency and Flow Control

In order to support modems that respond to flow control or other control characters, character stuffing is used to prevent transmission of these codes as part of the data. Where a value corresponding to a control character would appear in a frame, it shall be prefixed with a data link escape code (X'10') and the high order bit shall be set in the value as transmitted. The control characters listed below shall be encoded in this manner. Implementations shall be able to receive and decode all encoded control characters.

X'10'	(DLE)	=>	X'10' X'90'
X'11'	(XON)	=>	X'10' X'91'
X'13'	(XOFF)	=>	X'10' X'93'

The characters X'11' (XON) and X'13' (XOFF) are never transmitted by the SendFrame procedure described in 10.4.4 and are ignored by the Receive Frame state machine described in 10.4.7. The use of these characters or of Request To Send (RTS), Clear To Send (CTS), or other EIA-232 control lines for flow control purposes is a local matter. The use of such methods of flow control is allowed only between a PTP device and local equipment such as a modem. Flow control between PTP devices shall be implemented using the flow control frames defined in 10.3.

### 10.3.2 Frame Types X'00' and X'01': Heartbeat Frames

A frame of one of these types is transmitted by each device periodically when no other data are ready to transmit, to indicate to the peer device that the data link is still active. Heartbeat frames contain no data segment. A type X'00' frame is transmitted to indicate to the peer device that the local device is not ready to accept Data frames. A type X'01' frame is transmitted to indicate readiness to receive Data frames.

### 10.3.3 Frame Types X'02' and X'03': Data Frames

A frame of one of these types is transmitted to convey data (NPDUs) to the peer device. The length of the data field of a Data frame may range from 0 to 501 octets. Successive transmissions alternate frame types; type X'02' corresponds to transmit sequence number 0, and type X'03' corresponds to transmit sequence number 1.

### 10.3.4 Frame Types X'04' through X'07': Data Ack Frames

A frame of one of these types is transmitted to acknowledge a correctly received Data frame. Data Ack frames contain no data segment. Frame types X'04' and X'06' acknowledge receipt of Data frames with sequence number 0 (type X'02'). Frame types X'05' and X'07' acknowledge receipt of Data frames with sequence number 1 (type X'03'). Frame types X'04' and X'05' indicate that the device is not ready to receive additional Data frames (XOFF). Frame types X'06' and X'07' indicate that the device is ready to receive additional Data frames (XON).

### 10.3.5 Frame Types X'08' through X'0B': Data Nak Frames

A frame of one of these types is used to reject an incorrectly received Data frame. Data Nak frames are transmitted when the header segment of a Data frame has been correctly received but the data segment of the frame contains an error or when a Data frame cannot be accepted due to receiver buffer limitations. Data Nak frames contain no data segment. Frame types X'08' and X'0A' reject Data frames with sequence number 0 (type X'02'). Frame types X'09' and X'0B' reject Data frames with sequence number 1 (type X'03'). Frame types X'08' and X'09' indicate that the device is not ready to receive additional Data frames (XOFF). Frame types X'0A' and X'0B' indicate that the device is ready to receive additional Data frames (XON).

### 10.3.6 Frame Type X'0C': Connect Request Frame

The Connect Request frame is issued by the answering device in an attempt to establish a BACnet connection. Connect Request frames contain no data segment.

### 10.3.7 Frame Type X'0D': Connect Response Frame

The Connect Response frame is issued by a device in response to a received Connect Request frame. The data field of the Connect Response frame, if present, contains a password. The length and content of the optional password field are a local matter.

### 10.3.8 Frame Type X'0E': Disconnect Request Frame

The Disconnect Request frame may be issued by either device when it wishes to discontinue the BACnet PTP dialogue. The data field of the frame conveys the reason for requesting a disconnect and shall be one octet in length. The permissible values for the data are:

- X'00' no more data needs to be transmitted,
- X'01' the peer process is being preempted,
- X'02' the received password is invalid,
- X'03' other.

### 10.3.9 Frame Type X'0F': Disconnect Response Frame

The Disconnect Response frame is used to acknowledge a previously received Disconnect Request frame. The Disconnect Response frame indicates that the responding device accepts the request to disconnect. Disconnect Response frames contain no data segment.

### 10.3.10 Frame Type X'14': Test\_Request

This frame is used to initiate a loopback test of the PTP transmission path. The use of this frame is described in detail in 10.2.3. The length of the data field of a Test\_Request frame may range from 0 to 501 octets.

### 10.3.11 Frame Type X'15': Test\_Response

This frame is used to reply to a Test\_Request frame. The use of this frame is described in detail in 10.2.3. The length of the data field of a Test\_Response frame may range from 0 to 501 octets. The data, if present, shall be those that were present in the initiating Test\_Request.

## 10.4 PTP Medium Access Control Protocol

This subclause defines the PTP protocol. The protocol definition has been broken into several discrete parts that collectively describe and define the entire PTP protocol. The first part presents a universal asynchronous receiver transmitter (UART) model of the hardware platform. This is followed by definitions of the variables and constants used to define the protocol. A finite state machine is used to define in detail the process of receiving PTP frames (see 10.4.7). An informal procedure describes in detail the process of transmitting a PTP frame (see 10.4.4). These details are referenced in subsequent subclauses, which define the protocol at a higher level of abstraction.

The process of establishing a PTP connection and terminating a PTP connection is defined by a finite state machine called the Connection State Machine (see 10.4.9). The PTP protocol is full duplex. Thus, when a PTP connection is active, each device may simultaneously play the role of transmitting and receiving PTP messages. Two separate finite-state machines define the aspects of the protocol that pertain to these two roles. These finite state machines are call the Transmission State Machine (see 10.4.10) and the Reception State Machine (see 10.4.11). The Transmission State Machine and the Reception State Machine are assumed to operate concurrently whenever the Connection State Machine is in the CONNECTED state. In this model, the Reception State Machine and the Transmission State Machine exchange information through the use of shared variables. The details of transmitting and receiving a PTP frame are described by the SendFrame, SendHeaderOctet, and SendOctet procedures and the ReceiveFrame state machine respectively.

### 10.4.1 UART Receiver Model

The receiver interface to a UART is modeled as a data register and two Boolean flags. These are intended to closely resemble the functions of commercial UART chips but in a generic and nonprescriptive fashion. The model is used by both the procedural and state machine descriptions.

#### 10.4.1.1 DataRegister

The DataRegister holds the octet most recently received. The contents of this register after the occurrence of a framing or overrun error are not specified.

#### 10.4.1.2 DataAvailable

The flag DataAvailable is TRUE if an octet is available in DataRegister. A means of setting this flag to FALSE when the associated data have been read from DataRegister shall be provided. Many common UARTs set DataAvailable FALSE automatically when DataRegister is read.

### 10.4.1.3 ReceiveError

The flag ReceiveError is TRUE if an error is detected during the reception of an octet. Many common UARTs detect several types of receive errors, in particular framing errors and overrun errors. ReceiveError shall be TRUE if any of these errors is detected.

A framing error occurs if a logical zero is received when a stop bit (logical one) is expected.

An overrun error occurs if an octet is received before an earlier octet is read from DataRegister. In general, the occurrence of overrun errors is evidence of improper design. However, it is recognized that critical system events may cause overrun errors to occur from time to time. The inclusion of this error in the state machine processing ensures that such errors are handled in a deterministic fashion.

A means of setting ReceiveError to FALSE when the associated error has been recognized shall be provided.

### 10.4.2 Variables

The variables and timers used by the PTP protocol are described in this subclause.

<b>Ack0Received</b>	A Boolean flag indicating whether (TRUE) or not (FALSE) the Reception State Machine has received an acknowledgment that a previous Data frame with a sequence number of 0 was correctly received.
<b>Ack1Received</b>	A Boolean flag indicating whether (TRUE) or not (FALSE) the Reception State Machine has received an acknowledgment that a previous Data frame with a sequence number of 1 was correctly received.
<b>DataCRC</b>	Used to accumulate the CRC on the data field of a frame.
<b>DataLength</b>	An unsigned integer in the range from 0 to 501 that indicates the expected number of octets in the Data field of a PTP frame. This value is derived from the Length field of the received PTP frame. The value of DataLength excludes any data link escape octets (X'10') and the octets in the Data CRC.
<b>DLE_Mask</b>	A bit mask used to process received octets in order to account for the fact that they may be encoded.
<b>FrameType</b>	Used by the Receive State Machine to store the frame type of a received frame.
<b>HeaderCRC</b>	Used to accumulate the CRC of the header of a frame.
<b>HeartbeatTimer</b>	A timer used to initiate Heartbeat frames to keep the link active.
<b>InactivityTimer</b>	A timer used to monitor the time since this station received a frame.
<b>Index</b>	Indicates the location of the end of the data in the InputBuffer array.
<b>InputBuffer[ ]</b>	An array of octets used to store data octets as they are received. InputBuffer is indexed from 0 to InputBufferSize-1. The maximum size of the data field of a frame is 501 octets.
<b>InputBufferSize</b>	The number of elements in the array InputBuffer[].
<b>Nak0Received</b>	A Boolean flag indicating whether (TRUE) or not (FALSE) the Reception State Machine has received a reject in response to a previous Data frame with a sequence number of 0.
<b>Nak1Received</b>	A Boolean flag indicating whether (TRUE) or not (FALSE) the Reception State Machine has received a reject in response to a previous Data frame with a sequence number of 1.

<b>ReceivedInvalidFrame</b>	A Boolean flag set to TRUE by the Receive Frame Machine if an error of any type is detected. Errors include octet framing, overrun, CRC, and receive buffer overflow.
<b>ReceivedValidFrame</b>	A Boolean flag set to TRUE by the Receive Frame Machine if a valid frame has been received.
<b>ReceptionBlocked</b>	An enumerated variable indicating whether or not reception of Data frames is blocked. The values of the enumeration are BLOCKED, ALMOST_BLOCKED, and NOT_BLOCKED. The value of this variable is determined by a buffer manager. The buffer manager process is a local matter.
<b>ResponseTimer</b>	A timer used to monitor the time spent waiting for a response from the remote device.
<b>RetryCount</b>	A counter of transmission retries.
<b>RxSequenceNumber</b>	An integer containing the sequence number (0 or 1) expected for the next Data frame to be received.
<b>SendingFrameNow</b>	A Boolean flag indicating whether (TRUE) or not (FALSE) an invocation of the SendFrame procedure is currently in the process of transmitting octets.
<b>SilenceTimer</b>	A timer used to monitor the time since this station received an octet.
<b>TransmissionBlocked</b>	A Boolean flag indicating whether (TRUE) or not (FALSE) frame transmission has been blocked. The value of this flag is determined by the receipt of XON and XOFF frames from the peer device.
<b>TransmitDataCRC</b>	Used to accumulate the CRC on the data field of a frame being transmitted.
<b>TransmitHeaderCRC</b>	Used to accumulate the CRC on the header of a frame being transmitted.
<b>TxSequenceNumber</b>	An integer containing the sequence number (0 or 1) for the next Data frame to be transmitted.

#### 10.4.3 Parameters

The following parameters are used in the PTP data link protocol.

<b>N<sub>retries</sub></b>	The maximum number of times a frame shall be sent before an error is reported. The value of N <sub>retries</sub> shall be 3.
<b>T<sub>conn_rqst</sub></b>	The maximum time allowed by a calling device for an answering device to issue a PTP Connect Request frame once the physical connection has been established and the ANSI X3.4 trigger sequence has been transmitted. The value of T <sub>conn_rqst</sub> shall be 15 seconds. This represents the processing time required for the answering device to recognize the ANSI X3.4 trigger sequence, prepare the communication port for PTP protocol, and transmit the Connect Request frame.
<b>T<sub>conn_rsp</sub></b>	The maximum time allowed to respond to a PTP Connect Request frame with a PTP Connect Response frame. The value of T <sub>conn_rsp</sub> shall be 15 seconds. This represents the time required for the calling device to process the Connect Request frame and the time required to transmit the Connect Response frame.
<b>T<sub>frame_abort</sub></b>	The maximum time allowed between receipt of octets in a frame after which time the receiving device shall assume a transmission error. The value of T <sub>frame_abort</sub> shall be 2 seconds.
<b>T<sub>heartbeat</sub></b>	The maximum delay between frame transmissions before a heartbeat frame must be sent. The value of T <sub>heartbeat</sub> shall be 15 seconds.
<b>T<sub>inactivity</sub></b>	The maximum amount of time the InactivityTimer may attain, after which a device may assume that the PTP connection has been disrupted. The value of T <sub>inactivity</sub> shall be 60 seconds.

**T<sub>response</sub>** The maximum time allowed waiting for a Data Ack frame in response to a Data frame. The value of T<sub>response</sub> shall be 5 seconds.

#### 10.4.4 SendFrame Procedure

This subclause describes the transmission of PTP data link frames. A mutual exclusion semaphore, SendingFrameNow, synchronizes access to the functionality by multiple, asynchronous invocations. Frames are transmitted in two parts, the header segment and the data segment.

*NOTE: At the implementer's option, character-level flow control may be implemented by conditioning the transmission of octets by this procedure based on the reception of the characters XOFF (X'13') and XON (X'11') or by the presence or absence of active levels on certain EIA-232 control lines. Such character-level flow control is a local matter.*

- (a) If SendingFrameNow is TRUE, then wait for the other invocation of the SendFrame procedure to set SendingFrameNow to FALSE.
- (b) Set SendingFrameNow to TRUE.
- (c) Transmit the preamble octets X'55' and X'FF'.
- (d) Initialize TransmitHeaderCRC to X'FF'.
- (e) Call SendHeaderOctet to transmit the frame type and the high and low data length octets.
- (f) Call SendOctet to transmit the one's-complement of TransmitHeaderCRC.
- (g) If the data length is zero, proceed to step (m). Otherwise, proceed to step (h).
- (h) Initialize TransmitDataCRC to X'FFFF'.
- (i) Accumulate each data octet into TransmitDataCRC.
- (j) Call SendOctet to transmit each data octet.
- (k) Call SendOctet to transmit the one's-complement of the least significant octet of TransmitDataCRC.
- (l) Call SendOctet to transmit the one's-complement of the most significant octet of TransmitDataCRC.
- (m) Set HeartbeatTimer to zero; set SendingFrameNow to FALSE. Transmission is complete.

#### 10.4.5 SendHeaderOctet Procedure

This subclause describes the transmission of the header octets of PTP frames.

- (a) Accumulate the header octet into TransmitHeaderCRC.
- (b) Call SendOctet to transmit the header octet.

#### 10.4.6 SendOctet Procedure

This subclause describes the transmission of octets of PTP frames.

- (a) If the value of the octet is not X'10', X'11', or X'13', then transmit the octet.
- (b) If the value of the octet is X'10', X'11', or X'13', then transmit the value X'10', set the high order bit of the octet, and transmit the modified octet.

### 10.4.7 Receive Frame State Machine

This subclause describes the reception of a PTP frame by a BACnet device. The description of operation is as a finite state machine. Figure 10-1 shows the Receive Frame state machine, which is described fully in this subclause. Each state is given a name, specified in all capital letters. Transitions are also named, in mixed upper- and lowercase letters. Transitions are described as a series of conditions followed by a series of actions to be taken if the conditions are met. The final action in each transition is entry into a new state, which may be the same as the current state.

The Receive Frame state machine operates independently from the other PTP state machines, communicating with them by means of flags and other variables. The description assumes that the other state machines can process received frames and other indications from the Receive Frame state machine before the next frame begins. The means by which this behavior is implemented are a local matter.

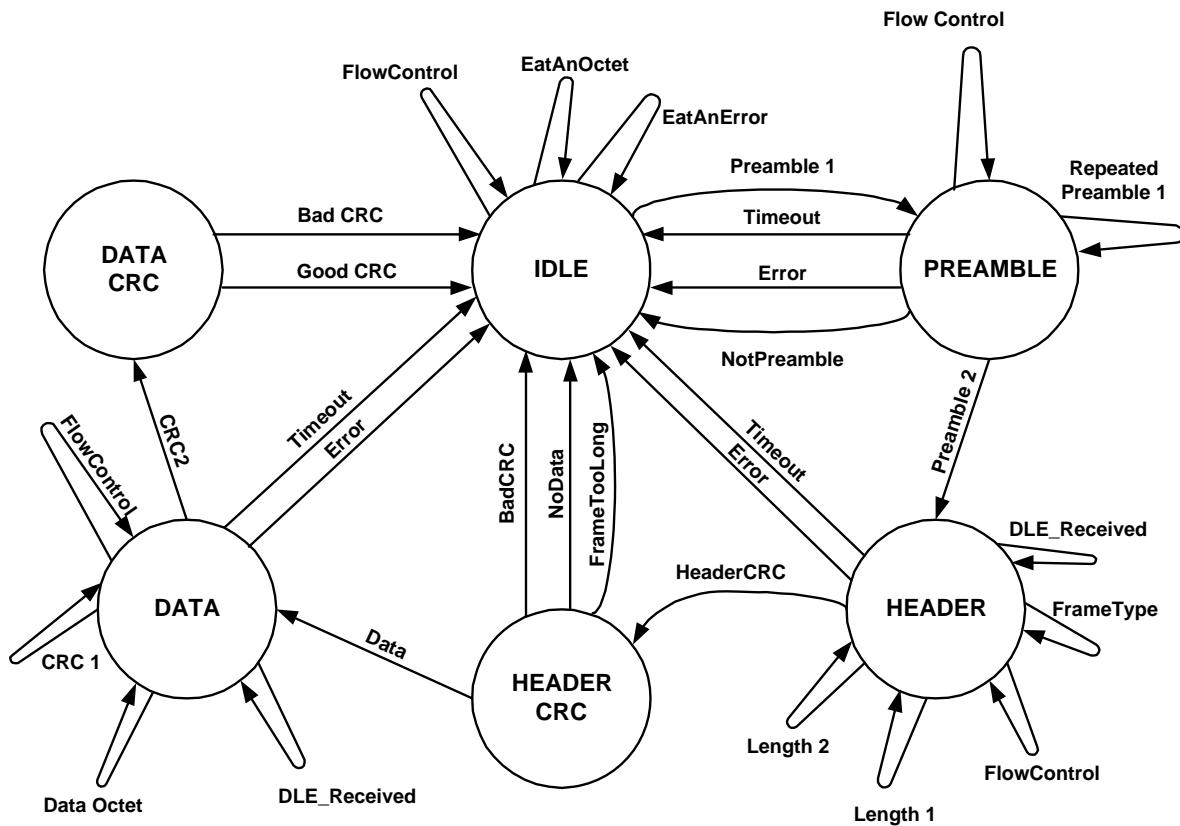


Figure 10-1. Receive Frame State Machine.

#### 10.4.7.1 IDLE

In the IDLE state, the node waits for the beginning of a frame.

##### EatAnError

If ReceiveError is TRUE,

then set SilenceTimer to zero; set ReceiveError to FALSE; and enter the IDLE state to wait for the start of a frame.

**FlowControl**

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is equal to either X'11' or X'13',

then set SilenceTimer to zero; set DataAvailable to FALSE; and enter the IDLE state.

**EatAnOctet**

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is not equal to X'55', X'11', or X'13',

then set SilenceTimer to zero; set DataAvailable to FALSE; and enter the IDLE state to wait for the start of a frame.

**Preamble1**

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is equal to X'55',

then set SilenceTimer to zero; set DataAvailable to FALSE; set ReceivedValidFrame to FALSE; set ReceivedInvalidFrame to FALSE; and enter the PREAMBLE state to receive the remainder of the frame.

**10.4.7.2 PREAMBLE**

In the PREAMBLE state, the node waits for the second octet of the preamble.

**Timeout**

If SilenceTimer is greater than  $T_{frame\_abort}$ ,

then a correct preamble has not been received. Enter the IDLE state to wait for the start of a frame.

**Error**

If ReceiveError is TRUE,

then set SilenceTimer to zero; set ReceiveError to FALSE; and enter the IDLE state to wait for the start of a frame.

**FlowControl**

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is equal to either X'11' or X'13',

then set SilenceTimer to zero; set DataAvailable to FALSE; and enter the PREAMBLE state.

**RepeatedPreamble1**

If ReceiveError is FALSE and DataAvailable is TRUE and the contents of DataRegister is equal to X'55',

then set SilenceTimer to zero; set DataAvailable to FALSE; and enter the PREAMBLE state to wait for the second preamble octet.

**NotPreamble**

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is not equal to X'FF', X'55', X'11', or X'13',

then set SilenceTimer to zero; set DataAvailable to FALSE; and enter the IDLE state to wait for the start of a frame.

**Preamble2**

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is equal to X'FF',

then set SilenceTimer to zero; set DLE\_Mask to X'00'; set HeaderCRC to X'FF'; set DataAvailable to FALSE; set Index to zero; and enter the HEADER state to receive the remainder of the frame.

### 10.4.7.3 HEADER

In the HEADER state, the node waits for the fixed frame header.

#### Timeout

If SilenceTimer is greater than  $T_{frame\_abort}$ ,

then enter the IDLE state to wait for the start of a frame.

#### Error

If ReceiveError is TRUE,

then set SilenceTimer to zero; set ReceiveError to FALSE; and enter the IDLE state to wait for the start of a frame.

#### FlowControl

If ReceiveError is FALSE and DataAvailable is TRUE and the contents of DataRegister is equal to either X'11' or X'13',

then set SilenceTimer to zero; set DataAvailable to FALSE; and enter the HEADER state.

#### DLE\_Received

If ReceiveError is FALSE and DataAvailable is TRUE and the content of the DataRegister is equal to X'10',

then set DLE\_Mask to X'80' and enter the HEADER state.

#### FrameType

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 0 and the content of DataRegister is not equal to X'10', X'11', or X'13',

then perform a bitwise AND of the ones-complement of the DLE\_Mask and the contents of DataRegister; save the result as FrameType; accumulate the result into HeaderCRC; set DataAvailable to FALSE; set DLE\_Mask to X'00'; set Index to 1; and enter the HEADER state.

#### Length1

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 1 and the content of DataRegister is not equal to X'10', X'11', or X'13',

then perform a bitwise AND of the ones-complement of the DLE\_Mask and the contents of DataRegister; accumulate the result into HeaderCRC; multiply the result by 256 and save this result as DataLength; set DataAvailable to FALSE; set DLE\_Mask to X'00'; set Index to 2; and enter the HEADER state.

#### Length2

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 2 and the content of DataRegister is not equal to X'10', X'11', or X'13',

then perform a bitwise AND of the ones-complement of the DLE\_Mask and the contents of DataRegister; accumulate the result into HeaderCRC; add the result to DataLength and save this result as DataLength; set DataAvailable to FALSE; set DLE\_Mask to X'00'; set Index to 3; and enter the HEADER state.

#### HeaderCRC

If ReceiveError is FALSE and DataAvailable is TRUE and Index is 3 and the content of DataRegister is not equal to X'10', X'11', or X'13',

then perform a bitwise AND of the ones-complement of the DLE\_Mask and the contents of DataRegister; accumulate the result into HeaderCRC; set DataAvailable to FALSE; set DLE\_Mask to X'00'; and enter the HEADER\_CRC state.

#### 10.4.7.4 HEADER\_CRC

In the HEADER\_CRC state, the node validates the CRC on the fixed frame header.

##### BadCRC

If the value of HeaderCRC is not X'55',

then enter the IDLE state to wait for the start of the next frame.

##### FrameTooLong

If the value of HeaderCRC is X'55' and DataLength is greater than InputBufferSize,

then set ReceivedInvalidFrame to TRUE to indicate that a frame cannot be received, and enter the IDLE state to wait for the start of the next frame.

##### NoData

If the value of HeaderCRC is X'55' and DataLength is zero,

then set ReceivedValidFrame to TRUE to indicate that a frame with no data has been received, and enter the IDLE state to wait for the start of the next frame.

##### Data

If the value of HeaderCRC is X'55' and DataLength is greater than zero but less than or equal to InputBufferSize,

then set Index to zero; set DataCRC to X'FFFF'; and enter the DATA state to receive the data field of the frame.

#### 10.4.7.5 DATA

In the DATA state, the node waits for the data field of a frame.

##### Timeout

If SilenceTimer is greater than  $T_{frame\_abort}$ ,

then set ReceivedInvalidFrame to TRUE to indicate that an error has occurred during the reception of a frame, and enter the IDLE state to wait for the start of the next frame.

##### Error

If ReceiveError is TRUE,

then set SilenceTimer to zero; set ReceiveError to FALSE; set ReceivedInvalidFrame to TRUE to indicate that an error has occurred during the reception of a frame; and enter the IDLE state to wait for the start of the next frame.

##### FlowControl

If ReceiveError is FALSE and DataAvailable is TRUE and the content of DataRegister is equal to either X'11' or X'13',

then set SilenceTimer to zero; set DataAvailable to FALSE; and enter the DATA state.

##### DLE\_Received

If ReceiveError is FALSE and DataAvailable is TRUE and the content of the DataRegister is equal to X'10',

then set DLE\_Mask to X'80' and enter the DATA state.

##### DataOctet

If ReceiveError is FALSE and DataAvailable is TRUE and Index is less than DataLength and the content of DataRegister is not equal to X'10', X'11', or X'13',

then perform a bitwise AND of the ones-complement of the DLE\_Mask and the contents of DataRegister; accumulate the result into DataCRC; save the results at InputBuffer[Index]; increment Index by 1; set DataAvailable to FALSE; set DLE\_Mask to X'00'; and enter the DATA state.

## CRC1

If ReceiveError is FALSE and DataAvailable is TRUE and Index is equal to DataLength and the content of DataRegister is not equal to X'10', X'11', or X'13',

then perform a bitwise AND of the ones-complement of the DLE\_Mask and the contents of DataRegister; accumulate the result into DataCRC; increment Index by 1; set DataAvailable to FALSE; set DLE\_Mask to X'00'; and enter the DATA state.

## CRC2

If ReceiveError is FALSE and DataAvailable is TRUE and Index is equal to DataLength plus 1 and the content of DataRegister is not equal to X'10', X'11', or X'13',

then perform a bitwise AND of the ones-complement of the DLE\_Mask and the contents of DataRegister; accumulate the result into DataCRC; set DataAvailable to FALSE; set DLE\_Mask to X'00'; and enter the DATA\_CRC state.

**10.4.7.6 DATA\_CRC**

In the DATA\_CRC state, the node validates the CRC on the frame data.

## BadCRC

If the value of DataCRC is not X'F0B8',

then set ReceivedInvalidFrame to TRUE to indicate that an error has occurred during the reception of a frame, and enter the IDLE state to wait for the start of the next frame.

## GoodCRC

If the value of DataCRC is X'F0B8',

then set ReceivedValidFrame to TRUE to indicate the complete reception of a valid frame, and enter the IDLE state to wait for the start of the next frame.

**10.4.8 Data Link Connection Establishment and Termination Procedures**

This subclause provides an overview of the protocol for establishing and terminating PTP connections. The details for this protocol are defined by the Connection State Machine in 10.4.9.

Upon establishment of a physical connection between BACnet devices, the calling device shall transmit the seven character ANSI X3.4 trigger sequence "BACnet<CR>", where "<CR>" denotes the ANSI X3.4 character X'0D', to inform the answering device that it wishes to establish a BACnet PTP connection. The answering device shall then transmit a Connect Request frame. The calling device shall respond by transmitting a Connect Response frame including a password, if password protection is implemented. After successful completion of this process, including verification of the password, both devices enter the data exchange phase.

Upon completion of the data link establishment procedure, each device shall assume that the other is not yet ready to receive Data frames. When a Heartbeat XON frame is received from a device, data transmission to that device may begin. Upon completion of the data link establishment procedure and when each device is ready to receive Data frames, it shall immediately transmit a Heartbeat XON frame.

When either device wishes to terminate an active PTP connection, it shall transmit a Disconnect Request frame indicating the reason for the disconnection. The peer device shall respond by transmitting a Disconnect Response frame to acknowledge the request. Both devices shall then notify their respective network layers of data link termination.

If no Disconnect Response is received in reply to the Disconnect Request, an assumption is made that the request was not received by the peer device. The Disconnect Request is retransmitted up to three times. If a Disconnect Response is not received after the third retry, the connection is unilaterally terminated.

If, following transmission of a Disconnect Request, a device receives a Disconnect Request frame from the peer device, the device shall respond by transmitting a Disconnect Response frame and terminating the connection.

If, following transmission of a Disconnect Request, a device receives a Data frame from the peer device, the device shall not acknowledge the Data frame. Thus, a Disconnect Request is an attempt to terminate the connection in an orderly manner, but it is not negotiable. Once a Disconnect Request has been made, the connection shall be terminated. If the peer device needs to continue the communication, a new connection must be established.

#### 10.4.9 Connection State Machine

The operation of the connection establishment state machine is described in this subclause and is depicted in Figure 10-2. The state machine models the actions taken to establish a BACnet PTP data link between two devices and includes the actions required for both the calling and answering devices.

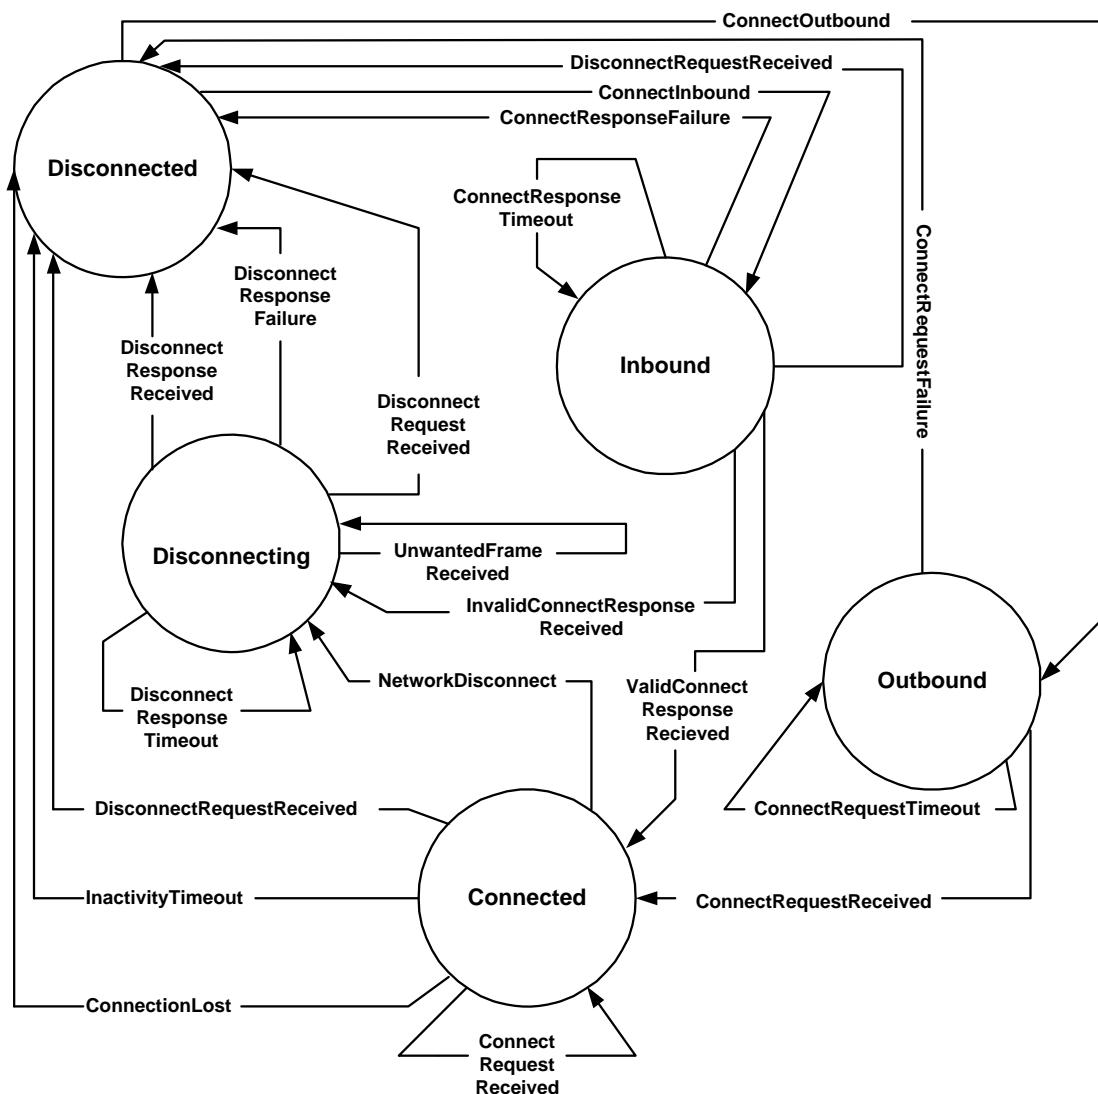


Figure 10-2. Point-To-Point Connection State Machine

#### 10.4.9.1 DISCONNECTED

In this state, the device waits for the network layer to initiate a PTP data link connection or for the physical layer to indicate the occurrence of a physical layer connection.

##### ConnectOutbound

If a DL-CONNECT.request is received,

then establish a physical connection; transmit the "BACnet<CR>" trigger sequence; set RetryCount to zero; set ResponseTimer to zero; and enter the OUTBOUND state.

##### ConnectInbound

If a physical layer connection has been made and the "BACnet<CR>" trigger sequence is received,

then call SendFrame to transmit a Connect Request frame; set RetryCount to zero; set ResponseTimer to zero; and enter the INBOUND state.

#### 10.4.9.2 OUTBOUND

In this state, the network layer has issued a request to start the data link as a caller, and the device is waiting for a Connect Request frame from the answering device.

##### ConnectRequestReceived

If ReceivedValidFrame is TRUE and FrameType is equal to Connect Request,

then set ReceivedValidFrame to FALSE; call SendFrame to transmit a Connect Response frame containing the password contained in the "data" parameter of the DL-CONNECT.request that initiated the connection; issue a DL-CONNECT.confirm to notify the network layer that a connection has been established; and enter the CONNECTED state.

##### ConnectRequestTimeout

If ResponseTimer is greater than or equal to  $T_{conn\_rqst}$  and RetryCount is less than  $N_{retries}$ ,

then set RetryCount to RetryCount + 1; retransmit the "BACnet<CR>" trigger sequence; set the ResponseTimer to zero; and enter the OUTBOUND state.

##### ConnectRequestFailure

If ResponseTimer is greater than or equal to  $T_{conn\_rqst}$  and RetryCount is greater than or equal to  $N_{retries}$ ,

then issue a DL-CONNECT.confirm to notify the network layer of the failure and enter the DISCONNECTED state.

#### 10.4.9.3 INBOUND

In this state, the Connection State Machine has recognized that the calling device wishes to establish a BACnet connection, and the local device is waiting for a Connect Response frame from the calling device.

##### ValidConnectResponseReceived

If ReceivedValidFrame is TRUE and FrameType is equal to Connect Response and a password is not needed or a valid password is present in the data field of the frame,

then set ReceivedValidFrame to FALSE; issue a DL-CONNECT.indication to notify the network layer of the connection; and enter the CONNECTED state.

##### InvalidConnectResponseReceived

If ReceivedValidFrame is TRUE and FrameType is equal to Connect Response and a password is needed but not present or an invalid password is present in the data field of the frame,

then set ReceivedValidFrame to FALSE; call SendFrame to transmit a Disconnect Request frame indicating the receipt of an invalid password; set ResponseTimer to zero; set RetryCount to zero; and enter the DISCONNECTING state.

#### ConnectResponseTimeout

If ResponseTimer is greater than or equal to  $T_{conn\_rsp}$  and RetryCount is less than  $N_{retries}$ ,

then set RetryCount to RetryCount + 1; call SendFrame to transmit a Connect Request frame; set ResponseTimer to zero; and enter the INBOUND state.

#### ConnectResponseFailure

If ResponseTimer is greater than or equal to  $T_{conn\_rsp}$  and RetryCount is greater than or equal to  $N_{retries}$ ,

then enter the DISCONNECTED state.

#### DisconnectRequestReceived

If ReceivedValidFrame is TRUE and FrameType is equal to Disconnect Request,

then set ReceivedValidFrame to FALSE; call SendFrame to transmit a Disconnect Response frame; and enter the DISCONNECTED state.

#### 10.4.9.4 CONNECTED

In this state, the connection procedure has been completed, and the two devices may exchange BACnet PDUs. The data link remains in this state until termination.

#### NetworkDisconnect

If a DL-DISCONNECT.request is received,

then call SendFrame to transmit a Disconnect Request frame; set ResponseTimer to zero; issue a DL-DISCONNECT.confirm to notify the network layer of the disconnection; set RetryCount to zero; and enter the DISCONNECTING state.

#### DisconnectRequestReceived

If ReceivedValidFrame is TRUE and FrameType is equal to Disconnect Request,

then set ReceivedValidFrame to FALSE; call SendFrame to transmit a Disconnect Response frame; issue a DL-DISCONNECT.indication to notify the network layer of the disconnection; and enter the DISCONNECTED state.

#### ConnectRequestReceived

If ReceivedValidFrame is TRUE and FrameType is equal to Connect Request,

then set ReceivedValidFrame to FALSE; call SendFrame to transmit a Connect Response frame; issue a DL-CONNECT.indication to notify the network layer of the connection; and enter the CONNECTED state.

#### InactivityTimeout

If InactivityTimer is greater than  $T_{inactivity}$  and ReceivedValidFrame is FALSE,

then issue a DL-DISCONNECT.indication to notify the network layer of the disconnection and enter the DISCONNECTED state.

#### ConnectionLost

If the physical connection has been terminated, e.g., due to loss of carrier,

then issue a DL-DISCONNECT.indication to notify the network layer of the disconnection and enter the DISCONNECTED state.

#### 10.4.9.5 DISCONNECTING

In this state, the network layer has requested termination of the data link. The device is waiting for a Disconnect Response frame from the peer device.

**DisconnectResponseReceived**

If ReceivedValidFrame is TRUE and FrameType is equal to Disconnect Response,

then set ReceivedValidFrame to FALSE and enter the DISCONNECTED state.

**DisconnectRequestReceived**

If ReceivedValidFrame is TRUE and FrameType is equal to Disconnect Request,

then set ReceivedValidFrame to FALSE; call SendFrame to transmit a Disconnect Response frame; and enter the DISCONNECTED state.

**UnwantedFrameReceived**

If ReceivedValidFrame is TRUE and FrameType is not equal to either Disconnect Response or Disconnect Request,

then set ReceivedValidFrame to FALSE and enter the DISCONNECTING state. (Note that ResponseTimer is not reset in this case.)

**DisconnectResponseTimeout**

If ResponseTimer is greater than  $T_{\text{response}}$  and ReceivedValidFrame is FALSE and RetryCount is less than  $N_{\text{retries}}$ ,

then increment RetryCount; call SendFrame to transmit a Disconnect Request frame; set ResponseTimer to zero; and enter the DISCONNECTING state.

**DisconnectResponseFailure**

If ResponseTimer is greater than or equal to  $T_{\text{response}}$  and ReceivedValidFrame is FALSE and RetryCount is greater than or equal to  $N_{\text{retries}}$ ,

then enter the DISCONNECTED state.

#### 10.4.10 Transmission State Machine

The operation of the Transmission State Machine is described in this subclause and is depicted in Figure 10-3. The state machine models the actions taken to transmit data frames and receive corresponding acknowledgments.

##### 10.4.10.1 TRANSMIT IDLE

In this state, the transmitter is waiting for the data link to be established between the local device and the peer device. The transmitter waits to be notified that a peer device is ready to communicate.

**ConnectionEstablishedXON**


If the Connection State Machine is in the CONNECTED state and ReceptionBlocked is equal to NOT\_BLOCKED,

then call SendFrame to transmit a HeartbeatXON frame; set TxSequenceNumber to zero; set HeartbeatTimer to zero; and enter the TRANSMIT BLOCKED state.

**ConnectionEstablishedXOFF**

If the Connection State Machine is in the CONNECTED state and ReceptionBlocked is equal to ALMOST\_BLOCKED or BLOCKED,

then call SendFrame to transmit a HeartbeatXOFF frame; set TxSequenceNumber to zero; and enter the TRANSMIT BLOCKED state.

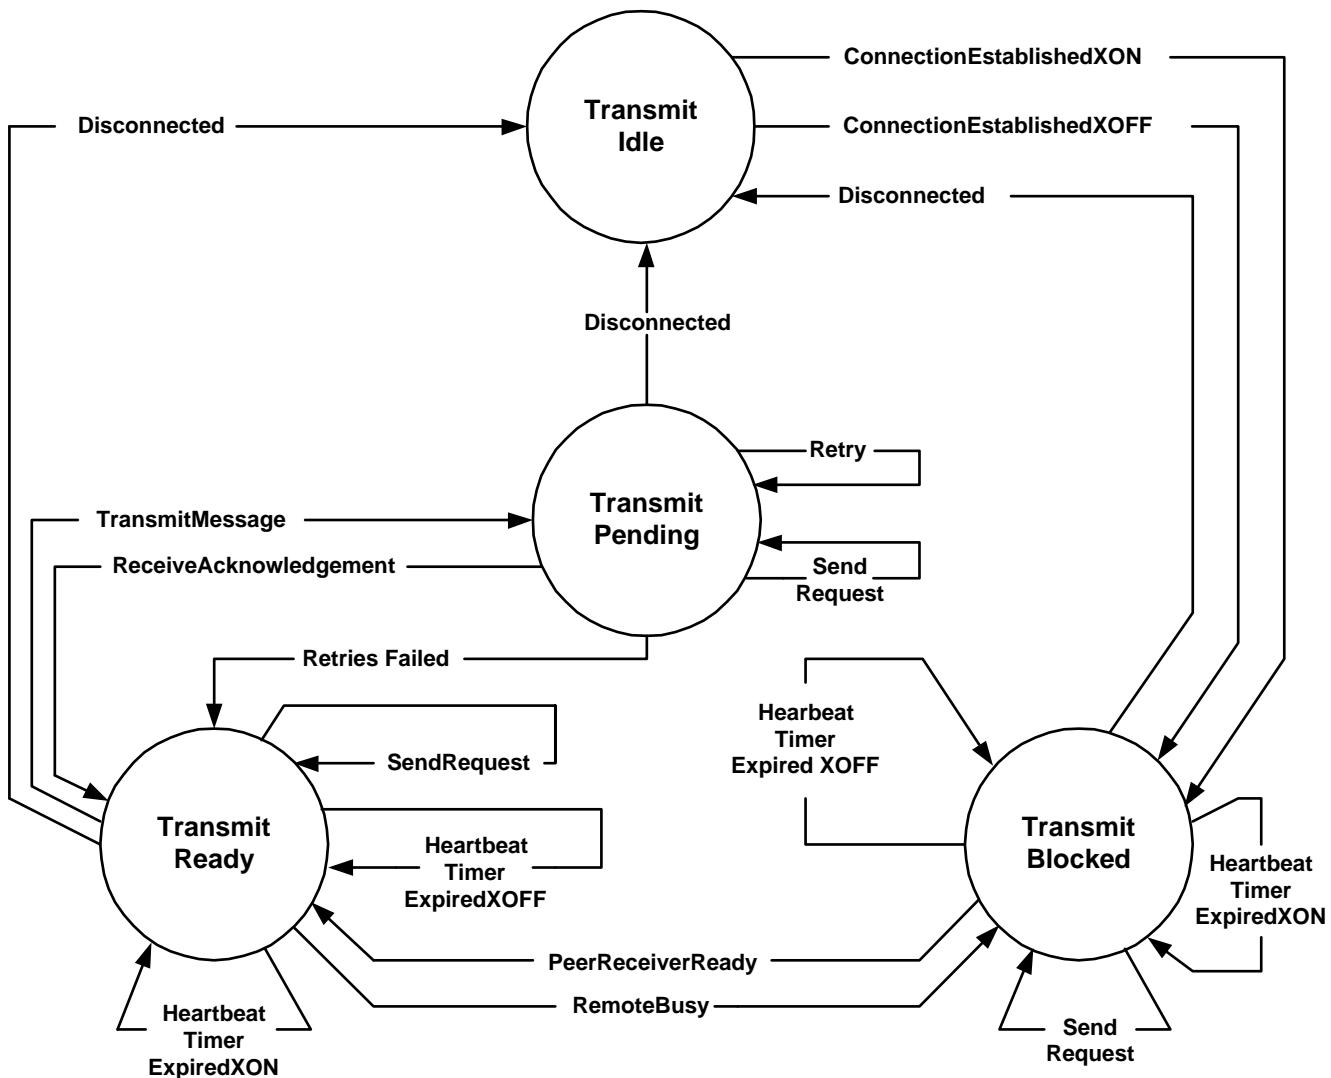**Figure 10-3.** Point-To-Point Transmission State Machine.

#### 10.4.10.2 TRANSMIT BLOCKED

In this state, the peer device has indicated that it is not ready to receive data frames. The local device may have data ready to transmit. The local device periodically transmits a Heartbeat frame to maintain the data-link and waits for the peer device to become ready to receive data or for the termination of the data link.

**SendRequest**

If a DL-UNITDATA.request primitive is received,

then queue the request for later transmission and enter the TRANSMIT BLOCKED state.

**PeerReceiverReady**

If TransmissionBlocked is equal to FALSE,

then enter the TRANSMIT READY state.

**Disconnected**

If the Connection State Machine is in the DISCONNECTED state,

then enter the TRANSMIT IDLE state.

#### HeartbeatTimerExpiredXON

If HeartbeatTimer is greater than  $T_{heartbeat}$  and ReceptionBlocked is equal to NOT\_BLOCKED,

then call SendFrame to transmit a HeartbeatXON frame; set HeartbeatTimer to zero; and enter the TRANSMIT BLOCKED state.

#### HeartbeatTimerExpiredXOFF

If HeartbeatTimer is greater than  $T_{heartbeat}$  and ReceptionBlocked is equal to BLOCKED or ALMOST\_BLOCKED,

then call SendFrame to transmit a HeartbeatXOFF frame; set HeartbeatTimer to zero; and enter the TRANSMIT BLOCKED state.

### 10.4.10.3 TRANSMIT READY

In this state, the peer device has indicated its readiness to receive Data frames, but the local device has no data ready to transmit. The local device periodically transmits a Heartbeat frame to maintain the data link and waits for a local request to transmit data or for the termination of the data link.

#### Disconnected

If the Connection State Machine is in the DISCONNECTED state,

then enter the TRANSMIT IDLE state.

#### SendRequest

If a DL-UNITDATA.request primitive is received,

then queue the request for later transmission and enter the TRANSMIT READY state.

#### TransmitMessage

If the transmit queue is not empty and TransmissionBlocked is equal to FALSE,

then call SendFrame to transmit the frame at the head of the queue using a Data frame type (Data 0 or Data 1) that indicates TxSequenceNumber; set RetryCount to zero; set ResponseTimer to zero; and enter the TRANSMIT PENDING state.

#### RemoteBusy

If TransmissionBlocked is equal to TRUE,

then enter the TRANSMIT BLOCKED state.

#### HeartbeatTimerExpiredXON

If HeartbeatTimer is greater than  $T_{heartbeat}$  and ReceptionBlocked is equal to NOT\_BLOCKED,

then call SendFrame to transmit a HeartbeatXON frame; set HeartbeatTimer to zero; and enter the TRANSMIT READY state.

#### HeartbeatTimerExpiredXOFF

If HeartbeatTimer is greater than  $T_{heartbeat}$  and ReceptionBlocked is equal to BLOCKED or ALMOST\_BLOCKED,

then call SendFrame to transmit a HeartbeatXOFF frame; set HeartbeatTimer to zero; and enter the TRANSMIT READY state.

**10.4.10.4 TRANSMIT PENDING**

In this state, the local device has transmitted a data frame to the peer device and is waiting for an acknowledgment from the peer device.

## Disconnected

If the Connection State Machine is in the DISCONNECTED state,

then enter the TRANSMIT IDLE state.

## SendRequest

If a DL-UNITDATA.request primitive is received,

then queue the request for later transmission and enter the TRANSMIT PENDING state.

## ReceiveAcknowledgment

If TxSequenceNumber is equal to 0 and Ack0Received is equal to TRUE or if TxSequenceNumber is equal to 1 and Ack1Received is equal to TRUE,

then set TxSequenceNumber = 1 - TxSequenceNumber; set Ack0Received to FALSE; set Ack1Received to FALSE; and enter the TRANSMIT READY state.

## Retry

If RetryCount is less than  $N_{\text{retries}}$  and either

- (a) TxSequenceNumber is equal to 0 and Nak0Received is equal to TRUE or
- (b) TxSequenceNumber is equal to 1 and Nak1Received is equal to TRUE or
- (c) ResponseTimer is greater than  $T_{\text{response}}$ ,

then set RetryCount to RetryCount + 1; set Nak0Received to FALSE; set Nak1Received to FALSE; set ResponseTimer to zero; call SendFrame to retransmit the Data frame; and enter the TRANSMIT PENDING state.

## RetriesFailed

If RetryCount is equal to  $N_{\text{retries}}$ , and either

- (a) TxSequenceNumber is equal to 0 and Nak0Received is equal to TRUE or
- (b) TxSequenceNumber is equal to 1 and Nak1Received is equal to TRUE or
- (c) ResponseTimer is greater than  $T_{\text{response}}$ ,

then set RetryCount to 0; set Nak0Received to FALSE; set Nak1Received to FALSE; set ResponseTimer to zero; and enter the TRANSMIT READY state.

**10.4.11 Reception State Machine**

The operation of the Reception State Machine is described in this subclause and is depicted in Figure 10-4.

**10.4.11.1 RECEIVE IDLE**

In this state, the receiver is waiting for the data link to be established between the local device and the peer device. The receiver waits to be notified that a peer device is ready to communicate.

## ConnectionEstablished

If the Connection State Machine is in the CONNECTED state,

then set RxSequenceNumber to zero and enter the RECEIVE READY state.

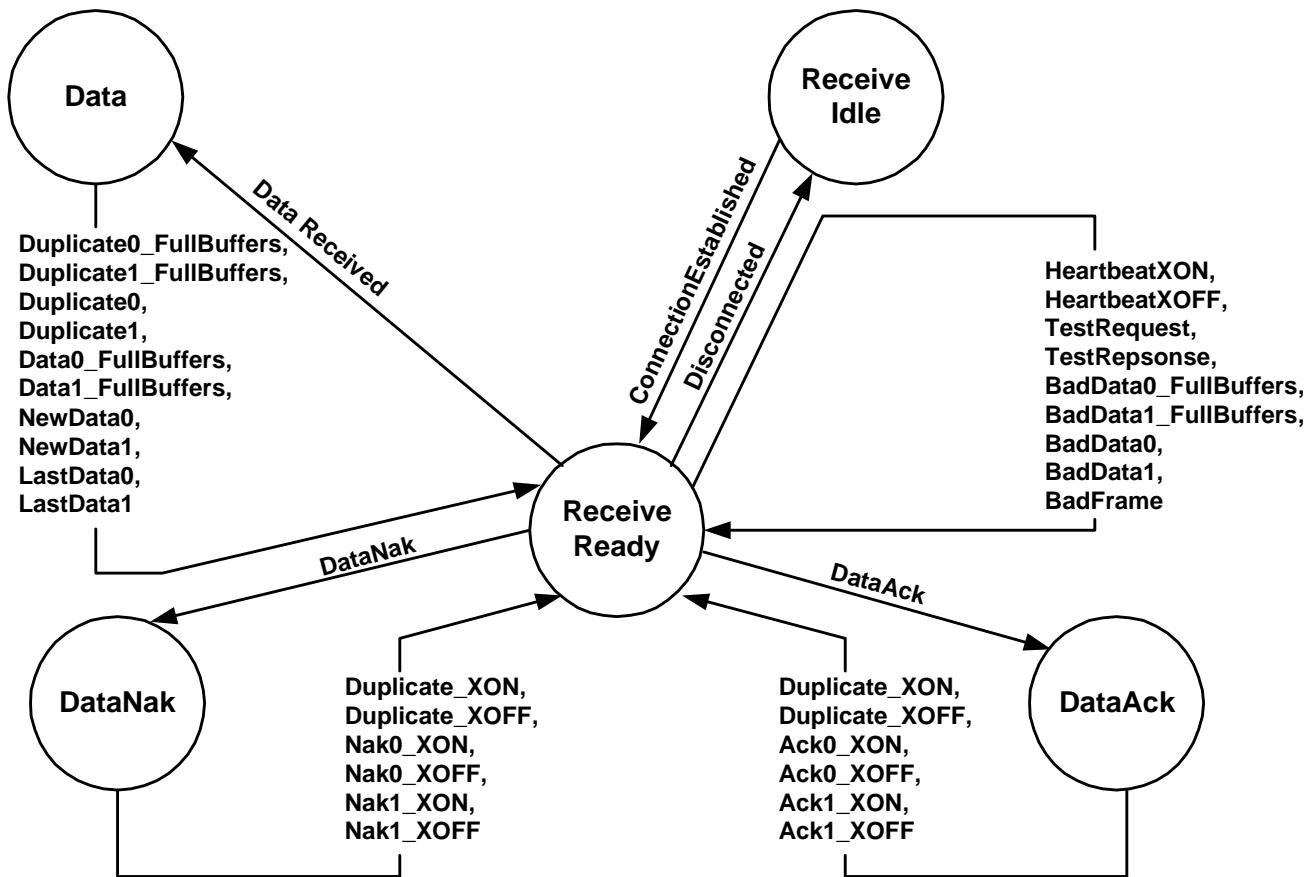


Figure 10-4. Point-To-Point Reception State Machine.

#### 10.4.11.2 RECEIVE READY

In this state, the device is ready to receive frames from the peer device.

##### DataReceived

If ReceivedValidFrame is TRUE and FrameType is equal to Data 0 or Data 1,

then set ReceivedValidFrame to FALSE; set InactivityTimer to zero; and enter the DATA state.

##### DataAck

If ReceivedValidFrame is TRUE and FrameType is equal to Data Ack 0 XOFF, Data Ack 0 XON, Data ACK 1 XOFF, or Data Ack 1 XON,

then set ReceivedValidFrame to FALSE; set InactivityTimer to zero; and enter the DATA ACK state.

##### DataNak

If ReceivedValidFrame is TRUE and FrameType is equal to Data Nak 0 XOFF, Data Nak 0 XON, Data Nak 1 XOFF, or Data Nak 1 XON,

then set ReceivedValidFrame to FALSE; set InactivityTimer to zero; and enter the DATA NAK state.

##### HeartbeatXON

If ReceivedValidFrame is TRUE and FrameType is equal to Heartbeat XON,

then set TransmissionBlocked to FALSE; set InactivityTimer to zero; set ReceivedValidFrame to FALSE; and enter the RECEIVE READY state.

#### HeartbeatXOFF

If ReceivedValidFrame is TRUE and FrameType is equal to Heartbeat XOFF,

then set TransmissionBlocked to TRUE; set InactivityTimer to zero; set ReceivedValidFrame to FALSE; and enter the RECEIVE READY state.

#### TestRequest

If ReceivedValidFrame is TRUE and FrameType is equal to Test\_Request,

then call SendFrame to transmit the Test\_Response; set InactivityTimer to zero; set ReceivedValidFrame to FALSE; and enter the RECEIVE READY state.

#### TestResponse

If ReceivedValidFrame is TRUE and FrameType is equal to Test\_Response,

then issue a DL-UNITDATA.indication conveying the Test\_Response data; set InactivityTimer to zero; set ReceivedValidFrame to FALSE; and enter the RECEIVE READY state.

#### BadData0\_FullBuffers

If ReceivedInvalidFrame is TRUE and FrameType is equal to Data 0 and ReceptionBlocked is equal to BLOCKED,

then discard the frame; set InactivityTimer to zero; call SendFrame to transmit a Data Nak 0 XOFF frame; set ReceivedInvalidFrame to FALSE; and enter the RECEIVE READY state.

#### BadData1\_FullBuffers

If ReceivedInvalidFrame is TRUE and FrameType is equal to Data 1 and ReceptionBlocked is equal to BLOCKED,

then discard the frame; set InactivityTimer to zero; call SendFrame to transmit a Data Nak 1 XOFF frame; set ReceivedInvalidFrame to FALSE; and enter the RECEIVE READY state.

#### BadData0

If ReceivedInvalidFrame is TRUE and FrameType is equal to Data 0 and ReceptionBlocked is equal to NOT\_BLOCKED or ALMOST\_BLOCKED,

then discard the frame; set InactivityTimer to zero; call SendFrame to transmit a Data Nak 0 XON frame; set ReceivedInvalidFrame to FALSE; and enter the RECEIVE READY state.

#### BadData1

If ReceivedInvalidFrame is TRUE and FrameType is equal to Data 1 and ReceptionBlocked is equal to NOT\_BLOCKED or ALMOST\_BLOCKED,

then discard the frame; set InactivityTimer to zero; call SendFrame to transmit a Data Nak 1 XON frame; set ReceivedInvalidFrame to FALSE; and enter the RECEIVE READY state.

#### BadFrame

If ReceivedInvalidFrame is TRUE and FrameType is not equal to either Data 0 or Data 1,

then discard the frame; set InactivityTimer to zero; set ReceivedInvalidFrame to FALSE; and enter the RECEIVE READY state.

**Disconnected**

If the Connection State Machine is in the DISCONNECTED state,  
then enter the RECEIVE IDLE state.

**10.4.11.3 DATA**

In this state the device has received a Data frame for processing.

**Duplicate0\_FullBuffers**

If FrameType is equal to Data 0 and RxSequenceNumber is equal to 1 and ReceptionBlocked is equal to BLOCKED,

then discard the frame as a duplicate; call SendFrame to transmit a Data Ack 0 XOFF frame; and enter the RECEIVE READY state.

**Duplicate1\_FullBuffers**

If FrameType is equal to Data 1 and RxSequenceNumber is equal to 0 and ReceptionBlocked is equal to BLOCKED,

then discard the frame as a duplicate; call SendFrame to transmit a Data Ack 1 XOFF frame; and enter the RECEIVE READY state.

**Duplicate0**

If FrameType is equal to Data 0 and RxSequenceNumber is equal to 1 and ReceptionBlocked is equal to NOT\_BLOCKED or ALMOST\_BLOCKED,

then discard the frame as a duplicate; call SendFrame to transmit a Data Ack 0 XON frame; and enter the RECEIVE READY state.

**Duplicate1**

If FrameType is equal to Data 1 and RxSequenceNumber is equal to 0 and ReceptionBlocked is equal to NOT\_BLOCKED or ALMOST\_BLOCKED,

then discard the frame as a duplicate; call SendFrame to transmit a Data Ack 1 XON frame; and enter the RECEIVE READY state.

**Data0\_FullBuffers**

If FrameType is equal to Data 0 and RxSequenceNumber is equal to 0 and ReceptionBlocked is equal to BLOCKED,

then discard the frame for lack of space; call SendFrame to transmit a Data Nak 0 XOFF frame; and enter the RECEIVE READY state.

**Data1\_FullBuffers**

If FrameType is equal to Data 1 and RxSequenceNumber is equal to 1 and ReceptionBlocked is equal to BLOCKED,

then discard the frame for lack of space; call SendFrame to transmit a Data Nak 1 XOFF frame; and enter the RECEIVE READY state.

**NewData0**

If FrameType is equal to Data 0 and RxSequenceNumber is equal to 0 and ReceptionBlocked is equal to NOT\_BLOCKED,

then issue a DL-UNITDATA.indication conveying the data; call SendFrame to transmit a Data Ack 0 XON frame; set RxSequenceNumber to 1; and enter the RECEIVE READY state.

**NewData1**

If FrameType is equal to Data 1 and RxSequenceNumber is equal to 1 and ReceptionBlocked is equal to NOT\_BLOCKED,

then issue a DL-UNITDATA.indication conveying the data; call SendFrame to transmit a Data Ack 1 XON frame; set RxSequenceNumber to 0; and enter the RECEIVE READY state.

**LastData0**

If FrameType is equal to Data 0 and RxSequenceNumber is equal to 0 and ReceptionBlocked is equal to ALMOST\_BLOCKED,

then issue a DL-UNITDATA.indication conveying the data; call SendFrame to transmit a Data Ack 0 XOFF frame; set RxSequenceNumber to 1; and enter the RECEIVE READY state.

**LastData1**

If FrameType is equal to Data 1 and RxSequenceNumber is equal to 1 and ReceptionBlocked is equal to ALMOST\_BLOCKED,

then issue a DL-UNITDATA.indication conveying the data; call SendFrame to transmit a Data Ack 1 XOFF frame; set RxSequenceNumber to 0; and enter the RECEIVE READY state.

**10.4.11.4 DATA ACK**

In this state the device has received a Data Ack frame for processing.

**Duplicate\_XON**

If FrameType is equal to Data Ack 0 XON and TxSequenceNumber is equal to 1, or if FrameType is equal to Data Ack 1 XON and TxSequenceNumber is equal to 0,

then set TransmissionBlocked to FALSE and enter the RECEIVE READY state.

**Duplicate\_XOFF**

If FrameType is equal to Data Ack 0 XOFF and TxSequenceNumber is equal to 1, or if FrameType is equal to Data Ack 1 XOFF and TxSequenceNumber is equal to 0,

then set TransmissionBlocked to TRUE and enter the RECEIVE READY state.

**Ack0\_XON**

If FrameType is equal to Data Ack 0 XON and TxSequenceNumber is equal to 0,

then set Ack0Received to TRUE; set TransmissionBlocked to FALSE; and enter the RECEIVE READY state.

**Ack0\_XOFF**

If FrameType is equal to Data Ack 0 XOFF and TxSequenceNumber is equal to 0,

then set Ack0Received to TRUE; set TransmissionBlocked to TRUE; and enter the RECEIVE READY state.

**Ack1\_XON**

If FrameType is equal to Data Ack 1 XON and TxSequenceNumber is equal to 1,

then set Ack1Received to TRUE; set TransmissionBlocked to FALSE; and enter the RECEIVE READY state.

**Ack1\_XOFF**

If FrameType is equal to Data Ack 1 XOFF and TxSequenceNumber is equal to 1,

then set Ack1Received to TRUE; set TransmissionBlocked to TRUE; and enter the RECEIVE READY state.

**10.4.11.5 DATA NAK**

In this state the device has received a Data Nak frame for processing.

**Duplicate\_XON**

If FrameType is equal to Data Nak 0 XON and TxSequenceNumber is equal to 1, or if FrameType is equal to Data Nak 1 XON and TxSequenceNumber is equal to 0,

then set TransmissionBlocked to FALSE and enter the RECEIVE READY state.

**Duplicate\_XOFF**

If FrameType is equal to Data Nak 0 XOFF and TxSequenceNumber is equal to 1, or if FrameType is equal to Data Nak 1 XOFF and TxSequenceNumber is equal to 0,

then set TransmissionBlocked to TRUE and enter the RECEIVE READY state.

**Nak0\_XON**

If FrameType is equal to Data Nak 0 XON and TxSequenceNumber is equal to 0,

then set Nak0Received to TRUE; set TransmissionBlocked to FALSE; and enter the RECEIVE READY state.

**Nak0\_XOFF**

If FrameType is equal to Data Nak 0 XOFF and TxSequenceNumber is equal to 0,

then set Nak0Received to TRUE; set TransmissionBlocked to TRUE; and enter the RECEIVE READY state.

**Nak1\_XON**

If FrameType is equal to Data Nak 1 XON and TxSequenceNumber is equal to 1,

then set Nak1Received to TRUE; set TransmissionBlocked to FALSE; and enter the RECEIVE READY state.

**Nak1\_XOFF**

If FrameType is equal to Data Nak 1 XOFF and TxSequenceNumber is equal to 1,

then set Nak1Received to TRUE; set TransmissionBlocked to TRUE; and enter the RECEIVE READY state.

## 11 DATA LINK/PHYSICAL LAYERS: EIA/CEA-709.1 ("LonTalk") LAN

This clause describes the transport of BACnet LSDUs using the services of the LonTalk protocol described in *EIA/CEA-709.1-B-2002 Control Network Protocol Specification*. EIA/CEA-709.1-B-2002, as amended and extended by the Electronic Industries Alliance, is deemed to be included in this standard by reference. Persons desiring to implement BACnet in products containing the LonTalk Protocol may obtain an OEM license to do so, without cost, by contacting Echelon Corporation, San Jose, California.

### 11.1 The Use of ISO 8802-2 Logical Link Control (LLC)

Standard BACnet networks may pass BACnet link service data units (LSDUs) using the data link services of ISO 8802-2 LLC. A BACnet LSDU consists of an NPDU constructed as described in Clause 6. BACnet devices using LonTalk LAN technology shall conform to the requirements of LLC Class I, subject to the constraints specified in this clause. Class I LLC service consists of Type 1 LLC - Unacknowledged Connectionless-Mode service. LLC parameters shall be conveyed using the DL-UNITDATA primitives as described in the referenced standards.

In a LonTalk implementation, BACnet DL-UNITDATA primitives are mapped into the LonTalk Application Layer Interface. The mapping of these primitives onto the LonTalk Application layer primitives is described in 11.3.

### 11.2 Parameters Required by the LLC Primitives

The DL-UNITDATA primitive requires source address, destination address, data, and priority parameters. Each source and destination address consists of a LonTalk address, link service access point (LSAP), and a message code (MC). The LonTalk address is a variable-length value determined by the configuration of the BACnet device, and the MC used to indicate a BACnet frame is the single-octet value X'4E'. Since the LonTalk message code identifies the BACnet network layer, the LSAP is not used. The data parameter is the NPDU from the network layer.

### 11.3 Mapping the LLC Services to the LonTalk Application Layer

The Type 1 Unacknowledged Connectionless LLC service, DL\_UNITDATA.request shall map onto the LonTalk msg\_send request primitive, while the DL\_UNITDATA.indication shall map to the LonTalk msg\_receive request primitive.

An LPDU longer than 228 octets cannot be conveyed via LonTalk.

### 11.4 Parameters Required by the Application Layer Primitives

The LonTalk Application layer primitives are msg\_send and msg\_receive. These convey the encoded LLC data using the destination LonTalk address described above in conjunction with the BACnet message code. The DL\_UNITDATA.request primitive contains the following parameters:

```
DL_UNITDATA.request (
    destination_address,
    data,
    priority,
    message_code
)
```

The 'destination\_address' consists of any form of a LonTalk address except address format 2B (which is used exclusively for multicast acknowledgments and multicast responses). See Figure 6-4. The 'data' parameter specifies the LSDU to be transferred. The 'priority' parameter conveys the priority specified for the data unit. Any BACnet priority other than "Normal message" shall be sent using the LonTalk priority mechanism. The 'message\_code' parameter shall be X'4E' for BACnet LPDUs.

LonTalk Authentication is not supported in BACnet.

LonTalk "UNACKD" and "UNACKD\_RPT" are the only LonTalk services that shall be allowed within BACnet. The choice between these two LonTalk services and the repeat count for the "UNACKD\_RPT" service shall be considered a local matter.

The DL\_UNITDATA.indication primitive contains the following parameters:


```
DL_UNITDATA.indication (
    source_address,
    destination_address,
    length,
    data,
    message_code,
    priority
)
```

Except as noted below, the parameters in DL\_UNITDATA.indication convey the same information as the parameters in DL\_UNITDATA.request.

The 'source\_address' always consists of address format 2A.

The 'length' indicates the number of octets contained in the 'data' parameter.

Figure 11-1 illustrates the format of a MPDU on a LonTalk BACnet network destined for a device on the same LonTalk BACnet network.

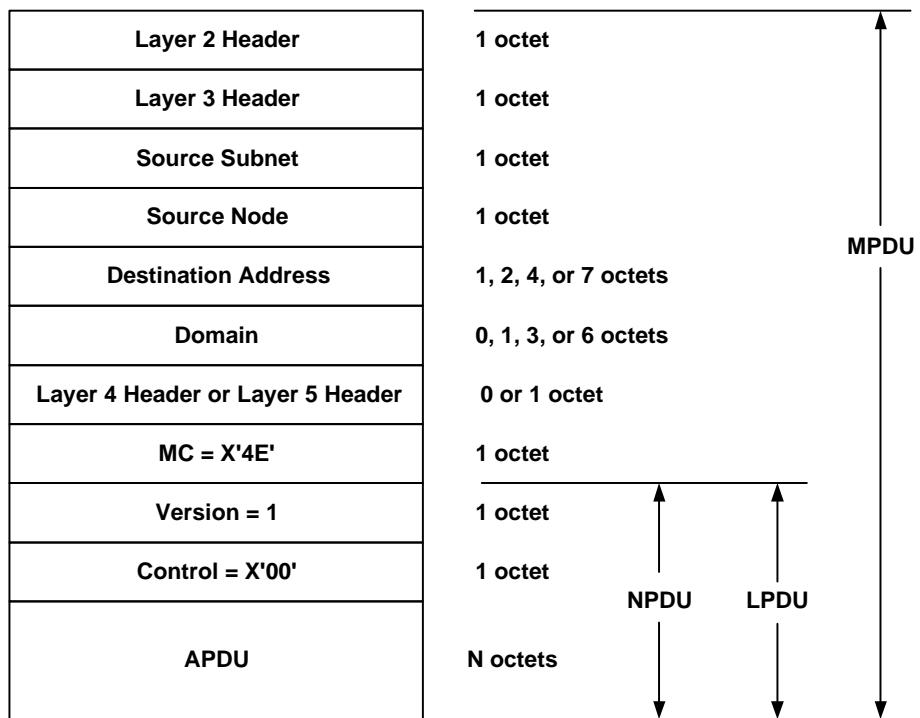

**Figure 11-1.** Format of an MPDU on a LonTalk network destined for a device on the same LonTalk BACnet network.

## 11.5 Physical Media

Any of the "Standard Channel Types" defined in the *LonMark™ Layer 1-6 Interoperability Guidelines* is acceptable. Transceivers built for this network technology shall follow the guidelines specified in the *LonMark™ Layer 1-6 Interoperability Guidelines*. The most recent version of the *LonMark™ Layer 1-6 Interoperability Guidelines* as released by the LonMark™ Interoperability Association (currently version 3.3) shall apply.

## 12 MODELING CONTROL DEVICES AS A COLLECTION OF OBJECTS

The data structures used in a device to store information are a local matter. In order to exchange that information with another device using this protocol, there must be a "network-visible" representation of the information that is standardized. An object-oriented approach has been adopted to provide this network-visible representation. This clause defines a set of standard object types. These object types define an abstract data structure that provides a framework for building the application layer services. The application layer services are designed, in part, to access and manipulate the properties of these standard object types. Mapping the effect of these services to the real data structures used in the device is a local matter. The number of instances of a particular object type that a device will support is also a local matter.

All objects are referenced by their Object\_Identifier property. Each object within a single BACnet Device shall have a unique value for the Object\_Identifier property. When combined with the system-wide unique Object\_Identifier of the BACnet Device, this provides a mechanism for referencing every object in the control system network. No object shall have an Object\_Identifier with an instance number of 4194303. Object properties that contain BACnetObjectIdentifiers may use 4194303 to indicate that the property is not initialized.

Not all object types defined in this standard need to be supported in order to conform to the standard. In addition, some properties of particular object types are optional. At the beginning of each standard object type specification that follows is a summary of the properties of the object type. The summary includes the property identifier, the datatype of the property, and one of the following : **O**, **R**, **W**

where   **O** indicates that the property is optional,  
**R** indicates that the property is required to be present and readable using BACnet services,  
**W** indicates that the property is required to be present, readable, and writable using BACnet services.

When a property is designated as required or **R**, this shall mean that the property is required to be present in all BACnet standard objects of that type. When a property is designated as optional or **O**, this shall mean that the property is not required to be present in all standard BACnet objects of that type. The value of **R** or **O** properties may be examined through the use of one or more of the ReadProperty services defined in this standard. Such **R** or **O** properties may also be writable at the implementor's option unless specifically prohibited in the text describing that particular standard object's property. When a property is designated as writable or **W**, this shall mean that the property is required to be present in all BACnet standard objects of that type and that the value of the property can be changed through the use of one or more of the WriteProperty services defined in this standard. The value of **W** properties may be examined through the use of one or more of the ReadProperty services defined in this standard. An **O** property, if present in a particular object, is not required to be writable unless specifically identified as such in the text describing that particular standard object's property.

In some devices, property values may be stored internally in a different form than indicated by the property datatype. For example, real numbers may be stored internally as integers. This may result in the situation where a property value is changed by one of the WriteProperty services but a subsequent read returns a slightly different value. This behavior is acceptable as long as a "best effort" is made to store the written value specified.

It is intended that the collection of object types and their properties defined in this standard be comprehensive, but implementors are free to define additional nonstandard object types or additional nonstandard properties of standard object types. This is the principal means for extending the standard as control technology develops. Innovative changes can be accommodated without waiting for changes in the standard. This extensibility could also be used to adapt this standard to other types of building services. See 23.3 and 23.4.

Nonstandard object types are required to support the following properties:

- Object\_Identifier              BACnetObjectIdentifier
- Object\_Name                    CharacterString
- Object\_Type                    BACnetObjectType

These properties shall be implemented to behave as they would when present in standard BACnet objects. This means that the Object\_Identifier and Object\_Name properties shall be unique within the BACnet device that maintains them. The Object\_Name string shall be at least one character in length and shall consist only of printable characters.

A BACnet standard object shall support all required properties specified in the standard. It may support, in addition to these properties, any optional properties specified in the standard or properties not defined in the standard. A required property shall function as specified in the standard for each object of that type. If properties that are defined as optional in the standard are supported, then they shall function as specified in the standard. A required property shall be present in all objects of that type. An optional property, if present in one object of a given type, need not be present in all objects of that type. A supported property, whether required or optional, shall return the datatype specified in the standard. A supported property, whether required or optional, is not required to be able to return the entire range of values for a datatype unless otherwise specified in the property description. Supported properties, whether required or optional, which do not return the entire range of values for a datatype when read or which restrict the range of values that may be written to the property, shall specify those restrictions for each such property in the protocol implementation conformance statement (PICS).

Some of the properties of certain BACnet objects need to represent a collection of data elements of the same type, rather than a single primitive data value or a complex datatype constructed from other datatypes. In some instances, the size of this collection of data elements is fixed, while in other instances the number of elements may be variable. In some cases the elements may need to be accessed individually or their order may be important. BACnet provides two forms of datatypes for properties that represent a collection of data elements of the same type: "BACnetARRAY" and "List of."

A "BACnetARRAY" datatype is a structured datatype consisting of an ordered sequence of data elements, each having the same datatype. The components of an array property may be individually accessed (read or written) using an "array index," which is an unsigned integer value. An index of 0 (zero) shall specify that the count of the number of data elements be returned. If the array index is omitted, it means that all of the elements of the array are to be accessed. An array index N, greater than zero, shall specify the Nth element in the sequence. When array properties are used in BACnet objects, the notation "BACnetARRAY[N] of datatype" shall mean an ordered sequence of N data elements, each of which has that datatype. If the size of an array may be changed by writing to the array, then array element 0 shall be writable. If the value of array element 0 is decreased, the array shall be truncated and the elements of the array with an index greater than the new value of array element 0 are deleted. If the value of array element 0 is increased, the new elements of the array, those with an index greater than the old value of array element 0, shall be created; the values that are assigned to those elements shall be a local matter except where otherwise specified. Where the size of an array is allowed to be changed, writing the entire array as a single property with a different number of elements shall cause the array size to be changed. An attempt to write to an array element with an index greater than the size of the array shall result in an error and shall not cause the array to grow to accommodate the element. Arrays whose sizes are fixed by the Standard shall not be resizable.

A "List of" datatype is a structured datatype consisting of a sequence of zero or more data elements, each having the same datatype. The length of each "List of" may be variable. Unless specified for a particular use, no maximum size should be assumed for any "List of" implementation. The notation "List of datatype" shall mean a sequence of zero or more data elements, each of which has the indicated type.

The difference between a "BACnetARRAY" property and a "List of" property is that the elements of the array can be uniquely accessed by an array index while the elements of the "List of" property cannot. Moreover, the number of elements in the BACnetARRAY may be ascertained by reading the array index 0, while the number of elements present in a "List of" property can only be determined by reading the entire property value and performing a count.

Several object types defined in this clause—the Command, Event Enrollment, Group, Loop, and Schedule—have one or more properties of type BACnetObjectPropertyReference. The property identifier component of these references may not be the special property identifiers ALL, REQUIRED, or OPTIONAL. These are reserved for use in the ReadPropertyConditional and ReadPropertyMultiple services or in services not defined in this standard.

Several object types defined in this clause have a property called "Reliability." This property is an enumerated datatype that may have different possible enumerations for different object types. The values defined below are a superset of all possible values of the Reliability property for all object types. The range of possible values returned for each specific object is defined in the appropriate object type definition.

NO_FAULT_DETECTED	The present value is reliable; that is, no other fault (enumerated below) has been detected.
NO_SENSOR	No sensor is connected to the Input object.
OVER_RANGE	The sensor connected to the Input is reading a value higher than the normal operating range. If the object is a Binary Input, this is possible when the Binary state is derived from an analog sensor or a binary input equipped with electrical loop supervision circuits.
UNDER_RANGE	The sensor connected to the Input is reading a value lower than the normal operating range. If the object is a Binary Input, this is possible when the Binary Input is actually a binary state calculated from an analog sensor.
OPEN_LOOP	The connection between the defined object and the physical device is providing a value indicating an open circuit condition.
SHORTED_LOOP	The connection between the defined object and the physical device is providing a value indicating a short circuit condition.
NO_OUTPUT	No physical device is connected to the Output object.
PROCESS_ERROR	A processing error was encountered.
MULTI_STATEFAULT	The Present_Value of the Multi-state object is equal to one of the states in the Fault_Values property and no other fault has been detected.
CONFIGURATION_ERROR	The object's properties are not in a consistent state.
COMMUNICATION_FAILURE	Proper operation of the object is dependent on communication with a remote sensor or device and communication with the remote sensor or device has been lost.
UNRELIABLE_OTHER	The controller has detected that the present value is unreliable, but none of the other conditions describe the nature of the problem. A generic fault other than those listed above has been detected, e.g., a Binary Input is not cycling as expected.

## List of Object Types in This Clause

<b>Clause</b>	<b>Description</b>	<b>Page</b>
12.1	Accumulator Object Type	132
12.2	Analog Input Object Type	140
12.3	Analog Output Object Type	145
12.4	Analog Value Object Type	150
12.5	Averaging Object Type	155
12.6	Binary Input Object Type	158
12.7	Binary Output Object Type	163
12.8	Binary Value Object Type	169
12.9	Calendar Object Type	174
12.10	Command Object Type	176
12.11	Device Object Type	180
12.12	Event Enrollment Object Type	188
12.13	File Object Type	193
12.14	Group Object Type	195
12.15	Life Safety Point Object Type	197


<b>Clause</b>	<b>Description</b>	<b>Page</b>
12.16	Life Safety Zone Object Type	203
12.17	Loop Object Type	209
12.18	Multi-state Input Object Type	216
12.19	Multi-state Output Object Type	220
12.20	Multi-state Value Object Type	224
12.21	Notification Class Object Type	229
12.22	Program Object Type	232
12.23	Pulse Converter Object Type	237
12.24	Schedule Object Type	244
12.25	Trend Log Object Type	249
12.26	Access Door Object Type	257
12.27	Event Log Object Type	264
12.28	Load Control Object Type	270
12.29	Structured View Object Type	279
12.30	Trend Log Multiple Object Type	281

## 12.1 Accumulator Object Type

The Accumulator object type defines a standardized object whose properties represent the externally visible characteristics of a device that indicates measurements made by counting pulses.

This object maintains precise measurement of input count values, accumulated over time. The accumulation of pulses represents the measured quantity in unsigned integer units. This object is also concerned with the accurate representation of values presented on meter read-outs. This includes the ability to initially set the Present\_Value property to the value currently displayed by the meter (as when the meter is installed), and to duplicate the means by which it is advanced, including simulating a modulo-N divider prescaling the actual meter display value, as shown in Figure 12-1.

Typical applications of such devices are in peak load management and in accounting and billing management systems. This object is not intended to meet all such applications. Its purpose is to provide information about the quantity being measured, such as electric power, water, or natural gas usage, according to criteria specific to the application.

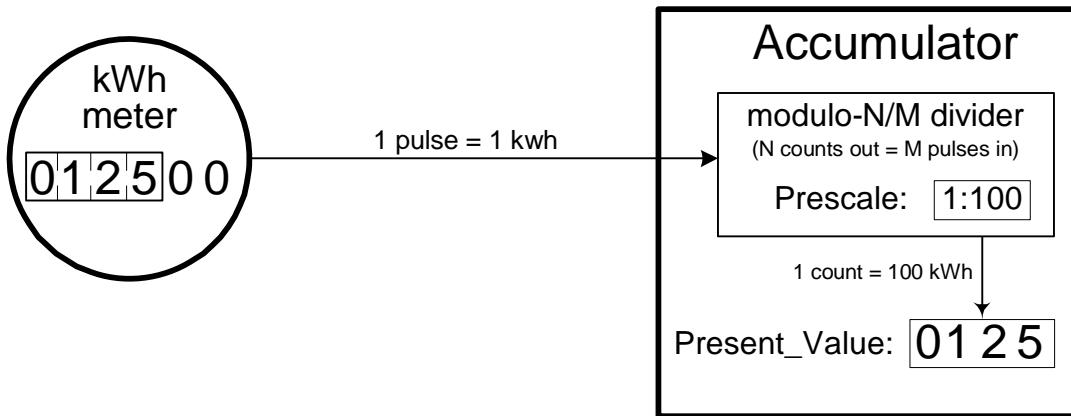

**Figure 12-1.** Example of an Accumulator object

The object and its properties are summarized in Table 12-1 and described in detail in this subclause.

**Table 12-1.** Properties of the Accumulator Object

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	Unsigned	R <sup>1</sup>
Description	CharacterString	O
Device_Type	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Scale	BACnetScale	R
Units	BACnetEngineeringUnits	R
Prescale	BACnetPrescale	O
Max_Pres_Value	Unsigned	R
Value_Change_Time	BACnetDateTime	O <sup>2</sup>
Value_Before_Change	Unsigned	O <sup>2,3</sup>
Value_Set	Unsigned	O <sup>2,3</sup>
Logging_Record	BACnetAccumulatorRecord	O
Logging_Object	BACnetObjectIdentifier	O
Pulse_Rate	Unsigned	O <sup>1,4</sup>
High_Limit	Unsigned	O <sup>4</sup>
Low_Limit	Unsigned	O <sup>4</sup>
Limit_Monitoring_Interval	Unsigned	O <sup>4</sup>
Notification_Class	Unsigned	O <sup>4</sup>
Time_Delay	Unsigned	O <sup>4</sup>
Limit_Enable	BACnetLimitEnable	O <sup>4</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>4</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>4</sup>
Notify_Type	BACnetNotifyType	O <sup>4</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>4</sup>
Profile_Name	CharacterString	O

<sup>1</sup> This property is required to be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> These properties are required if either Value\_Before\_Change or Value\_Set is writable.

<sup>3</sup> Either Value\_Before\_Change or Value\_Set may be writable, but not both.

<sup>4</sup> These properties are required if the object supports intrinsic reporting.

### 12.1.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.1.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.1.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be ACCUMULATOR.

### **12.1.4 Present\_Value**

This property, of type Unsigned, indicates the count of the input pulses, prescaled if the Prescale property is present, acquired since the value was most recently set by writing to the Value\_Set property.

The value of this property shall remain in the range from zero through Max\_Pres\_Value. All operations on the Present\_Value property are performed modulo (Max\_Pres\_Value+1).

This property shall be writable when Out\_Of\_Service is TRUE.

### **12.1.5 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.1.6 Device\_Type**

This property, of type CharacterString, is a text description of the physical device represented by the Accumulator object. It will typically be used to describe the type of sensor represented by the Accumulator.

### **12.1.7 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of an Accumulator object. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the Present_Value and Reliability properties are no longer tracking changes to the physical input. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.1.8 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting and if the Reliability property is not present, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

### **12.1.9 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value property or the operation of the physical input in question is "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, NO\_SENSOR, OVER\_RANGE, UNDER\_RANGE, OPEN\_LOOP,  
COMMUNICATION\_FAILURE, SHORTED\_LOOP, UNRELIABLE\_OTHER}

#### **12.1.10 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the physical input that the object represents is not in service. This means that the Present\_Value and Pulse\_Rate properties are decoupled from the physical input and will not track changes to the physical input when the value of Out\_Of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled from the physical input when Out\_Of\_Service is TRUE. While the Out\_Of\_Service property is TRUE, the Present\_Value, Pulse\_Rate and Reliability properties may be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value, Pulse\_Rate or Reliability properties shall respond to changes made to these properties while Out\_Of\_Service is TRUE, as if those changes had occurred in the physical input.

#### **12.1.11 Scale**

This property, of type BACnetScale, indicates the conversion factor to be multiplied with the value of the Present\_Value property to provide a value in the units indicated by Units. The choice of options for this property determine how the scaling operation (which is performed by the client reading this object) is performed:

<u>Option</u>	<u>Datatype</u>	<u>Indicated Value in Units</u>
floatScale	REAL	Present_Value x Scale
integerScale	INTEGER	Present_Value x $10^{Scale}$

#### **12.1.12 Units**

This property, of type BACnetEngineeringUnits, indicates the measurement units of the Present\_Value when multiplied with the scaling factor indicated by Scale. See the BACnetEngineeringUnits ASN.1 production in Clause 21 for a list of engineering units defined by this standard.

#### **12.1.13 Prescale**

This property, of type BACnetPrescale, presents the coefficients that are used for converting the pulse signals generated by the measuring instrument into the value displayed by Present\_Value. The conversions are performed using integer arithmetic in such a fashion that no measurement-generated pulse signals are lost in the conversion.

These coefficients might simply document a conversion performed prior to the reception of the input pulses by the Accumulator object, or they might actually be used by the Accumulator to convert input pulses into the value displayed by Present\_Value. Whichever is done is a local matter.

The coefficients are as follows:

- |              |                                                                            |
|--------------|----------------------------------------------------------------------------|
| multiplier   | The numerator of the conversion factor expressed as a ratio of integers.   |
| moduloDivide | The denominator of the conversion factor expressed as a ratio of integers. |

The conversion algorithm is performed as follows, utilizing a non-displayed variable called an accumulator:

For each input pulse:

- Add the value of 'multiplier' to an accumulator and then,
- while the accumulator is greater than or equal to the value of 'moduloDivide':

  - Increment the value of Present\_Value by one, and
  - decrease the value of the accumulator by the value of 'moduloDivide'.

This procedure supports non-integral ratios of measurement pulses to Present\_Value. For example, in an electrical metering application, the output of the voltage- and current-measuring systems might be 9000/1200 (scale / voltage\*current) pulses per kWh, requiring the Accumulator object to accumulate 2/15 kWh/pulse. With this algorithm such pulses can be accurately accumulated and displayed when the units of Present\_Value are KILOWATT\_HOURS.

#### **12.1.14 Max\_Pres\_Value**

This property, of type Unsigned, indicates the maximum value of the Present\_Value property.

#### **12.1.15 Value\_Change\_Time**

This read-only property, of type BACnetDateTime, shall be present if the Present\_Value property is adjustable by writing to the Value\_Before\_Change or Value\_Set properties. It represents the date and time of the most recent occurrence of such a write operation. If no such write has yet occurred, this property shall have wildcard values for all date and time fields.

#### **12.1.16 Value\_Before\_Change**

This property, of type Unsigned, indicates the value of the Present\_Value property just prior to the most recent write to the Value\_Set or Value\_Before\_Change properties. If no such write has yet occurred, this property shall have the value zero. If this property is writable, the Value\_Set property shall be read-only.

If this property is writable, the following series of operations, for which the associated properties are present, shall be performed atomically by the object when this property is written:

- (1) The value of Present\_Value shall be copied to the Value\_Set property.
- (2) The value written to Value\_Before\_Change shall be stored in the Value\_Before\_Change property.
- (3) The current date and time shall be stored in the Value\_Change\_Time property.

While this series of operations is being performed, it is critical that any other process not change the Present\_Value, Value\_Set and Value\_Before\_Change properties.

#### **12.1.17 Value\_Set**

This property, of type Unsigned, indicates the value of the Present\_Value property after the most recent write to the Value\_Set or Value\_Before\_Change properties. If no such write has yet occurred, this property shall have the value zero. If this property is writable, the Value\_Before\_Change property shall be read-only.

If this property is writable, the following series of operations, for which the associated properties are present, shall be performed atomically by the object when this property is written:

- (1) The value of Present\_Value shall be copied to the Value\_Before\_Change property.
- (2) The value written to Value\_Set shall be stored in both the Value\_Set and Present\_Value properties.
- (3) The current date and time shall be stored in the Value\_Change\_Time property.

While this series of operations are being performed, it is critical that any other process not change the Present\_Value, Value\_Set and Value\_Before\_Change properties.

#### **12.1.18 Logging\_Record**

This read-only property, of type BACnetAccumulatorRecord, is a list of values that must be acquired and returned "atomically" in order to allow proper interpretation of the data.

If the Logging\_Object property is present, then, when Logging\_Record is acquired by the object identified by Logging\_Object, this list of values shall be saved and returned when read by other objects or devices. If the Logging\_Object property is present and Logging\_Record has not yet been acquired by the object identified by Logging\_Object, 'timestamp' shall contain all wildcards, 'present-value' and 'accumulated-value' shall contain the value zero, and 'accumulator-status' shall indicate STARTING.

The list of values ('timestamp', 'present-value', 'accumulated-value', and 'accumulator-status') shall be acquired from the underlying system when they reflect a stable state of the device (for example, they shall not be acquired when Present\_Value has just been incremented but the corresponding increment of 'accumulated-value' has not yet occurred).

The items returned in the list of values are:

timestamp	The local date and time when the data was acquired.
present-value	The value of the Present_Value property.
accumulated-value	The short term accumulated value of the counter. The algorithm used to calculate accumulated-value is a function of the value of accumulator-status. If this is the initial read, the value returned shall be zero.
accumulator-status	An indication of the reliability of the data in this list of values.

The accumulator-status parameter may take on any of the following values:

{NORMAL, STARTING, RECOVERED, ABNORMAL, FAILED}

where the values are defined as follows:

NORMAL	No event affecting the reliability of the data has occurred during the period from the preceding to the current qualified reads of the Logging_Record property. In this case 'accumulated-value' shall be represented by the expression: $\text{accumulated-value} = \text{Present\_Value}_{\text{current}} - \text{Present\_Value}_{\text{previous}}$
STARTING	This value indicates that the data in Logging_Records is either the first data to be acquired since startup by the object identified by Logging_Object (if 'timestamp' has non-wildcard values) or that no data has been acquired since startup by the object identified by Logging_Object (in which case 'timestamp' has all wildcard values).
RECOVERED	One or more writes to Value_Before_Change or Value_Set have occurred since Logging_Record was acquired by the object identified by Logging_Object. For the case of a single write, 'accumulated-value' shall be represented by the expression: $\text{accumulated-value} = (\text{Present\_Value}_{\text{current}} - \text{Value}_{\text{Set}}) + (\text{Value}_{\text{Before\_Change}} - \text{Present\_Value}_{\text{previous}})$
ABNORMAL	The accumulation has been carried out, but some unrecoverable event such as the clock's time being changed by a significant amount since Logging_Record was acquired by the object identified by Logging_Object. (How much time is considered significant shall be a local matter.)
FAILED	The 'accumulated-value' item is not reliable due to some problem. The criteria for returning this value are a local matter.

Changes in the value of 'accumulator-status' shall occur only when the Logging\_Record is acquired by the object identified by Logging\_Object.

### 12.1.19 Logging\_Object

This property, of type BACnetObjectIdentifier, indicates the object in the same device as the Accumulator object which, when it acquires Logging\_Record data from the Accumulator object, shall cause the Accumulator object to acquire, present and store the data from the underlying system.

### 12.1.20 Pulse\_Rate

This property, of type Unsigned, shall indicate the number of input pulses received during the most recent period specified by Limit\_Monitoring\_Interval. The mechanism that associates the input signal with the value indicated by this property is a local matter.

This property shall be writable when Out\_Of\_Service is TRUE.

### 12.1.21 High\_Limit

This property, of type Unsigned, shall specify a limit that Pulse\_Rate must exceed before an event is generated. This property is required if this object supports intrinsic reporting.

### **12.1.21.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) Pulse\_Rate must exceed High\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

### **12.1.21.2 Conditions for Generating a TO-NORMAL Event**

Once exceeded, Pulse\_Rate must fall below High\_Limit before a TO-NORMAL event is generated under these conditions:

- (a) Pulse\_Rate must remain below High\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

### **12.1.22 Low\_Limit**

This property, of type Unsigned, shall specify a limit that Pulse\_Rate must fall below before an event is generated. This property is required if this object supports intrinsic reporting.

#### **12.1.22.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) Pulse\_Rate must fall below Low\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

#### **12.1.22.2 Conditions for Generating a TO-NORMAL Event**

Once Pulse\_Rate has fallen below the Low\_Limit, the Pulse\_Rate must become greater than Low\_Limit before a TO-NORMAL event is generated under these conditions:

- (a) Pulse\_Rate must become greater than Low\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

### **12.1.23 Limit\_Monitoring\_Interval**

This property, of type Unsigned, specifies the monitoring period in seconds for determining the value of Pulse\_Rate. The use of a fixed or sliding time window for detecting pulse rate is a local matter. This property is required if this object supports intrinsic reporting.

### **12.1.24 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if this object supports intrinsic reporting.

### **12.1.25 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds that Pulse\_Rate must remain outside the range from Low\_Limit through High\_Limit, before a TO-OFFNORMAL event is generated, or within the same band before a TO-NORMAL event is generated. This property is required if this object supports intrinsic reporting.

### **12.1.26 Limit\_Enable**

This property, of type BACnetLimitEnable, shall convey two flags that separately enable and disable reporting of High\_Limit and Low\_Limit offnormal events and their return to normal. This property is required if this object supports intrinsic reporting.

**12.1.27 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Accumulator objects, transitions to the High\_Limit or Low\_Limit Event\_States are considered to be "offnormal" events. This property is required if this object supports intrinsic reporting.

**12.1.28 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgements for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Accumulator objects, transitions to High\_Limit and Low\_Limit Event\_State are considered to be "offnormal" events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgement;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgement is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgement is expected).

This property is required if this object supports intrinsic reporting.

**12.1.29 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if this object supports intrinsic reporting.

**12.1.30 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have X'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if this object supports intrinsic reporting.

**12.1.31 Profile\_Name**

This property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.2 Analog Input Object Type

The Analog Input object type defines a standardized object whose properties represent the externally visible characteristics of an analog input. The object and its properties are summarized in Table 12-2 and described in detail in this subclause.

**Table 12-2.** Properties of the Analog Input Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	REAL	R <sup>1</sup>
Description	CharacterString	O
Device_Type	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Update_Interval	Unsigned	O
Units	BACnetEngineeringUnits	R
Min_Pres_Value	REAL	O
Max_Pres_Value	REAL	O
Resolution	REAL	O
COV_Increment	REAL	O <sup>2</sup>
Time_Delay	Unsigned	O <sup>3</sup>
Notification_Class	Unsigned	O <sup>3</sup>
High_Limit	REAL	O <sup>3</sup>
Low_Limit	REAL	O <sup>3</sup>
Deadband	REAL	O <sup>3</sup>
Limit_Enable	BACnetLimitEnable	O <sup>3</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>3</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>3</sup>
Notify_Type	BACnetNotifyType	O <sup>3</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>3</sup>
Profile_Name	CharacterString	O

<sup>1</sup> This property is required to be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> This property is required if the object supports COV reporting.

<sup>3</sup> These properties are required if the object supports intrinsic reporting.

### 12.2.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.2.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.2.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be ANALOG\_INPUT.

### 12.2.4 Present\_Value

This property, of type REAL, indicates the current value, in engineering units, of the input being measured. The Present\_Value property shall be writable when Out\_Of\_Service is TRUE.

### 12.2.5 Description

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### 12.2.6 Device\_Type

This property, of type CharacterString, is a text description of the physical device connected to the analog input. It will typically be used to describe the type of sensor attached to the analog input.

### 12.2.7 Status\_Flags

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of an analog input. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the Present_Value and Reliability properties are no longer tracking changes to the physical input. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### 12.2.8 Event\_State

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

### 12.2.9 Reliability

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value or the operation of the physical input in question is "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, NO\_SENSOR, OVER\_RANGE, UNDER\_RANGE, OPEN\_LOOP,  
SHORTED\_LOOP, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

### 12.2.10 Out\_of\_Service

The Out\_of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the physical input that the object represents is not in service. This means that the Present\_Value property is decoupled from the physical input and will not track changes to the physical input when the value of Out\_of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled from the physical input when Out\_of\_Service is TRUE. While the Out\_of\_Service property is TRUE, the Present\_Value and Reliability properties may be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value or Reliability properties shall respond to changes made to these properties while Out\_of\_Service is TRUE, as if those changes had occurred in the physical input.

**12.2.11 Update\_Interval**

This property, of type Unsigned, indicates the maximum period of time between updates to the Present\_Value in hundredths of a second when the input is not overridden and not out-of-service.

**12.2.12 Units**

This property, of type BACnetEngineeringUnits, indicates the measurement units of this object. See the BACnetEngineeringUnits ASN.1 production in Clause 21 for a list of engineering units defined by this standard.

**12.2.13 Min\_Pres\_Value**

This property, of type REAL, indicates the lowest number in engineering units that can be reliably obtained for the Present\_Value property of this object.

**12.2.14 Max\_Pres\_Value**

This property, of type REAL, indicates the highest number in engineering units that can be reliably obtained for the Present\_Value property of this object.

**12.2.15 Resolution**

This property, of type REAL, indicates the smallest recognizable change in Present\_Value in engineering units (read-only).

**12.2.16 COV\_Increment**

This property, of type REAL, shall specify the minimum change in Present\_Value that will cause a COVNotification to be issued to subscriber COV-clients. This property is required if COV reporting is supported by this object.

**12.2.17 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds that the Present\_Value must remain outside the band defined by the High\_Limit and Low\_Limit properties before a TO-OFFNORMAL event is generated or within the same band, including the Deadband property, before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

**12.2.18 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

**12.2.19 High\_Limit**

This property, of type REAL, shall specify a limit that the Present\_Value must exceed before an event is generated. This property is required if intrinsic reporting is supported by this object.

**12.2.19.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must exceed the High\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

**12.2.19.2 Conditions for Generating a TO-NORMAL Event**

Once exceeded, the Present\_Value must fall below the High\_Limit minus the Deadband before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must fall below the High\_Limit minus the Deadband for a minimum period of time, specified in the Time\_Delay property, and
- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

### **12.2.20 Low\_Limit**

This property, of type REAL, shall specify a limit that the Present\_Value must fall below before an event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.2.20.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must fall below the Low\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

#### **12.2.20.2 Conditions for Generating a TO-NORMAL Event**

Once the Present\_Value has fallen below the Low\_Limit, the Present\_Value must exceed the Low\_Limit plus the Deadband before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must exceed the Low\_Limit plus the Deadband for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

### **12.2.21 Deadband**

This property, of type REAL, shall specify a range between the High\_Limit and Low\_Limit properties, which the Present\_Value must remain within for a TO-NORMAL event to be generated under these conditions:

- (a) the Present\_Value must fall below the High\_Limit minus Deadband, and
- (b) the Present\_Value must exceed the Low\_Limit plus the Deadband, and
- (c) the Present\_Value must remain within this range for a minimum period of time, specified in the Time\_Delay property, and
- (d) either the HighLimitEnable or LowLimitEnable flag must be set in the Limit\_Enable property, and
- (e) the TO-NORMAL flag must be set in the Event\_Enable property.

This property is required if intrinsic reporting is supported by this object.

### **12.2.22 Limit\_Enable**

This property, of type BACnetLimitEnable, shall convey two flags that separately enable and disable reporting of high limit and low limit offnormal events and their return to normal. This property is required if intrinsic reporting is supported by this object.

### **12.2.23 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Analog Input objects, transitions to High\_Limit and Low\_Limit Event\_States are considered to be "offnormal" events. This property is required if intrinsic reporting is supported by this object.

### **12.2.24 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Analog Input objects, transitions to High\_Limit and Low\_Limit Event\_States are considered to be "offnormal" events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.2.25 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.2.26 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.2.27 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

### 12.3 Analog Output Object Type

The Analog Output object type defines a standardized object whose properties represent the externally visible characteristics of an analog output. The object and its properties are summarized in Table 12-3 and described in detail in this subclause.

**Table 12-3. Properties of the Analog Output Object Type**

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	REAL	W
Description	CharacterString	O
Device_Type	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Units	BACnetEngineeringUnits	R
Min_Pres_Value	REAL	O
Max_Pres_Value	REAL	O
Resolution	REAL	O
Priority_Array	BACnetPriorityArray	R
Relinquish_Default	REAL	R
COV_Increment	REAL	O <sup>1</sup>
Time_Delay	Unsigned	O <sup>2</sup>
Notification_Class	Unsigned	O <sup>2</sup>
High_Limit	REAL	O <sup>2</sup>
Low_Limit	REAL	O <sup>2</sup>
Deadband	REAL	O <sup>2</sup>
Limit_Enable	BACnetLimitEnable	O <sup>2</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>2</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>2</sup>
Notify_Type	BACnetNotifyType	O <sup>2</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>2</sup>
Profile_Name	CharacterString	O

<sup>1</sup> This property is required if the object supports COV reporting.

<sup>2</sup> These properties are required if the object supports intrinsic reporting.

#### 12.3.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

#### 12.3.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

#### 12.3.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be ANALOG\_OUTPUT.

#### 12.3.4 Present\_Value (Commandable)

This property, of type REAL, indicates the current value, in engineering units, of the output.

#### 12.3.5 Description

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.3.6 Device\_Type**

This property, of type CharacterString, is a text description of the physical device connected to the analog output. It will typically be used to describe the type of device attached to the analog output.

### **12.3.7 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of an analog output. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the physical output is no longer tracking changes to the Present_Value property and the Reliability property is no longer a reflection of the physical output. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.3.8 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

### **12.3.9 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value or the operation of the physical output in question is "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, OPEN\_LOOP, SHORTED\_LOOP, NO\_OUTPUT, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

### **12.3.10 Out\_of\_Service**

The Out\_of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the physical point that the object represents is not in service. This means that changes to the Present\_Value property are decoupled from the physical output when the value of Out\_of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled from the physical output when Out\_of\_Service is TRUE. While the Out\_of\_Service property is TRUE, the Present\_Value and Reliability properties may still be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value or Reliability properties shall respond to changes made to these properties while Out\_of\_Service is TRUE, as if those changes had occurred to the physical output. The Present\_Value property shall still be controlled by the BACnet command prioritization mechanism if Out\_of\_Service is TRUE. See Clause 19.

### **12.3.11 Units**

This property, of type BACnetEngineeringUnits, indicates the measurement units of this object. See the BACnetEngineeringUnits ASN.1 production in Clause 21 for a list of engineering units defined by this standard.

### **12.3.12 Min\_Pres\_Value**

This property, of type REAL, indicates the lowest number that can be reliably used for the Present\_Value property of this object.

### **12.3.13 Max\_Pres\_Value**

This property, of type REAL, indicates the highest number that can be reliably used for the Present\_Value property of this object.

### **12.3.14 Resolution**

This property, of type REAL, indicates the smallest recognizable change in Present\_Value in engineering units (read-only).

### **12.3.15 Priority\_Array**

This property is a read-only array of prioritized values. See Clause 19 for a description of the prioritization mechanism.

### **12.3.16 Relinquish\_Default**

This property is the default value to be used for the Present\_Value property when all command priority values in the Priority\_Array property have a NULL value. See Clause 19.

### **12.3.17 COV\_Increment**

This property, of type REAL, shall specify the minimum change in Present\_Value that will cause a COVNotification to be issued to subscriber COV-clients. This property is required if COV reporting is supported by this object.

### **12.3.18 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds the Present\_Value must remain outside the band defined by the High\_Limit and Low\_Limit properties before a TO-OFFNORMAL event is generated or within the same band, including the Deadband property, before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

### **12.3.19 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

### **12.3.20 High\_Limit**

This property, of type REAL, shall specify a limit that the Present\_Value must exceed before an event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.3.20.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must exceed the High\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

#### **12.3.20.2 Conditions for Generating a TO-NORMAL Event**

Once exceeded, the Present\_Value must fall below the High\_Limit minus the Deadband before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must fall below the High\_Limit minus the Deadband for a minimum period of time, specified in the Time\_Delay property, and

## 12. MODELING CONTROL DEVICES AS A COLLECTION OF OBJECTS

### Analog Output Object Type

- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

#### 12.3.21 Low\_Limit

This property, of type REAL, shall specify a limit below which the Present\_Value must fall before an event is generated. . This property is required if intrinsic reporting is supported by this object .

##### 12.3.21.1 Conditions for Generating a TO-OFFNORMAL Event

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must fall below the Low\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

##### 12.3.21.2 Conditions for Generating a TO-NORMAL Event

Once the Present\_Value has fallen below the Low\_Limit, the Present\_Value must exceed the Low\_Limit plus the Deadband before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must exceed the Low\_Limit plus the Deadband for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

#### 12.3.22 Deadband

This property, of type REAL, shall specify a range between the High\_Limit and Low\_Limit properties within which the Present\_Value must remain for a TO-NORMAL event to be generated under these conditions:

- (a) the Present\_Value must fall below the High\_Limit minus Deadband, and
- (b) the Present\_Value must exceed the Low\_Limit plus the Deadband, and
- (c) the Present\_Value must remain within this range for a minimum period of time, specified in the Time\_Delay property, and
- (d) either the HighLimitEnable or LowLimitEnable flag must be set in the Limit\_Enable property, and
- (e) the TO-NORMAL flag must be set in the Event\_Enable property.

This property is required if intrinsic reporting is supported by this object.

#### 12.3.23 Limit\_Enable

This property, of type BACnetLimitEnable, shall convey two flags that separately enable and disable reporting of high limit and low limit offnormal events and their return to normal. This property is required if intrinsic reporting is supported by this object.

#### 12.3.24 Event\_Enable

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Analog Output objects, transitions to High\_Limit and Low\_Limit Event\_States are considered to be "offnormal" events. This property is required if intrinsic reporting is supported by this object.

#### 12.3.25 Acked\_Transitions

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Analog Output objects, transitions to High\_Limit and Low\_Limit Event\_States are considered to be "offnormal" events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.3.26 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.3.27 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.3.28 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.4 Analog Value Object Type

The Analog Value object type defines a standardized object whose properties represent the externally visible characteristics of an analog value. An "analog value" is a control system parameter residing in the memory of the BACnet Device. The object and its properties are summarized in Table 12-4 and described in detail in this subclause.

**Table 12-4.** Properties of the Analog Value Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	REAL	R <sup>4</sup>
Description	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Units	BACnetEngineeringUnits	R
Priority_Array	BACnetPriorityArray	O <sup>1</sup>
Relinquish_Default	REAL	O <sup>1</sup>
COV_Increment	REAL	O <sup>2</sup>
Time_Delay	Unsigned	O <sup>3</sup>
Notification_Class	Unsigned	O <sup>3</sup>
High_Limit	REAL	O <sup>3</sup>
Low_Limit	REAL	O <sup>3</sup>
Deadband	REAL	O <sup>3</sup>
Limit_Enable	BACnetLimitEnable	O <sup>3</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>3</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>3</sup>
Notify_Type	BACnetNotifyType	O <sup>3</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>3</sup>
Profile_Name	CharacterString	O

<sup>1</sup> If Present\_Value is commandable, then both of these properties shall be present.

<sup>2</sup> This property is required if the object supports COV reporting.

<sup>3</sup> These properties are required if the object supports intrinsic reporting.

<sup>4</sup> If Present\_Value is commandable, then it is required to be writable. This property is required to be writable when Out\_Of\_Service is TRUE.

### 12.4.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.4.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.4.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be ANALOG\_VALUE.

### 12.4.4 Present\_Value

This property, of type REAL, indicates the current value, in engineering units, of the analog value. Present\_Value shall be optionally commandable. If Present\_Value is commandable for a given object instance, then the Priority\_Array and

Relinquish\_Default properties shall also be present for that instance. The Present\_Value property shall be writable when Out\_Of\_Service is TRUE.

#### **12.4.5 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

#### **12.4.6 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of an analog value. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the Present_Value property is not changeable through BACnet services. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_of_Service property has a value of TRUE, otherwise logical FALSE (0).

#### **12.4.7 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

#### **12.4.8 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value is "reliable" as far as the BACnet Device can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, OVER\_RANGE, UNDER\_RANGE, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

#### **12.4.9 Out\_of\_Service**

The Out\_of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the Present\_Value of the Analog Value object is prevented from being modified by software local to the BACnet device in which the object resides. When Out\_of\_Service is TRUE, the Present\_Value property may be written to freely. If the Priority\_Array and Relinquish\_Default properties are present, then writing to the Present\_Value property shall be controlled by the BACnet command prioritization mechanism. See Clause 19.

#### **12.4.10 Units**

This property, of type BACnetEngineeringUnits, indicates the measurement units of this object. See the BACnetEngineeringUnits ASN.1 production in Clause 21 for a list of engineering units defined by this standard.

#### **12.4.11 Priority\_Array**

This property is a read-only array that contains prioritized commands that are in effect for this object. See Clause 19 for a description of the prioritization mechanism. If either the Priority\_Array property or the Relinquish\_Default property are present, then both of them shall be present. If Present\_Value is commandable, then Priority\_Array and Relinquish\_Default shall both be present.

#### **12.4.12 Relinquish\_Default**

This property is the default value to be used for the Present\_Value property when all command priority values in the Priority\_Array property have a NULL value. See Clause 19. If either the Relinquish\_Default property or the Priority\_Array property are present, then both of them shall be present. If Present\_Value is commandable, then Priority\_Array and Relinquish\_Default shall both be present.

#### **12.4.13 COV\_Increment**

This property, of type REAL, shall specify the minimum change in Present\_Value that will cause a COVNotification to be issued to subscriber COV-clients. This property is required if COV reporting is supported by this object.

#### **12.4.14 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time during which the Present\_Value must remain outside the band defined by the High\_Limit and Low\_Limit properties before a TO-OFFNORMAL event is generated or within the same band, including the Deadband property, before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.4.15 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

#### **12.4.16 High\_Limit**

This property, of type REAL, shall specify a limit that the Present\_Value must exceed before an event is generated. This property is required if intrinsic reporting is supported by this object.

##### **12.4.16.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must exceed the High\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

##### **12.4.16.2 Conditions for Generating a TO-NORMAL Event**

Once exceeded, the Present\_Value must fall below the High\_Limit minus the Deadband before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must fall below the High\_Limit minus the Deadband for a minimum period of time, specified in the Time\_Delay property, and
- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

#### **12.4.17 Low\_Limit**

This property, of type REAL, shall specify a limit below which the Present\_Value must fall before an event is generated. This property is required if intrinsic reporting is supported by this object.

##### **12.4.17.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must fall below the Low\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

#### **12.4.17.2 Conditions for Generating a TO-NORMAL Event**

Once the Present\_Value has fallen below the Low\_Limit, the Present\_Value must exceed the Low\_Limit plus the Deadband before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must exceed the Low\_Limit plus the Deadband for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

#### **12.4.18 Deadband**

This property, of type REAL, shall specify a range between the High\_Limit and Low\_Limit properties within which the Present\_Value must remain for a TO-NORMAL event to be generated under these conditions:

- (a) the Present\_Value must fall below the High\_Limit minus Deadband, and
- (b) the Present\_Value must exceed the Low\_Limit plus the Deadband, and
- (c) the Present\_Value must remain within this range for a minimum period of time, specified in the Time\_Delay property, and
- (d) either the HighLimitEnable or LowLimitEnable flag must be set in the Limit\_Enable property, and
- (e) the TO-NORMAL flag must be set in the Event\_Enable property.

This property is required if intrinsic reporting is supported by this object.

#### **12.4.19 Limit\_Enable**

This property, of type BACnetLimitEnable, shall convey two flags that separately enable and disable reporting of high limit and low limit offnormal events and their return to normal. This property is required if intrinsic reporting is supported by this object.

#### **12.4.20 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Analog Value objects, transitions to High\_Limit and Low\_Limit Event\_States are considered to be "offnormal" events. This property is required if intrinsic reporting is supported by this object.

#### **12.4.21 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Analog Value objects, transitions to High\_Limit and Low\_Limit Event\_States are considered to be "offnormal" events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.4.22 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.4.23 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.4.24 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.5 Averaging Object Type

The Averaging object type defines a standardized object whose properties represent the externally visible characteristics of a value that is sampled periodically over a specified time interval. The Averaging object records the minimum, maximum and average value over the interval, and makes these values visible as properties of the Averaging object. The sampled value may be the value of any BOOLEAN, INTEGER, Unsigned, Enumerated or REAL property value of any object within the BACnet Device in which the object resides. Optionally, the object property to be sampled may exist in a different BACnet Device. The Averaging object shall use a "sliding window" technique that maintains a buffer of  $N$  samples distributed over the specified interval. Every (time interval/ $N$ ) seconds a new sample is recorded displacing the oldest sample from the buffer. At this time, the minimum, maximum and average are recalculated. The buffer shall maintain an indication for each sample that permits the average calculation and minimum/maximum algorithm to determine the number of valid samples in the buffer.

The Averaging object type and its properties are summarized in Table 12-5 and described in detail in this subclause.

**Table 12-5.** Properties of the Averaging Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Minimum_Value	REAL	R
Minimum_Value_Timestamp	BACnetDateTime	O
Average_Value	REAL	R
Variance_Value	REAL	O
Maximum_Value	REAL	R
Maximum_Value_Timestamp	BACnetDateTime	O
Description	CharacterString	O
Attempted_Samples	Unsigned	W <sup>1</sup>
Valid_Samples	Unsigned	R
Object_Property_Reference	BACnetDeviceObjectPropertyReference	R <sup>1</sup>
Window_Interval	Unsigned	W <sup>1</sup>
Window_Samples	Unsigned	W <sup>1</sup>
Profile_Name	CharacterString	O

If any of these properties are written to using BACnet services, then all of the buffer samples shall become invalid, 'Attempted\_Samples' shall become zero, 'Valid\_Samples' shall become zero, 'Minimum\_Value' shall become INF, 'Average\_Value' shall become NaN and 'Maximum\_Value' shall become -INF.

### 12.5.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.5.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.5.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be AVERAGING.

### 12.5.4 Minimum\_Value

This property, of type REAL, shall reflect the lowest value contained within the buffer window for the most recent 'Window\_Samples' samples, or the actual number of samples ('Valid\_Samples') if less than 'Window\_Samples' samples have

been taken. After a device restart, or after 'Attempted\_Samples', 'Object\_Property\_Reference', 'Window\_Samples' or 'Window\_Interval' are written to using BACnet services, until a sample is taken, 'Minimum\_Value' shall have the value **INF**.

#### **12.5.5 Minimum\_Value\_Timestamp**

This optional property, of type BACnetDateTime, indicates the date and time at which the value stored in Minimum\_Value was sampled.

#### **12.5.6 Average\_Value**

This property, of type REAL, shall reflect the average value contained within the buffer window for the most recent 'Window\_Samples' samples, or the actual number of samples ('Valid\_Samples') if less than 'Window\_Samples' samples have been taken. The average shall be calculated by taking the arithmetic sum of all non-missed buffer samples and dividing by the number of non-missed buffer samples. After a device restart, or after 'Attempted\_Samples', 'Object\_Property\_Reference', 'Window\_Samples' or 'Window\_Interval' are written to using BACnet services, until a sample is taken, 'Average\_Value' shall have the value **NaN**.

#### **12.5.7 Variance\_Value**

This optional property, of type REAL, shall reflect the variance value contained within the buffer window for the most recent 'Window\_Samples' samples, or the actual number of samples ('Valid\_Samples') if less than 'Window\_Samples' samples have been taken. After a device restart, or after 'Attempted\_Samples', 'Object\_Property\_Reference', 'Window\_Samples' or 'Window\_Interval' are written to using BACnet services, until a sample is taken, 'Variance\_Value' shall have the value **NaN**.

#### **12.5.8 Maximum\_Value**

This property, of type REAL, shall reflect the highest value contained within the buffer window for the most recent 'Window\_Samples' samples, or the actual number of samples ('Valid\_Samples') if less than 'Window\_Samples' samples have been taken. After a device restart, or after 'Attempted\_Samples', 'Object\_Property\_Reference', 'Window\_Samples' or 'Window\_Interval' are written to using BACnet services, until a sample is taken, 'Maximum\_Value' shall have the value **-INF**.

#### **12.5.9 Maximum\_Value\_Timestamp**

This optional property, of type BACnetDateTime, indicates the date and time at which the value stored in Maximum\_Value was sampled.

#### **12.5.10 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

#### **12.5.11 Attempted\_Samples**

This property, of type Unsigned, indicates the number of samples that have been attempted to be collected for the current window. The only acceptable value that may be written to this property shall be zero. If 'Attempted\_Samples' is less than 'Window\_Samples' then a period of time less than 'Window\_Interval' has elapsed since a device restart, or 'Attempted\_Samples', 'Object\_Property\_Reference', 'Window\_Samples' or 'Window\_Interval' have been written to using BACnet services. The number of missed samples in the current window can be calculated by subtracting 'Valid\_Samples' from 'Attempted\_Samples.' After a device restart, or after 'Attempted\_Samples', 'Object\_Property\_Reference', 'Window\_Samples' or 'Window\_Interval' are written to using BACnet services, until a sample is taken, 'Attempted\_Samples' shall have the value zero.

#### **12.5.12 Valid\_Samples**

This read-only property, of type Unsigned, indicates the number of samples that have been successfully collected for the current window. This value can be used to determine whether any of the samples in the current 'Window\_Interval' are missing. The number of missed samples in the current window can be calculated by subtracting 'Valid\_Samples' from 'Attempted\_Samples.' A result greater than zero indicates the number of samples that encountered an error when the sample was being recorded. After a device restart, or after 'Attempted\_Samples', 'Object\_Property\_Reference', 'Window\_Samples' or 'Window\_Interval' are written to using BACnet services until a sample is taken, 'Valid\_Samples' shall have the value **zero**.

#### **12.5.13 Object\_Property\_Reference**

This property, of type BACnetDeviceObjectPropertyReference, shall identify the object and property whose value is to be sampled during the 'Window\_Interval'. The object referenced may be located within the device containing the Averaging

object, or optionally the Averaging object may support the referencing of object properties in other devices. External references may be restricted to a particular set of BACnet devices. The referenced object property must have any of the numeric datatypes BOOLEAN, INTEGER, Unsigned, Enumerated or REAL. All sampled data shall be converted to REAL for calculation purposes. BOOLEAN FALSE shall be considered to be zero and TRUE shall be considered to be one. Enumerated datatypes shall be treated as Unsigned values. If an implementation supports writing to 'Object\_Property\_Reference', then if 'Object\_Property\_Reference' is written to using BACnet services, then all of the buffer samples shall become invalid, 'Attempted\_Samples' shall become zero, 'Valid\_Samples' shall become zero, 'Minimum\_Value' shall become INF, 'Average\_Value' shall become NaN and 'Maximum\_Value' shall become -INF.

#### 12.5.14 Window\_Interval

This property, of type Unsigned, shall indicate the period of time in seconds over which the minimum, maximum and average values are calculated. The minimum acceptable value for 'Window\_Interval' shall be a local matter. Every 'Window\_Interval' divided by 'Window\_Samples' seconds a new sample shall be taken by reading the value of the property referenced by the 'Object\_Property\_Reference'. Whether the sample represents an instantaneous "snapshot" or a continuously calculated sample shall be a local matter. If 'Window\_Interval' is written to using BACnet services, then all of the buffer samples shall become invalid, 'Attempted\_Samples' shall become zero, 'Valid\_Samples' shall become zero, 'Minimum\_Value' shall become INF, 'Average\_Value' shall become NaN and 'Maximum\_Value' shall become -INF.

#### 12.5.15 Window\_Samples

This property, of type Unsigned, shall indicate the number of samples to be taken during the period of time specified by the 'Window\_Interval' property. 'Window\_Samples' must be greater than zero and all implementations shall support at least 15 samples. Every 'Window\_Interval' divided by 'Window\_Samples' seconds a new sample shall be taken by reading the value of the property referenced by the 'Object\_Property\_Reference'. Whether the sample represents an instantaneous "snapshot" or a continuously calculated sample shall be a local matter. If 'Window\_Samples' is written to using BACnet services, then all of the buffer samples shall become invalid, 'Attempted\_Samples' shall become zero, 'Valid\_Samples' shall become zero, 'Minimum\_Value' shall become INF, 'Average\_Value' shall become NaN and 'Maximum\_Value' shall become -INF.

#### 12.5.16 Profile\_Name

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.6 Binary Input Object Type

The Binary Input object type defines a standardized object whose properties represent the externally visible characteristics of a binary input. A "binary input" is a physical device or hardware input that can be in only one of two distinct states. In this description, those states are referred to as ACTIVE and INACTIVE. A typical use of a binary input is to indicate whether a particular piece of mechanical equipment, such as a fan or pump, is running or idle. The state ACTIVE corresponds to the situation when the equipment is on or running, and INACTIVE corresponds to the situation when the equipment is off or idle.

In some applications, electronic circuits may reverse the relationship between the application-level logical states ACTIVE and INACTIVE and the physical state of the underlying hardware. For example, a normally open relay contact may result in an ACTIVE state when the relay is energized, while a normally closed relay contact may result in an INACTIVE state when the relay is energized. The Binary Input object provides for this possibility by including a Polarity property. See 12.6.4 and 12.6.11.

The object and its properties are summarized in Table 12-6 and described in detail in this subclause.

**Table 12-6.** Properties of the Binary Input Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	BACnetBinaryPV	R <sup>1</sup>
Description	CharacterString	O
Device_Type	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Polarity	BACnetPolarity	R
Inactive_Text	CharacterString	O <sup>2</sup>
Active_Text	CharacterString	O <sup>2</sup>
Change_Of_State_Time	BACnetDateTime	O <sup>3</sup>
Change_Of_State_Count	Unsigned	O <sup>3</sup>
Time_Of_State_Count_Reset	BACnetDateTime	O <sup>3</sup>
Elapsed_Active_Time	Unsigned32	O <sup>4</sup>
Time_Of_Active_Time_Reset	BACnetDateTime	O <sup>4</sup>
Time_Delay	Unsigned	O <sup>5</sup>
Notification_Class	Unsigned	O <sup>5</sup>
Alarm_Value	BACnetBinaryPV	O <sup>5</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>5</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>5</sup>
Notify_Type	BACnetNotifyType	O <sup>5</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>5</sup>
Profile_Name	CharacterString	O

<sup>1</sup> This property is required to be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> If one of the optional properties Inactive\_Text or Active\_Text is present, then both of these properties shall be present.

<sup>3</sup> If one of the optional properties Change\_Of\_State\_Time, Change\_Of\_State\_Count, or Time\_Of\_State\_Count\_Reset is present, then all of these properties shall be present.

<sup>4</sup> If one of the optional properties Elapsed\_Active\_Time or Time\_Of\_Active\_Time\_Reset is present, then both of these properties shall be present.

<sup>5</sup> These properties are required if the object supports intrinsic reporting.

### 12.6.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### **12.6.2 Object\_Name**

This property, of type `CharacterString`, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the `Object_Name` shall be restricted to printable characters.

### **12.6.3 Object\_Type**

This property, of type `BACnetObjectType`, indicates membership in a particular object-type class. The value of this property shall be `BINARY_INPUT`.

### **12.6.4 Present\_Value**

This property, of type `BACnetBinaryPV`, reflects the logical state of the Binary Input. The logical state of the Input shall be either `INACTIVE` or `ACTIVE`. The relationship between the `Present_Value` and the physical state of the Input is determined by the `Polarity` property. The possible states are summarized in Table 12-7.

**Table 12-7. BACnet Polarity Relationships**

Present_Value	Polarity	Physical State of Input	Physical State of Device
INACTIVE	NORMAL	OFF or INACTIVE	<u>not</u> running
ACTIVE	NORMAL	ON or ACTIVE	Running
INACTIVE	REVERSE	ON or ACTIVE	<u>not</u> running
ACTIVE	REVERSE	OFF or INACTIVE	running

The `Present_Value` property shall be writable when `Out_Of_Service` is `TRUE`.

### **12.6.5 Description**

This property, of type `CharacterString`, is a string of printable characters whose content is not restricted.

### **12.6.6 Device\_Type**

This property, of type `CharacterString`, is a text description of the physical device connected to the binary input. It will typically be used to describe the type of device attached to the binary input.

### **12.6.7 Status\_Flags**

This property, of type `BACnetStatusFlags`, represents four Boolean flags that indicate the general "health" of a binary input. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{`IN_ALARM`, `FAULT`, `OVERRIDDEN`, `OUT_OF_SERVICE`}

where:

<code>IN_ALARM</code>	Logical FALSE (0) if the <code>Event_State</code> property has a value of <code>NORMAL</code> , otherwise logical TRUE (1).
<code>FAULT</code>	Logical TRUE (1) if the <code>Reliability</code> property is present and does not have a value of <code>NO_FAULT_DETECTED</code> , otherwise logical FALSE (0).
<code>OVERRIDDEN</code>	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the <code>Present_Value</code> and <code>Reliability</code> properties are no longer tracking changes to the physical input. Otherwise, the value is logical FALSE (0).

**OUT\_OF\_SERVICE**      Logical TRUE (1) if the Out\_Of\_Service property has a value of TRUE, otherwise logical FALSE (0).

### 12.6.8 Event\_State

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

### 12.6.9 Reliability

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value or the operation of the physical input in question is "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object may have any of the following values:

{NO\_FAULT\_DETECTED, NO\_SENSOR, OPEN\_LOOP, SHORTED\_LOOP, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

### 12.6.10 Out\_Of\_Service

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the physical input the object represents is not in service. This means that the Present\_Value property is decoupled from the physical input and will not track changes to the physical input when the value of Out\_Of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled from the physical input when Out\_Of\_Service is TRUE. While the Out\_Of\_Service property is TRUE, the Present\_Value and Reliability properties may be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value or Reliability properties shall respond to changes made to these properties while Out\_Of\_Service is TRUE, as if those changes had occurred in the physical input.

### 12.6.11 Polarity

This property, of type BACnetPolarity, indicates the relationship between the physical state of the Input and the logical state represented by the Present\_Value property. If the Polarity property is NORMAL, then the ACTIVE state of the Present\_Value property is also the ACTIVE or ON state of the physical Input as long as Out\_Of\_Service is FALSE. If the Polarity property is REVERSE, then the ACTIVE state of the Present\_Value property is the INACTIVE or OFF state of the physical Input as long as Out\_Of\_Service is FALSE. See Table 12-7. Therefore, when Out\_Of\_Service is FALSE for a constant physical input state, a change in the Polarity property shall produce a change in the Present\_Value property. If Out\_Of\_Service is TRUE, then the Polarity property shall have no effect on the Present\_Value property.

### 12.6.12 Inactive\_Text

This property, of type CharacterString, characterizes the intended effect of the INACTIVE state of the Present\_Value property from the human operator's viewpoint. The content of this string is a local matter, but it is intended to represent a human-readable description of the INACTIVE state. For example, if the physical input is connected to a switch contact, then the Inactive\_Text property might be assigned a value such as "Fan 1 Off". If either the Inactive\_Text property or the Active\_Text property are present, then both of them shall be present.

### 12.6.13 Active\_Text

This property, of type CharacterString, characterizes the intended effect of the ACTIVE state of the Present\_Value property from the human operator's viewpoint. The content of this string is a local matter, but it is intended to represent a human-readable description of the ACTIVE state. For example, if the physical input is a switch contact, then the Active\_Text property might be assigned a value such as "Fan 1 On". If either the Active\_Text property or the Inactive\_Text property are present, then both of them shall be present.

### 12.6.14 Change\_Of\_State\_Time

This property, of type BACnetDateTime, represents the date and time at which the most recent change of state occurred. A "change of state" shall be defined as any event that alters the Present\_Value property. When Out\_Of\_Service is FALSE, a change to the Polarity property shall alter Present\_Value and thus be considered a change of state. When Out\_Of\_Service is

TRUE, changes to Polarity shall not cause changes of state. If one of the optional properties Change\_Of\_State\_Time, Change\_Of\_State\_Count, or Time\_Of\_State\_Count\_Reset is present, then all of these properties shall be present.

#### **12.6.15 Change\_Of\_State\_Count**

This property, of type Unsigned, represents the number of times that the Present\_Value property has changed state since the Change\_Of\_State\_Count property was most recently set to a zero value. The Change\_Of\_State\_Count property shall have a range of 0-65535 or greater. A "change of state" shall be defined as any event that alters the Present\_Value property. When Out\_Of\_Service is FALSE, a change to the Polarity property shall alter Present\_Value and thus be considered a change of state. When Out\_Of\_Service is TRUE, changes to Polarity shall not cause changes of state. If one of the optional properties Change\_Of\_State\_Time, Change\_Of\_State\_Count, or Time\_Of\_State\_Count\_Reset is present, then all of these properties shall be present.

#### **12.6.16 Time\_Of\_State\_Count\_Reset**

This property, of type BACnetDateTime, represents the date and time at which the Change\_Of\_State\_Count property was most recently set to a zero value. If one of the optional properties Change\_Of\_State\_Time, Change\_Of\_State\_Count, or Time\_Of\_State\_Count\_Reset is present, then all of these properties shall be present.

#### **12.6.17 Elapsed\_Active\_Time**

This property, of type Unsigned32, represents the accumulated number of seconds that the Present\_Value property has had the value ACTIVE since the Elapsed\_Active\_Time property was most recently set to a zero value. If one of the optional properties Elapsed\_Active\_Time or Time\_Of\_Active\_Time\_Reset are present, then both of these properties shall be present.

#### **12.6.18 Time\_Of\_Active\_Time\_Reset**

This property, of type BACnetDateTime, represents the date and time at which the Elapsed\_Active\_Time property was most recently set to a zero value. If one of the optional properties Elapsed\_Active\_Time or Time\_Of\_Active\_Time\_Reset are present, then both of these properties shall be present.

#### **12.6.19 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds during which the Present\_Value must remain equal to the Alarm\_Value property before a TO-OFFNORMAL event is generated, or remain not equal to the Alarm\_Value property before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.6.20 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

#### **12.6.21 Alarm\_Value**

This property, of type BACnetBinaryPV, shall specify the value that the Present\_Value must have before an event is generated. This property is required if intrinsic reporting is supported by this object.

##### **12.6.21.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must maintain the value specified by Alarm\_Value for a minimum period of time, specified in the Time\_Delay property, and
- (b) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property.

##### **12.6.21.2 Conditions for Generating a TO-NORMAL Event**

Once equal, the Present\_Value must become not equal to this property before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must remain not equal to the Alarm\_Value for a minimum period of time, specified by the Time\_Delay property, and
- (b) the TO-NORMAL flag must be enabled in the Event\_Enable property.

### **12.6.22 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

### **12.6.23 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

### **12.6.24 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

### **12.6.25 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

### **12.6.26 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.7 Binary Output Object Type

The Binary Output object type defines a standardized object whose properties represent the externally visible characteristics of a binary output. A "binary output" is a physical device or hardware output that can be in only one of two distinct states. In this description, those states are referred to as ACTIVE and INACTIVE. A typical use of a binary output is to switch a particular piece of mechanical equipment, such as a fan or pump, on or off. The state ACTIVE corresponds to the situation when the equipment is on or running, and INACTIVE corresponds to the situation when the equipment is off or idle.

In some applications, electronic circuits may reverse the relationship between the application-level logical states, ACTIVE and INACTIVE, and the physical state of the underlying hardware. For example, a normally open relay contact may result in an ACTIVE state (device energized) when the relay is energized, while a normally closed relay contact may result in an ACTIVE state (device energized) when the relay is not energized. The Binary Output object provides for this possibility by including a Polarity property. See 12.7.4 and 12.7.11.

The object and its properties are summarized in Table 12-8 and described in detail in this subclause.

**Table 12-8.** Properties of the Binary Output Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	BACnetBinaryPV	W
Description	CharacterString	O
Device_Type	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Polarity	BACnetPolarity	R
Inactive_Text	CharacterString	O <sup>1</sup>
Active_Text	CharacterString	O <sup>1</sup>
Change_Of_State_Time	BACnetDateTime	O <sup>2</sup>
Change_Of_State_Count	Unsigned	O <sup>2</sup>
Time_Of_State_Count_Reset	BACnetDateTime	O <sup>2</sup>
Elapsed_Active_Time	Unsigned32	O <sup>3</sup>
Time_Of_Active_Time_Reset	BACnetDateTime	O <sup>3</sup>
Minimum_Off_Time	Unsigned32	O
Minimum_On_Time	Unsigned32	O
Priority_Array	BACnetPriorityArray	R
Relinquish_Default	BACnetBinaryPV	R
Time_Delay	Unsigned	O <sup>4</sup>
Notification_Class	Unsigned	O <sup>4</sup>
Feedback_Value	BACnetBinaryPV	O <sup>4</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>4</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>4</sup>
Notify_Type	BACnetNotifyType	O <sup>4</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>4</sup>
Profile_Name	CharacterString	O

<sup>1</sup> If one of the optional properties Inactive\_Text or Active\_Text is present, then both of these properties shall be present.

<sup>2</sup> If one of the optional properties Change\_Of\_State\_Time, Change\_Of\_State\_Count, or Time\_Of\_State\_Count\_Reset is present, then all of these properties shall be present.

<sup>3</sup> If one of the optional properties Elapsed\_Active\_Time or Time\_Of\_Active\_Time\_Reset is present, then both of these properties shall be present.

<sup>4</sup> These properties are required if the object supports intrinsic reporting.

### **12.7.1 Object\_Identifier**

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### **12.7.2 Object\_Name**

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.7.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be BINARY\_OUTPUT.

### **12.7.4 Present\_Value (Commandable)**

This property, of type BACnetBinaryPV, reflects the logical state of the Binary Output. The logical state of the output shall be either INACTIVE or ACTIVE. The relationship between the Present\_Value and the physical state of the output is determined by the Polarity property. The possible states are summarized in Table 12-9.

**Table 12-9. BACnet Polarity Relationships**

Present_Value	Polarity	Physical State of Output	Physical State of Device
INACTIVE	NORMAL	OFF or INACTIVE	<u>not running</u>
ACTIVE	NORMAL	ON or ACTIVE	running
INACTIVE	REVERSE	ON or ACTIVE	<u>not running</u>
ACTIVE	REVERSE	OFF or INACTIVE	running

### **12.7.5 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.7.6 Device\_Type**

This property, of type CharacterString, is a text description of the physical device connected to the binary output. It will typically be used to describe the type of device attached to the binary output.

### **12.7.7 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of a binary output. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN\_ALARM              Logical FALSE (0) if the Event\_State property has a value of NORMAL, otherwise logical TRUE (1).

FAULT              Logical TRUE (1) if the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, otherwise logical FALSE (0).

OVERRIDDEN	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the physical output is no longer tracking changes to the Present_Value property and the Reliability property is no longer a reflection of the physical output. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE(0).

### 12.7.8 Event\_State

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

### 12.7.9 Reliability

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value or the operation of the physical output in question is "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, NO\_OUTPUT, OPEN\_LOOP, SHORTED\_LOOP, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

### 12.7.10 Out\_Of\_Service

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the physical point the object represents is not in service. This means that changes to the Present\_Value property are decoupled from the physical output when the value of Out\_Of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled from the physical output when Out\_Of\_Service is TRUE. While the Out\_Of\_Service property is TRUE, the Present\_Value and Reliability properties may still be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value or Reliability properties shall respond to changes made to these properties while Out\_Of\_Service is TRUE, as if those changes had occurred to the physical output. The Present\_Value property shall still be controlled by the BACnet command prioritization mechanism if Out\_Of\_Service is TRUE. See Clause 19.

### 12.7.11 Polarity

This property, of type BACnetPolarity, indicates the relationship between the physical state of the output and the logical state represented by the Present\_Value property. If the Polarity property is NORMAL, then the ACTIVE state of the Present\_Value property is also the ACTIVE or ON state of the physical output as long as Out\_Of\_Service is FALSE. If the Polarity property is REVERSE, then the ACTIVE state of the Present\_Value property is the INACTIVE or OFF state of the physical output as long as Out\_Of\_Service is FALSE. See Table 12-9. If Out\_Of\_Service is TRUE, then the Polarity property shall have no effect on the physical output state.

### 12.7.12 Inactive\_Text

This property, of type CharacterString, characterizes the intended effect, from the human operator's viewpoint, of the INACTIVE state of the Present\_Value property on the final device that is ultimately controlled by the output. The content of this string is a local matter, but it is intended to represent a human-readable description of the INACTIVE state. For example, if the physical output is a relay contact that turns on a light, then the Inactive\_Text property might be assigned a value such as "Light Off". If one of the optional properties Inactive\_Text or Active\_Text is present, then both of these properties shall be present.

### 12.7.13 Active\_Text

This property, of type CharacterString, characterizes the intended effect, from the human operator's viewpoint, of the ACTIVE state of the Present\_Value property on the final device that is ultimately controlled by the output. The content of this string is a local matter, but it is intended to represent a human-readable description of the ACTIVE state. For example, if the physical output is a relay contact that turns on a light, then the Active\_Text property might be assigned a value such as

"Light On". If one of the optional properties Inactive\_Text or Active\_Text is present, then both of these properties shall be present.

#### **12.7.14 Change\_Of\_State\_Time**

This property, of type BACnetDateTime, represents the date and time at which the most recent change of state occurred. A "change of state" shall be defined as any event that alters the Present\_Value property. Changes to Polarity shall not cause changes of state. If one of the optional properties Change\_Of\_State\_Time, Change\_Of\_State\_Count, or Time\_Of\_State\_Count\_Reset is present, then all of these properties shall be present.

#### **12.7.15 Change\_Of\_State\_Count**

This property, of type Unsigned, represents the number of times that the Present\_Value property has changed state since the Change\_Of\_State\_Count property was most recently set to a zero value. The Change\_Of\_State\_Count property shall have a range of 0-65535 or greater. A "change of state" shall be defined as any event that alters the Present\_Value property. Changes to Polarity shall not cause changes of state. If one of the optional properties Change\_Of\_State\_Time, Change\_Of\_State\_Count, or Time\_Of\_State\_Count\_Reset is present, then all of these properties shall be present.

#### **12.7.16 Time\_Of\_State\_Count\_Reset**

This property, of type BACnetDateTime, represents the date and time at which the Change\_Of\_State\_Count property was most recently set to a zero value. If one of the optional properties Change\_Of\_State\_Time, Change\_Of\_State\_Count, or Time\_Of\_State\_Count\_Reset is present, then all of these properties shall be present.

#### **12.7.17 Elapsed\_Active\_Time**

This property, of type Unsigned32, represents the accumulated number of seconds that the Present\_Value property has had the value ACTIVE since this property was most recently set to a zero value. If one of the optional properties Elapsed\_Active\_Time or Time\_Of\_Active\_Time\_Reset is present, then both of these properties shall be present.

#### **12.7.18 Time\_Of\_Active\_Time\_Reset**

This property, of type BACnetDateTime, represents the date and time at which the Elapsed\_Active\_Time property was most recently set to a zero value. If one of the optional properties Elapsed\_Active\_Time or Time\_Of\_Active\_Time\_Reset is present, then both of these properties shall be present.

#### **12.7.19 Minimum\_Off\_Time**

This property, of type Unsigned32, represents the minimum number of seconds that the Present\_Value shall remain in the INACTIVE state after a write to the Present\_Value property causes that property to assume the INACTIVE state.

The mechanism by which this is accomplished is described in 19.2.3.

#### **12.7.20 Minimum\_On\_Time**

This property, of type Unsigned32, represents the minimum number of seconds that the Present\_Value shall remain in the ACTIVE state after a write to the Present\_Value property causes that property to assume the ACTIVE state.

The mechanism by which this is accomplished is described in 19.2.3.

#### **12.7.21 Priority\_Array**

This property is a read-only array that contains prioritized commands that are in effect for this object. See Clause 19 for a description of the prioritization mechanism.

#### **12.7.22 Relinquish\_Default**

This property is the default value to be used for the Present\_Value property when all command priority values in the Priority\_Array property have a NULL value. See Clause 19.

#### **12.7.23 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds during which the Present\_Value must be different from the Feedback\_Value property before a TO-OFFNORMAL event is generated or must remain equal to the Feedback\_Value property before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.7.24 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

#### **12.7.25 Feedback\_Value**

This property, of type BACnetBinaryPV, shall indicate the status of a feedback value from which the Present\_Value must differ before an event is generated. This property is required if intrinsic reporting is supported by this object. The manner by which the Feedback\_Value is determined shall be a local matter.

##### **12.7.25.1 Conditions for Generating a TO-NORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must be different from the Feedback\_Value for a minimum period of time, specified by the Time\_Delay property, and
- (b) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property.

##### **12.7.25.2 Conditions for Generating a TO-NORMAL Event**

Once different, the Present\_Value must become equal to this property before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must remain equal to the Feedback\_Value for a minimum period of time, specified by the Time\_Delay property, and
- (b) the TO-NORMAL flag must be enabled in the Event\_Enable property.

#### **12.7.26 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

#### **12.7.27 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.7.28 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.7.29 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.7.30 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.8 Binary Value Object Type

The Binary Value object type defines a standardized object whose properties represent the externally visible characteristics of a binary value. A "binary value" is a control system parameter residing in the memory of the BACnet Device. This parameter may assume only one of two distinct states. In this description, those states are referred to as ACTIVE and INACTIVE. The Binary Value object and its properties are summarized in Table 12-10 and described in detail in this subclause.

**Table 12-10.** Properties of the Binary Value Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	BACnetBinaryPV	R <sup>1</sup>
Description	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Inactive_Text	CharacterString	O <sup>2</sup>
Active_Text	CharacterString	O <sup>2</sup>
Change_Of_State_Time	BACnetDateTime	O <sup>3</sup>
Change_Of_State_Count	Unsigned32	O <sup>3</sup>
Time_Of_State_Count_Reset	BACnetDateTime	O <sup>3</sup>
Elapsed_Active_Time	Unsigned32	O <sup>4</sup>
Time_Of_Active_Time_Reset	BACnetDateTime	O <sup>4</sup>
Minimum_Off_Time	Unsigned32	O
Minimum_On_Time	Unsigned32	O
Priority_Array	BACnetPriorityArray	O <sup>5</sup>
Relinquish_Default	BACnetBinaryPV	O <sup>5</sup>
Time_Delay	Unsigned	O <sup>6</sup>
Notification_Class	Unsigned	O <sup>6</sup>
Alarm_Value	BACnetBinaryPV	O <sup>6</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>6</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>6</sup>
Notify_Type	BACnetNotifyType	O <sup>6</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>6</sup>
Profile_Name	CharacterString	O

<sup>1</sup> If Present\_Value is commandable, then it is required to be writable. This property is required to be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> If one of the optional properties Inactive\_Text or Active\_Text is present, then both of these properties shall be present.

<sup>3</sup> If one of the optional properties Change\_Of\_State\_Time, Change\_Of\_State\_Count, or Time\_Of\_State\_Count\_Reset is present, then all of these properties shall be present.

<sup>4</sup> If one of the optional properties Elapsed\_Active\_Time or Time\_Of\_Active\_Time\_Reset is present, then both of these properties shall be present.

<sup>5</sup> If Present\_Value is commandable, then both of these properties shall be present.

<sup>6</sup> These properties are required if the object supports intrinsic reporting.

### 12.8.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.8.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.8.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be BINARY\_VALUE.

### **12.8.4 Present\_Value**

This property, of type BACnetBinaryPV, reflects the logical state of the Binary Value. The logical state shall be either INACTIVE or ACTIVE. Present\_Value shall be optionally commandable. If Present\_Value is commandable for a given instance, then the Priority\_Array and Relinquish\_Default properties shall also be present for that instance. The Present\_Value property shall be writable when Out\_Of\_Service is TRUE.

### **12.8.5 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.8.6 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of a binary value object. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN\_ALARM              Logical FALSE (0) if the Event\_State property has a value of NORMAL, otherwise logical TRUE (1).

FAULT              Logical TRUE (1) if the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, otherwise logical FALSE (0).

OVERRIDDEN              Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the Present\_Value property is not changeable through BACnet services. Otherwise, the value is logical FALSE (0).

OUT\_OF\_SERVICE              Logical TRUE (1) if the Out\_Of\_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.8.7 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

### **12.8.8 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value is "reliable" as far as the BACnet Device or operator can determine. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}.

### **12.8.9 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the Present\_Value of the Binary Value object is prevented from being modified by software local to the BACnet device in which the object resides. When Out\_Of\_Service is TRUE, the Present\_Value property may be written to freely. If the Priority\_Array and

`Relinquish_Default` properties are present, then writing to the `Present_Value` property shall be controlled by the BACnet command prioritization mechanism. See Clause 19.

#### 12.8.10 `Inactive_Text`

This property, of type `CharacterString`, characterizes the intended effect of the INACTIVE state of the Binary Value. The content of this string is a local matter, but it is intended to represent a human-readable description of the INACTIVE state. If one of the optional properties `Inactive_Text` or `Active_Text` is present, then both of these properties shall be present.

#### 12.8.11 `Active_Text`

This property, of type `CharacterString`, characterizes the intended effect of the ACTIVE state of the Binary Value. The content of this string is a local matter, but it is intended to represent a human-readable description of the ACTIVE state. If one of the optional properties `Inactive_Text` or `Active_Text` is present, then both of these properties shall be present.

#### 12.8.12 `Change_Of_State_Time`

This property, of type `BACnetDateTime`, represents the date and time at which the most recent change of state occurred. A "change of state" shall be defined as any event that alters the logical state of the Binary Value. If one of the optional properties `Change_Of_State_Time`, `Change_Of_State_Count`, or `Time_Of_State_Count_Reset` is present, then all of these properties shall be present.

#### 12.8.13 `Change_Of_State_Count`

This property, of type `Unsigned32`, represents the number of times that the state of the Binary Value has changed since this property was most recently set to a zero value. The `Change_Of_State_Count` property shall have a range of 0-65535 or greater. If one of the optional properties `Change_Of_State_Time`, `Change_Of_State_Count`, or `Time_Of_State_Count_Reset` is present, then all of these properties shall be present.

#### 12.8.14 `Time_Of_State_Count_Reset`

This property, of type `BACnetDateTime`, represents the date and time at which the `Change_Of_State_Count` property was most recently set to a zero value. If one of the optional properties `Change_Of_State_Time`, `Change_Of_State_Count`, or `Time_Of_State_Count_Reset` is present, then all of these properties shall be present.

#### 12.8.15 `Elapsed_Active_Time`

This property, of type `Unsigned32`, represents the accumulated number of seconds that the `Present_Value` property has had the value ACTIVE since this property was most recently set to a zero value. If one of the optional properties `Elapsed_Active_Time` or `Time_Of_Active_Time_Reset` is present, then both of these properties shall be present.

#### 12.8.16 `Time_Of_Active_Time_Reset`

This property, of type `BACnetDateTime`, represents the date and time at which the `Elapsed_Active_Time` property was most recently set to a zero value. If one of the optional properties `Elapsed_Active_Time` or `Time_Of_Active_Time_Reset` is present, then both of these properties shall be present.

#### 12.8.17 `Minimum_Off_Time`

This property, of type `Unsigned32`, represents the minimum number of seconds that the `Present_Value` shall remain in the INACTIVE state after a write to the `Present_Value` property causes that property to assume the INACTIVE state.

If the `Present_Value` is commandable according to Clause 19, then the mechanism by which this is accomplished is described in 19.2.3. Otherwise, the mechanism is a local matter.

#### 12.8.18 `Minimum_On_Time`

This property, of type `Unsigned32`, represents the minimum number of seconds that the `Present_Value` shall remain in the ACTIVE state after a write to the `Present_Value` property causes that property to assume the ACTIVE state.

If the `Present_Value` is commandable according to Clause 19, then the mechanism by which this is accomplished is described in 19.2.3. Otherwise, the mechanism is a local matter.

### 12.8.19 Priority\_Array

This property is a read-only array that contains prioritized commands that are in effect for this object. See Clause 19 for a description of the prioritization mechanism. If either the Relinquish\_Default property or the Priority\_Array property are present, then both of them shall be present. If Present\_Value is commandable, then Priority\_Array and Relinquish\_Default shall both be present and Present\_Value shall be required to be writable.

### 12.8.20 Relinquish\_Default

This property is the default value to be used for the Present\_Value property when all command priority values in the Priority\_Array property have a NULL value. See Clause 19. If either the Relinquish\_Default property or the Priority\_Array property are present, then both of them shall be present. If Present\_Value is commandable, then Priority\_Array and Relinquish\_Default shall both be present and Present\_Value shall be required to be writable.

### 12.8.21 Time\_Delay

This property, of type Unsigned, shall specify the minimum period of time in seconds during which the Present\_Value must be different from the Alarm\_Value property before a TO-OFFNORMAL event is generated or must remain equal to the Alarm\_Value property before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

### 12.8.22 Notification\_Class

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

### 12.8.23 Alarm\_Value

This property, of type BACnetBinaryPV, shall specify the value that the Present\_Value property must have before a TO-OFFNORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

#### 12.8.23.1 Conditions for Generating a TO-OFFNORMAL Event

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must maintain the value specified by Alarm\_Value for a minimum period of time, specified by the Time\_Delay property, and
- (b) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property.

#### 12.8.23.2 Conditions for Generating a TO-NORMAL Event

Once equal, the Present\_Value must become not equal to this property before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must remain not equal to the Alarm\_Value for a minimum period of time, specified by the Time\_Delay property, and
- (b) the TO-NORMAL flag must be enabled in the Event\_Enable property.

### 12.8.24 Event\_Enable

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

### 12.8.25 Acked\_Transitions

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.8.26 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.8.27 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.8.28 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.9 Calendar Object Type

The Calendar object type defines a standardized object used to describe a list of calendar dates, which might be thought of as "holidays," "special events," or simply as a list of dates. The object and its properties are summarized in Table 12-11 and described in detail in this subclause.

**Table 12-11.** Properties of the Calendar Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Present_Value	BOOLEAN	R
Date_List	List of BACnetCalendarEntry	R
Profile_Name	CharacterString	O

### 12.9.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.9.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.9.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be CALENDAR.

### 12.9.4 Description

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### 12.9.5 Present\_Value

This property, of type BOOLEAN, indicates the current value of the calendar: TRUE if the current date is in the Date\_List and FALSE if it is not.

### 12.9.6 Date\_List

This property is a List of BACnetCalendarEntry, each of which is either an individual date (Date), range of dates (BACnetDateRange), or month/week-of-month/day-of-week specification (BACnetWeekNDay). If the current date matches the calendar entry criteria, the present value of the Calendar object is TRUE. Individual fields of the various constructs may also be unspecified in which case the field acts as a "wildcard" for determining if the current date results in a match. In a date range, for example, if the startDate is unspecified, it means "any date up to and including the endDate." If the endDate is unspecified, it means "any date from the startDate on."

If the calendar entry were a BACnetWeekNDay with unspecified month and week-of-month fields but with a specific day-of-week, it would mean the Calendar object would be TRUE on that day-of-week all year long. If a BACnet Device permits writing to the Date\_List property, all choices in the BACnetCalendarEntry shall be permitted.

### 12.9.7 Profile\_Name

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## **12.10 Command Object Type**

The Command object type defines a standardized object whose properties represent the externally visible characteristics of a multi-action command procedure. A Command object is used to write a set of values to a group of object properties, based on the "action code" that is written to the Present\_Value of the Command object. Whenever the Present\_Value property of the Command object is written to, it triggers the Command object to take a set of actions that change the values of a set of other objects' properties.

The Command object would typically be used to represent a complex context involving multiple variables. The Command object is particularly useful for representing contexts that have multiple states. For example, a particular zone of a building might have three states: UNOCCUPIED, WARMUP, and OCCUPIED. To establish the operating context for each state, numerous objects' properties may need to be changed to a collection of known values. For example, when unoccupied, the temperature setpoint might be 65°F and the lights might be off. When occupied, the setpoint might be 72°F and the lights turned on, etc.

The Command object defines the relationship between a given state and those values that shall be written to a collection of different objects' properties to realize that state. Normally, a Command object is passive. Its In\_Process property is FALSE, indicating that the Command object is waiting for its Present\_Value property to be written with a value. When Present\_Value is written, the Command object shall begin a sequence of actions. The In\_Process property shall be set to TRUE, indicating that the Command object has begun processing one of a set of action sequences that is selected based on the particular value written to the Present\_Value property. If an attempt is made to write to the Present\_Value property through WriteProperty services while In\_Process is TRUE, then a Result(-) shall be issued rejecting the write.

The new value of the Present\_Value property determines which sequence of actions the Command object shall take. These actions are specified in an array of action lists indexed by this value. The Action property contains these lists. A given list may be empty, in which case no action takes place, except that In\_Process is returned to FALSE and All\_Writes\_Successful is set to TRUE. If the list is not empty, then for each action in the list the Command object shall write a particular value to a particular property of a particular object in a particular BACnet Device. Note, however, that the capability to write to remote devices is not required.

Note also that the Command object does not guarantee that every write will be successful, and no attempt is made by the Command object to "roll back" successfully written properties to their previous values in the event that one or more writes fail. If any of the writes fail, then the All\_Writes\_Successful property is set to FALSE and the Write\_Successful flag for that BACnetActionCommand is set to FALSE. If the Quit\_On\_Failure flag is TRUE for the failed BACnetActionCommand, then all subsequent BACnetActionCommands in the list shall have their Write\_Successful flag set to FALSE. If an individual write succeeds, then the Write\_Successful flag for that BACnetActionCommand shall be set to TRUE. If all the writes are successful, then the All\_Writes\_Successful property is set to TRUE. Once all the writes have been processed to completion by the Command object, the In\_Process property is set back to FALSE and the Command object becomes passive again, waiting for another command.

It is important to note that the particular value that is written to the Present\_Value property is not what triggers the action, but the act of writing itself. Thus if the Present\_Value property has the value 5 and it is again written with the value 5, then the 5th list of actions will be performed again. Writing zero to the Present\_Value causes no action to be taken and is the same as invoking an empty list of actions.

The Command object is a powerful concept with many beneficial applications. However, there are unique aspects of the Command object that can cause confusing or destructive side effects if the Command object is improperly configured. Since the Command object can manipulate other objects' properties, it is possible that a Command object could be configured to command itself. In such a case, the In\_Process property acts as an interlock and protects the Command object from self-oscillation. However, it is also possible for a Command object to command another Command object that commands the first Command object and so on. The possibility exists for Command objects that command GROUP objects. In these cases of "circular referencing," it is possible for confusing side effects to occur. When references occur to objects in other BACnet Devices, there is an increased possibility of time delays, which could cause oscillatory behavior between Command objects that are improperly configured in such a circular manner. Caution should be exercised when configuring Command objects that reference objects outside the BACnet device that contains them.

The Command object and its properties are summarized in Table 12-12 and described in detail in this subclause.

**Table 12-12.** Properties of the Command Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Present_Value	Unsigned	W
In_Process	BOOLEAN	R
All_Writes_Successful	BOOLEAN	R
Action	BACnetARRAY[N] of BACnetActionList	R
Action_Text	BACnetARRAY[N] of CharacterString	O
Profile_Name	CharacterString	O

#### **12.10.1 Object\_Identifier**

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

#### **12.10.2 Object\_Name**

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

#### **12.10.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be COMMAND.

#### **12.10.4 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

#### **12.10.5 Present\_Value**

This property, of type Unsigned, indicates which action the Command object is to take or has already taken. Whenever the Present\_Value property is written to, it triggers the Command object to take a set of actions that change the values of a set of other objects' properties.

The Present\_Value may be written to with any value from 0 to the maximum number of actions supported by the Action property. When the Present\_Value is written to, the Command object begins a sequence of actions. The new value of the Present\_Value property determines which list of actions the Command object shall take. These actions are specified in the Action property, which is an array of lists of actions to take. The array is indexed by the value being written. A given list may be empty, in which case no action takes place. If the list is not empty, then for each action in the list, the Command object shall write a particular value to a particular property of a particular object in a particular BACnet Device.

#### **12.10.6 In\_Process**

This property, of type BOOLEAN, shall be set to TRUE when a value is written to the Present\_Value property. This TRUE value indicates that the Command object has begun processing one of a set of action sequences. Once all of the writes have been attempted by the Command object, the In\_Process property shall be set back to FALSE.

#### **12.10.7 All\_Writes\_Successful**

This property, of type BOOLEAN, indicates the success or failure of the sequence of actions that are triggered when the Present\_Value property is written to. At that time, In\_Process is set to TRUE and All\_Writes\_Successful is set to FALSE. If after the list has been executed, all of the writes have succeeded, then All\_Writes\_Successful is set to TRUE at the same time that In\_Process is set to FALSE. Therefore, while In\_Process is TRUE, the value of All\_Writes\_Successful is not a valid indication of the current or previous operation.

### **12.10.8 Action**

This property, of type BACnetARRAY of BACnetActionList, specifies an array of "action lists." These action lists are indexed by the value that is written to the Present\_Value property. A given list may be empty, in which case no action takes place, except that In\_Process is returned to FALSE and All\_Writes\_Successful is set to TRUE. If the list is not empty, then for each action in the list, the Command object shall write a particular value to a particular property of a particular object in a particular BACnet Device based on the specifications in each BACnetActionCommand. Each write shall occur in the order that BACnetActionCommand list elements would appear if the list was read using the ReadProperty service. The value zero is a special case that takes no action and behaves like an empty list. The number of defined action lists may be found by reading the Action property with an array index of zero. If the size of this array is changed, the size of the Action\_Text array, if present, shall also be changed to the same size.

Each BACnetActionCommand is a specification of a single value to be written to a single property of a single object. BACnetActionCommands have nine parts: an optional BACnet device identifier, an object identifier, a property identifier, a conditional property array index, a value to be written, a conditional priority, an optional post-writing delay time, a premature quit flag, and a write success flag. The components and their datatypes are shown below.

<u>Component</u>	<u>Datatype</u>
Device_Identifier	BACnetObjectIdentifier (Optional)
Object_Identifier	BACnetObjectIdentifier
Property_Identifier	BACnetPropertyIdentifier
Property_Array_Index	Unsigned (Conditional)
Property_Value	Any
Priority	Unsigned (1..16) (Conditional)
Post_Delay	Unsigned (Optional)
Quit_On_Failure	BOOLEAN
Write_Successful	BOOLEAN

If the Device\_Identifier is not present, then the write shall be performed on objects residing in the device that contains the Command object. A device that supports the Command object type is not required to support writing outside the device. If the Property\_Identifier refers to an array property, then the Property\_Array\_Index shall also be present to specify the index within the array of the property to be written. If the property being written is a commandable property, then a priority value shall be supplied; otherwise it shall be omitted. If the Quit\_On\_Failure flag is TRUE, then if the write fails for any reason, the device shall terminate the execution of the action list prematurely. Otherwise, writing shall continue after each failure with the next element of the action list. In either case, All\_Writes\_Successful shall remain FALSE throughout the execution of the list. After each write, whether successful or not, if the Post\_Delay is present, it shall represent a delay in seconds prior to the execution of the next write or the completion of all writing and the setting of In\_Process to FALSE.

If the write fails for any reason, then the Write\_Successful flag shall be set to FALSE. If the Quit\_On\_Failure flag is TRUE, then the first write that fails shall also terminate the execution list prematurely. In this case, the Write\_Successful flag in subsequent entries in the same list shall be set to FALSE. If the write succeeds, then the Write\_Successful flag shall be set to TRUE.

### **12.10.9 Action\_Text**

This property, of type BACnetARRAY of CharacterString, shall be used to indicate a text string description for each of the possible values of the Present\_Value property. The content of these strings is not restricted. If the size of this array is changed, the size of the Action array shall also be changed to the same size.

### **12.10.10 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.11 Device Object Type

The Device object type defines a standardized object whose properties represent the externally visible characteristics of a BACnet Device. There shall be exactly one Device object in each BACnet Device. A Device object is referenced by its Object\_Identifier property, which is not only unique to the BACnet Device that maintains this object but is also unique throughout the BACnet internetwork. The Device object type and its properties are summarized in Table 12-13 and described in detail in this subclause.

**Table 12-13.** Properties of the Device Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
System_Status	BACnetDeviceStatus	R
Vendor_Name	CharacterString	R
Vendor_Identifier	Unsigned16	R
Model_Name	CharacterString	R
Firmware_Revision	CharacterString	R
Application_Software_Version	CharacterString	R
Location	CharacterString	O
Description	CharacterString	O
Protocol_Version	Unsigned	R
Protocol_Revision	Unsigned	R
Protocol_Services_Supported	BACnetServicesSupported	R
Protocol_Object_Types_Supported	BACnetObjectTypesSupported	R
Object_List	BACnetARRAY[N] of BACnetObjectIdentifier	R
Structured_Object_List	BACnetARRAY[N] of BACnetObjectIdentifier	O
Max_APDU_Length_Accepted	Unsigned	R
Segmentation_Supported	BACnetSegmentation	R
Max_Segments_Accepted	Unsigned	O <sup>1</sup>
VT_Classes_Supported	List of BACnetVTClass	O <sup>2</sup>
Active_VT_Sessions	List of BACnetVTSes	O <sup>2</sup>
Local_Time	Time	O <sup>3,4</sup>
Local_Date	Date	O <sup>3,4</sup>
UTC_Offset	INTEGER	O <sup>4</sup>
Daylight_Savings_Status	BOOLEAN	O <sup>4</sup>
APDU_Segment_Timeout	Unsigned	O <sup>1</sup>
APDU_Timeout	Unsigned	R
Number_Of_APDU_Retries	Unsigned	R
List_Of_Session_Keys	List of BACnetSessionKey	O
Time_Synchronization_Recipients	List of BACnetRecipient	O <sup>5</sup>
Max_Master	Unsigned(1..127)	O <sup>6</sup>
Max_Info_Frames	Unsigned	O <sup>6</sup>
Device_Address_Binding	List of BACnetAddressBinding	R
Database_Revision	Unsigned	R
Configuration_Files	BACnetARRAY[N] of BACnetObjectIdentifier	O <sup>7</sup>
Last_Restore_Time	BACnetTimeStamp	O <sup>7</sup>
Backup_Failure_Timeout	Unsigned16	O <sup>8</sup>
Active_COV_Subscriptions	List of BACnetCOVSubscription	O <sup>9</sup>
Slave_Proxy_Enable	BACnetARRAY[N] of BOOLEAN	O <sup>10</sup>
Manual_Slave_Address_Binding	List of BACnetAddressBinding	O <sup>10</sup>
Auto_Slave_Discovery	BACnetARRAY[N] of BOOLEAN	O <sup>11</sup>
Slave_Address_Binding	List of BACnetAddressBinding	O <sup>12</sup>
Last_Restart_Reason	BACnetRestartReason	O <sup>13</sup>
Time_Of_Device_Restart	BACnetTimeStamp	O <sup>13</sup>
Restart_Notification_Recipients	List of BACnetRecipient	O <sup>13</sup>

UTC_Time_Synchronization_Recipients	List of BACnetRecipient	O <sup>5</sup>
Time_Synchronization_Interval	Unsigned	O <sup>14</sup>
Align_Intervals	BOOLEAN	O <sup>14</sup>
Interval_Offset	Unsigned	O <sup>14</sup>
Profile_Name	CharacterString	O

- <sup>1</sup> Required if segmentation of any kind is supported.
- <sup>2</sup> If one of the properties VT\_Classes\_Supported or Active\_VT\_Sessions is present, then both of these properties shall be present. Both properties are required if support for VT Services is indicated in the PICS.
- <sup>3</sup> If the device supports the execution of the TimeSynchronization service, then these properties shall be present.
- <sup>4</sup> If the device supports the execution of the UTCTimeSynchronization service, then these properties shall be present.
- <sup>5</sup> If this property is present, then Time\_Synchronization\_Interval, Align\_Intervals and Interval\_Offset shall be present. If present, this property shall be writable.
- <sup>6</sup> These properties are required if the device is an MS/TP master node.
- <sup>7</sup> These properties are required if the device supports the backup and restore procedures.
- <sup>8</sup> This property must be present and writable if the device supports the backup and restore procedures.
- <sup>9</sup> This property is required if the device supports execution of either the SubscribeCOV or SubscribeCOVProperty service.
- <sup>10</sup> This property shall be present and writable if the device is capable of being a Slave-Proxy device.
- <sup>11</sup> This property shall be present if the device is capable of being a Slave-Proxy device that implements automatic discovery of slaves.
- <sup>12</sup> This property shall be present if the device is capable of being a Slave-Proxy device.
- <sup>13</sup> These properties are required if the device supports the restart procedure as described in Clause 19.3.
- <sup>14</sup> If either Time\_Synchronization\_Recipients or UTC\_Time\_Synchronization\_Recipients is present, then this property shall be present and writable.

### **12.11.1 Object\_Identifier**

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. For the Device object, the object identifier shall be unique internetwork-wide.

### **12.11.2 Object\_Name**

This property, of type CharacterString, shall represent a name for the object that is unique internetwork-wide. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.11.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be DEVICE.

### **12.11.4 System\_Status**

This property, of type BACnetDeviceStatus, reflects the current physical and logical status of the BACnet Device. The values that may be taken on by this property are:

{OPERATIONAL, OPERATIONAL\_READ\_ONLY, DOWNLOAD\_REQUIRED,  
DOWNLOAD\_IN\_PROGRESS, NON\_OPERATIONAL, BACKUP\_IN\_PROGRESS}

The exact meaning of these states, except for BACKUP\_IN\_PROGRESS, in a given device and their synchronization with other internal operations of the device or the execution of BACnet services by the device are local matters and are not defined by this standard.

### **12.11.5 Vendor\_Name**

This property, of type CharacterString, identifies the manufacturer of the BACnet Device.

### **12.11.6 Vendor\_Identifier**

This property, of type Unsigned16, is a unique vendor identification code, assigned by ASHRAE, which is used to distinguish proprietary extensions to the protocol. See Clause 23.

#### **12.11.7 Model\_Name**

This property, of type CharacterString, is assigned by the vendor to represent the model of the BACnet Device.

#### **12.11.8 Firmware\_Revision**

This property, of type CharacterString, is assigned by the vendor to represent the level of firmware installed in the BACnet Device.

#### **12.11.9 Application\_Software\_Version**

This property, of type CharacterString, identifies the version of application software installed in the machine. The content of this string is a local matter, but it could be a date-and-time stamp, a programmer's name, a host file version number, etc.

#### **12.11.10 Location**

This property, of type CharacterString, indicates the physical location of the BACnet Device.

#### **12.11.11 Description**

This property, of type CharacterString, is a string of printable characters that may be used to describe the application being carried out by the BACnet Device or other locally desired descriptive information.

#### **12.11.12 Protocol\_Version**

This property, of type Unsigned, represents the version of the BACnet protocol supported by this BACnet Device. Every major revision of BACnet shall increase this version number by one. The initial release of BACnet shall be version 1.

#### **12.11.13 Protocol\_Revision**

This property, of type Unsigned, shall indicate the minor revision level of the BACnet standard. This value shall start at 1 and be incremented for any substantive change(s) to the BACnet standard that affect device communication or behavior. This value shall revert to zero upon each change to the Protocol\_Version property. Changes to the values for Protocol\_Version and Protocol\_Revision are recorded in the History of Revisions at the end of this standard.

This property is required for all devices implementing BACnet Protocol\_Version 1, Protocol\_Revision 1 and above. Absence of this property shall indicate a device implemented to a version of the standard prior to the definition of the Protocol\_Revision property.

#### **12.11.14 Protocol\_Services\_Supported**

This property, of type BACnetServicesSupported, indicates which standardized protocol services are supported by this device's protocol implementation.

#### **12.11.15 Protocol\_Object\_Types\_Supported**

This property, of type BACnetObjectTypesSupported, indicates which standardized object types are supported by this device's protocol implementation. The list of properties supported for a particular object may be acquired by use of the ReadPropertyMultiple service with a property reference of ALL (see 15.7.3.1.2).

#### **12.11.16 Object\_List**

This read only property is a BACnetARRAY of Object\_Identifiers, one Object\_Identifier for each object within the device that is accessible through BACnet services.

#### **12.11.17 Structured\_Object\_List**

This optional property is a BACnetARRAY of BACnetObjectIdentifier. Entries in the array reference objects chosen for use as starting points for the traversal of object hierarchies. The objects directly referenced by this property shall be restricted to Structured View and Life Safety Zone objects.

#### **12.11.18 Max\_APDU\_Length\_Accepted**

This property, of type Unsigned, is the maximum number of octets that may be contained in a single, indivisible application layer protocol data unit. The value of this property shall be greater than or equal to 50. The value of this property is also constrained by the underlying data link technology. See Clauses 6 through 11.

### **12.11.19 Segmentation\_Supported**

This property, of type BACnetSegmentation, indicates whether the BACnet Device supports segmentation of messages and, if so, whether it supports segmented transmission, reception, or both:

{SEGMENTED\_BOTH, SEGMENTED\_TRANSMIT, SEGMENTED\_RECEIVE, NO\_SEGMENTATION}

### **12.11.20 Max\_Segments\_Accepted**

The Max\_Segments\_Accepted property, of type Unsigned, shall indicate the maximum number of segments of an APDU that this device will accept.

### **12.11.21 VT\_Classes\_Supported**

The VT\_Classes\_Supported property is a List of BACnetVTClass each of which is an enumeration indicating a particular set of terminal characteristics. A given BACnet Device may support multiple types of behaviors for differing types of terminals or differing types of operator interface programs. At a minimum, such devices shall support the "Default-terminal" VT-class defined in 17.5.

If one of the properties VT\_Classes\_Supported or Active\_VT\_Sessions is present, then both of these properties shall be present. Both properties are required if support for VT Services is indicated in the PICS.

### **12.11.22 Active\_VT\_Sessions**

The Active\_VT\_Sessions property is a List of BACnetVTSesession each of which consists of a Local VT Session Identifier, a Remote VT Session Identifier, and Remote VT Address. This property provides a network-visible indication of those virtual terminal sessions (VT-Sessions) that are active at any given time. Whenever a virtual terminal session is created with the VT-Open service, a new entry is added to the Active\_VT\_Sessions list. Similarly, whenever a VT-session is terminated, the corresponding entry shall be removed from the Active\_VT\_Sessions list.

If one of the properties VT\_Classes\_Supported or Active\_VT\_Sessions is present, then both of these properties shall be present. Both properties are required if support for VT Services is indicated in the PICS.

### **12.11.23 Local\_Time**

The Local\_Time property, of type Time, shall indicate the time of day to the best of the device's knowledge. If the BACnet Device does not have any knowledge of time or date, then the Local\_Time property shall be omitted.

### **12.11.24 Local\_Date**

The Local\_Date property, of type Date, shall indicate the date to the best of the device's knowledge. If the BACnet Device does not have any knowledge of time or date, then the Local\_Date property shall be omitted.

### **12.11.25 UTC\_Offset**

The UTC\_Offset property, of type INTEGER, shall indicate the number of minutes (-780 to +780) offset between local standard time and Universal Time Coordinated. The time zones to the west of the zero degree meridian shall be positive values, and those to the east shall be negative values. The value of the UTC\_Offset property is subtracted from the UTC received in UTCTimeSynchronization service requests to calculate the correct local standard time.

### **12.11.26 Daylight\_Savings\_Status**

The Daylight\_Savings\_Status property, of type BOOLEAN, shall indicate whether daylight savings time is in effect (TRUE) or not (FALSE) at the BACnet Device's location.

### **12.11.27 APDU\_Segment\_Timeout**

The APDU\_Segment\_Timeout property, of type Unsigned, shall indicate the amount of time in milliseconds between retransmission of an APDU segment. A suggested value for this property is 5000 milliseconds. This value shall be non-zero if the Device object property called Number\_Of\_APDU\_Retries is non-zero. See 5.3. If segmentation of any kind is supported, then the APDU\_Segment\_Timeout property shall be present.

In order to achieve reliable communication, it is recommended that the values of the APDU\_Segment\_Timeout properties of the Device objects of all intercommunicating devices should contain the same value.

### **12.11.28 APDU\_Timeout**

The APDU\_Timeout property, of type Unsigned, shall indicate the amount of time in milliseconds between retransmissions of an APDU requiring acknowledgment for which no acknowledgment has been received. A suggested value for this property is 10,000 milliseconds for devices that permit modification of this parameter. Otherwise, the default value shall be 60,000 milliseconds. This value shall be non-zero if the Device object property called Number\_Of\_APDU\_Retries is non-zero. See Clause 5.3.

In order to achieve reliable communication, it is recommended that the values of the APDU\_Timeout properties of the Device objects of all intercommunicating devices should contain the same value.

### **12.11.29 Number\_Of\_APDU\_Retries**

The Number\_Of\_APDU\_Retries property, of type Unsigned, shall indicate the maximum number of times that an APDU shall be retransmitted. A suggested value for this property is. If this device does not perform retries, then this property shall be set to zero. If the value of this property is greater than zero, a non-zero value shall be placed in the Device object APDU\_Timeout property. See Clause 5.3.

### **12.11.30 List\_Of\_Session\_Keys**

This property is a List of BACnetSessionKey each of which is one of the cryptographic keys used to communicate with other security-conscious BACnet Devices. This property shall not be readable or writable by any device except a device designated the "Key Server." A session key shall consist of a 56-bit encryption key and a BACnet Address of the peer with which secure communications is requested.

### **12.11.31 Time\_Synchronization\_Recipients**

This optional property, of type List of BACnetRecipient, is used to control the restrictions placed on a device's use of the TimeSynchronization service. The value of this property shall be a list of zero or more BACnetRecipients. If the list is of length zero, or the property is not present, the device is prohibited from automatically sending a TimeSynchronization request. If the list is of length one or more, the device may automatically send a TimeSynchronization request but only to the devices or addresses listed. If this property is present, it shall be writable.

### **12.11.32 Max\_Master**

The Max\_Master property, of type Unsigned, shall be present if the device is a master node on an MS/TP network. The value of Max\_Master specifies the highest possible address for master nodes and shall be less than or equal to 127. If the Max\_Master property is not writable via BACnet services, its value shall be 127. See Clause 9.5.3

### **12.11.33 Max\_Info\_Frames**

The Max\_Info\_Frames property, of type Unsigned, shall be present if the device is a node on an MS/TP network. The value of Max\_Info\_Frames specifies the maximum number of information frames the node may send before it must pass the token. If Max\_Info\_Frames is not writable or otherwise user configurable, its value shall be one. See Clause 9.5.3.

### **12.11.34 Device\_Address\_Binding**

The Device\_Address\_Binding property is a List of BACnetAddressBinding each of which consists of a BACnet Object\_Identifier of a BACnet Device object and a BACnet device address in the form of a BACnetAddress. Entries in the list identify the actual device addresses that will be used when the remote device must be accessed via a BACnet service request. A value of zero may be used for the network-number portion of BACnetAddress entries for other devices residing on the same network as this device. The list may be empty if no device identifier-device address bindings are currently known to the device.

### **12.11.35 Database\_Revision**

This property, of type Unsigned, is a logical revision number for the device's database. It is incremented when an object is created, an object is deleted, an object's name is changed, an object's Object\_Identifier property is changed, or a restore is performed.

### **12.11.36 Configuration\_Files**

This optional property is a BACnet Array of BACnetObjectIdentifier. Entries in the array identify the files within the device that define the device's image that can be backed up. The contents of this property is only required to be valid during the

backup procedure. This property must be supported if the device supports the BACnet backup and restore procedure as described in Clause 19.1.

#### **12.11.37 Last\_Restore\_Time**

This optional property, of type BACnetTimeStamp, is the time at which the device's image was last restored as described in Clause 19.1. This property must be supported if the device supports the BACnet backup and restore procedures as described in Clause 19.1.

#### **12.11.38 Backup\_Failure\_Timeout**

This optional property, of type Unsigned16, is the time, in seconds, that the device being backed up or restored must wait before unilaterally ending the backup or restore procedure. This property must be writable with the intent that the device performing the backup, or the human operator, will configure this with an appropriate timeout.

#### **12.11.39 Active\_COV\_Subscriptions**

The Active\_COV\_Subscriptions property is a List of BACnetCOVSubscription, each of which consists of a Recipient, a Monitored Property Reference, an Issue Confirmed Notifications flag, a Time Remaining value and an optional COV Increment. This property provides a network-visible indication of those COV subscriptions that are active at any given time. Whenever a COV Subscription is created with the SubscribeCOV or SubscribeCOVProperty service, a new entry is added to the Active\_COV\_Subscriptions list. Similarly, whenever a COV Subscription is terminated, the corresponding entry shall be removed from the Active\_COV\_Subscriptions list.

This property is required if the device supports execution of either SubscribeCOV or SubscribeCOVProperty service.

#### **12.11.40 Slave\_Proxy\_Enable**

This property, of type BACnetArray of BOOLEAN, is an indication whether (TRUE) or not (FALSE) the device will perform Slave-Proxy functions for each of the MS/TP ports represented by each array element. This property shall be present if the device is capable of performing the functions of a Slave-Proxy device. The value of this property shall be retained over a device reset.

#### **12.11.41 Manual\_Slave\_Address\_Binding**

This property, of type List of BACnetAddressBinding, describes the manually configured set of slave devices for which this device is acting as a Slave Proxy as described in 16.10.2. This property shall be present if the device is capable of performing the functions of a Slave-Proxy device. If present, and the device is directly attached to an MS/TP network, then this property shall be writable.

This property is used to manually configure a set of slave devices for which this device will be a proxy. This property allows a Slave Proxy that does not support automatic slave discovery be configured with a set of slaves for which this device will be a proxy. It also allows a Slave-Proxy device to be a proxy for Slave devices that do not support the special object instance of 4194303 as described in Clause 12. The value of this property shall be retained over a device reset. When enabled, the Slave-Proxy device shall periodically check each device that is in this list, and not in the Slave\_Address\_Binding list, by reading the device's Protocol\_Services\_Supported property from the device's Device object using the ReadProperty service. If the device responds and indicates that it does not execute the Who-Is service, it shall be added to the Slave\_Address\_Binding property. The period at which the devices are checked is a local matter.

#### **12.11.42 Auto\_Slave\_Discovery**

This property, of type BACnetArray of BOOLEAN, is an indication whether (TRUE) or not (FALSE) the device will perform automatic slave detection functions for each of the MS/TP ports represented by each array element. This property shall be present if the device is capable of performing the functions of a Slave-Proxy device. The value of this property shall be retained over a device reset.

Slave detection shall be accomplished by the proxy device using ReadProperty services to read, at a minimum, the Device object's Protocol\_Services\_Supported property for each MAC address on each port where Auto\_Slave\_Discovery for that port is TRUE. The ReadProperty service shall use the special object instance of 4194303 as described in Clause 12. If the device is found to support execution of the Who-Is service, it is ignored; otherwise, the device shall be added to the Slave\_Address\_Binding property. The slave detection algorithm shall be repeated periodically. The period at which it is repeated is a local matter.

#### **12.11.43 Slave\_Address\_Binding**

This property, of type List of BACnetAddressBinding, describes the set of slave devices for which this device is acting as a Slave-Proxy as described in 16.10.2. This property shall be present if the device is capable of performing the functions of a Slave-Proxy device. If present, and the device is directly attached to an MS/TP network, then this property shall be writable.

The set of devices described by the Slave\_Address\_Binding property consists of those devices described in the Manual\_Slave\_Address\_Binding and those devices that are automatically discovered. When enabled, the Slave-Proxy device shall periodically check each device in this list by reading the device's Protocol\_Services\_Supported property from the device's Device object using the ReadProperty service. If the device fails to respond, or indicates that it executes Who-Is, it shall be removed from the list. The period at which the devices are checked is a local matter.

#### **12.11.44 Last\_Restart\_Reason**

This property, of type BACnetRestartReason, indicates the reason for the last device restart. This property shall be present if the device supports the BACnet restart procedure as described in Clause 19.3. The possible values for this property are:

UNKNOWN	The device cannot determine the cause of the last reset.
COLDSTART	A ReinitializeDevice request was received with a 'Reinitialized State of Device' of COLDSTART or the device was made to COLDSTART by some other means.
WARMSTART	A ReinitializeDevice request was received with a 'Reinitialized State of Device' of WARMSTART or the device was made to WARMSTART by some other means.
DETECTED_POWER_LOST	The device detected that incoming power was lost.
DETECTED_POWERED_OFF	The device detected that its power switch was turned off.
HARDWARE_WATCHDOG	The hardware watchdog timer reset the device.
SOFTWARE_WATCHDOG	The software watchdog timer reset the device.
SUSPENDED	The device was suspended. How the device was suspended or what it means to be suspended is a local matter.

#### **12.11.45 Time\_Of\_Device\_Restart**

This property, of type BACnetTimeStamp, is the time at which the device was last restarted. This property shall be present if the device supports the BACnet restart procedure as described in Clause 19.3.

#### **12.11.46 Restart\_Notification\_Recipients**

The Restart\_Notification\_Recipients property is used to control the restrictions on which devices, if any, are to be notified when a restart occurs. The value of this property shall be a list of zero or more BACnetRecipients. If the list is of length zero, a device is prohibited from sending a device restart notification. The default value of the property shall be a single entry representing a broadcast on the local network. If the property is not writable, then it shall contain the default value. If the list is of length one or more, a device shall send a restart notification, but only to the devices or addresses listed. This property shall be present if and only if the device supports the BACnet restart procedure as described in Clause 19.3.

#### **12.11.47 UTC\_Time\_Synchronization\_Recipients**

This optional property, of type List of BACnetRecipient, is used to control the restrictions placed on a device's use of the UTCTimeSynchronization service. The value of this property shall be a list of zero or more BACnetRecipients. If the list is of length zero, or the property is not present, the device is prohibited from automatically sending a UTCTimeSynchronization request. If the list is of length one or more, the device may automatically send a UTCTimeSynchronization request but only to the devices or addresses listed. If this property is present, it shall be writable.

#### **12.11.48 Time\_Synchronization\_Interval**

This optional property, of type Unsigned, specifies the periodic interval in minutes at which TimeSynchronization and UTCTimeSynchronization requests shall be sent. If this property has a value of zero, then periodic time synchronization is disabled. If this property is present, it shall be writable.

#### **12.11.49 Align\_Intervals**

This optional property, of type BOOLEAN, specifies whether (TRUE) or not (FALSE) clock-aligned periodic time synchronization is enabled. If periodic time synchronization is enabled and the time synchronization interval is a factor of

(divides without remainder) an hour or day, then the beginning of the period specified for time synchronization shall be aligned to the hour or day, respectively. If this property is present, it shall be writable.

#### **12.11.50 Interval\_Offset**

This optional property, of type Unsigned, specifies the offset in minutes from the beginning of the period specified for time synchronization until the actual time synchronization requests are sent. The offset used shall be the value of Interval\_Offset modulo the value of Time\_Synchronization\_Interval; e.g., if Interval\_Offset has the value 31 and Time\_Synchronization\_Interval is 30, the offset used shall be 1. Interval\_Offset shall have no effect if Align\_Intervals is FALSE. If this property is present, it shall be writable.

#### **12.11.51 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.12 Event Enrollment Object Type

The Event Enrollment object type defines a standardized object that represents and contains the information required for managing events within BACnet systems. "Events" are changes of value of any property of any object that meet certain predetermined criteria. The primary purpose for Event Enrollment objects is to define an event and to provide a connection between the occurrence of an event and the transmission of a notification message to one or more recipients.

The Event Enrollment object contains the event-type description, the parameters needed to determine if the event has occurred, and a device to be notified. Alternatively, a Notification Class object may serve to identify the recipients of event notifications. A device is considered to be "enrolled for event notification" if it is the recipient to be notified or one of the recipients in a Notification Class object referenced by the Event Enrollment object.

Clause 13 describes the interaction between Event Enrollment objects and the Alarm and Event application services. The Event Enrollment object and its properties are summarized in Table 12-14 and described in detail in this subclause.

**Table 12-14.** Properties of the Event Enrollment Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Event_Type	BACnetEventType	R
Notify_Type	BACnetNotifyType	R
Event_Parameters	BACnetEventParameter	R
Object_Property_Reference	BACnetDeviceObjectPropertyReference	R
Event_State	BACnetEventState	R
Event_Enable	BACnetEventTransitionBits	R
Acked_Transitions	BACnetEventTransitionBits	R
Notification_Class	Unsigned	R
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	R
Profile_Name	CharacterString	O

### 12.12.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the device that maintains it.

### 12.12.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.12.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be EVENT\_ENROLLMENT.

### 12.12.4 Description

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### 12.12.5 Event\_Type

This read only property, of type BACnetEventType, indicates the type of event algorithm that is to be used to detect the occurrence of events and report to enrolled devices. This parameter is an enumerated type that may have any of the following values:

```
{CHANGE_OF_BITSTRING, CHANGE_OF_STATE, CHANGE_OF_VALUE, COMMAND_FAILURE,
FLOATING_LIMIT, OUT_OF_RANGE, BUFFER_READY, CHANGE_OF_LIFE_SAFETY,
EXTENDED, UNSIGNED, RANGE}
```

There is a specific relationship between each event algorithm, the parameter list, and the event types that are valid for the event. The Event\_Type reflects the algorithm that is used to determine the state of an event. The algorithm for each Event\_Type is specified in Clause 13. The Event\_Parameters property provides the parameters needed by the algorithm.

The valid combinations of Event\_Type, Event\_State, and Event\_Parameters values are summarized in Table 12-15.

**Table 12-15.** Event\_Types, Event\_States, and their Parameters

Event_Type	Event_State	Event_Parameters
CHANGE_OF_BITSTRING	NORMAL OFFNORMAL	Time_Delay Bitmask List_Of_Bitstring_Values
CHANGE_OF_STATE	NORMAL OFFNORMAL	Time_Delay List_Of_Values
CHANGE_OF_VALUE	NORMAL	Time_Delay Bitmask Referenced_Property_Increment
COMMAND_FAILURE	NORMAL OFFNORMAL	Time_Delay Feedback_Property_Reference
FLOATING_LIMIT	NORMAL HIGH_LIMIT LOW_LIMIT	Time_Delay Setpoint_Reference Low_Diff_Limit High_Diff_Limit Deadband
OUT_OF_RANGE	NORMAL HIGH_LIMIT LOW_LIMIT	Time_Delay Low_Limit High_Limit Deadband
BUFFER_READY	NORMAL	Notification_Threshold
CHANGE_OF_LIFE_SAFETY	NORMAL OFFNORMAL LIFE_SAFETY_ALARM	Time_Delay List_Of_Alarm_Values List_Of_Life_Safety_Alarm_Values Mode_Property_Reference
EXTENDED	Any BACnetEventState	Vendor_Id Extended_Event_Type Parameters
UNSIGNED_RANGE	NORMAL HIGH_LIMIT LOW_LIMIT	Time_Delay Low_Limit High_Limit

#### 12.12.6 Notify\_Type

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the monitoring algorithm specified by the Event\_Type property should be Events or Alarms.

#### 12.12.7 Event\_Parameters

The Event\_Parameters property, of type BACnetEventParameter, determines the algorithm used to monitor the referenced object and provides the parameter values needed for this algorithm. The meaning of each value in the Event\_Parameters, depends on the algorithm as indicated by the Event\_Type column in Table 12-15. Each of the possible parameters is described below.

Bitmask

This parameter, of type BIT STRING, applies to the CHANGE\_OF\_BITSTRING event algorithm and the CHANGE\_OF\_VALUE event algorithm in the special case where the referenced property is a BIT STRING datatype. It represents a bitmask that is used to indicate which bits in the referenced property are to be monitored by

the algorithm. A value of one in a bit position indicates that the bit in this position in the referenced property is to be monitored by the algorithm. A value of zero in a bit position indicates that the bit in this position in the referenced property is not significant for the purpose of detecting this CHANGE\_OF\_BITSTRING or CHANGE\_OF\_VALUE.

**List\_Of\_Bitstring\_Values**

This parameter is a list of bitstrings that apply to the CHANGE\_OF\_BITSTRING event algorithm. This list of bitstrings defines the set of states for which the referenced property is OFFNORMAL. Only the bits indicated by the Bitmask are significant. If the value of the referenced property changes to one of the values in the List\_Of\_Bitstring\_Values, then the Event\_State property of the Event Enrollment object makes a transition TO-OFFNORMAL and appropriate notifications are sent.

**List\_Of\_Values**

This parameter is a list of BACnetPropertyStates that apply to the CHANGE\_OF\_STATE event algorithm. This event algorithm applies to referenced properties that have discrete or enumerated values. The List\_Of\_Values is a subset of the possible values that the property may have. If the value of the referenced property changes to one of the values in the List\_Of\_Values, then the Event\_State property of the Event Enrollment object makes a transition TO-OFFNORMAL and appropriate notifications are sent.

**Referenced\_Property\_Increment**

This parameter, of type REAL, applies to the CHANGE\_OF\_VALUE event algorithm. It represents the increment by which the referenced property must change in order for the event to occur.

**Time\_Delay**

This parameter, of type Unsigned, applies to all event types and represents the time, in seconds, that the conditions monitored by the event algorithm must persist before an event notification is issued.

**Feedback\_Property\_Reference**

This parameter, of type BACnetDeviceObjectPropertyReference, applies to the COMMAND\_FAILURE algorithm. It identifies the object and property that provides the feedback to ensure that the commanded property has changed value. This property may reference only object properties that have enumerated values or are of type BOOLEAN.

**Setpoint\_Reference**

This parameter, of type BACnetDeviceObjectPropertyReference, applies to the FLOATING\_LIMIT event algorithm. It indicates the setpoint reference for the reference property interval.

**Deadband,  
 High\_Diff\_Limit,  
 Low\_Diff\_Limit,  
 High\_Limit (REAL),  
 Low\_Limit (REAL)**  
**Notification\_Threshold**

These parameters, of type REAL, apply to the FLOATING\_LIMIT and OUT\_OF\_RANGE event algorithms. Their use is described in the algorithms for these types in Clause 13.

**Records\_Since\_Notification**

This parameter, of type Unsigned, applies to the BUFFER\_READY algorithm. It specifies the value of Records\_Since\_Notification at which notification occurs.

**List\_Of\_Life\_Safety\_Alarm\_Values**

This parameter is a list of BACnetLifeSafetyState that applies to the CHANGE\_OF\_LIFE\_SAFETY algorithm. If the value of the referenced property changes to one of the values in the List\_Of\_Life\_Safety\_Alarm\_Values, then the Event\_State property of the Event Enrollment object makes a transition TO-OFFNORMAL and appropriate notifications are sent. The resulting event state is LIFE\_SAFETY\_ALARM

**List\_Of\_Alarm\_Values**

This parameter is a list of BACnetLifeSafetyState that applies to the

CHANGE\_OF\_LIFE\_SAFETY algorithm. If the value of the referenced property changes to one of the values in the List\_Of\_Alarm\_Values, then the Event\_State property of the Event Enrollment object makes a transition TO-OFFNORMAL and appropriate notifications are sent. The resulting event state is OFFNORMAL.

Mode_Property_Reference	This parameter, of type BACnetDeviceObjectPropertyReference, applies to the CHANGE_OF_LIFE_SAFETY algorithm. It identifies the object and property that provides the operating mode of the referenced object providing life safety functionality(normally the Mode property). This parameter may reference only object properties that are of type BACnetLifeSafetyMode.
Vendor_Id	This parameter, of type Unsigned16, is a vendor identification code, assigned by ASHRAE, which is used to distinguish proprietary extensions to the protocol. See clause 23.
Extended_Event_Type	This parameter, of type Unsigned, is a value selected by the organization indicated by Vendor_Id, which specifies the interpretation of the Parameters parameter.
Parameters	This parameter consists of a set of data values whose interpretation is specified by the combination of Vendor_Id and Extended_Event_Type. The set of data values constitutes the set of input parameters for the proprietary algorithm.
High_Limit (Unsigned), Low_Limit (Unsigned)	These parameters, of type Unsigned, apply to the UNSIGNED_RANGE event algorithm. Their use is described in the algorithm for these types in Clause 13.

#### **12.12.8 Object\_Property\_Reference**

This property, of type BACnetDeviceObjectPropertyReference, designates the particular object and property referenced by this Event Enrollment object. The algorithm specified by the Event\_Type property is applied to the referenced property in order to determine the Event\_State of the event.

If this property is writable, it may be restricted to only support references to objects inside of the device containing the Event Enrollment object. If the property is restricted to referencing objects within the containing device, an attempt to write a reference to an object outside the containing device into this property shall cause a Result(-) to be returned with an error class of PROPERTY and an error code of OPTIONAL\_FUNCTIONALITY\_NOT\_SUPPORTED.

If this property is set to reference an object outside the device containing the Event Enrollment object, the method used for acquisition of the referenced property value for the purpose of monitoring is a local matter. The only restriction on the method of data acquisition is that the monitoring device be capable of using ReadProperty for this purpose so as to be interoperable with all BACnet devices.

#### **12.12.9 Event\_State**

This property, of type BACnetEventState, contains the current state of the event. The permitted values for Event\_State are specific to the Event\_Type. See Table 12-15. The value of the Event\_State property is independent of the Event\_Enable flags. See 12.12.10.

#### **12.12.10 Event\_Enable**

This property, of type BACnetEventTransitionBits, conveys three flags that determine whether notifications are enabled for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL transitions. When a flag is set, this means that the corresponding transition would cause notification to be sent to all enrolled devices. When a flag is cleared, this means that the corresponding transition would not be reported. The object's Event\_State property shall be continuously updated regardless of the value of the Event\_Enable property.

#### **12.12.11 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three separate flags that each indicate whether the most recent TO-OFFNORMAL, TO-FAULT, or TO-NORMAL event transitions have been acknowledged, if acknowledgment is required for that transition.

#### **12.12.12 Notification\_Class**

This property, of type Unsigned, implicitly references a Notification Class object in the device containing the Event Enrollment object. The class is used to specify the handling, reporting, and acknowledgment characteristics for one or more event-initiating objects.

#### **12.12.13 Event\_Time\_Stamps**

This property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created.

#### **12.12.14 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.13 File Object Type

The File object type defines a standardized object that is used to describe properties of data files that may be accessed using File Services (see Clause 14). The file object type and its properties are summarized in Table 12-16 and described in detail in this subclause.

**Table 12-16.** Properties of the File Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
File_Type	CharacterString	R
File_Size	Unsigned	R <sup>1</sup>
Modification_Date	BACnetDateTime	R
Archive	BOOLEAN	W
Read_Only	BOOLEAN	R
File_Access_Method	BACnet FileAccessMethod	R
Record_Count	Unsigned	O <sup>2</sup>
Profile_Name	CharacterString	O

<sup>1</sup> If the file size can be changed by writing to the file, and File\_Access\_Method is STREAM\_ACCESS, then this property shall be writable.

<sup>2</sup> This property shall be present only if File\_Access\_Method is RECORD\_ACCESS. If the number of records can be changed by writing to the file, then this property shall be writable.

### 12.13.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.13.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.13.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be FILE.

### 12.13.4 Description

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### 12.13.5 File\_Type

This property, of type CharacterString, identifies the intended use of this file.

### 12.13.6 File\_Size

This property, of type Unsigned, indicates the size of the file data in octets. If the size of the file can be changed by writing to the file, and File\_Access\_Method is STREAM\_ACCESS, then this property shall be writable.

Writing to the File\_Size property with a value less than the current size of the file shall truncate the file at the specified position. Writing a File\_Size of 0 shall delete all of the file data but not the File object itself. Writing to the File\_Size property with a value greater than the current size of the file shall expand the size of the file but the value of the new octets of the file shall be a local matter.

Devices may restrict the allowed values for writes to the File\_Size. Specifically, devices may allow deletion of the file contents by writing a value of zero, but not necessarily allow arbitrary truncation or expansion.

### **12.13.7 Modification\_Date**

This property, of type BACnetDateTime, indicates the last time this object was modified. A File object shall be considered modified when it is created or written to.

### **12.13.8 Archive**

This property, of type BOOLEAN, indicates whether the File object has been saved for historical or backup purposes. This property shall be logical TRUE only if no changes have been made to the file data by internal processes or through File Access Services since the last time the object was archived.

### **12.13.9 Read\_Only**

This property, of type BOOLEAN, indicates whether (FALSE) or not (TRUE) the file data may be changed through the use of a BACnet AtomicWriteFile service.

### **12.13.10 File\_Access\_Method**

This property, of type BACnet FileAccessMethod, indicates the type(s) of file access supported for this object. The possible values for File\_Access\_Method are:

{RECORD\_ACCESS, STREAM\_ACCESS}

### **12.13.11 Record\_Count**

This property, of type Unsigned, indicates the size of the file data in records. The Record\_Count property shall be present only if File\_Access\_Type is RECORD\_ACCESS. If the number of records can be changed by writing to the file, then this property shall be writable.

Writing to the Record\_Count property with a value less than the current size of the file shall truncate the file at the specified position. Writing a Record\_Count of 0 shall delete all of the file data but not the File object itself. Writing to the Record\_Count property with a value greater than the current size of the file shall expand the size of the file but the value of the new octets of the file shall be a local matter.

Devices may restrict the allowed values for writes to the Record\_Count. Specifically, devices may allow deletion of the file contents by writing a value of zero, but not necessarily allow arbitrary truncation or expansion.

### **12.13.12 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.14 Group Object Type

The Group object type defines a standardized object whose properties represent a collection of other objects and one or more of their properties. A group object is used to simplify the exchange of information between BACnet Devices by providing a shorthand way to specify all members of the group at once. A group may be formed using any combination of object types. The group object and its properties are summarized in Table 12-17 and described in detail in this subclause.

**Table 12-17. Properties of the Group Object Type**

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
List_Of_Group_Members	List of ReadAccessSpecification	R
Present_Value	List of ReadAccessResult	R
Profile_Name	CharacterString	O

### 12.14.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.14.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.14.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be GROUP.

### 12.14.4 Description

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### 12.14.5 List\_of\_Group\_Members

This property is a list of one or more read access specifications, which defines the members of the group that shall be referenced when this object is specified in a protocol transaction. Each read access specification shall consist of two parts: 1) an Object\_Identifier and 2) a List Of Property References. All members of the group shall be objects that reside in the same device that maintains the Group object. See the ASN.1 production for ReadAccessSpecification in Clause 21.

Nesting of group objects is not permitted; that is, the List\_of\_Group\_Members shall not refer to the Present\_Value property of a Group object.

### 12.14.6 Present\_Value

This property is a list that contains the values of all the properties specified in the List\_of\_Group\_Members. This is a "read only" property; it cannot be used to write a set of values to the members of the group. The Present\_Value list shall be reconstructed each time the property is read by fetching the member properties. (*NOTE: This requirement is to reduce concurrency problems that could result if the Present\_Value were stored.*)

### 12.14.7 Profile\_Name

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

**12. MODELING CONTROL DEVICES AS A COLLECTION OF OBJECTS**  
**Group Object Type**

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.15 Life Safety Point Object Type

The Life Safety Point object type defines a standardized object whose properties represent the externally visible characteristics associated with initiating and indicating devices in fire, life safety and security applications. The condition of a Life Safety Point object is represented by a *mode* and a *state*.

*Mode* changes determine the object's inner logic and, consequently, influence the evaluation of the state. Typically, the operating *mode* would be under operator control.

The *state* of the object represents the condition of the controller according to the logic internal to the device. The implementation of the logic applied to such controllers to determine the various possible states is a local matter.

Typical applications of the Life Safety Point object include automatic fire detectors, pull stations, sirens, supervised printers, etc. Similar objects can be identified in security control panels.

The Life Safety Point object type and its properties are summarized in Table 12-18 and described in detail in this subclause.

*NOTE: Do not confuse the Present\_Value state with the Event\_State property, which reflects the offnormal state of the Life Safety Point object.*

**Table 12-18.** Properties of the Life Safety Point Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	BACnetLifeSafetyState	R
Tracking_Value	BACnetLifeSafetyState	R <sup>1</sup>
Description	CharacterString	O
Device_Type	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	R <sup>1</sup>
Out_Of_Service	BOOLEAN	R
Mode	BACnetLifeSafetyMode	W
Accepted_Modes	List of BACnetLifeSafetyMode	R
Time_Delay	Unsigned	O <sup>2</sup>
Notification_Class	Unsigned	O <sup>2</sup>
Life_Safety_Alarm_Values	List of BACnetLifeSafetyState	O <sup>2</sup>
Alarm_Values	List of BACnetLifeSafetyState	O <sup>2</sup>
Fault_Values	List of BACnetLifeSafetyState	O <sup>2</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>2</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>2</sup>
Notify_Type	BACnetNotifyType	O <sup>2</sup>
Event_Time_Stamps	BACnetARRAY [3] of BACnetTimeStamp	O <sup>2</sup>
Silenced	BACnetSilencedState	R
Operation_Expected	BACnetLifeSafetyOperation	R
Maintenance_Required	BACnetMaintenance	O
Setting	Unsigned8	O
Direct_Reading	REAL	O <sup>3</sup>
Units	BACnetEngineeringUnits	O <sup>3</sup>
Member_Of	List of BACnetDeviceObjectReference	O
Profile_Name	CharacterString	O

<sup>1</sup> These properties are required to be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> These properties are required if the object supports intrinsic alarming.

<sup>3</sup> If either of these properties is present, then both must be present.

### 12.15.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.15.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.15.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be LIFE\_SAFETY\_POINT.

### 12.15.4 Present\_Value

This property, of type BACnetLifeSafetyState, reflects the state of the Life Safety Point object. The means of deriving the Present\_Value shall be a local matter. Present\_Value may latch non-NORMAL state values until reset.

### 12.15.5 Tracking\_Value

This property, of type BACnetLifeSafetyState, reflects the non-latched state of the Life Safety Point object. The means of deriving the state shall be a local matter. Unlike Present\_Value, which may latch non-NORMAL state values until reset, Tracking\_Value shall continuously track changes in the state. The Tracking\_Value property shall be writable when Out\_Of\_Service is TRUE.

### 12.15.6 Description

This optional property, of type CharacterString, is a string of printable characters whose content is not restricted.

### 12.15.7 Device\_Type

This optional property, of type CharacterString, is a text description of the physical device that the Life Safety Point object represents.

### 12.15.8 Status\_Flags

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of the Life Safety Point object. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN\_ALARM              Logical FALSE (0) if the Event\_State property has a value of NORMAL, otherwise logical TRUE (1).

FAULT                Logical TRUE (1) if the Reliability property does not have a value of NO\_FAULT\_DETECTED, otherwise logical FALSE (0).

OVERRIDDEN           Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the physical input(s) are no longer tracking changes to the Present\_Value property and the Reliability property is no longer a reflection of the physical input(s). Otherwise, the value is logical FALSE (0).

OUT\_OF\_SERVICE      Logical TRUE (1) if the Out\_Of\_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.15.9 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. The Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL.

### **12.15.10 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value or the operation of the physical input(s) in question are "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, OPEN\_LOOP, SHORTED\_LOOP, MULTI\_STATEFAULT,  
COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

#### **12.15.10.1 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated under these conditions:

- (a) the Reliability property becomes not equal to NO\_FAULT\_DETECTED, and
- (b) the TO-FAULT flag is enabled in the Event\_Enable property.

### **12.15.11 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the input(s) or process the object represents is not in service. This means that changes to the Tracking\_Value property are decoupled from the input(s) or process when the value of Out\_Of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled when Out\_Of\_Service is TRUE. While the Out\_Of\_Service property is TRUE, the Tracking\_Value and Reliability properties may be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Tracking\_Value or Reliability properties shall respond to changes made to these properties while Out\_Of\_Service is TRUE, as if those changes had occurred to the input(s) or process.

### **12.15.12 Mode**

This writable property, of type BACnetLifeSafetyMode, shall convey the desired operating mode for the Life Safety Point object. The Life Safety Point object shall generate CHANGE\_OF\_LIFE\_SAFETY event notifications for any mode transition if the respective flags TO-OFFNORMAL, TO-FAULT or TO-NORMAL are set in the Event\_Enable property (see 12.15.16.1, 12.15.16.2, 12.15.17.1, 12.15.17.2, 12.15.18.1, and 12.15.18.2).

### **12.15.13 Accepted\_Modes**

This read-only property, of type List of BACnetLifeSafetyMode, shall specify all values the Mode property accepts when written to using BACnet services. Even though a mode is listed in this property, the write may be denied by the object due to the internal state of the object at that time. The value of the Accepted\_Modes property does not depend on the internal state of the object and shall not change when the internal state changes. If a write is denied, a Result(-) specifying an 'Error Class' of PROPERTY and an 'Error Code' of VALUE\_OUT\_OF\_RANGE shall be returned. Internal computation in the object may set the Mode property to a value other than one of those listed in the Accepted\_Modes property.

### **12.15.14 Time\_Delay**

This optional property, of type Unsigned, shall specify the minimum period of time in seconds that the Present\_Value must remain:

- (a) equal to any of the values in the Life\_Safety\_Alarm\_Values property before a TO-OFFNORMAL event is generated, or
- (b) equal to any one of the values in the Alarm\_Values property before a TO-OFFNORMAL event is generated, or
- (c) not equal to any of the values in the Life\_Safety\_Alarm\_Values property, Alarm\_Values property, or Fault\_Values property before a TO-NORMAL event is generated.

This property is required if intrinsic reporting is supported by this object.

### **12.15.15 Notification\_Class**

This optional property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

### **12.15.16 Life\_Safety\_Alarm\_Values**

This optional property, of type List of BACnetLifeSafetyState, shall specify any states the Present\_Value must equal before a TO-OFFNORMAL event is generated and event state LIFE\_SAFETY\_ALARM is entered. This property is required if intrinsic reporting is supported by this object.

#### **12.15.16.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property, and
- (b) the Present\_Value must equal any of the values in the Life\_Safety\_Alarm\_Values list, and
- (c) the Present\_Value must remain within the Life\_Safety\_Alarm\_Values list for a minimum period of time, specified by the Time\_Delay property.

New events shall be generated upon a change of Mode if the TO-OFFNORMAL flag is set in the Event\_Enable property.

#### **12.15.16.2 Conditions for Generating a TO-NORMAL Event**

Once equal, the Present\_Value must become not equal to any of the states in the Life\_Safety\_Alarm\_Values property, and not equal to any of the states in the Alarm\_Values property, and not equal to any of the states in the Fault\_Values property, before a TO-NORMAL event is generated under these conditions:

- (a) the TO-NORMAL flag must be enabled in the Event\_Enable property, and
- (b) the Present\_Value must remain not equal to any of the states in the Life\_Safety\_Alarm\_Values property, and
- (c) the Present\_Value must remain not equal to any of the states in the Alarm\_Values property, and
- (d) the Present\_Value must remain not equal to any of the states in the Fault\_Values property, and
- (e) the Present\_Value must remain equal to the same value for a minimum period of time, specified by the Time\_Delay property.

New events shall be generated upon a change of Mode if the TO-NORMAL flag is set in the Event\_Enable property.

### **12.15.17 Alarm\_Values**

This optional property, of type List of BACnetLifeSafetyState, shall specify any states the Present\_Value must equal before a TO-OFFNORMAL event is generated and event state OFFNORMAL is entered. This property is required if intrinsic reporting is supported by this object.

#### **12.15.17.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property, and
- (b) the Present\_Value must equal any of the values in the Alarm\_Values list, and
- (c) the Present\_Value must remain within the Alarm\_Values list for a minimum period of time specified by the Time\_Delay property.

New events shall be generated upon a change of Mode if the TO-OFFNORMAL flag is set in the Event\_Enable property.

#### **12.15.17.2 Conditions for Generating a TO-NORMAL Event**

Conditions for generating a TO-NORMAL event are defined in 12.15.16.2.

### **12.15.18 Fault\_Values**

This optional property, of type List of BACnetLifeSafetyState, shall specify any states the Present\_Value must equal before a TO-FAULT event is generated. If Present\_Value becomes equal to any of the states in the Fault\_Values list, and no physical

fault has been detected for any inputs that the Present\_Value represents, then the Reliability property shall have the value MULTI\_STATEFAULT. The Fault\_Values property is required if intrinsic reporting is supported by this object.

New events shall be generated upon a change of Mode if the TO-FAULT flag is set in the Event\_Enable property.

#### **12.15.18.1 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated under these conditions:

- (a) the TO-FAULT flag must be enabled in the Event\_Enable property, and
- (b) the Present\_Value must equal at least one of the values in the Fault\_Values list.

#### **12.15.18.2 Conditions for Generating a TO-NORMAL Event**

Conditions for generating a TO-NORMAL event are defined in 12.15.16.2.

#### **12.15.19 Event\_Enable**

This optional property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events that are based on Present\_Value and/or Mode changes. This property is required if intrinsic reporting is supported by this object.

#### **12.15.20 Acked\_Transitions**

This optional property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.15.21 Notify\_Type**

This optional property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.15.22 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet, and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.15.23 Silenced**

This property, of type BACnetSilencedState, shall indicate whether the most recently occurring transition for this object that has produced an audible or visual indication has been silenced by the receipt of a LifeSafetyOperation service request or a local process.

#### **12.15.24 Operation\_Expected**

The Operation\_Expected property, of type BACnetLifeSafetyOperation, shall specify the next operation expected by this object to handle a specific life safety situation.

#### **12.15.25 Maintenance\_Required**

This optional property, of type BACnetMaintenance, shall indicate the type of maintenance required for the life safety point. This may be periodic maintenance, or a "parameter-determined" maintenance, such as dirtiness value for an associated detector, and shall be determined locally.

#### **12.15.26 Setting**

This optional property, of type Unsigned8, shall be used to convey the desired setting of the input(s) or process used to determine the logical state of the Present\_Value. The range of the Setting property shall be from 0 (least sensitive) to 100 (most sensitive). The interpretation of the setting and the actual number of useful settings for a given Life Safety Point object shall be a local matter.

#### **12.15.27 Direct\_Reading**

This optional property, of type REAL, shall indicate an analog quantity that reflects the measured or calculated reading from an initiating device. The manner in which this reading is used to determine the logical state of the object shall be a local matter. If this property is present, then the Units property shall also be present.

#### **12.15.28 Units**

This optional property, of type BACnetEngineeringUnits, shall indicate the units of the quantity represented by the Direct\_Reading property. If this property is present, then the Direct\_Reading property shall also be present.

#### **12.15.29 Member\_Of**

This optional property, of type List of BACnetDeviceObjectReference, shall indicate those Life Safety Zone objects of which this Life Safety Point object is considered to be a zone member. Each object in the Member\_Of list shall be a Life Safety Zone object.

This property may be restricted to only support references to objects inside of the device containing the Life Safety Point object. If the property is writable and is restricted to referencing objects within the containing device, an attempt to write a reference to an object outside the containing device into this property shall cause a Result(-) to be returned with an error class of PROPERTY and an error code of OPTIONAL\_FUNCTIONALITY\_NOT\_SUPPORTED.

#### **12.15.30 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.16 Life Safety Zone Object Type

The Life Safety Zone object type defines a standardized object whose properties represent the externally visible characteristics associated with an arbitrary group of BACnet Life Safety Point and Life Safety Zone objects in fire, life safety and security applications. The condition of a Life Safety Zone object is represented by a *mode* and a *state*.

*Mode* changes determine the object's inner logic and, consequently, influence the evaluation of the state. Typically, the operating *mode* would be under operator control.

The *state* of the object represents the condition of the controller according to the logic internal to the device. The implementation of the logic applied to such controllers to determine the various possible states is a local matter.

Typical applications of the Life Safety Zone object include fire zones, panel zones, detector lines, extinguishing controllers, remote transmission controllers, etc. Similar objects can be identified in security control panels.

The Life Safety Zone object type and its properties are summarized in Table 12-19 and described in detail in this subclause.

*NOTE: Do not confuse the Present\_Value state with the Event\_State property, which reflects the offnormal state of the Life Safety Zone object.*

**Table 12-19.** Properties of the Life Safety Zone Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	BACnetLifeSafetyState	R
Tracking_Value	BACnetLifeSafetyState	R <sup>1</sup>
Description	CharacterString	O
Device_Type	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	R <sup>1</sup>
Out_Of_Service	BOOLEAN	R
Mode	BACnetLifeSafetyMode	W
Accepted_Modes	List of BACnetLifeSafetyMode	R
Time_Delay	Unsigned	O <sup>2</sup>
Notification_Class	Unsigned	O <sup>2</sup>
Life_Safety_Alarm_Values	List of BACnetLifeSafetyState	O <sup>2</sup>
Alarm_Values	List of BACnetLifeSafetyState	O <sup>2</sup>
Fault_Values	List of BACnetLifeSafetyState	O <sup>2</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>2</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>2</sup>
Notify_Type	BACnetNotifyType	O <sup>2</sup>
Event_Time_Stamps	BACnetARRAY [3] of BACnetTimeStamp	O <sup>2</sup>
Silenced	BACnetSilencedState	R
Operation_Expected	BACnetLifeSafetyOperation	R
Maintenance_Required	BOOLEAN	O
Zone_Members	List of BACnetDeviceObjectReference	R
Member_Of	List of BACnetDeviceObjectReference	O
Profile_Name	CharacterString	O

<sup>1</sup> These properties are required to be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> These properties are required if the object supports intrinsic alarming.

### **12.16.1 Object\_Identifier**

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### **12.16.2 Object\_Name**

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.16.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be LIFE\_SAFETY\_ZONE.

### **12.16.4 Present\_Value**

This property, of type BACnetLifeSafetyState, reflects the state of the Life Safety Zone object. The means of deriving the Present\_Value shall be a local matter. Present\_Value may latch non-NORMAL state values until reset.

### **12.16.5 Tracking\_Value**

This property, of type BACnetLifeSafetyState, reflects the non-latched state of the Life Safety Zone object. The means of deriving the state shall be a local matter. Unlike Present\_Value, which may latch non-NORMAL state values until reset, Tracking\_Value shall continuously track changes in the state. The Tracking\_Value property shall be writable when Out\_Of\_Service is TRUE.

### **12.16.6 Description**

This optional property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.16.7 Device\_Type**

This optional property, of type CharacterString, is a text description of the physical zone or area that the Life Safety Zone object represents. It will typically be used to describe the locale of the Life Safety Point objects that are Zone\_Members of the Life Safety Zone object.

### **12.16.8 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of the Life Safety Zone object. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the physical input(s) are no longer tracking changes to the Present_Value property and the Reliability property is no longer a reflection of the physical input(s). Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.16.9 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. The Event\_State property shall indicate the event state of the object.

### **12.16.10 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value or the operation of the physical input(s) in question are "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, OPEN\_LOOP, SHORTED\_LOOP, MULTI\_STATEFAULT,  
 COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

#### **12.16.10.1 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated under these conditions:

- (a) the Reliability property becomes not equal to NO\_FAULT\_DETECTED, and
- (b) the TO-FAULT flag is enabled in the Event\_Enable property.

### **12.16.11 Out\_Of\_Service**

The Out\_of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the input(s) or process the object represents is not in service. This means that changes to the Tracking\_Value property are decoupled from the input(s) or process when the value of Out\_of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled when Out\_of\_Service is TRUE. While the Out\_of\_Service property is TRUE, the Tracking\_Value and Reliability properties may be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Tracking\_Value or Reliability properties shall respond to changes made to these properties while Out\_of\_Service is TRUE, as if those changes had occurred to the input(s) or process.

### **12.16.12 Mode**

This writable property, of type BACnetLifeSafetyMode, shall convey the desired operating mode for the Life Safety Point object. The Life Safety Point object shall generate CHANGE\_OF\_LIFE\_SAFETY event notifications for any mode transition if the respective flags TO-OFFNORMAL, TO-FAULT or TO-NORMAL are set in the Event\_Enable property (see 12.16.16.1, 12.16.16.2, 12.16.17.1, 12.16.17.2, 12.16.18.1, and 12.16.18.2).

### **12.16.13 Accepted\_Modes**

This read-only property, of type List of BACnetLifeSafetyMode, shall specify all values the Mode property accepts when written to using BACnet services. Even though a mode is listed in this property, the write may be denied by the object due to the internal state of the object at that time. The value of the Accepted\_Modes property does not depend on the internal state of the object and shall not change when the internal state changes. If a write is denied, a Result(-) specifying an 'Error Class' of PROPERTY and an 'Error Code' of VALUE\_OUT\_OF\_RANGE shall be returned. Internal computation in the object may set the Mode property to a value other than one of those listed in the Accepted\_Modes property.

### **12.16.14 Time\_Delay**

This optional property, of type Unsigned, shall specify the minimum period of time in seconds that the Present\_Value must remain:

- (a) equal to any of the values in the Life\_Safety\_Alarm\_Values property before a TO-OFFNORMAL event is generated, or
- (b) equal to any one of the values in the Alarm\_Values property before a TO-OFFNORMAL event is generated, or
- (c) not equal to any of the values in the Life\_Safety\_Alarm\_Values property, Alarm\_Values property, or Fault\_Values property before a TO-NORMAL event is generated.

This property is required if intrinsic reporting is supported by this object.

### **12.16.15 Notification\_Class**

This optional property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value.

### **12.16.16 Life\_Safety\_Alarm\_Values**

This optional property, of type List of BACnetLifeSafetyState, shall specify any states the Present\_Value must equal before a TO-OFFNORMAL event is generated and event state LIFE\_SAFETY\_ALARM is entered. This property is required if intrinsic reporting is supported by this object.

#### **12.16.16.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property, and
- (b) the Present\_Value must equal any of the values in the Life\_Safety\_Alarm\_Values list, and
- (c) the Present\_Value must remain within the Life\_Safety\_Alarm\_Values list for a minimum period of time, specified by the Time\_Delay property.

New events shall be generated upon a change of Mode if the TO-OFFNORMAL flag is set in the Event\_Enable property.

#### **12.16.16.2 Conditions for Generating a TO-NORMAL Event**

Once equal, the Present\_Value must become not equal to any of the states in the Life\_Safety\_Alarm\_Values property, and not equal to any of the states in the Alarm\_Values property, and not equal to any of the states in the Fault\_Values property, before a TO-NORMAL event is generated under these conditions:

- (a) the TO-NORMAL flag must be enabled in the Event\_Enable property, and
- (b) the Present\_Value must remain not equal to any of the states in the Life\_Safety\_Alarm\_Values property, and
- (c) the Present\_Value must remain not equal to any of the states in the Alarm\_Values property, and
- (d) the Present\_Value must remain not equal to any of the states in the Fault\_Values property, and
- (e) the Present\_Value must remain equal to the same value for a minimum period of time, specified by the Time\_Delay property.

New events shall be generated upon a change of Mode if the TO-NORMAL flag is set in the Event\_Enable property.

### **12.16.17 Alarm\_Values**

This optional property, of type List of BACnetLifeSafetyState, shall specify any states the Present\_Value must equal before a TO-OFFNORMAL event is generated and event state OFFNORMAL is entered. This property is required if intrinsic reporting is supported by this object.

#### **12.16.17.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property, and
- (b) the Present\_Value must equal at least one of the values in the Alarm\_Values list, and
- (c) the Present\_Value must remain equal to the same value for a minimum period of time, specified by the Time\_Delay property.

New events shall be generated upon a change of Mode if the TO-OFFNORMAL flag is set in the Event\_Enable property.

#### **12.16.17.2 Conditions for Generating a TO-NORMAL Event**

Conditions for generating a TO-NORMAL event are defined in 12.16.16.2.

### **12.16.18 Fault\_Values**

This optional property, of type List of BACnetLifeSafetyState, shall specify any states the Present\_Value must equal before a TO-FAULT event is generated. If Present\_Value becomes equal to any of the states in the Fault\_Values list, and no physical

fault has been detected for any inputs that the Present\_Value represents, then the Reliability property shall have the value MULTI\_STATEFAULT. The Fault\_Values property is required if intrinsic reporting is supported by this object.

New events shall be generated upon a change of Mode if the TO-FAULT flag is set in the Event\_Enable property.

#### **12.16.18.1 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated under these conditions:

- (a) the TO-FAULT flag must be enabled in the Event\_Enable property, and
- (b) the Present\_Value must equal at least one of the values in the Fault\_Values list.

#### **12.16.18.2 Conditions for Generating a TO-NORMAL Event**

Conditions for generating a TO-NORMAL event are defined in 12.16.16.2.

#### **12.16.19 Event\_Enable**

This optional property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events that are based on Present\_Value or Mode changes.

#### **12.16.20 Acked\_Transitions**

This optional property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

#### **12.16.21 Notify\_Type**

This optional property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms.

#### **12.16.22 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet, and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.16.23 Silenced**

This property, of type BACnetSilencedState, shall indicate whether the most recently occurring transition for this object that has produced an audible or visual indication has been silenced by the receipt of a LifeSafetyOperation service request or a local process.

#### **12.16.24 Operation\_Expected**

The Operation\_Expected property, of type BACnetLifeSafetyOperation, shall specify the next operation expected by this object to handle a specific life safety situation.

#### **12.16.25 Maintenance\_Required**

This optional property, of type BOOLEAN, shall indicate that maintenance is required for one or more of the life safety points that are members of this zone.

#### **12.16.26 Zone\_Members**

This property, of type List of BACnetDeviceObjectReference, shall indicate which Life Safety Point and Life Safety Zone objects are members of the zone represented by this object.

This property may be restricted to only support references to objects inside of the device containing the Life Safety Zone object. If the property is writable and is restricted to referencing objects within the containing device, an attempt to write a reference to an object outside the containing device into this property shall cause a Result(-) to be returned with an error class of PROPERTY and an error code of OPTIONAL\_FUNCTIONALITY\_NOT\_SUPPORTED.

#### **12.16.27 Member\_Of**

This optional property, of type List of BACnetDeviceObjectReference, shall indicate those Life Safety Zone objects of which this Life Safety Zone object is considered to be a zone member. Each object in the Member\_Of list shall be a Life Safety Zone object.

This property may be restricted to only support references to objects inside of the device containing the Life Safety Zone object. If the property is writable and is restricted to referencing objects within the containing device, an attempt to write a reference to an object outside the containing device into this property shall cause a Result(-) to be returned with an error class of PROPERTY and an error code of OPTIONAL\_FUNCTIONALITY\_NOT\_SUPPORTED.

#### **12.16.28 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

### 12.17 Loop Object Type

The Loop object type defines a standardized object whose properties represent the externally visible characteristics of any form of feedback control loop. Flexibility is achieved by providing three independent gain constants with no assumed values for units. The appropriate gain units are determined by the details of the control algorithm, which is a local matter. The Loop object type and its properties are summarized in Table 12-20 and described in detail in this subclause. Figure 12-2 illustrates the relationship between the Loop object properties and the other objects referenced by the loop.

**Table 12-20.** Properties of the Loop Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	REAL	R
Description	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Update_Interval	Unsigned	O
Output_Units	BACnetEngineeringUnits	R
Manipulated_Variable_Reference	BACnetObjectPropertyReference	R
Controlled_Variable_Reference	BACnetObjectPropertyReference	R
Controlled_Variable_Value	REAL	R
Controlled_Variable_Units	BACnetEngineeringUnits	R
Setpoint_Reference	BACnetSetpointReference	R
Setpoint	REAL	R
Action	BACnetAction	R
Proportional_Constant	REAL	O <sup>1</sup>
Proportional_Constant_Units	BACnetEngineeringUnits	O <sup>1</sup>
Integral_Constant	REAL	O <sup>2</sup>
Integral_Constant_Units	BACnetEngineeringUnits	O <sup>2</sup>
Derivative_Constant	REAL	O <sup>3</sup>
Derivative_Constant_Units	BACnetEngineeringUnits	O <sup>3</sup>
Bias	REAL	O
Maximum_Output	REAL	O
Minimum_Output	REAL	O
Priority_For_Writing	Unsigned	R
COV_Increment	REAL	O <sup>4</sup>
Time_Delay	Unsigned	O <sup>5</sup>
Notification_Class	Unsigned	O <sup>5</sup>
Error_Limit	REAL	O <sup>5</sup>
Deadband	REAL	O <sup>5</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>5</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>5</sup>
Notify_Type	BACnetNotifyType	O <sup>5</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>5</sup>
Profile_Name	CharacterString	O

<sup>1</sup> If one of these optional properties is present, then both of these properties shall be present.

<sup>2</sup> If one of these optional properties is present, then both of these properties shall be present.

<sup>3</sup> If one of these optional properties is present, then both of these properties shall be present.

<sup>4</sup> This property is required if the object supports COV reporting.

<sup>5</sup> These properties are required if the object supports intrinsic reporting.

### **12.17.1 Object\_Identifier**

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### **12.17.2 Object\_Name**

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.17.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object-type class. The value of this property shall be LOOP.

### **12.17.4 Present\_Value**

This property indicates the current output value of the loop algorithm in units of the Output\_Units property.

### **12.17.5 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.17.6 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of the loop. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN\_ALARM              Logical FALSE (0) if the Event\_State property has a value of NORMAL, otherwise Logical TRUE (1).

FAULT              Logical TRUE (1) if the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, otherwise logical FALSE (0).

OVERRIDDEN              Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the Present\_Value property is not changeable through BACnet services. Otherwise, the value is logical FALSE (0).

OUT\_OF\_SERVICE              Logical TRUE (1) if the Out\_Of\_Service property has a value of TRUE, otherwise logical FALSE(0).

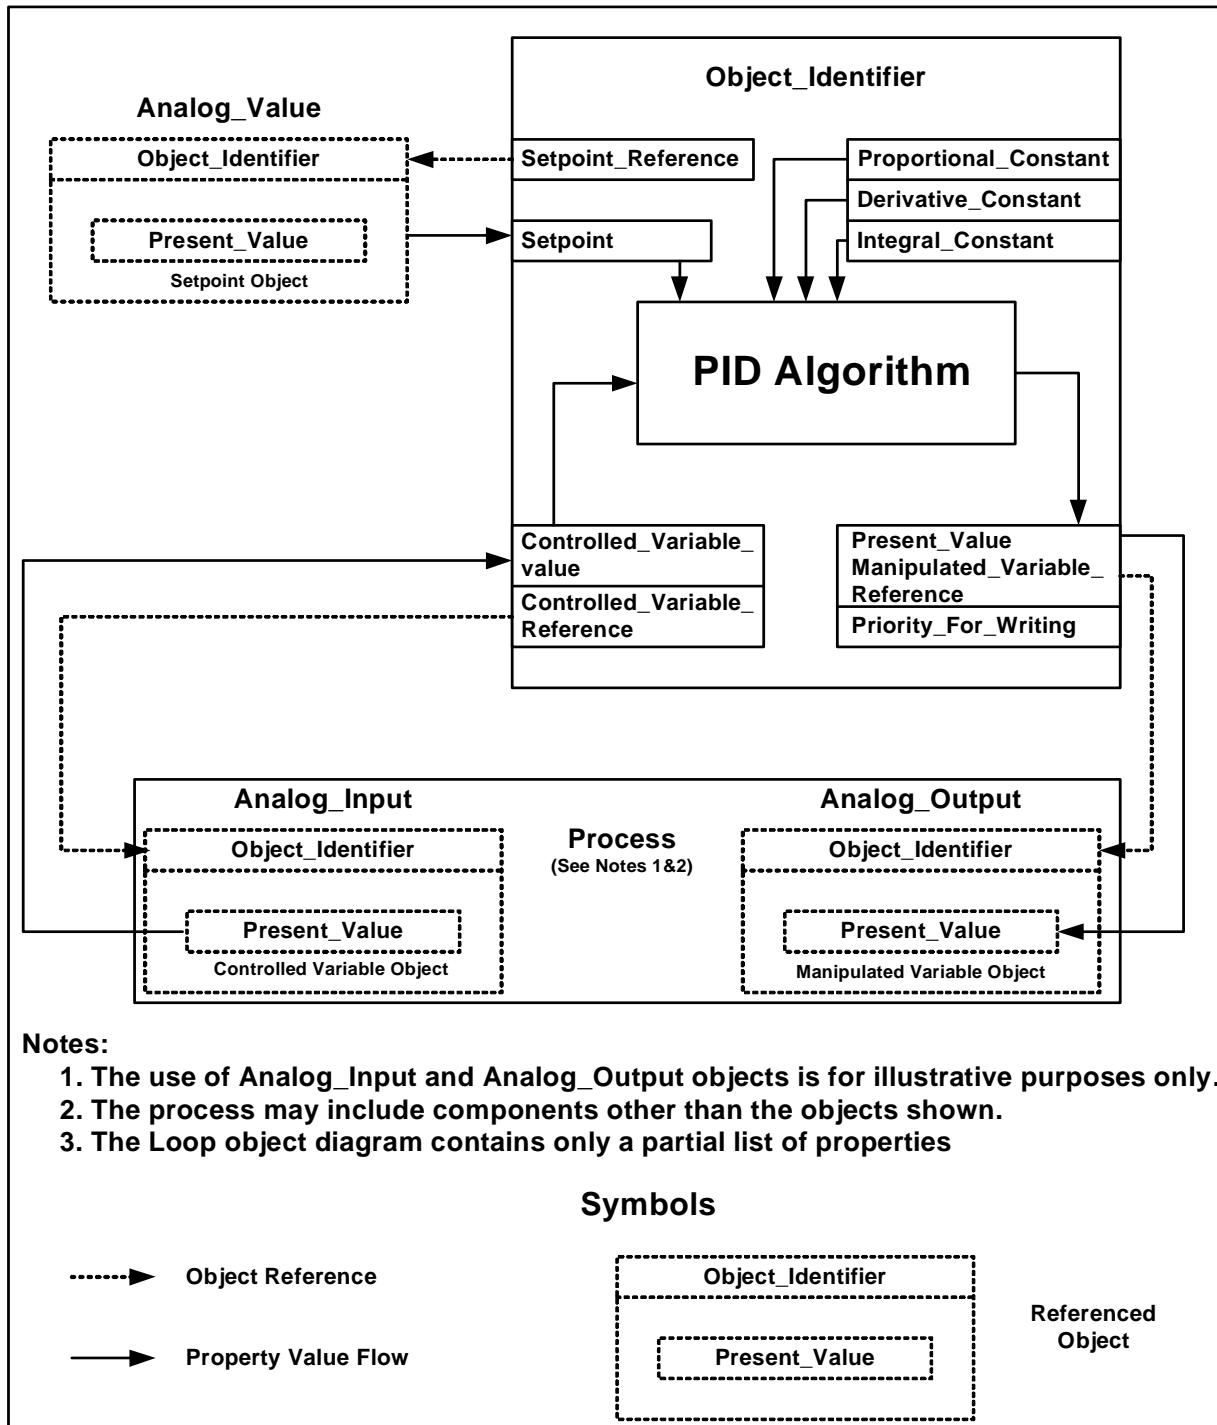


Figure 12-2. Loop object structure with its referenced objects.

#### 12.17.7 Event\_State

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

### **12.17.8 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value of the loop in question is reliable as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, OPEN\_LOOP, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

### **12.17.9 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the algorithm this object represents is or is not in service.

### **12.17.10 Update\_Interval**

This property, of type Unsigned, indicates the interval in milliseconds at which the loop algorithm updates the output (Present\_Value property).

*NOTE: No property that represents the interval at which the process variable is sampled or the algorithm is executed is part of this object. The Update\_Interval value may be the same as these other values but could also be different depending on the algorithm utilized. The sampling or execution interval is a local matter and need not be represented as part of this object.*

### **12.17.11 Output\_Units**

This property, of type BACnetEngineeringUnits, indicates the engineering units for the output (Present\_Value property) of this control loop.

### **12.17.12 Manipulated\_Variable\_Reference**

This property is of type BACnetObjectPropertyReference. The output (Present\_Value) of the control loop is written to the object and property designated by the Manipulated\_Variable\_Reference. It is normally the Present\_Value of an Analog Output object used to position a device, but it could also be another object or property, such as that used to stage multiple Binary Outputs.

### **12.17.13 Controlled\_Variable\_Reference**

This property is of type BACnetObjectPropertyReference. The Controlled\_Variable\_Reference identifies the property used to set the Controlled\_Variable\_Value property of the Loop object. It is normally the Present\_Value property of an Analog Input object used for measuring a process variable, temperature, for example, but it could also be another object, such as an Analog Value, which calculates a minimum or maximum of a group of Analog Inputs for use in discriminator control.

### **12.17.14 Controlled\_Variable\_Value**

This property, of type REAL, is the value of the property of the object referenced by the Controlled\_Variable\_Reference property. This control loop compares the Controlled\_Variable\_Value with the Setpoint to calculate the error.

### **12.17.15 Controlled\_Variable\_Units**

This property, of type BACnetEngineeringUnits, indicates the engineering units for the Controlled\_Variable\_Value property of this object.

### **12.17.16 Setpoint\_Reference**

This property, of type BACnetSetpointReference, is a list of references that has a length of zero or one. A length of zero indicates that the setpoint for this control loop is fixed and is contained in the Setpoint property. A length of one indicates that the property of another object contains the setpoint value used for this Loop object and specifies that property.

### **12.17.17 Setpoint**

This property, of type REAL, is the value of the loop setpoint or of the property of the object referenced by the Setpoint\_Reference, expressed in units of the Controlled\_Variable\_Units property.

### **12.17.18 Action**

This property, of type BACnetAction, defines whether the loop is DIRECT or REVERSE acting.

**12.17.19 Proportional\_Constant**

This property, of type REAL, is the value of the proportional gain parameter used by the loop algorithm. It may be used to represent any of the various forms of gain for the proportional control mode, such as overall gain, throttling range, or proportional band. If either the Proportional\_Constant property or the Proportional\_Constant\_Units property are present, then both of these properties shall be present.

**12.17.20 Proportional\_Constant\_Units**

This property, of type BACnetEngineeringUnits, indicates the engineering units of the Proportional\_Constant property of this object. If either the Proportional\_Constant\_Units property or the Proportional\_Constant property are present, then both of these properties shall be present.

**12.17.21 Integral\_Constant**

This property, of type REAL, is the value of the integral gain parameter used by the loop algorithm. It may be used to represent any of the various forms of gain for the integral control mode, such as reset time or rate. If either the Integral\_Constant property or the Proportional\_Constant\_Units property are present, then both of these properties shall be present.

**12.17.22 Integral\_Constant\_Units**

This property, of type BACnetEngineeringUnits, indicates the engineering units of the Integral\_Constant property of this object. If either the Integral\_Constant\_Units property or the Proportional\_Constant property are present, then both of these properties shall be present.

**12.17.23 Derivative\_Constant**

This property, of type REAL, is the value of the derivative gain parameter used by the loop algorithm. It may be used to represent any of the various forms of gain for the derivative control mode, such as derivative time or rate time. If either the Derivative\_Constant property or the Derivative\_Constant\_Units property are present, then both of these properties shall be present.

**12.17.24 Derivative\_Constant\_Units**

This property, of type BACnetEngineeringUnits, indicates the engineering units of the Derivative\_Constant property of this object. If either the Derivative\_Constant\_Units property or the Derivative\_Constant property are present, then both of these properties shall be present.

**12.17.25 Bias**

This property, of type REAL, is the bias value used by the loop algorithm expressed in units of the Output\_Units property.

**12.17.26 Maximum\_Output**

This property, of type REAL, is the maximum value of the Present\_Value property as limited by the PID loop algorithm. It is normally used to prevent the algorithm from controlling beyond the range of the controlled device and to prevent integral term "windup."

**12.17.27 Minimum\_Output**

This property, of type REAL, is the minimum value of the Present\_Value property as limited by the loop algorithm. It is normally used to prevent the algorithm from controlling beyond the range of the controlled device and to prevent integral term "windup."

**12.17.28 Priority\_For\_Writing**

Loop objects may be used to control the commandable property of an object. This property, of type Unsigned, provides a priority to be used by the command prioritization mechanism. It identifies the particular priority slot in the Priority\_Array of the Manipulated\_Variable\_Reference that is controlled by this loop. It shall have a value in the range 1-16.

**12.17.29 COV\_Increment**

This property, of type REAL, shall specify the minimum change in Present\_Value that will cause a COVNotification to be issued to subscriber COV-clients. This property is required if COV reporting is supported by this object.

### **12.17.30 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds that the difference between the Setpoint and the Controlled\_Variable\_Value (the Error) must remain outside the band defined by the Error\_Limit property before a TO-OFFNORMAL event is generated or within the same band before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

### **12.17.31 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

### **12.17.32 Error\_Limit**

This property, of type REAL, shall convey the absolute magnitude that the difference between the Setpoint and Controlled\_Variable\_Value (the Error) must exceed before a TO-OFFNORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.17.32.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Error must exceed the Error\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the TO-OFFNORMAL flag must be set in the Event\_Enable property,

where Error is defined as  $\text{AbsoluteValue}(\text{Setpoint} - \text{Controlled_Variable_Value})$ . From the perspective of the FLOATING\_LIMIT algorithm, the limits are calculated as:

$$\begin{aligned}\text{High_Diff_Limit} &= \text{Error_Limit} \\ \text{Low_Diff_Limit} &= -\text{Error_Limit}\end{aligned}$$

#### **12.17.32.2 Conditions for Generating a TO-NORMAL Event**

Once the Error\_Limit has been exceeded, a TO-NORMAL event is generated under these conditions:

- (a) the Error must fall below the Error\_Limit minus the Deadband for a minimum period of time, specified in the Time\_Delay property, and
- (b) the TO-NORMAL flag must be set in the Event\_Enable property,

where Error is defined as  $\text{AbsoluteValue}(\text{Setpoint} - \text{Controlled_Variable_Value})$ .

### **12.17.33 Deadband**

This property, of type REAL, shall specify a positive offset from the Error\_Limit property, which defines a band around the Error (the difference between the Setpoint and the Controlled\_Variable\_Value properties) within the range of  $(\text{Error_Limit} - \text{Deadband})$  and  $((-\text{Error_Limit}) + \text{Deadband})$ . The Error must remain within this range for a TO-NORMAL event to be generated under these conditions :

- (a) the Error must fall below the Error\_Limit minus Deadband,
- (b) the Error must exceed the  $-\text{Error_Limit}$  plus the Deadband,
- (c) the Error must remain within this range for a minimum period of time, specified in the Time\_Delay property, and
- (d) the TO-NORMAL flag must be set in the Event\_Enable property.

This property is required if intrinsic reporting is supported by this object.

**12.17.34 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

**12.17.35 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

**12.17.36 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

**12.17.37 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

**12.17.38 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.18 Multi-state Input Object Type

The Multi-state Input object type defines a standardized object whose Present\_Value represents the result of an algorithmic process within the BACnet Device in which the object resides. The algorithmic process itself is a local matter and is not defined by the protocol. For example, the Present\_Value or state of the Multi-state Input object may be the result of a logical combination of multiple binary inputs or the threshold of one or more analog inputs or the result of a mathematical computation. The Present\_Value property is an integer number representing the state. The State\_Text property associates a description with each state. The Multi-state Input object type and its properties are summarized in Table 12-21 and described in detail in this subclause.

*NOTE: Do not confuse the Present\_Value state with the Event\_State property, which reflects the offnormal state of the Multi-State Input.*

**Table 12-21.** Properties of the Multi-state Input Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	Unsigned	R <sup>1</sup>
Description	CharacterString	O
Device_Type	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O <sup>2</sup>
Out_Of_Service	BOOLEAN	R
Number_Of_States	Unsigned	R
State_Text	BACnetARRAY[N]of CharacterString	O
Time_Delay	Unsigned	O <sup>3</sup>
Notification_Class	Unsigned	O <sup>3</sup>
Alarm_Values	List of Unsigned	O <sup>3</sup>
Fault_Values	List of Unsigned	O <sup>3</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>3</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>3</sup>
Notify_Type	BACnetNotifyType	O <sup>3</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>3</sup>
Profile_Name	CharacterString	O

<sup>1</sup> This property is required to be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> This property shall be required if Fault\_Values is present.

<sup>3</sup> These properties are required if the object supports intrinsic reporting.

### 12.18.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.18.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.18.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be MULTISTATE\_INPUT.

### 12.18.4 Present\_Value

This property, of type Unsigned, reflects the logical state of the input. The logical state of the input shall be one of 'n' states, where 'n' is the number of states defined in the Number\_Of\_States property. The means used to determine the current state is

a local matter. The Present\_Value property shall always have a value greater than zero. The Present\_Value property shall be writable when Out\_Of\_Service is TRUE.

#### **12.18.5 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

#### **12.18.6 Device\_Type**

This property, of type CharacterString, is a text description of the multi-state input. It will typically be used to describe the type of device attached to the multi-state input.

#### **12.18.7 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of the multi-state input. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the Present_Value and Reliability properties are no longer tracking changes to the physical input. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

#### **12.18.8 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then:

- (a) if the Reliability property is not present, then the value of Event\_State shall be NORMAL, or
- (b) if the Reliability property is present and Reliability is NO\_FAULT\_DETECTED then Event\_State shall be NORMAL, or
- (c) If the Reliability property is present and Reliability is not NO\_FAULT\_DETECTED then Event\_State shall be FAULT.

#### **12.18.9 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value or the operation of the physical inputs in question are "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property is required to be present if the Fault\_Values property is present. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, NO\_SENSOR, OVER\_RANGE, UNDER\_RANGE, OPEN\_LOOP,  
 SHORTED\_LOOP, MULTI\_STATE\_FAULT, , COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

### **12.18.9.1 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated under these conditions:

- (a) the Reliability property becomes not equal to NO\_FAULT\_DETECTED, and
- (b) the TO-FAULT flag must be enabled in the Event\_Enable property.

### **12.18.10 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the inputs the object represents are not in service. This means that the Present\_Value property is decoupled from the input and will not track changes to the input when the value of Out\_Of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled from the input when Out\_Of\_Service is TRUE. While the Out\_Of\_Service property is TRUE, the Present\_Value and Reliability properties may be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value or Reliability properties shall respond to changes made to these properties while Out\_Of\_Service is TRUE, as if those changes had occurred in the input.

### **12.18.11 Number\_Of\_States**

This property, of type Unsigned, defines the number of states that the Present\_Value may have. The Number\_Of\_States property shall always have a value greater than zero. If the value of this property is changed, the size of the State\_Text array, if present, shall also be changed to the same value.

### **12.18.12 State\_Text**

This property is a BACnetARRAY of character strings representing descriptions of all possible states of the Present\_Value. The number of descriptions matches the number of states defined in the Number\_Of\_States property. The Present\_Value, interpreted as an integer, serves as an index into the array. If the size of this array is changed, the Number\_Of\_States property shall also be changed to the same value.

### **12.18.13 Time\_Delay**

This optional property, of type Unsigned, shall specify the minimum period of time in seconds that the Present\_Value must remain equal to any one of the values in the Alarm\_Values property before a TO-OFFNORMAL event is generated or remain not equal to any of the values in the Alarm\_Values property before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

### **12.18.14 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

### **12.18.15 Alarm\_Values**

This property, of type List of Unsigned, shall specify any states the Present\_Value must equal before a TO-OFFNORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.18.15.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value property must equal at least one of the values in the Alarm\_Values list, and
- (b) the Present\_Value must remain equal to the same value for a minimum period of time, specified in the Time\_Delay property, and
- (c) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property.

#### **12.18.15.2 Conditions for Generating a TO-NORMAL Event**

Once equal, the Present\_Value must become not equal to any of the states in this property and not equal to any of the states in the Fault\_Values property before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must remain not equal to any of the values in the Alarm\_Values list for a minimum period of time, specified in the Time\_Delay property, and
- (b) the Present\_Value must remain not equal to any of the states in the Fault\_Values property, and
- (c) the TO-NORMAL flag must be enabled in the Event\_Enable property.

#### **12.18.16 Fault Values**

This optional property, of type List of Unsigned, shall specify any states the Present\_Value must equal before a TO-FAULT event is generated. If Present\_Value becomes equal to any of the states in the Fault\_Values list, and no physical fault has been detected for any inputs that the Present\_Value represents, then the Reliability property shall have the value MULTI\_STATEFAULT. The Fault\_Values property is required if intrinsic reporting is supported by this object.

#### **12.18.17 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

#### **12.18.18 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.18.19 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.18.20 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.18.21 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.19 Multi-state Output Object Type

The Multi-state Output object type defines a standardized object whose properties represent the desired state of one or more physical outputs or processes within the BACnet Device in which the object resides. The actual functions associated with a specific state are a local matter and not specified by the protocol. For example, a particular state may represent the active/inactive condition of several physical outputs or perhaps the value of an analog output. The Present\_Value property is an unsigned integer number representing the state. The State\_Text property associates a description with each state.

The Multi-state Output object type and its properties are summarized in Table 12-22 and described in detail in this subclause.

**Table 12-22.** Properties of the Multi-state Output Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	Unsigned	W
Description	CharacterString	O
Device_Type	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Number_Of_States	Unsigned	R
State_Text	BACnetARRAY[N]of CharacterString	O
Priority_Array	BACnetPriorityArray	R
Relinquish_Default	Unsigned	R
Time_Delay	Unsigned	O <sup>1</sup>
Notification_Class	Unsigned	O <sup>1</sup>
Feedback_Value	Unsigned	O <sup>1</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>1</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>1</sup>
Notify_Type	BACnetNotifyType	O <sup>1</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>1</sup>
Profile_Name	CharacterString	O

These properties are required if the object supports intrinsic reporting.

### 12.19.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.19.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.19.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be MULTISTATE\_OUTPUT.

### 12.19.4 Present\_Value (Commandable)

This property, of type Unsigned, reflects the logical state of an output. The logical state of the output shall be one of 'n' states, where 'n' is the number of states defined in the Number\_Of\_States property. How the Present\_Value is used is a local matter. The Present\_Value property shall always have a value greater than zero.

### 12.19.5 Description

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.19.6 Device\_Type**

This property, of type **CharacterString**, is a text description of the physical device connected to the multi-state output. It will typically be used to describe the type of device attached to the multi-state output.

### **12.19.7 Status\_Flags**

This property, of type **BACnetStatusFlags**, represents four Boolean flags that indicate the general "health" of the multi-state output. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the physical output is no longer tracking changes to the Present_Value property and the Reliability property is no longer a reflection of the physical output. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.19.8 Event\_State**

The Event\_State property, of type **BACnetEventState**, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL.

### **12.19.9 Reliability**

The Reliability property, of type **BACnetReliability**, provides an indication of whether the Present\_Value or the operation of the physical outputs in question are "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, OPEN\_LOOP, SHORTED\_LOOP, NO\_OUTPUT, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

### **12.19.10 Out\_Of\_Service**

The Out\_Of\_Service property, of type **BOOLEAN**, is an indication whether (TRUE) or not (FALSE) the output or process the object represents is not in service. This means that changes to the Present\_Value property are decoupled from the output when the value of Out\_Of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled when Out\_Of\_Service is TRUE. While the Out\_Of\_Service property is TRUE, the Present\_Value and Reliability properties may still be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value or Reliability properties shall respond to changes made to these properties while Out\_Of\_Service is TRUE, as if those changes had occurred to the output. The Present\_Value property shall still be controlled by the BACnet command prioritization mechanism if Out\_Of\_Service is TRUE. See Clause 19.

### **12.19.11 Number\_Of\_States**

This property, of type **Unsigned**, defines the number of states the Present\_Value may have. The Number\_Of\_States property shall always have a value greater than zero. If the value of this property is changed, the size of the State\_Text array, if present, shall also be changed to the same value.

### **12.19.12 State\_Text**

This property is a BACnetARRAY of character strings representing descriptions of all possible states of the Present\_Value. The number of descriptions matches the number of states defined in the Number\_Of\_States property. The Present\_Value, interpreted as an integer, serves as an index into the array. If the size of this array is changed, the Number\_Of\_States property shall also be changed to the same value.

### **12.19.13 Priority\_Array**

This property is a read-only array that contains prioritized commands that are in effect for this object. See Clause 19 for a description of the prioritization mechanism.

### **12.19.14 Relinquish\_Default**

This property is the default value to be used for the Present\_Value property when all command priority values in the Priority\_Array have a NULL value. See Clause 19.

### **12.19.15 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds that the Present\_Value must be different from the Feedback\_Value property before a TO-OFFNORMAL event is generated or remain equal to the Feedback\_Value property before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

### **12.19.16 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

### **12.19.17 Feedback\_Value**

This property, of type Unsigned, shall indicate the status of a feedback value from which the Present\_Value must differ before a TO-OFFNORMAL event is generated. This property is required if intrinsic reporting is supported by this object. The manner by which the Feedback\_Value is determined shall be a local matter.

#### **12.19.17.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must be different from the Feedback\_Value for a minimum period of time, specified by the Time\_Delay property, and
- (b) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property.

#### **12.19.17.2 Conditions for Generating a TO-NORMAL Event**

Once different, the Present\_Value must become equal to this property before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must remain equal to the Feedback\_Value for a minimum period of time, specified by the Time\_Delay property, and
- (b) the TO-NORMAL flag must be enabled in the Event\_Enable property.

### **12.19.18 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

#### **12.19.19 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.19.20 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.19.21 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.19.22 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.20 Multi-state Value Object Type

The Multi-state Value object type defines a standardized object whose properties represent the externally visible characteristics of a multi-state value. A "multi-state value" is a control system parameter residing in the memory of the BACnet Device. The actual functions associated with a specific state are a local matter and not specified by the protocol. For example, a particular state may represent the active/inactive condition of several physical inputs and outputs or perhaps the value of an analog input or output. The Present\_Value property is an unsigned integer number representing the state. The State\_Text property associates a description with each state.

The Multi-state Value object type and its properties are summarized in Table 12-23 and described in detail in this subclause.

*NOTE: Do not confuse the Present\_Value state with the Event\_State property, which reflects the offnormal state of the Multi-state Value.*

**Table 12-23.** Properties of the Multi-state Value Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	Unsigned	R <sup>1</sup>
Description	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O <sup>2</sup>
Out_Of_Service	BOOLEAN	R
Number_Of_States	Unsigned	R
State_Text	BACnetARRAY[N] of CharacterString	O
Priority_Array	BACnetPriorityArray	O <sup>3</sup>
Relinquish_Default	Unsigned	O <sup>3</sup>
Time_Delay	Unsigned	O <sup>4</sup>
Notification_Class	Unsigned	O <sup>4</sup>
Alarm_Values	List of Unsigned	O <sup>4</sup>
Fault_Values	List of Unsigned	O <sup>4</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>4</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>4</sup>
Notify_Type	BACnetNotifyType	O <sup>4</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>4</sup>
Profile_Name	CharacterString	O

<sup>1</sup> If Present\_Value is commandable, then it is required to also be writable. This property is required to be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> This property shall be required if Fault\_Values is present.

<sup>3</sup> If Present\_Value is commandable, then both of these properties shall be present.

<sup>4</sup> These properties are required if the object supports intrinsic reporting.

### 12.20.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.20.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.20.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be MULTISTATE\_VALUE.

### **12.20.4 Present\_Value**

This property, of type Unsigned, reflects the logical state of the multi-state value. The logical state of the multi-state value shall be one of 'n' states, where 'n' is the number of states defined in the Number\_Of\_States property. How the Present\_Value is used is a local matter. The Present\_Value property shall always have a value greater than zero. Present\_Value shall be optionally commandable. If Present\_Value is commandable for a given object instance, then the Priority\_Array and Relinquish\_Default properties shall also be present for that instance. The Present\_Value property shall be writable when Out\_Of\_Service is TRUE.

### **12.20.5 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.20.6 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of the multi-state value. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the physical output is no longer tracking changes to the Present_Value property and the Reliability property is no longer a reflection of the physical output. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.20.7 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting then:

- (a) if the Reliability property is not present, then the value of Event\_State shall be NORMAL, or
- (b) if the Reliability property is present and Reliability is NO\_FAULT\_DETECTED then Event\_State shall be NORMAL, or
- (c) if the Reliability property is present and Reliability is not NO\_FAULT\_DETECTED then Event\_State shall be FAULT.

### **12.20.8 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value is "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property is required to be present if the Fault\_Values property is present. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, MULTI\_STATEFAULT, COMMUNICATION\_FAILURE,  
UNRELIABLE\_OTHER}

#### **12.20.8.1 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated under these conditions:

- (a) the Reliability property becomes not equal to NO\_FAULT\_DETECTED, and
- (b) the TO-FAULT flag must be enabled in the Event\_Enable property.

#### **12.20.9 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the Present\_Value property of the Multi-state Value object is prevented from being modified by software local to the BACnet device in which the object resides. When Out\_Of\_Service is TRUE the Present\_Value property may still be written to freely. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled when Out\_Of\_Service is TRUE. While the Out\_Of\_Service property is TRUE, the Present\_Value and Reliability properties may be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value or Reliability properties shall respond to changes made to these properties while Out\_Of\_Service is TRUE. If the Priority\_Array and Relinquish\_Default properties are present, then writing to the Present\_Value property shall be controlled by the BACnet command prioritization mechanism. See Clause 19.

#### **12.20.10 Number\_Of\_States**

This property, of type Unsigned, defines the number of states the Present\_Value may have. The Number\_Of\_States property shall always have a value greater than zero. If the value of this property is changed, the size of the State\_Text array, if present, shall also be changed to the same value.

#### **12.20.11 State\_Text**

This property is a BACnetARRAY of character strings representing descriptions of all possible states of the Present\_Value. The number of descriptions matches the number of states defined in the Number\_Of\_States property. The Present\_Value, interpreted as an integer, serves as an index into the array. If the size of this array is changed, the Number\_Of\_States property shall also be changed to the same value.

#### **12.20.12 Priority\_Array**

This property is a read-only array that contains prioritized commands that are in effect for this object. See Clause 19 for a description of the prioritization mechanism. If either the Priority\_Array property or the Relinquish\_Default property are present, then both of them shall be present. If Present\_Value is commandable, then Priority\_Array and Relinquish\_Default shall both be present.

#### **12.20.13 Relinquish\_Default**

This property is the default value to be used for the Present\_Value property when all command priority values in the Priority\_Array property have a NULL value. See Clause 19. If either the Relinquish\_Default property or the Priority\_Array property are present, then both of them shall be present. If Present\_Value is commandable, then Priority\_Array and Relinquish\_Default shall both be present.

#### **12.20.14 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds that the Present\_Value must remain:

- (a) equal to any one of the values in the Alarm\_Values property before a TO-OFFNORMAL event is generated, or
- (b) not equal to any of the values in the Alarm\_Values property before a TO-NORMAL event is generated.

This property is required if intrinsic reporting is supported by this object.

#### **12.20.15 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

### **12.20.16 Alarm\_Values**

This property, of type List of Unsigned, shall specify any states the Present\_Value must equal before a TO-OFFNORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.20.16.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must equal at least one of the values in the Alarm\_Values list, and
- (b) the Present\_Value must remain equal to the same value for a minimum period of time, specified by the Time\_Delay property, and
- (c) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property.

#### **12.20.16.2 Conditions for Generating a TO-NORMAL Event**

Once equal, the Present\_Value must become not equal to any of the states in this property and not equal to any of the states in the Fault\_Values property before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must remain not equal to any of the states in the Alarm\_Values property for a minimum period of time, specified by the Time\_Delay property, and
- (b) the Present\_Value must remain not equal to any of the states in the Fault\_Values property, and
- (c) the TO-NORMAL flag must be enabled in the Event\_Enable property.

### **12.20.17 Fault\_Values**

This property, of type List of Unsigned, shall specify any states the Present\_Value must equal before a TO-FAULT event is generated. If Present\_Value becomes equal to any of the states in the Fault\_Values list, and no physical fault has been detected for any inputs or outputs that the Present\_Value represents, then the Reliability property shall have the value MULTI\_STATE\_FAULT. The Fault\_Values property is required if intrinsic reporting is supported by this object.

### **12.20.18 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

### **12.20.19 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

### **12.20.20 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

### **12.20.21 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

**12.20.22 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.21 Notification Class Object Type

The Notification Class object type defines a standardized object that represents and contains information required for the distribution of event notifications within BACnet systems. Notification Classes are useful for event-initiating objects that have identical needs in terms of how their notifications should be handled, what the destination(s) for their notifications should be, and how they should be acknowledged.

A notification class defines how event notifications shall be prioritized in their handling according to TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events; whether these categories of events require acknowledgment (nearly always by a human operator); and what destination devices or processes should receive notifications.

The purpose of prioritization is to provide a means to ensure that alarms or event notifications with critical time considerations are not unnecessarily delayed. The possible range of priorities is 0 - 255. A lower number indicates a higher priority. The priority and the Network Priority (Clause 6.2.2) are associated as defined in Table 13-5. Priorities may be assigned to TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events individually within a notification class.

The purpose of acknowledgment is to provide assurance that a notification has been acted upon by some other agent, rather than simply having been received correctly by another device. In most cases, acknowledgments come from human operators. TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events may, or may not, require individual acknowledgment within a notification class.

It is often necessary for event notifications to be sent to multiple destinations or to different destinations based on the time of day or day of week. Notification Classes may specify a list of destinations, each of which is qualified by time, day of week, and type of handling. A destination specifies a set of days of the week (Monday through Sunday) during which the destination is considered viable by the Notification Class object. In addition, each destination has a FromTime and ToTime, which specify a window, on those days of the week, during which the destination is viable. If an event that uses a Notification Class object occurs and the day is one of the days of the week that is valid for a given destination and the time is within the window specified in the destination, then the destination shall be sent a notification. Destinations may be further qualified, as applicable, by any combination of the three event transitions TO-OFFNORMAL, TO-FAULT, or TO-NORMAL.

The destination also defines the recipient device to receive the notification and a process within the device. Processes are identified by numeric handles that are only meaningful to the destination device. The administration of these handles is a local matter. The recipient device may be specified by either its unique Device Object\_Identifier or its BACnetAddress. In the latter case, a specific node address, a multicast address, or a broadcast address may be used. The destination further specifies whether the notification shall be sent using a confirmed or unconfirmed event notification.

The Notification Class object and its properties are summarized in Table 12-24 and described in detail in this subclause.

**Table 12-24.** Properties of the Notification Class Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Notification_Class	Unsigned	R
Priority	BACnetARRAY[3] of Unsigned	R
Ack_Required	BACnetEventTransitionBits	R
Recipient_List	List of BACnetDestination	R
Profile_Name	CharacterString	O

### 12.21.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### **12.21.2 Object\_Name**

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.21.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be NOTIFICATION\_CLASS.

### **12.21.4 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.21.5 Notification\_Class**

This property, of type Unsigned, shall indicate the numeric value of this notification class and shall be equal to the instance number of the Notification Class object. Event-initiating objects shall use this number to refer to this Notification Class object indirectly.

### **12.21.6 Priority**

This property, of type BACnetARRAY[3] of Unsigned, shall convey the priority to be used for event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Priorities shall range from 0 - 255 inclusive. A lower number indicates a higher priority. The priority and the Network Priority (see 6.2.2) are associated as defined in Table 13-5.

### **12.21.7 Ack\_Required**

This property, of type BACnetEventTransitionBits, shall convey three separate flags that represent whether acknowledgment shall be required in notifications generated for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL event transitions, respectively.

### **12.21.8 Recipient\_List**

This property, of type List of BACnetDestination, shall convey a list of one or more recipient destinations to which notifications shall be sent when event-initiating objects using this class detect the occurrence of an event. The destinations themselves define a structure of parameters that is summarized in Table 12-25.

**Table 12-25.** Components of a BACnetDestination

Parameter	Type	Description
Valid Days	BACnetDaysOfWeek	The set of days of the week on which this destination <u>may</u> be used between From Time and To Time
From Time, To Time	Time	The window of time (inclusive) during which the destination is viable on the days of the week Valid Days
Recipient	BACnetRecipient	The destination device(s) to receive notifications
Process Identifier	Unsigned32	The handle of a process within the recipient device that is to receive the event notification
Issue Confirmed Notifications	Boolean	(TRUE) if confirmed notifications are to be sent and (FALSE) if unconfirmed notifications are to be sent
Transitions	BACnet Event Transition Bits	A set of three flags that indicate those transitions {TO-OFFNORMAL, TO-FAULT, TO-NORMAL} for which this recipient is suitable

### **12.21.9 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.22 Program Object Type

The Program object type defines a standardized object whose properties represent the externally visible characteristics of an application program. In this context, an application program is an abstract representation of a process within a BACnet Device, which is executing a particular body of instructions that act upon a particular collection of data structures. The logic that is embodied in these instructions and the form and content of these data structures are local matters.

The Program object provides a network-visible view of selected parameters of an application program in the form of properties of the Program object. Some of these properties are specified in the standard and exhibit a consistent behavior across different BACnet Devices. The operating state of the process that executes the application program may be viewed and controlled through these standardized properties, which are required for all Program objects. In addition to these standardized properties, a Program object may also provide vendor-specific properties. These vendor-specific properties may serve as inputs to the program, outputs from the program, or both. However, these vendor-specific properties may not be present at all. If any vendor-specific properties are present, the standard does not define what they are or how they work, as this is specific to the particular application program and vendor.

The Program object type and its standardized properties are summarized in Table 12-26 and described in detail in this subclause.

**Table 12-26.** Properties of the Program Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Program_State	BACnetProgramState	R
Program_Change	BACnetProgramRequest	W
Reason_For_Halt	BACnetProgramError	O <sup>1</sup>
Description_Of_Halt	CharacterString	O <sup>1</sup>
Program_Location	CharacterString	O
Description	CharacterString	O
Instance_Of	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Reliability	BACnetReliability	O
Out_of_Service	BOOLEAN	R
Profile_Name	CharacterString	O

<sup>1</sup> If one of the optional properties Reason\_For\_Halt or Description\_Of\_Halt is present, then both of these properties shall be present.

### 12.22.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.22.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.22.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object-type class. The value of this property shall be PROGRAM.

### 12.22.4 Program\_State

This property, of type BACnetProgramState, reflects the current logical state of the process executing the application program this object represents. This property is Read-Only. The values that may be taken on by this property are:

IDLE	process is not executing
LOADING	application program being loaded
RUNNING	process is currently executing
WAITING	process is waiting for some external event
HALTED	process is halted because of some error condition
UNLOADING	process has been requested to terminate

#### **12.22.5 Program\_Change**

This property, of type BACnetProgramRequest, is used to request changes to the operating state of the process this object represents. The Program\_Change property provides one means for changing the operating state of this process. The process may change its own state as a consequence of execution as well. The values that may be taken on by this property are:

READY	ready for change request (the normal state)
LOAD	request that the application program be loaded, if not already loaded
RUN	request that the process begin executing, if not already running
HALT	request that the process halt execution
RESTART	request that the process restart at its initialization point
UNLOAD	request that the process halt execution and unload

Normally the value of the Program\_Change property will be READY, meaning that the program is ready to accept a new request to change its operating state. If the Program\_Change property is not READY, then it may not be written to and any attempt to write to the property shall return a Result(-). If it has one of the other enumerated values, then a previous request to change state has not yet been honored, so new requests cannot be accepted. When the request to change state is finally honored, then the Program\_Change property value shall become READY and the new state shall be reflected in the Program\_State property. Depending on the current Program\_State, certain requested values for Program\_Change may be invalid and would also return a Result(-) if an attempt were made to write them. Figure 12-3 shows the valid state transitions and the resulting new Program\_State.

It is important to note that program loading could be terminated either due to an error or a request to HALT that occurs during loading. In either case, it is possible to have Program\_State=HALTED and yet not have a complete or operable program in place. In this case, a request to RESTART is taken to mean LOAD instead. If a complete program is loaded but HALTED for any reason, then RESTART simply reenters program execution at its initialization entry point.

There may be BACnet Devices that support Program objects but do not require "loading" of the application programs, as these applications may be built in. In these cases, loading is taken to mean "prepare for execution," the specifics of which are a local matter.

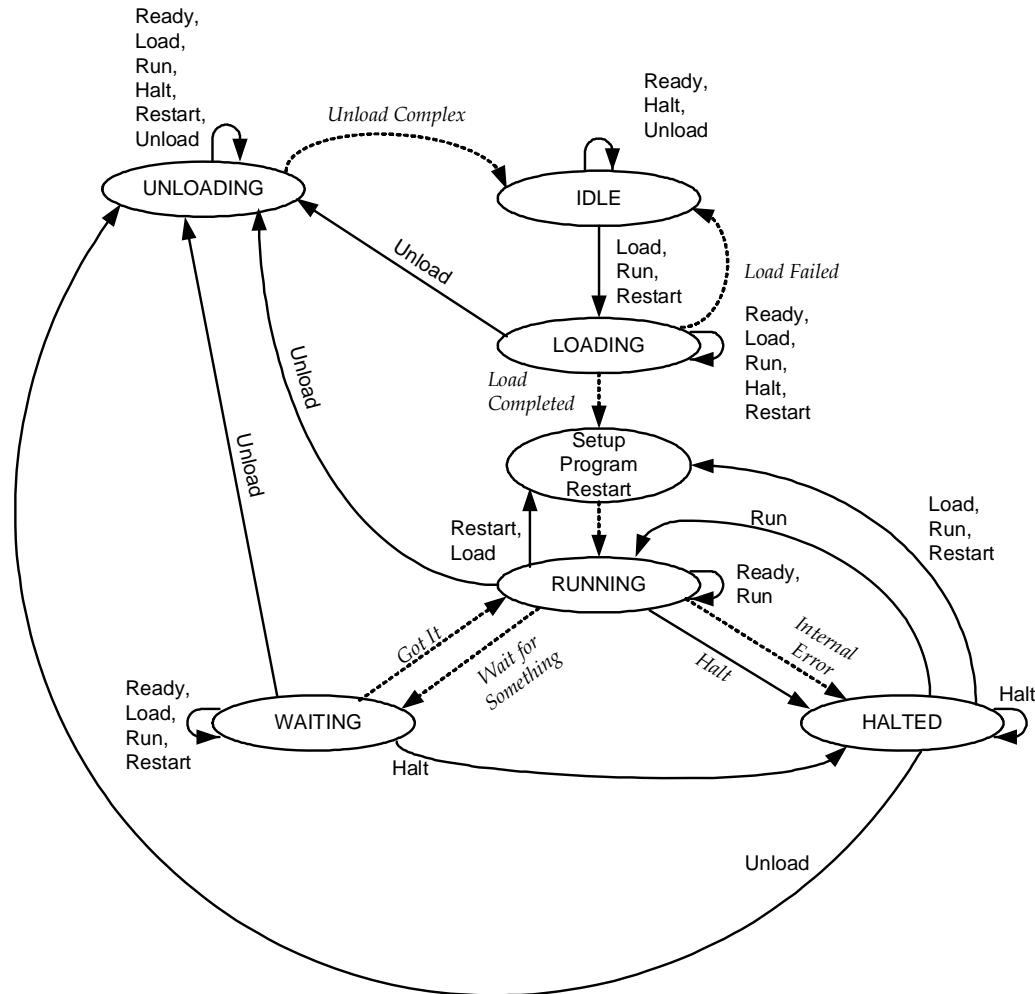


Figure 12-3. State Transitions for the program object.

#### 12.22.6 Reason\_For\_Halt

If the process executing the application program this object represents encounters any type of error that causes process execution to be halted, then this property shall reflect the reason why the process was halted. The Reason\_For\_Halt property shall be an enumerated type called BACnetProgramError. The values that may be taken on by this property are:

NORMAL	process is not halted due to any error condition
LOAD_FAILED	the application program could not complete loading
INTERNAL	process is halted by some internal mechanism
PROGRAM	process is halted by Program_Change request
OTHER	process is halted for some other reason

If one of the optional properties Reason\_For\_Halt or Description\_Of\_Halt is present, then both of these properties shall be present.

### **12.22.7 Description\_Of\_Halt**

This property is a character string that may be used to describe the reason why a program has been halted. This property provides essentially the same information as the Reason\_For\_Halt property, except in a human-readable form. The content of this string is a local matter. If one of the optional properties Reason\_For\_Halt or Description\_Of\_Halt is present, then both of these properties shall be present.

### **12.22.8 Program\_Location**

This property is a character string that may be used by the application program to indicate its location within the program code, for example, a line number or program label or section name. The content of this string is a local matter.

### **12.22.9 Description**

This property is a string of printable characters that may be used to describe the application being carried out by this process or other locally desired descriptive information.

### **12.22.10 Instance\_Of**

This property is a character string that is the local name of the application program being executed by this process. The content of this string is a local matter.

### **12.22.11 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of the program. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	The value of this flag shall be logical FALSE (0).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the program has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that neither the Program_Change, Program_State nor any other program-specific property may be changed through BACnet services. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.22.12 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the application-specific properties of the program object or the process executing the application program are "reliable" as far as the BACnet Device can determine and, if not, why. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, PROCESS\_ERROR, , COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

### **12.22.13 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the process this object represents is not in service. In this case, "in service" means that the application program is properly loaded and initialized, although the process may or may not be actually executing. If the Program\_State property has the value IDLE, then Out\_Of\_Service shall be TRUE.

**12.22.14 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.


A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

### 12.23 Pulse Converter Object Type

The Pulse Converter object type defines a standardized object that represents a process whereby ongoing measurements made of some quantity, such as electric power or water or natural gas usage, and represented by pulses or counts, might be monitored over some time interval for applications such as peak load management, where it is necessary to make periodic measurements but where a precise accounting of every input pulse or count is not required.

The Pulse Converter object might represent a physical input. As an alternative, it might acquire the data from the Present\_Value of an Accumulator object, representing an input in the same device as the Pulse Converter object. This linkage is illustrated by the dotted line in Figure 12-4. Every time the Present\_Value property of the Accumulator object is incremented, the Count property of the Pulse Converter object is also incremented.

The Present\_Value property of the Pulse Converter object can be adjusted at any time by writing to the Adjust\_Value property, which causes the Count property to be adjusted, and the Present\_Value recomputed from Count. In the illustration in Figure 12-4, the Count property of the Pulse Converter was adjusted down to 0 when the Total\_Count of the Accumulator object had the value 0070.

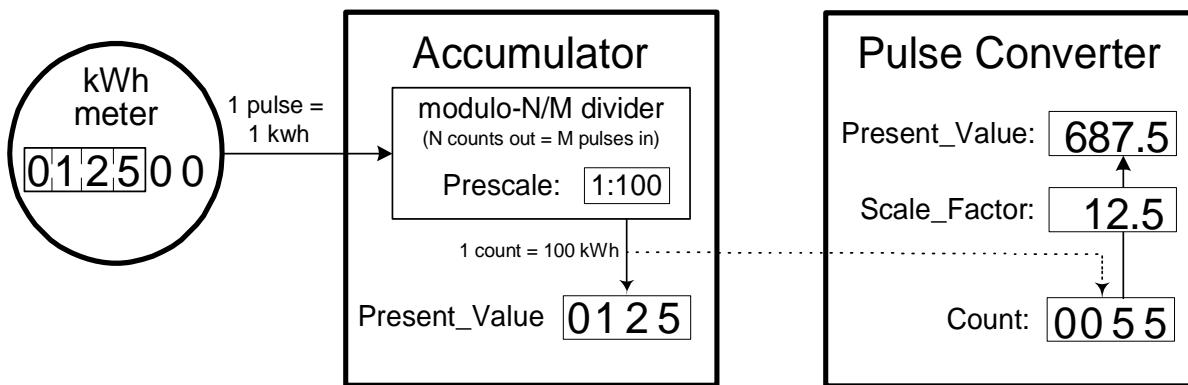

**Figure 12-4.** Relationship between the Pulse Converter and Accumulator objects.

The object and its properties are summarized in Table 12-27 and described in detail in this subclause.

**Table 12-27.** Properties of the Pulse Converter Object

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Present_Value	REAL	R <sup>1</sup>
Input_Reference	BACnetObjectPropertyReference	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Out_Of_Service	BOOLEAN	R
Units	BACnetEngineeringUnits	R
Scale_Factor	REAL	R
Adjust_Value	REAL	W
Count	Unsigned	R
Update_Time	BACnetDateTime	R
Count_Change_Time	BACnetDateTime	R <sup>2</sup>
Count_Before_Change	Unsigned	R <sup>2</sup>
COV_Increment	REAL	O <sup>3</sup>
COV_Period	Unsigned	O <sup>3</sup>
Notification_Class	Unsigned	O <sup>4</sup>
Time_Delay	Unsigned	O <sup>4</sup>
High_Limit	REAL	O <sup>4</sup>
Low_Limit	REAL	O <sup>4</sup>
Deadband	REAL	O <sup>4</sup>
Limit_Enable	BACnetLimitEnable	O <sup>4</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>4</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>4</sup>
Notify_Type	BACnetNotifyType	O <sup>4</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>4</sup>
Profile_Name	CharacterString	O

<sup>1</sup> This property is required to be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> These properties are required if Count\_Before\_Change is writable.

<sup>3</sup> These properties are required if the object supports COV reporting.

<sup>4</sup> These properties are required if the object supports intrinsic reporting.

### 12.23.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.23.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.23.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be PULSE\_CONVERTER.

### **12.23.4 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.23.5 Present\_Value**

This property, of type REAL, indicates the accumulated value of the input being measured. It is computed by multiplying the current value of the Count property by the value of the Scale\_Factor property. The value of the Present\_Value property may be adjusted by writing to the Adjust\_Value property. The Present\_Value property shall be writable when Out\_Of\_Service is TRUE.

### **12.23.6 Input\_Reference**

This optional property, of type BACnetObjectPropertyReference, indicates the object and property (typically an Accumulator object's Present\_Value property) representing the actual physical input that is to be measured and presented by the Pulse Converter object. The referenced property should have a datatype of INTEGER or Unsigned.

If this property is not present, the Pulse Converter object directly represents the physical input.

### **12.23.7 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of a Pulse Converter. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the program has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the Present_Value, Count and Reliability properties are no longer tracking changes to the input. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.23.8 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting and if the Reliability property is not present, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

### **12.23.9 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value and/or Count properties or the operation of the physical input in question is "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object type may have any of the following values:

```
{NO_FAULT_DETECTED, NO_SENSOR, OVER_RANGE, UNDER_RANGE, OPEN_LOOP,  
SHORTED_LOOP, UNRELIABLE_OTHER, , COMMUNICATION_FAILURE, CONFIGURATION_ERROR}
```

If Input\_Reference is configured to reference a property that is not of datatype Unsigned or INTEGER, or is otherwise not supported as an input source for this object, the Reliability property shall indicate CONFIGURATION\_ERROR.

### **12.23.10 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the input that the object directly represents, if any, is not in service. ("Directly represents" means that the Input\_Reference property is not present in this object.) The Present\_Value property is decoupled from the Count property and will not track changes to the input when the value of Out\_Of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled from the input when Out\_Of\_Service is TRUE. While the Out\_Of\_Service property is TRUE, the Present\_Value and Reliability properties may be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value or Reliability properties shall respond to changes made to these properties while Out\_Of\_Service is TRUE as if those changes had occurred in the input.

If the Input\_Reference property is present, the state of the Out\_Of\_Service property of the object referenced by Input\_Reference shall not be indicated by the Out\_Of\_Service property of the Pulse Converter object.

### **12.23.11 Units**

This property, of type BACnetEngineeringUnits, indicates the measurement units of the Present\_Value property. See the BACnetEngineeringUnits ASN.1 production in Clause 21 for a list of engineering units defined by this standard.

### **12.23.12 Scale\_Factor**

This property, of type REAL, provides the conversion factor for computing Present\_Value. It represents the change in Present\_Value resulting from changing the value of Count by one.

### **12.23.13 Adjust\_Value**

This property, of type REAL, is written to adjust the Present\_Value property (and thus the Count property also) by the amount written to Adjust\_Value.

If this property is writable the following series of operations shall be performed atomically when this property is written:

- (1) The value written to Adjust\_Value shall be stored in the Adjust\_Value property.
- (2) The value of Count shall be copied to the Count\_Before\_Change property.
- (3) The value of Count shall be decremented by the value calculated by performing the integer division (Adjust\_Value/Scale\_Factor) and discarding the remainder.
- (4) The current date and time shall be stored in the Count\_Change\_Time property.

A write to this property results in a change in the value of Present\_Value. Whether the new value is computed as part of the atomic series of operations or when Present\_Value is read is a local matter.

If Adjust\_Value has never been written, it shall have a value of zero.

### **12.23.14 Count**

This read-only property, of type Unsigned, indicates the count of the input pulses as acquired from the physical input or the property referenced by the Input\_Reference property.

If the property referenced by Input\_Reference property is present, has datatype Unsigned or INTEGER, and is supported as an input source for this object, the value of the Count property is derived from the referenced property. An increment by one

count in the referenced property is reflected by an increment of one count in the Count property. The means by which this is done shall be a local matter. Because the value of the Pulse Conveter object Count property may be changed by a write to the Adjust\_Value property, the value of the Count property can be different from the value of the referenced property.

#### **12.23.15 Update\_Time**

This read-only property, of type BACnetDateTime, reflects the date and time of the most recent change to the Count property as a result of input pulse accumulation and is updated atomically with the Count property. If no such change has yet occurred, this property shall have wildcard values for all date and time fields.

#### **12.23.16 Count\_Change\_Time**

This read-only property, of type BACnetDateTime, represents the date and time of the most recent occurrence of a write to the Adjust\_Value property. If no such write has yet occurred, this property shall have wildcard values for all date and time fields.

#### **12.23.17 Count\_Before\_Change**

This property, of type Unsigned, indicates the value of the Count property just prior to the most recent write to the Adjust\_Value properties. If no such write has yet occurred, this property shall have the value zero.

#### **12.23.18 COV\_Increment**

This property, of type REAL, shall specify the minimum change in Present\_Value that will cause a COV notification to be issued to subscriber COV-clients. This property is required if COV reporting is supported by this object.

#### **12.23.19 COV\_Period**

The COV\_Period property, of type Unsigned, shall indicate the amount of time in seconds between the periodic COV notifications performed by this object. This property is required if COV reporting is supported by this object.

#### **12.23.20 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

#### **12.23.21 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds that the Present\_Value must remain outside the band defined by the High\_Limit and Low\_Limit properties before a TO-OFFNORMAL event is generated or remain within the same band, including the Deadband property, before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.23.22 High\_Limit**

This property, of type REAL, shall specify a limit that the Present\_Value must exceed before an event is generated. This property is required if intrinsic reporting is supported by this object.

##### **12.23.22.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must exceed the High\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

##### **12.23.22.2 Conditions for Generating a TO-NORMAL Event**

Once exceeded, the Present\_Value must fall below the High\_Limit minus the Deadband before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must fall below the High\_Limit minus the Deadband for a minimum period of time, specified in the Time\_Delay property, and
- (b) the HighLimitEnable flag must be set in the Limit\_Enable property, and

- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

#### **12.23.23 Low\_Limit**

This property, of type REAL, shall specify a limit below which the Present\_Value must fall before an event is generated. This property is required if intrinsic reporting is supported by this object.

##### **12.23.23.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must fall below the Low\_Limit for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-OFFNORMAL flag must be set in the Event\_Enable property.

##### **12.23.23.2 Conditions for Generating a TO-NORMAL Event**

Once the Present\_Value has fallen below the Low\_Limit, the Present\_Value must exceed the Low\_Limit plus the Deadband before a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value must exceed the Low\_Limit plus the Deadband for a minimum period of time, specified in the Time\_Delay property, and
- (b) the LowLimitEnable flag must be set in the Limit\_Enable property, and
- (c) the TO-NORMAL flag must be set in the Event\_Enable property.

#### **12.23.24 Deadband**

This property, of type REAL, shall specify a range between the High\_Limit and Low\_Limit properties, which the Present\_Value must remain within for a TO-NORMAL event to be generated under these conditions:

- (a) the Present\_Value must fall below the High\_Limit minus Deadband, and
- (b) the Present\_Value must exceed the Low\_Limit plus the Deadband, and
- (c) the Present\_Value must remain within this range for a minimum period of time, specified in the Time\_Delay property, and
- (d) either the HighLimitEnable or LowLimitEnable flag must be set in the Limit\_Enable property, and
- (e) the TO-NORMAL flag must be set in the Event\_Enable property

This property is required if intrinsic reporting is supported by this object.

#### **12.23.25 Limit\_Enable**

This property, of type BACnetLimitEnable, shall convey two flags that separately enable and disable reporting of high limit and low limit offnormal events and their return to normal. This property is required if intrinsic reporting is supported by this object.

#### **12.23.26 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Pulse Converter objects, transitions to the High\_Limit or Low\_Limit Event\_States are considered to be "offnormal" events. This property is required if intrinsic reporting is supported by this object.

#### **12.23.27 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgements for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. In the context of Pulse Converter objects, transitions to High\_Limit and Low\_Limit Event\_State are considered to be "offnormal" events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgement;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgement is expected);

- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgement is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.23.28 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.23.29 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have X'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.23.30 Profile\_Name**

This property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.24 Schedule Object Type

The Schedule object type defines a standardized object used to describe a periodic schedule that may recur during a range of dates, with optional exceptions at arbitrary times on arbitrary dates. The Schedule object also serves as a binding between these scheduled times and the writing of specified "values" to specific properties of specific objects at those times. The Schedule object type and its properties are summarized in Table 12-28 and described in detail in this subclause.

Schedules are divided into days, of which there are two types: normal days within a week and exception days. Both types of days can specify scheduling events for either the full day or portions of a day, and a priority mechanism defines which scheduled event is in control at any given time.

The current state of the Schedule object is represented by the value of its Present\_Value property, which is normally calculated using the time/value pairs from the Weekly\_Schedule and Exception\_Schedule properties, with a default value for use when no schedules are in effect. Details of this calculation are provided in the description of the Present\_Value property.

Versions of the Schedule object prior to Protocol\_Revision 4 only support schedules that define an entire day, from midnight to midnight. For compatibility with these versions, this whole day behavior can be achieved by using a specific schedule format. Weekly\_Schedule and Exception\_Schedule values that begin at 00:00, and do not use any NULL values, will define schedules for the entire day. Property values in this format will produce the same results in all versions of the Schedule object.

**Table 12-28.** Properties of the Schedule Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	Any	R
Description	CharacterString	O
Effective_Period	BACnetDateRange	R
Weekly_Schedule	BACnetARRAY[7]of BACnetDailySchedule	O <sup>1</sup>
Exception_Schedule	BACnetARRAY[N]of BACnetSpecialEvent	O <sup>1</sup>
Schedule_Default	Any	R
List_Of_Object_Property_References	List of BACnetDeviceObjectPropertyReference	R
Priority_For_Writing	Unsigned(1..16)	R
Status_Flags	BACnetStatusFlags	R
Reliability	BACnetReliability	R
Out_Of_Service	BOOLEAN	R
Profile_Name	CharacterString	O

<sup>1</sup> At least one of these properties is required.

### 12.24.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.24.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.24.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object-type class. The value of this property shall be SCHEDULE.

#### **12.24.4 Present\_Value**

This property indicates the current value of the schedule, which may be any primitive datatype. As a result, most analog, binary, and enumerated values may be scheduled. This property shall be writable when Out\_Of\_Service is TRUE (see 12.24.14).

Any change in the value of this property shall be written to all members of the List\_of\_Object\_Property\_References property. An error writing to any member of the list shall not stop the Schedule object from writing to the remaining members.

The normal calculation of the value of the Present\_Value property is illustrated as follows (the actual algorithm used is a local matter but must yield the same results as this one):

1. Find the highest relative priority (as defined by Clause 12.24.8) Exception\_Schedule array element that is in effect for the current day and whose current value (see method below) is not NULL, and assign that value to the Present\_Value property.
2. If the Present\_Value was not assigned in the previous step, then evaluate the current value of the Weekly\_Schedule array element for the current day and if that value is not NULL, assign it to the Present\_Value property.
3. If the Present\_Value was not assigned in the previous steps, then assign the value of the Schedule\_Default property to the Present\_Value property.

The method for evaluating the current value of a schedule (either exception or weekly) is to find the latest element in the list of BACnetTimeValues that occurs on or before the current time, and then use that element's value as the current value for the schedule. If no such element is found, then the current value for the schedule shall be NULL.

These calculations are such that they can be performed at any time and the correct value of Present\_Value property will result. These calculations must be performed at 00:00 each day, whenever the device resets, whenever properties that can affect the results are changed, whenever the time in the device changes by an amount that may have an effect on the calculation result, and at other times, as required, to maintain the correct value of the Present\_Value property through the normal passage of time.

Note that the Present\_Value property will be assigned the value of the Schedule\_Default property at 00:00 of any given day, unless there is an entry for 00:00 in effect for that day. If a scheduled event logically begins on one day and ends on another, an entry at 00:00 shall be placed in the schedule that is in effect for the second day, and for any subsequent days of the event's duration, to ensure the correct result whenever Present\_Value is calculated.

#### **12.24.5 Description**

This property is a string of printable characters whose content is not restricted.

#### **12.24.6 Effective\_Period**

This property specifies the range of dates within which the Schedule object is active. Seasonal scheduling may be achieved by defining several SCHEDULE objects with non-overlapping Effective\_Periods to control the same property references. Upon entering its effective period, the object shall calculate its Present\_Value and write that value to all members of the List\_of\_Object\_Property\_References property. An error writing to any member of the list shall not stop the Schedule object from writing to the remaining members.

#### **12.24.7 Weekly\_Schedule**

This property is a BACnetARRAY containing exactly seven elements. Each of the elements 1-7 contains a BACnetDailySchedule. A BACnetDailySchedule consists of a list of BACnetTimeValues that are (time, value) pairs, which describe the sequence of schedule actions on one day of the week when no Exception\_Schedule is in effect. The array elements 1-7 correspond to the days Monday - Sunday, respectively. The Weekly\_Schedule is an optional property, but either the Weekly\_Schedule or a non-empty Exception\_Schedule shall be supported in every instance of a Schedule object.

If the Weekly\_Schedule property is written with a schedule item containing a datatype not supported by this instance of the Schedule object (e.g., the List\_of\_Object\_Property\_References property cannot be configured to reference a property of the unsupported datatype), the device may return a Result(-) response, specifying an 'Error Class' of PROPERTY and an 'Error Code' of DATATYPE\_NOT\_SUPPORTED.

#### 12.24.8 Exception\_Schedule

This property is a BACnetARRAY of BACnetSpecialEvents. Each BACnetSpecialEvent describes a sequence of schedule actions that takes precedence over the normal day's behavior on a specific day or days.

BACnetSpecialEvent ::= (Period, List of BACnetTimeValue, EventPriority)

Period ::= Choice of {BACnetCalendarEntry | CalendarReference}

EventPriority ::= Unsigned (1..16)

The Period may be a BACnetCalendarEntry or it may refer to a Calendar object. A BACnetCalendarEntry would be used if the Exception\_Schedule is specific to this Schedule object, while calendars might be defined for common holidays to be referenced by multiple Schedule objects. Each BACnetCalendarEntry is either an individual date (Date), range of dates (BACnetDateRange), or month/week-of-month/day-of-week specification (BACnetWeekNDay). If the current date matches any of the calendar entry criteria, the Exception Schedule would be activated and the list of BACnetTimeValues would be enabled for use.

Individual fields of the various constructs of the BACnetCalendarEntry may also have a "wildcard" value used for determining if the current date falls within the Period of the Exception Schedule. In a date range, for example, if the startDate is a wildcard, it means "any date up to and including the endDate." If the endDate is a wildcard, it means "any date from the startDate on." If the calendar entry were a BACnetWeekNDay with wildcard for month and week-of-month fields but with a specific day-of-week, it would mean the Exception Schedule would apply on that day-of-week all year long.

Each BACnetSpecialEvent contains an EventPriority that determines its importance relative to other BACnetSpecialEvents within the same Exception\_Schedule. Since SpecialEvents within the same Exception\_Schedule may have overlapping periods, it is necessary to have a mechanism to determine the relative priorities for the SpecialEvents that apply on any given day. If more than one SpecialEvent applies to a given day, the relative priority of the SpecialEvents shall be determined by their EventPriority values. If multiple overlapping SpecialEvents have the same EventPriority value, then the SpecialEvent with the lowest index number in the array shall have higher relative priority. The highest EventPriority is 1 and the lowest is 16. The EventPriority is not related to the Priority\_For\_Writing property of the Schedule object.

If a BACnet Device supports writing to the Exception\_Schedule property, all possible choices in the BACnetSpecialEvents shall be supported. If the size of this array is increased by writing to array index zero, each new array element shall contain an empty List of BACnetTimeValue.

If the Exception\_Schedule property is written with a schedule item containing a datatype not supported by this instance of the Schedule object (e.g., the List\_Of\_Object\_Property\_References property cannot be configured to reference a property of the unsupported datatype), the device may return a Result(-) response, specifying an 'Error Class' of PROPERTY and an 'Error Code' of DATATYPE\_NOT\_SUPPORTED.

#### 12.24.9 Schedule\_Default

This property holds a default value to be used for the Present\_Value property when no other scheduled value is in effect (see Clause 12.24.4). This may be any primitive datatype.

If the Schedule\_Default property is written with a value containing a datatype not supported by this instance of the Schedule object (e.g., the List\_Of\_Object\_Property\_References property cannot be configured to reference a property of the unsupported datatype), the device may return a Result(-) response, specifying an 'Error Class' of PROPERTY and an 'Error Code' of DATATYPE\_NOT\_SUPPORTED.

#### 12.24.10 List\_Of\_Object\_Property\_Reference

This property specifies the Device Identifiers, Object Identifiers and Property Identifiers of the properties to be written with specific values at specific times on specific days.

If this property is writable, it may be restricted to only support references to objects inside of the device containing the Schedule object. If the property is restricted to referencing objects within the containing device, an attempt to write a

reference to an object outside the containing device into this property shall cause a Result(-) to be returned with an error class of PROPERTY and an error code of OPTIONAL\_FUNCTIONALITY\_NOT\_SUPPORTED.

If this property is set to reference an object outside the device containing the Schedule object, the method used for writing to the referenced property value for the purpose of controlling the property is a local matter. The only restriction on the method of writing to the referenced property is that the scheduling device be capable of using WriteProperty for this purpose so as to be interoperable with all BACnet devices.

#### **12.24.11 Priority\_For\_Writing**

This property defines the priority at which the referenced properties are commanded. It corresponds to the 'Priority' parameter of the WriteProperty service. It is an unsigned integer in the range 1-16, with 1 being considered the highest priority and 16 the lowest. See Clause 19.

#### **12.24.12 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of the schedule object. Two of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	The value of this flag shall be logical FALSE (0).
FAULT	Logical TRUE (1) if the Reliability property does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the schedule object has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the Present_Value property is not changeable through BACnet services. Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

#### **12.24.13 Reliability**

The Reliability property, of type BACnetReliability, provides an indication that the properties of the schedule object are in a consistent state. All non-NULL values used in the Weekly\_Schedule, the Exception\_Schedule, and the Schedule\_Default properties shall be of the same datatype, and all members of the List\_of\_Object\_Property\_References shall be writable with that datatype. If these conditions are not met, then this property shall have the value CONFIGURATION\_ERROR. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, CONFIGURATION\_ERROR, COMMUNICATION\_FAILURE,  
UNRELIABLE\_OTHER}

If the List\_of\_Object\_Property\_References contains a member that references a property in a remote device, the detection of a configuration error may be delayed until an attempt is made to write a scheduled value.

#### **12.24.14 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the internal calculations of the schedule object are used to determine the value of the Present\_Value property. This means that the Present\_Value property is decoupled from the internal calculations and will not track changes to other properties when Out\_Of\_Service is TRUE. Other functions that depend on the state of the Present\_Value, such as writing to the members of the List\_of\_Object\_Property\_References, shall respond to changes made to that property while Out\_Of\_Service is TRUE, as if those changes had occurred by internal calculations.

**12.24.15 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.25 Trend Log Object Type

A Trend Log object monitors a property of a referenced object and, when predefined conditions are met, saves ("logs") the value of the property and a timestamp in an internal buffer for subsequent retrieval. The data may be logged periodically, upon a change of value or when "triggered" by a write to the Trigger property. The Trigger property allows the acquisition of samples to be controlled by network write operations or internal processes. Errors that prevent the acquisition of the data, as well as changes in the status or operation of the logging process itself, are also recorded. Each timestamped buffer entry is called a trend log "record."

The referenced object may reside in the same device as the Trend Log object or in an external device. The referenced property's value may be recorded upon COV subscription or periodic poll. If the value of the monitored object's Status\_Flags property is available, then it may optionally be recorded along with the value of the referenced property.

Each Trend Log object maintains an internal, optionally fixed-size buffer. This buffer fills or grows as log records are added. If the buffer becomes full, the least recent record is overwritten when a new record is added, or collection may be set to stop. Trend Log records are transferred as BACnetLogRecords using the ReadRange service. The buffer may be cleared by writing a zero to the Record\_Count property. Each record in the buffer has an implied SequenceNumber which is equal to the value of the Total\_Record\_Count property immediately after the record is added.

Several datatypes are defined for storage in the log records. The ability to store ANY datatypes is optional. Data stored in the log buffer may be optionally restricted in size to 32 bits, as in the case of bit strings, to facilitate implementation in devices with strict storage requirements.

Logging may be enabled and disabled through the Enable property and at dates and times specified by the Start\_Time and Stop\_Time properties. Trend Log enabling and disabling is recorded in the log buffer.

Event reporting (notification) may be provided to facilitate automatic fetching of log records by processes on other devices such as fileservers. Support is provided for algorithmic reporting; optionally, intrinsic reporting may be provided.

In intrinsic reporting, when the number of records specified by the Notification\_Threshold property have been collected since the previous notification (or startup), a new notification is sent to all subscribed devices.

In response to a notification, subscribers may fetch all of the new records. If a subscriber needs to fetch all of the new records, it should use the 'By Sequence Number' form of the ReadRange service request.

A missed notification may be detected by a subscriber if the 'Current Notification' parameter received in the previous BUFFER\_READY notification is different than the 'Previous Notification' parameter of the current BUFFER\_READY notification. If the ReadRange-ACK response to the ReadRange request issued under these conditions has the FIRST\_ITEM bit of the 'Result Flags' parameter set to TRUE, Trend Log records have probably been missed by this subscriber.

The acquisition of log records by remote devices has no effect upon the state of the Trend Log object itself. This allows completely independent, but properly sequential, access to its log records by all remote devices. Any remote device can independently update its records at any time.

**Table 12-29.** Properties of the Trend Log Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Enable	BOOLEAN	W
Start_Time	BACnetDateTime	O <sup>1,2</sup>
Stop_Time	BACnetDateTime	O <sup>1,2</sup>
Log_DeviceObjectProperty	BACnetDeviceObjectPropertyReference	O <sup>1</sup>
Log_Interval	Unsigned	O <sup>1,3</sup>
COV_Resubscription_Interval	Unsigned	O
Client_COV_Increment	BACnetClientCOV	O
Stop_When_Full	BOOLEAN	R
Buffer_Size	Unsigned32	R
Log_Buffer	List of BACnetLogRecord	R
Record_Count	Unsigned32	W
Total_Record_Count	Unsigned32	R
Notification_Threshold	Unsigned32	O <sup>4</sup>
Records_Since_Notification	Unsigned32	O <sup>4</sup>
Last_Notify_Record	Unsigned32	O <sup>4</sup>
Event_State	BACnetEventState	R
Notification_Class	Unsigned	O <sup>4</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>4</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>4</sup>
Notify_Type	BACnetNotifyType	O <sup>4</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>4</sup>
Profile_Name	CharacterString	O
Logging_Type	BACnetLoggingType	R
Align_Intervals	BOOLEAN	O <sup>5</sup>
Interval_Offset	Unsigned	O <sup>5</sup>
Trigger	BOOLEAN	O
Status_Flags	BACnetStatusFlags	R
Reliability	BACnetReliability	O

<sup>1</sup> These properties are required to be present if the monitored property is a BACnet property.<sup>2</sup> If present, these properties are required to be writable.<sup>3</sup> If present, this property is required to be writable when Logging\_Type has the value POLLED or the value COV.

Also, if present this property is required to be read-only if Logging\_Type has the value TRIGGERED.

<sup>4</sup> These properties are required to be present if the object supports intrinsic reporting.<sup>5</sup> These properties are required to be present if the object supports clock-aligned logging.

### 12.25.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.25.2 Object\_Name

This property, of type CharacterString, shall represent a name for the Object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.25.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be TREND\_LOG.

### **12.25.4 Description**

This optional property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.25.5 Enable**

This property, of type BOOLEAN, indicates and controls whether (TRUE) or not (FALSE) logging of events and collected data is enabled. Logging occurs if and only if Enable is TRUE, Local\_Time is on or after Start\_Time, and Local\_Time is before Stop\_Time. If Start\_Time contains any wildcards, then it shall be considered equal to 'the start of time'. If Stop\_Time contains any wildcards, then it shall be considered equal to 'the end of time'. Log\_Buffer records of type log-status are recorded without regard to the value of the Enable property.

If Enable is writable, attempts to write the value TRUE to the Enable property while Stop\_When\_Full is TRUE and Record\_Count is equal to Buffer\_Size shall cause a Result(-) response to be issued, specifying an 'Error Class' of OBJECT and an 'Error Code' of LOG\_BUFFER\_FULL.

### **12.25.6 Start\_Time**

This optional property, of type BACnetDateTime, specifies the date and time at or after which logging shall be enabled by this property. If any of the fields of the BACnetDateTime contain "wildcard" values, then the conditions for logging to be enabled by Start\_Time shall be ignored. If Start\_Time specifies a date and time after Stop\_Time, then logging shall be disabled. This property shall be writable if present.

When Start\_Time is reached, the value of the Enable property is not changed.

### **12.25.7 Stop\_Time**

This optional property, of type BACnetDateTime, specifies the date and time at or after which logging shall be disabled by this property. If any of the fields of the BACnetDateTime contain "wildcard" values, then the conditions for logging to be disabled by Stop\_Time shall be ignored. If Stop\_Time specifies a date and time earlier than Start\_Time, then logging shall be disabled. This property shall be writable if present.

When Stop\_Time is reached, the value of the Enable property is not changed.

### **12.25.8 Log\_DeviceObjectProperty**

This optional property, of type BACnetDeviceObjectPropertyReference, specifies the Device Identifier, Object Identifier and Property Identifier of the property to be trend logged.

If this property is writable, it may be restricted to reference only objects inside the device containing the Trend Log object. If the property is restricted to referencing objects within the containing device, an attempt to write a reference to an object outside the containing device into this property shall cause a Result(-) to be returned.

### **12.25.9 Log\_Interval**

This optional property, of type Unsigned, specifies the periodic interval in hundredths of seconds for which the referenced property is to be logged when Logging\_Type has the value POLLED. If the Logging\_Type property has either of the values COV or TRIGGERED, then the value of the Log\_Interval property shall be zero and ignored.

To maintain compatibility with previous versions of the standard, devices supporting COV data collection shall support switching between COV and polled modes in response to writes to Log\_Interval. If the Logging\_Type property has the value POLLED, changing the Log\_Interval property from a non-zero value to the value zero shall change the value of Logging\_Type to COV, and shall cause the Trend Log object to issue COV subscriptions for the referenced property. If the Logging\_Type property has the value COV, writing a non-zero value to the Log\_Interval property shall change the value of Logging\_Type to POLLED, and shall cause the Trend Log object to periodically poll the monitored property.

If present, this property shall be writable if Logging\_Type has either the value POLLED or the value COV. This property shall be read-only if Logging\_Type has the value TRIGGERED.

#### 12.25.10 COV\_Resubscription\_Interval

If the Trend Log is acquiring data from a remote device by COV subscription, this optional property, of type Unsigned, specifies the number of seconds between COV resubscriptions, provided that COV subscription is in effect. SubscribeCOV requests shall specify twice this lifetime for the subscription and shall specify the issuance of confirmed notifications. If COV subscriptions are in effect, the first COV subscription is issued when the Trend Log object begins operation or when Enable becomes TRUE. If present, the value of this property shall be non-zero. If this property is not present, then COV subscription shall not be attempted.

#### 12.25.11 Client\_COV\_Increment

If the Trend Log is acquiring COV data, this optional property, of type BACnetClientCOV, specifies the increment to be used in determining that a change of value has occurred. If the referenced object and property supports COV reporting according to Clause 13.1, this property may have the value NULL; in this case change of value is determined by the criteria of Clause 13.1.

#### 12.25.12 Stop\_When\_Full

This property, of type BOOLEAN, specifies whether (TRUE) or not (FALSE) logging should cease when the buffer is full. When logging ceases because the addition of one more record would cause the buffer to be full, Enable shall be set to FALSE and the event recorded.

If Stop\_When\_Full is writable, attempts to write the value TRUE to the Stop\_When\_Full property while Record\_Count is equal to Buffer\_Size shall result in the oldest Log\_Buffer record being discarded, and shall cause the Enable property to be set to FALSE and the event to be recorded.

#### 12.25.13 Buffer\_Size

This property, of type Unsigned32, shall specify the maximum number of records the buffer may hold. If writable, it may not be written when Enable is TRUE. The disposition of existing records when Buffer\_Size is written is a local matter.

#### 12.25.14 Log\_Buffer

This property is a list of up to Buffer\_Size timestamped records of datatype BACnetLogRecord, each of which conveys a recorded data value, an error related to data-collection, or status changes in the Trend Log object. Each record has data fields as follows:

Timestamp The local date and time when the record was collected.

LogDatum The data value read from the monitored object and property, an error encountered in an attempt to read a value, or a change in status or operation of the Trend Log object itself.

StatusFlags If this field is present in the log record, then it shall contain the value of the Status\_Flags property of the monitored object. If the monitored object is in a different device than the Trend Log object, then it is recommended that the Status\_Flags and the data value in the monitored object property be acquired together with a single service request, such as COVNotification or ReadPropertyMultiple.

The choices available for the LogDatum are listed below:

log-status This choice represents a change in the status or operation of the Trend Log object. Whenever one of the events represented by the flags listed below occurs, a record shall be appended to the buffer.

LOG\_DISABLED This flag is changed whenever collection of records by the Trend Log object is enabled or disabled. It shall be TRUE if Enable is FALSE, or the local time is outside the range defined by Start\_Time and Stop\_Time, or the addition of this record will cause the buffer to be full and Stop\_When\_Full is TRUE; otherwise it shall be FALSE.

BUFFER_PURGED	This flag shall be set to TRUE whenever the buffer is cleared by writing zero to the Record_Count property or by a change to the Log_DeviceObjectProperty property. After this value is recorded in the buffer, the subsequent immediate change to FALSE shall not be recorded. A record indicating the purging of the buffer shall be placed into the buffer even if the Trend Log is disabled or outside of the time range defined by the Start_Time and Stop_Time properties.
LOG_INTERRUPTED	This flag indicates that the collection of records by the Trend Log object was interrupted by a power failure, device reset, object reconfiguration or other such disruption, such that samples prior to this record might have been missed.
boolean-value real-value enum-value unsigned-value signed-value bitstring-value null-value	These choices represent data values read from the monitored object and property.
failure	This choice represents an error encountered in an attempt to read a data value from the monitored object. If the error is conveyed by an error response from a remote device the Error Class and Error Code in the response shall be recorded.
time-change	This choice represents a change in the clock setting in the device, it records the number of seconds by which the clock changed. If the number is not known, such as when the clock is initialized for the first time, the value recorded shall be zero.
any-value	This choice represents data values read from the monitored object and property.

Also associated with each record is an implied record number, the value of which is equal to Total\_Record\_Count at the point where the record has been added into the Log Buffer and Total\_Record\_Count has been adjusted accordingly. All clients shall be able to correctly handle the case where the Trend Log is reset such that its Total\_Record\_Count is returned to zero and also the case where Total\_Record\_Count has wrapped back to one.

The buffer is not network accessible except through the use of the ReadRange service, in order to avoid problems with record sequencing when segmentation is required. Attempts to read this property with the ReadProperty-Request or ReadPropertyMultiple-Request shall cause a Result(-) response to be issued, specifying an 'Error Class' of PROPERTY and an 'Error Code' of READ\_ACCESS\_DENIED.

### 12.25.15 Record\_Count

This property, of type Unsigned32, shall represent the number of records currently resident in the log buffer. A write of the value zero to this property shall cause all records in the log buffer to be deleted and Records\_Since\_Notification to be reset to zero. Upon completion, this event shall be reported in the log as the initial entry.

### 12.25.16 Total\_Record\_Count

This property, of type Unsigned32, shall represent the total number of records collected by the Trend Log object since creation. When the value of Total\_Record\_Count reaches its maximum possible value of  $2^{32} - 1$ , the next value it takes shall be one. Once this value has wrapped to one, its semantic value (the total number of records collected) has been lost but its use in generating notifications remains.

### 12.25.17 Notification\_Threshold

This property, of type Unsigned32, shall specify the value of Records\_Since\_Notification at which notification occurs. This property is required if intrinsic reporting is supported by this object.

### **12.25.18 Records\_Since\_Notification**

This property, of type Unsigned32, represents the number of records collected since the previous notification, or since the beginning of logging if no previous notification has occurred. This property is required if intrinsic reporting is supported by this object.

### **12.25.19 Last\_Notify\_Record**

This property, of type Unsigned32, represents the SequenceNumber associated with the most recently collected record whose collection caused the value of the Records\_Since\_Notification property to become equal to or greater than the value of the Notification\_Threshold property that triggered a notification. If no notification has occurred since logging began the value of this property shall be zero. This property is required if intrinsic reporting is supported by this object.

### **12.25.20 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. The allowed states are NORMAL, and FAULT.

### **12.25.21 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

### **12.25.22 Event\_Enable**

This optional property, of type BACnetEventTransitionBits, shall convey flags that separately enable and disable reporting of TO-FAULT and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

#### **12.25.22.1 Conditions for Generating a TO-NORMAL Event**

A TO-NORMAL event is generated if the TO-NORMAL flag is enabled in the Event\_Enable property, and either:

- (a) the value of the Records\_Since\_Notification property changes from being less than the value of Notification\_Threshold to being equal to or greater than the value of Notification\_Threshold, or
- (b) the value of the Notification\_Threshold property changes from being greater than the value of Records\_Since\_Notification to being equal to or less than the value of Records\_Since\_Notification, or
- (c) the Reliability property changes to the value NO\_FAULT\_DETECTED.

#### **12.25.22.2 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated if the TO-FAULT flag is enabled in the Event\_Enable property and the Reliability property changes to a value other than NO\_FAULT\_DETECTED.

### **12.25.23 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

**12.25.24 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

**12.25.25 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY [3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have X'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

**12.25.26 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

**12.25.27 Logging\_Type**

This property, of type BACnetLoggingType, specifies whether the Trend Log collects records using polling, COV or triggered acquisition.

If this property is writable, an attempt to write a value not supported by the object into this property shall cause a Result(-) response to be issued, specifying an 'Error Class' of PROPERTY and 'Error Code' of OPTIONAL\_FUNCTIONALITY\_NOT\_SUPPORTED.

If this property has the value COV, then the Trend Log shall issue COV subscriptions for the referenced property, and shall log the COV notifications if they indicate a changed value.

If this property has the value POLLED, then the Trend Log shall periodically poll the monitored property on the interval defined by the Log\_Interval, Align\_Intervals, and Interval\_Offset properties.

If the value POLLED is written to this property when the value of Log\_Interval is zero, then the Log\_Interval property shall be updated with an appropriate default polling interval. Determination of the appropriate default polling interval is a local matter.

If either of the values COV or TRIGGERED is written to this property when Log\_Interval has a non-zero value, then the Log\_Interval property shall be updated with the value zero.

**12.25.28 Align\_Intervals**

This optional property, of type BOOLEAN, specifies whether (TRUE) or not (FALSE) clock-aligned periodic logging is enabled. If clock-aligned periodic logging is enabled and the value of Log\_Interval is a factor of (that is, divides without remainder) a second, minute, hour or day, then the beginning of the period specified for logging shall be aligned to the second, minute, hour or day, respectively.

This property is required if the object supports clock-aligned logging. This property has no effect on the behavior of the Trend Log object if the Logging\_Type property has a value other than POLLED.

### **12.25.29 Interval\_Offset**

This optional property, of type Unsigned, specifies the offset in hundredths of seconds from the beginning of the period specified for logging until the actual acquisition of a log record begins. The offset used shall be the value of Interval\_Offset modulo the value of Log\_Interval; i.e., if Interval\_Offset has the value 31 and Log\_Interval is 30, the offset used shall be 1. Interval\_Offset shall have no effect if Align\_Intervals is FALSE.

This property is required if the object supports clock-aligned logging.

### **12.25.30 Trigger**

This optional property, of type BOOLEAN, shall cause the Trend Log object to acquire a log record whenever the value of this property is changed from FALSE to TRUE. It shall remain TRUE while the Trend Log object is acquiring the data items for a record. When all data items have been collected or it has been determined that all outstanding data requests will not be fulfilled, the Trend Log object shall reset the value to FALSE.

If the value of the Logging\_Type property is not TRIGGERED and an attempt is made to write the value TRUE to the Trigger property, it is left as a local matter whether to execute the logging operation or not. For devices that choose not to execute triggered logging when Logging\_Type is not equal to TRIGGERED, attempts to write the value TRUE to this property when Logging\_Type has a value other than TRIGGERED shall cause a Result(-) response to be issued, specifying an 'Error Class' of PROPERTY and an 'Error Code' of NOT\_CONFIGURED\_FOR\_TRIGGERED\_LOGGING.

Writing to the Trigger property is not restricted to network-visible write operations; internal processes may control the acquisition of samples by writing to this property.

### **12.25.31 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of a Trend Log object. The IN\_ALARM and FAULT flags are associated with the values of other properties of this object. A more detailed status may be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	The value of this flag shall be Logical FALSE (0).
OUT_OF_SERVICE	The value of this flag shall be Logical FALSE (0).

### **12.25.32 Reliability**

This optional property, of type BACnetReliability, provides an indication of whether the application-specific properties of the object or the process executing the application program are "reliable" as far as the BACnet Device can determine. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, CONFIGURATION\_ERROR, COMMUNICATION\_FAILURE,  
UNRELIABLE\_OTHER}

## 12.26 Access Door Object Type

The Access Door object type is an abstract interface to a physical door whose properties represent the externally visible characteristics of an access control door. The Access Door is comprised of a collection of physical door hardware, such as a door lock, a door contact, and a Request-To-Exit device, which together comprise a door for access control. The individual hardware components of the door may or may not be exposed through this object. The object and its properties are summarized in Table 12-30 and described in detail in this subclause.

**Table 12-30.** Properties of the Access Door Object

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Present_Value	BACnetDoorValue	W
Description	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	R
Out_Of_Service	BOOLEAN	R
Priority_Array	BACnetPriorityArray	R
Relinquish_Default	BACnetDoorValue	R
Door_Status	BACnetDoorStatus	O <sup>1,2</sup>
Lock_Status	BACnetLockStatus	O <sup>1</sup>
Secured_Status	BACnetDoorSecuredStatus	O
Door_Members	BACnetARRAY[N] of BACnetDeviceObjectReference	O
Door_Pulse_Time	Unsigned	R
Door_Extended_Pulse_Time	Unsigned	R
Door_Unlock_Delay_Time	Unsigned	O
Door_Open_Too_Long_Time	Unsigned	R
Door_Alarm_State	BACnetDoorAlarmState	O <sup>1,3</sup>
Masked_Alarm_Values	List of BACnetDoorAlarmState	O
Maintenance_Required	BACnetMaintenance	O
Time_Delay	Unsigned	O <sup>3</sup>
Notification_Class	Unsigned	O <sup>3</sup>
Alarm_Values	List of BACnetDoorAlarmState	O <sup>3</sup>
Fault_Values	List of BACnetDoorAlarmState	O <sup>3</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>3</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>3</sup>
Notify_Type	BACnetNotifyType	O <sup>3</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>3</sup>
Profile_Name	CharacterString	O

<sup>1</sup> These properties, when present, shall be writable when Out\_Of\_Service is TRUE.

<sup>2</sup> This property shall be required if the property Secured\_Status is present.

<sup>3</sup> These properties are required if the object supports intrinsic reporting.

### 12.26.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### **12.26.2 Object\_Name**

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.26.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object-type class. The value of this property shall be ACCESS\_DOOR.

### **12.26.4 Present\_Value (Commandable)**

This property, of type BACnetDoorValue, reflects the current active command of the access door object. The Present\_Value is commandable and has one of the following values:

LOCK	The door is commanded to the locked state.
UNLOCK	The door is commanded to the unlocked state.
PULSE_UNLOCK	The door will be commanded to the unlocked state for a maximum of the time specified by Door_Pulse_Time, after which the value will be automatically relinquished from the priority array at the commanded priority. It is permissible for the local controller to relinquish the value from the priority array before the time specified by Door_Pulse_Time has expired. The conditions when this may occur are considered a local matter.  If a value of PULSE_UNLOCK is written at a given priority and the Present_Value is currently being commanded, at any value, at a higher priority then the lower priority value will be relinquished immediately.
EXTENDED_PULSE_UNLOCK	The door will be commanded to the unlocked state for a maximum of the time specified by Door_Extended_Pulse_Time, after which the value will be automatically relinquished from the priority array at the commanded priority. It is permissible for the local controller to relinquish the value from the priority array before the time specified by Door_Extended_Pulse_Time has expired. The conditions when this may occur are considered a local matter.  If a value of EXTENDED_PULSE_UNLOCK is written at a given priority and the Present_Value is currently being commanded, at any value, at a higher priority then the lower priority value will be relinquished immediately.

Note that the present value represents the commanded state of the door, which does not necessarily correspond to the physical state of the door lock.

The present value of the Access Door is defined for a standard access controlled door, where the control operation is to lock or unlock. However, this does not exclude motorized devices such as sliding doors, parking gates, etc where the operation is to open or close. In these cases, locked shall be equivalent to closed and unlocked shall be equivalent to open.

### **12.26.5 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.26.6 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of the physical door. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are:

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

Where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if the object has been overridden by some mechanism local to the BACnet Device. In this context "overridden" is taken to mean that the physical door is no longer tracking changes to the Present_Value property and the Reliability property is no longer a reflection of the reliability of the physical inputs(s) and output(s). Otherwise, the value is logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### **12.26.7 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. The Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL.

### **12.26.8 Reliability**

The Reliability property, of type BACnetReliability, provides an indication of whether the Present\_Value or the operation of the physical inputs or outputs which comprise this door are "reliable" as far as the BACnet Device or operator can determine and, if not, why. The Reliability property for this object may have any of the following values:

{NO\_FAULT\_DETECTED, MULTISTATE\_FAULT, CONFIGURATION\_ERROR,  
COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

#### **12.26.8.1 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated under these conditions:

- (a) the Reliability property becomes not equal to NO\_FAULT\_DETECTED, and
- (b) the TO-FAULT flag must be enabled in the Event\_Enable property.

### **12.26.9 Out\_Of\_Service**

The Out\_Of\_Service property, of type BOOLEAN, is an indication whether (TRUE) or not (FALSE) the logical door which this object represents is not in service. This means that the Present\_Value property is decoupled from the physical door and will not track changes to the physical door when the value of Out\_Of\_Service is TRUE. In addition, the Reliability property and the corresponding state of the FAULT flag of the Status\_Flags property shall be decoupled from the physical door when Out\_Of\_Service is TRUE. While the Out\_Of\_Service property is TRUE, the Present\_Value and Reliability properties, and if present, the Door\_Status, Lock\_Status and Door\_Alarm\_State properties, may be changed to any value as a means of simulating specific fixed conditions or for testing purposes. Other functions that depend on the state of the Present\_Value or Reliability properties, and if present the Door\_Status, Lock\_Status and Door\_Alarm\_State properties, shall respond to changes made to these properties while Out\_Of\_Service is TRUE, as if those changes had occurred to the physical door.

### **12.26.10 Priority\_Array**

This property is a read-only array that contains prioritized commands that are in effect for this object. See Clause 19 for a description of the prioritization mechanism.

### **12.26.11 Relinquish\_Default**

This property is the default value to be used for the Present\_Value property when all command priority values in the Priority\_Array property have a NULL value. See Clause 19. The acceptable values for this property are either LOCK or UNLOCK and the property shall not take on either of the values PULSE\_UNLOCK or EXTENDED\_PULSE\_UNLOCK.

### **12.26.12 Door\_Status**

This optional property, of type BACnetDoorStatus, represents the open or closed state of the physical door. The values that may be taken on by this property are:

CLOSED	The door is closed.
OPENED	The door is open or partially open.
UNKNOWN	It is unknown whether the door is opened or closed.

This property, if present, is required to be writable when Out\_Of\_Service is TRUE.

### **12.26.13 Lock\_Status**

This optional property, of type BACnetLockStatus, represents the monitored (as opposed to the commanded) status of the door lock. The values that may be taken on by this property are:

LOCKED	The door lock is locked.
UNLOCKED	The door lock is unlocked.
FAULT	The lock status input associated with the door lock is unreliable.
UNKNOWN	There is no lock status input associated with the door and therefore the status of the physical lock is unknown.

This property, if present, is required to be writable when Out\_Of\_Service is TRUE.

### **12.26.14 Secured\_Status**

This optional property, of type BACnetDoorSecuredStatus, represents whether or not the physical door is in a secured state. This property shall have a value of SECURED if, and only if, all of the following conditions are met:

- (a) the IN\_ALARM flag of the Status\_Flags property is FALSE, and
- (b) the Masked\_Alarm\_Values list, if it exists, is empty , and
- (c) the Door\_Status property has a value of CLOSED, and
- (d) the Present\_Value property has a value of LOCK,
- (e) the Lock\_Status property, if it exists, has a value of LOCKED or UNKNOWN.

If one or more of the previous conditions are not met, the property shall have a value of UNSECURED. If the device can not determine any of the previous conditions, then the property shall have a value of UNKNOWN.

### **12.26.15 Door\_Members**

This optional property, of type BACnetARRAY[N] of BACnetDeviceObjectReference holds an array of references to BACnet objects which represent I/O devices, authentication devices, schedules, programs, or other objects that are associated with the physical door. It is a local matter as to how this array is used and which objects are referenced in this array. The array may be empty or not present if the vendor does not wish to expose the individual objects that make up this physical door.

### **12.26.16 Door\_Pulse\_Time**

This property, of type Unsigned, is the maximum duration of time, in tenths of seconds, for which the door will be unlocked when the Present\_Value has a value of PULSE\_UNLOCK, after which time the Present\_Value shall be automatically relinquished at the priority that established the PULSE\_UNLOCK command.

#### **12.26.17 Door\_Extended\_Pulse\_Time**

This property, of type Unsigned, is the maximum amount of time, in tenths of seconds, which the door will be unlocked when the Present\_Value has a value of EXTENDED\_PULSE\_UNLOCK, after which time the Present\_Value shall be automatically relinquished at the priority that established the EXTENDED\_PULSE\_UNLOCK command.

#### **12.26.18 Door\_Unlock\_Delay\_Time**

This optional property, of type Unsigned, is the duration of time, in tenths of seconds, which the physical door lock will delay unlocking when the Present\_Value changes to a value of PULSE\_UNLOCK or EXTENDED\_PULSE\_UNLOCK.

#### **12.26.19 Door\_Open\_Too\_Long\_Time**

This property, of type Unsigned, is the time, in tenths of seconds, to delay before setting the Door\_Alarm\_State to DOOR\_OPEN\_TOO\_LONG after it is determined that a door-open-too-long condition exists. A door-open-too-long condition occurs when the Present\_Value has a value of LOCK and one of the following conditions exist:

- (a) The Present\_Value had a previous value of PULSE\_UNLOCK and the door has been in a continual open state for the time specified by Door\_Open\_Too\_Long\_Time after the Door\_Pulse\_Time has expired.
- (b) The Present\_Value had a previous value of EXTENDED\_PULSE\_UNLOCK and the door has been in a continual open state for the time specified by Door\_Open\_Too\_Long\_Time after the Door\_Extended\_Pulse\_Time has expired.
- (c) The Present\_Value had a previous value of UNLOCK and the door has been in a continual open state for the time specified by Door\_Open\_Too\_Long\_Time.

#### **12.26.20 Door\_Alarm\_State**

This optional property, of type BACnetDoorAlarmState, is the alarm state for the physical door. The CHANGE\_OF\_STATE event algorithm will monitor this property. When no alarm or fault condition exists for this object, this property shall take on the value NORMAL. It is considered a local matter as to when this property is set to a non-normal value. It is up to the internal control logic to take Lock\_Status, Door\_Status, Present\_Value and information from other objects into account when calculating the proper alarm state. However, this property cannot take on any value which is also in the Masked\_Alarm\_Values list. If the property is currently set to a specific state and that state is written to the Masked\_Alarm\_Values list, then the Door\_Alarm\_State will immediately return to the NORMAL state.

This property is required if intrinsic reporting is supported by this object, and if present, required to be writable when Out\_Of\_Service is TRUE.

#### **12.26.21 Masked\_Alarm\_Values**

This optional property, of type List of BACnetDoorAlarmState, shall specify any alarm and/or fault states which are masked. An alarm state which is currently masked will prevent the Door\_Alarm\_State property from being equal to that state.

#### **12.26.22 Maintenance\_Required**

This optional property, of type BACnetMaintenance, shall indicate the type of maintenance required for the Access Door. This may be periodic maintenance, or a "parameter-determined" maintenance, such as maximum duty-cycle for a door lock, and shall be determined locally.

#### **12.26.23 Time\_Delay**

This optional property, of type Unsigned, shall specify the minimum period of time in seconds that the Door\_Alarm\_State must remain equal to any one of the values in the Alarm\_Values property before a TO-OFFNORMAL event is generated or remain not equal to any of the values in the Alarm\_Values property before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

#### **12.26.24 Notification\_Class**

This optional property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

#### **12.26.25 Alarm\_Values**

This optional property, of type List of BACnetDoorAlarmState, shall specify any states the Door\_Alarm\_State must equal before a TO-OFFNORMAL event is generated and event state OFFNORMAL is entered. This property is required if intrinsic reporting is supported by this object.

##### **12.26.25.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the TO-OFFNORMAL flag must be enabled in the Event\_Enable property, and
- (b) the Door\_Alarm\_State must equal any of the values in the Alarm\_Values list, and
- (c) the Door\_Alarm\_State must remain equal to the same value within the Alarm\_Values list for a minimum period of time specified by the Time\_Delay property.

##### **12.26.25.2 Conditions for Generating a TO-NORMAL Event**

Once equal, the Door\_Alarm\_State must become not equal to any of the states in the Alarm\_Values property, and not equal to any of the states in the Fault\_Values property, before a TO-NORMAL event is generated under these conditions:

- (a) the TO-NORMAL flag must be enabled in the Event\_Enable property, and
- (b) the Door\_Alarm\_State must remain not equal to any of the states in the Alarm\_Values property, and
- (c) the Door\_Alarm\_State must remain not equal to any of the states in the Fault\_Values property, and
- (d) the Door\_Alarm\_State must remain equal to the same value for a minimum period of time, specified by the Time\_Delay property.

#### **12.26.26 Fault\_Values**

This optional property, of type List of BACnetDoorAlarmState, shall specify any states the Door\_Alarm\_State must equal before a TO-FAULT event is generated. If Door\_Alarm\_State becomes equal to any of the states in the Fault\_Values list and no physical fault has been detected, then the Reliability property shall have the value MULTI\_STATE\_FAULT. This property is required if intrinsic reporting is supported by this object.

##### **12.26.27 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated under these conditions:

- (a) the TO-FAULT flag must be enabled in the Event\_Enable property, and
- (b) the Door\_Alarm\_State must equal any of the values in the Fault\_Values property.

##### **12.26.28 Conditions for Generating a TO-NORMAL Event**

Conditions for generating a TO-NORMAL event are defined in Clause 12.26.25.2.

#### **12.26.29 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

#### **12.26.30 Acked\_Transitions**

This optional property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);

- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.26.31 Notify\_Type**

This optional property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.26.32 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have X'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.26.33 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## **12.27 Event Log Object Type**

An Event Log object records event notifications with timestamps and other pertinent data in an internal buffer for subsequent retrieval. Each timestamped buffer entry is called an event log "record."

Each Event Log object maintains an internal, optionally fixed-size buffer. This buffer fills or grows as event log records are added. If the buffer becomes full, the least recent records are overwritten when new records are added, or collection may be set to stop. Event log records are transferred as BACnetEventLogRecords using the ReadRange service. The buffer may be cleared by writing a zero to the Record\_Count property. The determination of which notifications are placed into the log is a local matter. Each record in the buffer has an implied SequenceNumber that is equal to the value of the Total\_Record\_Count property immediately after the record is added.

Logging may be enabled and disabled through the Enable property and at dates and times specified by the Start\_Time and Stop\_Time properties. Event Log enabling and disabling is recorded in the event log buffer.

Event reporting (notification) may be provided to facilitate automatic fetching of event log records by processes on other devices such as fileservers. Support is provided for algorithmic reporting; optionally, intrinsic reporting may be provided.

In intrinsic reporting, when the number of records specified by the Notification\_Threshold property has been collected since the previous notification (or startup), a new notification is sent to all subscribed devices.

In response to a notification, subscribers may fetch all of the new records. If a subscriber needs to fetch all of the new records, it should use the 'By Sequence Number' form of the ReadRange service request.

A missed notification may be detected by a subscriber if the 'Current Notification' parameter received in the previous BUFFER\_READY notification is different than the 'Previous Notification' parameter of the current BUFFER\_READY notification. If the ReadRange-ACK response to the ReadRange request issued under these conditions has the FIRST\_ITEM bit of the 'Result Flags' parameter set to TRUE, event log records have probably been missed by this subscriber.

The acquisition of log records by remote devices has no effect upon the state of the Event Log object itself. This allows completely independent, but properly sequential, access to its log records by all remote devices. Any remote device can independently update its records at any time.

**Table 12-31.** Properties of the Event Log Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Enable	BOOLEAN	W
Start_Time	BACnetDateTime	O <sup>1, 2</sup>
Stop_Time	BACnetDateTime	O <sup>1, 2</sup>
Stop_When_Full	BOOLEAN	R
Buffer_Size	Unsigned32	R
Log_Buffer	List of BACnetEventLogRecord	R
Record_Count	Unsigned32	W
Total_Record_Count	Unsigned32	R
Notification_Threshold	Unsigned32	O <sup>3</sup>
Records_Since_Notification	Unsigned32	O <sup>3</sup>
Last_Notify_Record	Unsigned32	O <sup>3</sup>
Notification_Class	Unsigned	O <sup>3</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>3</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>3</sup>
Notify_Type	BACnetNotifyType	O <sup>3</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>3</sup>
Profile_Name	CharacterString	O

<sup>1</sup> If present, these properties are required to be writable.

<sup>2</sup> If one of these properties is present, then all shall be present.

<sup>3</sup> These properties are required to be present if the object supports intrinsic reporting.

### 12.27.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.27.2 Object\_Name

This property, of type CharacterString, shall represent a name for the Object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.27.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be EVENT\_LOG.

### 12.27.4 Description

This optional property, of type CharacterString, is a string of printable characters whose content is not restricted.

### 12.27.5 Status\_Flags

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of an Event Log object. The IN\_ALARM and FAULT flags are associated with the values of other properties of this object. A more detailed status may be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	The value of this flag shall be Logical FALSE (0).
OUT_OF_SERVICE	The value of this flag shall be Logical FALSE (0).

#### **12.27.6 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. The Event\_State property for this object may have either of the following values:

{NORMAL, FAULT}

#### **12.27.7 Reliability**

This optional property, of type BACnetReliability, provides an indication of whether the application-specific properties of the object or the process executing the application program are "reliable" as far as the BACnet Device can determine. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, CONFIGURATION\_ERROR, COMMUNICATION\_FAILURE,  
UNRELIABLE\_OTHER}

#### **12.27.8 Enable**

This property, of type BOOLEAN, indicates and controls whether (TRUE) or not (FALSE) logging of events is enabled. Logging occurs if and only if Enable is TRUE, Local\_Time is on or after Start\_Time, and Local\_Time is before Stop\_Time. If Start\_Time contains any wildcards, then it shall be considered equal to 'the start of time'. If Stop\_Time contains any wildcards, then it shall be considered equal to 'the end of time'. Log\_Buffer records of type log-status are recorded without regard to the value of the Enable property.

Attempts to write the value TRUE to the Enable property while Stop\_When\_Full is TRUE and Record\_Count is equal to Buffer\_Size shall cause a Result(-) response to be issued, specifying an 'Error Class' of OBJECT and an 'Error Code' of LOG\_BUFFER\_FULL.

#### **12.27.9 Start\_Time**

This optional property, of type BACnetDateTime, specifies the date and time at or after which logging shall be enabled by this property. If any of the fields of the BACnetDateTime contain "wildcard" values, then the conditions for logging to be enabled by Start\_Time shall be ignored. If Start\_Time specifies a date and time after Stop\_Time, then logging shall be disabled. If either of the optional properties Start\_Time or Stop\_Time is present, then both of these properties shall be present. This property shall be writable if present.

#### **12.27.10 Stop\_Time**

This optional property, of type BACnetDateTime, specifies the date and time at or after which logging shall be disabled by this property. If any of the fields of the BACnetDateTime contain "wildcard" values, then the conditions for logging to be disabled by Stop\_Time shall be ignored. If Stop\_Time specifies a date and time earlier than Start\_Time, then logging shall be disabled. If either of the optional properties Start\_Time or Stop\_Time is present, then both of these properties shall be present. This property shall be writable if present.

### **12.27.11 Stop\_When\_Full**

This property, of type BOOLEAN, specifies whether (TRUE) or not (FALSE) logging should cease when the buffer is full. When logging ceases because the addition of one more record would cause the buffer to be full, Enable shall be set to FALSE and the event recorded.

If Stop\_When\_Full is writable, attempts to write the value TRUE to the Stop\_When\_Full property while Record\_Count is equal to Buffer\_Size shall result in the oldest Log\_Buffer record being discarded, and shall cause the Enable property to be set to FALSE and the event to be recorded.

### **12.27.12 Buffer\_Size**

This property, of type Unsigned32, shall specify the maximum number of records the buffer may hold. If writable, it may not be written when Enable is TRUE. The disposition of existing records when Buffer\_Size is written is a local matter.

### **12.27.13 Log\_Buffer**

This property is a list of up to Buffer\_Size timestamped records of datatype BACnetEventLogRecord, each of which conveys the event notification parameters or status changes in the Event Log object. Each record has data fields as follows:

Timestamp      The local date and time that the entry was placed into the event log.

LogDatum      The notification information, or a change in status or operation of the Event Log object itself.

The choices available for the LogDatum are listed below:

log-status	This choice represents a change in the status or operation of the Event Log object. Whenever one of the events represented by the flags listed below occurs, a record shall be appended to the buffer.	
	LOG_DISABLED	This flag is changed whenever collection of records by the Event Log object is enabled or disabled. It shall be TRUE if Enable is FALSE, or the local time is outside the range defined by Start_Time and Stop_Time, or the addition of this record will cause the buffer to be full and Stop_When_Full is TRUE; otherwise it shall be FALSE.
	BUFFER_PURGED	This flag shall be set to TRUE whenever the buffer is deleted by a write of the value zero to the Record_Count property. After this value is recorded in the buffer, the subsequent immediate change to FALSE shall not be recorded.
	LOG_INTERRUPTED	This flag indicates that the collection of records by the Event Log object was interrupted by a power failure, device reset, object reconfiguration or other such disruption, such that samples prior to this record might have been missed.
notification	This choice represents an event notification that was received. It consists of the body of the ConfirmedEventNotification or UnconfirmedEventNotification. If the event was generated locally, this shall hold what would be received if the Event Log object existed on a remote device. In such a case the value of the Process Identifier parameter is a local matter.	
time-change	This choice, which represents a change in the clock setting in the device, records the number of seconds by which the clock changed. If the number is not known, such as when the clock is initialized for the first time, the value recorded shall be zero.	

Also associated with each record is an implied record number, the value of which is equal to Total\_Record\_Count at the point where the record has been added into the Log\_Buffer and Total\_Record\_Count has been adjusted accordingly. All clients shall be able to correctly handle the case where the event log is reset such that its Total\_Record\_Count is returned to zero and also the case where Total\_Record\_Count has wrapped back to one.

The buffer is not network accessible except through the use of the ReadRange service in order to avoid problems with record sequencing when segmentation is required. Attempts to read this property with the ReadProperty-Request or ReadPropertyMultiple-Request shall result in an error specifying an error class of PROPERTY and an error code of READ\_ACCESS\_DENIED.

#### **12.27.14 Record\_Count**

This property, of type Unsigned32, shall represent the number of records currently resident in the log buffer. A write of the value zero to this property shall cause all records in the log buffer to be deleted and Records\_Since\_Notification to be reset to zero. Upon completion, this event shall be reported in the log as the initial entry.

#### **12.27.15 Total\_Record\_Count**

This property, of type Unsigned32, shall represent the total number of records collected by the Event Log object since creation. When the value of Total\_Record\_Count reaches its maximum possible value of  $2^{32} - 1$ , the next value it takes shall be one. Once this value has wrapped to one, its semantic value (the total number of records collected) has been lost but its use in generating notifications remains.

#### **12.27.16 Notification\_Threshold**

This optional property, of type Unsigned32, shall specify the value of Records\_Since\_Notification at which notification occurs. This property is required if intrinsic reporting is supported by this object.

#### **12.27.17 Records\_Since\_Notification**

This optional property, of type Unsigned32, represents the number of records collected since the previous notification, or since the beginning of logging if no previous notification has occurred. This property is required if intrinsic reporting is supported by this object.

#### **12.27.18 Last\_Notify\_Record**

This property, of type Unsigned32, represents the SequenceNumber associated with the most recently collected record whose collection caused the value of the Records\_Since\_Notification property to become equal to or greater than the value of the Notification\_Threshold property which triggered a notification. If no notification has occurred since logging began, the value of this property shall be zero. This property is required if intrinsic reporting is supported by this object.

#### **12.27.19 Notification\_Class**

This optional property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

#### **12.27.20 Event\_Enable**

This optional property, of type BACnetEventTransitionBits, shall convey flags that separately enable and disable reporting of TO-NORMAL and TO-FAULT events. This property is required if intrinsic reporting is supported by this object.

##### **12.27.20.1 Conditions for Generating a TO-NORMAL Event**

A TO-NORMAL event is generated if the TO-NORMAL flag is enabled in the Event\_Enable property, and either:

- (a) the value of the Records\_Since\_Notification property changes from being less than the value of Notification\_Threshold to being equal to or greater than the value of Notification\_Threshold, or
- (b) the value of the Notification\_Threshold property changes from being greater than the value of Records\_Since\_Notification to being equal to or less than the value of Records\_Since\_Notification, or
- (c) the Reliability property changes to the value NO\_FAULT\_DETECTED.

#### 12.27.20.2 Conditions for Generating a TO-FAULT Event

A TO-FAULT event is generated if the TO-FAULT flag is enabled in the Event\_Enable property and the Reliability property changes to a value other than NO\_FAULT\_DETECTED.

#### 12.27.21 Acked\_Transitions

This optional property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgements for TO-OFFNORMAL, TO-FAULT and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgement;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgement is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgement is expected).

#### 12.27.22 Notify\_Type

This optional property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### 12.27.23 Event\_Time\_Stamps

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have 'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### 12.27.24 Profile\_Name

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## **12.28 Load Control Object Type**

The Load Control object type defines a standardized object whose properties represent the externally visible characteristics of a mechanism for controlling load requirements. A BACnet device can use a Load Control object to allow external control over the shedding of a load that it controls. The mechanisms by which the loads are shed are not visible to the BACnet client. One or more objects may be used in the device to allow independent control over different sub-loads. The Load Control object may also be used in a hierarchical fashion to control other Load Control objects in other BACnet devices.

A BACnet client (controller) can request that the Load Control object shed a portion of its load for a specified time by writing to the four properties: Requested\_Shed\_Level, Start\_Time, Shed\_Duration, and Duty\_Window. For any given shed request, which may arrive while a previous request is pending or active, each of these parameters is optional except for Start\_Time, which must be written if no shed request is pending or active. If no shed request is pending or active, only the writing of Start\_Time will cause the Load Control object to become active. Modification of these shed request parameters serves to configure the load shed command. Initial values of these properties, and the values taken at the completion of a shed command execution, are as specified in the individual property descriptions.

The Load Control object shed mechanism follows a state machine whose operation is displayed in Figure 12-5. This state machine only describes the behavior of the Load Control object when the Enable property has the value TRUE. See Clause 12.27.14 for a description of the effect of this property. The state machine captures the transitions that occur within the Load Control object.

If the device is unable to comply fully with the shed request by shedding the entire amount of load requested, it is a local matter whether the device sheds as much load as it can or whether it does not shed any of its loads. Determination of compliance with a client's load shed request may also be affected by other factors, such as the definition of the baseline usage, synchronization of time between the client and the device containing the Load Control object, and any intrinsic limits on shed amounts that the device may have. If these factors are not in agreement, the client's determination of compliance may not match the object's determination.


The activity of a Load Control object in the SHED\_REQUEST\_PENDING state will vary. For a Load Control object controlling only one or more direct loads that it can shed instantly, the activity will be simply waiting for the first duty window to arrive, at which point it will monitor the clock and cycle on/off or begin modulation of loads or reduce loads by some other means. The object may need to begin shedding some of the loads before Start\_Time in order to meet the shed target by Start\_Time, in which case it will enter the SHED\_NON\_COMPLIANT state. For a Load Control object controlling other Load Control objects subordinate to it, the shedding activity will begin prior to Start\_Time by communicating the shed request (possibly modified) to these other Load Control objects. There may be some Load Control objects that indicate an inability to comply with the request, which may lead to requests for increased load reduction from these or other Load Control objects.

While the Load Control object is designed to allow independent operation, it is possible that there will exist within a building (or even within a device) a hierarchy of Load Control objects, where one Load Control object receives a load shed command, possibly from a non-BACnet client (e.g., a utility), and the controller which hosts that object (the master) in turn will be responsible for managing and issuing requests to other Load Control objects. There may be a negotiation between the master and its subordinate Load Control objects. The master uses WriteProperty or WritePropertyMultiple to set shed request parameters in the subordinate Load Control objects. A subordinate Load Control object would then set its Expected\_Shed\_Level property to the value that it expects to be able to achieve after Start\_Time. Before Start\_Time, the master object can read the Expected\_Shed\_Level properties of its subordinates to determine expected compliance with the request. After Start\_Time plus Duty\_Window, the Actual\_Shed\_Level properties of the subordinate objects will reflect the actual amount shed in the past Duty\_Window. If by reading these properties the master Load Control object determines that one or more subordinate objects cannot completely comply with the request, the master may choose to modify the shed requests to subordinates, such that the overall shed target is achieved. For instance, it may request that another object shed a greater amount of its load or it may choose to request that the noncompliant device shed a greater amount. This negotiation could be repeated at each successive level in the hierarchy. If the subordinate Load Control objects also support intrinsic reporting, expected or actual instances of non-compliance can be reported to the master object using event notifications.

Where large loads are concerned, it is expected that the master Load Control object will employ sequencing to distribute the startup and shutdown of managed loads. When the load control master is used in a gateway to a non-BACnet load control

client, such as a utility company, the gateway shall accept and process any start randomization commands and accordingly distribute the initiation of load control requests to its subordinate Load Control objects.

The Load Control object shall exhibit restorative behavior across a restart or time change of the BACnet device in which it resides. The shed request property values shall be maintained across a device restart. Upon device restart or a time change, the object shall behave as if Start\_Time were written and shall re-evaluate the state machine's state.

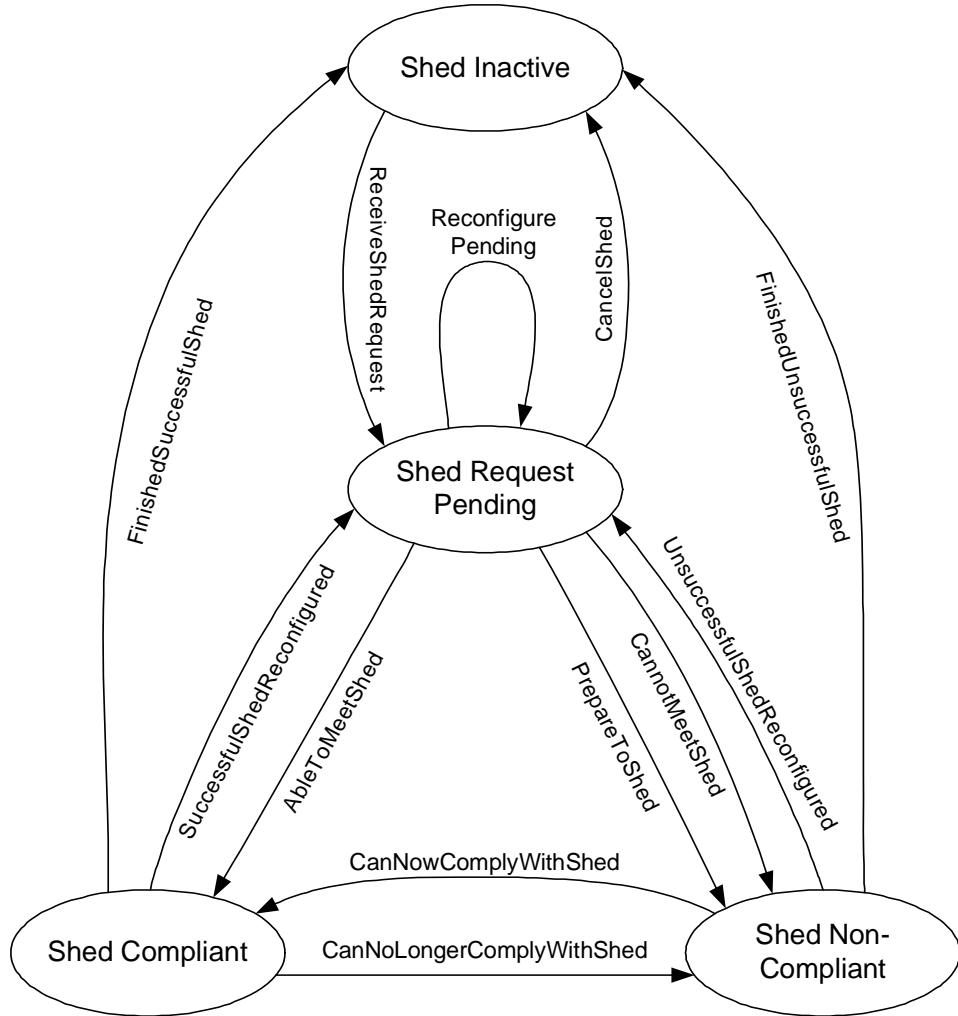

**Figure 12-5.** State Diagram for Load Control Object.

## **SHED\_INACTIVE**

In the SHED\_INACTIVE state, the Load Control object waits for a shed request.

### **ReceiveShedRequest**

If Start\_Time is written, the object shall calculate Expected\_Shed\_Level and Actual\_Shed\_Level and enter the SHED\_REQUEST\_PENDING state.

## **SHED\_REQUEST\_PENDING**

In the SHED\_REQUEST\_PENDING state, the object makes a determination from the newly written shed parameters whether the shed request needs to be executed immediately or at some time in the future.

### **CancelShed**

If the current time is after Start\_Time plus Shed\_Duration, this request is for an invalid time and is ignored. The object shall stop shedding and enter the SHED\_INACTIVE state.

If Requested\_Shed\_Level is equal to the default value for the choice, or Start\_Time contains wildcards, then this is a cancellation of shedding. The object shall stop shedding and enter the SHED\_INACTIVE state.

### **ReconfigurePending**

If the current time is prior to Start\_Time, and a new write is received for Requested\_Shed\_Level, Shed\_Duration, Duty\_Window, or Start\_Time, this is a reconfiguration of the shed request. The object shall calculate Expected\_Shed\_Level and Actual\_Shed\_Level and enter the SHED\_REQUEST\_PENDING state.

### **PrepareToShed**

If the current time is prior to Start\_Time, but the loads to be shed require time to decrease usage to the requested shed level, the object may choose to initiate shedding of its subordinates prior to Start\_Time in order to be in compliance by Start\_Time. If this approach is followed, the object shall calculate Expected\_Shed\_Level and Actual\_Shed\_Level and enter the SHED\_NON\_COMPLIANT state.

### **CannotMeetShed**

If the current time is after Start\_Time, and the object is unable to meet the shed request immediately, it shall begin shedding its loads, calculate Expected\_Shed\_Level and Actual\_Shed\_Level, and enter the SHED\_NON\_COMPLIANT state.

### **AbleToMeetShed**

If the current time is after Start\_Time and the object is able to achieve the shed request immediately, it shall shed its loads, calculate Expected\_Shed\_Level and Actual\_Shed\_Level, and enter the SHED\_COMPLIANT state.

If the current time is before Start\_Time, and the object has initiated shedding prior to Start\_Time in order to be in compliance by Start\_Time, and the object has achieved the requested shed level, it shall calculate Expected\_Shed\_Level and Actual\_Shed\_Level and enter the SHED\_COMPLIANT state.

## **SHED\_NON\_COMPLIANT**

In the SHED\_NON\_COMPLIANT state, the object attempts to meet the shed request until the shed is achieved, the object is reconfigured, or the request has completed unsuccessfully.

### **FinishedUnsuccessfulShed**

If the current time is after Start\_Time plus Shed\_Duration, the shed request has completed unsuccessfully. The object shall stop shedding and enter the SHED\_INACTIVE state.

### **UnsuccessfulShedReconfigured**

If the object receives a write to any of the properties Requested\_Shed\_Level, Shed\_Duration, Duty\_Window, or Start\_Time, the object shall enter the SHED\_REQUEST\_PENDING state.

#### CanNowComplyWithShed

If the object has achieved the Requested\_Shed\_Level, it shall calculate Expected\_Shed\_Level and Actual\_Shed\_Level and enter the SHED\_COMPLIANT state.

#### SHED\_COMPLIANT

In the SHED\_COMPLIANT state, the object continues meeting the shed request until the shed is either reconfigured or completes, or conditions change and the object is no longer able to maintain the requested shed level.

#### FinishedSuccessfulShed

If the current time is after Start\_Time plus Shed\_Duration, the shed request has completed successfully. The object shall stop shedding, set Start\_Time to all wildcards, and enter the SHED\_INACTIVE state.

#### SuccessfulShedReconfigured

If the object receives a write to any of the properties Requested\_Shed\_Level, Shed\_Duration, Duty\_Window, or Start\_Time, the object shall enter the SHED\_REQUEST\_PENDING state.

#### CanNoLongerComplyWithShed

If the object is no longer able to maintain the Requested\_Shed\_Level, it shall calculate Expected\_Shed\_Level and Actual\_Shed\_Level and enter the SHED\_NON\_COMPLIANT state.

**Table 12-32.** Properties of the Load Control Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Present_Value	BACnetShedState	R
State_Description	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Requested_Shed_Level	BACnetShedLevel	W
Start_Time	BACnetDateTime	W
Shed_Duration	Unsigned	W
Duty_Window	Unsigned	W
Enable	BOOLEAN	W
Full_Duty_Baseline	REAL	O
Expected_Shed_Level	BACnetShedLevel	R
Actual_Shed_Level	BACnetShedLevel	R
Shed_Levels	BACnetARRAY[N] of Unsigned	W <sup>1</sup>
Shed_Level_Descriptions	BACnetARRAY[N] of CharacterString	R
Notification_Class	Unsigned	O <sup>2</sup>
Time_Delay	Unsigned	O <sup>2</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>2</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>2</sup>
Notify_Type	BACnetNotifyType	O <sup>2</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>2</sup>
Profile_Name	CharacterString	O

<sup>1</sup> The elements of this array are required to be writable, although the array is not required to be resizable.

<sup>2</sup> These properties are required if the object supports intrinsic reporting.

### **12.28.1 Object\_Identifier**

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### **12.28.2 Object\_Name**

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### **12.28.3 Object\_Type**

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be LOAD\_CONTROL.

### **12.28.4 Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### **12.28.5 Present\_Value**

This property, of type BACnetShedState, indicates the current load shedding state of the object. See Figure 12-5 for a diagram of the state machine governing the value of Present\_Value.

### **12.28.6 State\_Description**

This property, of type CharacterString, is a string of printable characters whose content is not restricted. The State\_Description provides additional information for human operators about the shed state of the Load Control object.

### **12.28.7 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of a Load Control object. Three of the flags are associated with the values of other properties of this object. A more detailed status could be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN\_ALARM      Logical FALSE (0) if the Event\_State property has a value of NORMAL, otherwise logical TRUE (1).

FAULT      Logical      TRUE (1) if the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, otherwise logical FALSE (0).

OVERRIDDEN      Logical TRUE (1) if the point has been overridden by some mechanism local to the BACnet Device, otherwise logical FALSE (0).

OUT\_OF\_SERVICE This bit shall always be Logical FALSE (0).

### **12.28.8 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting and if the Reliability property is not present, then the value of this property shall be NORMAL. If the Reliability property is present and does not have a value of NO\_FAULT\_DETECTED, then the value of the Event\_State property shall be FAULT. Changes in the Event\_State property to the value FAULT are considered to be "fault" events.

### 12.28.9 Reliability

The Reliability property, of type BACnetReliability, provides an indication of whether the Load Control object is reliably reporting its compliance with any load shed requests. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED,, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

### 12.28.10 Requested\_Shed\_Level

This property, of type BACnetShedLevel, indicates the desired load shedding. Table 12-33 describes the default values and power targets for the different choices of Requested\_Shed\_Level.

If the choice for Requested\_Shed\_Level is PERCENT, the value of Requested\_Shed\_Level is interpreted as a requested percentage of Full Duty to which the device is to attempt to reduce its load. The determination of the Full Duty rating (or some alternative baseline power usage) is a local matter. It may be determined from the Full\_Duty\_Baseline property, if present.

If the choice for Requested\_Shed\_Level is LEVEL, the value of Requested\_Shed\_Level is used to set a preconfigured level of load shedding.

The Load Control object's available shed actions are described by the Shed\_Level\_Descriptions array and are mapped to the BACnet visible values of Requested\_Shed\_Level by the Shed\_Levels array. The SHED\_INACTIVE state shall always be represented by the value 0, which is not represented in the Shed\_Levels or Shed\_Level\_Descriptions arrays. If Requested\_Shed\_Level choice is AMOUNT, the value of Requested\_Shed\_Level shall be interpreted as an amount, in kilowatts, by which to reduce power usage. Load Control objects are required to support the LEVEL choice. Support for the PERCENT and AMOUNT choices is optional. This allows a master to be guaranteed the ability to write to the Load Control object by using the LEVEL choice.

If a load control command has been issued, and execution of the command has completed, Requested\_Shed\_Level shall be reset to the default value appropriate to the choice of Requested\_Shed\_Level used for the last command.

**Table 12-33. Requested\_Shed\_Level Default Values and Power Targets**

Choice	Default Requested_Shed_Level value	Power load target in kW
PERCENT	100	(current baseline) * Requested_Shed_Level / 100
LEVEL	0	locally pre-specified shed target for the given level
AMOUNT	0.0	(current baseline) - Requested_Shed_Level

### 12.28.11 Start\_Time

This property, of type BACnetDateTime, indicates the start of the duty window in which the load controlled by the Load Control object must be compliant with the requested shed. Load shedding (or determination of loads to shed) may need to begin before Start\_Time in order to be compliant with the shed request by Start\_Time. If no shed request is pending or active, Start\_Time shall contain all wildcard values. If a load control command has been issued, and execution of the command has completed, Start\_Time shall be reset by the device to contain all wildcard values. If a client wishes to initiate an immediate shed, it can set Start\_Time to a value prior to the device's current time.

### 12.28.12 Shed\_Duration

This property, of type Unsigned, indicates the duration of the load shed action, starting at Start\_Time. The units for Shed\_Duration are minutes. If no shed request is pending or active, Shed\_Duration shall be zero. If a load control command has been issued, and execution of the command has completed, Shed\_Duration shall be reset by the device to zero.

### 12.28.13 Duty\_Window

This property, of type Unsigned, indicates the time window used for load shed accounting. The units for Duty\_Window are minutes. Duty\_Window is used for performance measurement or compliance purposes. The average power consumption across a duty window must be less than or equal to the requested reduced consumption. It is a local matter whether this window is fixed or sliding. The first Duty\_Window begins at Start\_Time. If a shed request is received with no value written to this property, Duty\_Window shall be set to some pre-agreed upon value. If a load control command has been issued, and execution of the command has completed, Duty\_Window shall be reset by the device to this pre-agreed value.

#### **12.28.14 Enable**

This property, of type BOOLEAN, indicates and controls whether the Load Control object is currently enabled to respond to load shed requests. If Enable is TRUE, the object will respond to load shed requests normally and follow the state machine described in Figure 12-5. If Enable is FALSE, the object will transition to the SHED\_INACTIVE state if necessary and remain in that state. It shall not respond to any load shed request while Enable is FALSE.

#### **12.28.15 Full\_Duty\_Baseline**

This property, of type REAL, indicates the baseline power consumption value for the sheddable load controlled by this object, if a fixed baseline is used. Shed requests may be made with respect to this baseline, that is, to "percent of baseline" and "amount off baseline". The units of Full\_Duty\_Baseline are kilowatts.

#### **12.28.16 Expected\_Shed\_Level**

This property, of type BACnetShedLevel, indicates the amount of power that the object expects to be able to shed in response to a load shed request. When the object is in the SHED\_INACTIVE state, this value shall be equal to the default value of Requested\_Shed\_Level. When a shed request is pending or active, Expected\_Shed\_Level shall be equal to the shed level the object expects to be able to achieve at Start\_Time. Expected\_Shed\_Level allows a client (e.g., a master-level Load Control object) to determine if a pending shed request needs to be modified in order to achieve the requested shed level, in the event that Expected\_Shed\_Level is less than the Requested\_Shed\_Level. The units for Expected\_Shed\_Level are the same as the units for Requested\_Shed\_Level.

#### **12.28.17 Actual\_Shed\_Level**

This property, of type BACnetShedLevel, indicates the actual amount of power being shed in response to a load shed request. When the object is in the SHED\_INACTIVE state, this value shall be equal to the default value of Requested\_Shed\_Level. After Start\_Time plus Duty\_Window has elapsed, this value shall be the actual shed amount as calculated based on the average value over the previous duty window. The units for Actual\_Shed\_Level are the same as the units for Requested\_Shed\_Level.

#### **12.28.18 Shed\_Levels**

This property is a BACnetARRAY of unsigned integers representing the shed levels for the LEVEL choice of BACnetShedLevel that have meaning for this particular Load Control object. The array shall be ordered by increasing shed amount. When commanded with the LEVEL choice, the Load Control object shall take a shedding action described by the corresponding element in the Shed\_Level\_Descriptions array. If the Load Control object is commanded to go to a level that is not in the Shed\_Levels array, it shall go to the Shed\_Level whose entry in the Shed\_Levels array has the nearest numerically lower value. The elements of the array are required to be writable, allowing local configuration of how this Load Control object will participate in load shedding for the facility. This array is not required to be resizable through BACnet write services. The size of this array shall be equal to the size of the Shed\_Level\_Descriptions array. The behavior of this object when the Shed\_Levels array contains duplicate entries is a local matter.

#### **12.28.19 Shed\_Level\_Descriptions**

This property is a BACnetARRAY of character strings representing a description of the shed levels that the Load Control object can take on. This allows a local configuration tool to provide to a user an understanding of what each shed level in this Load Control object's load shedding algorithm will do. The level at which each shed action will occur can then be configured by writing to the Shed\_Levels property.

#### **12.28.20 Notification\_Class**

This property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

#### **12.28.21 Time\_Delay**

This property, of type Unsigned, shall specify the minimum period of time in seconds that the Present\_Value property shall remain equal to SHED\_NON\_COMPLIANT when the current time is after Start\_Time and before a TO-OFFNORMAL event is generated, or not equal to SHED\_NON\_COMPLIANT before a TO-NORMAL event is generated. This property is required if intrinsic reporting is supported by this object.

### **12.28.22 Event\_Enable**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately enable and disable reporting of TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. This property is required if intrinsic reporting is supported by this object.

#### **12.28.22.1 Conditions for Generating a TO-OFFNORMAL Event**

A TO-OFFNORMAL event is generated under these conditions:

- (a) the Present\_Value must remain in the SHED\_NON\_COMPLIANT state for a minimum period of time, specified in the Time\_Delay property,
- (b) the TO-OFFNORMAL flag must be set in the Event\_Enable property, and
- (c) the current time is after Start\_Time.

#### **12.28.22.2 Conditions for Generating a TO-NORMAL Event**

Once the Present\_Value transitions to the SHED\_NON\_COMPLIANT state, a TO-NORMAL event is generated under these conditions:

- (a) the Present\_Value leaves the SHED\_NON\_COMPLIANT state and remains out of this state for a minimum period of time, specified in the Time\_Delay property, and
- (b) the TO-NORMAL flag must be set in the Event\_Enable property.

### **12.28.23 Acked\_Transitions**

This property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgements for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgement;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgement is expected); or
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgement is expected).

This property is required if intrinsic reporting is supported by this object.

### **12.28.24 Notify\_Type**

This property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

### **12.28.25 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have X'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

### **12.28.26 Profile\_Name**

This property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 12.29 Structured View Object Type

The Structured View object type defines a standardized object that provides a container to hold references to subordinate objects, which may include other Structured View objects, thereby allowing multilevel hierarchies to be created. The hierarchies are intended to convey a structure or organization such as a geographical distribution or application organization. Subordinate objects may reside in the same device as the Structured View object or in other devices on the network.

The Structured View object and its properties are summarized in Table 12-34 and described in detail in this subclause.

**Table 12-34.** Properties of the Structured View Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Node_Type	BACnetNodeType	R
Node_Subtype	CharacterString	O
Subordinate_List	BACnetARRAY[N] of BACnetDeviceObjectReference	R
Subordinate_Annotations	BACnetARRAY[N] of CharacterString	O
Profile_Name	CharacterString	O

### 12.29.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.29.2 Object\_Name

This property, of type CharacterString, shall represent a name for the object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.29.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be STRUCTURED\_VIEW.

### 12.29.4 Description

This property, of type CharacterString, is a string of printable characters whose content is not restricted.

### 12.29.5 Node\_Type

This property, of type BACnetNodeType, provides a general classification of the object in the hierarchy of objects.

It is intended as a general suggestion to a client application about the contents of a Structured View object, and is not intended to convey an exact definition. Further refinement of classification is provided by the Node\_Subtype property. The allowable values for this property are:

{UNKNOWN, SYSTEM, NETWORK, DEVICE, ORGANIZATIONAL, AREA, EQUIPMENT, POINT,  
COLLECTION, PROPERTY, FUNCTIONAL, OTHER}

Where the following are suggested interpretations:

UNKNOWN	Indicates that a value for Node_Type is not available or has not been configured at this time
SYSTEM	An entire mechanical system
NETWORK	A communications network

DEVICE	Contains a set of elements which collectively represents a BACnet device, a logical device, or a physical device
ORGANIZATIONAL	Business concepts such as departments or people
AREA	Geographical concept such as a campus, building, floor, etc.
EQUIPMENT	Single piece of equipment that may be a collection of "Points"
POINT	Contains a set of elements which collectively defines a single point of data, either a physical input or output of a control or monitoring device, or a software calculation or configuration setting
COLLECTION	A generic container used to group things together, such as a collection of references to all space temperatures in a building
PROPERTY	Defines a characteristic or parameter of the parent node
FUNCTIONAL	Single system component such as a control module or a logical component such as a function block
OTHER	Everything that does not fit into one of these broad categories

#### **12.29.6 Node\_Subtype**

This property, of type CharacterString, is a string of printable characters whose content is not restricted. It provides a more specific classification of the object in the hierarchy of objects, providing a short description of the item represented by the node.

#### **12.29.7 Subordinate\_List**

This property is a BACnetARRAY of BACnetDeviceObjectReference that defines the members of the current Structured View.

By including references to 'child' Structured View objects, multilevel hierarchies may be created.

If the optional device identifier is not present for a particular Subordinate\_List member, then that object must reside in the same device that maintains the Structured View object. If Subordinate\_List is writable using WriteProperty services, the Subordinate\_List may optionally be restricted to reference-only objects in the local device. To avoid recursion, it is suggested that a single Structured View object should be referenced only once in the hierarchy.

If the size of the Subordinate\_List array is changed, the size of the Subordinate\_Annotations array, if present, shall also be changed to the same size. Uninitialized Subordinate\_List array elements shall be given the instance number 4194303.

A Subordinate\_List array element whose instance number is equal to 4194303 shall be considered uninitialized and shall be ignored.

#### **12.29.8 Subordinate\_Annotations**

This optional property, a BACnetARRAY of CharacterString, shall be used to define a text string description for each member of the Subordinate\_List. The content of these strings is not restricted.

If the size of this array is changed, the size of the Subordinate\_List array shall also be changed to the same size.

#### **12.29.9 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

### 12.30 Trend Log Multiple Object Type

A Trend Log Multiple object monitors one or more properties of one or more referenced objects, either in the same device as the Trend Log Multiple object or in an external device. When predefined conditions are met, the object saves ("logs") the value of the properties and a timestamp into an internal buffer for subsequent retrieval. The data may be logged periodically or when "triggered" by a write to the Trigger property. Errors that prevent the acquisition of the data, as well as changes in the status or operation of the logging process itself, are also recorded. Each timestamped buffer entry is called a "log record".

The Log\_DeviceObjectProperty array holds the list of properties to be monitored and logged. If an element of the Log\_DeviceObjectProperty array has an object or device instance number equal to 4194303, this indicates that the element is 'empty' or 'uninitialized'. For empty or uninitialized elements, an indication that no property was specified shall be written to the corresponding entry in each log record.

Each Trend Log Multiple object maintains an internal, optionally fixed-size, buffer in its Log\_Buffer property. This buffer fills or grows as log records are added. If the buffer becomes full, the least recent log record is overwritten when a new log record is added, or collection may be set to stop. Trend Log Multiple buffers are transferred as a list of BACnetLogMultipleRecord using the ReadRange service. The buffer may be cleared by writing a zero to the Record\_Count property. Each log record in the buffer has an implied SequenceNumber that is equal to the value of the Total\_Record\_Count property immediately after the log record is added.

Logging may be enabled and disabled through the Enable property and at dates and times specified by the Start\_Time and Stop\_Time properties. The enabling and disabling of record collection is recorded in the Log\_Buffer.

Event reporting (notification) may be provided to facilitate automatic fetching of log records by processes on other devices such as fileservers. Mechanisms for both algorithmic and intrinsic reporting are provided.

In intrinsic reporting, when the number of records specified by the Notification\_Threshold property has been collected since the previous notification (or startup), a new notification is sent to all subscribed devices.

In response to a notification, subscribers may fetch all of the new log records. If a subscriber needs to fetch all of the new log records, it should use the 'By Sequence Number' form of the ReadRange service request.

A missed notification may be detected by a subscriber if the 'Current Notification' parameter received in the previous BUFFER\_READY notification is different than the 'Previous Notification' parameter of the current BUFFER\_READY notification. If the ReadRange-ACK response to the ReadRange request issued under these conditions has the FIRST\_ITEM bit of the 'Result Flags' parameter set to TRUE, Trend Log Multiple log records have probably been missed by this subscriber.

The acquisition of log records by remote devices has no effect upon the state of the Trend Log Multiple object itself. This allows completely independent, but properly sequential, access to its log records by all remote devices. Any remote device can independently update its records at any time.

**Table 12-35.** Properties of the Trend Log Multiple Object Type

Property Identifier	Property Datatype	Conformance Code
Object_Identifier	BACnetObjectIdentifier	R
Object_Name	CharacterString	R
Object_Type	BACnetObjectType	R
Description	CharacterString	O
Status_Flags	BACnetStatusFlags	R
Event_State	BACnetEventState	R
Reliability	BACnetReliability	O
Enable	BOOLEAN	W
Start_Time	BACnetDateTime	O <sup>1</sup>
Stop_Time	BACnetDateTime	O <sup>1</sup>
Log_DeviceObjectProperty	BACnetARRAY[N] of BACnetDeviceObjectPropertyReference	R
Logging_Type	BACnetLoggingType	R
Log_Interval	Unsigned	R <sup>2</sup>
Align_Intervals	BOOLEAN	O <sup>3</sup>
Interval_Offset	Unsigned	O <sup>3</sup>
Trigger	BOOLEAN	O
Stop_When_Full	BOOLEAN	R
Buffer_Size	Unsigned32	R
Log_Buffer	List of BACnetLogMultipleRecord	R
Record_Count	Unsigned32	W
Total_Record_Count	Unsigned32	R
Notification_Threshold	Unsigned32	O <sup>4</sup>
Records_Since_Notification	Unsigned32	O <sup>4</sup>
Last_Notify_Record	Unsigned32	O <sup>4</sup>
Notification_Class	Unsigned	O <sup>4</sup>
Event_Enable	BACnetEventTransitionBits	O <sup>4</sup>
Acked_Transitions	BACnetEventTransitionBits	O <sup>4</sup>
Notify_Type	BACnetNotifyType	O <sup>4</sup>
Event_Time_Stamps	BACnetARRAY[3] of BACnetTimeStamp	O <sup>4</sup>
Profile_Name	CharacterString	O

<sup>1</sup> If present, these properties are required to be writable.

<sup>2</sup> This property is required to be writable when Logging\_Type has the value POLLED.

<sup>3</sup> These properties are required to be present if the object supports clock-aligned logging.

<sup>4</sup> These properties are required to be present if the object supports intrinsic reporting.

### 12.30.1 Object\_Identifier

This property, of type BACnetObjectIdentifier, is a numeric code that is used to identify the object. It shall be unique within the BACnet Device that maintains it.

### 12.30.2 Object\_Name

This property, of type CharacterString, shall represent a name for the Object that is unique within the BACnet Device that maintains it. The minimum length of the string shall be one character. The set of characters used in the Object\_Name shall be restricted to printable characters.

### 12.30.3 Object\_Type

This property, of type BACnetObjectType, indicates membership in a particular object type class. The value of this property shall be TREND LOG MULTIPLE.

#### **12.30.4 Description**

This optional property, of type CharacterString, is a string of printable characters whose content is not restricted.

#### **12.30.5 Status\_Flags**

This property, of type BACnetStatusFlags, represents four Boolean flags that indicate the general "health" of a Trend Log Multiple object. The IN\_ALARM and FAULT flags are associated with the values of other properties of this object. A more detailed status may be determined by reading the properties that are linked to these flags. The relationship between individual flags is not defined by the protocol. The four flags are

{IN\_ALARM, FAULT, OVERRIDDEN, OUT\_OF\_SERVICE}

where:

IN_ALARM	Logical FALSE (0) if the Event_State property has a value of NORMAL, otherwise logical TRUE (1).
FAULT	Logical TRUE (1) if the Reliability property is present and does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	The value of this flag shall be Logical FALSE (0).
OUT_OF_SERVICE	The value of this flag shall be Logical FALSE (0).

#### **12.30.6 Event\_State**

The Event\_State property, of type BACnetEventState, is included in order to provide a way to determine if this object has an active event state associated with it. If the object supports intrinsic reporting, then the Event\_State property shall indicate the event state of the object. If the object does not support intrinsic reporting, then the value of this property shall be NORMAL. The Event\_State property of this object may have either of the following values:

{NORMAL, FAULT}

#### **12.30.7 Reliability**

This optional property, of type BACnetReliability, provides an indication of whether the application-specific properties of the object or the process executing the application program are "reliable" as far as the BACnet Device can determine. The Reliability property for this object type may have any of the following values:

{NO\_FAULT\_DETECTED, CONFIGURATION\_ERROR, COMMUNICATION\_FAILURE, UNRELIABLE\_OTHER}

#### **12.30.8 Enable**

This property, of type BOOLEAN, indicates and controls whether (TRUE) or not (FALSE) logging of events and collected data is enabled. Logging occurs if and only if Enable is TRUE, Local\_Time is on or after Start\_Time, and Local\_Time is before Stop\_Time. If Start\_Time contains any wildcards, then it shall be considered equal to 'the start of time'. If Stop\_Time contains any wildcards, then it shall be considered equal to 'the end of time'. Log records of type log-status or no-data are recorded without regard to the value of the Enable property.

Attempts to write the value TRUE to the Enable property while Stop\_When\_Full is TRUE and Record\_Count is equal to Buffer\_Size shall cause a Result(-) response to be issued, specifying an 'Error Class' of OBJECT and an 'Error Code' of LOG\_BUFFER\_FULL.

#### **12.30.9 Start\_Time**

This optional property, of type BACnetDateTime, specifies the date and time at or after which logging shall be enabled by this property. If any of the fields of the BACnetDateTime contain "wildcard" values, then the conditions for logging to be enabled by Start\_Time shall be ignored. If Start\_Time specifies a date and time after Stop\_Time, then logging shall be disabled. This property shall be writable if present.

When Start\_Time is reached, the value of the Enable property is not changed.

#### **12.30.10 Stop\_Time**

This optional property, of type BACnetDateTime, specifies the date and time at or after which logging shall be disabled by this property. If any of the fields of the BACnetDateTime contain "wildcard" values, then the conditions for logging to be disabled by Stop\_Time shall be ignored. If Stop\_Time specifies a date and time earlier than Start\_Time, then logging shall be disabled. This property shall be writable if present.

When Stop\_Time is reached, the value of the Enable property is not changed.

#### **12.30.11 Log\_DeviceObjectProperty**

This property, of type BACnetARRAY of BACnetDeviceObjectPropertyReference, specifies the properties to be logged.

If this property is writable, it may be restricted to reference-only objects inside the device containing the Trend Log Multiple object. If the property is restricted to referencing objects within the containing device, an attempt to write a reference to an object outside the containing device into this property shall cause a Result(-) response to be issued, specifying an 'Error Class' of PROPERTY and an 'Error Code' of OPTIONAL\_FUNCTIONALITY\_NOT\_SUPPORTED.

Elements of the Log\_DeviceObjectProperty array containing object or device instance numbers equal to 4194303 are considered to be 'empty' or 'uninitialized'. An error shall be written to log record entries corresponding to these empty or uninitialized array elements, specifying an 'Error Class' of PROPERTY and an 'Error Code' of NO\_PROPERTY\_SPECIFIED.

If this property is changed, one of the following actions shall be taken:

Either the Log\_Buffer shall be purged and a BUFFER\_PURGED log-status record shall be recorded, or

Log data values corresponding to changed elements of the Log\_DeviceObjectProperty array shall be purged by replacing the relevant log data values in each log record with errors, specifying an 'Error Class' of PROPERTY and an 'Error Code' of LOGGED\_VALUE\_PURGED.

The selection of which action to take is a local matter.

#### **12.30.12 Logging\_Type**

This property, of type BACnetLoggingType, specifies whether the Trend Log Multiple collects records using polling or triggered acquisition.

COV Logging is not allowed for a Trend Log Multiple object. If this property is writable, an attempt to write the value COV into this property shall cause a Result(-) response to be issued, specifying an 'Error Class' of PROPERTY and an 'Error Code' of VALUE\_OUT\_OF\_RANGE.

If the value POLLED is written to this property when the value of Log\_Interval is zero, the Log\_Interval property shall be updated with an appropriate default polling interval. Determination of the appropriate default polling interval is a local matter.

If the value TRIGGERED is written to this property when Log\_Interval has a non-zero value, the Log\_Interval property shall be updated with the value zero.

#### **12.30.13 Log\_Interval**

This property, of type Unsigned, specifies the periodic interval in hundredths of seconds for which the referenced properties are to be logged when Logging\_Type has the value POLLED. If Logging\_Type has the value TRIGGERED, then the value of this property shall be zero and ignored.

This property shall be writable if Logging\_Type has the value POLLED, and shall be read-only if Logging\_Type has the value TRIGGERED.

#### **12.30.14 Align\_Interval**

This optional property, of type BOOLEAN, specifies whether (TRUE) or not (FALSE) clock-aligned periodic logging is enabled. If periodic logging is enabled and the value of Log\_Interval is a factor of (that is, it divides without remainder) a second, minute, hour or day, then the beginning of the period specified for logging shall be aligned to the second, minute, hour or day, respectively.

This property is required if the object supports clock-aligned logging. This property has no effect on the behavior of the Trend Log Multiple object if the Logging\_Type property has a value other than POLLED.

#### **12.30.15 Interval\_Offset**

This optional property, of type Unsigned, specifies the offset in hundredths of seconds from the beginning of the period specified for logging until the actual acquisition of a log record begins. The offset used shall be the value of Interval\_Offset modulo the value of Log\_Interval; i.e., if Interval\_Offset has the value 31 and Log\_Interval is 30, the offset used shall be 1. Interval\_Offset shall have no effect if Align\_Interval = FALSE.

This property is required if the object supports clock-aligned logging.

#### **12.30.16 Trigger**

This optional property, of type BOOLEAN, shall cause the Trend Log Multiple object to acquire a log record whenever the value of this property is changed from FALSE to TRUE. It shall remain TRUE while the Trend Log Multiple object is acquiring the data items for a log record. When all log data items have been collected or it has been determined that all outstanding data requests will not be fulfilled, the Trend Log Multiple object shall reset the value to FALSE.

If the value of the Logging\_Type property is not TRIGGERED and an attempt is made to write the value TRUE to the Trigger property, it is left as a local matter whether to execute the logging operation or not. For devices that choose not to execute triggered logging when Logging\_Type is not equal to TRIGGERED, attempts to write the value TRUE to this property when Logging\_Type has a value other than TRIGGERED shall cause a Result(-) response to be issued, specifying an 'Error Class' of PROPERTY and an 'Error Code' of NOT\_CONFIGURED\_FOR\_TRIGGERED\_LOGGING.

Writing to the Trigger property is not restricted to network visible write operations; internal processes may control the acquisition of samples by writing to this property.

#### **12.30.17 Stop\_When\_Full**

This property, of type BOOLEAN, specifies whether (TRUE) or not (FALSE) logging should cease when the Log\_Buffer is full. When logging ceases because the addition of one more log record would cause the buffer to be full, Enable shall be set to FALSE and the event recorded.

If Stop\_When\_Full is writable, attempts to write the value TRUE to the Stop\_When\_Full property while Record\_Count is equal to Buffer\_Size shall result in the oldest log record in the Log\_Buffer being discarded, and shall cause the Enable property to be set to FALSE and the event to be recorded.

#### **12.30.18 Buffer\_Size**

This property, of type Unsigned32, shall specify the maximum number of records the Log\_Buffer can hold. If writable, it may not be written when Enable is TRUE. The disposition of existing log records when Buffer\_Size is written is a local matter.

#### **12.30.19 Log\_Buffer**

This property is a list of BACnetLogMultipleRecord records. Each log record conveys either a set of recorded data values or errors related to data-collection, a status change in the Trend Log Multiple object, or an indication that the time and/or date was changed in the device hosting the Trend Log Multiple object.

Each log record has data fields as follows:

**Timestamp** The local date and time when the record was stored.

**LogData** A set of recorded data values or errors related to data-collection, a status change in the Trend Log Multiple object itself, or an indication that the time and/or date was changed in the device hosting the Trend Log Multiple object.

The choices available for LogData are listed below:

<b>log-status</b>	This choice represents a change in the status or operation of the Trend Log Multiple object. Whenever one of the events represented by the flags listed below occurs, a log record shall be appended to the Log_Buffer.
<b>LOG_DISABLED</b>	This flag is changed whenever collection of log records by the Trend Log Multiple object is enabled or disabled. It shall be TRUE if Enable is FALSE, or the local time is outside the range defined by Start_Time and Stop_Time, or the addition of this log record will cause the Log_Buffer to be full and Stop_When_Full is TRUE; otherwise it shall be FALSE.
<b>BUFFER_PURGED</b>	This flag shall be set to TRUE whenever the Log_Buffer is cleared by writing zero to the Record_Count property, or due to a change to the Log_DeviceObjectProperty property. After this value is recorded in the Log_Buffer, the subsequent immediate change to FALSE shall not be recorded. A log record indicating the purging of the Log_Buffer shall be placed into the buffer even if logging is disabled or outside of the time range defined by the Start_Time and Stop_Time properties.
<b>LOG_INTERRUPTED</b>	This flag indicates that the collection of log records by the Trend Log Multiple object was interrupted by a power failure, device reset, object reconfiguration or other such disruption, such that samples prior to this record might have been missed.
<b>log-data</b>	The set of logged values. The order of logged values shall correspond to the order of the Log_DeviceObjectProperty array.
<b>boolean-value</b> <b>real-value</b> <b>enum-value</b> <b>unsigned-value</b> <b>signed-value</b> <b>bitstring-value</b> <b>null-value</b>	These choices represent data values read from the monitored object and property.
<b>any-value</b>	This choice represents data values read from the monitored object and property.
<b>failure</b>	This choice indicates either that an entry in the Log_DeviceObjectProperty array contains an object or device instance equal to 4194303, that a previously logged value was purged, or that an error was encountered in an attempt to read a data value from the monitored object. If the error is conveyed by an error response from a remote device, the Error Class and Error Code in the response shall be recorded.

time-change	This choice represents a change in the clock setting in the device; it records the number of seconds by which the clock changed. If the number is not known, such as when the clock is initialized for the first time, the value recorded shall be zero.
-------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Also associated with each log record is an implied record number, the value of which is equal to Total\_Record\_Count at the point where the log record has been added into the Log\_Buffer and Total\_Record\_Count has been adjusted accordingly. All clients must be able to correctly handle the case where the Log\_Buffer is reset such that its Total\_Record\_Count is returned to zero and also the case where Total\_Record\_Count has wrapped back to zero.

The Log\_Buffer is not network accessible except through the use of the ReadRange service, in order to avoid problems with record sequencing when segmentation is required. Attempts to read this property with the ReadProperty-Request or ReadPropertyMultiple-Request shall cause a Result(-) response to be issued, specifying an 'Error Class' of PROPERTY and an 'Error Code' of READ\_ACCESS\_DENIED.

#### **12.30.20 Record\_Count**

This property, of type Unsigned32, shall represent the number of log records currently resident in the Log\_Buffer. A write of the value zero to this property shall cause all log records in the Log\_Buffer to be deleted and Records\_Since\_Notification to be reset to zero. Upon completion, this event shall be reported in the log as the initial entry.

#### **12.30.21 Total\_Record\_Count**

This property, of type Unsigned32, shall represent the total number of log records collected by the Trend Log Multiple object since creation. When the value of Total\_Record\_Count reaches its maximum possible value of  $2^{32} - 1$ , the next value it takes shall be one. Once this value has wrapped to one, its semantic value (the total number of log records collected) has been lost but its use in generating notifications remains.

#### **12.30.22 Notification\_Threshold**

This optional property, of type Unsigned32, shall specify the value of Records\_Since\_Notification at which notification occurs. This property is required if intrinsic reporting is supported by this object.

#### **12.30.23 Records\_Since\_Notification**

This optional property, of type Unsigned32, represents the number of log records collected since the previous notification, or since the beginning of logging if no previous notification has occurred. This property is required if intrinsic reporting is supported by this object.

#### **12.30.24 Last\_Notify\_Record**

This property, of type Unsigned32, represents the SequenceNumber associated with the most recently collected log record whose collection caused the value of the Records\_Since\_Notification property to become equal to or greater than the value of the Notification\_Threshold property which triggered a notification. If no notification has occurred since logging began the value of this property shall be zero. This property is required if intrinsic reporting is supported by this object.

#### **12.30.25 Notification\_Class**

This optional property, of type Unsigned, shall specify the notification class to be used when handling and generating event notifications for this object. The Notification\_Class property implicitly refers to a Notification Class object that has a Notification\_Class property with the same value. This property is required if intrinsic reporting is supported by this object.

#### **12.30.26 Event\_Enable**

This optional property, of type BACnetEventTransitionBits, shall convey flags that separately enable and disable reporting of TO-FAULT and TO-NORMAL events.. This property is required if intrinsic reporting is supported by this object.

##### **12.30.26.1 Conditions for Generating a TO-NORMAL Event**

A TO-NORMAL event is generated if the TO-NORMAL flag is enabled in the Event\_Enable property, and either:

- (a) the value of the Records\_Since\_Notification property changes from being less than the value of Notification\_Threshold to being equal to or greater than the value of Notification\_Threshold, or

- (b) the value of the Notification\_Threshold property changes from being greater than the value of Records\_Since\_Notification to being equal to or less than the value of Records\_Since\_Notification, or
- (c) the Reliability property changes to the value NOFAULT\_DETECTED.

#### **12.30.26.2 Conditions for Generating a TO-FAULT Event**

A TO-FAULT event is generated if the TO-FAULT flag is enabled in the Event\_Enable property, and the Reliability property changes to a value other than NOFAULT\_DETECTED.

#### **12.30.27 Acked\_Transitions**

This optional property, of type BACnetEventTransitionBits, shall convey three flags that separately indicate the receipt of acknowledgments for TO-OFFNORMAL, TO-FAULT and TO-NORMAL events. These flags shall be cleared upon the occurrence of the corresponding event and set under any of these conditions:

- (a) upon receipt of the corresponding acknowledgment;
- (b) upon the occurrence of the event if the corresponding flag is not set in the Event\_Enable property (meaning event notifications will not be generated for this condition and thus no acknowledgment is expected);
- (c) upon the occurrence of the event if the corresponding flag is set in the Event\_Enable property and the corresponding flag in the Ack\_Required property of the Notification Class object implicitly referenced by the Notification\_Class property of this object is not set (meaning no acknowledgment is expected).

This property is required if intrinsic reporting is supported by this object.

#### **12.30.28 Notify\_Type**

This optional property, of type BACnetNotifyType, shall convey whether the notifications generated by the object should be Events or Alarms. This property is required if intrinsic reporting is supported by this object.

#### **12.30.29 Event\_Time\_Stamps**

This optional property, of type BACnetARRAY [3] of BACnetTimeStamp, shall convey the times of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events, respectively. Time stamps of type Time or Date shall have X'FF' in each octet and Sequence number time stamps shall have the value 0 if no event notification of that type has been generated since the object was created. This property is required if intrinsic reporting is supported by this object.

#### **12.30.30 Profile\_Name**

This optional property, of type CharacterString, is the name of an object profile to which this object conforms. To ensure uniqueness, a profile name must begin with a vendor identifier code (see Clause 23) in base-10 integer format, followed by a dash. All subsequent characters are administered by the organization registered with that vendor identifier code. The vendor identifier code that prefixes the profile name shall indicate the organization that publishes and maintains the profile document named by the remainder of the profile name. This vendor identifier need not have any relationship to the vendor identifier of the device within which the object resides.

A profile defines a set of additional properties, behavior, and/or requirements for this object beyond those specified here. This standard defines only the format of the names of profiles. The definition of the profiles themselves is outside the scope of this standard.

## 13 ALARM AND EVENT SERVICES

This clause describes the conceptual approach and application services used in BACnet to manage communication related to events. Object types relating to event management are defined in Clause 12. In general, "events" are changes of value of certain properties of certain objects, or internal status changes, that meet predetermined criteria. There are three mechanisms provided in BACnet for managing events: change of value reporting, intrinsic reporting, and algorithmic change reporting.

Change of value (COV) reporting allows a COV-client to subscribe with a COV-server, on a permanent or temporary basis, to receive reports of some changes of value of some referenced property based on fixed criteria. Certain BACnet standard objects may optionally support COV reporting. If a standard object provides COV reporting, then changes of value of specific properties of the object, in some cases based on programmable increments, trigger COV notifications to be sent to one or more subscriber clients. Typically, COV notifications are sent to supervisory programs in COV-client devices or to operators or logging devices. Proprietary objects may support COV reporting at the implementor's option.

Intrinsic reporting allows a BACnet device to provide one or more event sources, intrinsic to the device, that generate event notifications that may be directed to one or more destinations. Certain BACnet standard objects may optionally support intrinsic reporting by supporting optional properties that define the type of event to be generated and options for handling and routing of the notifications. Internal status changes and alarms may also use intrinsic reporting to generate diagnostic notifications. Proprietary objects may support intrinsic reporting at the implementor's option.

Algorithmic change reporting allows a notification-client to subscribe with a notification-server to receive reports of changes of value of any property of any object on the basis of predetermined, and network-visible, criteria. Any of the standardized algorithms described in Clause 13.3 may be used to establish criteria for change reporting. Once established, occurrences of change may be reported to one or more destinations based on further criteria. Algorithmic change reporting differs from intrinsic reporting in that Event Enrollment objects are used to determine the event condition(s).

Intrinsic and algorithmic change reporting rely on the concept of event classification for selective reporting of individual occurrences of events. Particular intrinsic or algorithmic change events may specify a notification class number that is directly related to a Notification Class object within the initiating device. The Notification Class object is used to specify the handling and routing of events to one or more destinations. The Notification Class object defines the priorities to be used in event-notification messages, whether acknowledgment by an application process or human operator is required, and at what time periods during the week given destinations are to be used.

BACnet devices that support event notification are free to define any number of unique conditions that trigger alarm or event notifications. Alarms and events are broadly classified into one of three possible groups: fault, offnormal, and normal. A "fault" condition is a malfunction, nearly always representing a failure within the automation system itself. An "offnormal" condition is a condition within the system that is not normally expected or is outside the bounds of ideal operation. A "normal" condition is anything else.

Event-initiating objects may identify their "state" from moment to moment as one of any number of possibly unique event states. Notifications are triggered by the "transition" of conditions for an object, usually from one unique event state to another. A transition to a particular event state may be used to identify specific unique handling for the notification(s) generated by an object, for example, controlling the destination for a notification or whether the particular transition event should require acknowledgment. In these contexts, all transitions that result in a state that is not normal, and not a fault, are considered to be TO-OFFNORMAL transitions. Transitions to any fault state are considered to be TO-FAULT transitions. All other transitions are, by definition, TO-NORMAL transitions.

Events may be selectively identified as belonging to the category of "alarms" or "events." Event-initiating objects indicate this distinction through the Notify\_Type property. In BACnet, the singular distinction between alarms and all other events is whether the event will be reported by the GetAlarmSummary service or not. Alarms will be reported by the GetAlarmSummary service, while all other events will not be reported by GetAlarmSummary. In every other respect, BACnet makes no distinction between an alarm and an event.

None of the reporting mechanisms is preferred, as each addresses particular needs generally found in building automation and control systems. A given BACnet device may use any or all of these mechanisms to provide alarm and event management

functions. However, each mechanism dictates a standardized complement of services and/or objects that are used to realize their functions.

### **13.1 Change of Value Reporting**

Change of value (COV) reporting allows a COV-client to subscribe with a COV-server, on a permanent or temporary basis, to receive reports of some changes of value of some referenced property based on fixed criteria. If an object provides COV reporting, then changes of value of any subscribed-to properties of the object, in some cases based on programmable increments, trigger COV notifications to be sent to subscribing clients. Typically, COV notifications are sent to supervisory programs in COV-client devices or to operators or logging devices. Any object, proprietary or standard, may support COV reporting at the implementor's option.

COV subscriptions are established using the `SubscribeCOV` service or the `SubscribeCOVProperty` service. The subscription establishes a connection between the change of value detection and reporting mechanism within the COV-server device and a "process" within the COV-client device. Notifications of changes are issued by the COV-server when changes occur after the subscription has been established. The `ConfirmedCOVNotification` and `UnconfirmedCOVNotification` services are used by the COV-server to convey change notifications. The choice of confirmed or unconfirmed service is specified in the subscription.

When a BACnet standard object, of a type listed in Table 13-1, supports COV reporting it shall support COV reporting for the property as listed in Table 13-1. At the implementor's discretion, COV reporting may also be supported for any other property of the object. For properties listed in Table 13-1 that have a `REAL` datatype, the COV increment used to determine when to generate notifications will be the `COV_Increment` property of the object unless a `COV_Increment` parameter is supplied in the `SubscribeCOVProperty` service. For other properties that have a `REAL` datatype, the COV increment to use when not supplied with the `SubscribeCOVProperty` service shall be a local matter. This is to allow multiple subscribers that do not require a specific increment to use a common increment to allow for the reduction of the processing burden on the COV-server. The criteria for COV reporting for properties other than those listed in Table 13-1 is based on the datatype of the property subscribed to and is described in Table 13-1a.

If an object supports the `COV_Period` property and `COV_Period` is non-zero, it shall issue COV notifications to all subscribed recipients at the regular interval specified by `COV_Period`, in addition to the notifications initiated by the change of value of the monitored property. The value of the monitored property conveyed by the periodic COV notification shall be the basis for determining whether a subsequent COV notification is required by the change in value of the monitored property. If `COV_Period` is zero, the periodic notifications shall not be issued.

It is the responsibility of the COV-server to maintain the list of active subscriptions for each object that supports COV notification. This list of subscriptions shall be capable of holding at least a single subscription for each object that supports COV notification, although multiple subscriptions may be supported at the implementor's option. The list of subscriptions is network-visible through the device object's `Active_COV_Subscriptions` property. Subscriptions may be created with finite lifetimes, meaning that the subscription may lapse and be automatically canceled after a period of time. Optionally, the lifetime may be specified as infinite, meaning that no automatic cancellation occurs. However, the COV-server is not required to guarantee preservation of subscriptions across power failures or "restarts." Periodic resubscription is allowed and expected and shall simply succeed as if the subscription were new, extending the lifetime of the subscription.

The different standard objects that support standardized COV reporting use different criteria for determining that a "change of value" has occurred, which are summarized in Table 13-1. Proprietary object types, or other standard object types not listed in Table 13-1, that support COV reporting of the `Present_Value` property, should follow these criteria whenever possible. Any objects that may optionally provide COV support and the change of value algorithms they shall employ are summarized in Tables 13-1 and 13-1a.

**Table 13-1.** Standardized Objects That May Support COV Reporting

Object Type	Criteria	Properties Reported
Access Door	If Present_Value changes at all or Status_Flags changes at all or Door_Alarm_State changes at all (if the object has a Door_Alarm_State property)	Present_Value, Status_Flags, Door_Alarm_State (if the object has a Door_Alarm_State property)
Analog Input, Analog Output, Analog Value	If Present_Value changes by COV_Increment or Status_Flags changes at all	Present_Value, Status_Flags
Binary Input, Binary Output, Binary Value, Life Safety Point, Life Safety Zone, Multi-state Input, Multi-state Output, Multi-state Value	If Present_Value changes at all or Status_Flags changes at all	Present_Value, Status_Flags
Load Control	If Present_Value, Requested_Shed_Level, Start_Time, Shed_Duration, or Duty_Window changes at all	Present_Value, Status_Flags, Requested_Shed_Level, Start_Time, Shed_Duration, Duty_Window
Loop	If Present_Value changes by COV_Increment or Status_Flags changes at all	Present_Value, Status_Flags, Setpoint, Controlled_Variable_Value
Pulse Converter	If Present_Value changes by COV_Increment or Status_Flags changes at all or If COV_Period expires	Present_Value, Status_Flags, Update_Time

**Table 13-1a.** Criteria Used for COV Reporting of Properties Other Than Those Listed in Table 13-1.

Datatype	Criteria	Properties Reported
REAL	If the property changes by the increment (from the service if provided; otherwise, as determined by the device) or Status_Flags changes at all (if the object has a Status_Flags property)	The subscribed-to property, Status_Flags (if the object has a Status_Flags property)
All other datatypes	If the property changes at all or Status_Flags changes at all (if the object has a Status_Flags property)	The subscribed-to property, Status_Flags (if the object has a Status_Flags property)

## 13.2 Intrinsic Reporting

Intrinsic reporting allows a BACnet device to provide one or more alarm or event sources, intrinsic to the device, which generate alarm or event notifications that may be directed to one or more destinations. Certain BACnet standard objects may optionally support intrinsic reporting by providing optional properties for defining the type of alarm or event to be generated and options for handling and routing of the notifications. Internal status changes and alarms may also use intrinsic reporting to generate diagnostic notifications. Proprietary objects may support intrinsic reporting at the implementor's option. If a standard object provides intrinsic reporting, then changes of value of specific properties of the object, in some cases based on programmable criteria, or changes of status internal to the object trigger event notifications to be sent to one or more destinations based on notification class. Typically, event notifications are sent to operators or logging devices represented by "processes" within a notification-client device. The ConfirmedEventNotification and UnconfirmedEventNotification services are used by the notification-server to convey notifications.

The connection between the event detection and reporting mechanism within the device, which initiates the event notification, and the "processes" within one or more notification-client devices is made indirectly through a Notification Class object in the initiating device. The Notification Class object may be configured statically or dynamically in those devices that support the dynamic modification or creation of Notification Class objects. Multiple alarm or event-initiating objects may reference the same Notification Class object in a device. The notification class provides information to control the handling of the notification in the following ways:

- (a) by providing the priority to be used in the event notification, based on whether the event transition is TO-OFFNORMAL, TO-FAULT, or TO-NORMAL;
- (b) by specifying whether the event requires acknowledgment, based on whether the event transition is TO-OFFNORMAL, TO-FAULT, or TO-NORMAL;
- (c) by providing a specific destination for the event notification that is a (process, recipient) tuple, based on time of day, day of week, and type of event transition (TO-OFFNORMAL, TO-FAULT, or TO-NORMAL);
- (d) by providing an indication of whether confirmed or unconfirmed notification is to be used for a given destination.

Different object types use different standardized criteria for determining that an event has occurred. Proprietary object types that support intrinsic notification shall follow these criteria for determining when an event has occurred. Proprietary intrinsic reporting shall use the services described in 13.8 and 13.9. The standardized objects that may optionally provide intrinsic event notification support and the event types they shall employ are summarized in Table 13-2. The object properties are described in Clause 12.

The standard object types shown in Table 13-2 use standard event types for reporting the values of parameters relevant to the event. These values are returned in the 'Event Values' parameter of the ConfirmedEventNotification and UnconfirmedEventNotification services. The event type determines which set of values to return for each of the standard event types. These return values are summarized in Table 13-3. Proprietary object types that do not use one of the standard event types may return a list of property values instead.

In the case of Binary Input and Binary Value objects, the Alarm\_Value property specifies which of the two Present\_Value states shall be interpreted as OFFNORMAL. The opposing state shall be interpreted as NORMAL. Transitions to either or both states may generate notifications if the corresponding flags are set in Event\_Enable.

In the case of Multi-state Input, Multi-state Value, Life Safety Point, and Life Safety Zone objects the Alarm\_Values property lists each of the possible Present\_Value states that shall be interpreted as OFFNORMAL. The Fault\_Values property lists each of the possible Present\_Value states that shall be interpreted as FAULT. All other Present\_Value states shall be interpreted as NORMAL. Transitions to any of the states may generate notifications if the corresponding flags are set in Event\_Enable.

In the case of Life Safety Zone and Life Safety Point, the Life\_Safety\_Alarm\_Values property lists each of the possible Present\_Value states that shall be interpreted as LIFE\_SAFETY\_ALARM. The Alarm\_Values property lists each of the possible Present\_Value states that shall be interpreted as OFFNORMAL. The Fault\_Values property lists each of the possible Present\_Value states that shall be interpreted as FAULT. All other Present\_Value states shall be interpreted as NORMAL. Transitions to any of the states may generate notifications if the corresponding flags are set in Event\_Enable.

**Table 13-2.** Standard Objects That May Support Intrinsic Reporting

Object Type	Criteria	Event Type
Access Door	If Door_Alarm_State changes to a new state for longer than Time_Delay AND the new transition is enabled in Event_Enable	CHANGE_OF_STATE
Binary Input, Binary Value, Multi-state Input, Multi-state Value	If Present_Value changes to a new state for longer than Time_Delay AND the new transition is enabled in Event_Enable	CHANGE_OF_STATE
Binary Output, Multi-state Output	If Present_Value differs from Feedback_Value for longer than Time_Delay AND the new transition is enabled in Event_Enable	COMMAND_FAILURE
Load Control	If Present_Value equals SHED_NON_COMPLIANT for longer than Time_Delay AND the new transition is enabled in Event_Enable	COMMAND_FAILURE
Loop	If the absolute difference between Setpoint and Controlled_Variable_Value exceeds Error_Limit for longer than Time_Delay AND the new transition is enabled in Event_Enable	FLOATING_LIMIT
Analog Input, Analog Output, Analog Value, Pulse Converter	If Present_Value exceeds range between High_Limit and Low_Limit for longer than Time_Delay AND the new transition is enabled in Event_Enable and Limit_Enable, OR Present_Value returns within the High_Limit - Deadband to Low_Limit + Deadband range for longer than Time_Delay AND the new transition is enabled in Event_Enable and Limit_Enable	OUT_OF_RANGE
Event Log, Trend Log, Trend Log Multiple	If Event_State is NORMAL and Records_Since_Notification is greater than or equal to Notification_Threshold	BUFFER_READY
Life Safety Point, Life Safety Zone	If Present_Value changes to become equal to one of the values in the Life_Safety_Alarm_Values list AND remains equal to a value within the Life_Safety_Alarm_Values list for longer than Time_Delay AND the new transition is enabled in Event-Enable  OR  If Present_Value changes to become equal to one of the values in the Alarm_Values list AND remains equal to a value within the Alarm_Values list for longer than Time_Delay AND the new transition is enabled in Event-Enable OR  Mode changes	CHANGE_OF_LIFE_SAFETY
Accumulator	If Pulse_Rate exceeds range from Low_Limit through High_Limit for longer than Time_Delay AND the new transition is enabled in Event_Enable and Limit_Enable, OR Pulse_Rate returns to range from Low_Limit through High_Limit for longer than Time_Delay AND the new transition is enabled in Event_Enable and Limit_Enable	UNSIGNED_RANGE

**Table 13-3.** Standard Object Property Values Returned in Notifications

Object	Event Type	Notification Parameters	Referenced Object's Properties
Access Door	CHANGE_OF_STATE	New_State Status_Flags	Door_Alarm_State Status_Flags
Binary Input, Binary Value, Multi-state Input, Multi-state Value	CHANGE_OF_STATE	New_State Status_Flags	Present_Value Status_Flags
Binary Output, Multi-state Output	COMMAND_FAILURE	Command_Value Status_Flags Feedback_Value	Present_Value Status_Flags Feedback_Value
Load Control	COMMAND_FAILURE	Command_Value Status_Flags Feedback_Value	Requested_Shed_Level Status_Flags Actual_Shed_Level
Loop	FLOATING_LIMIT	Referenced_Value Status_Flags Setpoint_Value Error_Limit	Controlled_Variable_Value Status_Flags Setpoint Error_Limit
Analog Input, Analog Output, Analog Value, Pulse Converter	OUT_OF_RANGE	Exceeding_Value Status_Flags Deadband Exceeded_Limit	Present_Value Status_Flags Deadband Low_Limit or High_Limit
Event Log, Trend Log, Trend Log Multiple	BUFFER_READY	Buffer_Property Previous_Notification Current_Notification	BACnetDeviceObjectPropertyReference <sup>1</sup> Last_Notify_Record Total_Record_Count
Life Safety Point, Life Safety Zone	CHANGE_OF_LIFE_SAFETY	New_State New_Mode Status_Flags Operation_Expected	Present_Value Mode Status_Flags Operation_Expected
Accumulator	UNSIGNED_RANGE	Exceeding_Value Status_Flags Exceeded_Limit	Pulse_Rate Status_Flags Low_Limit or High_Limit

<sup>1</sup> This parameter conveys a reference to the Log\_Buffer property of the object.

**Table 13-4.** Notification Parameters for Standard Event Types

Event Type	Notification Parameters	Description
CHANGE_OF_BITSTRING	Referenced_Bitstring Status_Flags	The new value of the referenced bitstring property. The Status_Flags of the referenced object.
CHANGE_OF_STATE	New_State Status_Flags	The new value of the referenced property. The Status_Flags of the referenced object.
CHANGE_OF_VALUE	New_Value Status_Flags	The new value of the referenced property. The Status_Flags of the referenced object.
COMMAND_FAILURE	Command_Value Status_Flags Feedback_Value	The value of the property that was commanded. The Status_Flags of the referenced object. The value that differs from the Command_Value.
FLOATING_LIMIT	Referenced_Value Status_Flags Setpoint_Value Error_Limit	The new value of the referenced property. The Status_Flags of the referenced object. The value of the setpoint reference. The difference limit that was exceeded.
OUT_OF_RANGE	Exceeding_Value Status_Flags Deadband Exceeded_Limit	The value that exceeded a limit. The Status_Flags of the referenced object. The deadband used for limit checking. The limit that was exceeded.
BUFFER_READY	Buffer_Property Previous_Notification Current_Notification	Reference to the buffer property. Current_Notification parameter of the previous notification sent or 0 if no previous notification has been sent. SequenceNumber of the record that triggered this notification.
CHANGE_OF_LIFE_SAFETY	New_State New_Mode Status_Flags Operation_Expected	The new value of the referenced property The new mode of the referenced object The Status_Flags of the referenced object The next operation requested by the referenced object.
UNSIGNED_RANGE	Exceeding_Value Status_Flags Exceeded_Limit	The value that exceeded a limit The Status_Flags of the referenced object The limit that was exceeded

### 13.3 Algorithmic Change Reporting

Algorithmic change reporting enables a BACnet device to provide one or more alarm or event sources, defined by Event Enrollment objects, to generate alarm or event notifications that may be directed to one or more destinations. Any of the standardized algorithms may be used to establish criteria for change reporting. Once established, occurrences of change may be reported to one or more destinations based on further criteria. Changes of value of specific properties of an object may be programmed to trigger event notifications to be sent to one or more destinations based on notification class. Typically, event notifications are sent to application programs represented by processes within a notification-client device. The ConfirmedEventNotification and UnconfirmedEventNotification services are used by the notification-server to convey notifications.

The object(s) whose properties are referred to is known as the Reference Object(s). The criteria used to ascertain that an event has occurred are determined by the Event Type.

The following event type algorithms are specified in this standard because of their widespread occurrence in building automation and control systems. They are:

- (a) CHANGE\_OF\_BITSTRING
- (b) CHANGE\_OF\_STATE
- (c) CHANGE\_OF\_VALUE
- (d) COMMAND\_FAILURE
- (e) FLOATING\_LIMIT
- (f) OUT\_OF\_RANGE
- (g) BUFFER\_READY
- (h) CHANGE\_OF\_LIFE\_SAFETY
- (i) UNSIGNED\_RANGE

Events are based on algorithms applied to the properties of specific objects called "reference objects." Such a property is called a "referenced property." These properties are referenced by the Object\_Property\_Reference of an Event Enrollment object. The parameters required to compute the current state of the event are contained in the Event\_Parameters property of the same Event Enrollment object. The relationship between the Event\_Type, Event\_State, and the Event\_Parameters are summarized in Table 12-14. Each parameter in the Event\_Parameters property is described in detail in 12.11.7. The algorithms that are used to determine the Event\_State of each event type are specified in this subclause. Figure 13-11 shows an example of the relationships between Event Enrollment objects, referenced objects, and Notification Class objects.

Event enrollment objects shall use standard event types for reporting the values of parameters relevant to the event. These values are returned in the 'Event Values' parameter of the ConfirmedEventNotification and UnconfirmedEventNotification services. The event type determines which set of values to return for each of the standard event types. These return values are summarized in Table 13-4. Event Enrollment objects must report proprietary event algorithms using the extended-event notification type.

If the referenced object and property is any of those appearing in Table 13-3, then the value of the Status\_Flags property of the referenced object shall be conveyed by the 'status-flags' parameter of the ConfirmedEventNotification or UnconfirmedEventNotification service request issued by the Event Enrollment object. A change in the FAULT flag (independent of any Time\_Delay notification parameter) of the referenced object's Status\_Flags property shall be treated as if the referenced object's Event\_State property had made the associated transition to or from the FAULT state and a notification issued if notification for the resultant transition is enabled.


When an Event Enrollment object is created, its Event\_State property shall be initialized to NORMAL.

If any of the parameters required to process the event algorithm are missing or inconsistent with the Event\_Type, the Event Enrollment object shall become disabled and all the bit flags in the Event\_Enable property shall be cleared.

### 13.3.1 CHANGE\_OF\_BITSTRING Algorithm

A CHANGE\_OF\_BITSTRING occurs when the value of the referenced property becomes equal to one of the values contained in the List\_Of\_Bitstring\_Values after applying the Bitmask, and that value remains equal for Time\_Delay seconds. For the purpose of event notification, CHANGE\_OF\_BITSTRING generates a TO-OFFNORMAL transition.

A CHANGE\_OF\_BITSTRING clears when the value of the referenced property is no longer equal to one of the values contained in the List\_Of\_Bitstring\_Values after applying the Bitmask, and that value remains not equal for Time\_Delay seconds. The clearing of a CHANGE\_OF\_BITSTRING generates a TO-NORMAL transition. See Figure 13-1.

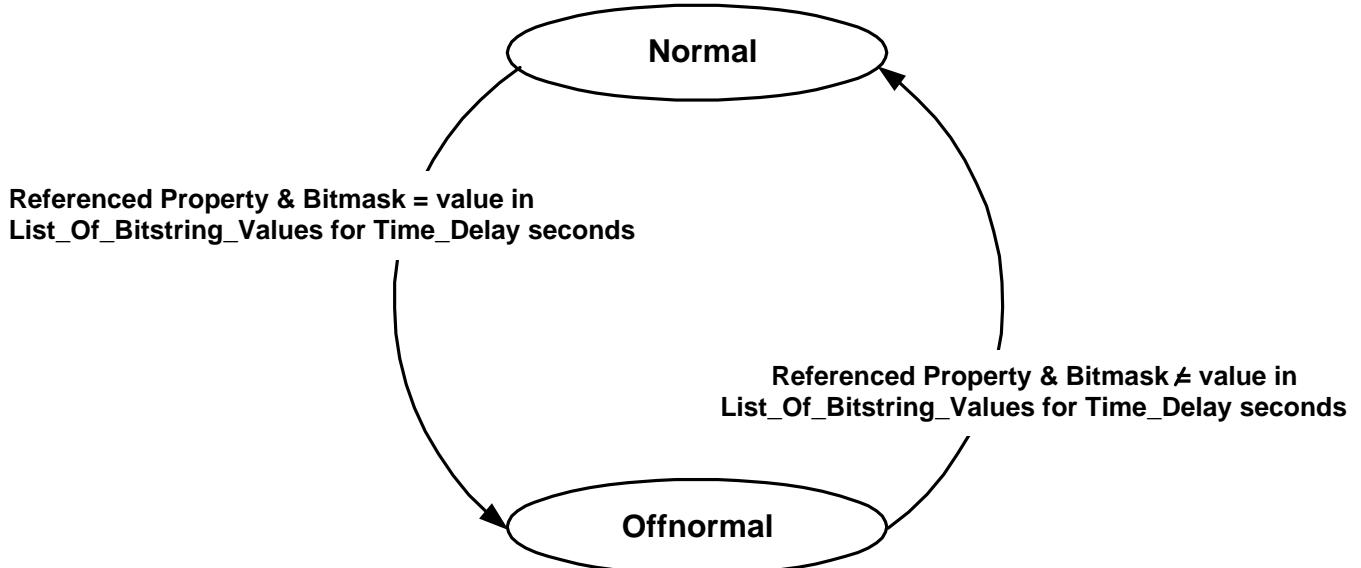


**Figure 13-1.** CHANGE\_OF\_BITSTRING algorithm.

### 13.3.2 CHANGE\_OF\_STATE Algorithm

A CHANGE\_OF\_STATE occurs when the value of the referenced property becomes equal to one of the values contained in the List\_Of\_Values, and this value remains equal for Time\_Delay seconds. This type of event may only be applied to properties that have discrete or enumerated values, including Boolean. For the purposes of event notification, CHANGE\_OF\_STATE events generate a TO-OFFNORMAL transition.


A CHANGE\_OF\_STATE event clears when the value of the referenced property is no longer equal to one of the values contained in the List\_Of\_Values, and that value remains not equal for Time\_Delay seconds. The clearing of a CHANGE\_OF\_STATE generates a TO-NORMAL transition. See Figure 13-2.

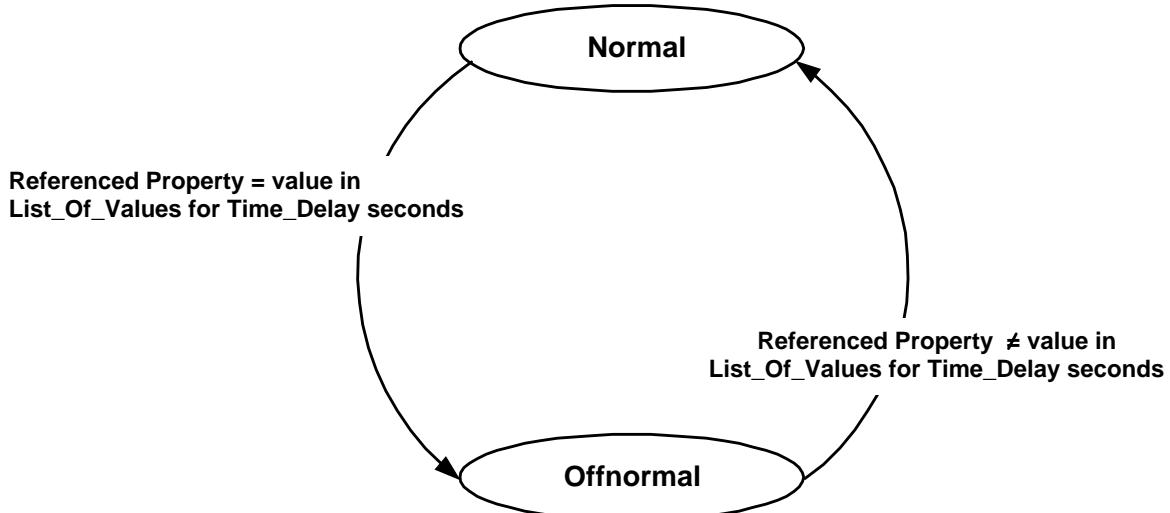

**Figure 13-2.** CHANGE\_OF\_STATE algorithm.


### 13.3.3 CHANGE\_OF\_VALUE Algorithm

A CHANGE\_OF\_VALUE occurs when the absolute value of a referenced property changes by an amount equal to or greater than the Referenced\_Property\_Increment, and this condition remains for Time\_Delay seconds. The initialization of the referenced property value used in the algorithm shall be a local matter, but the value of the referenced property at the time a CHANGE\_OF\_VALUE occurs shall be used in carrying out the algorithm until the next CHANGE\_OF\_VALUE. For the purposes of event notification, CHANGE\_OF\_VALUE generates TO-NORMAL transitions. See Figure 13-3.

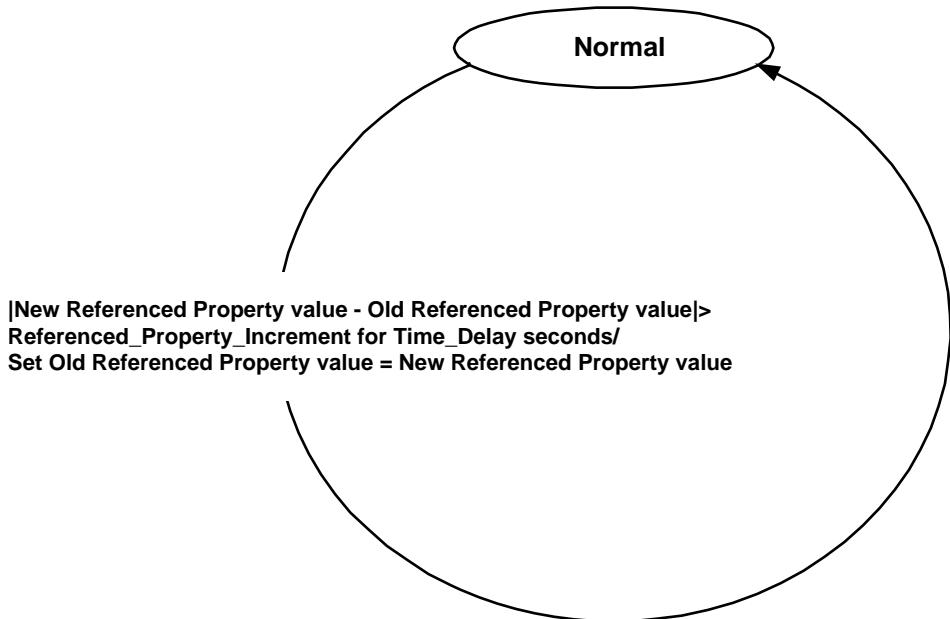

**Figure 13-3.** CHANGE\_OF\_VALUE algorithm.

If the referenced property is a bitstring datatype, then the CHANGE\_OF\_VALUE occurs when any of the bits defined in the Bitmask parameter change state and remain changed for Time\_Delay seconds. See Figure 13-4.

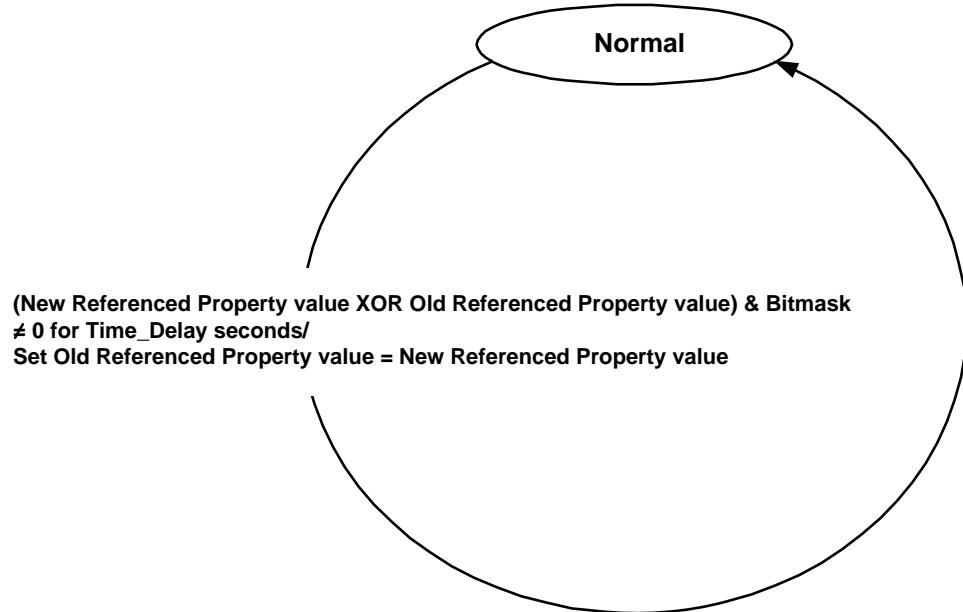


**Figure 13-4.** CHANGE\_OF\_VALUE algorithm (Bitstring).

#### 13.3.4 COMMAND\_FAILURE Algorithm

A COMMAND\_FAILURE occurs if the values of the referenced property and the Feedback\_Property\_Reference disagree for a time period greater than the Time\_Delay parameter. It may be used, for example, to verify that a process change has occurred after writing to a property. This type of event shall only be applied to properties that take on discrete values. For the purpose of event notification, COMMAND\_FAILURE generates a TO-OFFNORMAL transition.

A COMMAND\_FAILURE clears if, at any time subsequent to its occurrence, the value of the referenced property and the Feedback\_Property\_Reference become equal for a time period greater than the Time\_Delay parameter. The clearing of a COMMAND\_FAILURE generates a TO-NORMAL transition. See Figure 13-5.

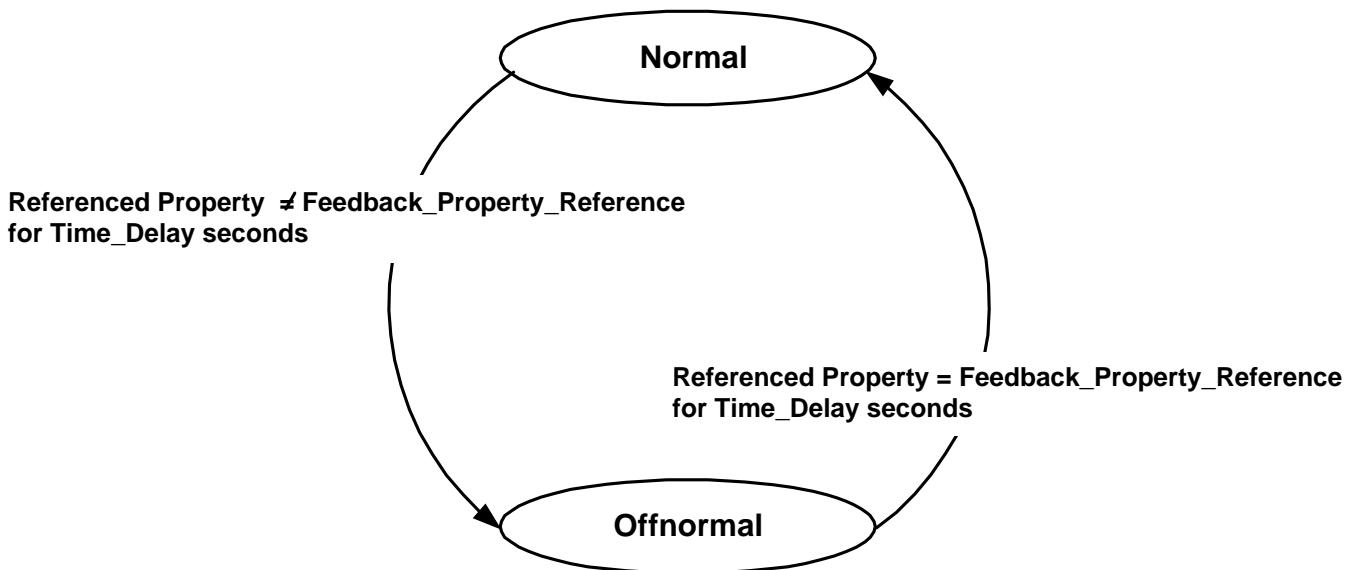


**Figure 13-5.** COMMAND\_FAILURE algorithm.

### 13.3.5 FLOATING\_LIMIT Algorithm

A FLOATING\_LIMIT occurs if the referenced property leaves a range of values determined by the current value of the Setpoint\_Reference, High\_Diff\_Limit, Low\_Diff\_Limit, and Deadband.


Starting in the NORMAL state, if the value of the referenced property becomes greater than Setpoint\_Reference + High\_Diff\_Limit for a period of time greater than the Time\_Delay parameter, the Event Enrollment object sets the Event\_State property to the HIGH\_LIMIT state and generates a TO-OFFNORMAL transition. The Event Enrollment object generates a TO-NORMAL transition and sets the Event\_State property to NORMAL when the referenced property returns to a value less than Setpoint\_Reference + High\_Diff\_Limit - Deadband for a period of time greater than the Time\_Delay parameter. In each case, the event notification shall show an 'Event Type' of FLOATING\_LIMIT.

Starting in the NORMAL state, if the value of the referenced property becomes less than Setpoint\_Reference - Low\_Diff\_Limit for a period greater than the Time\_Delay parameter, the Event Enrollment object sets the Event\_State property to the LOW\_LIMIT state and generates a TO-OFFNORMAL transition. The Event Enrollment object generates a TO-NORMAL transition and sets the Event\_State property to NORMAL when the referenced property returns to a value greater than Setpoint\_Reference - Low\_Diff\_Limit + Deadband for a period of time greater than the Time\_Delay parameter. In each case, the event notification shall show an EventType of FLOATING\_LIMIT. See Figure 13-6.

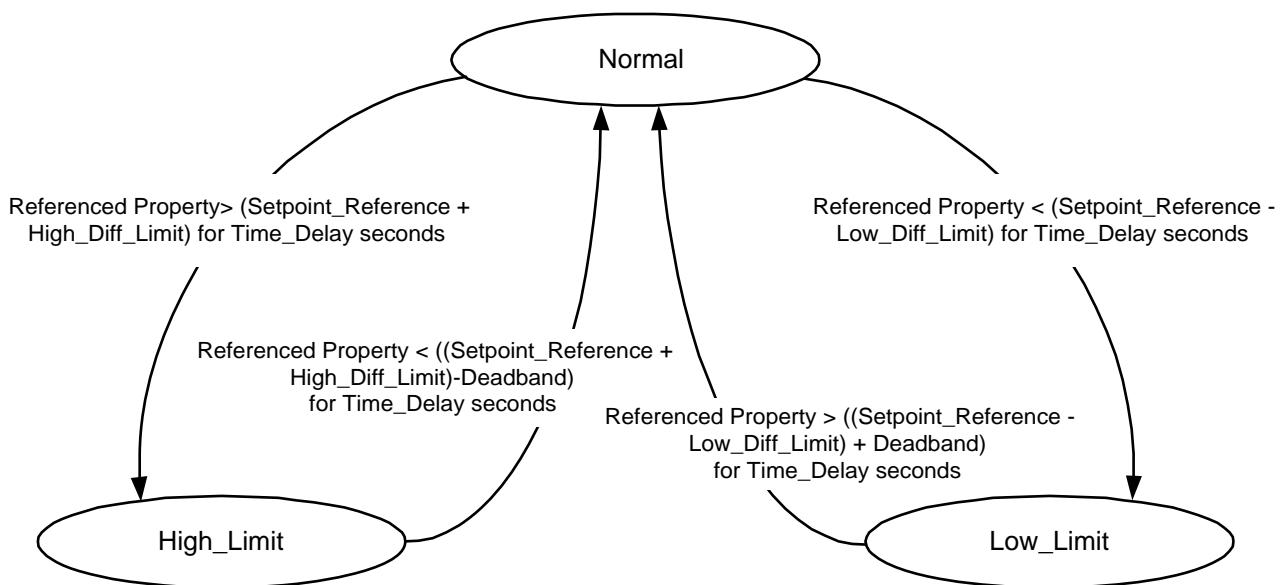

**Figure 13-6.** FLOATING\_LIMIT algorithm.

Figure 13-7 shows the relationship of the various parameters used in the FLOATING\_LIMIT algorithm.

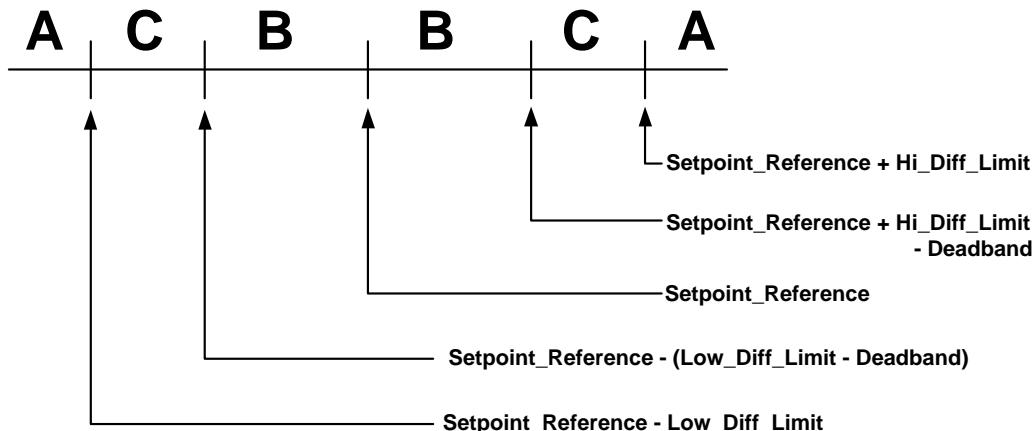

Range A: Referenced property entering this range constitutes a TO-OFFNORMAL transition.

Range B: Referenced property entering this range after being in A constitutes a TO-NORMAL transition.

Range C: Deadband range. Referenced property must transition to range B before a TO-NORMAL transition occurs.

Figure 13-7. FLOATING\_LIMIT algorithm.

### 13.3.6 OUT\_OF\_RANGE Algorithm

An OUT\_OF\_RANGE occurs if the referenced property leaves a range of values defined by the High\_Limit and Low\_Limit parameters and remains there for Time\_Delay seconds. If the transition is to a value above the High\_Limit or below the Low\_Limit, the Event Enrollment object generates a TO-OFFNORMAL transition. The event notification shall show an 'Event Type' of OUT\_OF\_RANGE.

An OUT\_OF\_RANGE clears when the referenced property attains a value greater than the (Low\_Limit + Deadband) or a value less than the (High\_Limit - Deadband) and remains there for Time\_Delay seconds. Note that the limit values may be Boolean TRUE or FALSE as well as analog values. The Event Enrollment object generates a TO-NORMAL transition. The event notification shall show an 'Event Type' of OUT\_OF\_RANGE. See Figure 13-8.

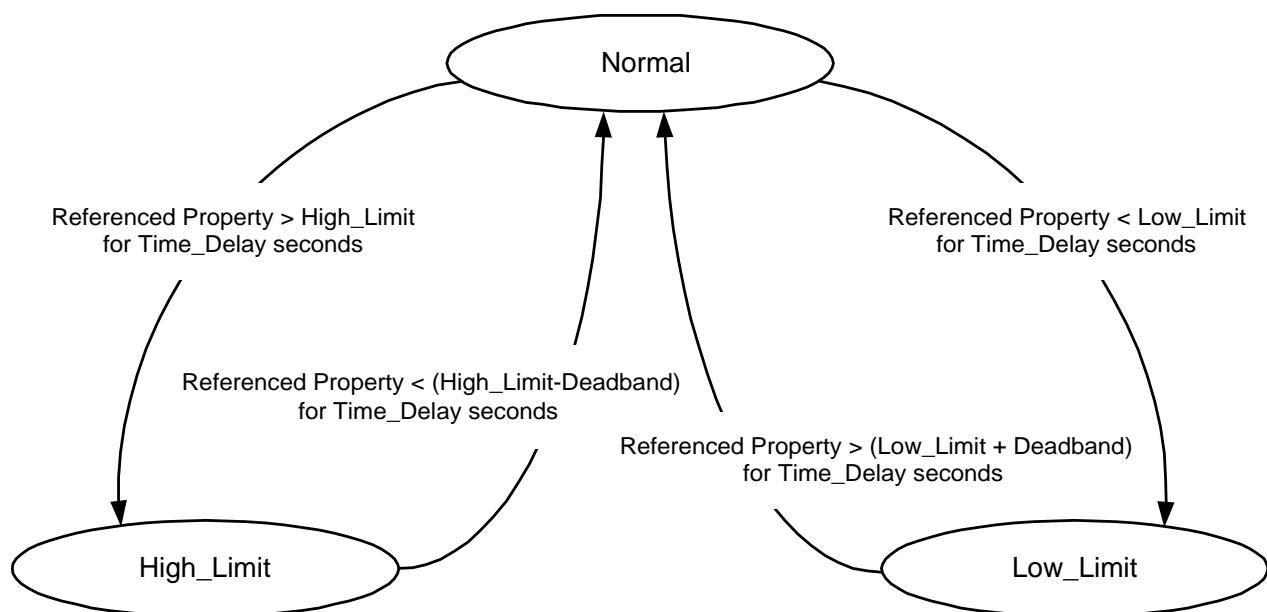


Figure 13-8. OUT\_OF\_RANGE algorithm.

### 13.3.7 BUFFER\_READY Algorithm

A BUFFER\_READY occurs when the number of records specified by Notification\_Threshold have been entered into the log since the start of operation or the previous notification, whichever is most recent. The number of records collected is determined by the formula Total\_Record\_Count – Previous\_Notification\_Count, if Total\_Record\_Count is greater than or equal to Previous\_Notification\_Count, otherwise it is determined by the formula Total\_Record\_Count – Previous\_Notification\_Count +  $2^{32} - 1$ . Upon completion of the notification, Previous\_Record\_Count is set to the value of Total\_Record\_Count that caused the notifications to occur.

Previous\_Notification\_Count is an internal variable, of type Unsigned32, which maintains the value of Total\_Record\_Count at which the most recent notification took place. Upon initialization it shall be set to the value of the Total\_Record\_Count property in the object referenced by Object\_Property\_Reference.

For the purposes of event notification, the BUFFER\_READY event generates TO-NORMAL transitions.

### 13.3.8 CHANGE\_OF\_LIFE\_SAFETY Algorithm

A CHANGE\_OF\_LIFE\_SAFETY occurs when the value of the referenced property becomes equal to any of the values in the List\_Of\_Life\_Safety\_Alarm\_Values, and remains within the set of values in this list for Time\_Delay seconds. The resulting event state is LIFE\_SAFETY\_ALARM.

A CHANGE\_OF\_LIFE\_SAFETY also occurs when the value of the referenced property becomes equal to any of the values in the List\_Of\_Alarm\_Values, and remains within the set of values in this list for Time\_Delay seconds. The resulting event state is OFFNORMAL.

A CHANGE\_OF\_LIFE\_SAFETY also occurs for any change of the property referred to by the Mode\_Property\_Reference.

For the purpose of event notification, CHANGE\_OF\_LIFE\_SAFETY events generate a TO-OFFNORMAL transition.

The CHANGE\_OF\_LIFE\_SAFETY algorithm is depicted in Figure 13-9

### 13.3.9 UNSIGNED\_RANGE Algorithm

An UNSIGNED\_RANGE occurs if the referenced property leaves the range of values from Low\_Limit through High\_Limit parameters and remains there for Time\_Delay seconds. If the transition is to a value above High\_Limit or below Low\_Limit, the Event Enrollment object generates a TO-OFFNORMAL transition. The event notification shall show an 'Event Type' of UNSIGNED\_RANGE.

An UNSIGNED\_RANGE clears when the referenced property attains a value from Low\_Limit through High\_Limit and remains there for Time\_Delay seconds. The Event Enrollment object generates a TO-NORMAL transition. The event notification shall show an 'Event Type' of UNSIGNED\_RANGE. See Figure 13-10.

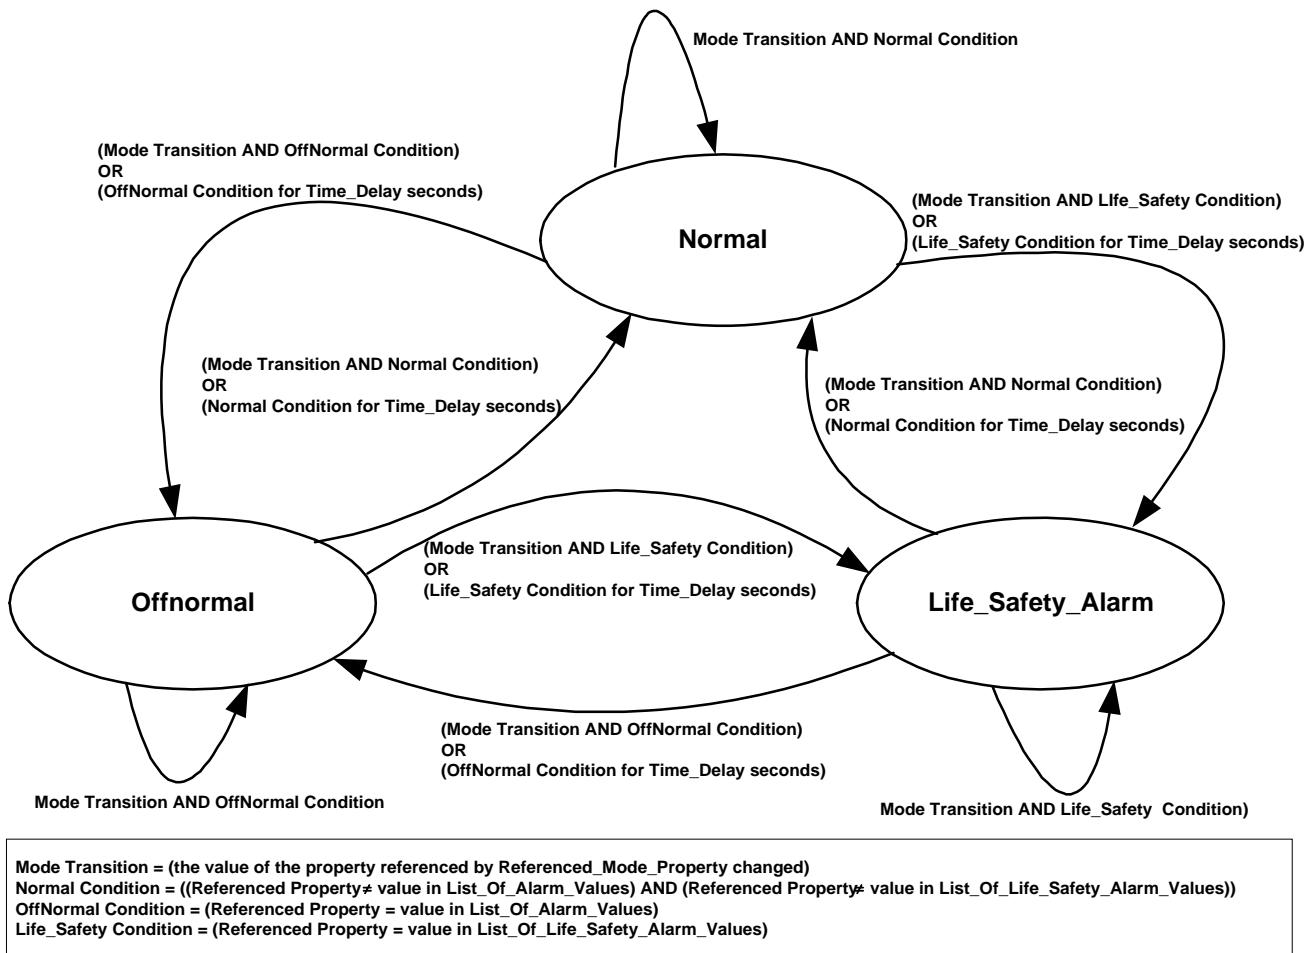


Figure 13-9. CHANGE\_OF\_LIFE\_SAFETY algorithm.

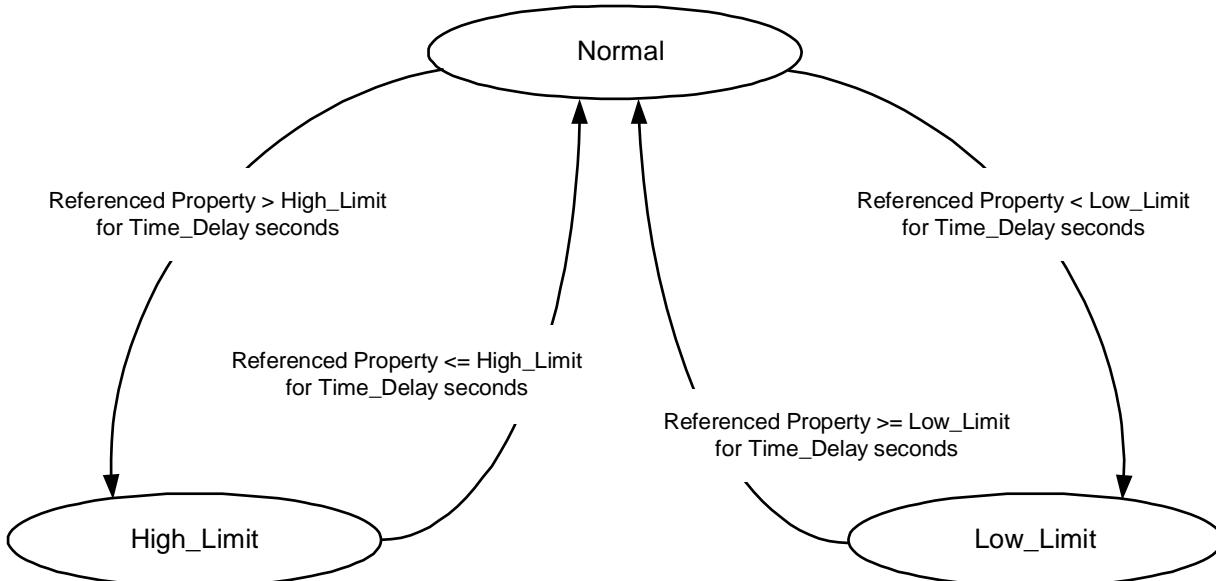


Figure 13-10. UNSIGNED\_RANGE algorithm.

## 13. ALARM AND EVENT SERVICES

### Alarm and Event Occurrence and Notification

#### 13.4 Alarm and Event Occurrence and Notification


The connection between the occurrence of an event and the transmission of a notification message to one or more recipients is established in one of several ways, depending on the type of reporting desired. COV events are connected to one or more subscribers through the use of the SubscribeCOV service. Intrinsic events are connected to one or more recipients indirectly through association with a Notification Class object. Algorithmic change events are connected to one or more recipients by the creation of an Event Enrollment object.

The criteria for event occurrence detection are specified through properties of those objects that may generate event notifications and using parameters of the SubscribeCOV service. These properties are described under the particular objects that may generate events, as summarized in Table 13-2, and in the Event Enrollment object. All objects that generate events have a property that indicates the state of the object with respect to alarm and event handling, and each such object may be explicitly enabled or disabled for reporting of specific events.

Intrinsic object-generated events, and events generated by Event Enrollment objects, may be controlled by a Notification Class object that defines their handling options.

COV and event notifications may be specified to use either confirmed or unconfirmed services for notification messages. By providing two kinds of notification mechanisms, BACnet allows the application designer to decide the relative importance of each event and whether or not notification of its occurrence is essential or merely desirable. In the former case, notification can be carried out with a confirmed service and repeated for as many recipients as required. In the latter case, an unconfirmed service using a broadcast or multicast address may be used.

Notification Class objects specify the destination devices for notification messages using BACnetRecipients. The recipients may be individual devices, groups of devices with a common multicast address, or all devices reachable by a broadcast address. If a broadcast is used, the scope may be limited to all devices on a single network or it may be extended to encompass all devices on a BACnet internetwork. See Clause 6.

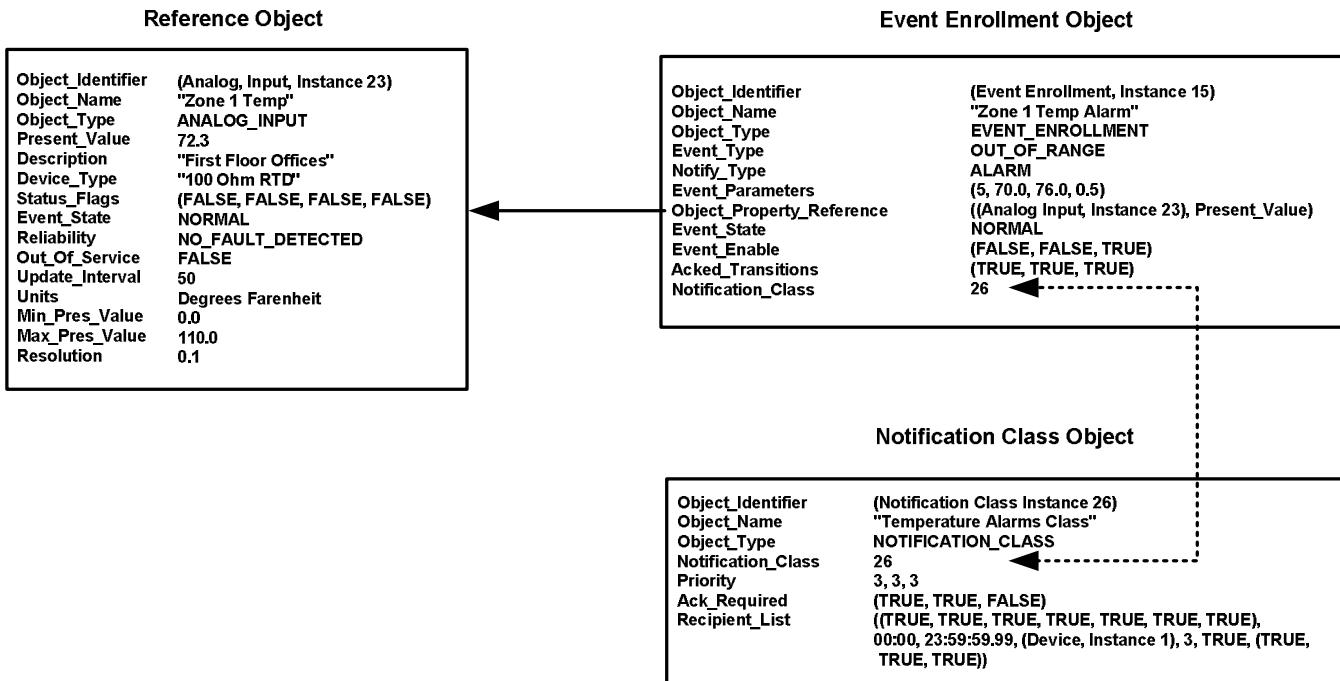

**Figure 13-11.** Example of an Event Enrollment.

The event notification services contain a 'Time Stamp' parameter that indicates the chronological order of events. This 'Time Stamp' may be the actual time as determined by the local device clock or, if the device has no clock, a sequence number.

Sequence numbers are required to increase monotonically up to their maximum value, at which point the number "wraps around" to zero. A device may have a single sequence number for all event-initiating objects, or it may have a separate sequence number for each object.

Eleven services are defined specifically for event management:

- (a) AcknowledgeAlarm
- (b) ConfirmedCOVNotification
- (c) UnconfirmedCOVNotification
- (d) ConfirmedEventNotification
- (e) UnconfirmedEventNotification
- (f) GetAlarmSummary
- (g) GetEnrollmentSummary
- (h) GetEventInformation
- (i) LifeSafetyOperation
- (j) SubscribeCOV
- (k) SubscribeCOVProperty

#### 13.4.1 Alarm and Event Priority Classification

Alarms and events traversing the BACnet network need prioritization to assure that important information reaches its destination and is acted upon quickly. To assure alarm prioritization at the network level, the Network Priority as defined in 6.2.2 shall be set as a function of the alarm and event priority as defined in Table 13-5. Annex M provides additional clarity and examples of specific messages and priorities.

**Table 13-5. Alarm and Event Priority - Network Priority Association**

<b>Alarm and Event Priority</b>	<b>Network Priority</b>
00 – 63	Life Safety message
64 - 127	Critical Equipment message
128 - 191	Urgent message
192 - 255	Normal message

## 13.5 AcknowledgeAlarm Service

In some systems a device may need to know that an operator has seen the alarm notification. The AcknowledgeAlarm service is used by a notification-client to acknowledge that a human operator has seen and responded to an event notification with 'AckRequired' = TRUE. Ensuring that the acknowledgment actually comes from a person with appropriate authority is a local matter. This service may be used in conjunction with either the ConfirmedEventNotification service or the UnconfirmedEventNotification service.

### 13.5.1 Structure

The structure of the AcknowledgeAlarm service primitives is shown in Table 13-6. The terminology and symbology used in this table are explained in 5.6.

**Table 13-6.** Structure of AcknowledgeAlarm Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Acknowledging Process Identifier	M	M(=)		
Event Object Identifier	M	M(=)		
Event State Acknowledged	M	M(=)		
Time Stamp	M	M(=)		
Acknowledgment Source	M	M(=)		
Time Of Acknowledgment	M	M(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M(=)

#### 13.5.1.1 Argument

This parameter shall convey the parameters for the AcknowledgeAlarm confirmed service request.

#### 13.5.1.2 Acknowledging Process Identifier

This parameter, of type Unsigned32, shall specify the 'Process Identifier' parameter that identifies the acknowledging process. The assignment of acknowledging process identifiers is a local matter.

#### 13.5.1.3 Event Object Identifier

This parameter, of type BACnetObjectIdentifier, shall specify the 'Event Object Identifier' parameter of the event notification to which this acknowledgment is a response. This is the same object that initiated the event notification that is being acknowledged.

#### 13.5.1.4 Event State Acknowledged

This parameter, of type BACnetEventState, shall match the value of the 'To State' from the event notification that is being acknowledged. The 'Event State Acknowledged' matches the 'To State' if they are equal, or if 'Event State Acknowledged' is OFFNORMAL and 'To State' is any "offnormal" state (such as HIGH\_LIMIT). This parameter is included so that the remote device that initiated the event notification can ensure that the state being acknowledged is recorded in the Acked\_Transitions property of the initiating object.

An 'Event State Acknowledged' of OFFNORMAL shall match any off-normal event state.

#### 13.5.1.5 Time Stamp

This parameter, of type BACnetTimeStamp, shall convey the same 'Time Stamp' that was received in the event notification that is being acknowledged by this service. The 'Time Stamp' is used by the recipient of this service request to identify the event notification that is being acknowledged in the case when more than one has been issued with the same 'To State'.

### 13.5.1.6 Acknowledgment Source

This parameter, of type CharacterString, shall specify the identity of the operator or process that is acknowledging the event notification.

### 13.5.1.7 Time Of Acknowledgment

This parameter, of type BACnetTimeStamp, shall specify the time that the operator or process acknowledged the event notification.

### 13.5.1.8 Result(+)

The 'Result(+)’ parameter shall indicate that the service request succeeded and the alarm is marked as acknowledged.

### 13.5.1.9 Result(-)

The 'Result(-)' parameter shall indicate that the service request failed. The reason for failure is specified by the 'Error Type' parameter.

### 13.5.1.10 Error Type

This parameter consists of two components: (1) 'Error Class' and (2) 'Error Code'. See Clause 18.

## 13.5.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall attempt to locate the specified object. If the object exists and if the 'Time Stamp' parameter matches the most recent time for the event being acknowledged, then the bit in the Acked\_Transitions property of the object that corresponds to the value of the 'Event State Acknowledged' parameter shall be set to 1, a 'Result(+)’ primitive shall be issued, and an event notification with a 'Notify Type' parameter equal to ACK\_NOTIFICATION shall be issued. Otherwise, a 'Result(-)' primitive shall be issued. An acknowledgment notification shall use the same type of service (confirmed or unconfirmed) directed to the same recipients to which the original confirmed or unconfirmed event notification was sent.

The ‘Error Class’ and ‘Error Code’ to be returned for specific situations are as follows:

<u>Situation</u>	<u>Error Class</u>	<u>Error Code</u>
The object does not exist.	OBJECT	UNKNOWN_OBJECT
The object exists but does not support or is not configured for event generation.	OBJECT	NO_ALARM_CONFIGURED
The requesting BACnet device does not have appropriate authorization to Acknowledge this alarm.	SERVICES	SERVICE_REQUEST_DENIED
The timestamp provided in the AcknowledgeAlarm message does not match with the latest timestamp for the transition being acknowledged.	SERVICES	INVALID_TIMESTAMP
The ‘Event State Acknowledged’ does not match the ‘To State’ parameter of the original Event Notification message. An ‘Event State Acknowledged’ of OFFNORMAL shall match any off-normal event state.	SERVICES	INVALID_EVENT_STATE

### 13.6 ConfirmedCOVNotification Service

The ConfirmedCOVNotification service is used to notify subscribers about changes that may have occurred to the properties of a particular object. Subscriptions for COV notifications are made using the SubscribeCOV service or the SubscribeCOVProperty service.

#### 13.6.1 Structure

The structure of the ConfirmedCOVNotification service primitives is shown in Table 13-7. The terminology and symbology used in this table are explained in 5.6.

**Table 13-7. Structure of ConfirmedCOVNotification Service Primitives**

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Subscriber Process Identifier	M	M(=)		
Initiating Device Identifier	M	M(=)		
Monitored Object Identifier	M	M(=)		
Time Remaining	M	M(=)		
List of Values	M	M(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M(=)

#### 13.6.1.1 Argument

This parameter shall convey the parameters for the ConfirmedCOVNotification service request.

#### 13.6.1.2 Subscriber Process Identifier

This parameter, of type Unsigned32, shall convey a numeric "handle" meaningful to the subscriber. This handle shall be used to identify the process within the COV client that should receive the notification.

#### 13.6.1.3 Initiating Device Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the Device Object\_Identifier of the device that initiated the ConfirmedCOVNotification service request.

#### 13.6.1.4 Monitored Object Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the Object\_Identifier of the object that has changed.

#### 13.6.1.5 Time Remaining

This parameter, of type Unsigned, shall convey the remaining lifetime of the subscription in seconds. A value of zero shall indicate an indefinite lifetime without automatic cancellation.

#### 13.6.1.6 List of Values

This parameter shall convey a list of one or more property values whose contents depends on the type of object being monitored. Table 13-1 summarizes the BACnet standard objects and those property values that shall be returned in the 'List of Values' parameter when those objects are enabled for COV reporting. The property values are returned in the order shown in Table 13-1.

#### 13.6.1.7 Result(+)

The 'Result(+)’ parameter shall indicate that the requested service has succeeded.

### 13.6.1.8 Result(-)

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for failure shall be specified by the 'Error Type' parameter.

#### 13.6.1.8.1 Error Type

This parameter shall consist of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

### 13.6.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall take whatever local actions have been assigned to the indicated COV and issue a 'Result(+)’ service primitive. If the service request cannot be executed, a 'Result(-)' service primitive shall be issued indicating the error encountered.

### 13.7 UnconfirmedCOVNotification Service

The UnconfirmedCOVNotification Service is used to notify subscribers about changes that may have occurred to the properties of a particular object, or to distribute object properties of wide interest (such as outside air conditions) to many devices simultaneously without a subscription. Subscriptions for COV notifications are made using the SubscribeCOV service. For unsubscribed notifications, the algorithm for determining when to issue this service is a local matter and may be based on a change of value, periodic updating, or some other criteria.

#### 13.7.1 Structure

The structure of the UnconfirmedCOVNotification service primitive is shown in Table 13-8. The terminology and symbology used in this table are explained in 5.6.

**Table 13-8.** Structure of UnconfirmedCOVNotification Service Primitive

Parameter Name	Req	Ind
Argument	M	M(=)
Subscriber Process Identifier	M	M(=)
Initiating Device Identifier	M	M(=)
Monitored Object Identifier	M	M(=)
Time Remaining	M	M(=)
List of Values	M	M(=)

##### 13.7.1.1 Argument

This parameter shall convey the parameters for the UnconfirmedCOVNotification service request.

##### 13.7.1.2 Subscriber Process Identifier

This parameter, of type Unsigned32, shall convey a numeric "handle" meaningful to the subscriber. This handle shall be used to identify the process within the COVclient that should receive the notification. The value of zero is reserved for unsubscribed COV.

##### 13.7.1.3 Initiating Device Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the Device Object\_Identifier of the device that initiated the UnconfirmedCOVNotification service request.

##### 13.7.1.4 Monitored Object Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the Object\_Identifier of the object that has changed.

##### 13.7.1.5 Time Remaining

This parameter, of type Unsigned, shall convey the remaining lifetime of the subscription in seconds. A value of zero shall indicate an indefinite lifetime, without automatic cancellation, or an unsubscribed notification.

##### 13.7.1.6 List of Values

This parameter shall convey a list of one or more property values whose contents depend on the type of object being monitored. Table 13-1 summarizes the BACnet standard objects and those property values that shall be returned in the 'List of Values' parameter when those objects are enabled for COV reporting.

#### 13.7.2 Service Procedure

Since this is an unconfirmed service, no response primitives are expected. Actions taken in response to this notification are a local matter.

### 13.8 ConfirmedEventNotification Service

The ConfirmedEventNotification service is used by a notification-server to notify a remote device that an event has occurred and that the notification-server needs a confirmation that the notification has been received. This confirmation means only that the device received the message. It does not imply that a human operator has been notified. A separate AcknowledgeAlarm service is used to indicate that an operator has acknowledged the receipt of the notification if the notification specifies that acknowledgment is required. If multiple recipients must be notified, a separate invocation of this service shall be used to notify each intended recipient. If a confirmation that a notification was received is not needed, then the UnconfirmedEventNotification may be used.

#### 13.8.1 Structure

The structure of the ConfirmedEventNotification service primitives is shown in Table 13-9. The terminology and symbology used in this table are explained in 5.6.

**Table 13-9.** Structure of ConfirmedEventNotification Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Process Identifier	M	M(=)		
Initiating Device Identifier	M	M(=)		
Event Object Identifier	M	M(=)		
Time Stamp	M	M(=)		
Notification Class	M	M(=)		
Priority	M	M(=)		
Event Type	M	M(=)		
Message Text	U	U(=)		
Notify Type	M	M(=)		
AckRequired	C	C(=)		
From State	C	C(=)		
To State	M	M(=)		
Event Values	C	C(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M

#### 13.8.1.1 Argument

This parameter shall convey the parameters for the ConfirmedEventNotification service request.

#### 13.8.1.2 Process Identifier

This parameter, of type Unsigned32, shall convey the identification of the process in the receiving device for which the notification is intended.

#### 13.8.1.3 Initiating Device Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the Device Object\_Identifier of the device that initiated the ConfirmedEventNotification service request.

#### 13.8.1.4 Event Object Identifier

This parameter, of type BACnetObjectIdentifier, shall specify the Object\_Identifier of the object that is initiating the notification. This parameter is used by the AcknowledgeAlarm service to identify the object whose notification is being acknowledged.

### **13.8.1.5 Time Stamp**

This parameter, of type BACnetTimeStamp, shall convey the current time as determined by the clock in the device issuing the service request. If this device has no clock, then this parameter shall convey a sequence number, of type Unsigned, which indicates the relative ordering of this event notification to all other event notifications issued by this device without regard to their intended recipient. The sequence numbers shall increase monotonically (they may be implemented using modulo arithmetic). A device may have a single sequence number for all event-initiating objects or a separate sequence number for each object.

### **13.8.1.6 Notification Class**

This parameter, of type Unsigned, designates the notification class of the event. Definition of the various notification classes is a local matter (see 13.2, 13.4, and 12.21 for discussion of Notification Class objects).

### **13.8.1.7 Priority**

This parameter, of type Unsigned8, shall specify the priority of the event that has occurred. The priority is specified by the Priority property of the Notification Class or Event Enrollment objects associated with this event. The possible range of priorities is 0-255. A lower number indicates a higher priority. The priority and the Network Priority (see 6.2.2) are associated as defined in Table 13-5.

### **13.8.1.8 Event Type**

This parameter, of type BACnetEventType, shall specify the type of event that has occurred. Event types that are defined in this standard may be found in Table 12-15.

### **13.8.1.9 Message Text**

This optional parameter, of type CharacterString, shall convey a string of printable characters. This parameter may be used to convey a message to be logged or displayed, which pertains to the occurrence of the event. The content of the message is a local matter.

### **13.8.1.10 Notify Type**

This parameter, of type BACnetNotifyType, shall convey whether this notification is an event or an alarm or a notification that someone has acknowledged a previous event notification:

{ALARM, EVENT, ACK\_NOTIFICATION}.

### **13.8.1.11 AckRequired**

This parameter, of type BOOLEAN, shall convey whether this notification requires acknowledgment (TRUE) or not (FALSE). This parameter shall only be present if the 'Notify Type' parameter is EVENT or ALARM.

### **13.8.1.12 From State**

This parameter, of type BACnetEventState, shall indicate the Event\_State of the object prior to the occurrence of the event that initiated this notification. This parameter shall only be present if the 'Notify Type' parameter is EVENT or ALARM.

### **13.8.1.13 To State**

This parameter, of type BACnetEventState, shall indicate the Event\_State of the object after the occurrence of the event that initiated this notification.

### **13.8.1.14 Event Values**

This parameter, of type BACnetNotificationParameters, shall convey a set of values relevant to the particular event and whose content depends on the type of object that initiated the notification (see Tables 13-2, 13-3, and 13-4). This parameter shall only be present if the 'Notify Type' parameter is EVENT or ALARM. The returned set of values may be either a list of property values representing properties of the object specified by the 'Event Object Identifier' or one of the standard event type notification parameter sets defined in Table 13-4.

### **13.8.1.15 Result(+)**

The 'Result(+)’ parameter shall indicate that the requested service has succeeded.

### 13.8.1.16 Result(-)

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for failure shall be specified by the 'Error Type' parameter.

#### 13.8.1.16.1 Error Type

This parameter shall consist of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

### 13.8.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall take whatever local actions have been assigned to the indicated event occurrence and issue a 'Result(+)’ service primitive. If the service request cannot be executed, a 'Result(-)' service primitive shall be issued indicating the encountered error.

### 13.9 UnconfirmedEventNotification Service

The UnconfirmedEventNotification service is used by a notification-server to notify a remote device that an event has occurred. Its purpose is to notify recipients that an event has occurred, but confirmation that the notification was received is not required. Applications that require confirmation that the notification was received by the remote device should use the ConfirmedEventNotification service. The fact that this is an unconfirmed service does not mean it is inappropriate for notification of alarms. Events of type Alarm may require a human acknowledgment that is conveyed using the AcknowledgeAlarm service. Thus, using an unconfirmed service to announce the alarm has no effect on the ability to confirm that an operator has been notified. Any device that executes this service shall support programmable process identifiers to allow broadcast and multicast 'Process Identifier' parameters to be assigned on a per installation basis.

#### 13.9.1 Structure

The structure of the UnconfirmedEventNotification service primitives is shown in Table 13-10. The terminology and symbology used in this table are explained in 5.6.

**Table 13-10.** Structure of UnconfirmedEventNotification Service Primitive

Parameter Name	Req	Ind
Argument	M	M(=)
Process Identifier	M	M(=)
Initiating Device Identifier	M	M(=)
Event Object Identifier	M	M(=)
Time Stamp	M	M(=)
Notification Class	M	M(=)
Priority	M	M(=)
Event Type	M	M(=)
Message Text	U	U(=)
Notify Type	M	M(=)
AckRequired	C	C(=)
From State	C	C(=)
To State	M	M(=)
Event Values	C	C(=)

##### 13.9.1.1 Argument

The 'Argument' parameter shall convey the parameters for the UnconfirmedEventNotification service request.

##### 13.9.1.2 Process Identifier

This parameter, of type Unsigned32, shall convey the identification of the process in the receiving device for which the notification is intended.

##### 13.9.1.3 Initiating Device Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the Device Object\_Identifier of the device that initiated the UnconfirmedEventNotification service request.

##### 13.9.1.4 Event Object Identifier

This parameter, of type BACnetObjectIdentifier, shall specify the identifier of the object that is initiating the notification. This parameter is used by the AcknowledgeAlarm service to identify the object whose notification is being acknowledged.

##### 13.9.1.5 Time Stamp

This parameter, of type BACnetTimeStamp, shall convey the current time as determined by the clock in the device issuing the service request. If this device has no clock, then this parameter shall convey a sequence number that indicates the relative ordering of this event notification to all other event notifications issued by this device without regard to their intended recipient. The sequence numbers shall increase monotonically (they may be implemented using modulo arithmetic). A device may have a single sequence number for all event-initiating objects or a separate sequence number for each object.

### 13.9.1.6 Notification Class

This parameter, of type Unsigned, designates the notification class of the event. Definition of the various notification classes is a local matter (see 13.2, 13.4, and 12.21 for discussion of Notification Class objects).

### 13.9.1.7 Priority

This parameter, of type Unsigned8, shall specify the priority of the event that has occurred. The priority is specified by the Priority property of the Notification Class object associated with the event. The possible range of priorities is 0-255. A lower number indicates a higher priority. The priority and the Network Priority (see 6.2.2) are associated as defined in Table 13-5.

### 13.9.1.8 Event Type

This parameter, of type BACnetEventType, shall specify the type of event that has occurred. Event types that are defined in this standard may be found in Table 12-15.

### 13.9.1.9 Message Text

This optional parameter, of type CharacterString, shall convey a string of printable characters. This parameter may be used to convey a message to be logged or displayed, which pertains to the occurrence of the event. The content of the message is a local matter.

### 13.9.1.10 Notify Type

This parameter, of type BACnetNotifyType, shall convey whether this notification is an event or an alarm or a notification that someone has acknowledged a previous event notification:

{EVENT, ALARM, ACK\_NOTIFICATION}.

### 13.9.1.11 AckRequired

This parameter, of type BOOLEAN, shall convey whether this notification requires acknowledgment (TRUE) or not (FALSE). This parameter shall only be present if the 'Notify Type' parameter is EVENT or ALARM.

### 13.9.1.12 From State

This parameter, of type BACnetEventState, shall indicate the state of the object prior to the occurrence of the event that initiated this notification. This parameter shall only be present if the 'Notify Type' parameter is EVENT or ALARM.

### 13.9.1.13 To State

This parameter, of type BACnetEventState, shall indicate the state of the object after the occurrence of the event that initiated this notification.

### 13.9.1.14 Event Values

This parameter, of type BACnetNotificationParameters, shall convey a set of values relevant to the particular event and whose content depends on the type of object that initiated the notification (see Tables 13-2, 13-3, and 13-4). This parameter shall only be present if the 'Notify Type' parameter is EVENT or ALARM. The returned set of values may be either a list of property values representing properties of the object specified by the 'Event Object Identifier' or one of the standard event-type notification parameter sets defined in Table 13-4.

## 13.9.2 Service Procedure

Since this is an unconfirmed service, no response primitives are expected. Actions taken in response to this notification are a local matter.

### 13.10 GetAlarmSummary Service

The GetAlarmSummary service is used by a client BACnet-user to obtain a summary of "active alarms." The term "active alarm" refers to BACnet standard objects that have an Event\_State property whose value is not equal to NORMAL and a Notify\_Type property whose value is ALARM. The GetEnrollmentSummary service provides a more sophisticated approach with various kinds of filters.

#### 13.10.1 Structure

The structure of the GetAlarmSummary service primitives is shown in Table 13-11. The terminology and symbology used in this table are explained in 5.6.

**Table 13-11.** Structure of GetAlarmSummary Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Result(+)			S	S(=)
List of Alarm Summaries			M	M(=)
Object Identifier			M	M(=)
Alarm State			M	M(=)
Acknowledged Transitions			M	M(=)
Result(-)			S	S(=)
Error Type			M	M(=)

#### 13.10.1.1 Argument

This parameter indicates the GetAlarmSummary confirmed service request.

#### 13.10.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the requested service has succeeded. A successful result includes the following parameters.

##### 13.10.1.2.1 List of Alarm Summaries

The 'List of Alarm Summaries' shall contain zero or more Alarm Summaries. Each Alarm Summary shall consist of three parameters: 'Object Identifier', 'Alarm State', and 'Acknowledged States'. If the list is of length zero, then this shall be interpreted to mean that there are no active alarms for this device.

##### 13.10.1.2.1.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall identify the event-initiating object whose Event\_State property is not equal to NORMAL and that has a Notify\_Type property whose value is ALARM.

##### 13.10.1.2.1.2 Alarm State

This parameter, of type BACnetEventState, indicates the value of the Event\_State property of the object.

##### 13.10.1.2.1.3 Acknowledged Transitions

This parameter, of type BACnetEventTransitionBits, indicates the value of the Acked\_Transitions property of the object.

#### 13.10.1.3 Result(-)

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for failure shall be specified by the 'Error Type' parameter.

##### 13.10.1.3.1 Error Type

This parameter shall consist of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

### **13.10.2 Service Procedure**

After verifying the validity of the request, the responding BACnet-user shall search all event-initiating objects that have an Event\_State property not equal to NORMAL and a Notify\_Type property whose value is ALARM. A positive response containing the alarm summaries for objects found in this search shall be constructed. If no objects are found that meet these criteria, then a list of length zero shall be returned.

### 13.11 GetEnrollmentSummary Service

The GetEnrollmentSummary service is used by a client BACnet-user to obtain a summary of event-initiating objects. Several different filters may be applied to define the search criteria. This service may be used to obtain summaries of objects with any EventType and is thus a superset of the functionality provided by the GetAlarmSummary Service.

#### 13.11.1 Structure

The structure of the GetEnrollmentSummary service primitives is shown in Table 13-12. The terminology and symbology used in this table are explained in 5.6.

**Table 13-12.** Structure of GetEnrollmentSummary Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Acknowledgment Filter	M	M(=)		
Enrollment Filter	U	U(=)		
Event State Filter	U	U(=)		
Event Type Filter	U	U(=)		
Priority Filter	U	U(=)		
Notification Class Filter	U	U(=)		
Result(+)			S	S(=)
List of Enrollment Summaries			M	M(=)
Object Identifier			M	M(=)
Event Type			M	M(=)
Event State			M	M(=)
Priority			M	M(=)
Notification Class			U	U(=)
Result(-)			S	S(=)
Error type			M	M(=)

#### 13.11.1.1 Argument

This parameter shall convey the parameters for the GetEnrollmentSummary confirmed service request.

##### 13.11.1.1.1 Acknowledgment Filter

This parameter, of type ENUMERATED, shall provide a means of restricting the event-initiating objects that are to be summarized. The 'Acknowledgment Filter' may take any of three values:

ALL - Shall request that the returned summary contain all event-initiating objects without regard to whether the objects have acknowledgments or not.

ACKED - Shall request that the returned summary contain only those objects for which the Acked\_Transitions property has a value of one in every bit position.

NOT-ACKED - Shall request that the returned summary contain only reports for those objects for which the Acked\_Transitions property has a value of zero in one or more bit positions.

##### 13.11.1.1.2 Enrollment Filter

This parameter, of type BACnetRecipientProcess, shall provide a means of restricting the set of objects that are to be summarized. Only those objects for which the specified BACnetRecipient and Process Identifier are enrolled to receive notifications, either confirmed or unconfirmed, shall be summarized. In this case, "enrolled" shall mean that an event-initiating object references a Notification Class object containing one or more BACnetDestinations containing the indicated Process Identifier and BACnetRecipient.

If this parameter is omitted, it shall mean that event-initiating objects shall be summarized without regard to enrollment status.

#### **13.11.1.3 Event State Filter**

This parameter shall provide a means of restricting the set of event-initiating objects that are to be summarized. It may have any of the following values:

{OFFNORMAL, FAULT, NORMAL, ALL, ACTIVE}.

Only those event-initiating objects whose Event\_State property matches the value specified in this parameter shall be included. If the value ALL is specified, then all of the event-initiating objects shall be summarized without regard to the value of the Event\_State property. If the value ACTIVE is specified, then only those event-initiating objects whose Event\_State property has a value other than NORMAL shall be summarized. If this parameter is omitted, a default value of ALL shall be assumed.

#### **13.11.1.4 Event Type Filter**

This parameter is provided as a means of restricting the summary to only those event-initiating objects that can generate event notifications with an Event\_Type equal to the value of this parameter. This parameter may have any legal value of Event\_Type as defined in the Event Enrollment object specification. If this parameter is omitted, all event-initiating objects shall be included in the summary without regard to which EventTypes they generate.

#### **13.11.1.5 Priority Filter**

This parameter consists of two parts, MinPriority and MaxPriority, each of datatype Unsigned8. It provides a means of restricting the summary to only those event-initiating objects that can generate event notifications with a Priority as specified by this parameter. The 'Priority Filter' parameter consists of two parts, MinPriority and MaxPriority. All event-initiating objects, such that  $\text{MinPriority} \leq \text{Priority} \leq \text{MaxPriority}$ , shall be included in the summary. For the purpose of this filter, the Priority checked by the filter is the Priority associated with the most recent transition. If 'Priority Filter' is omitted, all event-initiating objects shall be summarized without regard to their Priority.

#### **13.11.1.6 Notification Class Filter**

This parameter, of type Unsigned, provides a means of restricting the summary to only those event-initiating objects that can generate event notifications with a Notification Class equal to the value of this parameter. If 'Notification Class Filter' is omitted, it shall mean that all event-initiating objects objects shall be summarized without regard to their Notification Class.

#### **13.11.1.2 Result(+)**

The 'Result(+)’ parameter shall indicate that the requested service has succeeded. A successful result includes the following parameters.

##### **13.11.1.2.1 List of Enrollment Summaries**

The 'List of Enrollment Summaries' shall contain zero or more Enrollment Summaries. Each Enrollment Summary shall consist of up to five parameters: 'Object Identifier', 'Event Type', 'Event State', 'Priority', and, optionally, 'Notification Class'. If the list is of length zero, then this shall be interpreted to mean that there are no event-initiating objects that meet the search criteria specified in the request primitive.

###### **13.11.1.2.1.1 Object Identifier**

This parameter, of type BACnetObjectIdentifier, shall identify an object meeting the search criteria.

###### **13.11.1.2.1.2 Event Type**

This parameter, of type BACnetEventType, indicates the Event\_Type that the object can generate.

###### **13.11.1.2.1.3 Event State**

This parameter, of type BACnetEventState, indicates the value of the Event\_State property of the object.

#### **13.11.1.2.1.4 Priority**

This parameter, of type Unsigned8, indicates the priority of notifications generated by the object.

#### **13.11.1.2.1.5 Notification Class**

This optional parameter, of type Unsigned, indicates the class of notifications generated by the object and implicitly refers to a Notification Class object that has a Notification\_Class property of the same value.

#### **13.11.1.3 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for failure shall be specified by the 'Error Type' parameter.

#### **13.11.1.3.1 Error Type**

This parameter shall consist of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

#### **13.11.2 Service Procedure**

After verifying the validity of the request, the responding BACnet-user shall search for all event-initiating objects that meet the search criteria specified in the request primitive. The search criteria are the logical conjunctions of all of the explicitly stated filters and the default values for any filters that were omitted in the request primitive. A positive response containing the enrollment summaries for objects found in this search shall be constructed. If no objects are found that meet these criteria, then a list of length zero shall be returned.

## 13.12 GetEventInformation Service

The GetEventInformation service is used by a client BACnet-user to obtain a summary of all "active event states". The term "active event states" refers to all event-initiating objects that

- (a) have an Event\_State property whose value is not equal to NORMAL, or
- (b) have an Acked\_Transitions property, which has at least one of the bits (TO-OFFNORMAL, TO-FAULT, TO-NORMAL) set to FALSE.

This service is intended to be implemented in all devices that generate event notifications.

### 13.12.1 Structure

The structure of the GetEventInformation service primitives is shown in Table 13-13. The terminology and symbology used in this table are explained in 5.6.

**Table 13-13.** Structure of GetEventInformation Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Last Received Object Identifier	U	U(=)		
Result(+)				
List of Event Summaries			M	M(=)
Object Identifier			M	M(=)
Event State			M	M(=)
Acknowledged Transitions			M	M(=)
Event Time Stamps			M	M(=)
Notify Type			M	M(=)
Event Enable			M	M(=)
Event Priorities			M	M(=)
More Events			M	M(=)
Result(-)			S	S(=)
Error Type			M	M(=)

#### 13.12.1.1 Argument

This parameter indicates the GetEventInformation confirmed service request.

##### 13.12.1.1.1 Last Received Object Identifier

This optional parameter, of type BACnetObjectIdentifier, shall specify the last Object Identifier received in a preceding GetEventInformation-ACK, if its 'More Events' parameter was TRUE. If this parameter is omitted, the returned summary shall start with the first object meeting the "active event states" criteria. A fixed object processing order is assumed, however the particular order is a local matter. If the Last Received Object Identifier has become invalid in the responding device (i.e., the object is no longer present), the service shall resume if it is possible to determine the object that would have been the successor of the object that is no longer present. Otherwise a Result(-) shall be returned with an error class of OBJECT and an error code of UNKNOWN\_OBJECT.

#### 13.12.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the requested service has succeeded. A successful result includes the following parameters.

##### 13.12.1.2.1 List of Event Summaries

The 'List of Event Summaries' shall contain zero or more Event Summaries. Each Event Summary shall consist of seven parameters: 'Object Identifier', 'Event State', 'Acknowledged Transitions', 'Event Time Stamps', 'Notify Type', 'Event Enable' and 'Event Priorities'. If the list is of length zero, then this shall be interpreted to mean that there are no event-initiating objects that have active event states in this device.

### **13.12.1.2.1.1 Object Identifier**

This parameter, of type BACnetObjectIdentifier, shall identify the event-initiating object that has an Event\_State property whose value is not equal to NORMAL or has an Acked\_Transitions property that has at least one of the following bits (TO-OFFNORMAL, TO-FAULT, TO-NORMAL) set to FALSE.

### **13.12.1.2.1.2 Event State**

This parameter, of type BACnetEventState, indicates the value of the Event\_State property of the object.

### **13.12.1.2.1.3 Acknowledged Transitions**

This parameter, of type BACnetEventTransitionBits, indicates the value of the Acked\_Transitions property of the object.

### **13.12.1.2.1.4 Event Time Stamps**

This parameter, of type BACnetARRAY[3] of BACnetTimeStamp, shall convey the timestamps of the last event notifications for TO-OFFNORMAL, TO-FAULT, and TO-NORMAL events.

### **13.12.1.2.1.5 Notify Type**

This parameter, of type BACnetNotifyType, shall convey the value of the Notify\_Type property of this object.

### **13.12.1.2.1.6 Event Enable**

This parameter, of type BACnetEventTransitionBits, shall convey the value of the Event\_Enable property of the object.

### **13.12.1.2.1.7 Event Priorities**

This parameter, of type BACnetARRAY[3] of Unsigned, shall convey the priorities specified in the Priority property of the associated Notification Class object. In the case where an Event Enrollment Object is used without an associated Notification Class Object, the three fields of this parameter shall all contain the value of the Priority property of the Event Enrollment Object.

## **13.12.1.2.2 More Events**

This parameter, of type BOOLEAN, shall indicate whether (TRUE) or not (FALSE) more objects exist that meet the active event state criteria of the service request, but that could not be returned in the reply.

### **13.12.1.3 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for failure shall be specified by the 'Error Type' parameter.

### **13.12.1.3.1 Error Type**

This parameter shall consist of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

## **13.12.2 Service Procedure**

After verifying the validity of the request, the responding BACnet-user shall search for all event-initiating objects that meet the following conditions, beginning with the object following (in whatever internal ordering of objects is used by the responding device) the object specified by the 'Last Received Object Identifier' parameter, if present:

- (a) have an Event\_State property whose value is not equal to NORMAL, or
- (b) have an Acked\_Transitions property that has at least one of the following bits (TO-OFFNORMAL, TO-FAULT, TO-NORMAL) set to FALSE.

A positive response containing the event summaries for objects found in this search shall be constructed. If no objects are found that meet these criteria, then a list of length zero shall be returned. As many of the included objects as can be returned within the APDU shall be returned. If more objects exist that meet the criteria but cannot be returned in the APDU, the 'More Events' parameter shall be set to TRUE, otherwise it shall be set to FALSE.

### 13.13 LifeSafetyOperation Service

The LifeSafetyOperation service is intended for use in fire, life safety and security systems to provide a mechanism for conveying specific instructions from a human operator to accomplish any of the following objectives:

- (a) silence audible or visual notification appliances,
- (b) reset latched notification appliances, or
- (c) unsilence previously silenced audible or visual notification appliances.

Ensuring that the LifeSafetyOperation request actually comes from a person with appropriate authority is a local matter.

#### 13.13.1 Structure

The structure of the LifeSafetyOperation primitive is shown in Table 13-14. The terminology and symbology used in this table are explained in 5.6.

**Table 13-14.** Structure of LifeSafetyOperation Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Requesting Process Identifier	M	M(=)		
Requesting Source	M	M(=)		
Request	M	M(=)		
Object Identifier	U	U(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M(=)

##### 13.13.1.1 Argument

This parameter shall convey the parameters for the LifeSafetyOperation confirmed service request.

###### 13.13.1.1.1 Requesting Process Identifier

This parameter, of type Unsigned32, specifies an identifying number of significance to the sending device that uniquely identifies the process which initiated the service request. The assignment and meaning of process identifiers shall be a local matter.

###### 13.13.1.1.2 Requesting Source

This parameter, of type CharacterString, specifies the identity of the human operator that initiated the LifeSafetyOperation service request.

###### 13.13.1.1.3 Request

This parameter, of type BACnetLifeSafetyOperation, shall convey the requested operation:

{SILENCE, SILENCE\_AUDIBLE, SILENCE\_VISUAL, RESET, RESET\_ALARM, RESET\_FAULT, UNSILENCE, UNSILENCE\_AUDIBLE, UNSILENCE\_VISUAL}

###### 13.13.1.1.4 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the specific BACnet object to which the life safety request is directed. If this parameter is not present, then all applicable objects within the receiving BACnet device shall be silenced or reset accordingly based on the 'Request' provided.

### **13.13.1.2 Result(+)**

The 'Result(+)’ parameter shall indicate that the service request succeeded.

### **13.13.1.3 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for the failure shall be specified by the 'Error Type' parameter.

#### **13.13.1.3.1 Error Type**

This parameter consists of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

### **13.13.2 Service Procedure**

The responding BACnet-user shall first verify the validity of the 'Object Identifier' parameter and return a 'Result(-)' response with the appropriate error class and code if the 'Request' is invalid or if the 'Object Identifier' parameter is present and specifies an object that is either unknown or does not represent an appropriate request for this object type.

If the 'Object Identifier' parameter is not present, then the responding BACnet-user shall attempt to operate all applicable objects in the device based on the 'Request' parameter. If the 'Object Identifier' parameter is present, the responding BACnet-user shall attempt to silence or reset the object specified in the 'Object Identifier' parameter based on the 'Request' parameter. In either case, the responding BACnet-user shall issue a Result(+) primitive.

### 13.14 SubscribeCOV Service

The SubscribeCOV service is used by a COV-client to subscribe for the receipt of notifications of changes that may occur to the properties of a particular object. Certain BACnet standard objects may optionally support COV reporting. If a standard object provides COV reporting, then changes of value of specific properties of the object, in some cases based on programmable increments, trigger COV notifications to be sent to one or more subscriber clients. Typically, COV notifications are sent to supervisory programs in BACnet client devices or to operators or logging devices. Proprietary objects may support COV reporting at the implementor's option. The standardized objects that may optionally provide COV support and the change of value algorithms they shall employ are summarized in Table 13-1.

The subscription establishes a connection between the change of value detection and reporting mechanism within the COV-server device and a "process" within the COV-client device. Notifications of changes are issued by the COV-server device when changes occur after the subscription has been established. The ConfirmedCOVNotification and UnconfirmedCOVNotification services are used by the COV-server device to convey change notifications. The choice of confirmed or unconfirmed service is made at the time the subscription is established.

#### 13.14.1 Structure

The structure of the SubscribeCOV service primitives is shown in Table 13-15. The terminology and symbology used in this table are explained in 5.6.

**Table 13-15.** Structure of SubscribeCOV Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Subscriber Process Identifier	M	M(=)		
Monitored Object Identifier	M	M(=)		
Issue Confirmed Notifications	U	U(=)		
Lifetime	U	U(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M(=)

##### 13.14.1.1 Argument

This parameter shall convey the parameters for the SubscribeCOV confirmed service request.

##### 13.14.1.2 Subscriber Process Identifier

This parameter, of type Unsigned32, shall convey a numeric "handle" meaningful to the subscriber. This handle shall be used to match future re-subscriptions and cancellations from the subscriber with the COV context that exists within the COV-server device and with confirmed or unconfirmed COV notifications to identify the process within the COV-client that should receive them. The value zero is reserved for unsubscribed COV notifications as described in 13.7.

##### 13.14.1.3 Monitored Object Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the identifier of the object within the receiving device for which a subscription is desired.

##### 13.14.1.4 Issue Confirmed Notifications

This parameter, of type BOOLEAN, shall convey whether the COV-server device shall issue ConfirmedCOVNotifications (TRUE) or UnconfirmedCOVNotifications (FALSE) when changes occur. This parameter, if present, shall indicate a subscription or re-subscription is to occur and that the lifetime shall be refreshed to its initial state. If both the 'Issue Confirmed Notifications' and 'Lifetime' parameters are absent, then this shall indicate a cancellation request. If the 'Lifetime' parameter is present then the 'Issue Confirmed Notifications' parameter shall be present.

#### 13.14.1.5 Lifetime

This parameter, of type Unsigned, shall convey the desired lifetime of the subscription in seconds. A value of zero shall indicate an indefinite lifetime, without automatic cancellation. A non-zero value shall indicate the number of seconds that may elapse before the subscription shall be automatically cancelled. If both the 'Issue Confirmed Notifications' and 'Lifetime' parameters are absent, then this shall indicate a cancellation request. If the 'Lifetime' parameter is present then the 'Issue Confirmed Notifications' parameter shall be present.

#### 13.14.1.6 Result(+)

The 'Result(+)’ parameter shall indicate that the requested service has succeeded.

#### 13.14.1.7 Result(-)

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for failure shall be specified by the 'Error Type' parameter.

##### 13.14.1.7.1 Error Type

This parameter shall consist of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

#### 13.14.2 Service Procedure

If neither 'Lifetime' nor 'Issue Confirmed Notifications' are present, then the request shall be considered to be a cancellation. Any COV context that already exists for the same BACnet address contained in the PDU that carries the SubscribeCOV request and has the same 'Subscriber Process Identifier' and 'Monitored Object Identifier' shall be disabled and a 'Result(+)’ returned. Cancellations that are issued for which no matching COV context can be found shall succeed as if a context had existed, returning 'Result(+)’.

If the 'Lifetime' parameter is present and has a non-zero value but the device does not support automatic cancellation of subscriptions, then a 'Result(-)' shall be returned. If the 'Lifetime' parameter is not present but the 'Issue Confirmed Notifications' parameter is present, then a value of zero (indefinite lifetime) shall be assumed for the lifetime. If the 'Issue Confirmed Notifications' parameter is present but the object to be monitored does not support COV reporting, then a 'Result(-)' shall be returned. If the object to be monitored does support COV reporting, then a check shall be made to locate an existing COV context for the same BACnet address contained in the PDU that carries the SubscribeCOV request and has the same 'Subscriber Process Identifier' and 'Monitored Object Identifier'. If an existing COV context is found, then the request shall be considered a re-subscription and shall succeed as if the subscription had been newly created.

If no COV context can be found that matches the request, then a new COV context shall be established that contains the BACnet address from the PDU that carries the SubscribeCOV request and the same 'Subscriber Process Identifier' and 'Monitored Object Identifier'. If no context can be created, then a 'Result(-)' shall be returned.

If a new context is created, or a re-subscription is received, then the COV context shall be initialized and given a lifetime as specified by the 'Lifetime' parameter, if present, or zero if the 'Lifetime' parameter is not present. The subscription shall be automatically cancelled after that many seconds have elapsed unless a re-subscription is received. A lifetime of zero shall indicate that the subscription is indefinite and no automatic cancellation shall occur. In either case, a 'Result(+)’ shall be returned. A ConfirmedCOVNotification or UnconfirmedCOVNotification shall be issued as soon as possible after the successful completion of a subscription or re-subscription request, as specified by the 'Issue Confirmed Notifications' parameter.

### 13.15 SubscribeCOVProperty Service

The SubscribeCOVProperty service is used by a COV-client to subscribe for the receipt of notifications of changes that may occur to the properties of a particular object. Any object may optionally support COV reporting. If a standard object provides COV reporting, then changes of value of subscribed-to properties of the object, in some cases based on programmable increments, trigger COV notifications to be sent to one or more subscriber clients. Typically, COV notifications are sent to supervisory programs in BACnet client devices or to operators or logging devices.

The subscription establishes a connection between the change of value detection and reporting mechanism within the COV-server device and a "process" within the COV-client device. Notifications of changes are issued by the COV-server device when changes occur after the subscription has been established. The ConfirmedCOVNotification and UnconfirmedCOVNotification services are used by the COV-server device to convey change notifications. The choice of confirmed or unconfirmed service is made at the time the subscription is established. Any object, proprietary or standard, may support COV reporting for any property at the implementor's option.

The SubscribeCOVProperty service differs from the SubscribeCOV service in that it allows monitoring of properties other than those listed in Table 13-1.

#### 13.15.1 Structure

The structure of the SubscribeCOVProperty service primitives is shown in Table 13-16. The terminology and symbology used in this table are explained in 5.6.

**Table 13-16.** Structure of SubscribeCOVProperty Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Subscriber Process Identifier	M	M(=)		
Monitored Object Identifier	M	M(=)		
Issue Confirmed Notifications	U	U(=)		
Lifetime	U	U(=)		
Monitored Property Identifier	M	M(=)		
COV Increment	U	U(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M(=)

##### 13.15.1.1 Argument

This parameter shall convey the parameters for the SubscribeCOVProperty confirmed service request.

##### 13.15.1.2 Subscriber Process Identifier

This parameter, of type Unsigned32, shall convey a numeric "handle" meaningful to the subscriber. This handle shall be used to match future re-subscriptions and cancellations from the subscriber with the COV context that exists within the COV-server device and with confirmed or unconfirmed COV notifications to identify the process within the COV-client that should receive them.

##### 13.15.1.3 Monitored Object Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the identifier of the object within the receiving device that contains the property for which a subscription is desired.

##### 13.15.1.4 Issue Confirmed Notifications

This parameter, of type BOOLEAN, shall convey whether the COV-server device shall issue ConfirmedCOVNotifications (TRUE) or UnconfirmedCOVNotifications (FALSE) when changes occur. This parameter, if present, shall indicate that a subscription or re-subscription is to occur and that the lifetime shall be refreshed to its initial state. If both the 'Issue

'Confirmed Notifications' and 'Lifetime' parameters are absent, then this shall indicate a cancellation request. If the 'Lifetime' parameter is present then the 'Issue Confirmed Notifications' parameter shall be present.

#### **13.15.1.5 Lifetime**

This parameter, of type Unsigned, shall convey the desired lifetime of the subscription in seconds. A value of zero shall not be allowed. A non-zero value shall indicate the number of seconds that may elapse before the subscription shall be automatically cancelled. If both the 'Issue Confirmed Notifications' and 'Lifetime' parameters are absent, then this shall indicate a cancellation request. If the 'Issue Confirmed Notifications' parameter is present then the 'Lifetime' parameter shall be present.

#### **13.15.1.6 Monitored Property Identifier**

This parameter, of type BACnetPropertyReference, shall convey the property identifier and optional array index for which a subscription is desired. If COV reporting is supported for a property that has an array datatype, it is a local matter to determine whether to support COV subscriptions for all elements of the array or only for particular elements in the array.

#### **13.15.1.7 COV Increment**

This parameter, of type REAL, shall specify the minimum change in the monitored property that will cause a COVNotification to be issued to subscriber COV-clients. This parameter is ignored if the datatype of the monitored property is not REAL. If the monitored property is Present\_Value, its datatype is REAL, this parameter is not present, and the monitored object has a COV\_Increment property, then the COV increment to use is taken from the COV\_Increment property of the monitored object. Otherwise, the COV increment is a local matter. The intent is to allow the subscriber to use a previously established COV increment from another subscription or to allow use of the COV\_Increment property in the monitored object.

#### **13.15.1.8 Result(+)**

The 'Result(+)’ parameter shall indicate that the requested service has succeeded.

#### **13.15.1.9 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for failure shall be specified by the 'Error Type' parameter.

#### **13.15.1.9.1 Error Type**

This parameter shall consist of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

### **13.15.2 Service Procedure**

If neither 'Lifetime' nor 'Issue Confirmed Notifications' are present, then the request shall be considered to be a cancellation. Any COV context that already exists for the same BACnet address contained in the PDU that carries the SubscribeCOVProperty request and has the same 'Subscriber Process Identifier', 'Monitored Object Identifier' and 'Monitored Property Identifier' shall be disabled and a 'Result(+)’ returned. Cancellations that are issued for which no matching COV context can be found shall succeed as if a context had existed, returning 'Result(+)’. If an existing COV context is found, it shall be removed from the Active\_COV\_Subscriptions property in the Device object.

If the 'Issue Confirmed Notifications' parameter is present but the property to be monitored does not support COV reporting, then a 'Result(-)' shall be returned. If the property to be monitored does support COV reporting, then a check shall be made to locate an existing COV context for the same BACnet address contained in the PDU that carries the SubscribeCOVProperty request and has the same 'Subscriber Process Identifier', 'Monitored Object Identifier' and 'Monitored Property Identifier'. If an existing COV context is found, then the request shall be considered a re-subscription and shall succeed as if the subscription had been newly created.

If no COV context can be found that matches the request, then a new COV context shall be established that contains the BACnet address from the PDU that carries the SubscribeCOVProperty request and the same 'Subscriber Process Identifier', 'Monitored Object Identifier' and 'Monitored Property Identifier'. The new context shall be included in the Active\_COV\_Subscriptions property of the Device object. If no context can be created, then a 'Result(-)' shall be returned.

If a new context is created, or a re-subscription is received, then the COV context shall be initialized and given a lifetime as specified by the 'Lifetime' parameter. The subscription shall be automatically cancelled after that many seconds have elapsed.

unless a re-subscription is received. A 'Result(+)’ shall be returned and a ConfirmedCOVNotification or UnconfirmedCOVNotification shall be issued as soon as possible after the successful completion of a subscription or re-subscription request, as specified by the 'Issue Confirmed Notifications' parameter.

## **14 FILE ACCESS SERVICES**

This clause defines the set of services used to access and manipulate files contained in BACnet devices. The concept of files is used here as a network-visible representation for a collection of octets of arbitrary length and meaning. This is an abstract concept only and does not imply the use of disk, tape or other mass storage devices in the server devices. These services may be used to access vendor-defined files as well as specific files defined in the BACnet protocol standard.

Every file that is accessible by File Access Services shall have a corresponding File object in the BACnet device. This File object is used to identify the particular file by name. In addition, the File object provides access to "header information," such as the file's total size, creation date, and type. File Access Services may model files in two ways: as a continuous stream of octets or as a contiguous sequence of numbered records.

The File Access Services provide atomic read and write operations. In this context "atomic" means that during the execution of a read or write operation, no other AtomicReadFile or AtomicWriteFile operations are allowed for the same file. Synchronization of these services with internal operations of the BACnet device is a local matter and is not defined by this standard.

## 14.1 AtomicReadFile Service

The AtomicReadFile Service is used by a client BACnet-user to perform an open-read-close operation on the contents of the specified file. The file may be accessed as records or as a stream of octets.

### 14.1.1 Structure

The structure of the AtomicReadFile service primitives is shown in Table 14-1. The terminology and symbology used in this table are explained in 5.6.

**Table 14-1.** Structure of AtomicReadFile Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
File Identifier	M	M(=)		
Stream Access	S	S(=)		
File Start Position	M	M(=)		
Requested Octet Count	M	M(=)		
Record Access	S	S(=)		
File Start Record	M	M(=)		
Requested Record Count	M	M(=)		
Result(+)			S	S(=)
End Of File			M	M(=)
Stream Access			S	S(=)
File Start Position			M	M(=)
File Data			C	C(=)
Record Access			S	S(=)
File Start Record			M	M(=)
Returned Record Count			M	M(=)
File Record Data			C	C(=)
Result(-)			S	S(=)
Error Type			M	M(=)

### 14.1.2 Argument

This parameter shall convey the parameters for the AtomicReadFile confirmed service request.

#### 14.1.2.1 File Identifier

This parameter is the Object\_Identifier of the File object that identifies the file to be read.

#### 14.1.2.2 Stream Access

The 'Stream Access' parameter shall indicate that stream-oriented file access is required. Stream access includes the parameters 'File Start Position' and 'Requested Octet Count'.

##### 14.1.2.2.1 File Start Position

This parameter, of type INTEGER, represents the number of octets from the beginning of the file at which reading shall commence. A 'File Start Position' of 0 is the first octet of the file.

##### 14.1.2.2.2 Requested Octet Count

This parameter, of type Unsigned, represents the number of octets that shall be read from the file starting at the 'File Start Position'.

#### 14.1.2.3 Record Access

The 'Record Access' parameter shall indicate that record-oriented file access is required. Record access includes the parameters 'File Start Record' and 'Requested Record Count'.

#### **14.1.2.3.1 File Start Record**

This parameter, of type INTEGER, represents the number of records from the beginning of the file at which reading shall commence. A 'File Start Record' of 0 is the first record of the file.

#### **14.1.2.3.2 Requested Record Count**

This parameter, of type Unsigned, represents the number of records that shall be read from the file starting at the 'File Start Record'.

#### **14.1.3 Result(+)**

The 'Result(+)’ parameter shall indicate that the service request succeeded. A successful result includes the following parameters.

##### **14.1.3.1 End Of File**

The 'End Of File' parameter, of type BOOLEAN, shall be equal to TRUE if this response includes the last octet of the file and FALSE otherwise. This parameter shall be used to check for the end of file since the number of octets returned could be less than the 'Requested Octet Count' or the 'Returned Record Count' could be less than the 'Requested Record Count' due to the amount of data remaining in the file. This parameter also provides a data-independent way for the client user of this service to detect an end of file.

##### **14.1.3.2 Stream Access**

The 'Stream Access' parameter shall indicate that stream-oriented file access was requested. Stream access includes the parameters 'File Start Position' and 'File Data'.

###### **14.1.3.2.1 File Start Position**

This parameter, of type INTEGER, represents the number of octets from the beginning of the file from which the start of the data was read. A 'File Start Position' of 0 is the first octet of the file.

###### **14.1.3.2.2 File Data**

This parameter consists of an OCTET STRING that contains the requested file data.

##### **14.1.3.3 Record Access**

The 'Record Access' parameter shall indicate that record-oriented file access was requested. Record access includes the parameters 'File Start Record', 'Returned Record Count', and 'File Record Data'.

###### **14.1.3.3.1 File Start Record**

This parameter, of type INTEGER, represents the number of records from the beginning of the file from which the start of the data was read. A 'File Start Record' of 0 is the first record of the file.

###### **14.1.3.3.2 Returned Record Count**

This parameter, of type Unsigned, represents the number of records that were actually read from the file, which may be less than the 'Requested Record Count'.

###### **14.1.3.3.3 File Record Data**

This parameter consists of a List of OCTET STRINGs that contain the requested file data.

#### **14.1.4 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed in its entirety. The reason for the failure shall be specified by the 'Error Type' parameter.

##### **14.1.4.1 Error Type**

This parameter consists of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation:</u>	<u>Error Class:</u>	<u>Error Code:</u>
The File object does not exist.	OBJECT	UNKNOWN_OBJECT

'File Start Record' is out of range.      SERVICES      INVALID\_FILE\_START\_POSITION  
Incorrect File access method.      SERVICES      INVALID\_FILE\_ACCESS\_METHOD

#### 14.1.5 Service Procedure

The responding BACnet-user shall first verify the validity of the 'File Identifier' parameter and return a 'Result(-)' response with the appropriate error class and code if the File object is unknown, if there is currently another AtomicReadFile or AtomicWriteFile service in progress, or if the File object is currently inaccessible for another reason. If the 'File Start Position' parameter or the 'File Start Record' parameter is either less than 0 or exceeds the actual file size, then the appropriate error is returned in a 'Result(-)' response. If not, then the responding BACnet-user shall read the number of octets specified by 'Requested Octet Count' or the number of records specified by 'Requested Record Count'. If the number of remaining octets or records is less than the requested amount, then the length of the 'File Data' returned or 'Returned Record Count' shall indicate the actual number read. If the returned response contains the last octet or record of the file, then the 'End Of File' parameter shall be TRUE, otherwise FALSE.

## 14.2 AtomicWriteFile Service

The AtomicWriteFile Service is used by a client BACnet-user to perform an open-write-close operation of an OCTET STRING into a specified position or a List of OCTET STRINGS into a specified group of records in a file. The file may be accessed as records or as a stream of octets.

### 14.2.1 Structure

The structure of the AtomicWriteFile service primitives is shown in Table 14-2. The terminology and symbology used in this table are explained in 5.6.

**Table 14-2.** Structure of AtomicWriteFile Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
File Identifier	M	M(=)		
Stream Access	S	S(=)		
File Start Position	M	M(=)		
File Data	M	M(=)		
Record Access	S	S(=)		
File Start Record	M	M(=)		
Record Count	M	M(=)		
File Record Data	M	M(=)		
Result(+)			S	S(=)
Stream Access			S	S(=)
File Start Position			M	M(=)
Record Access			S	S(=)
File Start Record			M	M(=)
Result(-)			S	S(=)
Error Type			M	M(=)

### 14.2.2 Argument

This parameter shall convey the parameters for the AtomicWriteFile confirmed service request.

#### 14.2.2.1 File Identifier

This parameter is the Object\_Identifier of the File object that identifies the file to be written.

#### 14.2.2.2 Stream Access

The 'Stream Access' parameter shall indicate that stream-oriented file access is required. Stream access includes the parameters 'File Start Position' and 'File Data'.

##### 14.2.2.2.1 File Start Position

This parameter, of type INTEGER, represents the number of octets from the beginning of the file at which the data shall start being written. A 'File Start Position' of 0 is the first octet of the file. A 'File Start Position' of -1 shall indicate the end of the current file, i.e., an append to file operation.

##### 14.2.2.2.2 File Data

This parameter consists of an OCTET STRING that is to be written to the file.

##### 14.2.2.3 Record Access

The 'Record Access' parameter shall indicate that record-oriented file access is required. Record access includes the parameters 'File Start Record', 'Record Count', and 'File Record Data'.

#### 14.2.2.3.1 File Start Record

This parameter, of type INTEGER, represents the number of records from the beginning of the file at which the data shall start being written. A 'File Start Record' of 0 is the first record of the file. A 'File Start Record' of -1 shall indicate the end of the current file, i.e. an append to file operation.

#### 14.2.2.3.2 Record Count

This parameter, of type Unsigned, represents the number of records that shall be written to the file starting at the 'File Start Record'.

#### 14.2.2.3.3 File Record Data

This parameter consists of a List of OCTET STRINGs that is to be written to the file.

### 14.2.3 Result(+)

The 'Result(+)’ parameter shall indicate that the service request succeeded. A successful result shall include the following parameters.

#### 14.2.3.1 Stream Access

The 'Stream Access' parameter shall indicate that stream-oriented file access was requested. Stream access includes the 'File Start Position' parameter. The 'File Start Position' parameter, of type INTEGER, represents the number of octets from the beginning of the file where the data were actually written. A 'File Start Position' of 0 is the first octet of the file.

#### 14.2.3.2 Record Access

The 'Record Access' parameter shall indicate that record-oriented file access was requested. Record access includes the 'File Start Record' parameter. The 'File Start Record' parameter, of type INTEGER, represents the number of records from the beginning of the file where the data were actually written. A 'File Start Record' of 0 is the first record of the file.

### 14.2.4 Result(-)

The 'Result(-)' parameter shall indicate that the service request has failed in its entirety. The reason for the failure shall be specified by the 'Error Type' parameter.

#### 14.2.4.1 Error Type

This parameter consists of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation:</u>	<u>Error Class:</u>	<u>Error Code:</u>
The File object does not exist.	OBJECT	UNKNOWN_OBJECT
'File Start Record' is out of range.	SERVICES	INVALID_FILE_START_POSITION
Incorrect File access method.	SERVICES	INVALID_FILE_ACCESS_METHOD
Write to a read-only File.	SERVICES	FILE_ACCESS_DENIED

### 14.2.5 Service Procedure

The responding BACnet-user shall first verify the validity of the 'File Identifier' parameter and return a 'Result(-)' response with the appropriate error class and code if the File object is unknown, if there is currently another AtomicReadFile or AtomicWriteFile service in progress, or if the File object is currently inaccessible for another reason. If the 'File Start Position' parameter or the 'File Start Record' parameter exceeds the actual file size, then the file shall be extended to the size indicated, but the contents of any intervening octets or records shall be a local matter. If either of these parameters has the special value -1, then the write operation shall be treated as an append to the current end of file. Then the responding BACnet-user shall write the number of octets specified by 'Octet Count' or the number of records specified by 'Record Count' to the file. If the write fails for any reason, then a 'Result(-)' response with the appropriate error class and code shall be returned. If the write succeeds in its entirety, then a 'Result(+)’ response shall be returned. The 'File Start Position' or 'File Start Record' shall indicate the actual position or record at which data were written.

## 15 OBJECT ACCESS SERVICES

This clause defines nine application services that collectively provide the means to access and manipulate the properties of BACnet objects. A BACnet object is any object whose properties are accessible through this protocol regardless of its particular function within the device in which it resides. These services may be used to access the properties of vendor-defined objects as well as those of objects specified in this standard.

### 15.1 AddListElement Service

The AddListElement service is used by a client BACnet-user to add one or more list elements to an object property that is a list.

#### 15.1.1 Structure

The structure of the AddListElement service primitives is shown in Table 15-1. The terminology and symbology used in this table are explained in 5.6.

**Table 15-1.** Structure of AddListElement Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Object Identifier	M	M(=)		
Property Identifier	M	M(=)		
Property Array Index	C	C(=)		
List of Elements	M	M(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M(=)
First Failed Element Number			M	M(=)

#### 15.1.1.1 Argument

This parameter shall convey the parameters for the AddListElement confirmed service request.

##### 15.1.1.1.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall provide the means of identifying the object whose specified list property is to be modified by this service.

##### 15.1.1.1.2 Property Identifier

This parameter, of type BACnetPropertyIdentifier, shall provide the means of uniquely identifying the property to be modified by this service.

##### 15.1.1.1.3 Property Array Index

If the property identified above is of datatype array, this conditional parameter of type Unsigned shall be present and shall indicate the array index of the element of the referenced property to be modified by this service. Otherwise, it shall be omitted.

##### 15.1.1.1.4 List of Elements

This parameter specifies one or more elements that shall be added to the property specified by the 'Property Identifier' parameter. The datatype of the elements of this parameter is determined by the definition of the object type for the object specified by the 'Object Identifier' parameter.

#### 15.1.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the service request succeeded and all of the specified elements were added to the list.

### 15.1.1.3 Result(-)

The 'Result(-)' parameter shall indicate that the service request failed and none of the specified elements were added to the list. The reason for failure is specified by the 'Error Type' parameter.

#### 15.1.1.3.1 Error Type

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation:</u>	<u>Error Class:</u>	<u>Error Code:</u>
Specified object does not exist.	OBJECT	UNKNOWN_OBJECT
Specified property does not exist.	PROPERTY	UNKNOWN_PROPERTY
The element datatype does not match the property.	PROPERTY	INVALID_DATATYPE
The data being written has a datatype not supported by the property.	PROPERTY	DATATYPE_NOT_SUPPORTED
The element value is out of range for the property.	PROPERTY	VALUE_OUT_OF_RANGE
The specified property is currently not modifiable by the requester.	PROPERTY	WRITE_ACCESS_DENIED
There is not enough free memory for the element.	RESOURCES	NO_SPACE_TO_ADD_LIST_ELEMENT
The property or specified array element is not a list.	SERVICES	PROPERTY_IS_NOT_A_LIST
An array index is provided but the property is not an array.	PROPERTY	PROPERTY_IS_NOT_AN_ARRAY
An array index is provided that is outside the range existing in the property.	PROPERTY	INVALID_ARRAY_INDEX

#### 15.1.1.3.2 First Failed Element Number

This parameter, of type Unsigned, shall convey the numerical position, starting at 1, of the offending element in the 'List of Elements' parameter received in the request. If the request is considered invalid for reasons other than the 'List of Elements' parameter, the 'First Failed Element Number' shall be equal to zero.

### 15.1.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall attempt to modify the object identified in the 'Object Identifier' parameter. If the identified object exists and has the property specified in the 'Property Identifier' parameter, an attempt shall be made to add all of the elements specified in the 'List of Elements' parameter to the specified property. If this attempt is successful, a 'Result(+)’ primitive shall be issued. If one or more of the elements is already present in the list, it shall be ignored, that is, shall not be added to the list. Ignoring an element that already exists shall not cause the service to fail.

If the specified object does not exist, the specified property does not exist, or the specified property is not a list, then the service shall fail and a 'Result(-)' response primitive shall be issued. If one or more elements cannot be added to the list and they are not already members, a 'Result(-)' response primitive shall be issued and no elements shall be added to the list.

The effect of this service shall be to add to the list all of the specified elements that are not already present or to add no elements to the list at all.

## 15.2 RemoveListElement Service

The RemoveListElement service is used by a client BACnet-user to remove one or more elements from the property of an object that is a list. If an element is itself a list, the entire element shall be removed. This service does not operate on nested lists.

### 15.2.1 Structure

The structure of the RemoveListElement service primitives is shown in Table 15-2. The terminology and symbology used in this table are explained in 5.6.

**Table 15-2.** Structure of RemoveListElement Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Object Identifier	M	M(=)		
Property Identifier	M	M(=)		
Property Array Index	C	C(=)		
List of Elements	M	M(=)		
Result (+)			S	S(=)
Result (-)			S	S(=)
Error Type			M	M(=)
First Failed Element Number			M	M(=)

#### 15.2.1.1 Argument

This parameter shall convey the parameters for the RemoveListElement confirmed service request.

##### 15.2.1.1.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall provide the means of identifying the object whose specified list property is to be modified by this service.

##### 15.2.1.1.2 Property Identifier

This parameter, of type BACnetPropertyIdentifier, shall provide the means of uniquely identifying the property to be modified by this service.

##### 15.2.1.1.3 Property Array Index

If the property identified above is of datatype array, this conditional parameter of type Unsigned shall be present and shall indicate the array index of the element of the referenced property to be modified by this service. Otherwise, it shall be omitted.

##### 15.2.1.1.4 List of Elements

This parameter specifies one or more elements that shall be removed from the property specified in the 'Property Identifier' parameter. The datatype of the elements of this parameter is determined by the definition of the object type for the object specified by the 'Object Identifier' parameter.

##### 15.2.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the service request succeeded and all of the specified elements have been removed.

##### 15.2.1.3 Result(-)

The 'Result(-)' parameter shall indicate that the service request failed. The reason for failure is specified by the 'Error Type' parameter. None of the elements of the specified object shall be removed.

##### 15.2.1.3.1 Error Type

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation:</u>	<u>Error Class:</u>	<u>Error Code:</u>
Specified object does not exist.	OBJECT	UNKNOWN_OBJECT
Specified property does not exist.	PROPERTY	UNKNOWN_PROPERTY
The element datatype does not match the property.	PROPERTY	INVALID_DATATYPE
The specified property is currently not modifiable by the requestor.	PROPERTY	WRITE_ACCESS_DENIED
A list element to be removed is not present.	SERVICES	LIST_ELEMENT_NOT_FOUND
The property or specified array element is not a list.	SERVICES	PROPERTY_IS_NOT_A_LIST
An array index is provided but the property is not an array.	PROPERTY	PROPERTY_IS_NOT_AN_ARRAY
An array index is provided that is outside the range existing in the property.	PROPERTY	INVALID_ARRAY_INDEX

#### 15.2.1.3.2 First Failed Element Number

This parameter, of type Unsigned, shall convey the numerical position, starting at 1, of the offending element in the 'List of Elements' parameter received in the request. If the request is considered invalid for reasons other than the 'List of Elements' parameter, the 'First Failed Element Number' shall be equal to zero.

#### 15.2.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall attempt to modify the object identified in the 'Object Identifier' parameter. If the identified object exists and it has the property specified in the 'Property Identifier' parameter, an attempt shall be made to remove the elements in the 'List of Elements' from the property of the object. If one or more of the elements does not exist or cannot be removed because of insufficient authority, none of the elements shall be removed and a 'Result(-)' response primitive shall be issued.

### 15.3 CreateObject Service

The CreateObject service is used by a client BACnet-user to create a new instance of an object. This service may be used to create instances of both standard and vendor specific objects. The standard object types supported by this service shall be specified in the PICS. The properties of standard objects created with this service may be initialized in two ways: initial values may be provided as part of the CreateObject service request or values may be written to the newly created object using the BACnet WriteProperty services. The initialization of non-standard objects is a local matter. The behavior of objects created by this service that are not supplied, or only partially supplied, with initial property values is dependent upon the device and is a local matter.

#### 15.3.1 Structure

The structure of the CreateObject service primitives is shown in Table 15-3. The terminology and symbology used in this table are explained in 5.6.

**Table 15-3.** Structure of CreateObject Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Object Specifier	M	M(=)		
List of Initial Values	U	U(=)		
Result(+)			S	S(=)
Object Identifier			M	M(=)
Result(-)			S	S(=)
Error Type			M	M(=)
First Failed Element Number			M	M(=)

#### 15.3.1.1 Argument

This parameter shall convey the parameters for the CreateObject confirmed service request.

##### 15.3.1.1.1 Object Specifier

This parameter shall convey information about the type of object that is to be created. The datatype is a choice between an object type and an object identifier. If the object type choice is used, the specified object type shall become the value of the Object\_Type property of the newly created object and the responding BACnet-user shall select an object identifier. If the object identifier choice is used, an object with this particular object identifier shall be created.

##### 15.3.1.1.2 List of Initial Values

This parameter shall convey a list of BACnetPropertyValues that shall be used to initialize the values of the specified properties of the newly created object.

##### 15.3.1.2 Result(+)

The 'Result(') parameter shall indicate that the service request succeeded. A success includes successfully initializing all the properties specified in the 'List of Initial Values' parameter. The 'Result(') shall convey as a parameter an 'Object Identifier', which is the value of the Object\_Identifier property of the newly created object. This identifier shall be unique within the server device.

##### 15.3.1.3 Result(-)

The 'Result(') parameter shall indicate that the service request failed. The reason for failure is specified by the 'Error Type' parameter.

##### 15.3.1.3.1 Error Type

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation</u>	<u>Error Class</u>	<u>Error Code</u>
The device cannot allocate the space needed for the new object.	RESOURCES	NO_SPACE_FOR_OBJECT
The device does not support creation of this object for any reason other than space.	OBJECT	DYNAMIC_CREATION_NOT_SUPPORTED
The object being created already exists.	OBJECT	OBJECT_IDENTIFIER_ALREADY_EXISTS
A datatype of a property value specified in the List of Initial Values does not match the datatype of the property specified by the Property_Identifier.	PROPERTY	INVALID_DATATYPE
A value used in the List of Initial Values is outside the range of values defined for the property specified by the Property_Identifier.	PROPERTY	VALUE_OUT_OF_RANGE
A Property_Identifier has been specified in the List of Initial Values that is unknown for objects of the type being created.	PROPERTY	UNKNOWN_PROPERTY
A character string value was encountered in the List of Initial Values that is not a supported character set.	PROPERTY	CHARACTER_SET_NOT_SUPPORTED
A property specified by the Property_Identifier in the List of Initial Values does not support initialization during the CreateObject service.	PROPERTY	WRITE_ACCESS_DENIED
The data being written has a datatype not supported by the property.	PROPERTY	DATATYPE_NOT_SUPPORTED

### 15.3.1.3.2 First Failed Element Number

This parameter, of type Unsigned, shall convey the numerical position, starting at 1, of the offending 'Initial Value' in the 'List of Initial Values' parameter received in the request. If the request is considered invalid for reasons other than the 'List of Initial Values' parameter, the 'First Failed Element Number' shall be equal to zero.

### 15.3.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall attempt to create a new object of the type specified in the 'Object Specifier' parameter.

If the 'Object Specifier' parameter contains an object type, the Object\_Identifier property of the newly created object shall be initialized to a value that is unique within the responding BACnet-user device. The method used to generate the object identifier is a local matter. The Object\_Type property shall be initialized to the value of the 'Object Specifier' parameter. If a new object of the specified type cannot be created, a 'Result(-)' primitive shall be returned and the 'First Failed Element Number' parameter shall have a value of zero.

If the 'Object Specifier' parameter contains an object identifier, the responding BACnet-user shall determine if an object with this identifier already exists. If such an object exists, then a new object shall not be created, and a 'Result(-)' primitive shall be returned and the 'First Failed Element Number' parameter shall have a value of zero. If such an object does not exist and it cannot be created, a 'Result(-)' primitive shall be returned and the 'First Failed Element Number' parameter shall have a value of zero. If such an object does not exist but it can be created, the new object shall be created. The Object\_Identifier property of the new object shall have the value specified in the 'Object Specifier' parameter, and the Object\_Type property shall have a value consistent with the object type field of the Object\_Identifier. See Clause 20.2.14.

If the optional 'List of Initial Values' parameters is included, then all properties in the list shall be initialized as indicated. The initial values of all other properties are a local matter. If this initialization cannot be done, then a 'Result(-)' primitive shall be returned. The 'First Failed Element Number' parameter shall indicate the first property in the 'List of Initial Values' that cannot be initialized, and the object shall not be created. If the attempt to create the object is successful, a 'Result(+) response primitive shall be issued that conveys the value of the Object\_Identifier property of the newly created object.

## 15.4 DeleteObject Service

The DeleteObject service is used by a client BACnet-user to delete an existing object. Although this service is general in the sense that it can be applied to any object type, it is expected that most objects in a control system cannot be deleted by this service because they are protected as a security feature. There are some objects, however, that may be created and deleted dynamically. Group objects and Event Enrollment objects are examples. This service is primarily used to delete objects of these types but may also be used to remove vendor-specific deletable objects.

### 15.4.1 Structure

The structure of the DeleteObject service primitives is shown in Table 15-4. The terminology and symbology used in this table are explained in 5.6.

**Table 15-4.** Structure of DeleteObject Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Object Identifier	M	M(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M(=)

#### 15.4.1.1 Argument

This parameter shall convey the parameters for the DeleteObject confirmed service request.

##### 15.4.1.1.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall specify the object that is to be deleted by this service.

##### 15.4.1.2 Result(+)

The 'Result('+) parameter shall indicate that the service request succeeded and the specified object was deleted.

##### 15.4.1.3 Result(-)

The 'Result(-)' parameter shall indicate that the service request failed and the specified object was not deleted. The reason for failure is specified in the 'Error type' parameter.

##### 15.4.1.3.1 Error Type

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation</u>	<u>Error Class</u>	<u>Error Code</u>
The object to be deleted does not exist.	OBJECT	UNKNOWN_OBJECT
The object exists but cannot be deleted.	OBJECT	OBJECT_DELETION_NOT_PERMITTED

## 15.4.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall attempt to delete the object specified by the 'Object Identifier' parameter of the request/indication primitive. If the specified object exists and can be deleted, it shall be deleted and the 'Result('+' primitive shall be issued. If the specified object does not exist or cannot be deleted, then the 'Result(-)' primitive shall be issued.

## 15.5 ReadProperty Service

The ReadProperty service is used by a client BACnet-user to request the value of one property of one BACnet Object. This service allows read access to any property of any object, whether a BACnet-defined object or not.

### 15.5.1 Structure

The structure of the ReadProperty service primitives is shown in Table 15-5. The terminology and symbology used in this table are explained in 5.6.

**Table 15-5.** Structure of ReadProperty Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Object Identifier	M	M(=)		
Property Identifier	M	M(=)		
Property Array Index	U	U(=)		
Result (+)			S	S(=)
Object Identifier			M	M(=)
Property Identifier			M	M(=)
Property Array Index			U	U(=)
Property Value			M	M(=)
Result (-)			S	S(=)
Error Type			M	M(=)

#### 15.5.1.1 Argument

This parameter shall convey the parameters for the ReadProperty confirmed service request.

##### 15.5.1.1.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall provide the means of identifying the object whose property is to be read and returned to the client BACnet-user.

##### 15.5.1.1.2 Property Identifier

This parameter, of type BACnetPropertyIdentifier, shall provide the means of uniquely identifying the property to be read and returned by this service. Because this service is intended to read a single property of a single object, the value of this parameter shall not be one of the special property identifiers ALL, REQUIRED, or OPTIONAL.

##### 15.5.1.1.3 Property Array Index

If the property identified above is of datatype array, this optional parameter of type Unsigned shall indicate the array index of the element of the property referenced by this service. If the 'Property Array Index' is omitted, this shall mean that the entire array shall be referenced.

If the property identified above is not of datatype array, this parameter shall be omitted.

#### 15.5.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the service request succeeded. A successful result includes the following parameters:

##### 15.5.1.2.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall identify the object whose property has been read and is being returned to the client BACnet-user.

##### 15.5.1.2.2 Property Identifier

This parameter, of type BACnetPropertyIdentifier, shall identify the property that was read and is being returned by this service. Because this service is intended to read a single property of a single object, the value of this parameter shall not be one of the special property identifiers ALL, REQUIRED, or OPTIONAL.

### **15.5.1.2.3 Property Array Index**

If the property identified above is of datatype array and a 'Property Array Index' was specified in the request, this parameter of type Unsigned shall be present and shall indicate the array index of the element of the property referenced by this service. Otherwise it shall be omitted.

### **15.5.1.2.4 Property Value**

If access to the specified property of the specified object was successful, this parameter shall be returned. It shall be of the datatype appropriate to the specified property and shall contain the value of the requested property.

### **15.5.1.3 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed in its entirety. The reason for the failure shall be specified by the 'Error Type' parameter.

#### **15.5.1.3.1 Error Type**

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation</u>	<u>Error Class</u>	<u>Error Code</u>
Specified object does not exist.	OBJECT	UNKNOWN_OBJECT
Specified property does not exist.	PROPERTY	UNKNOWN_PROPERTY
An array index is provided but the property is not an array.	PROPERTY	PROPERTY_IS_NOT_AN_ARRAY
An array index is provided that is outside the range existing in the property.	PROPERTY	INVALID_ARRAY_INDEX

### **15.5.2 Service Procedure**

After verifying the validity of the request, the responding BACnet-user shall attempt to access the specified property of the specified object. If the access is successful, a 'Result(+)’ primitive, which returns the accessed value, shall be generated. If the access fails, a 'Result(-)' primitive shall be generated, indicating the reason for the failure.

When the object-type in the Object Identifier parameter contains the value 'Device Object' and the instance in the 'Object Identifier' parameter contains the value 4194303, the responding BACnet-user shall treat the Object Identifier as if it correctly matched the local Device object. This allows the device instance of a device that does not generate I-Am messages to be determined.

## 15.6 ReadPropertyConditional Service

The ReadPropertyConditional service is used by a client BACnet-user to request the object identifiers and values of zero or more specified properties of all BACnet Objects that meet a list of selection criteria or "conditions." The conditions are Boolean expressions of the form (Property.Relational\_Operator.Constant). In addition, the list of conditions may be logically OR'ed or AND'ed to determine whether a particular object is to be included in the set of objects whose properties are to be read. A final possibility is that ALL objects are selected and their specified properties read.

The difference between the ReadProperty service and this service is that in the ReadProperty service the objects whose properties are to be read are identified explicitly by the client BACnet-user; in the ReadPropertyConditional service, the objects are identified by the responding BACnet-user by means of the supplied selection criteria.

### 15.6.1 Structure

The structure of the ReadPropertyConditional service primitives is shown in Table 15-6. The terminology and symbology used in this table are explained in 5.6.

**Table 15-6.** Structure of ReadPropertyConditional Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Object Selection Criteria	M	M(=)		
List of Property References	U	U(=)		
Result (+) List of Read Access Results			S M	S(=) M(=)
Result (-) Error Type			S M	S(=) M(=)

#### 15.6.1.1 Argument

This parameter shall convey the parameters for the ReadPropertyConditional confirmed service request.

##### 15.6.1.1.1 Object Selection Criteria

This parameter shall consist of a 'Selection Logic' parameter and conditionally, a list of one or more 'Selection Criteria'. Each explicit criterion consists of up to four parameters: (1) a 'Property Identifier', (2) an optional 'Property Array Index', (3) a 'Relation Specifier', and (4) a 'Comparison Value' appropriate to the identified property. See 15.6.3.1.

##### 15.6.1.1.2 List of Property References

This optional parameter, if present, shall be a list of one or more BACnetPropertyReferences, each of which corresponds directly to a specific property of any object selected on the basis of the 'Object Selection Criteria'. Specifying the property ALL indicates that all properties of any selected object shall be returned, including any proprietary properties. Specifying the property REQUIRED means that only those properties having a conformance code of "R" or "W" shall be returned. Specifying the property identifier OPTIONAL means that only those properties that have a conformance code of "O" shall be returned. See the specification for the particular object type in Clause 12. If this parameter is absent, no properties shall be returned in the 'List of Read Access Results' portion of the 'Result(+)’ primitive; however, the object identifier shall be returned in the 'Object Identifier' parameter.

#### 15.6.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the service request succeeded. A successful result includes the following parameter.

##### 15.6.1.2.1 List of Read Access Results

The 'List of Read Access Results' parameter shall indicate, for each specified property of all objects selected on the basis of the 'Object Selection Criteria', the success or failure of the attempt to read that property. Each 'Read Access Result' shall provide the 'Object Identifier', 'Property Identifier', and, conditionally, the 'Property Array Index' for each read access attempted. If the read access was successful, the next parameter shall be the value of the specified property. If the property access failed, the next parameter shall be an error code indicating the reason for the access failure. If no objects are selected

on the basis of the 'Object Selection Criteria', then the 'List of Read Access Results' shall be of length zero. If the 'List of Property References' was not present in the request, the 'List of Read Access Results' shall consist of a list of 'Read Access Results' with empty property lists, thus conveying the object identifiers for objects that matched the Selection Criteria.

### **15.6.1.3 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed in its entirety. The reason for the failure shall be specified by the 'Error Type' parameter.

#### **15.6.1.3.1 Error Type**

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18.

### **15.6.2 Service Procedure**

After verifying the validity of the request, the responding BACnet-user shall search its object database for objects meeting the specified selection criteria. For each object found, a 'Read Access Result' shall be constructed based upon the specified 'List of Property References'. While there is no requirement that the request be carried out "atomically," nonetheless the responding BACnet-user shall ensure that all readings are taken in the shortest possible time subject only to higher priority processing. The request shall continue to be executed until an attempt has been made to access all specified properties of all selected objects. If no objects are found that meet the specified criteria, then a 'Result(+) primitive shall be returned with a 'List of Results' of zero length. If one or more objects are found that meet the selection criteria, then a 'Result(+) primitive shall be returned that conveys the 'Read Access Results' for all matches that are found.

### **15.6.3 Parameters Referenced by the ReadPropertyConditional Service**

The following parameters appear in the ReadPropertyConditional service primitives:

#### **15.6.3.1 Object Selection Criteria Parameter**

The Object Selection Criteria' parameter is shown in Table 15-7. The terminology and symbology used in this table are explained in 5.6.

**Table 15-7.** Structure of 'Object Selection Criteria' Parameter

Parameter Name	Req Ind	Rsp Cnf	Datatype
Selection Logic	M	M(=)	Enumerated
List of Selection Criteria	C	C(=)	
Property Identifier	M	M(=)	BACnetPropertyIdentifier
Property Array Index	C	C(=)	Unsigned
Relation Specifier	M	M(=)	Enumerated
Comparison Value	M	M(=)	ANY

##### **15.6.3.1.1 Selection Logic**

This parameter shall indicate the scope of the objects whose properties are to be returned. Three values are permitted: AND, OR, and ALL. In cases where this parameter is either AND or OR, this parameter shall indicate the method by which multiple selection criteria are to be combined to determine if a particular object is to be included in the set of objects whose properties are to be returned. If AND is specified, all the Selection Criteria must evaluate to TRUE for the object to be included. If OR is specified, at least one of the Selection Criteria must evaluate to TRUE for the object to be included. If ALL is specified, all objects contained in the responding BACnet-user's object database are selected and the 'List of Selection Criteria' shall be omitted from the request primitive.

##### **15.6.3.1.2 List of Selection Criteria**

This parameter, if present, shall consist of a list of one or more property relationships that shall be used to select specific objects of the type specified above. Each relationship consists of a 'Property Identifier', a conditional 'Property Array Index', a 'Relation Specifier', and 'Comparison Value'. Taken together, each group of parameters forms a Boolean expression that when evaluated by the responding BACnet-user, is either TRUE or FALSE. If more than one property relationship is specified, the results of all the evaluations shall be combined based upon the 'Selection Logic' parameter to yield an overall TRUE or FALSE value. A value of TRUE causes the responding BACnet-user to return the values of the properties specified by the 'List of Property References' for this object.

### 15.6.3.1.2.1 Property Identifier

This parameter, of type BACnetPropertyIdentifier, shall identify the property whose value is to be used in the object selection process. The value of this parameter may not be one of the special property identifiers ALL, REQUIRED, or OPTIONAL.

### 15.6.3.1.2.2 Property Array Index

If the property identified above is of datatype array, this conditional parameter of type Unsigned shall be present and shall indicate the array index of the element of the property referenced by this service. Otherwise, it shall be omitted. A 'Property Array Index' value of zero is not permitted.

### 15.6.3.1.2.3 Relation Specifier

This parameter shall represent one of the six Boolean operators:

=	(equality)	>	(greater than)
≠	(inequality)	≤	(less than or equal to)
<	(less than)	≥	(greater than or equal to)

These Boolean operators may not be used for every property of every object. Some property values may only allow equals (=) and not equals (≠) comparisons. Table 15-8 shows which operators may be used with each datatype.

**Table 15-8.** Valid Boolean Operators for BACnet Datatypes

Datatype	Operators Allowed	Datatype	Operators Allowed
NULL	= ≠	CharacterString	= ≠ < > ≤ ≥
BOOLEAN	= ≠	OCTET STRING	= ≠
Unsigned	= ≠ < > ≤ ≥	ENUMERATED	= ≠
INTEGER	= ≠ < > ≤ ≥	Date	= ≠ < > ≤ ≥
REAL	= ≠ < > ≤ ≥	Time	= ≠ < > ≤ ≥
BIT STRING	= ≠	Others	= ≠
BACnetObjectIdentifier	= ≠ < > ≤ ≥		

### 15.6.3.1.2.4 Comparison Value

This parameter shall be a constant of the same datatype as the property being compared. If the Comparison Value is being used to select properties of type CharacterString, then the "wildcard" characters "?" and "\*" may be used but only for the = or ≠ operators.

The "?" character is used to match exactly one character at the position at which it occurs in the string. A Comparison Value may contain multiple occurrences of "?". Thus "?1" matches "AC1", "CP1", "SF1". It does not match "C1", "P1", or "PUMP1".

The "\*" is used to match zero or more characters starting at its position in the string and extending to the right. Only one "\*" wildcard may be used per comparison value. Thus "C\*1" matches "C1", "CP1", and "Chiller1".

When comparison value is being used to select object identifiers, the object identifier shall be considered as a 32-bit unsigned integer with the most significant octet being the first octet of the object identifier.

When the comparison value is being used to select character strings the comparisons are case sensitive. When character strings are compared for inequalities (<, >, ≤, ≥), they are compared based on the numerical encoding of each character, left to right, "phone book style." For example:

"ABC" < "ABCD" < "DE" < "DEF"

When properties with a Date or Time datatype are compared for inequalities, the comparison shall be chronological. For example:

1-Jan-1991 < 2-Feb-1992

7:00:00.00 < 23:00:00.00

Subcomponents of a Date or Time, such as the year, may be "wildcarded" if the value of the subcomponent is the special value "unspecified." Subcomponents of a Date or Time that have the value "unspecified" shall be skipped in the comparison and that subcomponent shall be considered as "equal." It is possible that either the comparison value, or the property value with which it is being compared, or both, may have subcomponent(s) whose value(s) are "unspecified." In either case, the rules for matching unspecified values shall apply. For example (using \* to mean unspecified):

<u>Comparison Value</u>		<u>Property Value</u>	<u>Because</u>
*-* Sun	=	29-Jan-1995 Sun	Sun = Sun
1-Jan-*	<	2-Feb-1995	1-Jan < 2-Feb
*-Aug-*	>	10-Mar-1995	Aug > Mar
*:59:00.00	>	6:23:99.0	59:00.00 > 23:00.00
6:*.*:*	=	6:25:00.00	6 = 6

Properties with datatype NULL, BOOLEAN, BIT STRING, OCTET STRING, ENUMERATED, or any complex structure of primitive types may only be compared as equal or not equal (=, ≠).

### 15.6.3.2 Read Access Result

The 'Read Access Result' parameter is shown in Table 15-9. The terminology and symbology used in this table are explained in 5.6.

**Table 15-9.** Structure of 'Read Access Result' Parameter

Parameter Name	Rsp	Cnf	Datatype
Object Identifier	M	M(=)	BACnetObjectIdentifier
List of Results	U	U(=)	
Property Identifier	M	M(=)	BACnetPropertyIdentifier
Property Array Index	U	U(=)	Unsigned
Property Value	S	S(=)	ANY
Property Access Error	S	S(=)	Error

#### 15.6.3.2.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall identify the object whose properties are being returned to the service requester.

#### 15.6.3.2.2 List of Results

The result of reading a given property is either the value of the property or an error code indicating why the access attempt failed. Note that if the 'List of Property References' parameter was not specified in the original request, the 'List of Results' parameter is to be omitted. This provides a means of obtaining a list of Object Identifiers of all objects meeting the specified 'Object Selection Criteria' without receiving the values of any particular properties of those objects.

##### 15.6.3.2.2.1 Property Identifier

This parameter, of type BACnetPropertyIdentifier, shall identify the property whose value is to be returned.

##### 15.6.3.2.2.2 Property Array Index

If the property identified above is of datatype array and a 'Property Array Index' was specified in the request, this parameter of type Unsigned shall be present and shall indicate the array index of the element of the property referenced by this service. Otherwise it shall be omitted.

##### 15.6.3.2.2.3 Property Value

If access to the specified property of the selected object is successful, this parameter shall be returned. It shall be of the datatype appropriate to the specified property and shall contain the value of the requested property.

##### 15.6.3.2.2.4 Property Access Error

If the responding BACnet-user is unable to access the specified property of the specified object, then this parameter shall be returned. It shall contain a value that indicates the reason for the access failure. This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. Note that this parameter refers only to a failure of the

access to a specific property of a specific object, whereas the 'Error Type' parameter returned in the 'Result(-)' primitive refers to a failure of the entire ReadPropertyConditional service request.

## 15.7 ReadPropertyMultiple Service

The ReadPropertyMultiple service is used by a client BACnet-user to request the values of one or more specified properties of one or more BACnet Objects. This service allows read access to any property of any object, whether a BACnet-defined object or not. The user may read a single property of a single object, a list of properties of a single object, or any number of properties of any number of objects. A 'Read Access Specification' with the property identifier ALL can be used to learn the implemented properties of an object along with their values.

### 15.7.1 Structure

The structure of the ReadPropertyMultiple service primitives is shown in Table 15-10. The terminology and symbology used in this table are explained in 5.6.

**Table 15-10.** Structure of ReadPropertyMultiple Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument List of Read Access Specifications	M M	M(=) M(=)		
Result (+) List of Read Access Results			S M	S(=) M(=)
Result (-) Error Type			S M	S(=) M(=)

#### 15.7.1.1 Argument

This parameter shall convey the parameters for the ReadPropertyMultiple confirmed service request.

##### 15.7.1.1.1 List of Read Access Specifications

This parameter shall consist of a list of one or more 'Read Access Specifications'. Each specification shall consist of two parameters: (1) an 'Object Identifier' and (2) a 'List of Property References'. See 15.7.3.1.

##### 15.7.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the service request succeeded. A successful result includes the following parameter.

##### 15.7.1.2.1 List of Read Access Results

The 'List of Read Access Results' parameter shall indicate the success or failure of the access to each specified property. The contents of each Read Access Result are described in 15.7.3.2.

##### 15.7.1.3 Result(-)

The 'Result(-)' parameter shall indicate that the service request has failed in its entirety. The reason for the failure shall be specified by the 'Error Type' parameter.

##### 15.7.1.3.1 Error Type

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation</u>	<u>Error Class</u>	<u>Error Code</u>
Specified object does not exist.	OBJECT	UNKNOWN_OBJECT
Specified property does not exist.	PROPERTY	UNKNOWN_PROPERTY
An array index is provided but the property is not an array.	PROPERTY	PROPERTY_IS_NOT_AN_ARRAY
An array index is provided that is outside the range existing in the property.	PROPERTY	INVALID_ARRAY_INDEX

### 15.7.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall attempt to access the specified properties of the specified objects and shall construct a 'List of Read Access Results' in the order specified in the request. If the 'List of Property References' portion of the 'List of Read Access Specifications' parameter contains the property identifier ALL, REQUIRED, or OPTIONAL, then the 'List of Read Access Results' shall be constructed as if each property being returned had been explicitly referenced (see 15.7.3.1.2). While there is no requirement that the request be carried out "atomically," nonetheless the responding BACnet-user shall ensure that all readings are taken in the shortest possible time subject only to higher priority processing. The request shall continue to be executed until an attempt has been made to access all specified properties. If none of the specified objects is found or if none of the specified properties of the specified objects can be accessed, either a 'Result(-)' primitive or a Result(+) primitive that returns error codes for all properties shall be issued. If any of the specified properties of the specified objects can be accessed, then a 'Result(+)'' primitive shall be issued, which returns all accessed values and error codes for all properties that could not be accessed.

When the object-type in the Object Identifier portion of the Read Access Specification parameter contains the value 'Device Object' and the instance of that 'Object Identifier' parameter contains the value 4194303, the responding BACnet-user shall treat the Object Identifier as if it correctly matched the local Device object. This allows the device instance of a device that does not generate I-Am messages to be determined.

### 15.7.3 Parameters Referenced by the ReadPropertyMultiple Service

The following parameters appear in the ReadPropertyMultiple service primitives.

#### 15.7.3.1 Read Access Specification Parameter

The 'Read Access Specification' parameter is shown in Table 15-11. The terminology and symbology used in this table are explained in 5.6.

**Table 15-11.** Structure of 'Read Access Specification' Parameter

Parameter Name	Req Ind	Rsp Cnf	Datatype
Object Identifier	M	M(=)	BACnetObjectIdentifier
List of Property References	M	M(=)	List of BACnetPropertyReference

##### 15.7.3.1.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall provide the means of identifying the object whose properties are to be read and returned to the service requester.

##### 15.7.3.1.2 List of Property References

This parameter shall be a list of one or more BACnetPropertyReferences, each of which corresponds directly to a specific property of the object identified above. The property identifier ALL means that all defined properties of the object are to be accessed, including any proprietary properties. The property identifier REQUIRED means that only those properties having a conformance code of "R" or "W" shall be returned. The property identifier OPTIONAL means that only those properties that have a conformance code "O" shall be returned. See the specification for the particular object type in Clause 12.

#### 15.7.3.2 Read Access Result

The 'Read Access Result' parameter is shown in Table 15-12. The terminology and symbology used in this table are explained in 5.6.

**Table 15-12.** Structure of 'Read Access Result' Parameter

Parameter Name	Rsp	Cnf	Datatype
Object Identifier	M	M(=)	BACnetObjectIdentifier
List of Results	M	M(=)	
Property Identifier	M	M(=)	BACnetPropertyIdentifier
Property Array Index	U	U(=)	Unsigned
Property Value	S	S(=)	ANY
Property Access Error	S	S(=)	Error

### **15.7.3.2.1 Object Identifier**

This parameter, of type BACnetObjectIdentifier, shall identify the object whose properties are being returned to the service requester.

### **15.7.3.2.2 List of Results**

The result of reading a given property is either the present value of the property or an error code indicating why the access attempt failed. Each element in the 'List of Results' contains a 'Property Identifier' and conditionally a 'Property Array Index', followed by either a 'Property Value' or a 'Property Access Error'.

#### **15.7.3.2.2.1 Property Identifier**

This parameter, of type BACnetPropertyIdentifier, shall identify the property whose value has been read.

#### **15.7.3.2.2.2 Property Array Index**

If the property identified above is of datatype array and a 'Property Array Index' was specified in the request, this parameter of type Unsigned shall be present and shall indicate the array index of the element of the property referenced by this service. Otherwise it shall be omitted.

#### **15.7.3.2.2.3 Property Value**

If access to the specified property of the specified object is successful, this parameter shall be returned. It shall be of a datatype consistent with the requested property and shall contain the value of the requested property.

#### **15.7.3.2.2.4 Property Access Error**

If the responding BACnet-user is unable to access the specified property of the specified object, then this parameter shall be returned. It shall contain a value that indicates the reason for the access failure. This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. Note that this parameter refers only to a failure of the access to a specific property of a specific object, whereas the 'Error Type' parameter returned in the 'Result(-)' primitive refers to a failure of the entire ReadPropertyMultiple service request.

## 15.8 ReadRange Service

The ReadRange service is used by a client BACnet-user to read a specific range of data items representing a subset of data available within a specified object property. The service may be used with any list or array of lists property.

### 15.8.1 Structure

The structure of the ReadRange primitive is shown in Table 15-13. The terminology and symbology used in this table are explained in 5.6.

**Table 15-13.** Structure of ReadRange Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Object Identifier	M	M(=)		
Property Identifier	M	M(=)		
Property Array Index	C	C(=)		
Range	U	U(=)		
Result(+)		S	S(=)	
Object Identifier		M	M(=)	
Property Identifier		M	M(=)	
Property Array Index		C	C(=)	
Result Flags		M	M(=)	
Item Count		M	M(=)	
Item Data		M	M(=)	
First Sequence Number		C	C(=)	
Result(-)		S	S(=)	
Error Type		M	M(=)	

#### 15.8.1.1 Argument

This parameter shall convey the parameters for the ReadRange confirmed service request.

##### 15.8.1.1.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, specifies the object and property is to be read.

##### 15.8.1.1.2 Property Identifier

This parameter, of type BACnetPropertyIdentifier, specifies the property to be read by this service. Because this service is intended to read a single property of a single object, the value of this parameter shall not be one of the special property identifiers ALL, REQUIRED, or OPTIONAL.

##### 15.8.1.1.3 Property Array Index

If the property identified above is of datatype array of lists, this optional parameter of type Unsigned shall indicate the array index of the element of the property referenced by this service. If the property identified above is not of datatype array of lists, this parameter shall be omitted. The index value shall not be zero.

##### 15.8.1.1.4 Range

This optional parameter shall convey criteria for the consecutive range items within the referenced property that are to be returned, as described in 15.8.2. The 'Range' parameter is shown in Table 15-14. The terminology and symbology used in this table are explained in 5.6.

**Table 15-14.** Structure of the 'Range' Parameter

Parameter Name	Req	Ind	Datatype
By Position	S	S(=)	
Reference Index	M	M(=)	Unsigned
Count	M	M(=)	INTEGER
By Sequence Number	S	S(=)	
Reference Sequence Number	M	M(=)	Unsigned32
Count	M	M(=)	INTEGER
By Time	S	S(=)	
Reference Time	M	M(=)	BACnetDateTime
Count	M	M(=)	INTEGER

#### 15.8.1.1.4.1 By Position

The 'By Position' parameter shall indicate that the particular items to be read are referenced by an index.

##### 15.8.1.1.4.1.1 Reference Index

The 'Reference Index' parameter specifies the index of the first (if 'Count' is positive) or last (if 'Count' is negative) item to be read.

##### 15.8.1.1.4.1.2 Count

The absolute value of the 'Count' parameter specifies the number of records to be read. If 'Count' is positive, the record specified by 'Reference Index' shall be the first and oldest record read and returned; if 'Count' is negative the record specified by 'Reference Index' shall be the last and newest record. 'Count' may not be zero.

##### 15.8.1.1.4.2 By Sequence Number

The 'By Sequence Number' parameter shall indicate that the particular items to be read are referenced by a sequence number and that the response shall include the sequence number of the first returned item. This differs semantically from the 'By Position' parameter choice. The Reference Number provided in the 'By Position' choice references an item by its position in the list. In contrast, the Reference Number provided in the 'By Sequence Number' choice references an item by its sequence number, which it is given when the item is added to the list. Not all lists implement the concept of a sequence number. An example of a list that does implement the concept of a sequence number is the Log\_Buffer property of the Trend Log object.

##### 15.8.1.1.4.2.1 Reference Sequence Number

The 'Reference Sequence Number' parameter specifies the sequence number of the first (if 'Count' is positive) or last (if 'Count' is negative) item to be read.

##### 15.8.1.1.4.2.2 Count

The absolute value of the 'Count' parameter specifies the number of records to be read. If 'Count' is positive, the record specified by 'Reference Sequence Number' shall be the first and oldest record read and returned. If 'Count' is negative the record specified by 'Reference Sequence Number' shall be the last and newest record read and returned. 'Count' shall not be zero.

##### 15.8.1.1.4.3 By Time

The 'By Time' parameter shall indicate that the particular item to be read is referenced by timestamp and that the Sequence Number of the item shall be returned in the response. This form of the service is expected to be used when searching lists that are loosely indexed by time.

##### 15.8.1.1.4.3.1 Reference Time

If 'Count' is positive, the first record to be read shall be the first record with a timestamp newer than the time specified by the 'Reference Time' parameter. If 'Count' is negative, the last record to be read shall be the newest record with a timestamp older than the time specified by the 'Reference Time' parameter.

##### 15.8.1.1.4.3.2 Count

The absolute value of the 'Count' parameter specifies the number of records to be read. If 'Count' is positive, the first record with a timestamp newer than the time specified by 'Reference Time' shall be the first and oldest record read and returned; if

'Count' is negative, the newest record with a timestamp older than the time specified by 'Reference Time' shall be the last and newest record. 'Count' shall not be zero.

#### **15.8.1.2 Result(+)**

The 'Result(+)’ parameter shall indicate that the service request succeeded. A successful result includes the following parameters.

##### **15.8.1.2.1 Object Identifier**

This parameter, of type BACnetObjectIdentifier, specifies the object that was read.

##### **15.8.1.2.2 Property Identifier**

This parameter, of type BACnetPropertyIdentifier, shall identify that property that was read.

##### **15.8.1.2.3 Property Array Index**

If the property identified above is of datatype array of lists, this parameter of type Unsigned shall indicate the array index of the element of the property referenced by this service. If the property identified above is not of datatype array of lists, this parameter shall be omitted.

##### **15.8.1.2.4 Result Flags**

This parameter, of type BACnetResultFlags, shall convey several flags that describe characteristics of the response data:

{FIRST\_ITEM, LAST\_ITEM, MORE\_ITEMS}

The FIRST\_ITEM flag indicates whether this response includes the first list or array element (in the case of positional indexing), or the oldest timestamped item (in the case of time indexing).

The LAST\_ITEM flag indicates whether this response includes the last list or array element (in the case of positional indexing), or the newest timestamped item (in the case of time indexing)

The MORE\_ITEMS flag indicates whether more items matched the request but were not transmittable within the PDU.

##### **15.8.1.2.5 Item Count**

This parameter, of type Unsigned, represents the number of items that were returned.

##### **15.8.1.2.6 Item Data**

This parameter consists of a list of the requested data.

##### **15.8.1.2.7 First Sequence Number**

This parameter, of type Unsigned32, specifies the sequence number of the first item returned. This parameter is only included if the 'Range' parameter of the request was of the type 'By Sequence Number' or 'By Time' and 'Item Count' is greater than 0.

#### **15.8.1.3 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for the failure shall be specified by the 'Error Type' parameter.

##### **15.8.1.3.1 Error Type**

This parameter consists of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

#### **15.8.2 Service Procedure**

The responding BACnet-user shall first verify the validity of the 'Object Identifier', 'Property Identifier' and 'Property Array Index' parameters and return a 'Result(-)' response with the appropriate error class and code if the object or property is unknown, if the referenced data is not a list or array, or if it is currently inaccessible for another reason.

If the 'Range' parameter is not present, then the responding BACnet-user shall read and attempt to return all of the available items in the list or array.

If the 'Range' parameter is present and specifies the 'By Position' parameters, then the responding BACnet-user shall read and attempt to return all of the items specified. The items specified include the item at the index specified by 'Reference Index' plus up to 'Count' - 1 items following if 'Count' is positive, or up to -1 - 'Count' items preceding if 'Count' is negative. The first element of a list shall be associated with index 1.

If the 'Range' parameter is present and specifies the 'By Time' parameter, then the responding BACnet-user shall read and attempt to return all of the items specified. If 'By Time' parameters are specified and the property values are not timestamped an error shall be returned. If 'Count' is positive, the records specified include the first record with a timestamp newer than 'Reference Time' plus up to 'Count'-1 items following. If 'Count' is negative, the records specified include the newest record with a timestamp older than 'Reference Time' and up to -1-'Count' records preceding. The sequence number of the first item returned shall be included in the response. The items shall be returned in chronological order.

If the 'Range' parameter is present and specifies the 'By Sequence Number' parameters, then the responding BACnet-user shall read and attempt to return all of the items specified. The items specified are all items with a sequence number in the range 'Reference Sequence Number' to 'Reference Sequence Number' plus 'Count'-1 if 'Count' is positive, or in the range 'Reference Sequence Number' plus 'Count'+1 to 'Reference Sequence' if 'Count' is negative.

To avoid missing items when using chained time-based reads, the first item in the desired set should be found using the 'By Time' form of the 'Range' parameter. Subsequent requests to retrieve the remaining items in the desired set should use the 'By Sequence Number' form of the 'Range' parameter. The reason for this is that lists that include a timestamp but are ordered by time of arrival may have entries with out-of-order timestamps due to negative time changes in the local device's clock. If items are read that match the request parameters but cannot be returned in the response, the 'Result Flags' parameter shall contain the MORE\_ITEMS flag set to TRUE, otherwise it shall be FALSE. Remaining items may be obtained with subsequent requests specifying appropriately chosen parameters.

The returned response shall convey the number of items read and returned using the 'Item Count' parameter. The actual items shall be returned in the 'Item Data' parameter. If the returned response includes the first positional index and a 'By Position' request had been made, or the oldest sequence number and a 'By Sequence Number' or 'By Time' request had been made, then the 'Result Flags' parameter shall contain the FIRST\_ITEM flag set to TRUE; otherwise it shall be FALSE.

If the returned response includes the last positional index and a 'By Position' request had been made, or the newest sequence number and a 'By Sequence Number' or 'By Time' request had been made, then the 'Result Flags' shall contain the LAST\_ITEM flag set to TRUE; otherwise it shall be FALSE.

If there are no items in the list that match the 'Range' parameter criteria, then a Result(+) shall be returned with an 'Item Count' of 0 and no 'First Sequence Number' parameter.

## 15.9 WriteProperty Service

The WriteProperty service is used by a client BACnet-user to modify the value of a single specified property of a BACnet object. This service potentially allows write access to any property of any object, whether a BACnet-defined object or not. Some implementors may wish to restrict write access to certain properties of certain objects. In such cases, an attempt to modify a restricted property shall result in the return of an error of 'Error Class' PROPERTY and 'Error Code' WRITE\_ACCESS\_DENIED. Note that these restricted properties may be accessible through the use of Virtual Terminal services or other means at the discretion of the implementor.

### 15.9.1 Structure

The structure of the WriteProperty service primitives is shown in Table 15-15. The terminology and symbology used in this table are explained in 5.6.

**Table 15-15.** Structure of WriteProperty Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Object Identifier	M	M(=)		
Property Identifier	M	M(=)		
Property Array Index	U	U(=)		
Property Value	M	M(=)		
Priority	C	C(=)		
Result (+)			S	S(=)
Result (-)			S	S(=)
Error Type			M	M(=)

#### 15.9.1.1 Argument

This parameter shall convey the parameters for the WriteProperty confirmed service request.

##### 15.9.1.1.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall provide the means of identifying the object whose property is to be modified.

##### 15.9.1.1.2 Property Identifier

This parameter, of type BACnetPropertyIdentifier, shall provide the means of uniquely identifying the property to be written by this service. Because this service is intended to write a single property of a single object, the value of this parameter shall not be one of the special property identifiers ALL, REQUIRED, or, OPTIONAL.

##### 15.9.1.1.3 Property Array Index

If the property identified above is of datatype array, this optional parameter of type Unsigned shall indicate the array index of the element of the property referenced by this service. If the 'Property Array Index' is omitted for an array, this shall mean that the entire array shall be referenced.

If the property identified above is not of datatype array, this parameter shall be omitted.

##### 15.9.1.1.4 Property Value

If access to the specified property of the specified object is successful, this parameter shall be used to replace the value of the property at the time of access. It shall be of any datatype that is valid for the property being modified.

##### 15.9.1.1.5 Priority

This parameter shall be an integer in the range 1-16, which indicates the priority assigned to this write operation. If an attempt is made to write to a commandable property without specifying the priority, a default priority of 16 (the lowest priority) shall be assumed. If an attempt is made to write to a property that is not commandable with a specified priority, the priority shall be ignored. See Clause 19.

### **15.9.1.2 Result(+)**

The 'Result(+)’ parameter shall indicate that the service request succeeded in its entirety.

### **15.9.1.3 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed in its entirety. The reason for the failure shall be specified by the 'Error Type' parameter.

#### **15.9.1.3.1 Error Type**

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation</u>	<u>Error Class</u>	<u>Error Code</u>
Specified object does not exist.	OBJECT	UNKNOWN_OBJECT
Specified property does not exist.	PROPERTY	UNKNOWN_PROPERTY
An array index is provided but the property is not an array.	PROPERTY	PROPERTY_IS_NOT_AN_ARRAY
An array index is provided that is outside the range existing in the property.	PROPERTY	INVALID_ARRAY_INDEX
The specified property is currently not writable by the requestor.	PROPERTY	WRITE_ACCESS_DENIED
The datatype of the value provided is incorrect for the specified property.	PROPERTY	INVALID_DATATYPE
The property is Object_Name and the name is already in use in the device.	PROPERTY	DUPLICATE_NAME
The property is Object Identifier and the identifier is already in use in the device.	PROPERTY	DUPLICATE_OBJECT_ID
The value provided is outside the range of values that the property can take on.	PROPERTY	VALUE_OUT_OF_RANGE
There is not enough space to store the new value.	RESOURCES	NO_SPACE_TO_WRITE_PROPERTY
The data being written has a datatype not supported by the property.	PROPERTY	DATATYPE_NOT_SUPPORTED

### **15.9.2 Service Procedure**

After verifying the validity of the request, the responding BACnet-user shall attempt to modify the specified property of the specified object using the value provided in the 'Property Value' parameter. If the modification attempt is successful, a 'Result(+)’ primitive shall be issued. If the modification attempt fails, a 'Result(-)' primitive shall be issued indicating the reason for the failure. Interpretation of the conditional Priority parameter shall be as defined in Clause 19.

## 15.10 WritePropertyMultiple Service

The WritePropertyMultiple service is used by a client BACnet-user to modify the value of one or more specified properties of a BACnet object. This service potentially allows write access to any property of any object, whether a BACnet-defined object or not.

Properties shall be modified by the WritePropertyMultiple service in the order specified in the 'List of Write Access Specifications' parameter, and execution of the service shall continue until all of the specified properties have been written to or a property is encountered that for some reason cannot be modified as requested.

Some implementors may wish to restrict write access to certain properties of certain objects. In such cases, an attempt to modify a restricted property shall result in the return of an error of 'Error Class' PROPERTY and 'Error Code' WRITE\_ACCESS\_DENIED. Note that these restricted properties may be accessible through the use of Virtual Terminal services or other means at the discretion of the implementor.

### 15.10.1 Structure

The structure of the WritePropertyMultiple service primitives is shown in Table 15-16. The terminology and symbology used in this table are explained in 5.6.

**Table 15-16.** Structure of WritePropertyMultiple Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
List of Write Access Specifications	M	M(=)		
Result (+)			S	S(=)
Result (-)			S	S(=)
Error Type			M	M(=)
First Failed Write Attempt			M	M(=)

#### 15.10.1.1 Argument

This parameter shall convey the parameters for the WritePropertyMultiple confirmed service request.

##### 15.10.1.1.1 List of Write Access Specifications

Each 'Write Access Specification' conveys the information required to carry out the modification of a property or properties of a BACnet object. The specification consists of up to five parameters: (1) an 'Object Identifier'; a List of Properties each of which consists of (2) a 'Property Identifier'; (3) an optional 'Property Array Index'; (4) a 'Property Value'; and (5) an optional 'Priority'.

##### 15.10.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the service request succeeded in its entirety and that all specified properties were correctly modified.

##### 15.10.1.3 Result(-)

The 'Result(-)' parameter shall indicate that at least one of the specified properties could not be modified as requested. The reason for the failure shall be conveyed by the 'Error Type' parameter along with the 'Object Identifier', 'Property Identifier', and 'Property Array Index' of the first encountered property that, for the reason specified by the 'Error Type' parameter, could not be properly written.

###### 15.10.1.3.1 Error Type

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned in a 'Result(-)' for specific situations are as follows:

<u>Situation</u>	<u>Error Class</u>	<u>Error Code</u>
Specified object does not exist.	OBJECT	UNKNOWN_OBJECT
Specified property does not exist.	PROPERTY	UNKNOWN_PROPERTY
An array index is provided but the property is not an array.	PROPERTY	PROPERTY_IS_NOT_AN_ARRAY
An array index is provided that is outside the range existing in the property.	PROPERTY	INVALID_ARRAY_INDEX
The specified property is currently read-only.	PROPERTY	WRITE_ACCESS_DENIED
The datatype of the value provided is incorrect for the specified property.	PROPERTY	INVALID_DATATYPE
The property is Object_Name and the name is already in use in the device.	PROPERTY	DUPLICATE_NAME
The property is Object Identifier and the identifier is already in use in the device.	PROPERTY	DUPLICATE_OBJECT_ID
The value provided is outside the range of values that the property can take on.	PROPERTY	VALUE_OUT_OF_RANGE
There is not enough space to store the new value.	RESOURCES	NO_SPACE_TO_WRITE_PROPERTY
The data being written has a datatype not supported by the property.	PROPERTY	DATATYPE_NOT_SUPPORTED

#### 15.10.1.3.2 First Failed Write Attempt

This parameter, of type BACnetObjectPropertyReference, shall convey the 'Object Identifier', 'Property Identifier', and 'Property Array Index' of the first failed element in the 'List of Write Access Specification' for which the write attempt failed.

#### 15.10.2 Service Procedure

For each 'Write Access Specification' contained in the 'List of Write Access Specifications', the value of each specified property shall be replaced by the property value provided in the 'Write Access Specification' and a 'Result(+) primitive shall be issued, indicating that the service request was carried out in its entirety. Interpretation of the conditional Priority parameter shall be as specified in Clause 19.

If, in the process of carrying out the modification of the indicated properties in the order specified in the 'List of Write Access Specifications', a property is encountered that cannot be modified, the responding BACnet-user shall issue a 'Result(-)' response primitive indicating the reason for the failure. The result of this service shall be either that all of the specified properties or only the properties up to, but not including, the property specified in the 'First Failed Write Attempt' parameter were successfully modified.

#### 15.10.3 Parameters Referenced by the WritePropertyMultiple Service

The 'Write Access Specification' parameter is shown in Table 15-17. The terminology and symbology used in this table are explained in 5.6.

Table 15-17. Structure of 'Write Access Specification' Parameter

Parameter Name	Req Ind	Rsp Cnf	Datatype
Object Identifier	M	M(=)	BACnetObjectIdentifier
List of Properties	M	M(=)	
Property Identifier	M	M(=)	BACnetPropertyIdentifier
Property Array Index	U	U(=)	Unsigned
Property Value	M	M(=)	ANY
Priority	C	C(=)	Unsigned(1..16)

### 15.10.3.1 Object Identifier

This parameter, of type BACnetObjectIdentifier, shall provide the means of identifying the object whose property or properties are to be modified.

### 15.10.3.2 List of Properties

This parameter shall specify a list of one or more properties of the object identified above, the value to be written to each property, and the priority assigned to the write operation. Each element of the list shall specify the following parameters.

#### 15.10.3.2.1 Property Identifier

This parameter, of type BACnetPropertyIdentifier, shall provide the means of uniquely identifying the property to be written by this service. The value of this parameter shall not be one of the special property identifiers ALL, REQUIRED, or, OPTIONAL.

#### 15.10.3.2.2 Property Array Index

If the property identified above is of datatype array, this optional parameter of type Unsigned shall indicate the array index of the element of the property referenced by this service. If the 'Property Array Index' is omitted for an array, this shall mean that the entire array shall be referenced.

If the property identified above is not of datatype array, this parameter shall be omitted.

#### 15.10.3.2.3 Property Value

If access to the specified property of the specified object is successful, this parameter shall be used to replace the value of the property at the time of access. It shall be of any datatype that is valid for the property being modified.

#### 15.10.3.2.4 Priority

This parameter shall be an integer in the range 1-16, which indicates the priority assigned to this write operation. If an attempt is made to write to a commandable property without specifying the priority, a default priority of 16 (the lowest priority) shall be assumed. If an attempt is made to write to a property that is not commandable with a specified priority, the priority shall be ignored. See Clause 19.

## 16 REMOTE DEVICE MANAGEMENT SERVICES

### 16.1 DeviceCommunicationControl Service

The DeviceCommunicationControl service is used by a client BACnet-user to instruct a remote device to stop initiating and optionally stop responding to all APDUs (except DeviceCommunicationControl or, if supported, ReinitializeDevice) on the communication network or internetwork for a specified duration of time. This service is primarily used by a human operator for diagnostic purposes. A password may be required from the client BACnet-user prior to executing the service. The time duration may be set to "indefinite," meaning communication must be re-enabled by a DeviceCommunicationControl or, if supported, ReinitializeDevice service, not by time.

#### 16.1.1 Structure

The structure of the DeviceCommunicationControl service primitives is shown in Table 16-1. The terminology and symbology used in this table are explained in 5.6.

**Table 16-1.** Structure of DeviceCommunicationControl Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Time Duration	U	U(=)		
Enable/Disable	M	M(=)		
Password	U	U(=)		
Result (+)			S	S(=)
Result (-)			S	S(=)
Error Type			M	M(=)

#### 16.1.1.1 Argument

This parameter shall convey the parameters for the DeviceCommunicationControl confirmed service request.

##### 16.1.1.1.1 Time Duration

This optional parameter, of type Unsigned16, indicates the number of minutes that the remote device shall ignore all APDUs except DeviceCommunicationControl and, if supported, ReinitializeDevice APDUs. If the 'Time Duration' parameter is not present, then the time duration shall be considered indefinite, meaning that only an explicit DeviceCommunicationControl or ReinitializeDevice APDU shall enable communications. The 'Time Duration' parameter shall be ignored and the time period considered to be indefinite if the 'Enable/Disable' parameter has a value of ENABLE.

If the responding BACnet-user does not have a clock and the time duration is not indefinite, then the request shall be considered invalid and the responding BACnet-user shall issue a Result(-) response.

##### 16.1.1.1.2 Enable/Disable

This parameter is an enumeration that may take on the values ENABLE, DISABLE, or DISABLE\_INITIATION. It is used to indicate whether the responding BACnet-user is to enable all, disable initiation, or disable all communications on the network interface. When this parameter has a value of ENABLE, communications shall be enabled. When this parameter has a value of DISABLE, network communications shall be disabled as described in the DeviceCommunicationControl service procedure. When this parameter has a value of DISABLE\_INITIATION, the initiation of communications shall be disabled as described in the DeviceCommunicationControl service procedure.

##### 16.1.1.1.3 Password

This optional parameter shall be a CharacterString of up to 20 characters. For those devices that require password protection, the service shall be denied if the parameter is absent or if the password is incorrect. For those devices that do not require a password, this parameter shall be ignored.

##### 16.1.1.2 Result(+)

This parameter shall indicate that the service request succeeded.

### **16.1.1.3 Result(-)**

This parameter shall indicate that the service request has failed. The reason for failure shall be specified by the 'Error Type' parameter.

#### **16.1.1.3.1 Error Type**

This parameter consists of two components parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation</u>	<u>Error Class</u>	<u>Error Code</u>
The password is invalid or absent when one is required.	SECURITY	PASSWORD_FAILURE
The device does not have a clock and the 'Time Duration' parameter is not set to "indefinite".	SERVICES	OPTIONAL_FUNCTIONALITY_NOT_SUPPORTED

### **16.1.2 Service Procedure**

After verifying the validity of the request, including the 'Time Duration' and 'Password' parameters, the responding BACnet-user shall respond with a 'Result(+)’ service primitive. If the request is valid and the 'Enable/Disable' parameter is DISABLE, the responding BACnet-user shall discontinue responding to any subsequent messages except DeviceCommunicationControl and, if supported, ReinitializeDevice messages, and shall discontinue initiating messages. If the request is valid and the 'Enable/Disable' parameter is DISABLE\_INITIATION, the responding BACnet-user shall discontinue the initiation of messages except for I-Am requests issued in accordance with the Who-Is service procedure. Communication shall be disabled in this manner until either the 'Time Duration' has expired or a valid DeviceCommunicationControl (with 'Enable/Disable' = ENABLE) or, if supported, a valid ReinitializeDevice (with 'Reinitialized State of Device' = WARMSTART or COLDSTART) message is received.

If the responding BACnet-user does not have a clock and the 'Time Duration' parameter is not set to "indefinite," the APDU shall be ignored and a 'Result(-)' service primitive shall be issued. If the 'Password' parameter is invalid or absent when a password is required, the APDU shall be ignored and an Error-PDU with 'error class' = SECURITY and 'error code' = PASSWORD\_FAILURE shall be issued.

## 16.2 ConfirmedPrivateTransfer Service

The ConfirmedPrivateTransfer is used by a client BACnet-user to invoke proprietary or non-standard services in a remote device. The specific proprietary services that may be provided by a given device are not defined by this standard. The PrivateTransfer services provide a mechanism for specifying a particular proprietary service in a standardized manner. The only required parameters for these services are a vendor identification code and a service number. Additional parameters may be supplied for each service if required. The form and content of these additional parameters, if any, are not defined by this standard. The vendor identification code and service number together serve to unambiguously identify the intended purpose of the information conveyed by the remainder of the APDU or the service to be performed by the remote device based on parameters in the remainder of the APDU.

The vendor identification code is a unique code assigned to the vendor by ASHRAE. The mechanism for administering these codes is not defined in this standard. See Clause 23.

### 16.2.1 ConfirmedPrivateTransfer Service Structure

The structure of the ConfirmedPrivateTransfer service primitives is shown in Table 16-2. The terminology and symbology used in this table are explained in 5.6.

**Table 16-2. Structure of ConfirmedPrivateTransfer Service Primitives**

Parameter Name	Req	Ind	Rsp	Conf
Argument	M	M(=)		
Vendor ID	M	M(=)		
Service Number	M	M(=)		
Service Parameters	U	U(=)		
Result(+)			S	S(=)
Vendor ID			M	M(=)
Service Number			M	M(=)
Result Block			C	C(=)
Result(-)			S	S(=)
Error Type			M	M(=)
Vendor ID			M	M(=)
Service Number			M	M(=)
Error Parameters			M	M(=)

#### 16.2.1.1 Argument

This parameter shall convey the parameters for the ConfirmedPrivateTransfer confirmed service request.

##### 16.2.1.1.1 Vendor ID

This parameter, of type Unsigned, shall specify the unique vendor identification code for the type of vendor-proprietary service to be performed.

##### 16.2.1.1.2 Service Number

This parameter, of type Unsigned, shall specify the desired service to be performed.

##### 16.2.1.1.3 Service Parameters

This optional parameter shall convey additional parameters for the service specified by 'Vendor ID' and 'Service Number'. The datatype and interpretation of these parameters is a local matter.

#### 16.2.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the service request succeeded. A successful result indicates that the request APDU was received and the recipient was able to perform the indicated proprietary service.

#### **16.2.1.2.1 Vendor ID**

This parameter, of type Unsigned, shall specify the unique vendor identification code for the vendor-proprietary service for which this is the result.

#### **16.2.1.2.2 Service Number**

This parameter, of type Unsigned, shall indicate the proprietary service for which this is the result.

#### **16.2.1.2.3 Result Block**

This conditional parameter, of type List of ANY, shall convey any additional results from the execution of the requested service. Interpretation of these results is a local matter.

#### **16.2.1.3 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed. The reason for failure shall be specified by the 'Error Type' parameter.

##### **16.2.1.3.1 Error Type**

This parameter consists of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

##### **16.2.1.3.2 Vendor ID**

This parameter, of type Unsigned, shall specify the unique vendor identification code for the vendor-proprietary service for which this error is the result.

##### **16.2.1.3.3 Service Number**

This parameter, of type Unsigned, shall indicate the proprietary service for which this error is the result.

##### **16.2.1.3.4 Error Parameters**

This optional parameter shall convey any additional error results from the execution of the requested service. Interpretation of these results is a local matter.

#### **16.2.2 Service Procedure**

After verifying the validity of the request, the responding BACnet-user shall attempt to perform the specified proprietary service request. If successful, a 'Result(+) response primitive shall be issued. If the request fails, a 'Result(-)' response primitive shall be issued.

### **16.3 UnconfirmedPrivateTransfer Service**

The UnconfirmedPrivateTransfer is used by a client BACnet-user to invoke proprietary or non-standard services in a remote device. The specific proprietary services that may be provided by a given device are not defined by this standard. The PrivateTransfer services provide a mechanism for specifying a particular proprietary service in a standardized manner. The only required parameters for these services are a vendor identification code and a service number. Additional parameters may be supplied for each service if required. The form and content of these additional parameters, if any, are not defined by this standard. The vendor identification code and service number together serve to unambiguously identify the intended purpose of the information conveyed by the remainder of the APDU or the service to be performed by the remote device based on parameters in the remainder of the APDU.

The vendor identification code is a unique code assigned to the vendor by ASHRAE. The mechanism for administering these codes is not defined in this standard. See Clause 23.

#### **16.3.1 UnconfirmedPrivateTransfer Service Structure**

The structure of the UnconfirmedPrivateTransfer service primitive is shown in Table 16-3. The terminology and symbology used in this table are explained in 5.6.

**Table 16-3. Structure of UnconfirmedPrivateTransfer Service Primitive**

Parameter Name	Req	Ind
Argument	M	M(=)
Vendor ID	M	M(=)
Service Number	M	M(=)
Service Parameters	U	U(=)

##### **16.3.1.1 Argument**

This parameter shall convey the parameters for the UnconfirmedPrivateTransfer confirmed service request.

##### **16.3.1.1.1 Vendor ID**

This parameter, of type Unsigned, shall specify the unique vendor identification code for the type of vendor-proprietary service to be performed.

##### **16.3.1.1.2 Service Number**

This parameter, of type Unsigned, shall specify the desired service to be performed.

##### **16.3.1.1.3 Service Parameters**

This optional parameter shall convey additional parameters for the service specified by 'Vendor ID' and 'ServiceNumber'. The datatype and interpretation of these parameters is a local matter.

#### **16.3.2 Service Procedure**

Since this is an unconfirmed service, no response primitives are expected. Actions taken in response to this service request are a local matter.

## 16.4 ReinitializeDevice Service

The ReinitializeDevice service is used by a client BACnet-user to instruct a remote device to reboot itself (cold start), reset itself to some predefined initial state (warm start), or to control the backup or restore procedure. Resetting or rebooting a device is primarily initiated by a human operator for diagnostic purposes. Use of this service during the backup or restore procedure is usually initiated on behalf of the user by the device controlling the backup or restore. Due to the sensitive nature of this service, a password may be required from the responding BACnet-user prior to executing the service.

A BACnet device may support the ReinitializeDevice service by supporting only the restart choices COLDSTART and WARMSTART. Support for the backup and restore features of this service is claimed separately.

### 16.4.1 Structure

The structure of the ReinitializeDevice service primitives is shown in Table 16-4. The terminology and symbology used in this table are explained in 5.6.

**Table 16-4.** Structure of ReinitializeDevice Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Reinitialized State of Device	M	M(=)		
Password	U	U(=)		
Result (+)			S	S(=)
Result (-)			S	S(=)
Error Type			M	M(=)

#### 16.4.1.1 Argument

This parameter shall convey the parameters for the ReinitializeDevice confirmed service request.

##### 16.4.1.1.1 Reinitialized State of Device

This parameter allows the client user to specify the desired state of the device after its reinitialization. The value of the parameter may be one of COLDSTART, WARMSTART, STARTBACKUP, ENDBACKUP, STARTRESTORE, ENDRESTORE, or ABORTRESTORE.. WARMSTART shall mean to reboot the device and start over, retaining all data and programs that would normally be retained during a brief power outage. The precise interpretation of COLDSTART shall be defined by the vendor.

If the value of the parameter is WARMSTART and the device is not ready due to a configuration procedure in progress, the request shall be considered invalid and the responding BACnet user shall issue a Result(-) response.

If the value of the parameter is one of STARTBACKUP, ENDBACKUP, STARTRESTORE, ENDRESTORE, or ABORTRESTORE and communication has been disabled due to receipt of a DeviceCommunicationControl request with ‘Enable/Disable’ equal to DISABLE, the request shall be considered invalid and the responding BACnet user shall issue a Result(-) response.

The use of the backup and restore commands are defined in Clause 19.1.

##### 16.4.1.1.2 Password

This optional parameter shall be a CharacterString of up to 20 characters. For those devices that require the password as a protection, the service request shall be denied if the parameter is absent or if the password is incorrect. For those devices that do not require a password, this parameter shall be ignored.

##### 16.4.1.2 Result(+)

This parameter shall indicate that the service request succeeded.

#### **16.4.1.3 Result(-)**

This parameter shall indicate that the service request has failed. The reason for the failure shall be specified by the 'Error Type' parameter.

##### **16.4.1.3.1 Error Type**

This parameter consists of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18. The 'Error Class' and 'Error Code' to be returned for specific situations are as follows:

<u>Situation</u>	<u>Error Class</u>	<u>Error Code</u>
The password is invalid or absent when one is required.	SECURITY	PASSWORD_FAILURE
The device is in the process of being configured.	DEVICE	CONFIGURATION_IN_PROGRESS
Communication has been disabled due to receipt of a DeviceCommunicationControl request.	SERVICES	COMMUNICATION_DISABLED

#### **16.4.2 Service Procedure**

After verifying the validity of the request, including the 'Reinitialized State of Device' and 'Password' parameters, the responding BACnet-user shall pre-empt all other outstanding requests and respond with a 'Result(+) primitive. If the request is valid and 'Reinitialized State of Device' is WARMSTART or COLDSTART, then the responding BACnet-user shall immediately proceed to perform any applicable shut-down procedures prior to reinitializing the device as specified by the requesting BACnet-user in the request.

If 'Reinitialized State of Device' is WARMSTART and the device is not ready due to its initial characterization being in progress, a 'Result (-)' response primitive shall be issued.

If 'Reinitialized State of Device' is one of STARTBACKUP, ENDBACKUP, STARTRESTORE, ENDRESTORE, or ABORTRESTORE and communication has been disabled due to receipt of a DeviceCommunicationControl request with 'Enable/Disable' equal to DISABLE, the responding BACnet user shall respond with a Result(-) primitive. Otherwise, the responding BACnet user shall behave as described in Clause 19.1.

If the password is invalid or is absent when one is required, an Error-PDU with 'error class' of SECURITY and 'error code' of PASSWORD\_FAILURE shall be issued.

## 16.5 ConfirmedTextMessage Service

The ConfirmedTextMessage service is used by a client BACnet-user to send a text message to another BACnet device. This service is not a broadcast or multicast service. This service may be used in cases when confirmation that the text message was received is required. The confirmation does not guarantee that a human operator has seen the message. Messages may be prioritized into normal or urgent categories. In addition, a given text message may be optionally classified by a numeric class code or class identification string. This classification may be used by the receiving BACnet device to determine how to handle the text message. For example, the message class might indicate a particular output device on which to print text or a set of actions to take when the text is received. In any case, the interpretation of the class is a local matter.

### 16.5.1 ConfirmedTextMessage Service Structure

The structure of the ConfirmedTextMessage service primitives is shown in Table 16-5. The terminology and symbology used in this table are explained in 5.6.

**Table 16-5.** Structure of ConfirmedTextMessage Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Text Message Source Device	M	M(=)		
Message Class	U	U(=)		
Message Priority	M	M(=)		
Message	M	M(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M(=)

#### 16.5.1.1 Argument

This parameter shall convey the parameters for the ConfirmedTextMessage service request.

##### 16.5.1.1.1 Text Message Source Device

This parameter, of type BACnetObjectIdentifier, shall convey the value of the Object\_Identifier property of the Device object of the device that initiated this text message.

##### 16.5.1.1.2 Message Class

This parameter, if present, shall indicate the class of the received message. The datatype of this parameter shall be a choice of Unsigned or CharacterString. The interpretation of the meaning of any particular value for this parameter shall be a local matter.

##### 16.5.1.1.3 Message Priority

This parameter, of type ENUMERATED, shall indicate the priority for message handling:

{NORMAL, URGENT}

##### 16.5.1.1.4 Message

This parameter, of type CharacterString, shall be used to convey the text message.

#### 16.5.1.2 Result(+)

The 'Result(+)’ parameter shall indicate that the requested service has succeeded.

#### 16.5.1.3 Result(-)

The 'Result(-)' parameter shall indicate that the requested service has failed. The reason for the failure shall be specified by the 'Error Type' parameter.

#### **16.5.1.3.1 Error Type**

This parameter shall consist of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

#### **16.5.2 ConfirmedTextMessage Service Procedure**

After verifying the validity of the request, the responding BACnet-user shall take whatever local actions have been assigned to the indicated 'Message Class' and issue a 'Result(+)’ service primitive. If the service request cannot be executed, a 'Result(-)' service primitive shall be issued indicating the encountered error.

Other than the requirement to return a success or failure response, actions taken in response to this notification are a local matter. However, typically the receiving device would take the text specified by the 'Message' parameter and display, print, or file it according to the classification specified by the 'Message Class' parameter. If the 'Message Class' parameter is omitted, then some general class might be assumed. If 'Message Priority' is URGENT, then clearly the messages should be considered as more important than existing NORMAL messages, which may be awaiting printing or some other action.

## 16.6 UnconfirmedTextMessage Service

The UnconfirmedTextMessage service is used by a client BACnet-user to send a text message to one or more BACnet devices. This service may be broadcast, multicast, or addressed to a single recipient. This service may be used in cases where confirmation that the text message was received is not required. Messages may be prioritized into normal or urgent categories. In addition, a given text message may optionally be classified by a numeric class code or class identification string. This classification may be used by receiving BACnet devices to determine how to handle the text message. For example, the message class might indicate a particular output device on which to print text or a set of actions to take when the text message is received. In any case, the interpretation of the class is a local matter.

### 16.6.1 UnconfirmedTextMessage Service Structure

The structure of the UnconfirmedTextMessage service primitive is shown in Table 16-6. The terminology and symbology used in this table are explained in Clause 5.6.

**Table 16-6.** Structure of UnconfirmedTextMessage Service Primitive

Parameter Name	Req	Ind
Argument	M	M(=)
Text Message Source Device	M	M(=)
Message Class	U	U(=)
Message Priority	M	M(=)
Message	M	M(=)

The 'Argument' parameter shall convey the parameters for the UnconfirmedTextMessage service request.

#### 16.6.1.1 Text Message Source Device

This parameter, of type BACnetObjectIdentifier, shall convey the value of the Object\_Identifier property of the Device object of the device that initiated this text message.

#### 16.6.1.2 Message Class

This parameter, if present, shall indicate the classification of the received message. The datatype of this parameter shall be a choice of Unsigned or CharacterString. The interpretation of the meaning of any particular value for this parameter shall be a local matter.

#### 16.6.1.3 Message Priority

This parameter, of type ENUMERATED, shall indicate the priority for message handling:

{NORMAL, URGENT}

#### 16.6.1.4 Message

This parameter, of type CharacterString, shall be used to convey the text message.

### 16.6.2 UnconfirmedTextMessage Service Procedure

Since this is an unconfirmed service, no response primitives are expected. Actions taken in response to this service request are a local matter. However, typically the receiving device(s) would take the text block specified by the 'Message' parameter and display or print or file them according to the classification specified by the 'Message Class' parameter. If the 'Message Class' parameter is omitted, then some general class might be assumed. If 'Message Priority' is URGENT, then clearly the messages should be considered as more important than existing NORMAL messages, which may be awaiting printing or some other action.

## **16.7 TimeSynchronization Service**

The TimeSynchronization service is used by a requesting BACnet-user to notify a remote device of the correct current time. This service may be broadcast, multicast, or addressed to a single recipient. Its purpose is to notify recipients of the correct current time so that devices may synchronize their internal clocks with one another.

### **16.7.1 Structure**

The structure of the TimeSynchronization service primitive is shown in Table 16-7. The terminology and symbology used in this table are explained in 5.6.

**Table 16-7. Structure of TimeSynchronization Service Primitive**

Parameter Name	Req	Ind
Argument	M	M(=)
Time	M	M(=)

#### **16.7.1.1 Argument**

The 'Argument' parameter shall convey the parameters for the TimeSynchronization service request.

##### **16.7.1.1.1 Time**

This parameter, of type BACnetDateTime, shall convey the current date and time as determined by the clock in the device issuing the service request.

#### **16.7.2 Service Procedure**

Since this is an unconfirmed service, no response primitives are expected. A device receiving a TimeSynchronization service indication shall update its local representation of time. This change shall be reflected in the Local\_Time and Local\_Date properties of the Device object.

No restrictions on the use of this service exist when it is invoked at the request of an operator. Otherwise, the use of this service is controlled by the value of the Time\_Synchronization\_Recipients property in the Device object. When the Time\_Synchronization\_Recipients list is of length zero, a device may not automatically send a TimeSynchronization request. When Time\_Synchronization\_Recipients list is of length one or more, a device may automatically send a TimeSynchronization request but only to the devices or addresses contained in the Time\_Synchronization\_Recipients list.

## 16.8 UTCTimeSynchronization Service

The UTCTimeSynchronization service is used by a requesting BACnet-user to notify one or more remote devices of the correct Universal Time Coordinated (UTC). This service may be broadcast, multicast, or addressed to a single recipient. Its purpose is to notify recipients of the correct UTC so that devices may synchronize their internal clocks with one another.

### 16.8.1 Structure

The structure of the UTCTimeSynchronization service primitive is shown in Table 16-8. The terminology and symbology used in this table are explained in 5.6.

**Table 16-8.** Structure of UTCTimeSynchronization Service Primitive

Parameter Name	Req	Ind
Argument	M	M(=)
Time	M	M(=)

#### 16.8.1.1 Argument

The 'Argument' parameter shall convey the parameters for the UTCTimeSynchronization service request.

##### 16.8.1.1.1 Time

This parameter, of type BACnetDateTime, shall convey the UTC date and time.

### 16.8.2 Service Procedure

Since this is an unconfirmed service, no response primitives are expected. A device receiving a UTCTimeSynchronization service indication shall update its local representation of time and date by subtracting the value of the 'UTC\_Offset' property of the Device object from the 'Time' parameter and taking the 'Daylight\_Savings\_Status' property of the Device object into account as appropriate to the locality. This change shall be reflected in the Local\_Time and Local\_Date properties of the Device object.

No restrictions on the use of this service exist when it is invoked at the request of an operator. Otherwise, the initiation of this service by a device is controlled by the value of the Time\_Synchronization\_Recipients property in the Device object. When the Time\_Synchronization\_Recipients list is of length zero, a device may not automatically send a TimeSynchronization request. When Time\_Synchronization\_Recipients list is of length one or more, a device may automatically send a UTCTimeSynchronization request but only to the devices or addresses contained in the Time\_Synchronization\_Recipients list.

## 16.9 Who-Has and I-Have Services

The Who-Has service is used by a sending BACnet-user to identify the device object identifiers and network addresses of other BACnet devices whose local databases contain an object with a given Object\_Name or a given Object\_Identifier. The I-Have service is used to respond to Who-Has service requests or to advertise the existence of an object with a given Object\_Name or Object\_Identifier. The I-Have service request may be issued at any time and does not need to be preceded by the receipt of a Who-Has service request. The Who-Has and I-Have services are unconfirmed services.

### 16.9.1 Who-Has Service Structure

The structure of the Who-Has service primitive is shown in Table 16-9. The terminology and symbology used in this table are explained in 5.6.

**Table 16-9.** Structure of Who-Has Service Primitive

Parameter Name	Req	Ind
Argument	M	M(=)
Device Instance Range Low Limit	U	U(=)
Device Instance Range High Limit	U	U(=)
Object Identifier	S	S(=)
Object Name	S	S(=)

#### 16.9.1.1 Argument

The 'Argument' parameter shall convey the parameters for the Who-Has unconfirmed service request.

##### 16.9.1.1.1 Device Instance Range Low Limit

This parameter is an unsigned integer in the range 0 - 4,194,303. In conjunction with the 'Device Instance Range High Limit' parameter, it defines the devices that are qualified to respond with an I-Have service request if the 'Object Identifier' or 'Object Name' criteria are satisfied as described in 16.9.1.1.3 and 16.9.1.1.4. If the 'Device Instance Range Low Limit' parameter is present, then the 'Device Instance Range High Limit' parameter shall also be present, and only those devices whose Device Object\_Identifier instance number falls within the range 'Device Instance Range Low Limit' ≤ Object\_Identifier Instance Number ≤ 'Device Instance Range High Limit' shall be qualified to respond. The value of the 'Device Instance Range Low Limit' shall be less than or equal to the value of the 'Device Instance Range High Limit'. If the 'Device Instance Range Low Limit' and 'Device Instance Range High Limit' parameters are omitted, then all devices that receive this message are qualified to respond with an I-Have service request.

##### 16.9.1.1.2 Device Instance Range High Limit

This parameter is an unsigned integer in the range 0 - 4,194,303. In conjunction with the 'Device Instance Range Low Limit' parameter, it defines the devices that are qualified to respond with an I-Have service request if the 'Object Identifier' or 'Object Name' criteria are satisfied as described in 16.9.1.1.3 and 16.9.1.1.4. If the 'Device Instance Range High Limit' parameter is present, then the 'Device Instance Range Low Limit' parameter shall also be present, and only those devices whose Device Object\_Identifier instance number falls within the range 'Device Instance Range Low Limit' ≤ Object\_Identifier Instance Number ≤ 'Device Instance Range High Limit' shall be qualified to respond. The value of the 'Device Instance Range High Limit' shall be greater than or equal to the value of the 'Device Instance Range Low Limit'. If the 'Device Instance Range Low Limit' and 'Device Instance Range High Limit' parameters are omitted, then all devices that receive this message are qualified to respond with an I-Have service request.

##### 16.9.1.1.3 Object Identifier

The 'Object Identifier' parameter, of type BACnetObjectIdentifier, shall convey the Object\_Identifier of the object that is to be located. If the 'Object Identifier' parameter is omitted, then the 'Object Name' parameter shall be present. If the 'Object Identifier' parameter is present, then only those devices that contain an object with an Object\_Identifier property value matching the 'Object Identifier' parameter, which are qualified to respond as described in 16.9.1.1.1 and 16.9.1.1.2, shall respond with an I-Have service request.

#### 16.9.1.1.4 Object Name

The 'Object Name' parameter, of type `CharacterString`, shall convey the value of the `Object_Name` property of the object that is to be located. If the 'Object Name' parameter is omitted, then the 'Object Identifier' parameter shall be present. If the 'Object Name' parameter is present, then only those devices that contain an object with an `Object_Name` property value matching the 'Object Name' parameter, which are qualified to respond as described in 16.9.1.1.1 and 16.9.1.1.2, shall respond with an I-Have service request.

#### 16.9.2 Who-Has Service Procedure

The sending BACnet-user shall transmit the Who-Has unconfirmed request, normally using a broadcast address. If the 'Device Instance Range Low Limit' and 'Device Instance Range High Limit' parameters are present, then only those receiving BACnet-users whose Device `Object_Identifier` instance number falls in the range 'Device Instance Range Low Limit  $\leq$  Object\_Identifier Instance Number  $\leq$  Device Instance Range High Limit' shall be qualified to respond. If the 'Object Name' parameter is present, then only those qualified receiving BACnet-users that contain an object with an `Object_Name` property value matching the 'Object Name' parameter shall respond with an I-Have service request. If the 'Object Identifier' parameter is present, then only those qualified receiving BACnet-users that contain an object with an `Object_Identifier` property value matching the 'Object Identifier' parameter shall respond with an I-Have service request.

#### 16.9.3 I-Have Service Structure

The structure of the I-Have service primitive is shown in Table 16-10. The terminology and symbology used in this table are explained in 5.6.

**Table 16-10.** Structure of I-Have Service Primitive

Parameter Name	Req	Ind
Argument	M	M(=)
Device Identifier	M	M(=)
Object Identifier	M	M(=)
Object Name	M	M(=)

##### 16.9.3.1 Argument

The 'Argument' parameter shall convey the parameters for the I-Have unconfirmed service request.

##### 16.9.3.1.1 Device Identifier

The 'Device Identifier' parameter, of type `BACnetObjectIdentifier`, is the `Device Object_Identifier` of the device initiating the I-Have service request.

##### 16.9.3.1.2 Object Identifier

The 'Object Identifier' parameter, of type `BACnetObjectIdentifier`, shall convey the `Object_Identifier` of the object that is being advertised as located in the initiating device. This identifier shall correspond to the value of the `Object_Identifier` property of the object being advertised.

##### 16.9.3.1.3 Object Name

The 'Object Name' parameter, of type `CharacterString`, shall convey the name of the object that is being advertised as located in the initiating device. This name shall correspond to the value of the `Object_Name` property of the object being advertised.

#### 16.9.4 I-Have Service Procedure

The sending BACnet-user shall broadcast the I-Have unconfirmed request. Such broadcasts may be on the local network only, a remote network only, or globally on all networks at the discretion of the application. If the I-Have is being transmitted in response to a previously received Who-Has, then the I-Have shall be transmitted in such a manner that the BACnet-user that sent the Who-Has will receive the resulting I-Have. Since the request is unconfirmed, no further action is required. A BACnet-user may issue an I-Have service request at any time.

## 16.10 Who-Is and I-Am Services

The Who-Is service is used by a sending BACnet-user to determine the device object identifier, the network address, or both, of other BACnet devices that share the same internetwork. The Who-Is service is an unconfirmed service. The Who-Is service may be used to determine the device object identifier and network addresses of all devices on the network, or to determine the network address of a specific device whose device object identifier is known, but whose address is not. The I-Am service is also an unconfirmed service. The I-Am service is used to respond to Who-Is service requests. However, the I-Am service request may be issued at any time. It does not need to be preceded by the receipt of a Who-Is service request. In particular, a device may wish to broadcast an I-Am service request when it powers up. The network address is derived either from the MAC address associated with the I-Am service request, if the device issuing the request is on the local network, or from the NPCI if the device is on a remote network.

### 16.10.1 Who-Is Service Structure

The structure of the Who-Is service primitive is shown in Table 16-11. The terminology and symbology used in this table are explained in 5.6.

**Table 16-11.** Structure of Who-Is Service Primitive

Parameter Name	Req	Ind
Argument	M	M(=)
Device Instance Range Low Limit	U	U(=)
Device Instance Range High Limit	U	U(=)

#### 16.10.1.1 Argument

The 'Argument' parameter shall convey the parameters for the Who-Is unconfirmed service request.

##### 16.10.1.1.1 Device Instance Range Low Limit

This parameter is an unsigned integer in the range 0 - 4,194,303. In conjunction with the 'Device Instance Range High Limit' parameter, it defines the devices that are qualified to respond with an I-Am service request. If the 'Device Instance Range Low Limit' parameter is present, then the 'Device Instance Range High Limit' parameter shall also be present, and only those devices whose Device Object\_Identifier instance number falls within the range 'Device Instance Range Low Limit' ≤ Device Object\_Identifier Instance Number ≤ 'Device Instance Range High Limit' shall be qualified to respond. The value of the 'Device Instance Range Low Limit' shall be less than or equal to the value of the 'Device Instance Range High Limit'. If the 'Device Instance Range Low Limit' and 'Device Instance Range High Limit' parameters are omitted, then all devices that receive this message are qualified to respond with an I-Am service request.

##### 16.10.1.1.2 Device Instance Range High Limit

This parameter is an unsigned integer in the range 0 - 4,194,303. In conjunction with the 'Device Instance Range Low Limit' parameter, it defines the devices that are qualified to respond with an I-Am service request. If the 'Device Instance Range High Limit' parameter is present, then the 'Device Instance Range Low Limit' parameter shall also be present, and only those devices whose Device Object\_Identifier instance number falls within the range 'Device Instance Range Low Limit' ≤ Device Object\_Identifier Instance Number ≤ 'Device Instance Range High Limit' shall be qualified to respond. The value of the 'Device Instance Range High Limit' shall be greater than or equal to the value of the 'Device Instance Range Low Limit'. If the 'Device Instance Range Low Limit' and 'Device Instance Range High Limit' parameters are omitted, then all devices that receive this message are qualified to respond with an I-Am service request.

### 16.10.2 Who-Is Service Procedure

The sending BACnet-user shall transmit the Who-Is unconfirmed request, normally using a broadcast address. If the 'Device Instance Range Low Limit' and 'Device Instance Range High Limit' parameters are omitted, then all receiving BACnet-users shall return their Device Object\_Identifier in individual responses using the I-Am service. If the 'Device Instance Range Low Limit' and 'Device Instance Range High Limit' parameters are present, then only those receiving BACnet-users whose Device Object\_Identifier instance number falls within the range 'Device Instance Range Low Limit' ≤ Device Object\_Identifier Instance Number ≤ 'Device Instance Range High Limit' shall return their Device Object\_Identifier using the I-Am service.

If the receiving BACnet-user has a Slave\_Proxy\_Enable property and the Slave\_Proxy\_Enable for the receiving port is TRUE, then the BACnet-user shall respond with an I-Am unconfirmed request for each of the slave devices on the MS/TP network that are present in the Slave\_Address\_Binding property and that match the device range parameters. The I-Am

unconfirmed requests that are generated shall be generated as if the slave device originated the service. If the I-Am confirmed request is to be placed onto the MS/TP network on which the slave resides, then the MAC address included in the packet shall be that of the slave device. In the case where the I-Am confirmed request is to be placed onto a network other than that on which the slave resides, then the network layer shall contain SLEN and SNET filled in with the slave's MAC address as if it were routing a packet originally generated by the slave device

### 16.10.3 I-Am Service Structure

The structure of the I-Am service primitive is shown in Table 16-12. The terminology and symbology used in this table are explained in 5.6.

**Table 16-12.** Structure of I-Am Service Primitive

Parameter Name	Req	Ind
Argument	M	M(=)
I-Am Device Identifier	M	M(=)
Max APDU Length Accepted	M	M(=)
Segmentation Supported	M	M(=)
Vendor Identifier	M	M(=)

#### 16.10.3.1 Argument

The 'Argument' parameter shall convey the parameters for the I-Am unconfirmed service request.

##### 16.10.3.1.1 I-Am Device Identifier

The 'I-Am Device Identifier' parameter, of type BACnetObjectIdentifier, is the Device Object\_Identifier of the device initiating the I-Am service request.

##### 16.10.3.1.2 Max APDU Length Accepted

This parameter, of type Unsigned, shall convey the maximum number of octets that may be contained in a single, indivisible APDU. The value of this parameter shall be the same as the value of the Max\_APDU\_Length\_Accepted property of the Device object. See 12.11.17.

##### 16.10.3.1.3 Segmentation Supported

This parameter, of type BACnetSegmentation, conveys the capabilities of the device initiating the I-Am service request with respect to processing segmented messages. The value of this parameter shall be the same as the value of the Segmentation\_Supported property of the Device object. See 12.11.18.

##### 16.10.3.1.4 Vendor Identifier

This parameter, of type Unsigned16, shall convey the identity of the vendor who manufactured the device initiating the I-Am service request. The value of this parameter shall be the same as the value of the Vendor\_Identifier property of the Device object. See 12.11.6 and Clause 23.

#### 16.10.4 I-Am Service Procedure

The sending BACnet-user shall broadcast the I-Am unconfirmed request. This broadcast may be on the local network only, a remote network only, or globally on all networks at the discretion of the application. If the I-Am is being broadcast in response to a previously received Who-Is, then the I-Am shall be broadcast in such a manner that the BACnet-user that sent the Who-Is will receive the resulting I-Am. Since the request is unconfirmed, no further action is required. A BACnet-user may issue an I-Am service request at any time.

## 17 VIRTUAL TERMINAL SERVICES

Virtual Terminal (VT) services are used by a client BACnet-user to establish a connection to an application program server in another BACnet device. The purpose of this connection is to facilitate the bi-directional exchange of character-oriented data. Normally, these services would be used to permit an application program in one BACnet device to act as a "terminal emulator" that interacts with an "operator interface" application program in another BACnet device.

These connections will be referred to here as VT-sessions. Once a VT-session is established, both the client application program and server application program will be referred to as VT-users.


The VT services provide the following features and services to the VT-user:

- (a) the means to establish a VT-session between two peer VT-users for the purpose of enabling virtual terminal information exchange;
- (b) the means to select between different VT-class types, including character repertoire and encoding;
- (c) the means to control the integrity of the communication;
- (d) the means to terminate the VT-session unilaterally;
- (e) the means to exchange virtual terminal data.

### 17.1 Virtual Terminal Model


Each VT-session is a bi-directional connection between two peer application processes. Once a session is established between these peers, data are exchanged through the use of Virtual Terminal Queues (VTQ). The VTQs are first-in, first-out (FIFO) queues. The purpose of modeling the data flow between peer processes as FIFO queues is to isolate the implementation of the peer application process that is on each side of the VT-session from the other. Normally a human operator using a BACnet device will request the operator interface application program to establish a VT-session with an operator interface application program in another BACnet device. The VTQ model uses two FIFO queues to allow those operator interfaces, or other application programs that can provide simultaneous bi-directional interaction, to do so through the BACnet protocol.

Figure 17-1 shows a typical relationship between an operator interface application program and a physical device, such as a CRT terminal.

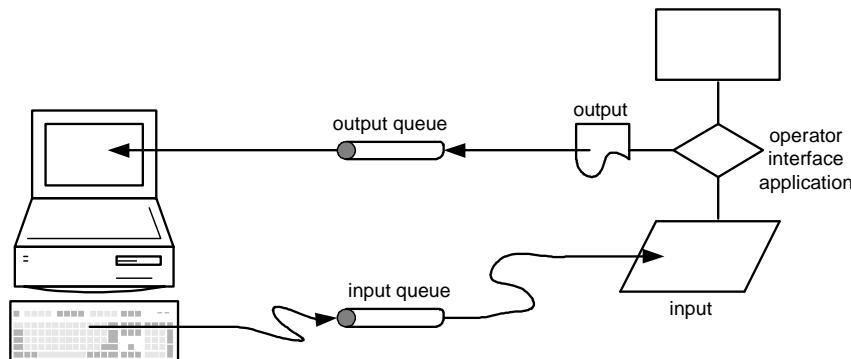


**Figure 17-1.** Relationship between an operator interface program and a physical device.

Figure 17-2 shows how this model is extended using the VTQ concept.

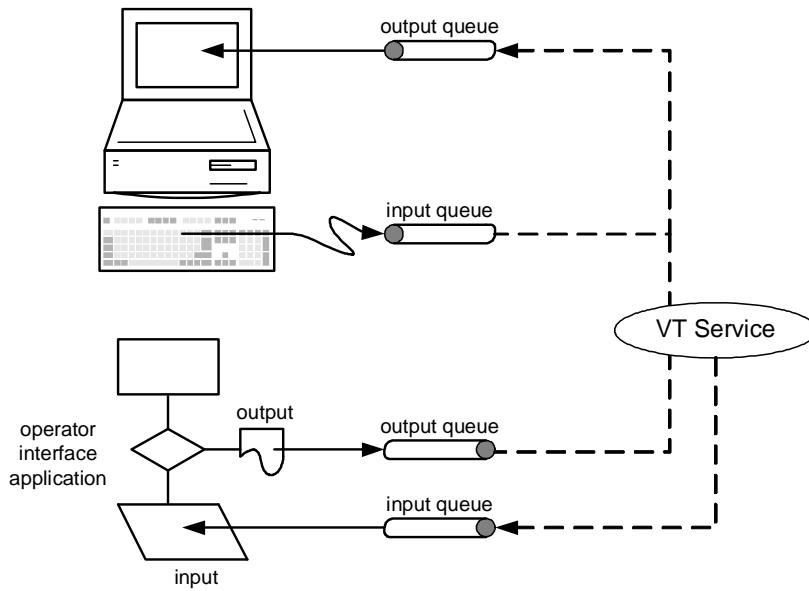

**Figure 17-2.** Extending the VT model to accommodate queues.

The peer processes at each end of a VT-session may not actually be agents for a physical device such as a CRT terminal. The VTQ model permits flexibility in the implementation of each BACnet device. There may, in fact, be several different processes that coordinate their use of VT Services within each BACnet device. For example, in a multi-window operator interface program, there may be several windows, each with its own interactive virtual terminal session to some other BACnet device. For this reason, each VT-session exists between two unique processes rather than between two BACnet devices. Each session, therefore, consists of two processes that act as agents for their respective application programs and their respective VTQs. These agent processes and their VTQs are called VT-Users. The model of this data flow is shown in Figure 17-3.

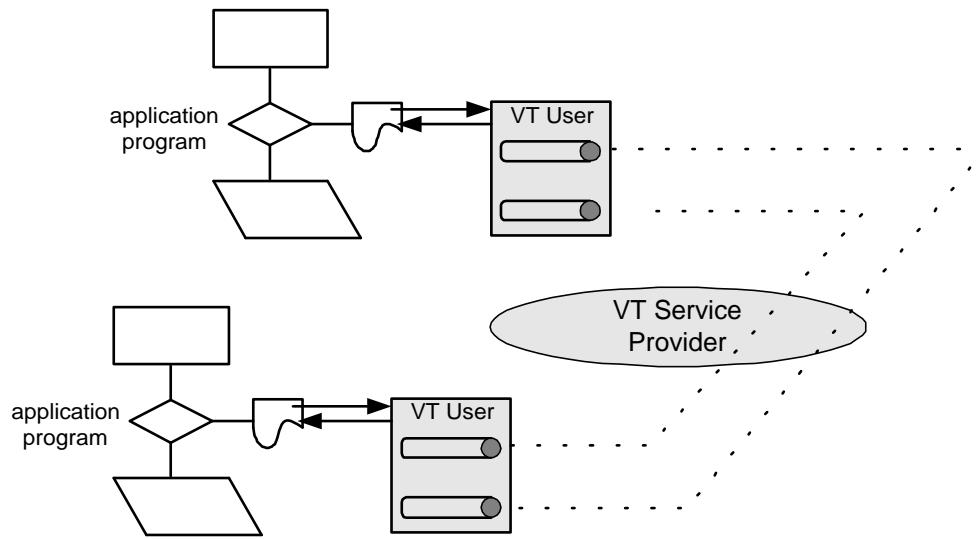

**Figure 17-3.** Virtual terminal data flow.

Once the virtual terminal session is established, character data are exchanged by the two peers through their respective VTQs. Normally, characters typed by a human operator would be passed directly to an input queue for forwarding to the peer's input queue, without any echoing by the local device to which the operator is connected. The peer application program, upon receiving these characters from its input queue, would respond with characters placed in its output queue for forwarding back to the output queue of the operator device and so on. In particular, it shall be the responsibility of the operator interface application to generate all "screen" output, including carriage control and character echoing when appropriate.

Although the VT services model does provide a true peer-to-peer connection, as shown in Figure 17-3, a human operator typically uses one BACnet device to establish a virtual terminal connection to a second BACnet device. This second BACnet device contains an "operator interface" application program to which the operator's keystrokes are sent without filtering. The operator interface application program's output is conveyed through the VT services and ultimately displayed for the human operator. Normally, the BACnet device to which the operator is actually connected would recognize some local signal meaning "end virtual terminal session" but otherwise would not filter the operator's keystrokes.

### 17.1.1 Basic Services

There are three basic services provided: VT-Open, VT-Close, and VT-Data. The VT-Open service is used to establish a VT-session between peer processes. The VT-Close service is used to terminate a previously established session. The VT-Data service is used to exchange data between peer processes.

### 17.1.2 VT-classes

The classes of virtual terminal that are available in a peer VT service may be determined by examining the BACnet Device object in the peer device. The BACnet Device object has a property called VT\_Classes\_Supported, which may be read with the ReadProperty, ReadPropertyMultiple, or ReadPropertyConditional services to determine which VT-classes are available in that device.

### 17.1.3 Active VT-sessions


The active VT-sessions within a peer VT service may be determined by examining the BACnet Device object in the peer device. The BACnet Device object has a property called Active\_VT\_Sessions, which may be read with the ReadProperty, ReadPropertyMultiple, or ReadPropertyConditional services to determine which VT-session IDs are in use within that device.

### 17.1.4 State Diagram for VT-Open, VT-Data, and VT-Close

There are three phases of operation within a VT session context: IDLE, DATA EXCHANGE, and HOLD. In the IDLE phase, no VT-session exists. Once a VT-session is created through the use of the VT-Open service, the VT context enters the DATA EXCHANGE phase. The VT context remains in the DATA EXCHANGE phase until one of two events occurs:

- (a) a successful VT-Close is performed, terminating the VT-session context, or
- (b) a VT-Data request returns 'Result (-)'.

The HOLD phase occurs when a VT-Data request cannot be confirmed. Figure 17-4 shows the relationship between phases.

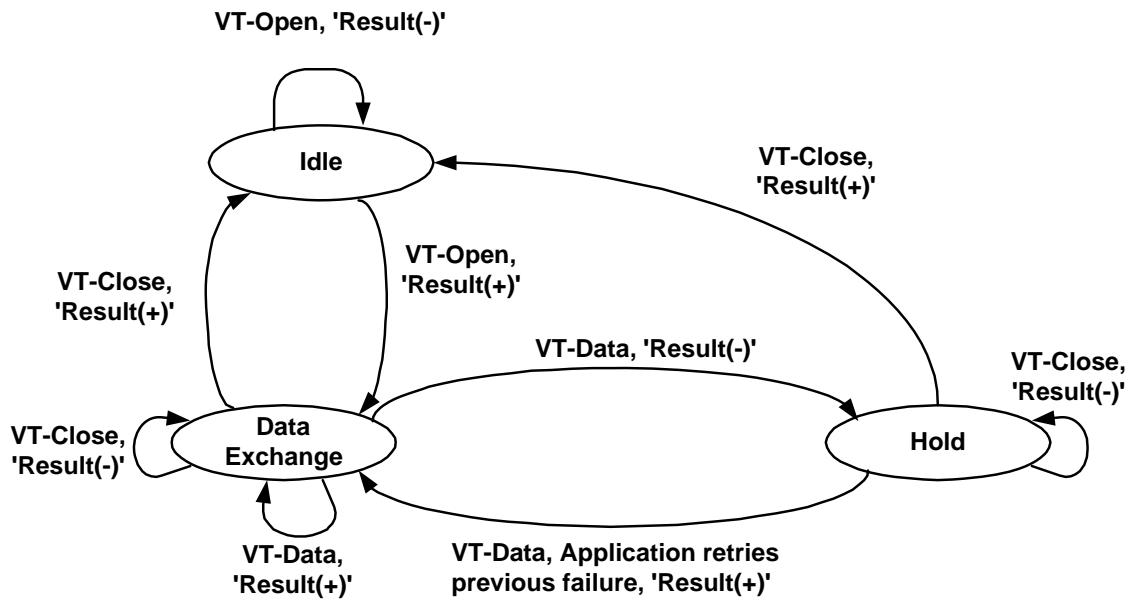

**Figure 17-4.** Virtual terminal services state diagram.

### 17.1.5 VT Session Synchronization

Each of the peers participating in a VT-session shall maintain two VT-data flags that are used to synchronize the VT-session. One flag represents the device's role as a sending BACnet-user and is the sequence number, which alternates between zero and one, of the next VT-data that is to be sent. This sequence number is incremented modulo 2 upon receipt of a 'Result(+)’ response to a VT-Data request. This flag is initialized to 0 (the first VT-Data request uses a sequence number of 0) when the VT-session is established.

The other flag represents the device's role as a receiving BACnet-user and is the sequence number of the last VT-Data request that was correctly received. This sequence number is initialized to 1 (the next VT-Data indication is expected to have a sequence number of 0) when the VT session is established. The sequence number is incremented modulo 2 when a VT-Data indication with the expected sequence number is received and successfully processed.

The receiving VT-session context shall also store the last received 'All New Data Accepted' and 'Accepted Octet Count'. This is required in the event that a 'Result(+)’ response to a VT-Data indication is lost, which would be detected by the receipt of a VT-Data indication with the same 'VT-Data Flag' as the previously received 'VT-Data Flag' saved in the VT session context.

### 17.1.6 VT Session Identifiers

Associated with each VT-session are two session identifiers, a 'Local VT Session Identifier' and a 'Remote VT Session Identifier'. These session identifiers provide a way to associate the data from a particular VT-Data request with the correct process. The value of the session identifiers is established as part of the VT-Open service. Each device selects its own 'Local VT Session Identifier', which shall be unique to all active VT-sessions in the device, without regard to whether the device's role in the session is a client or a server. The appropriate 'Remote VT Session Identifier' is obtained from the VT-Open service parameters.

When VT data are conveyed to a remote device, the 'Remote VT Session Identifier' is conveyed with the data. This session identifier is used by the remote device to identify the correct VT-session.

## 17.2 VT-Open Service

The VT-Open service is used to establish a VT-session with a peer VT-user. The service request includes a VT-class type that identifies a particular set of assumptions about the character repertoire and encoding to be used with this session.

### 17.2.1 Structure

The structure of the VT-Open service primitives is shown in Table 17-1. The terminology and symbology used in this table are explained in 5.6.

**Table 17-1.** Structure of VT-Open Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
VT-class	M	M(=)		
Local VT Session Identifier	M	M(=)		
Result (+) Remote VT Session Identifier			S M	S(=) M(=)
Result (-) Error Type			S M	S(=) M(=)

#### 17.2.1.1 Argument

This parameter shall convey the parameters for the VT-Open confirmed service request.

##### 17.2.1.1.1 VT-class

This parameter, of type BACnetVTClass, shall identify the name of the desired class of session to be established. The standard enumeration is:

```
DEFAULT_TERMINAL
ANSI_X3.64
DEC_VT52
DEC_VT100
DEC_VT220
HP_700/94
IBM_3130
```

The enumeration DEFAULT\_TERMINAL shall refer to a terminal with the characteristics defined in 17.5. All VT-users are required to support at least one VT-class, namely DEFAULT\_TERMINAL. Other VT-class types may also be supported by a given VT-user. It is possible to discover which VT-class types are supported by reading the VT\_Classes\_Supported property of the Device object.

##### 17.2.1.1.2 Local VT Session Identifier

The 'Local VT Session Identifier' parameter shall be an unsigned integer in the range 0-255 indicating the unique VT-session in the requesting VT-user, which shall be used to receive VT-Data output from the opened virtual terminal. This identifier becomes the 'Remote VT Session Identifier' to the responding VT-user.

##### 17.2.1.2 Result (+)

The 'Result +' parameter shall indicate that the service request succeeded. A successful result includes the following parameter.

##### 17.2.1.2.1 Remote VT Session Identifier

The 'Remote VT Session Identifier' parameter shall be an unsigned integer in the range 0-255 indicating a unique VT-session that exists within the responding VT-user's context. From the perspective of the responding VT-user, this parameter is the 'Local VT Session Identifier'.

### 17.2.1.3 Result (-)

The 'Result (-)' parameter shall indicate that the service request has failed in its entirety. The reason for the failure shall be specified by the 'Error Type' parameter.

#### 17.2.1.3.1 Error Type

This parameter consists of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

### 17.2.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall attempt to allocate the resources necessary to establish a VT-session. If there is no VT-user that can provide the desired VT-class, then the 'Result (-)' response shall be returned. If there is a VT-user that can provide the desired VT-class, then the responding BACnet-user shall attempt to establish a new VT-session. If the VT-user does not have the resources to establish another session, then the 'Result (-)' response shall be returned. If the VT-user has the resources, a new VT-session shall be created, the local VT-data Flags shall be initialized as specified in 17.1.5, and a new VT-session Identifier shall be returned in the 'Result (+)' response.

### 17.3 VT-Close Service

The VT-Close service is used to terminate a previously established VT-session with a peer VT-user. The service request may specify a particular VT-session to be terminated or a list of VT-sessions to be terminated.

#### 17.3.1 Structure

The structure of the VT-Close service primitives is shown in Table 17-2. The terminology and symbology used in this table are explained in 5.6.

**Table 17-2. Structure of VT-Close Service Primitives**

Parameter Name	Req	Ind	Rsp	Cnf
Argument List of Remote VT Session Identifiers	M M	M(=) M(=)		
Result (+)			S	S(=)
Result (-) Error Type List of VT Session Identifiers			S M C	S(=) M(=) C(=)

#### 17.3.1.1 Argument

This parameter shall convey the parameters for the VT-Close confirmed service request.

##### 17.3.1.1.1 List of Remote VT Session Identifiers

The 'List of Remote VT Session Identifiers' parameter shall consist of a list of one or more 'Remote VT Session Identifiers'. Each 'Remote VT Session Identifier' shall indicate the particular VT-session that is to be terminated.

##### 17.3.1.2 Result (+)

The 'Result +' parameter shall indicate that the service request succeeded.

##### 17.3.1.3 Result (-)

The 'Result -' parameter shall indicate that the service request has failed in its entirety. The reason for the failure shall be specified by the 'Error Type' parameter.

##### 17.3.1.3.1 Error Type

This parameter consists of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

##### 17.3.1.3.2 List of VT Session Identifiers

If the 'Error Type' parameter returns an 'Error Code' of VT\_SESSION\_TERMINATION\_FAILURE, then this parameter shall be included. If the 'Error Type' parameter indicates some other error, then this parameter shall be omitted. The 'List of VT Session Identifiers' parameter shall consist of a list of one or more 'VT Session Identifiers'. Each 'VT Session Identifier' shall indicate the particular VT-session that could not be terminated. The Session Identifiers returned are the ones that are local with respect to the device receiving the 'Result(-)' primitive, the requesting VT-user.

#### 17.3.2 Service Procedure

After verifying the validity of the request, the responding BACnet-user shall attempt to terminate each VT-session specified by the 'List of Remote VT Session Identifiers' parameter. From the viewpoint of the responding BACnet-user, these are 'Local VT Session Identifiers'. If one or more of the specified VT-sessions cannot be terminated for some reason, then all of the specified sessions that can be terminated shall be terminated and a 'Result -' response shall be returned. If all of the specified VT-sessions are successfully terminated, then the 'Result +' response shall be returned.

## 17.4 VT-Data Service

The VT-Data service is used to exchange data with a peer VT-user through a previously established VT-session. The sending BACnet-user provides new input for the peer VT-user, which may accept or reject the new data. If the new data are rejected, then it is up to the sending BACnet-user to retry the request at a later time.

### 17.4.1 Structure

The structure of the VT-Data service primitives is shown in Table 17-3. The terminology and symbology used in this table are explained in 5.6.

**Table 17-3.** Structure of VT-Data Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
VT-session Identifier	M	M(=)		
VT-new Data	M	M(=)		
VT-data Flag	M	M(=)		
Result (+)			S	S(=)
All new Data Accepted			M	M(=)
Accepted Octet Count			C	C(=)
Result (-)			S	S(=)
Error Type			M	M(=)

#### 17.4.1.1 Argument

This parameter shall convey the parameters for the VT-Data confirmed service request.

##### 17.4.1.1.1 VT-session Identifier

The 'VT-session Identifier' parameter shall indicate the particular VT-session to which data will be sent. It is the 'Remote VT Session Identifier' from the perspective of the requesting BACnet-user and the 'Local VT Session Identifier' from the perspective of the responding BACnet-user.

##### 17.4.1.1.2 VT-new Data

The 'VT-new Data' parameter shall specify the octets of new data that are to be sent to the peer VT-user.

##### 17.4.1.1.3 VT-data Flag

The 'VT-data Flag' parameter, of type Unsigned, shall indicate the expected sequence of VT-Data requests. It shall have values of 0 or 1, which alternate with each new VT-Data request for the same VT session.

#### 17.4.1.2 Result (+)

The 'Result (+)' parameter shall indicate that the service request succeeded. A successful result includes the following parameters.

##### 17.4.1.2.1 All New Data Accepted

The 'All New Data Accepted' parameter, of type BOOLEAN, shall be equal to TRUE if all of the 'VT-new Data' octets were accepted by the peer VT-user. In this case, the service shall be considered completed. If the 'All New Data Accepted' parameter is FALSE, then some of the 'VT-new Data' octets were unable to be accepted by the peer VT-user. Typically this could occur because of resource limitations in the peer VT-user. In this case, it is up to the sending BACnet user to re-issue the VT-Data request at a later time, including only those octets that could not be accepted.

##### 17.4.1.2.2 Accepted Octet Count

The 'Accepted Octet Count' parameter shall only be present if the 'All New Data Accepted' parameter is FALSE. In this case, the 'Accepted Octet Count' parameter shall indicate the number of octets that were actually accepted from those presented in the

'VT-new Data' parameter of the service request. If the 'All New Data Accepted' parameter is TRUE, then the 'Accepted Octet Count' parameter shall be omitted.

#### **17.4.1.3 Result (-)**

The 'Result (-)' parameter shall indicate that the service request has failed in its entirety. The reason for the failure shall be specified by the 'Error Type' parameter.

##### **17.4.1.3.1 Error Type**

This parameter consists of two component parameters: (1) the 'Error Class' and (2) the 'Error Code'. See Clause 18.

#### **17.4.2 Service Procedure**

The sending BACnet user shall send the initial VT-Data request using a 'VT-data Flag' value of 0. Subsequent VT-Data requests for the same session, except retries, shall alternate sequence numbers 0 and 1. New VT-Data requests with the alternate sequence number shall not be transmitted until a 'Result(+) has been received for the previous VT-Data request.

After verifying the validity of the request, the receiving BACnet-user shall attempt to locate the session specified by the 'VT-session Identifier' parameter. If the VT-session cannot be located, then the 'Result (-)' response shall be returned.

If the specified VT-session is found and the received 'VT-Data Flag' is the same as the last received 'VT-Data Flag' for this session, then this is a duplicate VT-Data request. The data shall be discarded, and a 'Result(+) shall be returned containing the 'All New Data Accepted' and 'Accepted Octet Count' values that have been saved in the VT-session context from the previous VT-Data response.

If the specified VT-session is found and the received 'VT-Data Flag' is different from the last received 'VT-Data Flag' for this session, then this is a new VT-Data request. If all of the data can be added to the session's input queue, then the data shall be queued and a 'Result(+) shall be returned with 'All New Data Accepted' = TRUE and the 'Accepted Octet Count' absent. If all of the data in the VT-Data request cannot be added to the session's input queue, then as many data as possible shall be queued and the remainder discarded. A 'Result(+) shall be returned with 'All New Data Accepted' = FALSE and 'Accepted octet Count' equal to the number of octets that were able to be queued. In either case, the returned 'All New Data Accepted' and 'Accepted Octet Count' values shall be saved in the VT-session context.

## 17.5 Default-terminal Characteristics

Every VT-user shall implement at least one VT-class, `DEFAULT_TERMINAL`. The default terminal is based on a limited set of functions that are commonly found in all types of interactive terminal devices. The characteristics of the default terminal include a character repertoire, control functions, and page size assumptions. No other assumptions may be made about the behavior of the VT-user.

### 17.5.1 Default-terminal Character Repertoire

The default terminal character repertoire shall be defined as a particular mapping between single octet values and their associated meanings. The default terminal character repertoire shall include three types of meanings for a given octet value:

- (a) a particular symbol (SYMBOL), e.g., "A";
  - (b) a particular implied control function (CONTROL), e.g., Carriage Return;
  - (c) a null meaning (NUL), e.g., Unused, shall be ignored.

Those octets specified as NUL within the default terminal character repertoire have no assumed meanings and shall be ignored if they are received by either VT-user. The default terminal character repertoire is a subset of ASCII. Table 17.4 summarizes the octet encodings for each character in the default terminal character repertoire. The "Octet Value" field indicates octet encodings as decimal (base 10) values from 0 to 255. A range of octet values is indicated by two decimal numbers, e.g., 000-006.

**Table 17-4.** Default Terminal Character Repertoire

Octet Value	Type	Meaning
000-006	NUL	none
007	CONTROL	audible indication (BEL)
008	CONTROL	non-destructive backspace (BS)
009	CONTROL	horizontal tab (TAB)
010	CONTROL	line feed (LF)
011-012	NUL	none
013	CONTROL	carriage return (CR)
014-031	NUL	none
032	SYMBOL	space
033	SYMBOL	!      exclamation
034	SYMBOL	"     double quote
035	SYMBOL	#     pound sign
036	SYMBOL	\$     dollar sign
037	SYMBOL	%    percent
038	SYMBOL	&    ampersand
039	SYMBOL	'    apostrophe
040	SYMBOL	(   left parenthesis
041	SYMBOL	)   right parenthesis
042	SYMBOL	*   asterisk
043	SYMBOL	+   plus sign
044	SYMBOL	,   comma
045	SYMBOL	-   minus sign
046	SYMBOL	.   period
047	SYMBOL	/   forward slash

**Table 17-4.** Default Terminal Character Repertoire (*continued*)

Octet Value	Type	Meaning	
048	SYMBOL	0	zero
049	SYMBOL	1	one
050	SYMBOL	2	two
051	SYMBOL	3	three
052	SYMBOL	4	four
053	SYMBOL	5	five
054	SYMBOL	6	six
055	SYMBOL	7	seven
056	SYMBOL	8	eight
057	SYMBOL	9	nine
058	SYMBOL	:	colon
059	SYMBOL	;	semicolon
060	SYMBOL	<	left angle bracket (or less than)
061	SYMBOL	=	equal sign
062	SYMBOL	>	right angle bracket (or greater than)
063	SYMBOL	?	question mark
064	SYMBOL	@	commercial at sign
065	SYMBOL	A	
066	SYMBOL	B	
067	SYMBOL	C	
068	SYMBOL	D	
069	SYMBOL	E	
070	SYMBOL	F	
071	SYMBOL	G	
072	SYMBOL	H	
073	SYMBOL	I	
074	SYMBOL	J	
075	SYMBOL	K	
076	SYMBOL	L	
077	SYMBOL	M	
078	SYMBOL	N	
079	SYMBOL	O	
080	SYMBOL	P	
081	SYMBOL	Q	
082	SYMBOL	R	
083	SYMBOL	S	
084	SYMBOL	T	
085	SYMBOL	U	
086	SYMBOL	V	
087	SYMBOL	W	
088	SYMBOL	X	
089	SYMBOL	Y	
090	SYMBOL	Z	

**Table 17-4.** Default Terminal Character Repertoire (*concluded*)

Octet Value	Type	Meaning
091	SYMBOL	[ left square bracket
092	SYMBOL	\ back slash
093	SYMBOL	] right square bracket
094	SYMBOL	^ caret
095	SYMBOL	_ underscore
096	SYMBOL	` accent grave
097	SYMBOL	a
098	SYMBOL	b
099	SYMBOL	c
100	SYMBOL	d
101	SYMBOL	e
102	SYMBOL	f
103	SYMBOL	g
104	SYMBOL	h
105	SYMBOL	i
106	SYMBOL	j
107	SYMBOL	k
108	SYMBOL	l
109	SYMBOL	m
110	SYMBOL	n
111	SYMBOL	o
112	SYMBOL	p
113	SYMBOL	q
114	SYMBOL	r
115	SYMBOL	s
116	SYMBOL	t
117	SYMBOL	u
118	SYMBOL	v
119	SYMBOL	w
120	SYMBOL	x
121	SYMBOL	y
122	SYMBOL	z
123	SYMBOL	{ left curly bracket
124	SYMBOL	vertical bar
125	SYMBOL	} right curly bracket
126	SYMBOL	~ tilde
127	CONTROL	non-destructive backspace (DEL)
128-255	NUL	none

### 17.5.2 Control Functions

There are six octet codes within the default terminal character repertoire that perform control functions. In this context, control function means some action that is implied by the receipt of one of these control codes.

#### 17.5.2.1 Octet Code 007

The octet code 007 shall represent an audible indication (BEL). Normally this would be used to sound a tone or bell signal.

#### 17.5.2.2 Octet Codes 008 and 127

The octet code 008 shall represent a non-destructive backspace (BS). This shall cause the cursor of the virtual "output device" to be moved one character position to the left. If the cursor is at the extreme left or beginning of a line, then BS shall have no effect.

This function shall only change the current position, without overwriting or altering any characters that have been previously displayed on the same "line." The octet code 127 shall be considered to be equivalent to 008 and shall have the same effects.

#### 17.5.2.3 Octet Code 013

The octet code 013 shall represent a carriage return (CR). This shall cause the cursor to be reset to the beginning of the current "line." Subsequently received characters would then overwrite existing characters on the current "line."

#### 17.5.2.4 Octet Code 010

The octet code 010 shall represent a line feed (LF). This shall cause the cursor to be advanced to the next line but shall not change cursor position within the line. Typically this code is used in conjunction with CR.

#### 17.5.2.5 Octet Code 009

The octet code 009 shall represent a horizontal advance to the next tab stop (TAB). This shall cause the cursor to be advanced to the next tab position on the current line. This function shall only change the cursor position, without overwriting or altering any characters that have previously been displayed on the same line. Tab stops shall exist at every eight character positions, as shown in Figure 17-5.

#### 17.5.3 Page Size Assumptions

There shall be only two assumptions about page size within the Default-terminal context. First, pages are assumed to have 80 columns.

1	2	3	4	5	...
T	T	T	T	T	...

Figure 17-5. VT tab positions.

Each SYMBOL character received is assumed to occupy one column. NUL characters have no effect on column position. CONTROL characters have different effects, as described under 17.5.2. Second, each page is assumed to be unconstrained in length. This is equivalent to a printer with continuous form paper.

## 18 ERROR, REJECT, and ABORT CODES

All errors associated with the BACnet protocol are enumerated according to a category called "Error Class." Within each Error Class, the errors are further enumerated individually by "Error Code." It is thus possible for an application to take remedial action based upon two levels of granularity.

### 18.1 Error Class - DEVICE

This Error Class pertains to circumstances that affect the functioning of an entire BACnet device. The presence of one of these errors generally indicates that the entire service request has failed.

**18.1.1 DEVICE\_BUSY** - A service request has been temporarily declined because the addressed BACnet device expects to be involved in higher priority processing for a time in excess of the usual request/confirm timeout period.

**18.1.2 CONFIGURATION\_IN\_PROGRESS** - A service request has been temporarily declined because the addressed BACnet device is in the process of being configured, either by means local to the device or by means of other protocol services.

**18.1.3 OPERATIONAL\_PROBLEM** - A service request has been declined because the addressed BACnet device has detected an operational problem that prevents it from carrying out the requested service.

**18.1.4 OTHER** - This error code is returned for a reason other than any of those previously enumerated for this Error Class.

### 18.2 Error Class - OBJECT

This Error Class pertains to problems related to identifying, accessing, and manipulating BACnet objects, whether BACnet-defined or not. Since these errors generally apply to individual object characteristics, they do not necessarily signal that an entire service request has failed.

**18.2.1 DYNAMIC\_CREATION\_NOT\_SUPPORTED** - An attempt has been made to create an object using an object type that cannot be created dynamically.

**18.2.2 NO\_ALARM\_CONFIGURED** - The BACnet object referenced by the service does not support, or is not configured for, event generation.

**18.2.3 NO\_OBJECTS\_OF\_SPECIFIED\_TYPE** - A search of the addressed BACnet device's object database has failed to find any objects of the object type specified in the service request.

**18.2.4 OBJECT\_DELETION\_NOT\_PERMITTED** - An attempt has been made to delete an object that cannot be deleted or is currently protected from deletion.

**18.2.5 OBJECT\_IDENTIFIER\_ALREADY\_EXISTS** - An attempt has been made to create a new object using an object identifier already in use.

**18.2.6 READ\_ACCESS\_DENIED** - An attempt has been made to read the properties of an object defined as inaccessible through the BACnet protocol read services.

**18.2.7 UNKNOWN\_OBJECT** - An Object\_Identifier has been specified for an object that does not exist in the object database of the addressed BACnet device.

**18.2.8 UNSUPPORTED\_OBJECT\_TYPE** - An object type has been specified in a service parameter that is unknown or unsupported in the addressed BACnet device.

**18.2.9 OTHER** - This error code is returned for a reason other than any of those previously enumerated for this Error Class.

### 18.3 Error Class - PROPERTY

This Error Class pertains to problems related to identifying, accessing, and manipulating the properties of BACnet objects, whether BACnet-defined or not. Since these errors generally apply to individual property characteristics, they do not necessarily signal that an entire service request has failed.

**18.3.1 CHARACTER\_SET\_NOT\_SUPPORTED** - A character string value was encountered that is not a supported character set.

**18.3.2 DATATYPE\_NOT\_SUPPORTED** - The data is of, or contains, a datatype not supported by this instance of this property.

**18.3.3 INCONSISTENT\_SELECTION\_CRITERION** - A property has been referenced with a datatype inconsistent with the 'Comparison Value' specified in an 'Object Selection Criteria' service parameter. This error would arise, for example, if an analog property were compared against a Boolean constant, or vice-versa.

**18.3.4 INVALID\_ARRAY\_INDEX** - An attempt was made to access an array property using an array index that is outside the range permitted for this array.

**18.3.5 INVALID\_DATATYPE** - The datatype of a property value specified in a service parameter does not match the datatype of the property referenced by the specified Property\_Identifier.

**18.3.6 LOG\_BUFFER\_FULL** - The attempted operation would result in the addition of a log record to an object whose log buffer is full.

**18.3.7 LOGGED\_VALUE\_PURGED** - A previously logged value was purged due to a change to the list of logged properties.

**18.3.8 NO\_PROPERTY\_SPECIFIED** - No data was logged due to a device or object instance equal to 4194303 in the list of logged properties.

**18.3.9 NOT\_CONFIGURED\_FOR\_TRIGGERED\_LOGGING** - The attempted logging operation is only allowed when the Logging\_Type property has the value TRIGGERED.

**18.3.10 NOT\_COV\_PROPERTY** - The property is not conveyed by COV notification.

**18.3.11 OPTIONAL\_FUNCTIONALITY\_NOT\_SUPPORTED** - An attempt has been made to write a value to a property that would require the device to exhibit non-supported optional functionality.

**18.3.12 PROPERTY\_IS\_NOT\_AN\_ARRAY** - An attempt has been made to access a property as an array and that property does not have an array datatype.

**18.3.13 READ\_ACCESS\_DENIED** - An attempt has been made to read a property defined as inaccessible through the BACnet protocol read services.

**18.3.14 UNKNOWN\_PROPERTY** - A Property\_Identifier has been specified in a service parameter that is unknown or unsupported in the addressed BACnet device for objects of the referenced object type.

**18.3.15 VALUE\_OUT\_OF\_RANGE** - An attempt has been made to write to a property with a value that is outside the range of values defined for the property.

**18.3.16 WRITE\_ACCESS\_DENIED** - An attempt has been made to write to a property defined as inaccessible through the BACnet protocol write services.

**18.3.17 OTHER** - This error code is returned for a reason other than any of those previously enumerated for this Error Class.

#### 18.4 Error Class - RESOURCES

This Error Class pertains to problems related to the resources of a BACnet device that affect its capacity to carry out protocol service requests.

**18.4.1 NO\_SPACE\_FOR\_OBJECT** - An attempt to create an object has failed because not enough dynamic memory space exists in the addressed BACnet device.

**18.4.2 NO\_SPACE\_TO\_ADD\_LIST\_ELEMENT** - An attempt to add an element to a list has failed because not enough dynamic memory space exists in the addressed BACnet device.

**18.4.3 NO\_SPACE\_TO\_WRITE\_PROPERTY** - An attempt to write a property has failed because not enough dynamic memory space exists in the addressed BACnet device.

**18.4.4 OTHER** - This error code is returned for a reason other than any of those previously enumerated for this Error Class.

## 18.5 Error Class - SECURITY

This Error Class pertains to problems related to security.

**18.5.1 AUTHENTICATION\_FAILED** - The message being authenticated was not generated by the service provider.

**18.5.2 CHARACTER\_SET\_NOT\_SUPPORTED** - A character string value was encountered that is not a supported character set.

**18.5.3 INCOMPATIBLE\_SECURITY\_LEVELS** - The two clients do not have the same security authorization.

**18.5.4 INVALID\_OPERATOR\_NAME** - The 'Operator Name' is not associated with any known operators.

**18.5.5 KEY\_GENERATION\_ERROR** - The key server was unable to generate a Session Key (SK).

**18.5.6 PASSWORD\_FAILURE** - The password was incorrect.

**18.5.7 SECURITY\_NOT\_SUPPORTED** - The remote client does not support any BACnet security mechanisms.

**18.5.8 TIMEOUT** - The APDU with the expected Invoke ID was not received before the waiting time expired.

**18.5.9 OTHER** - This error code is returned for a reason other than any of those previously enumerated for this Error Class.

## 18.6 Error Class - SERVICES

This Error Class pertains to problems related to the execution of protocol service requests, whether BACnet-defined or not. Without exception, these errors signal the inability of the responding BACnet-user to carry out the desired service in its entirety and are thus "fatal."

**18.6.1 CHARACTER\_SET\_NOT\_SUPPORTED** - A character string value was encountered that is not a supported character set.

**18.6.2 COMMUNICATION\_DISABLED** - Communication has been disabled due to receipt of a DeviceCommunicationControl request.

**18.6.3 COV\_SUBSCRIPTION\_FAILED** - COV Subscription failed for some reason.

**18.6.4 DUPLICATE\_NAME** - An attempt has been made to write to an Object\_Name property with a value that is already in use in a different Object\_Name property within the device.

**18.6.5 DUPLICATE\_OBJECT\_ID** - An attempt has been made to write to an Object\_Identifier property with a value that is already in use in a different Object\_Identifier within the same device.

**18.6.6 FILE\_ACCESS\_DENIED** - Generated in response to an AtomicReadFile or AtomicWriteFile service request for access to a file that is currently locked or otherwise not accessible.

**18.6.7 INCONSISTENT\_PARAMETERS** - A conflict exists because two or more of the parameters specified in the service request are mutually exclusive.

**18.6.8 INVALID\_CONFIGURATION\_DATA** - The configuration data provided was invalid or corrupt.

**18.6.9 INVALID\_EVENT\_STATE** - The 'Event State Acknowledged' parameter conveyed by an AcknowledgeAlarm service request does not match the 'To State' parameter of the most recent occurrence of the same transition type of the event being acknowledged.

**18.6.10 INVALID\_FILE\_ACCESS\_METHOD** - Generated in response to an AtomicReadFile or AtomicWriteFile request that specifies a 'File Access Method' that is not valid for the specified file.

**18.6.11 INVALID\_FILE\_START\_POSITION** - Generated in response to an AtomicReadFile or AtomicWriteFile request that specifies an invalid 'File Start Position' or invalid 'File Start Record' parameter.

**18.6.12 INVALID\_PARAMETER\_DATATYPE** - The datatype of a value specified for a service parameter is not appropriate to the parameter.

**18.6.13 INVALID\_TIME\_STAMP** - The 'Time Stamp' parameter conveyed by an AcknowledgeAlarm service request does not match the time of the most recent occurrence of the event being acknowledged.

**18.6.14 MISSING\_REQUIRED\_PARAMETER** - A parameter required for the execution of a service request has not been supplied.

**18.6.15 OPTIONAL\_FUNCTIONALITY\_NOT\_SUPPORTED** - The parameters of a service are such that the device would be required to exhibit non-supported optional functionality.

**18.6.16 PROPERTY\_IS\_NOT\_A\_LIST** - An attempt has been made to access a property via either the AddListElement service or the RemoveListElement service and that property does not have a list datatype.

**18.6.17 PROPERTY\_IS\_NOT\_AN\_ARRAY** - An attempt has been made to access a property as an array and that property does not have an array datatype.

**18.6.18 SERVICE\_REQUEST\_DENIED** - A request has been made to execute a service for which the requesting BACnet device does not have the appropriate authorization.

**18.6.19 OTHER** - This error code is returned for a reason other than any of those previously enumerated for this Error Class.

## 18.7 Error Class – COMMUNICATION

This Error Class pertains to problems related to network communications. These codes indicate problems reported by a remote device in abort and reject PDUs, or they indicate problems detected internally. These error codes are stored in properties of objects whose operation involves the network communications, such as the Trend Log object's Log\_Buffer property. This Error Class shall not be conveyed in error PDUs.

**18.7.1 ABORT\_BUFFER\_OVERFLOW** - An input buffer capacity has been exceeded in this device or was reported by the remote device.

**18.7.2 ABORT\_INVALID\_APDU\_IN\_THIS\_STATE** - An APDU was received, by this device or the remote device, that was not expected in the present state of the Transaction State Machine.

**18.7.3 ABORT\_PREEMPTED\_BY\_HIGHER\_PRIORITY\_TASK** - The transaction was aborted to permit higher priority processing by this device or the remote device.

**18.7.4 ABORT\_SEGMENTATION\_NOT\_SUPPORTED** - An Abort PDU specifying an abort code of SEGMENTATION\_NOT\_SUPPORTED was sent or received by this device.

**18.7.5 ABORT\_PROPRIETARY** - An abort PDU with a proprietary reason was sent or received by this device.

**18.7.6 ABORT\_OTHER** - This device sent or received an abort PDU with a reason of OTHER.

**18.7.7 REJECT\_BUFFER\_OVERFLOW** - An input buffer capacity has been exceeded in this device or has been reported by the remote device.

**18.7.8 REJECT\_INCONSISTENT\_PARAMETERS** - The remote device sent a reject PDU with a reason of INCONSISTENT\_PARAMETERS.

**18.7.9 REJECT\_INVALID\_PARAMETER\_DATA\_TYPE** - The remote device sent a reject PDU with a reason of INVALID\_PARAMETER\_DATATYPE.

**18.7.10 REJECT\_INVALID\_TAG** - This device or the remote device encountered an invalid tag while parsing a message.

**18.7.11 REJECT\_MISSING\_REQUIRED\_PARAMETER** - The remote device sent a reject PDU with a reason of MISSING\_REQUIRED\_PARAMETER.

**18.7.12 REJECT\_PARAMETER\_OUT\_OF\_RANGE** - The remote device sent a reject PDU with a reason of PARAMETER\_OUT\_OF\_RANGE.

**18.7.13 REJECT\_TOO\_MANY\_ARGUMENTS** - The remote device sent a reject PDU with a reason of TOO\_MANY\_ARGUMENTS.

**18.7.14 REJECT\_UNDEFINED\_ENUMERATION** - The remote device sent a reject PDU with a reason of UNDEFINED\_ENUMERATION.

**18.7.15 REJECT\_UNRECOGNIZED\_SERVICE** - The remote device sent a reject PDU with a reason of UNRECOGNIZED\_SERVICE.

**18.7.16 REJECT\_PROPRIETARY** - This reject reason indicates that a proprietary reject reason was sent or received by this device.

**18.7.17 REJECT\_OTHER** - The remote device sent a reject PDU with a reason of OTHER.

**18.7.18 INVALID\_TAG** - This error indicates that an improper tag was found when parsing the response to a confirmed service request or an unconfirmed service request.

**18.7.19 NETWORK\_DOWN** - This error indicates that the local network connection was not established when the request was initiated.

**18.7.20 TIMEOUT** - This error indicates that a request timed out before a response was received from the remote device.

**18.7.21 UNKNOWN\_DEVICE** - This error indicates that a request was not initiated because the remote device could not be found.

**18.7.22 UNKNOWN\_ROUTE** - This error indicates that a request was not initiated because a route to the network where the remote device resides could not be found.

**18.7.23 OTHER** - This error indicates that a communication error occurred other than those previously enumerated for this Error Class.

## 18.8 Error Class - VT

This Error Class pertains to problems related to the execution of Virtual Terminal services.

**18.8.1 UNKNOWN\_VT\_CLASS** - This error indicates that the 'VT-Class' specified in a VT-Open request was not recognized by the target device.

**18.8.2 UNKNOWN\_VT\_SESSION** - This error indicates that the 'VT-Session ID' specified in a VT-Data or VT-Close request was not recognized by the target device.

**18.8.3 NO\_VT\_SESSIONS\_AVAILABLE** - This error indicates that the target device could not fulfill a VT-Open request because of resource limitations.

**18.8.4 VT\_SESSION\_ALREADY\_CLOSED** - This error indicates that an attempt has been made to close a VT-session that has been previously terminated.

**18.8.5 VT\_SESSION\_TERMINATION\_FAILURE** - This error indicates that one of the 'VT-Sessions' specified in a VT-Close request could not be released for some implementation-dependent reason.

**18.8.6 OTHER** - This error code is returned for a reason other than any of those previously enumerated for this Error Class

### 18.9 Reject Reason

Only confirmed request PDUs can be rejected. The possible reasons for rejecting the PDU are enumerated in this subclause.

**18.9.1 BUFFER\_OVERFLOW** - A buffer capacity has been exceeded.

**18.8.2 INCONSISTENT\_PARAMETERS** - Generated in response to a confirmed request APDU that omits a conditional service argument that should be present or contains a conditional service argument that should not be present. This condition could also elicit a Reject PDU with a Reject Reason of INVALID\_TAG.

**18.9.3 INVALID\_PARAMETER\_DATA\_TYPE** - Generated in response to a confirmed request APDU in which the encoding of one or more of the service parameters does not follow the correct type specification. This condition could also elicit a Reject PDU with a Reject Reason of INVALID\_TAG.

**18.9.4 INVALID\_TAG** - While parsing a message, an invalid tag was encountered. Since an invalid tag could confuse the parsing logic, any of the following Reject Reasons may also be generated in response to a confirmed request containing an invalid tag: INCONSISTENT\_PARAMETERS, INVALID\_PARAMETER\_DATA\_TYPE, MISSING\_REQUIRED\_PARAMETER, and TOO\_MANY\_ARGUMENTS.

**18.9.5 MISSING\_REQUIRED\_PARAMETER** - Generated in response to a confirmed request APDU that is missing at least one mandatory service argument. This condition could also elicit a Reject PDU with a Reject Reason of INVALID\_TAG.

**18.9.6 PARAMETER\_OUT\_OF\_RANGE** - Generated in response to a confirmed request APDU that conveys a parameter whose value is outside the range defined for this service.

**18.9.7 TOO\_MANY\_ARGUMENTS** - Generated in response to a confirmed request APDU in which the total number of service arguments is greater than specified for the service. This condition could also elicit a Reject PDU with a Reject Reason of INVALID\_TAG.

**18.9.8 UNDEFINED\_ENUMERATION** - Generated in response to a confirmed request APDU in which one or more of the service parameters is decoded as an enumeration that is not defined by the type specification of this parameter.

**18.9.9 UNRECOGNIZED\_SERVICE** - Generated in response to a confirmed request APDU in which the Service Choice field specifies an unknown or unsupported service.

**18.9.10 OTHER** - Generated in response to a confirmed request APDU that contains a syntax error for which an error code has not been explicitly defined.

### 18.10 Abort Reason

**18.10.1 BUFFER\_OVERFLOW** - A buffer capacity has been exceeded.

**18.10.2 INVALID\_APDU\_IN\_THIS\_STATE** - Generated in response to an APDU that is not expected in the present state of the Transaction State Machine.

**18.10.3 PREEMPTED\_BY\_HIGHER\_PRIORITY\_TASK** - The transaction shall be aborted to permit higher priority processing.

**18.10.4 SEGMENTATION\_NOT\_SUPPORTED** - Generated in response to an APDU that has its segmentation bit set to TRUE when the receiving device does not support segmentation. It is also generated when a BACnet-ComplexACK-PDU is large enough to require segmentation but it cannot be transmitted because either the transmitting device or the receiving device does not support segmentation.

**18.10.5 OTHER** - This abort reason is returned for a reason other than any of those previously enumerated.

## 19 BACnet PROCEDURES

This clause defines several procedures that are commonly required in building automation and control systems. Each procedure makes use of BACnet capabilities defined elsewhere in this standard.

### 19.1 Backup and Restore

This clause describes the procedures to be used to backup and restore the configuration of BACnet devices.

#### 19.1.1 The Backup and Restore Procedures

In BACnet building control systems, many devices will have configuration data that is set up by a vendor's proprietary configuration tool. This setup may consist of network visible BACnet objects and/or non-network visible settings. This section outlines the standard method that BACnet devices will employ if an interoperable device backup and restore feature is to be provided.

The backup and restore procedures use File objects to hold and transfer the configuration data. The content and format of the configuration files is a local matter. The choice of whether to use stream-based files or record-based files is a local matter. The services required to support the backup and restore procedures are ReinitializeDevice, ReadProperty, WriteProperty, AtomicWriteFile, AtomicReadFile, and optionally CreateObject.

#### 19.1.2 Backup

For the purposes of this discussion, the device performing the backup procedure will be referred to as device A, and the device being backed up will be device B.

##### 19.1.2.1 Initiation of the Backup Procedure

Device A sends a ReinitializeDevice(STARTBACKUP, <password>) message to device B. Device A will await a response from device B before continuing with the backup procedure.

##### 19.1.2.2 Preparation for Backup

Upon receipt of the ReinitializeDevice(STARTBACKUP, <password>) message, if device B is able to perform a backup procedure, device B will prepare for the backup procedure and respond with a 'Result(+) to the ReinitializeDevice service request.

If device B is unable to perform a backup procedure or is already performing a backup procedure, then it will respond to the ReinitializeDevice service request with a 'Result(-)' response. Assuming device B supports the backup procedure and the request was properly formulated, the valid Error Class:Error Codes that can be returned are :

DEVICE:CONFIGURATION\_IN\_PROGRESS - if device B is already processing a backup or a restore request.

SERVICES:SERVICE\_REQUEST\_DENIED – if the password that was provided was incorrect or if a password is required and one was not provided.

After device B responds to the ReinitializeDevice request with a 'Result(+)', the configuration File objects must exist in the device. It is a local matter as to whether device B will respond to other requests while it is in backup mode. The exception to this is that device B must accept and fulfill read requests by device A that consist of accesses to device B's Device object and/or its configuration File objects. Any services that are rejected due to an in-progress backup procedure will be rejected with an error class of DEVICE and error code of DEVICE\_BUSY.

It is a local matter as to whether device B will continue to perform control actions while it is in backup mode. If device B changes its operational behavior during a backup procedure, then the System\_Status property of the Device object shall be set to BACKUP\_IN\_PROGRESS.

##### 19.1.2.3 Loading the Backup Parameters

Upon receipt of a 'Result(+) response from device B to the ReinitializeDevice(STARTBACKUP, <password>) message, device A will read the Configuration\_Files property of the Device object. This property will be used to determine the files to read and in what order the files will be read. The value of the Configuration\_Files property is not guaranteed to contain a complete or correct set of configuration File object references before the backup request is accepted by device B.

#### 19.1.2.4 Backing Up the Configuration Files

Once device A has determined the files that make up the device configuration image, device A will determine the type of each file and will use the AtomicReadFile service to read each configuration file from device B. Each file will be read as a stream of bytes, or as a sequence of records depending on the File\_Access\_Method property of the File object. Stream access files will be read in byte order and record access files will be read in record order. The files will be read in the same order as they appear in the Configuration\_Files property.

It is a local matter as to what device A does with the configuration files, although the intent of the service is to allow an operator to archive the setup of device B such that device B may be restored at a later date should its configuration become corrupt.

It is left up to the implementer of device A as to whether the files read from device B will be made available for examination by tools developed by the implementer of device B. It is recommended that record access files be stored on device A as a sequence of BACnet OCTET STRINGS.

#### 19.1.2.5 Ending the Backup Procedure

When all of the configuration files have been read, device A sends a ReinitializeDevice(ENDBACKUP, <password>) message to device B. Device B will perform whatever actions are required to complete the backup in order to place the device back into the state it was in before the backup procedure or into any other state as defined by the vendor. Device B must not remain in the BACKUP\_IN\_PROGRESS mode after the backup procedure has ended.

If device A needs to abort the backup for any reason (i.e., the user aborts the procedure, device B fails to allow reads from a configuration file, or device A detects any other condition that inhibits the backup procedure), device A shall attempt to send ReinitializeDevice(ENDBACKUP, <password>) to device B. Upon receipt of this message, device B shall end the backup procedure. If the backup procedure is aborted, device A should not assume that the configuration files are still valid and continue to read them.

The receipt of the ReinitializeDevice(ENDBACKUP, <password>) message shall cause device B to exit backup mode.

If device B does not receive any messages related to the backup procedure from device A for the number of seconds specified in the Backup\_Failure\_Timeout property of its Device object, device B should assume that the backup procedure has been aborted, and device B should exit backup mode. A message related to the backup procedure is defined to be any ReadProperty, WriteProperty, CreateObject, or AtomicReadFile request that directly accesses a configuration File object.

### 19.1.3 Restore

For the purposes of this discussion, the device performing the restore procedure will be referred to as device A, and the device being restored will be device B.

#### 19.1.3.1 Initiation of the Restore Procedure

Device A sends a ReinitializeDevice(STARTRESTORE, <password>) message to device B. Device A will await a response from device B before continuing the restore procedure.

#### 19.1.3.2 Preparation for Restore

Upon receipt of the restore request, if device B is able to perform a restore procedure, device B will prepare for the restore procedure and will respond with a 'Result(+) to the ReinitializeDevice service request.

If device B is unable to perform a restore procedure, then it will respond to the ReinitializeDevice service request with a 'Result(-)' response. Assuming device B supports the restore procedure and the request was properly formulated, the valid Error Class:Error Codes that can be returned are:

DEVICE:CONFIGURATION\_IN\_PROGRESS – if device B is already processing a backup or a restore request.

SERVICES:SERVICE\_REQUEST\_DENIED – if the password that was provided was incorrect or if a password is required and one was not provided.

After device B responds to the ReinitializeDevice request with a 'Result(+)', the configuration File objects must exist in the device, or device B must be able to accept CreateObject requests from device A to create the configuration File objects. It is a local matter as to whether device B will respond to other requests while it is in restore mode. The exception to this is that device B must accept and fulfill read and write requests by device A that consist of accesses to device B's Device object and/or its configuration File objects. Any services that are rejected due to an in-progress backup procedure will be rejected with an error class of DEVICE and error code of CONFIGURATION\_IN\_PROGRESS.

Device B must be prepared to answer device A's requests for information from device B's Device object. If device B cannot service requests from devices other than device A, then device B shall reject those services with an error class of DEVICE and an error code of CONFIGURATION\_IN\_PROGRESS.

It is a local matter as to whether device B will continue to perform control actions while it is in restore mode. If device B changes its operational behavior during a restore procedure, then the System\_Status property of the Device object shall be set to DOWNLOAD\_IN\_PROGRESS.

#### **19.1.3.3 Restoring the Configuration Files**

Device A will use the AtomicWriteFile service to write each configuration file to device B. If any of the files do not exist in device B, then device A will attempt to create the files using the CreateObject service. Any files that already exist in the device, and differ in size from the image being written to them, will be truncated by writing 0 to the File\_Size property of the File object before the contents are written to the file.

The configuration files will be written as a stream of bytes, or as a sequence of records, depending on the value of the File\_Access\_Method property of the File object. Note that there is no standard file format for record-based files, whereas any file can be written as a stream of bytes.

Each configuration file written to the device should be a valid configuration file obtained from the vendor, from a vendor's configuration tool, or from a previous backup procedure. The files will be written to the device in the same order as they were retrieved during the backup procedure, or as specified by the vendor if the files were obtained from another source.

Device B is allowed to reject any write operation to the configuration file if it has determined that the content of the write is invalid (internal CRC error, Invalid type code, etc). If this is the case, device B will respond with an error class of SERVICES and an error code of INVALID\_CONFIGURATION\_DATA. It is a local matter as to whether device A will retry the request and how many times device A will retry, but device A should abort the restore procedure if device B continues to return an error.

#### **19.1.3.4 Ending the Restore Procedure**

When device A has completely written all of the configuration files to device B, device A will send ReinitializeDevice(ENDRESTORE, <password>). Device B will perform whatever actions are required to complete the restore procedure, which should include a validation of the restored configuration. If the validation fails, it is a local matter as to what device B will do beyond changing its System\_Status property to something other than DOWNLOAD\_IN\_PROGRESS.

If device A needs to abort the restore for any reason (i.e., the user aborts the procedure, device B fails to allow writes to a configuration file, or device A detects any other condition that inhibits the restore procedure), device A shall attempt to send ReinitializeDevice(ABORTRESTORE, <password>) to device B. Upon receipt of this message, device B shall abort the restore procedure.

If device B does not receive any messages related to the restore procedure from device A for the number of seconds specified in the Backup\_Failure\_Timeout property of its Device object, device B should assume that the restore procedure has been aborted, and device B should exit restore mode. A message related to the restore procedure is defined to be any ReadProperty, WriteProperty, CreateObject, or AtomicWriteFile request that directly accesses a configuration File object.

Once the restore procedure has ended, whether it was successful or not, device B must change its System\_Status property to something other than DOWNLOAD\_IN\_PROGRESS.

If the restore is successful, no other actions by device A shall be required, and device B will update the Last\_Restore\_Time property in its Device object.

If the restore failed or was aborted and device B is unable to recover its old configuration, or cannot establish a default configuration, device B shall set its System\_State to DOWNLOAD\_REQUIRED. Every attempt shall be made to leave device B in a state that will accept additional restore procedures.

## 19.2 Command Prioritization

In building control systems, an object may be manipulated by a number of entities. For example, the present value of a Binary Output object may be set by several applications, such as demand metering, optimum start/stop, etc. Each such application program has a well-defined function it needs to perform. When the actions of two or more application programs conflict with regard to the value of a property, there is a need to arbitrate between them. The objective of the arbitration process is to ensure the desired behavior of an object that is manipulated by several program (or non-program) entities. For example, a start/stop program may specify that a particular Binary Output should be ON, while demand metering may specify that the same Binary Output should be OFF. In this case, the OFF should take precedence. An operator may be able to override the demand metering program and force the Binary Output ON, in which case the ON should take precedence.

In BACnet, this arbitration is provided by a prioritization scheme that assigns varying levels of priorities to commanding entities on a system-wide basis. Each object that contains a commandable property is responsible for acting upon prioritized commands in the order of their priorities. While there is a trade-off between the complexity and the robustness of any such mechanism, the scheme described here is intended to be effective but applicable to even simple BACnet devices.

The following property types are involved in the prioritization mechanism:

- (a) Commandable Property: Each object that supports command prioritization has one or more distinguished properties that are referred to as "Commandable Properties." The value of these properties is controlled by the command prioritization mechanism.
- (b) Priority\_Array: This property is a read only array that contains prioritized commands or NULLs in the order of decreasing priority. The highest priority (lowest array index) with a non-NUL value is the active command.
- (c) Relinquish\_Default: This property shall be of the same datatype (and engineering units) as the Commandable Property. When all entries in the Priority\_Array are NULL, the value of the Commandable Property shall have the value specified by the Relinquish\_Default property.

Although the Command object is used to write a set of values to a group of object properties, command prioritization is not involved unless the properties are commandable.

### 19.2.1 Prioritization Mechanism

For BACnet objects, commands are prioritized based upon a fixed number of priorities that are assigned to command-issuing entities. A prioritized command (one that is directed at a commandable property of an object) is performed via a WriteProperty service request or a WritePropertyMultiple service request. The request primitive includes a conditional 'Priority' parameter that ranges from 1 to 16. Each commandable property of an object has an associated priority table that is represented by the Priority\_Array property. The Priority\_Array consists of an array of commanded values in order of decreasing priority. The first value in the array corresponds to priority 1 (highest), the second value corresponds to priority 2, and so on, to the sixteenth value that corresponds to priority 16 (lowest).

An entry in the Priority\_Array may have a commanded value or a NULL. A NULL value indicates that there is no existing command at that priority. An object continuously monitors all entries within the priority table in order to locate the entry with the highest priority non-NUL value and sets the commandable property to this value.

A commanding entity (application program, operator, etc.) may issue a command to write to the commandable property of an object, or it may relinquish a command issued earlier. Relinquishing of a command is performed by a write operation similar to the command itself, except that the commandable property value is NULL. Relinquishing a command places a NULL value in the Priority\_Array corresponding to the appropriate priority. This prioritization approach shall be applied to local actions that change the value of commandable properties as well as to write operations via BACnet services.

If an attempt is made to write to a commandable property without explicitly specifying the priority, a default priority of 16 (the lowest priority) shall be assumed. If an attempt is made to write to a property that is not commandable with a specified priority, the priority shall be ignored. The Priority\_Array property is read only. Its values are changed indirectly by writing to the commandable property itself.

### 19.2.1.1 Commandable Properties

The prioritization scheme is applied to certain properties of objects. The standard commandable properties and objects are as follows:

<u>OBJECT</u>	<u>COMMANDABLE PROPERTY</u>
Analog Output	Present_Value
Binary Output	Present_Value
Multi-state Output	Present_Value
Multi-state Value	Present_Value
Analog Value	Present_Value
Binary Value	Present_Value
Access Door	Present_Value

The designated properties of the Analog Output, Binary Output, Multi-state Output and Access Door objects are commandable (prioritized) by definition. The designated properties of the Analog Value, Binary Value and Multi-state Value objects may optionally be commandable. Individual vendors, however, may decide to apply prioritization to any of the vendor-specified properties. These additional commandable properties shall have associated Priority\_Array and Relinquish\_Default properties with appropriate names. See 23.3.

### 19.2.1.2 Prioritized Commands

Prioritized commands, i.e., commands directed at commandable properties, are either WriteProperty service requests or WritePropertyMultiple service requests. In either case, the request primitive shall contain (among others) the following parameters:

Property Identifier:	Commandable_Property
Property Value:	Desired Value
Priority:	Priority

The end result of a successful write operation is to place a desired value in the priority table at the appropriate priority. If another value was already present at that priority, it shall be overwritten with the new value, without any regard to the identity of the previous commanding entity.

### 19.2.1.3 Relinquish Commands

When a commanding entity no longer desires to control a commandable property, it issues a relinquish command. A relinquish command is also either a WriteProperty service request or a WritePropertyMultiple service request. In either case, the request primitive shall contain (among others) the following parameters:

Property Identifier:	Commandable_Property
Property Value:	NULL
Priority:	Priority

The placement of NULL in the value parameter indicates the absence of any command at that priority. When all elements of the priority table array contain NULL, the commandable property shall assume the value defined in the Relinquish\_Default property of the object.

It is possible for an application entity to relinquish at a priority other than its own, resulting in unpredictable behavior. If more than one application is assigned the same priority, it is possible for one application entity to write-over (or relinquish) the commands from the other application entity, resulting in unpredictable operation. To minimize this possibility, it is very important not to allow more than one commanding entity to assume the same priority level within the system.

#### 19.2.1.4 Command Source ID

There is no provision for maintaining command source identification as part of the priority table. Any implementation of command source identification is vendor-specific in nature.

#### 19.2.1.5 Command Overwrite

Whenever a command is issued to a commandable property, the value is placed in the Priority\_Array at the appropriate priority position, without any regard to the current value residing there. The new command overwrites the existing command. No notification of such overwrite is made to the original commanding entity.

#### 19.2.2 Application Priority Assignments

Commanding entities are assigned one of the 16 possible priority levels. The assignment of most priorities is site dependent and represents the objectives of the site management. Table 19-1 contains the standard priorities. Other applications that need prioritization include Temperature Override, Demand Limiting, Optimum Start/Stop, Duty Cycling, and Scheduling. The relative priorities of these applications may vary from site to site and are not standardized. For interoperability at any particular site, the only requirement is that all devices implement the same priority scheme. The positions marked Available are open for assignment to DDC programs, EMS programs, etc. The interpretation of what conditions constitute Manual-Life Safety or Automatic-Life Safety decisions is a local matter.

**Table 19-1.** Standard Command Priorities

Priority Level	Application	Priority Level	Application
1	Manual-Life Safety	9	Available
2	Automatic-Life Safety	10	Available
3	Available	11	Available
4	Available	12	Available
5	Critical Equipment Control	13	Available
6	Minimum On/Off	14	Available
7	Available	15	Available
8	Manual Operator	16	Available

#### 19.2.3 Minimum\_On\_Time and Minimum\_Off\_Time

If the commandable property is the Present\_Value property of a Binary Output object or a Binary Value object and that object possesses the optional Minimum\_On\_Time and Minimum\_Off\_Time properties, then minimum on and minimum off times shall behave according to the algorithm described in this subclause.

Command priority 6 is reserved for use by this algorithm and may not be used for other purposes in any object.

- (a) If the Present\_Value is ACTIVE and the time since the last change of state of the Present\_Value is less than the Minimum\_On\_Time, then element 6 of the Priority\_Array shall contain a value of ACTIVE.
- (b) If the Present\_Value is INACTIVE and the time since the last change of state of the Present\_Value is less than the Minimum\_Off\_Time, then element 6 of the Priority\_Array shall contain a value of INACTIVE.
- (c) If neither (a) nor (b) is true, then element 6 of the Priority\_Array shall contain a value of NULL.

These rules imply actions to be taken when the Present\_Value is written and actions to be taken based on elapsed time. The means by which these actions are implemented is a local matter, so long as the behavior described in this subclause is achieved.

When a write to a commandable property occurs at any priority, the specified value or relinquish (NULL) is always written to the appropriate slot in the priority table, regardless of any minimum on or off times.

The Priority\_Array is then examined by the local priority maintenance entity to determine the highest priority that contains a non-NULL value. If this value differs from the Present\_Value immediately before the write, then a change of state has occurred. If such a change of state occurs, the new value is also written to priority 6 in the Priority\_Array and the time of the change is noted. The means by which the timing is performed is a local matter.

When the minimum on or off time signified by a non-NULL value in priority 6 has elapsed, the local minimum time maintenance entity shall write a NULL to priority 6 and re-examine the Priority\_Array to determine the new Present\_Value. If this value indicates a change of state, then the appropriate actions shall be taken as described above.

The effect of a non-NULL value in priority 6 is that writes at any lower priority (larger priority number) cannot cause a change of state. Thus, minimum on or off time protection may be achieved relative to these priorities.

Writes to any priority higher than 6 (smaller priority number) may cause changes of state regardless of Minimum\_On\_Time or Minimum\_Off\_Time. Thus, these priorities should be used only for critical or emergency use. Note, however, that changes of state caused by a write to these high priorities will also cause writes to priority 6 as described above. Thus, if a NULL is subsequently written to the high priority while minimum time is in effect, that time shall be observed before any change of state is made as a result of a value at a lower priority.

For additional discussion of minimum on and off time processing see Annex I.

#### **19.2.4 Prioritization for Command Objects**

A Command object is capable of issuing commands just as any other command-issuing entity. A Command object may be related to an application with any priority. The Action property of the Command object contains all of the parameters necessary for writing to commandable properties. See Clause 12.10.8.

#### **19.2.5 Prioritization for Loop Objects**

Loop objects may need to interact with objects that have a commandable property, even though, in general, they will not use BACnet services to do so. Each Loop object has a Priority\_For\_Writing property that designates the appropriate priority of this control loop with respect to the commandable property. See Clause 12.17.28.

#### **19.2.6 Prioritization for Schedule Objects**

Schedule objects may need to interact with objects that have a commandable property, even though, in general, they will not use BACnet services to do so. Each Schedule object has a Priority\_For\_Writing property that designates the appropriate priority of this schedule with respect to the commandable property. See Clause 12.24.11.

### **19.3 Device Restart Procedure**

When a BACnet device restarts, there are a number of different configuration items that can be lost. For example, a device need not remember which devices have subscribed to receive change-of-value notifications or to which values they have subscribed. For this reason, other devices may be interested in determining when a device has restarted. This section outlines how a device may interoperably indicate that it has restarted.

When a device is powered on, when it restarts due to a ReinitializeDevice service (COLDSTART or WARMSTART), or when it restarts for some other reason, the device shall transmit an UnconfirmedCOVNotification request. The 'Subscriber Process Identifier' parameter shall be 0, the 'Monitored Object Identifier' parameter shall reference the Device object, the 'Time Remaining' parameter shall be 0, and the 'List of Values' parameter shall contain three values, the System\_Status, the Time\_Of\_Device\_Restart, and the Last\_Restart\_Reason properties of the Device object. The device shall transmit this message after the complete power-up or restart sequence has been completed so that the system-status value is accurate.

The device shall send the restart notification to each recipient in the Restart\_Notification\_Recipients property of the Device object.

MS/TP slave devices are not able to support this procedure, although they may support the Time\_Of\_Device\_Restart and Last\_Restart\_Reason properties.

## 20 ENCODING BACnet PROTOCOL DATA UNITS

Application Layer Protocol Data Units (APDUs) are used in BACnet to convey the information contained in the application service primitives and associated parameters.

ISO Standard 8824, Specification of Abstract Syntax Notation One (ASN.1), has been selected as the method for representing the data content of BACnet services. Clause 21 contains an ASN.1 definition for each service defined by this standard. ASN.1 provides an abstract syntax. However, the exact bit-by-bit layout of an APDU may have several forms, depending on the encoding rules that are selected.

Within the Open Systems Interconnection model, the encoding rules to be used are chosen by the presentation layer through a process of negotiation. This negotiation is used by cooperating systems to determine not only the basic encoding rules, of which ISO 8825, Specification of Basic Encoding Rules for ASN.1, is an example, but also whether or not the APDU is to be subjected to other manipulations such as data compression, encryption, or character code conversion.

Because BACnet's collapsed OSI architecture does not incorporate any presentation layer functionality, APDU encoding must be defined and agreed to by communicating devices in advance. BACnet's encoding rules have been designed to take into account the requirements of building automation and control systems for simplicity and compactness. As a result, they differ, in some respects, from ISO 8825 while still permitting the encoding of BACnet APDUs that have been represented using ASN.1. This means that BACnet services and procedures could be used in their entirety in a future OSI-compliant network by adding the presentation layer capability to negotiate either the encoding rules contained in this standard or any other encoding rules that might later be available.

The encoding of ASN.1 specified in ISO 8825 is intended to apply uniformly to all data elements in a PDU. Each data element is represented by three components: (1) identifier octets, (2) length octets, and (3) contents octets. The explicit identification of each data element allows parsers to be developed that can decode any PDU without prior knowledge of its format or semantic content. The alternative is to implicitly identify each data element, generally by mutual agreement as to its data format and location within the PDU. The former approach tends to result in greater generality at the expense of greater overhead; the latter approach tends to reduce overhead while limiting future extensibility.

The approach taken in BACnet is a compromise. The fixed portion of each APDU containing protocol control information is encoded implicitly and is described in 20.1. The variable portion of each APDU containing service-specific information is encoded explicitly and is described in 20.2. The resulting scheme significantly reduces overhead while preserving the possibility of easily adding new services in the future.

### 20.1 Encoding the Fixed Part of BACnet APDUs

BACnet APDUs consist of protocol control information and, possibly, user data.

"Protocol control information" (PCI) comprises data required for the operation of the application layer protocol, including the type of APDU, information to match service requests and service responses, and information to carry out the reassembly of segmented messages. This information is contained in the "header," or fixed part, of the APDU.

"User data" comprises information specific to individual service requests or responses. This portion of the APDU will be referred to as the 'variable part' of the APDU.

Because every APDU contains PCI fields, BACnet encodes the PCI without the use of tags or length information even though the ASN.1 might indicate the presence of tags in the syntactical descriptions of the APDUs. Tags are used to encode the variable-content user data as specified in 20.2. This selective use of tags results in a considerable reduction in overhead.

The remainder of this subclause lays out the format of each APDU type.

#### 20.1.1 Encoding the BACnetPDU CHOICE Tag

All BACnet messages are defined by an ASN.1 production called the BACnetPDU. See Clause 21. BACnetPDU is a choice of one of eight BACnet APDU types. For all BACnet APDUs, this choice shall be encoded as a four-bit binary number in the bits 4 through 7 of the first octet of the APDU header, with bit 7 being the most significant bit. These bits indicate the value

of the tag (0 - 7), which represents the APDU type choice. This encoding is illustrated in the examples below for each APDU type.

### 20.1.2 BACnet-Confirmed-Request-PDU

The BACnet-Confirmed-Request-PDU is used to convey the information contained in confirmed service request primitives.

```
BACnet-Confirmed-Request-PDU ::= SEQUENCE {
    pdu-type                      [0] Unsigned (0..15), -- 0 for this PDU type
    segmented-message               [1] BOOLEAN,
    more-follows                   [2] BOOLEAN,
    segmented-response-accepted   [3] BOOLEAN,
    reserved                       [4] Unsigned (0..3), -- must be set to zero
    max-segments-accepted          [5] Unsigned (0..7), -- as per 20.1.2.4
    max-APDU-length-accepted      [6] Unsigned (0..15), -- as per 20.1.2.5
    invokeID                        [7] Unsigned (0..255),
    sequence-number                 [8] Unsigned (0..255) OPTIONAL, -- only if segmented msg
    proposed-window-size            [9] Unsigned (1..127) OPTIONAL, -- only if segmented msg
    service-choice                  [10] BACnetConfirmedServiceChoice,
    service-request                 [11] BACnet-Confirmed-Service-Request
-- Context specific tags 0..11 are NOT used in header encoding
}
```

The parameters of the BACnet-Confirmed-Request-PDU have the following meanings.

#### 20.1.2.1 segmented-message

This parameter indicates whether or not the confirmed service request is entirely, or only partially, contained in the present PDU. If the request is present in its entirety, the value of the 'segmented-message' parameter shall be FALSE. If the present PDU contains only a segment of the request, this parameter shall be TRUE.

#### 20.1.2.2 more-follows

This parameter is only meaningful if the 'segmented-message' parameter is TRUE. If 'segmented-message' is TRUE, then the 'more-follows' parameter shall be TRUE for all segments comprising the confirmed service request except for the last and shall be FALSE for the final segment. If 'segmented-message' is FALSE, then 'more-follows' shall be set FALSE by the encoder and shall be ignored by the decoder.

#### 20.1.2.3 segmented-response-accepted

This parameter shall be TRUE if the device issuing the confirmed request will accept a segmented complex acknowledgment as a response. It shall be FALSE otherwise. This parameter is included in the confirmed request so that the responding device may determine how to convey its response.

#### 20.1.2.4 max-segments-accepted

This optional parameter specifies the maximum number of segments that the device will accept. This parameter is included in the confirmed request so that the responding device may determine how to convey its response. The parameter shall be encoded as follows:

B'000'	Unspecified number of segments accepted.
B'001'	2 segments accepted.
B'010'	4 segments accepted.
B'011'	8 segments accepted.
B'100'	16 segments accepted.
B'101'	32 segments accepted.
B'110'	64 segments accepted.
B'111'	Greater than 64 segments accepted.

### 20.1.2.5 max-APDU-length-accepted

This parameter specifies the maximum size of a single APDU that the issuing device will accept. This parameter is included in the confirmed request so that the responding device may determine how to convey its response. The parameter shall be encoded as follows:

B'0000'	Up to MinimumMessageSize (50 octets)
B'0001'	Up to 128 octets
B'0010'	Up to 206 octets (fits in a LonTalk frame)
B'0011'	Up to 480 octets (fits in an ARCNET frame)
B'0100'	Up to 1024 octets
B'0101'	Up to 1476 octets (fits in an ISO 8802-3 frame)
B'0110'	reserved by ASHRAE
B'0111'	reserved by ASHRAE
B'1000'	reserved by ASHRAE
B'1001'	reserved by ASHRAE
B'1010'	reserved by ASHRAE
B'1011'	reserved by ASHRAE
B'1100'	reserved by ASHRAE
B'1101'	reserved by ASHRAE
B'1110'	reserved by ASHRAE
B'1111'	reserved by ASHRAE

### 20.1.2.6 invokeID

This parameter shall be an integer in the range 0 - 255 assigned by the service requester. It shall be used to associate the response to a confirmed service request with the original request. In the absence of any error, the 'invokeID' shall be returned by the service provider in a BACnet-SimpleACK-PDU or a BACnet-ComplexACK-PDU. In the event of an error condition, the 'invokeID' shall be returned by the service provider in a BACnet-Error-PDU, BACnet-Reject-PDU, or BACnet-Abort-PDU as appropriate.

The 'invokeID' shall be generated by the device issuing the service request. It shall be unique for all outstanding confirmed request APDUs generated by the device. The same 'invokeID' shall be used for all segments of a segmented service request. Once an 'invokeID' has been assigned to an APDU, it shall be maintained within the device until either a response APDU is received with the same 'invokeID' or a no response timer expires (see 5.3). In either case, the 'invokeID' value shall then be released for reassignment. The algorithm used to pick a value out of the set of unused values is a local matter. The storage mechanism for maintaining the used 'invokeID' values within the requesting and responding devices is also a local matter. The requesting device may use a single 'invokeID' space for all its confirmed APDUs or multiple 'invokeID' spaces (one per destination device address) as desired. Since the 'invokeID' values are only source-device-unique, the responding device shall maintain the 'invokeID' as well as the requesting device address until a response has been sent. The responding device may discard the 'invokeID' information after a response has been sent.

### 20.1.2.7 sequence-number

This optional parameter is only present if the 'segmented-message' parameter is TRUE. In this case, the 'sequence-number' shall be a sequentially incremented unsigned integer, modulo 256, which identifies each segment of a segmented request. The value of the received 'sequence-number' is used by the responder to acknowledge the receipt of one or more segments of a segmented request. The 'sequence-number' of the first segment of a segmented request shall be zero.

### 20.1.2.8 proposed-window-size

This optional parameter is only present if the 'segmented-message' parameter is TRUE. In this case, the 'proposed-window-size' parameter shall specify as an unsigned binary integer the maximum number of message segments containing 'invokeID' the sender is able or willing to send before waiting for a segment acknowledgment PDU (see 5.2 and 5.3). The value of the 'proposed-window-size' shall be in the range 1 - 127.

### 20.1.2.9 service-choice


This parameter shall contain the value of the BACnetConfirmedServiceChoice. See Clause 21.

### 20.1.2.10 service-request

This parameter shall contain the parameters of the specific service that is being requested, encoded according to the rules of 20.2. These parameters are defined in the individual service descriptions in this standard and are represented in Clause 21 in accordance with the rules of ASN.1.

### 20.1.2.11 Format of the BACnet-Confirmed-Request-PDU

The format of the BACnet-Confirmed-Request-PDU is:

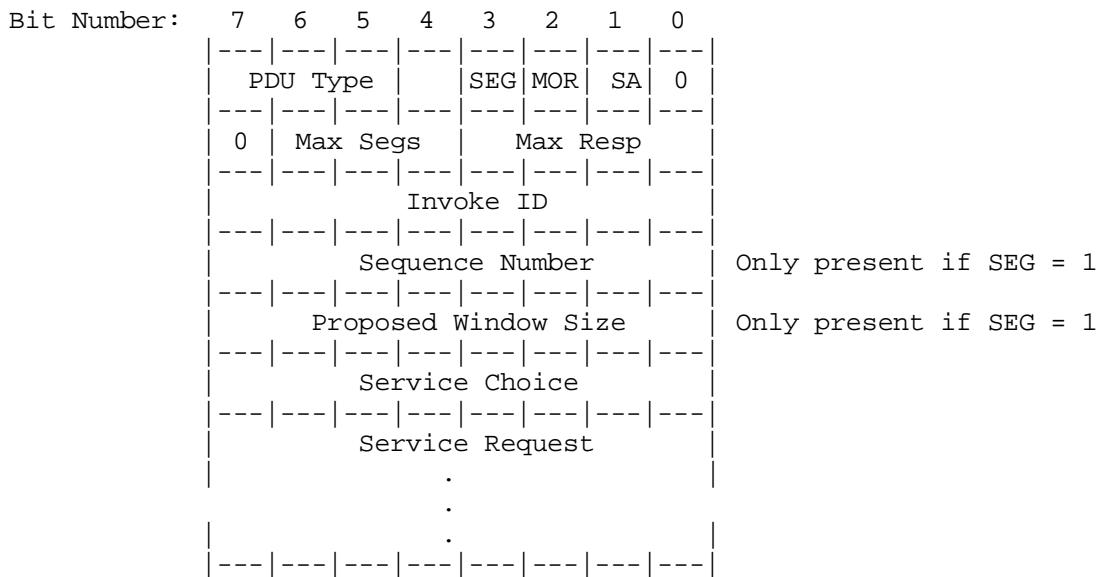

The PDU fields have the following values:

PDU Type =	0 (BACnet-Confirmed-Service-Request-PDU)
SEG =	0 (Unsegmented Request) 1 (Segmented Request)
MOR =	0 (No More Segments Follow) 1 (More Segments Follow)
SA =	0 (Segmented Response not accepted) 1 (Segmented Response accepted)
Max Segs =	(0..7) (Number of response segments accepted per 20.1.2.4)
Max Resp =	(0..15) (Size of Maximum APDU accepted per 20.1.2.5)
Invoke ID =	(0..255)
Sequence Number =	(0..255) Only present if SEG = 1
Proposed Window Size =	(1..127) Only present if SEG = 1
Service Choice =	BACnetConfirmedServiceChoice
Service Request =	Variable Encoding per 20.2.

Bits shown in the diagram as '0' shall be set to zero. These bits are currently unused and are reserved by ASHRAE.

### 20.1.3 BACnet-Unconfirmed-Request-PDU

The BACnet-Unconfirmed-Request-PDU is used to convey the information contained in unconfirmed service request primitives.

```
BACnet-Unconfirmed-Request-PDU ::= SEQUENCE {
  pdu-type      [0] Unsigned (0..15), -- 1 for this PDU type
  reserved      [1] Unsigned (0..15), -- must be set to zero
  service-choice [2] BACnetUnconfirmedServiceChoice,
  service-request [3] BACnet-Unconfirmed-Service-Request
```

```
-- Context specific tags 0..3 are NOT used in header encoding
    }
```

The parameters of the BACnet-Unconfirmed-Request-PDU have the following meanings.

#### 20.1.3.1 service-choice


This parameter shall contain the value of the BACnetUnconfirmedServiceChoice. See Clause 21.

#### 20.1.3.2 service-request

This parameter shall contain the parameters of the specific service that is being requested, encoded according to the rules of 20.2. These parameters are defined in the individual service descriptions in this standard and are represented in Clause 21 in accordance with the rules of ASN.1.

#### 20.1.3.3 Format of the BACnet-Unconfirmed-Request-PDU

The format of the BACnet-Unconfirmed-Request-PDU is:

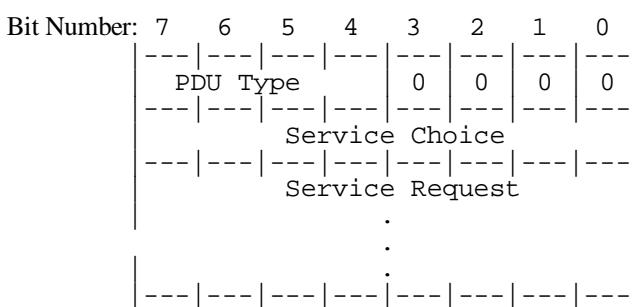

The PDU fields have the following values:

PDU Type = 1 (BACnet-Unconfirmed-Service-Request-PDU)

Service Choice = BACnetUnconfirmedServiceChoice

Service Request = Variable Encoding per 20.2.

Bits shown in the diagram as '0' shall be set to zero. These bits are currently unused and are reserved by ASHRAE.

#### 20.1.4 BACnet-SimpleACK-PDU

The BACnet-SimpleACK-PDU is used to convey the information contained in a service response primitive ('Result(+}') that contains no other information except that the service request was successfully carried out.

```
BACnet-SimpleACK-PDU ::= SEQUENCE {
    pdu-type      [0] Unsigned (0..15), -- 2 for this PDU type
    reserved      [1] Unsigned (0..15), -- must be set to zero
    original invokeID [2] Unsigned (0..255),
    service-ACK-choice [3] BACnetConfirmedServiceChoice
-- Context specific tags 0..3 are NOT used in header encoding
}
```

The parameters of the BACnet-SimpleACK-PDU have the following meanings.

##### 20.1.4.1 original-invokeID


This parameter shall be the 'invokeID' contained in the confirmed service request being acknowledged.

##### 20.1.4.2 service-ACK-choice

This parameter shall contain the value of the BACnetConfirmedServiceChoice corresponding to the service contained in the previous BACnet-Confirmed-Service-Request that has resulted in this acknowledgment. See Clause 21.

### 20.1.4.3 Format of the BACnet-SimpleACK-PDU

The format of the BACnet-SimpleACK-PDU is:

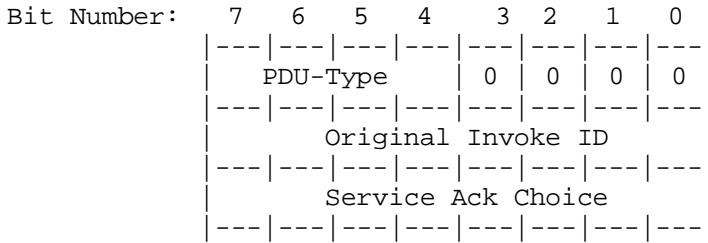

Note that this APDU is always three octets long.

The PDU fields have the following values:

PDU Type = 2 (BACnet-SimpleACK-PDU)  
 Original Invoke ID = (0..255)  
 Service ACK Choice = BACnetConfirmedServiceChoice

Bits shown in the diagram as '0' shall be set to zero. These bits are currently unused and are reserved by ASHRAE.

### 20.1.5 BACnet-ComplexACK-PDU

The BACnet-ComplexACK-PDU is used to convey the information contained in a service response primitive ('Result(+}') that contains information in addition to the fact that the service request was successfully carried out.

```
BACnet-ComplexACK-PDU ::= SEQUENCE {
    pdu-type          [0] Unsigned (0..15), -- 3 for this PDU type
    segmented-message [1] BOOLEAN,
    more-follows      [2] BOOLEAN,
    reserved          [3] Unsigned (0..3), -- must be set to zero
    original-invokeID [4] Unsigned (0..255),
    sequence-number   [5] Unsigned (0..255) OPTIONAL, --only if segment
    proposed-window-size [6] Unsigned (1..127) OPTIONAL, -- only if segment
    service-ACK-choice [7] BACnetConfirmedServiceChoice,
    service-ACK       [8] BACnet-Confirmed-Service-ACK
-- Context specific tags 0..8 are NOT used in header encoding
}
```

The parameters of the BACnet-ComplexACK-PDU have the following meanings.

#### 20.1.5.1 segmented-message

This parameter indicates whether or not the confirmed service response is entirely, or only partially, contained in the present PDU. If the response is present in its entirety, the 'segmented-message' parameter shall be FALSE. If the present PDU contains only a segment of the response, this parameter shall be TRUE.

#### 20.1.5.2 more-follows

This parameter is only meaningful if the 'segmented-message' parameter is TRUE. If 'segmented-message' is TRUE, then the 'more-follows' parameter shall be TRUE for all segments comprising the confirmed service response except for the last and shall be FALSE for the final segment. If 'segmented-message' is FALSE, then 'more-follows' shall be set FALSE by the encoder and shall be ignored by the decoder.

#### 20.1.5.3 original-invokeID

This parameter shall be the 'invokeID' contained in the confirmed service request being acknowledged. The same 'original-invokeID' shall be used for all segments of a segmented acknowledgment.

#### 20.1.5.4 sequence-number

This optional parameter is only present if the 'segmented-message' parameter is TRUE. In this case, the 'sequence-number' shall be a sequentially incremented unsigned integer, modulo 256, which identifies each segment of a segmented response. The value of the received 'sequence-number' is used by the original requester to acknowledge the receipt of one or more segments of a segmented response. The sequence-number of the first segment of a segmented response shall be zero.

#### 20.1.5.5 proposed-window-size

This optional parameter is only present if the 'segmented-message' parameter is TRUE. In this case, the 'proposed-window-size' parameter shall specify as an unsigned binary integer the maximum number of message segments containing 'original-invokerID' the sender is able or willing to send before waiting for a segment acknowledgment PDU (see 5.2 and 5.3). The value of the 'proposed-window-size' shall be in the range 1 - 127.

#### 20.1.5.6 service-ACK-choice


This parameter shall contain the value of the BACnetConfirmedServiceChoice corresponding to the service contained in the previous BACnet-Confirmed-Service-Request that has resulted in this acknowledgment. See Clause 21.

#### 20.1.5.7 service-ACK

This parameter shall contain the parameters of the specific service acknowledgment that is being encoded according to the rules of 20.2. These parameters are defined in the individual service descriptions in this standard and are represented in Clause 21 in accordance with the rules of ASN.1.

#### 20.1.5.8 Format of the BACnet-ComplexACK-PDU

The format of the BACnet-ComplexACK-PDU is:

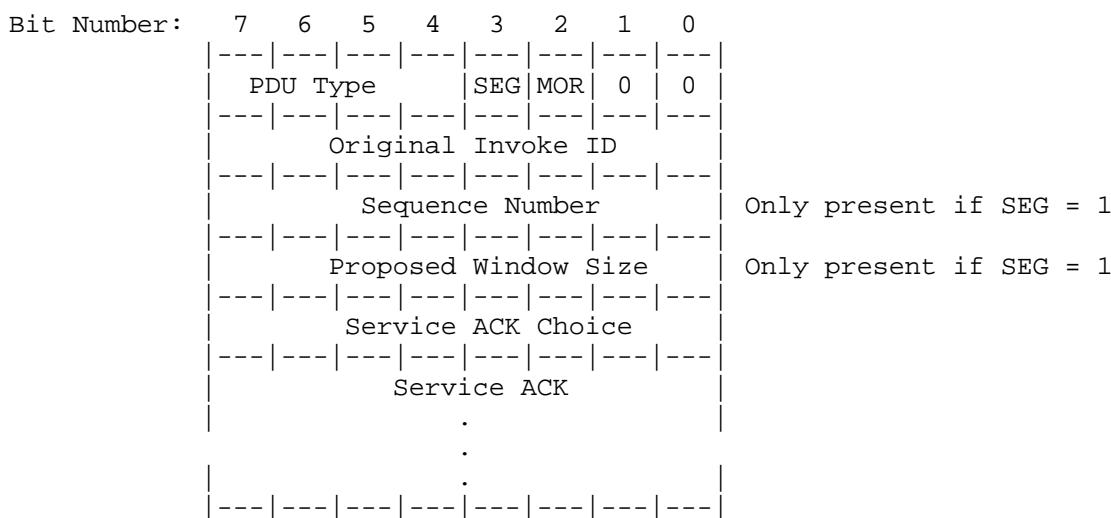

The PDU fields have the following values:

PDU Type =	3 (BACnet-ComplexACK-PDU)
SEG =	0 (Unsegmented Response) 1 (Segmented Response)
MOR =	0 (No More Segments Follow) 1 (More Segments Follow)
Original Invoke ID =	(0..255)
Sequence Number =	(0..255) Only present if SEG = 1
Proposed Window Size =	(1..127) Only present if SEG = 1
Service ACK Choice =	BACnetConfirmedServiceChoice
Service ACK =	Variable Encoding per 20.2.

Bits shown in the diagram as '0' shall be set to zero. These bits are currently unused and are reserved by ASHRAE.

### 20.1.6 BACnet-SegmentACK-PDU

The BACnet-SegmentACK-PDU is used to acknowledge the receipt of one or more PDUs containing portions of a segmented message. It may also request the next segment or segments of the segmented message.

```
BACnet-SegmentACK-PDU ::= SEQUENCE {
    pdu-type      [0] Unsigned (0..15), -- 4 for this PDU type
    reserved      [1] Unsigned (0..3), -- must be set to zero
    negative-ACK  [2] BOOLEAN,
    server        [3] BOOLEAN,
    original-invokeID [4] Unsigned (0..255),
    sequence-number [5] Unsigned (0..255),
    actual-window-size [6] Unsigned (1..127)
-- Context specific tags 0..6 are NOT used in header encoding
}
```

The parameters of the BACnet-SegmentACK-PDU have the following meanings.

#### 20.1.6.1 negative-ACK

This parameter shall be TRUE if the Segment-ACK PDU is being sent to indicate a segment received out of order. Otherwise, it shall be FALSE.

#### 20.1.6.2 server

This parameter shall be TRUE when the SegmentACK PDU is sent by a server, that is, when the SegmentACK PDU is in acknowledgment of a segment or segments of a Confirmed-Request PDU.

This parameter shall be FALSE when the SegmentACK PDU is sent by a client, that is, when the SegmentACK PDU is in acknowledgment of a segment or segments of a ComplexACK PDU.

#### 20.1.6.3 original-invokeID

This parameter shall be the 'invokeID' contained in the segment being acknowledged.

#### 20.1.6.4 sequence-number

This parameter shall contain the 'sequence-number' of a previously received message segment. It is used to acknowledge the receipt of that message segment and all earlier segments of the message.


If the 'more-follows' parameter of the received message segment is TRUE, then the 'sequence-number' also requests continuation of the segmented message beginning with the segment whose 'sequence-number' is one plus the value of this parameter, modulo 256.

#### 20.1.6.5 actual-window-size

This parameter shall specify as an unsigned binary integer the number of message segments containing 'original-invokeID' the sender will accept before sending another SegmentACK. See 5.3 for additional details. The value of the 'actual-window-size' shall be in the range 1 - 127.

#### 20.1.6.6 Format of the BACnet-SegmentACK-PDU

The format of the BACnet-SegmentACK-PDU is:

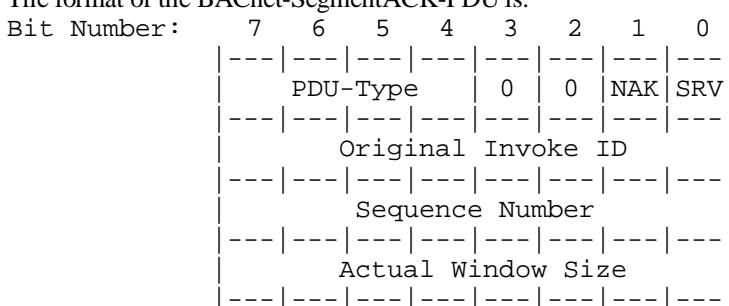

Note that this PDU is always four octets long.

The PDU fields have the following values:

PDU Type =	4 (BACnet-SegmentACK-PDU)
NAK =	0 (Normal Acknowledgment) 1 (Negative Acknowledgment, Segment Out of Order)
SRV =	0 (Sent by Client) 1 (Sent by Server)
Original Invoke ID =	(0..255)
Sequence Number =	(0..255)
Actual Window Size =	(1..127)

Bits shown in the diagram as '0' shall be set to zero. These bits are currently unused and are reserved by ASHRAE.

### **20.1.7 BACnet-Error-PDU**

The BACnet-Error-PDU is used to convey the information contained in a service response primitive ('Result(-)') that indicates the reason why a previous confirmed service request failed in its entirety.

```

BACnet-Error-PDU ::= SEQUENCE {
    pdu-type          [0] Unsigned (0..15), -- 5 for this PDU type
    reserved          [1] Unsigned (0..15), -- must be set to zero
    original.InvokeID [2] Unsigned (0..255),
    error-choice       [3] BACnetConfirmedServiceChoice,
    error             [4] BACnet-Error
-- Context specific tags 0..4 are NOT used in header encoding
}

```

The parameters of the BACnet-Error-PDU have the following meanings.

### 20.1.7.1 originalInvokeID

This parameter shall be the 'invokeID' contained in the confirmed service request to which the error is a response.

### 20.1.7.2 error-choice


This parameter, of type BACnetConfirmedServiceChoice, shall contain the tag value of the BACnet-Error choice. See Clause 21.

### 20.1.7.3 error

This parameter, of type BACnet-Error, indicates the reason the indicated service request could not be carried out. This parameter shall be encoded according to the rules of 20.2.

#### 20.1.7.4 Format of the BACnet-Error-PDU

The format of the BACnet-Error-PDU is:

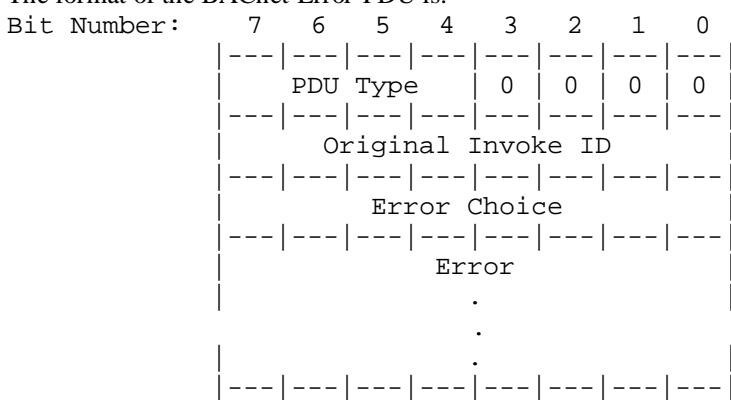

The PDU fields have the following values:

PDU Type =	5 (BACnet-Error-PDU)
Original Invoke ID =	(0..255)
Error Choice =	BACnetConfirmedServiceChoice
Error =	Variable Encoding per 20.2.

Bits shown in the diagram as '0' shall be set to zero. These bits are currently unused and are reserved by ASHRAE.

### 20.1.8 BACnet-Reject-PDU

The BACnet-Reject-PDU is used to reject a received confirmed request PDU based on syntactical flaws or other protocol errors that prevent the PDU from being interpreted or the requested service from being provided. Only confirmed request PDUs may be rejected (see 18.8).

```
BACnet-Reject-PDU ::= SEQUENCE {
    pdu-type      [0] Unsigned (0..15), -- 6 for this PDU type
    reserved      [1] Unsigned (0..15), -- must be set to zero
    original-invokeID [2] Unsigned (0..255),
    reject reason   [3] BACnetRejectReason
-- Context specific tags 0..3 are NOT used in header encoding
}
```

The parameters of the BACnet-Reject-PDU have the following meanings.

#### 20.1.8.1 original-invokeID


This parameter shall be the 'invokeID' of the PDU being rejected.

#### 20.1.8.2 reject-reason

This parameter, of type BACnetRejectReason, contains the reason the PDU with the indicated 'invokeID' is being rejected.

#### 20.1.8.3 Format of the BACnet-Reject-PDU

The format of the BACnet-Reject-PDU is:

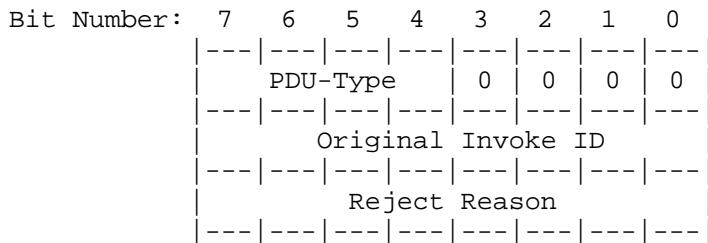

Note that this PDU is always three octets long.

The PDU fields have the following values:

PDU Type =	6 (BACnet-Reject-PDU)
Original Invoke ID =	(0..255)
Reject Reason =	One octet containing the reject reason enumeration

Bits shown in the diagram as '0' shall be set to zero. These bits are currently unused and are reserved by ASHRAE.

### 20.1.9 BACnet-Abort-PDU

The BACnet-Abort-PDU is used to terminate a transaction between two peers.

```
BACnet-Abort-PDU ::= SEQUENCE {
    pdu-type      [0] Unsigned (0..15), -- 7 for this PDU type
    reserved      [1] Unsigned (0..7), -- must be set to zero
    server        [2] BOOLEAN,
    original-invokeID [3] Unsigned (0..255),
    abort-reason   [4] BACnetAbortReason
-- Context specific tags 0..4 are NOT used in header encoding
}
```

The parameters of the BACnet-Abort-PDU have the following meanings.

#### 20.1.9.1 server

This parameter shall be TRUE when the Abort PDU is sent by a server. This parameter shall be FALSE when the Abort PDU is sent by a client.

#### 20.1.9.2 original-invokeID


This parameter shall be the 'invokeID' of the transaction being aborted.

#### 20.1.9.3 abort-reason

This parameter, of type BACnetAbortReason, contains the reason the transaction with the indicated invoke ID is being aborted.

#### 20.1.9.4 Format of the BACnet-Abort-PDU

The format of the BACnet-Abort-PDU is:

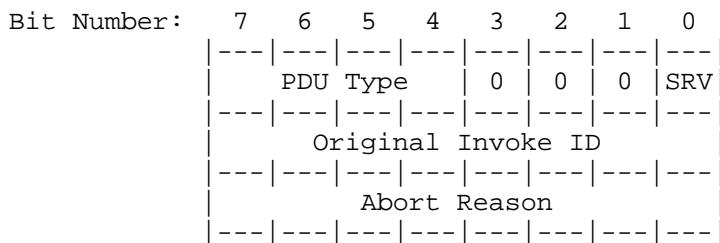

Note that this PDU is always three octets long.

The PDU fields have the following values:

PDU Type =	7 (BACnet-Abort-PDU)
SRV =	0 (Sent by Client)
	1 (Sent by Server)
Original Invoke ID =	(0..255)

Bits shown in the diagram as '0' shall be set to zero. These bits are currently unused and are reserved by ASHRAE.

### 20.2 Encoding the Variable Part of BACnet APDUs

The encoding of the header portions of BACnet APDUs has been specified in 20.1. This subclause describes the encoding procedures for the variable portion of BACnet APDUs referred to hereafter as "service parameters." These parameters are of types BACnet-Confirmed-Service-Request, BACnet-Unconfirmed-Service-Request, BACnet-Confirmed-Service-ACK, and BACnet-Error. Each parameter is unambiguously defined by means of ASN.1 productions in Clause 21.

All data elements in service parameters are identified by constructs known as "tags." Each tag refers to a unique parameter or subparameter.

BACnet encoding uses two classes of tag. The first identifies fundamental datatypes used or defined in this standard, such as **BOOLEANS**, **Unsigneds**, **CharacterStrings**, **Date**, **Time**, or **BACnetObjectIdentifiers**. Where a datatype appears in upper case, its semantics are identical to the corresponding ASN.1 universal datatype of the same name, as indicated in Clause 21.

Such tags are called "application" tags, and the values of the tags are specified in 20.2.1.4.

The second class of tag is used to identify data elements whose datatype may be inferred from the context in which they appear. These tags are called "context specific" tags.


ASN.1 defines two other classes of tags, "universal" and "private." The encoding scheme used by BACnet does not allow, nor do any BACnet ASN.1 productions require, the use of these classes of tags.

In some instances, the datatype of a parameter cannot be deduced from the context in which it appears. In such cases, both a context specific and one or more application tags are required. These cases are indicated in the ASN.1 productions by service parameters whose datatypes are indicated by the keywords ABSTRACT-SYNTAX.&TYPE (ANY), CHOICE, SEQUENCE, or SEQUENCE OF.

The subclauses that follow show how each tagged element is identified, its length specified, and its value encoded.

### **20.2.1 General Rules For Encoding BACnet Tags**

BACnet tags are encoded in an initial octet and zero or more conditional subsequent octets. The initial octet is defined as follows:

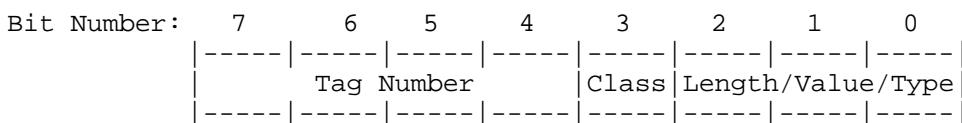

where Tag Number = the tag number within the class  
Class = the class of tag (application or context specific)  
Length/Value/Type = whether the data following the tag is primitive or constructed and specifies the length or value of primitive data.

### 20.2.1.1 Class

The Class bit shall be zero for application tags. The Class bit shall be one for context specific tags.

### **20.2.1.2 Tag Number**

Tag numbers ranging from zero to 14 (inclusive) shall be encoded in the Tag Number field of the initial octet as a four bit binary integer with bit 7 the most significant bit.

Tag numbers ranging from 15 to 254 (inclusive) shall be encoded by setting the Tag Number field of the initial octet to B'1111' and following the initial tag octet by an octet containing the tag number represented as an eight-bit binary integer with bit 7 the most significant bit.

The encoding does not allow, nor does BACnet require, tag numbers larger than 254. The value B'11111111' of the subsequent octet is reserved by ASHRAE.

### 20.2.1.3 Length/Value/Type

The content of the length/value/type field of the initial octet distinguishes between primitive and constructed encodings and specifies the length or value of primitive data. A primitive encoding is one in which the data do not contain other tagged encodings. A constructed encoding is one in which the data do contain other tagged encodings.

### 20.2.1.3.1 Primitive Data

If the data being encoded are application class BOOLEAN data, then the Boolean value shall be encoded by setting the length/value/type field of the initial octet to B'000' if the Boolean value is FALSE or B'001' if the Boolean value is TRUE. In this case, the length/value/type field shall be interpreted as a value.

If the data being encoded are primitive (that is, not constructed) and not application class BOOLEAN data, then the value of the data shall be encoded according to 20.2.2 through 20.2.14, and the length/value/type field of the initial tag octet shall specify the length of the primitive data in octets as follows:

Data length in octets ranging from zero to four (inclusive) shall be encoded in the length/value/type field of the initial octet as a three-bit binary integer with bit 2 the most significant bit.

Data length in octets ranging from 5 to 253 (inclusive) shall be encoded by setting the length/value/type field of the initial octet to B'101' and following the initial tag octet or, if the Tag Number has been extended, following the Tag Number extension octet by an octet containing the data length represented as an eight-bit binary integer with bit 7 the most significant bit.

Data length in octets ranging from 254 to 65535 (inclusive) shall be encoded by setting the length/value/type field of the initial octet to B'101' and following the initial tag octet or, if the Tag Number has been extended, following the Tag Number extension octet by an octet containing D'254' and two additional octets whose value contains the data length represented as a 16-bit binary integer with the most significant octet first.

Data length in octets ranging from 65536 to  $2^{32}-1$  (inclusive) shall be encoded by setting the length/value/type field of the initial octet to B'101' and following the initial tag octet or, if the Tag Number has been extended, following the Tag Number extension octet by an octet containing D'255' and four additional octets whose value contains the data length represented as a 32-bit binary integer with the most significant octet first.

Data lengths larger than  $2^{32}-1$  are not encodable using primitive tags.

Note that with the exception of 8-octet IEEE-754 double precision floating point values and certain bit, character, and octet strings, the length of BACnet application-tagged primitives will fit in the tag octet without extension.

### 20.2.1.3.2 Constructed Data

If the production being encoded contains tagged elements, then the encoding is called "constructed" and shall consist of

- (a) an "opening" tag whose Tag Number field shall contain the value of the tag number, whose Class field shall indicate "context specific," and whose length/value/type field shall have the value B'110';
- (b) the complete encoding, with tags, of the zero, one, or more elements that comprise the data;
- (c) a "closing" tag, whose Class and Tag Number fields shall contain the same values as the "opening" tag and whose length/value/type field shall have the value B'111'.

In this case, the length/value/type fields of the "opening" and "closing" tags shall be interpreted as types.

Note that a contained tagged element may itself be a constructed element. This recursion does not result in ambiguous encoding, as each "opening" tag must have a corresponding "closing" tag that will be contained within any outer "opening" and "closing" tags.

### 20.2.1.4 Application Tags

The Tag Number field of an encoded BACnet application tag shall specify the application datatype as follows:

Tag Number:	0	= Null
	1	= Boolean
	2	= Unsigned Integer

- 3 = Signed Integer (2's complement notation)
- 4 = Real (ANSI/IEEE-754 floating point)
- 5 = Double (ANSI/IEEE-754 double precision floating point)
- 6 = Octet String
- 7 = Character String
- 8 = Bit String
- 9 = Enumerated
- 10 = Date
- 11 = Time
- 12 = BACnetObjectIdentifier
- 13, 14, 15 = Reserved for ASHRAE

Note that all currently defined BACnet Application datatypes are primitively encoded.

#### 20.2.1.5 Context-Specific Tags

The Tag Number field of an encoded BACnet context-specific tag shall contain the value of the context-specific tag number.

The data delimited by a context-specific tag may be either primitive or constructed.

#### 20.2.2 Encoding of a Null Value

The encoding of a Null value shall be primitive, with no contents octet.

Example: Application-tagged null value

ASN.1 =	NULL
Application Tag =	Null (Tag Number = 0)
Encoded Tag =	X'00'

#### 20.2.3 Encoding of a Boolean Value

Application-tagged Boolean values shall be encoded within a single octet by setting the length/value/type field to B'000' if the value to be encoded is FALSE or B'001' if the value to be encoded is TRUE.

Example: Application-tagged Boolean value

ASN.1 =	BOOLEAN
Value =	FALSE
Application Tag =	Boolean (Tag Number = 1)
Encoded Tag =	X'10'

Context-tagged Boolean primitive data shall contain one contents octet. The value of this octet shall be B'00000000' if the value to be encoded is FALSE or B'00000001' if the value to be encoded is TRUE.

Example: Context-tagged Boolean value

ASN.1 =	[2] BOOLEAN
Value =	TRUE
Context Tag =	2
Encoded Tag =	X'29'
Encoded Data =	X'01'

*NOTE: The Boolean datatype differs from the other datatypes in that the encoding of a context-tagged Boolean value is not the same as the encoding of an application-tagged Boolean value. This is done so that the application-tagged value may be encoded in a single octet, without a contents octet. While this same encoding could have been used for the context-tagged case, doing so would require that the context be known in order to distinguish between a length or a value in the length/value/type field. This was considered to be undesirable. See 20.2.20.*

#### 20.2.4 Encoding of an Unsigned Integer Value

The encoding of an unsigned integer value shall be primitive, with at least one contents octet.

Unsigned integers shall be encoded in the contents octet(s) as binary numbers in the range 0 to  $(2^{8*L} - 1)$  where L is the number of octets used to encode the value and L is at least one. Values encoded into more than one octet shall be conveyed with the most significant octet first. All unsigned integers shall be encoded in the smallest number of octets possible. That is, the first octet of any multi-octet encoded value shall not be X'00'.

Example: Application-tagged unsigned integer

ASN.1 =	Unsigned
Value =	72
Application Tag = Unsigned Integer (Tag Number = 2)	
Encoded Tag =	X'21'
Encoded Data =	X'48'

### 20.2.5 Encoding of a Signed Integer Value

The encoding of a signed integer value shall be primitive, with at least one contents octet.

Signed integers shall be encoded in the contents octet(s) as binary numbers using 2's complement notation in the range  $-2^{(8*L-1)}$  to  $(2^{(8*L-1)} - 1)$  where L is the number of octets used to encode the value and L is at least one. Values encoded into more than one octet shall be conveyed most significant octet first. All signed integers shall be encoded in the smallest number of octets possible. That is, the first octet of any multi-octet encoded value shall not be X'00' if the most significant bit (bit 7) of the second octet is 0, and the first octet shall not be X'FF' if the most significant bit of the second octet is 1.

Example: Application-tagged signed integer

ASN.1 =	INTEGER
Value =	72
Application Tag = Signed Integer (Tag Number = 3)	
Encoded Tag =	X'31'
Encoded Data =	X'48'

### 20.2.6 Encoding of a Real Number Value

The encoding of a real number value shall be primitive, with four contents octets. Real numbers shall be encoded using the method specified in ANSI/IEEE Standard 754-1985, "IEEE Standard for Binary Floating-Point Arithmetic." This standard should be consulted for details. The multi-octet value shall be conveyed with the most significant (sign and exponent) octet first.

For the case of single precision real numbers, the encoding format is:

Bit Number:	31	30	...	23	22	...	0
	---	---	....	---	---	....	---
	s		e		f		
	---	---	....	---	---	....	---

Field Width:    1 <----- 8 -----><----- 23 ----->

where the numbers indicate the field widths in bits. Non-zero values shall be represented by the equation  $v = (-1)^s 2^{e-127} (1 \bullet f)$  where the symbol "•" signifies the binary point. Zero shall be indicated by setting s, e, and f to zero.

Example: Application-tagged single precision real

ASN.1 =	REAL
Value =	72.0
Application Tag = Real (Tag Number = 4)	
Encoded Tag =	X'44'
Encoded Data =	X'42900000'

### 20.2.7 Encoding of a Double Precision Real Number Value

The encoding of a double precision real number value shall be primitive with eight contents octets. Double precision real numbers shall be encoded using the method specified in ANSI/IEEE Standard 754-1985, "IEEE Standard for Binary Floating-Point Arithmetic." This standard should be consulted for details. The multi-octet value shall be conveyed most significant (sign and exponent) octet first.

For the case of double precision real numbers, the encoding format is:

Bit Number:	63    62    ...    52    51    ...    0
	---   ---   ...   ...   ---   ---   ...   ...   ---
	s         e         f
	---   ---   ...   ...   ---   ---   ...   ...   ---

Field Width:	1    <----- 11 -----> <----- 52 ----->
--------------	----------------------------------------

where the numbers indicate the field widths in bits. Non-zero values shall be represented by the equation  $v = (-1)^s 2^{e-1023} (1 \bullet f)$  where the symbol " $\bullet$ " signifies the binary point. Zero shall be indicated by setting s, e, and f to zero.

Example: Application-tagged double precision real

ASN.1 =	Double
Value =	72.0
Application Tag =	Double (Tag Number = 5)
Encoded Tag =	X'55'
Extended Length =	X'08'
Encoded Data =	X'4052000000000000'

ANSI/IEEE-754 Extended Precision format is not supported by BACnet.

### 20.2.8 Encoding of an Octet String Value

The encoding of an octet string value shall be primitive.

The encoding shall contain zero, one, or more contents octets equal in value to the octets in the data value, in the order in which they appear in the data value, and with the most significant bit of an octet of the data value aligned with the most significant bit of an octet of the contents octets.

Example: Application-tagged octet string

ASN.1 =	OCTET STRING
Value =	X'1234FF'
Application Tag =	Octet String (Tag Number = 6)
Encoded Tag =	X'63'
Encoded Data =	X'1234FF'

### 20.2.9 Encoding of a Character String Value

The encoding of a character string value shall be primitive.

The encoding shall contain an initial contents octet, and zero, one, or more additional contents octets equal in value to the octets in the data value, in the order in which they appear in the data value, i.e., most significant octet first, and with the most significant bit of an octet of the data value aligned with the most significant bit of an octet of the contents octets.

The initial octet shall specify the character set with the following encoding:

X'00'	ANSI X3.4
X'01'	IBM <sup>TM</sup> /Microsoft <sup>TM</sup> DBCS
X'02'	JIS C 6226
X'03'	ISO 10646 (UCS-4)

X'04'	ISO 10646 (UCS-2)
X'05'	ISO 8859-1

Other values of the initial octet are reserved by ASHRAE.

Example: Application-tagged character string

ASN.1 =	CharacterString
Value =	"This is a BACnet string!" (ANSI X3.4)
Application Tag =	Character String (Tag Number = 7)
Encoded Tag =	X'75'
Length Extension =	X'19'
Character Set =	X'00' (ANSI X3.4)
Encoded Data =	X'546869732069732061204241436E657420737472696E6721'

In the case of IBM/Microsoft DBCS (X'01'), the initial octet shall be followed by two additional octets whose value shall represent an unsigned integer, with the most significant octet first, that shall indicate the Code Page to be presumed for the characters that follow.

Example: Application-tagged character string (DBCS)

ASN.1 =	CharacterString
Value =	"This is a BACnet String!" (IBM/Microsoft DBCS, code page 850)
Application Tag =	Character String (Tag Number = 7)
Encoded Tag =	X'75'
Length Extension =	X'1B'
Encoded Data =	X'010352546869732069732061204241436E657420737472696E6721'

In the case of ISO 10646 UCS-2 (X'04') and UCS4 (X'03'), each character of the string shall be represented by two or four octets, respectively. The octet order for UCS-2 shall be Row-Cell. The octet order for UCS-4 shall be Group-Plane-Row-Cell.

Example: Application-tagged character string (UCS-2)

ASN.1 =	CharacterString
Value =	"This is a BACnet String!" (ISO 10646 UCS-2)
Application Tag =	Character String (Tag Number = 7)
Encoded Tag =	X'75'
Length Extension =	X'31'
Encoded Data =	X'04005400680069007300200069007300200061002000420041 0043006E0065007400200073007400720069006E00670021'

### 20.2.10 Encoding of a Bit String Value

The encoding of a bit string value shall be primitive.

The contents octets for the primitive encoding shall contain an initial octet and zero or more subsequent octets containing the bit string. The initial octet shall encode, as an unsigned binary integer, the number of unused bits in the final subsequent octet. The number of unused bits shall be in the range zero to seven, inclusive.

Bit strings defined in this standard, e.g., the Status\_Flags property, shall be encoded in the order of definition, with the first defined Boolean value in the most significant bit, i.e. bit 7, of the first subsequent octet. The bits in the bitstring shall be placed in bits 7 to 0 of the first subsequent octet, followed by bits 7 to 0 of the second subsequent octet, followed by bits 7 to 0 of each octet in turn, followed by as many bits as are needed of the final subsequent octet, commencing with bit 7.

If the bit string is empty, there shall be no subsequent octets, and the initial octet shall be zero.

Example: Application-tagged bit string

ASN.1 =	BIT STRING
Value =	B'10101'
Application Tag =	Bit String (Tag Number = 8)
Encoded Tag =	X'82'

Encoded Data = X'03A8'

### 20.2.11 Encoding of an Enumerated Value

The encoding of an enumerated value shall be primitive, with at least one contents octet.

Enumerated values shall be encoded in the contents octet(s) as binary numbers in the range 0 to  $(2^{8*L} - 1)$  where L is the number of octets used to encode the value and L is at least one. Values encoded into more than one octet shall be conveyed most significant octet first. All enumerated values shall be encoded in the smallest number of octets possible. That is, the first octet of any multi-octet encoded value shall not be X'00'.

Example: Application-tagged enumeration

ASN.1 =	BACnetObjectType
Value =	ANALOG-INPUT (0)
Application Tag =	Enumerated (Tag Number = 9)
Encoded Tag =	X '91'
Encoded Data =	X '00'

### 20.2.12 Encoding of a Date Value

The encoding of a date value shall be primitive, with four contents octets.

Date values shall be encoded in the contents octets as four binary integers. The first contents octet shall represent the year minus 1900; the second octet shall represent the month, with January = 1; the third octet shall represent the day of the month; and the fourth octet shall represent the day of the week, with Monday = 1. A value of X'FF' = D'255' in any of the four octets shall indicate that the corresponding value is unspecified. If all four octets = X'FF', the corresponding date may be interpreted as "any" or "don't care."

Example: Application-tagged date value

ASN.1 =	Date
Value =	January 24, 1991 (Day of week = Thursday)
Application Tag =	Date (Tag Number = 10)
Encoded Tag =	X'A4'
Encoded Data =	X'5B011804'

### 20.2.13 Encoding of a Time Value

The encoding of a time value shall be primitive, with four contents octets.

Time values shall be encoded in the contents octets as four binary integers. The first contents octet shall represent the hour, in the 24-hour system (1 P.M. = D'13'); the second octet shall represent the minute of the hour; the third octet shall represent the second of the minute; and the fourth octet shall represent the fractional part of the second in hundredths of a second. A value of X'FF' = D'255' in any of the four octets shall indicate that the corresponding value is unspecified. If all four octets = X'FF', the corresponding time may be interpreted as "any" or "don't care."

Example: Application-tagged time value


ASN.1 =	Time
Value =	5:35:45.17 P.M. = 17:35:45.17
Application Tag =	Time (Tag Number = 11)
Encoded Tag =	X'B4'
Encoded Data =	X'11232D11'

### 20.2.14 Encoding of an Object Identifier Value

A BACnet Object Identifier value shall consist of two components:

- (1) A 10-bit object type, representing the BACnetObjectType of the object, with bit 9 the most significant bit and bit 0 the least significant. For objects defined in this standard, the value for this field shall be determined by the BACnetObjectType enumeration in Clause 21.

- (2) A 22-bit object instance number, with bit 21 the most significant bit and bit 0 the least significant.

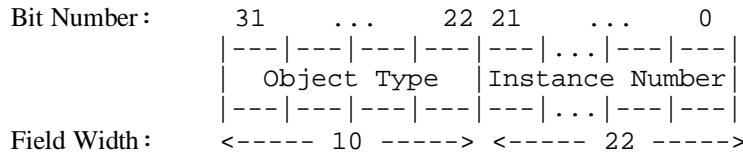

The encoding of an object identifier value shall be primitive, with four contents octets as follows:

Bits 9 through 2 of the object type shall be encoded in bits 7 through 0 of the first contents octet. Bits 1 through 0 of the object type shall be encoded in bits 7 through 6 of the second contents octet.

Bits 21 through 16 of the object instance shall be encoded in bits 5 through 0 of the second contents octet. Bits 15 through 8 of the object instance shall be encoded in bits 7 through 0 of the third contents octet. Bits 7 through 0 of the object instance shall be encoded in bits 7 through 0 of the fourth contents octet.

Example: Application-tagged object identifier value

ASN.1 =	ObjectIdentifier
Value =	(Binary Input, 15)
Application Tag =	ObjectIdentifier (Tag Number = 12)
Encoded Tag =	X'C4'
Encoded Data =	X'00C0000F'

### 20.2.15 Encoding of a Tagged Value

The encoding of a tagged value shall be derived from the complete encoding of the corresponding data value.

ISO 8824 defines the keywords "IMPLICIT" and "EXPLICIT," with "EXPLICIT" the default. Clause 21 begins with a "DEFINITION IMPLICIT TAGS," which changes the default to IMPLICIT. BACnet ASN.1 definitions are in terms of this default and use EXPLICIT only as an override.

If the "EXPLICIT" keyword is used in the production for the type, the encoding shall be constructed, and the contents octets shall be the complete base encoding, including tags.

If the "EXPLICIT" keyword is not used in the definition of the type, then

- a) the encoding shall be constructed if the base encoding is constructed and shall be primitive otherwise, and either
- b) the contents octets shall be the same as the contents octets of the base encoding if the base encoding is not primitively tagged application class Boolean or
- c) the contents octet shall contain the value B'00000000' to denote a Boolean value of FALSE or B'00000001' to denote a Boolean value of TRUE if the base encoding is primitively tagged application class Boolean.

The context tag numbers shown in the following examples are for illustrative purposes only.

Example: Context-tagged null value

ASN.1 =	[3] NULL
Context Tag =	3
Encoded Tag =	X'38'

Example: Context-tagged Boolean value

ASN.1 =	[6] BOOLEAN
Value =	FALSE

Context Tag =	6
Encoded Tag =	X'69'
Encoded Data =	X'00'

Example: Context-tagged unsigned integer

ASN.1 =	[0] Unsigned
Value =	256
Context Tag =	0
Encoded Tag =	X'0A'
Encoded Data =	X'0100'

Example: Context-tagged signed integer

ASN.1 =	[5] INTEGER
Value =	-72
Context Tag =	5
Encoded Tag =	X'59'
Encoded Data =	X'B8'

Example: Context-tagged single precision real

ASN.1 =	[0] REAL
Value =	-33.3
Context Tag =	0
Encoded Tag =	X'0C'
Encoded Data =	X'C2053333'

Example: Context-tagged double precision real

ASN.1 =	[1] Double
Value =	-33.3
Context Tag =	1
Encoded Tag =	X'1D'
Extended Length =	X'08'
Encoded Data =	X'C040A666666666666'

Example: Context-tagged octet string

ASN.1 =	[1] OctetString
Value =	X'4321'
Context Tag =	1
Encoded Tag =	X'1A'
Encoded Data =	X'4321'

Example: Context-tagged character string

ASN.1 =	[5] CharacterString
Value =	"This is a BACnet string!" (ANSI X3.4)
Context Tag =	5
Encoded Tag =	X'5D'
Length Extension =	X'19'
Character Set =	X'00' (ANSI X3.4)
Encoded Data =	X'546869732069732061204241436E657420737472696E6721'

Example: Context-tagged bit string

ASN.1 =	[0] BIT STRING
Value =	B'10101'
Context Tag =	0
Encoded Tag =	X'0A'
Unused Bits in Last Octet =	X'03'
Encoded Data =	X'A8'

Example: Context-tagged enumeration

ASN.1 =	[9] BACnetObjectType
Value =	ANALOG-INPUT (0)
Context Tag =	9
Encoded Tag =	X'99'
Encoded Data =	X'00'

Example: Context-tagged date value

ASN.1 =	[9] Date
Value =	January 24, 1991 (Day of week = Thursday)
Context Tag =	9
Encoded Tag =	X'9C'
Encoded Data =	X'5B011805'

Example: Context-tagged time value

ASN.1 =	[4] Time
Value =	5:35:45.17 P.M. = 17:35:45.17
Context Tag =	4
Encoded Tag =	X'4C'
Encoded Data =	X'11232D11'

Example: Context-tagged object identifier value

ASN.1 =	[4] ObjectIdentifier
Value =	(Binary Input, 15)
Context Tag =	4
Encoded Tag =	X'4C'
Encoded Data =	X'00C0000F'

### 20.2.16 Encoding of a Sequence Value

The encoding of a sequence value shall consist of the complete encoding, including tags, of one data value from each of the types listed in the ASN.1 production for the sequence type, in the order of their appearance in the definition, unless the type was referenced with the keyword "OPTIONAL".

The encoding of a data value may, but need not, be present for a type that was referenced with the keyword "OPTIONAL". If present, it shall appear in the encoding at the point corresponding to the appearance of the type in the ASN.1 definition.

Example: SEQUENCE value

ASN.1 =	BACnetDateTime
Value =	January 24, 1991, 5:35:45.17 P.M.
Application Tag =	Date (Tag Number = 10)
Encoded Tag =	X'A4'
Encoded Data =	X'5B011805'
Application Tag =	Time (Tag Number = 11)
Encoded Tag =	X'B4'
Encoded Data =	X'11232D11'

Example: Context-tagged SEQUENCE value

```

ASN.1 =      [0] BACnetDateTime
Value =      January 24, 1991, 5:35:45.17 P.M.
Context Tag = 0
Encoded Tag = X'0E' (opening tag)
    Application Tag = Date (Tag Number = 10)
    Encoded Tag = X'A4'
    Encoded Data = X'5B011805'
    Application Tag = Time (Tag Number = 11)
    Encoded Tag = X'B4'
    Encoded Data = X'11232D11'
Encoded Tag = X'0F' (closing tag)
```

All ASN.1 productions of sequences that contain structured elements shall have distinct tags as necessary to permit unambiguous encoding and decoding of values. The follow example illustrates this requirement.

(incorrect usage)

```

Var1 ::= SEQUENCE {
    varn1 SEQUENCE {
        varn2 [1] INTEGER,
        varn3 [2] INTEGER OPTIONAL
    },
    varn4 SEQUENCE {
        varn5 [1] INTEGER OPTIONAL,
        varn6 [2] INTEGER
    }
}
```

(correct usage)

```

Var1 ::= SEQUENCE {
    varn1 SEQUENCE {
        varn2 [1] INTEGER,
        varn3 [2] INTEGER OPTIONAL
    },
    varn4 SEQUENCE {
        varn5 [3] INTEGER OPTIONAL,
        varn6 [4] INTEGER
    }
}
```

### 20.2.17 Encoding of a Sequence-Of Value

The encoding of a sequence-of value shall consist of zero, one, or more complete encodings, including tags, of data values from the types listed in the ASN.1 definition.

The order of the encodings of the data values shall be the same as the order of the data values in the sequence-of value to be encoded.

Example: SEQUENCE OF primitive data

```

ASN.1 =      SEQUENCE OF INTEGER
Value =      1,2,4
Application Tag = Unsigned Integer (Tag Number = 2)
Encoded Tag =  X'21'
Encoded Data = X'01'
Application Tag = Unsigned Integer (Tag Number = 2)
Encoded Tag =  X'21'
Encoded Data = X'02'
Application Tag = Unsigned Integer (Tag Number = 2)
Encoded Tag =  X'21'
Encoded Data = X'04'

```

Example: Context-tagged SEQUENCE OF primitive data

```

ASN.1 =      [1] SEQUENCE OF INTEGER
Value =      1,2,4
Encoded Tag =  X'1E' (Opening Tag)
Application Tag = Unsigned Integer (Tag Number = 2)
Encoded Tag =  X'21'
Encoded Data = X'01'
Application Tag = Unsigned Integer (Tag Number = 2)
Encoded Tag =  X'21'
Encoded Data = X'02'
Application Tag = Unsigned Integer (Tag Number = 2)
Encoded Tag =  X'21'
Encoded Data = X'04'
Encoded Tag =  X'1F' (Closing Tag)

```

Example: SEQUENCE OF constructed data

```

ASN.1 =      SEQUENCE OF BACnetDateTime
Value =      (January 24, 1991, 5:00 P.M.),
              (January 24, 1991, 6:45 P.M.)
Application Tag = Date (Tag Number = 10)
Encoded Tag =  X'A4'
Encoded Data = X'5B011804'
Application Tag = Time (Tag Number = 11)
Encoded Tag =  X'B4'
Encoded Data = X'11000000'
Application Tag = Date (Tag Number = 10)
Encoded Tag =  X'A4'
Encoded Data = X'5B011804'
Application Tag = Time (Tag Number = 11)
Encoded Tag =  X'B4'
Encoded Data = X'122D0000'

```

### 20.2.18 Encoding of a Choice Value

The encoding of a CHOICE value shall be the same as the encoding of a value of the chosen type. The encoding may be primitive or constructed depending on the chosen type.

Example: CHOICE of primitive data

```

ASN.1 =      BACnetTimeStamp
Value =      5:35:45.17 P.M. = 17:35:45.17
Context Tag = 0 (Choice for 'time' in BACnetTimeStamp)
Encoded Tag = X'0C'
Encoded Data = X'11232D11'

```

Example: CHOICE of constructed data

ASN.1 =	BACnetTimeStamp
Value =	January 24, 1991, 5:45.17 P.M.
Context Tag =	2 (Choice for 'dateTime' in BACnetTimeStamp)
Encoded Tag =	X'2E' (Opening Tag)
	Application Tag = Date (Tag Number = 10)
	Encoded Tag = X'A4'
	Encoded Data = X'5B011804'
	Application Tag = Time (Tag Number = 11)
	Encoded Tag = X'B4'
	Encoded Data = X'11232D11'
Encoded Tag =	X'2F' (Closing Tag)

#### **20.2.19 Encoding of a Value of the ANY Type**

The encoding of an ANY type shall be the complete encoding specified in this standard for the type of the value substituted for the placeholder ANY. This is represented in ASN.1 by ABSTRACT-SYNTAX.&Type.

#### **20.2.20 Summary of the Tagging Rules**

While the tagged portion of a BACnet PDU cannot be interpreted without knowledge of the context, the tagging rules described in 20.2 result in a tagged stream that can be unambiguously parsed even without *a priori* knowledge of the context.

- (a) The first octet in a stream shall be a tag, either context specific or application class.
- (b) If a tag is application class, then the format and extent of its data are known according to the definitions in 20.2. In particular, the data, if any, may be bypassed and the next tag in the stream found.
- (c) If a tag is context specific and primitive, then it contains primitive (untagged) data of some type. The length/value/type field of the tag specifies the length of this data. Thus, while the datatype and format of the data may be unknown, its length is known exactly. This allows the data, if any, to be bypassed and the next tag in the stream found.
- (d) If a tag is constructed (length/value/type = 6), then it is the opening tag of a pair. Following this tag shall be a sequence of zero or more tagged elements, followed by the closing tag of the pair with length/value/type = 7. The tagged stream between opening and closing tags may be parsed according to these same four rules via a process of recursive descent until only primitive tags are encountered or until no tags are encountered.

## 21 FORMAL DESCRIPTION OF APPLICATION PROTOCOL DATA UNITS

This clause consists of an ASN.1 module that defines the BACnet APDUs and all necessary underlying datatypes. Clauses 13 through 17 contain many service parameters that are defined as conditional (C) or user optional (U). Both of these parameter types are designated as OPTIONAL in the ASN.1 productions to indicate that they may or may not be present in the PDU. The use of OPTIONAL in the ASN.1 production shall not supersede the conditional requirements defined in the service specification.

BACnetModule DEFINITIONS IMPLICIT TAGS ::=  
BEGIN

\*\*\*\*\* APDU Definitions \*\*\*\*\*

**BACnetPDU** ::= CHOICE {  
 confirmed-request-PDU [0] BACnet-Confirmed-Request-PDU,  
 unconfirmed-request-PDU [1] BACnet-Unconfirmed-Request-PDU,  
 simpleACK-PDU [2] BACnet-SimpleACK-PDU,  
 complexACK-PDU [3] BACnet-ComplexACK-PDU,  
 segmentAck-PDU [4] BACnet-SegmentACK-PDU,  
 error-PDU [5] BACnet-Error-PDU,  
 reject-PDU [6] BACnet-Reject-PDU,  
 abort-PDU [7] BACnet-Abort-PDU  
 }

**BACnet-Confirmed-Request-PDU** ::= SEQUENCE {  
 pdu-type [0] Unsigned (0..15), -- 0 for this PDU type  
 segmented-message [1] BOOLEAN,  
 more-follows [2] BOOLEAN,  
 segmented-response-accepted [3] BOOLEAN,  
 reserved [4] Unsigned (0..3), -- must be set to zero  
 max-segments-accepted [5] Unsigned (0..7), -- as per 20.1.2.4  
 max-APDU-length-accepted [6] Unsigned (0..15), -- as per 20.1.2.5  
 invokeID [7] Unsigned (0..255),  
 sequence-number [8] Unsigned (0..255) OPTIONAL, -- only if segmented msg  
 proposed-window-size [9] Unsigned (1..127) OPTIONAL, -- only if segmented msg  
 service-choice [10] BACnetConfirmedServiceChoice,  
 service-request [11] BACnet-Confirmed-Service-Request OPTIONAL  
 -- Context-specific tags 0..11 are NOT used in header encoding  
 }

**BACnet-Unconfirmed-Request-PDU** ::= SEQUENCE {  
 pdu-type [0] Unsigned (0..15), -- 1 for this PDU type  
 reserved [1] Unsigned (0..15), -- must be set to zero  
 service-choice [2] BACnetUnconfirmedServiceChoice,  
 service-request [3] BACnet-Unconfirmed-Service-Request  
 -- Context-specific tags 0..3 are NOT used in header encoding  
 }

**BACnet-SimpleACK-PDU** ::= SEQUENCE {  
 pdu-type [0] Unsigned (0..15), -- 2 for this PDU type  
 reserved [1] Unsigned (0..15), -- must be set to zero  
 invokeID [2] Unsigned (0..255),  
 service-ACK-choice [3] BACnetConfirmedServiceChoice  
 -- Context-specific tags 0..3 are NOT used in header encoding  
 }

**BACnet-ComplexACK-PDU ::= SEQUENCE {**

pdu-type	[0] Unsigned (0..15), -- 3 for this PDU type
segmented-message	[1] BOOLEAN,
more-follows	[2] BOOLEAN,
reserved	[3] Unsigned (0..3), -- must be set to zero
invokeID	[4] Unsigned (0..255),
sequence-number	[5] Unsigned (0..255) OPTIONAL, --only if segment
proposed-window-size	[6] Unsigned (1..127) OPTIONAL, -- only if segment
service-ACK-choice	[7] BACnetConfirmedServiceChoice,
service-ACK	[8] BACnet-Confirmed-Service-ACK

-- Context-specific tags 0..8 are NOT used in header encoding  
}

**BACnet-SegmentACK-PDU ::= SEQUENCE {**

pdu-type	[0] Unsigned (0..15), -- 4 for this PDU type
reserved	[1] Unsigned (0..3), -- must be set to zero
negative-ACK	[2] BOOLEAN,
server	[3] BOOLEAN,
original-invokeID	[4] Unsigned (0..255),
sequence-number	[5] Unsigned (0..255),
actual-window-size	[6] Unsigned (1..127)

-- Context-specific tags 0..6 are NOT used in header encoding  
}

**BACnet-Error-PDU ::= SEQUENCE {**

pdu-type	[0] Unsigned (0..15), -- 5 for this PDU type
reserved	[1] Unsigned (0..15), -- must be set to zero
original-invokeID	[2] Unsigned (0..255),
error-choice	[3] BACnetConfirmedServiceChoice,
error	[4] BACnet-Error

-- Context-specific tags 0..4 are NOT used in header encoding  
}

**BACnet-Reject-PDU ::= SEQUENCE {**

pdu-type	[0] Unsigned (0..15), -- 6 for this PDU type
reserved	[1] Unsigned (0..15), -- must be set to zero
original-invokeID	[2] Unsigned (0..255),
reject-reason	[3] BACnetRejectReason

-- Context-specific tags 0..3 are NOT used in the header encoding  
}

**BACnet-Abort-PDU ::= SEQUENCE {**

pdu-type	[0] Unsigned (0..15), -- 7 for this PDU type
reserved	[1] Unsigned (0..7), -- must be set to zero
server	[2] BOOLEAN,
original-invokeID	[3] Unsigned (0..255),
abort-reason	[4] BACnetAbortReason

-- Context-specific tags 0..4 are NOT used in header encoding  
}

\*\*\*\*\* Confirmed Service Productions \*\*\*\*\*

**BACnetConfirmedServiceChoice ::= ENUMERATED {**

-- Alarm and Event Services

acknowledgeAlarm	(0),
confirmedCOVNotification	(1),
confirmedEventNotification	(2),
getAlarmSummary	(3),
getEnrollmentSummary	(4),
getEventInformation	(29),
subscribeCOV	(5),
subscribeCOVProperty	(28),
lifeSafetyOperation	(27),

-- File Access Services

atomicReadFile	(6),
atomicWriteFile	(7),

-- Object Access Services

addListElement	(8),
removeListElement	(9),
createObject	(10),
deleteObject	(11),
readProperty	(12),
readPropertyConditional	(13),
readPropertyMultiple	(14),
readRange	(26),
writeProperty	(15),
writePropertyMultiple	(16),

-- Remote Device Management Services

deviceCommunicationControl	(17),
confirmedPrivateTransfer	(18),
confirmedTextMessage	(19),
reinitializeDevice	(20),

-- Virtual Terminal Services

vtOpen	(21),
vtClose	(22),
vtData	(23),

-- Security Services

authenticate	(24),
requestKey	(25)

-- Services added after 1995

-- readRange	(26)	see Object Access Services
-- lifeSafetyOperation	(27)	see Alarm and Event Services
-- subscribeCOVProperty	(28)	see Alarm and Event Services
-- getEventInformation	(29)	see Alarm and Event Services
}		

-- Other services to be added as they are defined. All enumeration values in this production are reserved for definition by

-- ASHRAE. Proprietary extensions are made by using the ConfirmedPrivateTransfer or UnconfirmedPrivateTransfer  
-- services. See Clause 23.

**BACnet-Confirmed-Service-Request ::= CHOICE {**

- Alarm and Event Services
  - acknowledgeAlarm [0] AcknowledgeAlarm-Request,
  - confirmedCOVNotification [1] ConfirmedCOVNotification-Request,
  - confirmedEventNotification [2] ConfirmedEventNotification-Request,
  - getAlarmSummary conveys no parameters
    - getEnrollmentSummary [4] GetEnrollmentSummary-Request,
    - getEventInformation [29] GetEventInformation-Request,
    - subscribeCOV [5] SubscribeCOV-Request,
    - subscribeCOVProperty [28] SubscribeCOVProperty-Request,
    - lifeSafetyOperation [27] LifeSafetyOperation-Request,
- File Access Services
  - atomicReadFile [6] AtomicReadFile-Request,
  - atomicWriteFile [7] AtomicWriteFile-Request,
- Object Access Services
  - addListElement [8] AddListElement-Request,
  - removeListElement [9] RemoveListElement-Request,
  - createObject [10] CreateObject-Request,
  - deleteObject [11] DeleteObject-Request,
  - readProperty [12] ReadProperty-Request,
  - readPropertyConditional [13] ReadPropertyConditional-Request,
  - readPropertyMultiple [14] ReadPropertyMultiple-Request,
  - readRange [26] ReadRange-Request,
  - writeProperty [15] WriteProperty-Request,
  - writePropertyMultiple [16] WritePropertyMultiple-Request,
- Remote Device Management Services
  - deviceCommunicationControl [17] DeviceCommunicationControl-Request,
  - confirmedPrivateTransfer [18] ConfirmedPrivateTransfer-Request,
  - confirmedTextMessage [19] ConfirmedTextMessage-Request,
  - reinitializeDevice [20] ReinitializeDevice-Request,
- Virtual Terminal Services
  - vtOpen [21] VT-Open-Request,
  - vtClose [22] VT-Close-Request,
  - vtData [23] VT-Data-Request,
- Security Services
  - authenticate [24] Authenticate-Request,
  - requestKey [25] RequestKey-Request
- Services added after 1995
  - readRange [26] see Object Access Services
  - lifeSafetyOperation [27] see Alarm and Event Services
  - subscribeCOVProperty [28] see Alarm and Event Services
  - getEventInformation [29] see Alarm and Event Services

}  
-- Context-specific tags 0..29 are NOT used in the encoding. The tag number is transferred as the service-choice parameter  
-- in the BACnet-Confirmed-Request-PDU.

--  
-- Other services will be added as they are defined. All choice values in this production are reserved for definition by  
-- ASHRAE. Proprietary extensions are made by using the ConfirmedPrivateTransfer service. See Clause 23.

**BACnet-Confirmed-Service-ACK ::= CHOICE {**

-- This production represents the 'Result(+)’ parameters defined for each confirmed service that returns one or more parameters with 'Result(+)’.

-- Alarm and Event Services

getAlarmSummary	[3] GetAlarmSummary-ACK,
getEnrollmentSummary	[4] GetEnrollmentSummary-ACK,
getEventInformation	[29] GetEventInformation-ACK,

-- File Access Services

atomicReadFile	[6] AtomicReadFile-ACK,
atomicWriteFile	[7] AtomicWriteFile-ACK,

-- Object Access Services

createObject	[10] CreateObject-ACK,
readProperty	[12] ReadProperty-ACK,
readPropertyConditional	[13] ReadPropertyConditional-ACK,
readPropertyMultiple	[14] ReadPropertyMultiple-ACK,
readRange	[26] ReadRange-ACK,

-- Remote Device Management Services

confirmedPrivateTransfer	[18] ConfirmedPrivateTransfer-ACK,
--------------------------	------------------------------------

-- Virtual Terminal Services

vtOpen	[21] VT-Open-ACK,
vtData	[23] VT-Data-ACK,

-- Security Services

authenticate	[24] Authenticate-ACK
--------------	-----------------------

-- Context-specific tags 3..29 are NOT used in the encoding. The tag number is transferred as the service-ACK-choice parameter in the BACnet-ComplexACK-PDU.

--

-- Other services to be added as they are defined. All choice values in this production are reserved for definition by ASHRAE. Proprietary extensions are made by using the ConfirmedPrivateTransfer service.

-- See Clause 23.

}

\*\*\*\*\* Confirmed Alarm and Event Services \*\*\*\*\*

**AcknowledgeAlarm-Request ::= SEQUENCE {**

acknowledgingProcessIdentifier	[0] Unsigned32,
eventObjectIdentifier	[1] BACnetObjectIdentifier,
eventStateAcknowledged	[2] BACnetEventState,
timeStamp	[3] BACnetTimeStamp,
acknowledgmentSource	[4] CharacterString,
timeOfAcknowledgment	[5] BACnetTimeStamp
}	

**ConfirmedCOVNotification-Request ::= SEQUENCE {**

subscriberProcessIdentifier	[0] Unsigned32,
initiatingDeviceIdentifier	[1] BACnetObjectIdentifier,
monitoredObjectIdentifier	[2] BACnetObjectIdentifier,
timeRemaining	[3] Unsigned,
listOfValues	[4] SEQUENCE OF BACnetPropertyValue
}	

```

ConfirmedEventNotification-Request ::= SEQUENCE {
    processIdentifier [0] Unsigned32,
    initiatingDeviceIdentifier [1] BACnetObjectIdentifier,
    eventObjectIdentifier [2] BACnetObjectIdentifier,
    timeStamp [3] BACnetTimeStamp,
    notificationClass [4] Unsigned,
    priority [5] Unsigned8,
    eventType [6] BACnetEventType,
    messageText [7] CharacterString OPTIONAL,
    notifyType [8] BACnetNotifyType,
    ackRequired [9] BOOLEAN OPTIONAL,
    fromState [10] BACnetEventState OPTIONAL,
    toState [11] BACnetEventState,
    eventValues [12] BACnetNotificationParameters OPTIONAL
}

```

**GetAlarmSummary-ACK** ::= SEQUENCE OF SEQUENCE {

```
objectIdentifier      BACnetObjectIdentifier,  
alarmState          BACnetEventState,  
acknowledgedTransitions BACnetEventTransitionBits  
}
```

**GetEnrollmentSummary-Request ::= SEQUENCE {**

```

acknowledgmentFilter
enrollmentFilter
eventStateFilter
eventTypeFilter
priorityFilter
notificationClassFilter
}

[0] ENUMERATED {
    all          (0),
    acked        (1),
    not-acked   (2)
},
[1] BACnetRecipientProcess OPTIONAL,
[2] ENUMERATED {
    offnormal    (0),
    fault        (1),
    normal       (2),
    all          (3),
    active       (4)
} OPTIONAL,
[3] BACnetEventType OPTIONAL,
[4] SEQUENCE {
    minPriority  [0] Unsigned8,
    maxPriority  [1] Unsigned8
} OPTIONAL,
[5] Unsigned OPTIONAL
}

```

**GetEnrollmentSummary-ACK** ::= SEQUENCE OF SEQUENCE {

```

eventSummary ACK ::= SEQUENCE OF SEQUENCE {
    objectIdentifier      BACnetObjectIdentifier,
    eventType            BACnetEventType,
    eventState           BACnetEventState,
    priority              Unsigned8,
    notificationClass     Unsigned OPTIONAL
}

```

```
GetEventInformation-Request ::= SEQUENCE {
    lastReceivedObjectIdentifier      [0] BACnetObjectIdentifier OPTIONAL
}
```

**GetEventInformation-ACK ::= SEQUENCE {**

- listOfEventSummaries [0] SEQUENCE OF SEQUENCE {
  - objectIdentifier [0] BACnetObjectIdentifier,
  - eventState [1] BACnetEventState,
  - acknowledgedTransitions [2] BACnetEventTransitionBits,
  - eventTimeStamps [3] SEQUENCE SIZE (3) OF BACnetTimeStamp,
  - notifyType [4] BACnetNotifyType,
  - eventEnable [5] BACnetEventTransitionBits,
  - eventPriorities [6] SEQUENCE SIZE (3) OF Unsigned
 },
- moreEvents [1] BOOLEAN

}

**LifeSafetyOperation-Request ::= SEQUENCE {**

- requestingProcessIdentifier [0] Unsigned32,
- requestingSource [1] CharacterString,
- request [2] BACnetLifeSafetyOperation,
- objectIdentifier [3] BACnetObjectIdentifier OPTIONAL

}

**SubscribeCOV-Request ::= SEQUENCE {**

- subscriberProcessIdentifier [0] Unsigned32,
- monitoredObjectIdentifier [1] BACnetObjectIdentifier,
- issueConfirmedNotifications [2] BOOLEAN OPTIONAL,
- lifetime [3] Unsigned OPTIONAL

}

**SubscribeCOVProperty-Request ::= SEQUENCE {**

- subscriberProcessIdentifier [0] Unsigned32,
- monitoredObjectIdentifier [1] BACnetObjectIdentifier,
- issueConfirmedNotifications [2] BOOLEAN OPTIONAL,
- lifetime [3] Unsigned OPTIONAL,
- monitoredPropertyIdentifier [4] BACnetPropertyReference,
- covIncrement [5] REAL OPTIONAL

}

\*\*\*\*\* Confirmed File Access Services \*\*\*\*\*

**AtomicReadFile-Request ::= SEQUENCE {**

- fileIdentifier BACnetObjectIdentifier,
- accessMethod CHOICE {
  - streamAccess [0] SEQUENCE {
    - fileStartPosition INTEGER,
    - requestedOctetCount Unsigned
 },
  - recordAccess [1] SEQUENCE {
    - fileStartRecord INTEGER,
    - requestedRecordCount Unsigned
 }
}

**AtomicReadFile-ACK** ::= SEQUENCE {  
 endOfFile BOOLEAN,  
 accessMethod CHOICE {  
 streamAccess [0] SEQUENCE {  
 fileStartPosition INTEGER,  
 fileData OCTET STRING  
 },  
 recordAccess [1] SEQUENCE {  
 fileStartRecord INTEGER,  
 returnedRecordCount Unsigned,  
 fileRecordData SEQUENCE OF OCTET STRING  
 }  
 }  
}

**AtomicWriteFile-Request** ::= SEQUENCE {  
 fileIdentifier BACnetObjectIdentifier,  
 accessMethod CHOICE {  
 streamAccess [0] SEQUENCE {  
 fileStartPosition INTEGER,  
 fileData OCTET STRING  
 },  
 recordAccess [1] SEQUENCE {  
 fileStartRecord INTEGER,  
 recordCount Unsigned,  
 fileRecordData SEQUENCE OF OCTET STRING  
 }  
 }  
}

**AtomicWriteFile-ACK** ::= CHOICE {  
 fileStartPosition [0] INTEGER,  
 fileStartRecord [1] INTEGER  
}

\*\*\*\*\* Confirmed Object Access Services \*\*\*\*\*

**AddListElement-Request** ::= SEQUENCE {  
 objectIdentifier [0] BACnetObjectIdentifier,  
 propertyIdentifier [1] BACnetPropertyIdentifier,  
 propertyArrayIndex [2] Unsigned OPTIONAL, -- used only with array datatype  
 listOfElements [3] ABSTRACT-SYNTAX.&Type  
}

**CreateObject-Request** ::= SEQUENCE {  
 objectSpecifier [0] CHOICE {  
 objectType [0] BACnetObjectType,  
 objectIdentifier [1] BACnetObjectIdentifier  
 },  
 listOfInitialValues [1] SEQUENCE OF BACnetPropertyValue OPTIONAL  
}

**CreateObject-ACK** ::= BACnetObjectIdentifier

**DeleteObject-Request** ::= SEQUENCE {  
objectIdentifier BACnetObjectIdentifier  
}

**ReadProperty-Request** ::= SEQUENCE {  
objectIdentifier [0] BACnetObjectIdentifier,  
propertyIdentifier [1] BACnetPropertyIdentifier,  
propertyArrayIndex [2] Unsigned OPTIONAL --used only with array datatype  
-- if omitted with an array the entire array is referenced  
}

**ReadProperty-ACK** ::= SEQUENCE {  
objectIdentifier [0] BACnetObjectIdentifier,  
propertyIdentifier [1] BACnetPropertyIdentifier,  
propertyArrayIndex [2] Unsigned OPTIONAL,--used only with array datatype  
-- if omitted with an array the entire array is referenced  
propertyValue [3] ABSTRACT-SYNTAX.&Type  
}

**ReadPropertyConditional-Request** ::= SEQUENCE {  
objectSelectionCriteria [0] SEQUENCE {  
selectionLogic [0] ENUMERATED {  
and (0),  
or (1),  
all (2)  
},  
listOfSelectionCriteria [1] SEQUENCE OF SEQUENCE{  
propertyIdentifier [0] BACnetPropertyIdentifier,  
propertyArrayIndex [1] Unsigned OPTIONAL,  
relationSpecifier [2] ENUMERATED {  
equal (0),  
not-equal (1),  
less-than (2),  
greater-than (3),  
less-than-or-equal (4),  
greater-than-or-equal (5)  
},  
comparisonValue [3] ABSTRACT-SYNTAX.&Type  
} OPTIONAL  
},  
listOfPropertyReferences [1] SEQUENCE OF BACnetPropertyReference OPTIONAL  
}

**ReadPropertyConditional-ACK** ::= SEQUENCE {  
listOfReadAccessResults SEQUENCE OF ReadAccessResult OPTIONAL  
}

**ReadPropertyMultiple-Request** ::= SEQUENCE {  
listOfReadAccessSpecs SEQUENCE OF ReadAccessSpecification  
}

**ReadPropertyMultiple-ACK** ::= SEQUENCE {  
listOfReadAccessResults SEQUENCE OF ReadAccessResult  
}

```

ReadRange-Request ::= SEQUENCE {
    objectIdentifier [0] BACnetObjectIdentifier,
    propertyIdentifier [1] BACnetPropertyIdentifier,
    propertyArrayIndex [2] Unsigned OPTIONAL, -- used only with array datatype
    range CHOICE {
        byPosition [3] SEQUENCE {
            referenceIndex Unsigned,
            count INTEGER
        },
        -- context tag 4 is deprecated
        -- context tag 5 is deprecated
        bySequenceNumber [6] SEQUENCE {
            referenceIndex Unsigned,
            count INTEGER
        },
        byTime [7] SEQUENCE {
            referenceTime BACnetDateTime,
            count INTEGER
        }
    } OPTIONAL
}

ReadRange-ACK ::= SEQUENCE {
    objectIdentifier [0] BACnetObjectIdentifier,
    propertyIdentifier [1] BACnetPropertyIdentifier,
    propertyArrayIndex [2] Unsigned OPTIONAL, -- used only with array datatype
    resultFlags [3] BACnetResultFlags,
    itemCount [4] Unsigned,
    itemData [5] SEQUENCE OF ABSTRACT-SYNTAX.&TYPE,
    firstSequenceNumber [6] Unsigned32 OPTIONAL -- used only if 'Item Count' > 0 and the request was either of
                                                -- type 'By Sequence Number' or 'By Time'
}

RemoveListElement-Request ::= SEQUENCE {
    objectIdentifier [0] BACnetObjectIdentifier,
    propertyIdentifier [1] BACnetPropertyIdentifier,
    propertyArrayIndex [2] Unsigned OPTIONAL, --used only with array datatypes
    listOfElements [3] ABSTRACT-SYNTAX.&Type
}

WriteProperty-Request ::= SEQUENCE {
    objectIdentifier [0] BACnetObjectIdentifier,
    propertyIdentifier [1] BACnetPropertyIdentifier,
    propertyArrayIndex [2] Unsigned OPTIONAL, --used only with array datatype
                                                -- if omitted with an array the entire
                                                -- array is referenced
    propertyValue [3] ABSTRACT-SYNTAX.&Type,
    priority [4] Unsigned8 (1..16) OPTIONAL --used only when property is commandable
}

WritePropertyMultiple-Request ::= SEQUENCE {
    listOfwriteAccessSpecifications SEQUENCE OF WriteAccessSpecification
}

```

\*\*\*\*\* Confirmed Remote Device Management Services \*\*\*\*\*

**DeviceCommunicationControl-Request ::= SEQUENCE {**

- timeDuration [0] Unsigned16 OPTIONAL,
- enable-disable [1] ENUMERATED {
  - enable (0),
  - disable (1),
  - disable-initiation (2)
},
- password [2] CharacterString (SIZE(1..20)) OPTIONAL

**}**

**ConfirmedPrivateTransfer-Request ::= SEQUENCE {**

- vendorID [0] Unsigned,
- serviceNumber [1] Unsigned,
- serviceParameters [2] ABSTRACT-SYNTAX.&Type OPTIONAL

**}**

**ConfirmedPrivateTransfer-ACK ::= SEQUENCE {**

- vendorID [0] Unsigned,
- serviceNumber [1] Unsigned,
- resultBlock [2] ABSTRACT-SYNTAX.&Type OPTIONAL

**}**

**ConfirmedTextMessage-Request ::= SEQUENCE {**

- textMessageSourceDevice [0] BACnetObjectIdentifier,
- messageClass [1] CHOICE {
  - numeric [0] Unsigned,
  - character [1] CharacterString
} OPTIONAL,
- messagePriority [2] ENUMERATED {
  - normal (0),
  - urgent (1)
},
- message [3] CharacterString

**}**

**ReinitializeDevice-Request ::= SEQUENCE {**

- reinitializedStateOfDevice [0] ENUMERATED {
  - coldstart (0),
  - warmstart (1),
  - startbackup (2),
  - endbackup (3),
  - startrestore (4),
  - endrestore (5),
  - abortrestore (6)
},
- password [1] CharacterString (SIZE (1..20)) OPTIONAL

**}**

\*\*\*\*\* Confirmed Virtual Terminal Services \*\*\*\*\*

**VT-Open-Request ::= SEQUENCE {**

- vtClass BACnetVTClass,
- localVTSesessionIdentifier Unsigned8

**}**

**VT-Open-ACK** ::= SEQUENCE {  
     remoteVTSessionIdentifier                  Unsigned8  
     }

**VT-Close-Request** ::= SEQUENCE {  
     listOfRemoteVTSessionIdentifiers    SEQUENCE OF Unsigned8  
     }

**VT-Data-Request** ::= SEQUENCE {  
     vtSessionIdentifier                  Unsigned8,  
     vtNewData                              OCTET STRING,  
     vtDataFlag                            Unsigned (0..1)  
     }

**VT-Data-ACK** ::= SEQUENCE {  
     allNewDataAccepted                [0] BOOLEAN,  
     acceptedOctetCount                [1] Unsigned OPTIONAL --present only if allNewDataAccepted = FALSE  
     }

\*\*\*\*\* Confirmed Security Services \*\*\*\*\*

**Authenticate-Request** ::= SEQUENCE {  
     pseudoRandomNumber                [0] Unsigned32,  
     expectedInvokeID                 [1] Unsigned8 OPTIONAL,  
     operatorName                      [2] CharacterString OPTIONAL,  
     operatorPassword                 [3] CharacterString (SIZE (1..20)) OPTIONAL,  
     startEncipheredSession            [4] BOOLEAN OPTIONAL  
     }

**Authenticate-ACK** ::= SEQUENCE {  
     modifiedRandomNumber            Unsigned32  
     }

**RequestKey-Request** ::= SEQUENCE {  
     requestingDeviceIdentifier      BACnetObjectIdentifier,  
     requestingDeviceAddress          BACnetAddress,  
     remoteDeviceIdentifier          BACnetObjectIdentifier,  
     remoteDeviceAddress             BACnetAddress  
     }

\*\*\*\*\* Unconfirmed Request Productions \*\*\*\*\*

**BACnetUnconfirmedServiceChoice** ::= ENUMERATED {  
     i-Am                                (0),  
     i-Have                            (1),  
     unconfirmedCOVNotification      (2),  
     unconfirmedEventNotification    (3),  
     unconfirmedPrivateTransfer      (4),  
     unconfirmedTextMessage          (5),  
     timeSynchronization             (6),  
     who-Has                           (7),  
     who-Is                            (8),  
     utcTimeSynchronization          (9)  
     }

-- Other services to be added as they are defined. All choice values in this production are reserved for definition by

-- ASHRAE. Proprietary extensions are made by using the UnconfirmedPrivateTransfer service. See Clause 23.  
**BACnet-Unconfirmed-Service-Request** ::= CHOICE {

i-Am	[0] I-Am-Request,
i-Have	[1] I-Have-Request,
unconfirmedCOVNotification	[2] UnconfirmedCOVNotification-Request,
unconfirmedEventNotification	[3] UnconfirmedEventNotification-Request,
unconfirmedPrivateTransfer	[4] UnconfirmedPrivateTransfer-Request,
unconfirmedTextMessage	[5] UnconfirmedTextMessage-Request,
timeSynchronization	[6] TimeSynchronization-Request,
who-Has	[7] Who-Has-Request,
who-Is	[8] Who-Is-Request,
utcTimeSynchronization	[9] UTCTimeSynchronization-Request
}	

-- Context-specific tags 0..8 are NOT used in the encoding. The tag number is transferred as the service-choice parameter  
-- in the BACnet-Unconfirmed-Request-PDU.

--  
-- Other services to be added as they are defined. All choice values in this production are reserved for definition by  
-- ASHRAE. Proprietary extensions are made by using the UnconfirmedPrivateTransfer service.  
-- See Clause 23.

\*\*\*\*\* Unconfirmed Alarm and Event Services \*\*\*\*\*

**UnconfirmedCOVNotification-Request** ::= SEQUENCE {  
  subscriberProcessIdentifier [0] Unsigned32,  
  initiatingDeviceIdentifier [1] BACnetObjectIdentifier,  
  monitoredObjectIdentifier [2] BACnetObjectIdentifier,  
  timeRemaining [3] Unsigned,  
  listOfValues [4] SEQUENCE OF BACnetPropertyValue  
}

**UnconfirmedEventNotification-Request** ::= SEQUENCE {  
  processIdentifier [0] Unsigned32,  
  initiatingDeviceIdentifier [1] BACnetObjectIdentifier,  
  eventObjectIdentifier [2] BACnetObjectIdentifier,  
  timeStamp [3] BACnetTimeStamp,  
  notificationClass [4] Unsigned,  
  priority [5] Unsigned8,  
  eventType [6] BACnetEventType,  
  messageText [7] CharacterString OPTIONAL,  
  notifyType [8] BACnetNotifyType,  
  ackRequired [9] BOOLEAN OPTIONAL,  
  fromState [10] BACnetEventState OPTIONAL,  
  toState [11] BACnetEventState,  
  eventValues [12] BACnetNotificationParameters OPTIONAL  
}

\*\*\*\*\* Unconfirmed Remote Device Management Services \*\*\*\*\*

**I-Am-Request** ::= SEQUENCE {  
  iAmDeviceIdentifier BACnetObjectIdentifier,  
  maxAPDULengthAccepted Unsigned,  
  segmentationSupported BACnetSegmentation,  
  vendorID Unsigned  
}

**I-Have-Request** ::= SEQUENCE {  
 deviceIdentifier BACnetObjectIdentifier,  
 objectIdentifier BACnetObjectIdentifier,  
 objectName CharacterString  
 }

**UnconfirmedPrivateTransfer-Request** ::= SEQUENCE {  
 vendorID [0] Unsigned,  
 serviceNumber [1] Unsigned,  
 serviceParameters [2] ABSTRACT-SYNTAX.&Type OPTIONAL  
 }

**UnconfirmedTextMessage-Request** ::= SEQUENCE {  
 textMessageSourceDevice [0] BACnetObjectIdentifier,  
 messageClass [1] CHOICE {  
 numeric [0] Unsigned,  
 character [1] CharacterString  
 } OPTIONAL,  
 messagePriority [2] ENUMERATED {  
 normal (0),  
 urgent (1)  
 },  
 message [3] CharacterString  
 }

**TimeSynchronization-Request** ::= SEQUENCE {  
 time BACnetDateTime  
 }

**UTCTimeSynchronization-Request** ::= SEQUENCE {  
 time BACnetDateTime  
 }

**Who-Has-Request** ::= SEQUENCE {  
 limits SEQUENCE {  
 deviceInstanceRangeLowLimit [0] Unsigned (0..4194303),  
 deviceInstanceRangeHighLimit [1] Unsigned (0..4194303)  
 } OPTIONAL,  
 object CHOICE {  
 objectIdentifier [2] BACnetObjectIdentifier,  
 objectName [3] CharacterString  
 }  
 }

**Who-Is-Request** ::= SEQUENCE {  
 deviceInstanceRangeLowLimit [0] Unsigned (0..4194303) OPTIONAL, -- must be used as a pair, see 16.10  
 deviceInstanceRangeHighLimit [1] Unsigned (0..4194303) OPTIONAL -- must be used as a pair, see 16.10  
 }

\*\*\*\*\* Error Productions \*\*\*\*\*

**BACnetAbortReason** ::= ENUMERATED {

other	(0),
buffer-overflow	(1),
invalid-apdu-in-this-state	(2),
preempted-by-higher-priority-task	(3),
segmentation-not-supported	(4),
...	

}

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values 64-255

-- may be used by others subject to the procedures and constraints described in Clause 23.

**BACnet>Error** ::= CHOICE {

other	[127] Error,
-------	--------------

-- The remaining choices in this production represent the Result(-) parameters

-- defined for each confirmed service.

-- Alarm and Event Services

acknowledgeAlarm	[0] Error,
confirmedCOVNotification	[1] Error,
confirmedEventNotification	[2] Error,
getAlarmSummary	[3] Error,
getEnrollmentSummary	[4] Error,
getEventInformation	[29] Error,
subscribeCOV	[5] Error,
subscribeCOVProperty	[28] Error,
lifeSafetyOperation	[27] Error,

-- File Access Services

atomicReadFile	[6] Error,
atomicWriteFile	[7] Error,

-- Object Access Services

addListElement	[8] ChangeList-Error,
removeListElement	[9] ChangeList-Error,
createObject	[10] CreateObject-Error,
deleteObject	[11] Error,
readProperty	[12] Error,
readPropertyConditional	[13] Error,
readPropertyMultiple	[14] Error,
readRange	[26] Error,
writeProperty	[15] Error,
writePropertyMultiple	[16] WritePropertyMultiple-Error,

-- Remote Device Management Services

deviceCommunicationControl	[17] Error,
confirmedPrivateTransfer	[18] ConfirmedPrivateTransfer-Error,
confirmedTextMessage	[19] Error,
reinitializeDevice	[20] Error,

-- Virtual Terminal Services

vtOpen	[21] Error,
vtClose	[22] VTClose-Error,
vtData	[23] Error,

-- Security Services  
 authenticate [24] Error,  
 requestKey [25] Error

-- Services added after 1995  
 -- readRange [26] see Object Access Services  
 -- lifeSafetyOperation [27] see Alarm and Event Services  
 -- subscribeCOVProperty [28] see Alarm and Event Services  
 -- getEventInformation [29] see Alarm and Event Services  
 }

-- Context-specific tags 0..29 and 127 are NOT used in the encoding. The tag number is transferred as the error-choice parameter in the BACnet-Error-PDU.

--  
 -- Other services to be added as they are defined. All choice values in this production are reserved for definition by ASHRAE. See Clause 23.

**BACnetRejectReason ::= ENUMERATED {**

other	(0),
buffer-overflow	(1),
inconsistent-parameters	(2),
invalid-parameter-data-type	(3),
invalid-tag	(4),
missing-required-parameter	(5),
parameter-out-of-range	(6),
too-many-arguments	(7),
undefined-enumeration	(8),
unrecognized-service	(9),
...	

**}**

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values 64-255  
 -- may be used by others subject to the procedures and constraints described in Clause 23.

**ChangeList-Error ::= SEQUENCE {**

errorType	[0] Error,
firstFailedElementNumber	[1] Unsigned

**}**

**CreateObject-Error ::= SEQUENCE {**

errorType	[0] Error,
firstFailedElementNumber	[1] Unsigned

**}**

**ConfirmedPrivateTransfer-Error ::= SEQUENCE {**

errorType	[0] Error,
vendorID	[1] Unsigned,
serviceNumber	[2] Unsigned,
errorParameters	[3] ABSTRACT-SYNTAX.&Type OPTIONAL

**}**

**Error ::= SEQUENCE {**

-- NOTE: The valid combinations of error-class and error-code are defined in Clause 18.

error-class	ENUMERATED {
	device (0),
	object (1),
	property (2),
	resources (3),
	security (4),
	services (5),
	vt (6),
	communication (7),
	...
	},

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values

-- 64-65535 may be used by others subject to the procedures and constraints described  
-- in Clause 23.

error-code	ENUMERATED {
	other (0),
	abort-buffer-overflow (51),
	abort-invalid-apdu-in-this-state (52),
	abort-preempted-by-higher-priority-task (53),
	abort-segmentation-not-supported (54),
	abort-proprietary (55),
	abort-other (56),
	authentication-failed (1),
	character-set-not-supported (41),
	communication-disabled (83),
	configuration-in-progress (2),
	datatype-not-supported (47),
	device-busy (3),
	duplicate-name (48),
	duplicate-object-id (49),
	dynamic-creation-not-supported (4),
	file-access-denied (5),
	incompatible-security-levels (6),
	inconsistent-parameters (7),
	inconsistent-selection-criterion (8),
	invalid-array-index (42),
	invalid-configuration-data (46),
	invalid-data-type (9),
	invalid-event-state (73),
	invalid-file-access-method (10),
	invalid-file-start-position (11),
	invalid-operator-name (12),
	invalid-parameter-data-type (13),
	invalid-tag, (57),
	invalid-time-stamp (14),
	key-generation-error (15),
	log-buffer-full (75),
	logged-value-purged (76),
	missing-required-parameter (16),
	network-down (58),
	no-alarm-configured (74),
	no-objects-of-specified-type (17),
	no-property-specified (77),

no-space-for-object	(18),
no-space-to-add-list-element	(19),
no-space-to-write-property	(20),
no-vt-sessions-available	(21),
not-configured-for-triggered-logging	(78),
object-deletion-not-permitted	(23),
object-identifier-already-exists	(24),
operational-problem	(25),
optional-functionality-not-supported	(45),
password-failure	(26),
property-is-not-a-list	(22),
property-is-not-an-array	(50),
read-access-denied	(27),
reject-buffer-overflow	(59),
reject-inconsistent-parameters	(60),
reject-invalid-parameter-data-type	(61),
reject-invalid-tag	(62),
reject-missing-required-parameter	(63),
reject-parameter-out-of-range	(64),
reject-too-many-arguments	(65),
reject-undefined-enumeration	(66),
reject-unrecognized-service	(67),
reject-proprietary	(68),
reject-other	(69),
security-not-supported	(28),
service-request-denied	(29),
timeout	(30),
unknown-object	(31),
unknown-property	(32),
-- this enumeration was removed	(33),
unknown-vt-class	(34),
unknown-vt-session	(35),
unsupported-object-type	(36),
value-out-of-range	(37),
vt-session-already-closed	(38),
vt-session-termination-failure	(39),
write-access-denied	(40),
-- see character-set-not-supported	(41),
-- see invalid-array-index	(42),
cov-subscription-failed	(43),
not-cov-property	(44),
-- see optional-functionality-not-supported	(45),
-- see invalid-configuration-data	(46),
-- see datatype-not-supported	(47),
-- see duplicate-name	(48),
-- see duplicate-object-id	(49),
-- see property-is-not-an-array	(50),
-- see abort-buffer-overflow	(51),
-- see abort-invalid-apdu-in-this-state	(52),
-- see abort-preempted-by-higher-priority-task	(53),
-- see abort-segmentation-not-supported	(54),
-- see abort-proprietary	(55),
-- see abort-other	(56),
-- see invalid-tag	(57),
-- see network-down	(58),
-- see reject-buffer-overflow	(59),

```

-- see reject-inconsistent-parameters          (60),
-- see reject-invalid-parameter-data-type      (61),
-- see reject-invalid-tag                      (62),
-- see reject-missing-required-parameter       (63),
-- see reject-parameter-out-of-range          (64),
-- see reject-too-many-arguments              (65),
-- see reject-undefined-enumeration          (66),
-- see reject-unrecognized-service            (67),
-- see reject-proprietary                   (68),
-- see reject-other                         (69),
-- see unknown-device                      (70),
-- see unknown-route                       (71),
-- see value-not-initialized             (72),
-- see invalid-event-state                (73),
-- see no-alarm-configured               (74),
-- see log-buffer-full                  (75),
-- see logged-value-purged              (76),
-- see no-property-specified            (77),
-- see not-configured-for-triggered-logging (78),
-- enumeration values 79 through 82 are reserved for future addenda
-- see communication-disabled           (83),
...
}
-- Enumerated values 0-255 are reserved for definition by ASHRAE. Enumerated values
-- 256-65535 may be used by others subject to the procedures and constraints described
-- in Clause 23.
}

```

**WritePropertyMultiple-Error ::= SEQUENCE {**

errorType	[0] Error,
firstFailedWriteAttempt	[1] BACnetObjectPropertyReference

**}**

**VTClose-Error ::= SEQUENCE {**

errorType	[0] Error,
listOfVTSessionIdentifiers	[1] SEQUENCE OF Unsigned8 OPTIONAL

**}**

\*\*\*\*\* Application Types \*\*\*\*\*

-- The following productions are the definitions of the Application datatypes.

-- See 20.2.1.4.

-- **NULL** [APPLICATION 0], equivalent to [UNIVERSAL 5]

-- **BOOLEAN** [APPLICATION 1], equivalent to [UNIVERSAL 1]

**Unsigned ::=** [APPLICATION 2] INTEGER (0..MAX)

**Unsigned8 ::=** Unsigned (0..255)

**Unsigned16 ::=** Unsigned (0..65535)

**Unsigned32 ::=** Unsigned (0..4294967295)

-- **INTEGER** [APPLICATION 3], equivalent to [UNIVERSAL 2]

-- **REAL** [APPLICATION 4], equivalent to [UNIVERSAL 9] ANSI/IEEE-754 single precision floating point

**Double** ::= [APPLICATION 5] OCTET STRING (SIZE(8)) -- ANSI/IEEE-754 double precision floating point

-- **OCTET STRING** [APPLICATION 6], equivalent to [UNIVERSAL 4]

**CharacterString** ::= [APPLICATION 7] OCTET STRING -- see 20.2.9 for supported types

-- **BIT STRING** [APPLICATION 8], equivalent to [UNIVERSAL 3]

-- **ENUMERATED** [APPLICATION 9], equivalent to [UNIVERSAL 10]

**Date** ::= [APPLICATION 10] OCTET STRING (SIZE(4)) -- see 20.2.12

-- first octet	year minus 1900	X'FF' = unspecified
-- second octet	month (1.. 14)	1 = January 13 = odd months 14 = even months
--		X'FF' = unspecified
-- third octet	day of month	(1..32), 32 = last day of month
-- fourth octet	day of week	(1..7) 1 = Monday 7 = Sunday
--		X'FF' = unspecified

**Time** ::= [APPLICATION 11] OCTET STRING (SIZE(4)) -- see 20.2.13

-- first octet	hour	(0..23), (X'FF') = unspecified
-- second octet	minute	(0..59), (X'FF') = unspecified
-- third octet	second	(0..59), (X'FF') = unspecified
-- fourth octet	hundredths	(0..99), (X'FF') = unspecified

**BACnetObjectIdentifier** ::= [APPLICATION 12] OCTET STRING (SIZE(4)) -- see 20.2.14

\*\*\*\*\* Base Types \*\*\*\*\*

**BACnetAccumulatorRecord** ::= SEQUENCE {  
 timestamp [0] BACnetDateTime,  
 presentValue [1] Unsigned,  
 accumulatedValue [2] Unsigned,  
 accumulatorStatus [3] ENUMERATED {  
 normal (0),  
 starting (1),  
 recovered (2),  
 abnormal (3),  
 failed (4)  
 }  
}

**BACnetAction** ::= ENUMERATED {  
 direct (0),  
 reverse (1)  
}

**BACnetActionCommand** ::= SEQUENCE {  
 deviceIdentifier [0] BACnetObjectIdentifier OPTIONAL,

```
objectIdentifier [1] BACnetObjectIdentifier,  
propertyIdentifier [2] BACnetPropertyIdentifier,  
propertyArrayIndex [3] Unsigned OPTIONAL, --used only with array datatype  
propertyValue [4] ABSTRACT-SYNTAX.&Type,  
priority [5] Unsigned (1..16) OPTIONAL, --used only when property is commandable  
postDelay [6] Unsigned OPTIONAL,  
quitOnFailure [7] BOOLEAN,  
writeSuccessful [8] BOOLEAN  
}
```

```
BACnetActionList ::= SEQUENCE{
    action [0] SEQUENCE OF BACnetActionCommand
}
```

```
BACnetAddress ::= SEQUENCE {
    network-number  Unsigned16, -- A value of 0 indicates the local network
    mac-address      OCTET STRING -- A string of length 0 indicates a broadcast
}
```

```
BACnetAddressBinding ::= SEQUENCE {
    deviceObjectIdentifier      BACnetObjectIdentifier,
    deviceAddress                BACnetAddress
}
```

```
BACnetBinaryPV ::= ENUMERATED {  
    inactive          (0),  
    active           (1)  
}
```

```
BACnetCalendarEntry ::= CHOICE {  
    date          [0] Date,  
    dateRange     [1] BACnetDateRange,  
    weekNDay      [2] BACnetWeekNDay  
}
```

```
BACnetClientCOV ::= CHOICE {  
    real-increment    REAL,  
    default-incrementNULL  
}
```

```

BACnetCOVSubscription ::= SEQUENCE {
    recipient                      [0] BACnetRecipientProcess,
    monitoredPropertyReference     [1] BACnetObjectPropertyReference,
    issueConfirmedNotifications   [2] BOOLEAN,
    timeRemaining                  [3] Unsigned,
    covIncrement                   [4] REAL OPTIONAL      -- used only with monitored
                                                -- properties with a datatype of REAL
}

```

```
BACnetDailySchedule ::= SEQUENCE {
    day-schedule      [0] SEQUENCE OF BACnetTimeValue
}
```

**BACnetDateRange** ::= SEQUENCE {  
    startDate              Date,  
    endDate              Date}

}

**BACnetDateTime** ::= SEQUENCE {

date	Date,
time	Time

}

**BACnetDaysOfWeek** ::= BIT STRING {

monday	(0),
tuesday	(1),
wednesday	(2),
thursday	(3),
friday	(4),
saturday	(5),
sunday	(6)

}

**BACnetDestination** ::= SEQUENCE {

validDays	BACnetDaysOfWeek,
fromTime	Time,
toTime	Time,
recipient	BACnetRecipient,
processIdentifier	Unsigned32,
issueConfirmedNotifications	BOOLEAN,
transitions	BACnetEventTransitionBits

}

**BACnetDeviceObjectPropertyReference** ::= SEQUENCE {

objectIdentifier	[0]	BACnetObjectIdentifier,
propertyIdentifier	[1]	BACnetPropertyIdentifier,
propertyArrayIndex	[2]	Unsigned OPTIONAL, -- used only with array datatype -- if omitted with an array then -- the entire array is referenced
deviceIdentifier	[3]	BACnetObjectIdentifier OPTIONAL

}

**BACnetDeviceObjectPropertyValue** ::= SEQUENCE {

deviceIdentifier	[0]	BACnetObjectIdentifier,
objectIdentifier	[1]	BACnetObjectIdentifier,
propertyIdentifier	[2]	BACnetPropertyIdentifier,
arrayIndex	[3]	Unsigned OPTIONAL,
value	[4]	ABSTRACT-SYNTAX.&Type

}

**BACnetDeviceObjectReference** ::= SEQUENCE {

deviceIdentifier	[0]	BACnetObjectIdentifier OPTIONAL,
objectIdentifier	[1]	BACnetObjectIdentifier

}

**BACnetDeviceStatus** ::= ENUMERATED {  
 operational (0),  
 operational-read-only (1),  
 download-required (2),  
 download-in-progress (3),  
 non-operational (4),  
 backup-in-progress (5),  
 ...  
 }

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values  
-- 64-65535 may be used by others subject to the procedures and constraints described  
-- in Clause 23.

**BACnetDoorAlarmState** ::= ENUMERATED {  
 normal (0),  
 alarm (1),  
 door-open-too-long (2),  
 forced-open (3),  
 tamper (4),  
 door-fault (5),  
 lock-down (6),  
 free-access (7),  
 egress-open (8),  
 ...  
 }

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values  
-- 64-65535 may be used by others subject to the procedures and constraints described  
-- in Clause 23.

**BACnetDoorSecuredStatus** ::= ENUMERATED {  
 secured (0),  
 unsecured (1),  
 unknown (2)  
 }

**BACnetDoorStatus** ::= ENUMERATED {  
 closed (0),  
 opened (1),  
 unknown (2)  
 }

**BACnetDoorValue** ::= ENUMERATED {  
 lock (0),  
 unlock (1),  
 pulse-unlock (2),  
 extended-pulse-unlock (3)  
 }

**BACnetEngineeringUnits** ::= ENUMERATED {  
 -- Acceleration  
 meters-per-second-per-second (166),  
 -- Area  
 square-meters (0),  
 square-centimeters (116),  
 square-feet (1),  
 square-inches (115),

## --Currency

currency1	(105),
currency2	(106),
currency3	(107),
currency4	(108),
currency5	(109),
currency6	(110),
currency7	(111),
currency8	(112),
currency9	(113),
currency10	(114),

## --Electrical

milliamperes	(2),
amperes	(3),
amperes-per-meter	(167),
amperes-per-square-meter	(168),
ampere-square-meters	(169),
farads	(170),
henrys	(171),
ohms	(4),
ohm-meters	(172),
milliohms	(145),
kilohms	(122),
megohms	(123),
siemens	(173), -- 1 mho equals 1 siemens
siemens-per-meter	(174),
teslas	(175),
volts	(5),
millivolts	(124),
kilovolts	(6),
megavolts	(7),
volt-amperes	(8),
kilovolt-amperes	(9),
megavolt-amperes	(10),
volt-amperes-reactive	(11),
kilovolt-amperes-reactive	(12),
megavolt-amperes-reactive	(13),
volts-per-degree-Kelvin	(176),
volts-per-meter	(177),
degrees-phase	(14),
power-factor	(15),
webers	(178),

## --Energy

joules	(16),
kilojoules	(17),
kilojoules-per-kilogram	(125),
megajoules	(126),
watt-hours	(18),
kilowatt-hours	(19),
megawatt-hours	(146),
btus	(20),
kilo-btus	(147),
mega-btus	(148),

therms	(21),
ton-hours	(22),
<b>--Enthalpy</b>	
joules-per-kilogram-dry-air	(23),
kilojoules-per-kilogram-dry-air	(149),
megajoules-per-kilogram-dry-air	(150),
btus-per-pound-dry-air	(24),
btus-per-pound	(117),
<b>--Entropy</b>	
joules-per-degree-Kelvin	(127),
kilojoules-per-degree-Kelvin	(151),
megajoules-per-degree-Kelvin	(152),
joules-per-kilogram-degree-Kelvin	(128),
<b>-- Force</b>	
newton	(153),
<b>--Frequency</b>	
cycles-per-hour	(25),
cycles-per-minute	(26),
hertz	(27),
kilohertz	(129),
megahertz	(130),
per-hour	(131),
<b>--Humidity</b>	
grams-of-water-per-kilogram-dry-air	(28),
percent-relative-humidity	(29),
<b>--Length</b>	
millimeters	(30),
centimeters	(118),
meters	(31),
inches	(32),
feet	(33),
<b>--Light</b>	
candelas	(179),
candelas-per-square-meter	(180),
watts-per-square-foot	(34),
watts-per-square-meter	(35),
lumens	(36),
luxes	(37),
foot-candles	(38),
<b>--Mass</b>	
kilograms	(39),
pounds-mass	(40),
tons	(41),
<b>--Mass Flow</b>	
grams-per-second	(154),
grams-per-minute	(155),
kilograms-per-second	(42),

kilograms-per-minute	(43),
kilograms-per-hour	(44),
pounds-mass-per-second	(119),
pounds-mass-per-minute	(45),
pounds-mass-per-hour	(46),
tons-per-hour	(156),
 --Power	
milliwatts	(132),
watts	(47),
kilowatts	(48),
megawatts	(49),
btus-per-hour	(50),
kilo-btus-per-hour	(157),
horsepower	(51),
tons-refrigeration	(52),
 --Pressure	
pascals	(53),
hectopascals	(133),
kilopascals	(54),
millibars	(134),
bars	(55),
pounds-force-per-square-inch	(56),
centimeters-of-water	(57),
inches-of-water	(58),
millimeters-of-mercury	(59),
centimeters-of-mercury	(60),
inches-of-mercury	(61),
 --Temperature	
degrees-Celsius	(62),
degrees-Kelvin	(63),
degrees-Kelvin-per-hour	(181),
degrees-Kelvin-per-minute	(182),
degrees-Fahrenheit	(64),
degree-days-Celsius	(65),
degree-days-Fahrenheit	(66),
delta-degrees-Fahrenheit	(120),
delta-degrees-Kelvin	(121),
 --Time	
years	(67),
months	(68),
weeks	(69),
days	(70),
hours	(71),
minutes	(72),
seconds	(73),
hundredths-seconds	(158),
milliseconds	(159),
 --Torque	
newton-meters	(160),
 --Velocity	

millimeters-per-second	(161),
millimeters-per-minute	(162),
meters-per-second	(74),
meters-per-minute	(163),
meters-per-hour	(164),
kilometers-per-hour	(75),
feet-per-second	(76),
feet-per-minute	(77),
miles-per-hour	(78),
--Volume	
cubic-feet	(79),
cubic-meters	(80),
imperial-gallons	(81),
liters	(82),
us-gallons	(83),
--Volumetric Flow	
cubic-feet-per-second	(142),
cubic-feet-per-minute	(84),
cubic-meters-per-second	(85),
cubic-meters-per-minute	(165),
cubic-meters-per-hour	(135),
imperial-gallons-per-minute	(86),
liters-per-second	(87),
liters-per-minute	(88),
liters-per-hour	(136),
us-gallons-per-minute	(89),
--Other	
degrees-angular	(90),
degrees-Celsius-per-hour	(91),
degrees-Celsius-per-minute	(92),
degrees-Fahrenheit-per-hour	(93),
degrees-Fahrenheit-per-minute	(94),
joule-seconds	(183),
kilograms-per-cubic-meter	(186),
kilowatt-hours-per-square-meter	(137),
kilowatt-hours-per-square-foot	(138),
megajoules-per-square-meter	(139),
megajoules-per-square-foot	(140),
no-units	(95),
newton-seconds	(187),
newtons-per-meter	(188),
parts-per-million	(96),
parts-per-billion	(97),
percent	(98),
percent-obscuration-per-foot	(143),
percent-obscuration-per-meter	(144),
percent-per-second	(99),
per-minute	(100),
per-second	(101),
psi-per-degree-Fahrenheit	(102),
radians	(103),
radians-per-second	(184),
revolutions-per-minute	(104),
square-meters-per-Newton	(185),

watts-per-meter-per-degree-Kelvin (189),  
 watts-per-square-meter-degree-kelvin (141),  
 ... }

-- Enumerated values 0-255 are reserved for definition by ASHRAE. Enumerated values  
 -- 256-65535 may be used by others subject to the procedures and constraints described  
 -- in Clause 23. The last enumeration used in this version is 189.

**BACnetEventLogRecord** ::= SEQUENCE {  
 timestamp [0] BACnetDateTime,  
 logDatum [1] CHOICE {  
 log-status [0] BACnetLogStatus,  
 notification [1] ConfirmedEventNotification-Request,  
 time-change [2] REAL  
 }  
}

**BACnetEventParameter** ::= CHOICE {

-- These choices have a one-to-one correspondence with the Event\_Type enumeration with the exception of the  
 -- complex-event-type, which is used for proprietary event types.

change-of-bitstring	[0] SEQUENCE { time-delay [0] Unsigned, bitmask [1] BIT STRING, list-of-bitstring-values [2] SEQUENCE OF BIT STRING },
change-of-state	[1] SEQUENCE { time-delay [0] Unsigned, list-of-values [1] SEQUENCE OF BACnetPropertyStates },
change-of-value	[2] SEQUENCE { time-delay [0] Unsigned, cov-criteria [1] CHOICE { bitmask [0] BIT STRING, referenced-property-increment [1] REAL } },
command-failure	[3] SEQUENCE { time-delay [0] Unsigned, feedback-property-reference [1] BACnetDeviceObjectPropertyReference },
floating-limit	[4] SEQUENCE { time-delay [0] Unsigned, setpoint-reference [1] BACnetDeviceObjectPropertyReference, low-diff-limit [2] REAL, high-diff-limit [3] REAL, deadband [4] REAL },
out-of-range	[5] SEQUENCE { time-delay [0] Unsigned, low-limit [1] REAL, high-limit [2] REAL, deadband [3] REAL }

```

        },
-- context tag 7 is deprecated
change-of-life-safety [8] SEQUENCE {
    time-delay          [0] Unsigned,
    list-of-life-safety-alarm-values [1] SEQUENCE OF BACnetLifeSafetyState,
    list-of-alarm-values      [2] SEQUENCE OF BACnetLifeSafetyState,
    mode-property-reference [3] BACnetDeviceObjectPropertyReference
},
extended           [9] SEQUENCE {
    vendor-id          [0] Unsigned16,
    extended-event-type [1] Unsigned,
    parameters         [2] SEQUENCE OF CHOICE {
        null             NULL,
        real              REAL,
        integer           Unsigned,
        boolean            BOOLEAN,
        double             Double,
        octet              OCTET STRING,
        bitstring          BIT STRING,
        enum               ENUMERATED,
        reference          [0] BACnetDeviceObjectPropertyReference
    }
},
buffer-ready       [10] SEQUENCE {
    notification-threshold [0] Unsigned,
    previous-notification-count [1] Unsigned32
},
unsigned-range     [11] SEQUENCE {
    time-delay          [0] Unsigned,
    low-limit            [1] Unsigned,
    high-limit           [2] Unsigned
}
}

```

-- CHOICE [6] has been intentionally omitted. It parallels the complex-event-type CHOICE [6] of the  
 -- BACnetNotificationParameters production which was introduced to allow the addition of proprietary event  
 -- algorithms whose event parameters are not necessarily network-visible.

**BACnetEventState** ::= ENUMERATED {  
 normal (0),  
 fault (1),  
 offnormal (2),  
 high-limit (3),  
 low-limit (4),  
 life-safety-alarm (5),  
 ...  
}

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values  
 -- 64-65535 may be used by others subject to the procedures and constraints described  
 -- in Clause 23. The last enumeration used in this version is 5.

**BACnetEventTransitionBits** ::= BIT STRING {  
 to-offnormal (0),  
 to-fault (1),  
 to-normal (2)
}

```
BACnetEventType ::= ENUMERATED {
    change-of-bitstring      (0),
    change-of-state          (1),
    change-of-value          (2),
    command-failure         (3),
    floating-limit           (4),
    out-of-range             (5),
    -- complex-event-type    (6), see comment below
    -- context tag 7 is deprecated
    change-of-life-safety    (8),
    extended                 (9),
    buffer-ready              (10),
    unsigned-range            (11),
    ...
}
```

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values  
-- 64-65535 may be used by others subject to the procedures and constraints described  
-- in Clause 23. It is expected that these enumerated values will correspond to the use of the  
-- complex-event-type CHOICE [6] of the BACnetNotificationParameters production.  
-- The last enumeration used in this version is 11.

```
BACnetFileAccessMethod ::= ENUMERATED {
    record-access            (0),
    stream-access            (1)
}
```

```
BACnetLifeSafetyMode ::= ENUMERATED {
    off                      (0),
    on                       (1),
    test                     (2),
    manned                  (3),
    unmanned                (4),
    armed                   (5),
    disarmed                (6),
    prearmed                (7),
    slow                     (8),
    fast                     (9),
    disconnected             (10),
    enabled                  (11),
    disabled                 (12),
    automatic-release-disabled (13),
    default                  (14),
    ...
}
```

-- Enumerated values 0-255 are reserved for definition by ASHRAE. Enumerated values  
-- 256-65535 may be used by others subject to procedures and constraints described in Clause 23.

```
BACnetLifeSafetyOperation ::= ENUMERATED {
    none                    (0),
    silence                 (1),
    silence-audible         (2),
    silence-visual          (3),
    reset                   (4),
    reset-alarm              (5),
    reset-fault              (6),
    unsilence               (7),
```

```

unsilence-audible      (8),
unsilence-visual       (9),
...
}

```

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values  
-- 64-65535 may be used by others subject to procedures and constraints described in  
-- Clause 23.

**BACnetLifeSafetyState ::= ENUMERATED {**

```

quiet                  (0),
pre-alarm              (1),
alarm                 (2),
fault                 (3),
fault-pre-alarm        (4),
fault-alarm            (5),
not-ready              (6),
active                (7),
tamper                (8),
test-alarm             (9),
test-active            (10),
test-fault             (11),
test-fault-alarm       (12),
holdup                (13),
duress                (14),
tamper-alarm           (15),
abnormal               (16),
emergency-power        (17),
delayed                (18),
blocked                (19),
local-alarm             (20),
general-alarm           (21),
supervisory            (22),
test-supervisory        (23),
...
}
```

-- Enumerated values 0-255 are reserved for definition by ASHRAE. Enumerated values  
-- 256-65535 may be used by others subject to procedures and constraints described in Clause 23.

**BACnetLimitEnable ::= BIT STRING {**

```

lowLimitEnable  (0),
highLimitEnable (1)
}
```

**BACnetLockStatus ::= ENUMERATED {**

```

locked          (0),
unlocked        (1),
fault           (2),
unknown         (3)
}
```

**BACnetLogData ::= CHOICE {**

```

log-status      [0] BACnetLogStatus,
log-data        [1] SEQUENCE of CHOICE {
    boolean-value [0] BOOLEAN,
    real-value    [1] REAL,
    enum-value    [2] ENUMERATED,      -- Optionally limited to 32 bits
}
```

```

        unsigned-value [3] Unsigned,          -- Optionally limited to 32 bits
        signed-value  [4] INTEGER,           -- Optionally limited to 32 bits
        bitstring-value [5] BIT STRING,      -- Optionally limited to 32 bits
        null-value    [6] NULL,
        failure       [7] Error,
        any-value     [8] ABSTRACT-SYNTAX.&Type -- Optional
    }
}

time-change [2] REAL
}

BACnetLoggingType ::= ENUMERATED {
    polled          (0),
    cov             (1),
    triggered       (2),
    ...
}
-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values
-- 64-255 may be used by others subject to the procedures and constraints described
-- in Clause 23.

BACnetLogMultipleRecord ::= SEQUENCE {
    timestamp      [0] BACnetDateTime,
    logData        [1] BACnetLogData,
}

BACnetLogRecord ::= SEQUENCE {
    timestamp      [0] BACnetDateTime,
    logDatum       [1] CHOICE {
        log-status      [0] BACnetLogStatus,
        boolean-value   [1] BOOLEAN,
        real-value      [2] REAL,
        enum-value      [3] ENUMERATED, -- Optionally limited to 32 bits
        unsigned-value  [4] Unsigned,   -- Optionally limited to 32 bits
        signed-value   [5] INTEGER,   -- Optionally limited to 32 bits
        bitstring-value [6] BIT STRING, -- Optionally limited to 32 bits
        null-value     [7] NULL,
        failure        [8] Error,
        time-change    [9] REAL,
        any-value      [10] ABSTRACT-SYNTAX.&Type -- Optional
    },
    statusFlags     [2] BACnetStatusFlags OPTIONAL
}

BACnetLogStatus ::= BIT STRING {
    log-disabled   (0),
    buffer-purged  (1),
    log-interrupted (2)
}

BACnetMaintenance ::= ENUMERATED {
    none          (0),
    periodic-test (1),
    need-service-operational (2),
    need-service-inoperative (3),
    ...
}

```

-- Enumerated values 0-255 are reserved for definition by ASHRAE. Enumerated values  
-- 256-65535 may be used by others subject to procedures and constraints described in  
-- Clause 23.

**BACnetNodeType ::= ENUMERATED {**

unknown	(0),
system	(1),
network	(2),
device	(3),
organizational	(4),
area	(5),
equipment	(6),
point	(7),
collection	(8),
property	(9),
functional	(10),
other	(11),

}

**BACnetNotificationParameters ::= CHOICE {**

-- These choices have a one-to-one correspondence with the Event\_Type enumeration with the exception of the  
-- complex-event-type, which is used for proprietary event types.

change-of-bitstring	[0] SEQUENCE { referenced-bitstring status-flags },	[0] BIT STRING, [1] BACnetStatusFlags
change-of-state	[1] SEQUENCE { new-state status-flags },	[0] BACnetPropertyStates, [1] BACnetStatusFlags
change-of-value	[2] SEQUENCE { new-value  status-flags },	[0] CHOICE { changed-bits         [0] BIT STRING, changed-value         [1] REAL }, [1] BACnetStatusFlags
command-failure	[3] SEQUENCE { command-value status-flags feedback-value },	[0] ABSTRACT-SYNTAX.&Type, -- depends on ref property [1] BACnetStatusFlags, [2] ABSTRACT-SYNTAX.&Type -- depends on ref property
floating-limit	[4] SEQUENCE { reference-value status-flags setpoint-value error-limit },	[0] REAL, [1] BACnetStatusFlags, [2] REAL, [3] REAL
out-of-range	[5] SEQUENCE { exceeding-value status-flags deadband exceeded-limit },	[0] REAL, [1] BACnetStatusFlags, [2] REAL, [3] REAL
complex-event-type	[6] SEQUENCE OF BACnetPropertyValue,	

```

-- complex tag 7 is deprecated
change-of-life-safety [8] SEQUENCE {
    new-state          [0] BACnetLifeSafetyState,
    new-mode           [1] BACnetLifeSafetyMode,
    status-flags       [2] BACnetStatusFlags,
    operation-expected [3] BACnetLifeSafetyOperation
}

extended      [9] SEQUENCE {
    vendor-id         [0] Unsigned16,
    extended-event-type [1] Unsigned,
    parameters        [2] SEQUENCE OF CHOICE {
        null             NULL,
        real              REAL,
        integer           Unsigned,
        boolean            BOOLEAN,
        double             Double,
        octet              OCTET STRING,
        bitstring          BIT STRING,
        enum               ENUMERATED,
        propertyValue      [0] BACnetDeviceObjectPropertyValue
    }
}

buffer-ready   [10] SEQUENCE {
    buffer-property     [0] BACnetDeviceObjectPropertyReference,
    previous-notification [1] Unsigned32,
    current-notification [2] Unsigned32
}

unsigned-range [11] SEQUENCE {
    exceeding-value     [0] Unsigned,
    status-flags         [1] BACnetStatusFlags,
    exceeded-limit       [2] Unsigned
}

}

```

**BACnetNotifyType** ::= ENUMERATED {  
 alarm (0),  
 event (1),  
 ack-notification (2)  
}

**BACnetObjectPropertyReference** ::= SEQUENCE {  
 objectIdentifier [0] BACnetObjectIdentifier,  
 propertyIdentifier [1] BACnetPropertyIdentifier,  
 propertyArrayIndex [2] Unsigned OPTIONAL -- used only with array datatype  
 -- if omitted with an array the entire array is referenced
}

**BACnetObjectPropertyValue** ::= SEQUENCE {  
 objectIdentifier [0] BACnetObjectIdentifier,  
 propertyIdentifier [1] BACnetPropertyIdentifier,  
 propertyArrayIndex [2] Unsigned OPTIONAL, -- used only with array datatype  
 -- if omitted with an array the entire array is referenced  
 value [3] ABSTRACT-SYNTAX.&Type, --any datatype appropriate for the specified property  
 priority [4] Unsigned (1..16) OPTIONAL
}

```
BACnetObjectType ::= ENUMERATED {
    access-door          (30),
    accumulator          (23),
    analog-input         (0),
    analog-output        (1),
    analog-value         (2),
    averaging            (18),
    binary-input         (3),
    binary-output        (4),
    binary-value         (5),
    calendar             (6),
    command              (7),
    device               (8),
    event-enrollment     (9),
    event-log             (25),
    file                 (10),
    group                (11),
    life-safety-point   (21),
    life-safety-zone     (22),
    load-control          (28),
    loop                 (12),
    multi-state-input    (13),
    multi-state-output   (14),
    multi-state-value    (19),
    notification-class   (15),
    program              (16),
    pulse-converter      (24),
    schedule              (17),
    -- see averaging      (18),
    -- see multi-state-value (19),
    structured-view       (29),
    trend-log             (20),
    trend-log-multiple   (27),
    -- see life-safety-point (21),
    -- see life-safety-zone (22),
    -- see accumulator      (23),
    -- see pulse-converter (24),
    -- see event-log        (25),
    -- enumeration value 26 is reserved for a future addendum
    -- see trend-log-multiple (27),
    -- see load-control      (28),
    -- see structured-view   (29),
    -- see access-door       (30),
    ...
}
```

-- Enumerated values 0-127 are reserved for definition by ASHRAE. Enumerated values  
-- 128-1023 may be used by others subject to the procedures and constraints described  
-- in Clause 23.

```
BACnetObjectTypesSupported ::= BIT STRING {
    -- access-door          (30),
    -- accumulator          (23),
    analog-input           (0),
    analog-output          (1),
    analog-value           (2),
    -- averaging            (18),
```

binary-input	(3),
binary-output	(4),
binary-value	(5),
calendar	(6),
command	(7),
device	(8),
event-enrollment	(9),
-- event-log	(25),
file	(10),
group	(11),
-- life-safety-point	(21),
-- life-safety-zone	(22),
-- load-control	(28),
loop	(12),
multi-state-input	(13),
multi-state-output	(14),
-- multi-state-value	(19),
notification-class	(15),
program	(16),
-- pulse-converter	(24),
schedule	(17),
-- structured-view	(29),
-- trend-log	(20),
-- trend-log-multiple	(27),
-- Objects added after 1995	
averaging	(18),
multi-state-value	(19),
trend-log	(20),
life-safety-point	(21),
life-safety-zone	(22),
-- Objects added after 2001	
accumulator	(23),
pulse-converter	(24),
-- Objects added after 2004	
event-log	(25),
-- bit position 26 is reserved for a future addendum	
trend-log-multiple	(27),
load-control	(28),
structured-view	(29),
access-door	(30)
}	

**BACnetPolarity** ::= ENUMERATED {  
 normal (0),  
 reverse (1)  
 }

**BACnetPrescale** ::= SEQUENCE {  
 multiplier [0] Unsigned,  
 moduloDivide [1] Unsigned  
 }

**BACnetPriorityArray** ::= SEQUENCE SIZE (16) OF BACnetPriorityValue  
 -- accessed as a BACnetARRAY

**BACnetPriorityValue** ::= CHOICE {

```

null           NULL,
real           REAL,
binary         BACnetBinaryPV,
integer        Unsigned,
constructedValue [0] ABSTRACT-SYNTAX.&Type
}

```

**BACnetProgramError ::= ENUMERATED {**

```

normal          (0),
load-failed     (1),
internal        (2),
program         (3),
other           (4),
...
}
```

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values -- 64-65535 may be used by others subject to the procedures and constraints described -- in Clause 23.

**BACnetProgramRequest ::= ENUMERATED {**

```

ready          (0),
load           (1),
run            (2),
halt           (3),
restart        (4),
unload         (5)
}
```

**BACnetProgramState ::= ENUMERATED {**

```

idle          (0),
loading       (1),
running       (2),
waiting       (3),
halted        (4),
unloading     (5)
}
```

**BACnetPropertyIdentifier ::= ENUMERATED {**

accepted-modes	(175),
acked-transitions	(0),
ack-required	(1),
action	(2),
action-text	(3),
active-text	(4),
active-vt-sessions	(5),
active-cov-subscriptions	(152),
actual-shed-level	(212),
adjust-value	(176),
alarm-value	(6),
alarm-values	(7),
align-intervals	(193),
all	(8),
all-writes-successful	(9),
apdu-segment-timeout	(10),
apdu-timeout	(11),
application-software-version	(12),

archive	(13),
attempted-samples	(124),
auto-slave-discovery	(169),
average-value	(125),
backup-failure-timeout	(153),
bias	(14),
buffer-size	(126),
change-of-state-count	(15),
change-of-state-time	(16),
-- see notification-class	(17),
-- the property in this place was deleted	(18),
client-cov-increment	(127),
configuration-files	(154),
controlled-variable-reference	(19),
controlled-variable-units	(20),
controlled-variable-value	(21),
count	(177),
count-before-change	(178),
count-change-time	(179),
cov-increment	(22),
cov-period	(180),
cov-resubscription-interval	(128),
-- current-notify-time	(129), This property was deleted in version 1 revision 3.
database-revision	(155),
date-list	(23),
daylight-savings-status	(24),
deadband	(25),
derivative-constant	(26),
derivative-constant-units	(27),
description	(28),
description-of-halt	(29),
device-address-binding	(30),
device-type	(31),
direct-reading	(156),
door-alarm-state	(226),
door-extended-pulse-time	(227),
door-members	(228),
door-open-too-long-time	(229),
door-pulse-time	(230),
door-status	(231),
door-unlock-delay-time	(232),
duty-window	(213),
effective-period	(32),
elapsed-active-time	(33),
enable	(133), -- renamed from previous version
error-limit	(34),
event-enable	(35),
event-state	(36),
event-time-stamps	(130),
event-type	(37),
event-parameters	(83), -- renamed from previous version
exception-schedule	(38),
expected-shed-level	(214),
fault-values	(39),
feedback-value	(40),
file-access-method	(41),

file-size	(42),
file-type	(43),
firmware-revision	(44),
full-duty-baseline	(215),
high-limit	(45),
inactive-text	(46),
in-process	(47),
input-reference	(181),
instance-of	(48),
integral-constant	(49),
integral-constant-units	(50),
interval-offset	(195),
-- issue-confirmed-notifications	(51), This property was deleted in version 1 revision 4.
last-notify-record	(173),
last-restart-reason	(196),
last-restore-time	(157),
life-safety-alarm-values	(166),
limit-enable	(52),
limit-monitoring-interval	(182),
list-of-group-members	(53),
list-of-object-property-references	(54),
list-of-session-keys	(55),
local-date	(56),
local-time	(57),
location	(58),
lock-status	(233),
log-buffer	(131),
log-device-object-property	(132),
-- see enable	(133),
log-interval	(134),
logging-object	(183),
logging-record	(184),
logging-type	(197),
low-limit	(59),
maintenance-required	(158),
manipulated-variable-reference	(60),
manual-slave-address-binding	(170),
masked-alarm-values	(234),
maximum-output	(61),
maximum-value	(135),
maximum-value-timestamp	(149),
max-apdu-length-accepted	(62),
max-info-frames	(63),
max-master	(64),
max-pres-value	(65),
max-segments-accepted	(167),
member-of	(159),
minimum-off-time	(66),
minimum-on-time	(67),
minimum-output	(68),
minimum-value	(136),
minimum-value-timestamp	(150),
min-pres-value	(69),
mode	(160),
model-name	(70),
modification-date	(71),

node-subtype	(207),
node-type	(208),
notification-class	(17),
notification-threshold	(137),
notify-type	(72),
number-of-APDU-retries	(73),
number-of-states	(74),
object-identifier	(75),
object-list	(76),
object-name	(77),
object-property-reference	(78),
object-type	(79),
operation-expected	(161),
optional	(80),
out-of-service	(81),
output-units	(82),
-- see event-parameters	(83),
polarity	(84),
prescale	(185),
present-value	(85),
-- previous-notify-time	(138), This property was deleted in version 1 revision 3.
priority	(86),
pulse-rate	(186),
priority-array	(87),
priority-for-writing	(88),
process-identifier	(89),
profile-name	(168),
program-change	(90),
program-location	(91),
program-state	(92),
proportional-constant	(93),
proportional-constant-units	(94),
-- protocol-conformance-class	(95), This property was deleted in version 1 revision 2.
protocol-object-types-supported	(96),
protocol-revision	(139),
protocol-services-supported	(97),
protocol-version	(98),
read-only	(99),
reason-for-halt	(100),
-- recipient	(101), This property was deleted in version 1 revision 4.
recipient-list	(102),
records-since-notification	(140),
record-count	(141),
reliability	(103),
relinquish-default	(104),
requested-shed-level	(218),
required	(105),
resolution	(106),
restart-notification-recipients	(202),
scale	(187),
scale-factor	(188),
schedule-default	(174),
secured-status	(235),
segmentation-supported	(107),
setpoint	(108),
setpoint-reference	(109),

setting	(162),
shed-duration	(219),
shed-level-descriptions	(220),
shed-levels	(221),
silenced	(163),
slave-address-binding	(171),
slave-proxy-enable	(172),
start-time	(142),
state-text	(110),
status-flags	(111),
stop-time	(143),
stop-when-full	(144),
structured-object-list	(209),
subordinate-annotations	(210),
subordinate-list	(211),
system-status	(112),
time-delay	(113),
time-of-active-time-reset	(114),
time-of-device-restart	(203),
time-of-state-count-reset	(115),
time-synchronization-interval	(204),
time-synchronization-recipients	(116),
total-record-count	(145),
tracking-value	(164),
trigger	(205),
units	(117),
update-interval	(118),
update-time	(189),
utc-offset	(119),
utc-time-synchronization-recipients	(206),
valid-samples	(146),
value-before-change	(190),
value-set	(191),
value-change-time	(192),
variance-value	(151),
vendor-identifier	(120),
vendor-name	(121),
vt-classes-supported	(122),
weekly-schedule	(123),
-- see attempted-samples	(124),
-- see average-value	(125),
-- see buffer-size	(126),
-- see client-cov-increment	(127),
-- see cov-resubscription-interval	(128),
-- unused	(129),
-- see event-time-stamps	(130),
-- see log-buffer	(131),
-- see log-device-object-property	(132),
-- see enable	(133),
-- see log-interval	(134),
-- see maximum-value	(135),
-- see minimum-value	(136),
-- see notification-threshold	(137),
-- unused	(138),
-- see protocol-revision	(139),
-- see records-since-notification	(140),
	current-notify-time was deleted in version 1 revision 3.
	log-enable was renamed to enable in version 1 revision 5
	previous-notify-time was deleted in version 1 revision 3.

-- see record-count (141),  
 -- see start-time (142),  
 -- see stop-time (143),  
 -- see stop-when-full (144),  
 -- see total-record-count (145),  
 -- see valid-samples (146),  
 window-interval (147),  
 window-samples (148),  
 zone-members (165),  
 -- see maximum-value-timestamp (149),  
 -- see minimum-value-timestamp (150),  
 -- see variance-value (151),  
 -- see active-cov-subscriptions (152),  
 -- see backup-failure-timeout (153),  
 -- see configuration-files (154),  
 -- see database-revision (155),  
 -- see direct-reading (156),  
 -- see last-restore-time, (157),  
 -- see maintenance-required (158),  
 -- see member-of (159),  
 -- see mode (160),  
 -- see operation-expected (161),  
 -- see setting (162),  
 -- see silenced (163),  
 -- see tracking-value (164),  
 -- see zone-members (165),  
 -- see life-safety-alarm-values (166),  
 -- see max-segments-accepted (167),  
 -- see profile-name (168),  
 -- see auto-slave-discovery (169),  
 -- see manual-slave-address-binding (170),  
 -- see slave-address-binding (171),  
 -- see slave-proxy-enable (172),  
 -- see last-notify-record (173),  
 -- see schedule-default (174),  
 -- see accepted-modes (175),  
 -- see adjust-value (176),  
 -- see count (177),  
 -- see count-before-change (178),  
 -- see count-change-time (179),  
 -- see cov-period (180),  
 -- see input-reference (181),  
 -- see limit-monitoring-interval (182),  
 -- see logging-object (183),  
 -- see logging-record (184),  
 -- see prescale (185),  
 -- see pulse-rate (186),  
 -- see scale (187),  
 -- see scale-factor (188),  
 -- see update-time (189),  
 -- see value-before-change (190),  
 -- see value-set (191),  
 -- see value-change-time (192),  
 -- see align-intervals (193),  
 -- enumeration value 194 is reserved for a future addendum  
 -- see interval-offset (195),

- see last-restart reason (196),
- see logging-type (197),
- enumeration values 198-201 are reserved for future addenda
- see restart-notification-recipients (202),
- see time-of-device-restart (203),
- see time-synchronization-interval (204),
- see trigger (205),
- see utc-time-synchronization-recipients (206),
- see node-subtype (207),
- see node-type (208),
- see structured-object-list (209),
- see subordinate-annotations (210),
- see subordinate-list (211),
- see actual-shed-level (212),
- see duty-window (213),
- see expected-shed-level (214),
- see full-duty-baseline (215),
- see node-subtype (216),
- see node-type (217),
- see requested-shed-level (218),
- see shed-duration (219),
- see shed-level-descriptions (220),
- see shed-levels (221),
- see state-description (222),
- enumeration values 223-225 are reserved for future addenda
- see door-alarm-state (226),
- see door-extended-pulse-time (227),
- see door-members (228),
- see door-open-too-long-time (229),
- see door-pulse-time (230),
- see door-status (231),
- see door-unlock-delay-time (232),
- see lock-status (233),
- see masked-alarm-values (234),
- see secured-status (235),

...

}

- The special property identifiers all, optional, and required are reserved for use in the ReadPropertyConditional and ReadPropertyMultiple services or services not defined in this standard.
- 
- Enumerated values 0-511 are reserved for definition by ASHRAE. Enumerated values 512-4194303 may be used by other objects to the procedures and constraints described in Clause 23.

```
BACnetPropertyReference ::= SEQUENCE {
    propertyIdentifier      [0] BACnetPropertyIdentifier,
    propertyArrayIndex      [1] Unsigned OPTIONAL --used only with array datatype
                                -- if omitted with an array the entire array is referenced
}
```

**BACnetPropertyStates** ::= CHOICE {  
-- This production represents the possible datatypes for properties that  
-- have discrete or enumerated values. The choice must be consistent with the  
-- datatype of the property referenced in the Event Enrollment Object.

boolean-value [0] BOOLEAN-

binary-value	[1] BACnetBinaryPV,
event-type	[2] BACnetEventType,
polarity	[3] BACnetPolarity,
program-change	[4] BACnetProgramRequest,
program-state	[5] BACnetProgramState,
reason-for-halt	[6] BACnetProgramError,
reliability	[7] BACnetReliability,
state	[8] BACnetEventState,
system-status	[9] BACnetDeviceStatus,
units	[10] BACnetEngineeringUnits,
unsigned-value	[11] Unsigned,
life-safety-mode	[12] BACnetLifeSafetyMode,
life-safety-state	[13] BACnetLifeSafetyState,
restart-reason	[14] BACnetRestartReason,
door-alarm-state	[15] BACnetDoorAlarmState
...	
}	

-- Tag values 0-63 are reserved for definition by ASHRAE. Tag values of 64-254 may be used by others to  
-- accommodate vendor specific properties that have discrete or enumerated values, subject to the constraints described  
-- in Clause 23.

<b>BACnetPropertyValue</b> ::= SEQUENCE {	
propertyIdentifier	[0] BACnetPropertyIdentifier,
propertyArrayIndex	[1] Unsigned OPTIONAL, -- used only with array datatypes -- if omitted with an array the entire array is referenced
value	[2] ABSTRACT-SYNTAX.&Type, -- any datatype appropriate for the specified property
priority	[3] Unsigned (1..16) OPTIONAL -- used only when property is commandable
}	

<b>BACnetRecipient</b> ::= CHOICE {	
device	[0] BACnetObjectIdentifier,
address	[1] BACnetAddress
}	

<b>BACnetRecipientProcess</b> ::= SEQUENCE {	
recipient	[0] BACnetRecipient,
processIdentifier	[1] Unsigned32
}	

<b>BACnetReliability</b> ::= ENUMERATED {	
no-fault-detected	(0),
no-sensor	(1),
over-range	(2),
under-range	(3),
open-loop	(4),
shorted-loop	(5),
no-output	(6),
unreliable-other	(7),
process-error	(8),
multi-state-fault	(9),
configuration-error	(10),
	-- enumeration value 11 is reserved for a future addendum
communication-failure	(12),
...	
}	

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values  
-- 64-65535 may be used by others subject to the procedures and constraints described  
-- in Clause 23.

**BACnetRestartReason ::= ENUMERATED {**

unknown	(0),
coldstart	(1),
warmstart	(2),
detected-power-lost	(3),
detected-powered-off	(4),
hardware-watchdog,	(5),
software-watchdog	(6),
suspended	(7),

...

}

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values 64-255  
-- may be used by others subject to the procedures and constraints described in Clause 23.

**BACnetResultFlags ::= BIT STRING {**

first-item	(0),
last-item	(1),
more-items	(2)

}

**BACnetScale ::= CHOICE {**

floatScale	[0] REAL,
integerScale	[1] INTEGER

}

**BACnetShedLevel ::= CHOICE {**

percent	[0]	Unsigned,
level	[1]	Unsigned,
amount	[2]	REAL

}

**BACnetShedState ::= ENUMERATED {**

shed-inactive	(0),
shed-request-pending	(1),
shed-compliant	(2),
shed-non-compliant	(3)

}

**BACnetSegmentation ::= ENUMERATED {**

segmented-both	(0),
segmented-transmit	(1),
segmented-receive	(2),
no-segmentation	(3)

}

**BACnetServicesSupported ::= BIT STRING {**

-- Alarm and Event Services

acknowledgeAlarm	(0),
confirmedCOVNotification	(1),
confirmedEventNotification	(2),
getAlarmSummary	(3),
getEnrollmentSummary	(4),

-- getEventInformation	(39),
subscribeCOV	(5),
-- subscribeCOVProperty	(38),
-- lifeSafetyOperation	(37),
-- File Access Services	
atomicReadFile	(6),
atomicWriteFile	(7),
-- Object Access Services	
addListElement	(8),
removeListElement	(9),
createObject	(10),
deleteObject	(11),
readProperty	(12),
readPropertyConditional	(13),
readPropertyMultiple	(14),
-- readRange	(35),
writeProperty	(15),
writePropertyMultiple	(16),
-- Remote Device Management Services	
deviceCommunicationControl	(17),
confirmedPrivateTransfer	(18),
confirmedTextMessage	(19),
reinitializeDevice	(20),
-- Virtual Terminal Services	
vtOpen	(21),
vtClose	(22),
vtData	(23),
-- Security Services	
authenticate	(24),
requestKey	(25),
-- Unconfirmed Services	
i-Am	(26),
i-Have	(27),
unconfirmedCOVNotification	(28),
unconfirmedEventNotification	(29),
unconfirmedPrivateTransfer	(30),
unconfirmedTextMessage	(31),
timeSynchronization	(32),
-- utcTimeSynchronization	(36),
who-Has	(33),
who-Is	(34),
-- Services added after 1995	
readRange	(35), -- Object Access Service
utcTimeSynchronization	(36), -- Remote Device Management Service
lifeSafetyOperation	(37), -- Alarm and Event Service
subscribeCOVProperty	(38), -- Alarm and Event Service
getEventInformation	(39) -- Alarm and Event Service
}	

**BACnetSessionKey** ::= SEQUENCE {  
 sessionKey OCTET STRING (SIZE(8)), -- 56 bits for key, 8 bits for checksum  
 peerAddress BACnetAddress  
}

**BACnetSetpointReference** ::= SEQUENCE {  
 setpointReference [0] BACnetObjectPropertyReference OPTIONAL  
}

**BACnetSilencedState** ::= ENUMERATED {  
 unsilenced (0),  
 audible-silenced (1),  
 visible-silenced (2),  
 all-silenced (3),  
...  
}  
-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values  
-- 64-65535 may be used by others subject to procedures and constraints described in  
-- Clause 23.

**BACnetSpecialEvent** ::= SEQUENCE {  
 period CHOICE {  
 calendarEntry [0] BACnetCalendarEntry,  
 calendarReference [1] BACnetObjectIdentifier  
 },  
 listOfTimeValues [2] SEQUENCE OF BACnetTimeValue,  
 eventPriority [3] Unsigned (1..16)  
}

**BACnetStatusFlags** ::= BIT STRING {  
 in-alarm (0),  
 fault (1),  
 overridden (2),  
 out-of-service (3)  
}

**BACnetTimeStamp** ::= CHOICE {  
 time [0] Time,  
 sequenceNumber [1] Unsigned (0..65535),  
 dateTime [2] BACnetDateTime  
}

**BACnetTimeValue** ::= SEQUENCE {  
 time Time,  
 value ABSTRACT-SYNTAX.&Type -- any primitive datatype; complex types cannot be decoded  
}

**BACnetVTClass** ::= ENUMERATED {  
 default-terminal (0),  
 ansi-x3-64 (1),  
 dec-vt52 (2),  
 dec-vt100 (3),  
 dec-vt220 (4),  
 hp-700-94 (5),  
 ibm-3130 (6),  
...  
}

}

-- Enumerated values 0-63 are reserved for definition by ASHRAE. Enumerated values  
-- 64-65535 may be used by others subject to the procedures and constraints described  
-- in Clause 23.

```

BACnetVTSession ::= SEQUENCE {
    local-vtSessionID      Unsigned8,
    remote-vtSessionID     Unsigned8,
    remote-vtAddress        BACnetAddress
}

```

```

ReadAccessResult ::= SEQUENCE {
    objectIdentifier      [0] BACnetObjectIdentifier,
    listOfResults         [1] SEQUENCE OF SEQUENCE {
        propertyIdentifier [2] BACnetPropertyIdentifier,
        propertyArrayIndex [3] Unsigned OPTIONAL, -- used only with array datatype
                                         -- if omitted with an array the entire
                                         -- array is referenced
    }
    readResult            CHOICE {
        propertyValue       [4] ABSTRACT-SYNTAX.&Type,
        propertyAccessError [5] Error
    }
} OPTIONAL
}

```

```
ReadAccessSpecification ::= SEQUENCE {
    objectIdentifier      [0] BACnetObjectIdentifier,
    listOfPropertyReferences [1] SEQUENCE OF BACnetPropertyReference
}
```

```
WriteAccessSpecification ::= SEQUENCE {  
    objectIdentifier [0] BACnetObjectIdentifier,  
    listOfProperties [1] SEQUENCE OF BACnetPropertyValue  
}
```

END

## 22 CONFORMANCE AND INTEROPERABILITY

BACnet defines a comprehensive set of object types and application services in the sense that communication requirements among all levels of control in a distributed, hierarchical building automation system are addressed. There is a need to account for the reality that not all devices in a building automation system need to support the full functionality of BACnet in order to perform their tasks.

To reach the overarching goal of this standard – communication between disparate building automation and control devices, possibly from different manufacturers – two distinct conditions must be met: 1) each implemented BACnet capability must precisely conform to the requirements of this standard; and 2) devices that seek to interoperate must implement precisely complementary BACnet capabilities appropriate to the desired form of interoperation. This clause defines how these conditions are to be met and what it means to conform to BACnet.

### 22.1 Conformance to BACnet

This subclause specifies the requirements that shall be met in order to conform with BACnet.

#### 22.1.1 Protocol Implementation Conformance Statement (PICS)

All devices conforming to the BACnet protocol shall have a Protocol Implementation Conformance Statement (PICS) that identifies all of the portions of BACnet that are implemented. This PICS shall contain all of the information described in 22.1.1.1 and shall be in the format found in Annex A.

##### 22.1.1.1 PICS Contents

A PICS is a written document, created by the manufacturer of a device, that identifies the particular options specified by BACnet that are implemented in the device. A BACnet PICS is considered a public document that is available for use by any interested party. At a minimum, a BACnet PICS shall convey the following information.

- (a) Basic information identifying the vendor and describing the BACnet device.
- (b) The BACnet Interoperability Building Blocks supported by the device (see Annex K).
- (c) The standardized BACnet device profile to which the device conforms, if any (see Annex L).
- (d) All non-standard application services that are supported along with an indication for each service of whether the device can initiate the service request, respond to a service request, or both.
- (e) A list of all standard and proprietary object types that are supported.
- (f) For each object type supported,
  - 1. any optional properties that are supported,
  - 2. which properties can be written-to using BACnet services,
  - 3. if the objects can be dynamically created or deleted using BACnet services,
  - 4. any restrictions on the range of data values for properties.
- (g) The data link layer option options, both real and virtual, supported. (See Annexes H and J).
- (h) Whether segmented requests are supported.
- (i) Whether segmented responses are supported.

#### 22.1.2 Conformance Test

In order to conform to the BACnet protocol, all devices shall pass a conformance test that verifies the correct implementation of the standard object types and services indicated in the PICS. This conformance test shall consist of a collection of test cases drawn from a standard test suite in such a way as to test each object type and service for which support is claimed (positive test) and to test for an appropriate response to errors and standard services and objects that are not implemented to

ensure the absence of detrimental behavior (negative test). The details of these tests are prescribed in the companion standard, "Testing Conformance to BACnet," ASHRAE 135.1.

### 22.1.3 Data Link and Physical Layers

To conform to the BACnet protocol, all devices shall support one of the five data link layer options, defined in Clauses 7 through 11, and one of the physical layers compatible with that data link layer, except as indicated in 22.1.4.

### 22.1.4 Conformance with Non-Standard Data Link Layer

Special circumstances may require that a device support a data link and physical layer technology that is not one of the BACnet options in order to interoperate with other networked devices in a particular situation. Such a device may be said to conform to BACnet with a non-standard data link layer, provided that the criteria in 22.1.1 through 22.1.2 are met.

A device conforming to the BACnet protocol under the provisions of this subclause may use non-standard protocol layers other than the data link and physical layers, provided that the non-standard protocol is used to convey a standard BACnet LSDU that contains application and network layer information defined by this standard and encoded according to the rules of Clause 20 and Clause 6. Segmentation of the BACnet LSDU is permitted. Annex H provides examples of this for the Department of Defense Internet protocols and the Novell Internetwork Datagram Protocol.

### 22.1.5 Minimum Device Requirements

A device that conforms to the BACnet protocol and contains an application layer shall:

- (a) contain exactly one Device object,
- (b) execute the ReadProperty service,
- (c) execute the Who-Has and Who-Is services (and thus initiate the I-Have and I-Am services) unless the device is an MS/TP slave device,
- (d) execute the WriteProperty service if the device executes the WritePropertyMultiple, AddListElement or RemoveListElement services,
- (e) allow the WriteProperty service to modify any properties that are modifiable by the AddListElement or RemoveListElement services, and
- (f) execute the WriteProperty service if the device contains any objects with properties that are required to be writable.

## 22.2 BACnet Interoperability

BACnet is intended to provide a single, uniform standard for building control systems, the ultimate goal of which is "interoperability." Interoperability means the ability of disparate control system devices to work together toward a common objective through the digital exchange of relevant information. Although interoperability is often thought of in terms of interconnecting equipment from multiple manufacturers, it is also possible to envision interoperating systems from a single vendor, possibly equipment of different vintages. Thus, while BACnet enables multi-vendor interoperability, it in no way requires it.

### 22.2.1 Interoperability Areas

"Interoperability areas" (IAs) are intended to describe the functionality that is important in practical automation and control systems to achieve specific operational objectives. The five IAs delineated in this standard are data sharing, alarm and event management, scheduling, trending, and device and network management. Each IA implies a set of capabilities. Each capability, in turn, requires that specific elements of BACnet be implemented in a particular device to enable interoperability in a known and predictable manner with a minimum of field engineering. The selection of which BACnet elements are required for a particular type of device is indicated in the device profiles presented in Annex L. This section describes the specific capabilities associated with each IA.

#### 22.2.1.1 Data Sharing

"Data sharing" is the exchange of information between BACnet devices. It may be uni-directional or bi-directional. Interoperability in this area permits the collection of data for archival storage, graphics, and reports, the sharing of common sensor or calculated values between devices, carrying out interlocked control strategies, and the modification of setpoints or other operational parameters of BACnet objects.

### **22.2.1.2 Alarm and Event Management**

"Alarm and event management" is the exchange of data between BACnet devices related to the occurrence of a predefined condition that meets specific criteria. Such conditions are called "events" and may be the basis for the initiation of a particular control action in response or the simple logging of the event's occurrence. The event may also be deemed to represent a condition that constitutes an "alarm", requiring human acknowledgment and intervention. Interoperability in this area permits the annunciation and acknowledgment of alarms; the display of data indicating the basis for the alarm annunciation; the sharing of events for the purpose of logging or distributed control applications; modification of alarm limits and routing; and the production of summaries of the occurrence of such alarms and events.

BACnet defines two different mechanisms for generating alarms and events. One is called "intrinsic reporting" because it relies on the use of properties that are part of or "intrinsic" to the object that is being monitored for alarms or events. The other mechanism is called "algorithmic change reporting." Algorithmic change reporting is more general but it also requires the overhead of an additional object called the Event Enrollment object. The intrinsic reporting method is preferred under circumstances where it meets the objectives of the intended application. See Clause 13.

### **22.2.1.3 Scheduling**

"Scheduling" is the exchange of data between BACnet devices related to the establishment and maintenance of dates and times at which specified output actions are to be taken. Interoperability in this area permits the use of date and time schedules for starting and stopping equipment and changing control setpoints as well as other analog or binary parameters.

### **22.2.1.4 Trending**

"Trending" is the accumulation of records consisting of a timestamp and a set of one or more logged data values. These records are collected at specified rates for a specified duration. The values are those of specific properties of specific objects. "Trending" is distinguished from the real-time plotting of data in that the data are usually destined for long-term storage and the sampling intervals are usually longer. Interoperability in this area permits the establishment of logging parameters and the subsequent retrieval and storage of logged data.

### **22.2.1.5 Device and Network Management**

"Device and network management" is the exchange of data between BACnet devices concerning the operation and status of the devices comprising the BACnet internetwork. Interoperability in this area permits determining which devices are present on a given network and some of their operational capabilities, including which objects they maintain; the ability to start up and shut down communication from a particular device; the ability to synchronize the time in those devices that maintain clocks; the ability to reinitialize the operation of a device's computer; the ability to establish connections as needed; and the ability to change the connection configuration.

## 23 EXTENDING BACnet TO ACCOMMODATE VENDOR PROPRIETARY INFORMATION

The objective of BACnet is to provide the mechanisms by which building automation equipment may exchange information. To aid in interoperability, BACnet defines a standardized set of data structures, called objects, which contain information that is common to most building systems. BACnet may also be used to exchange non-standardized information between devices that understand this information. There are four independent areas where BACnet may be extended to exchange non-standard information:

- (a) A vendor may define proprietary extended values for enumerations used in BACnet.
- (b) A vendor may invoke a proprietary service using the PrivateTransfer services.
- (c) A vendor may add new proprietary properties to a standard object.
- (d) A vendor may define new proprietary object types.

In each of these cases, the BACnet messages implicitly reference a vendor identification code that serves to unambiguously specify which vendor's proprietary enumerations, services, properties, or objects were intended. Vendor identification codes are administrated by ASHRAE and are assigned one per vendor. The special Vendor\_Identifier of zero is permanently assigned to ASHRAE. The Vendor\_Identifier for a given device may be determined by reading the Vendor\_Identifier property of the Device object. A list of vendor identification codes may be obtained from the ASHRAE Manager of Standards.

### 23.1 Extending Enumeration Values

There may be instances when it is necessary for a vendor to extend BACnet by including additional possible values to an enumeration. This is accomplished by using enumeration values that are greater than the range reserved for BACnet for a given enumeration type. Table 23-1 defines those enumerations that may be extended and the range of enumerated values reserved for BACnet use. All other enumerations, which do not appear in Table 23-1, may not be extended.

**Table 23-1.** Extensible Enumerations

Enumeration Name	Reserved Range	Maximum Value
error-class	0-63	65535
error-code	0-255	65535
BACnetAbortReason	0-63	255
BACnetDeviceStatus	0-63	65535
BACnetDoorAlarmState	0-255	65535
BACnetEngineeringUnits	0-255	65535
BACnetEventState	0-63	65535
BACnetEventType	0-63	65535
BACnetLifeSafetyMode	0-255	65535
BACnetLifeSafetyState	0-255	65535
BACnetLifeSafetyOperation	0-63	65535
BACnetLoggingType	0-63	255
BACnetMaintenance	0-255	65535
BACnetObjectType	0-127	1023
BACnetProgramError	0-63	65535
BACnetPropertyIdentifier	0-511	4194303
BACnetPropertyStates	0-63	254
BACnetReliability	0-63	65535
BACnetRejectReason	0-63	255
BACnetRestartReason	0-63	255
BACnetSilencedState	0-63	65535
BACnetVTClass	0-63	65535

## 23.2 Using the PrivateTransfer Services to Invoke Non-Standardized Services

BACnet defines a set of application layer services that are specifically tailored to integrating building control systems. While this standard prescribes a set of application layer services that is intended to be comprehensive, vendors are free to create additional services. Standard services shall be used when possible.

Vendors may add proprietary services to BACnet using the PrivateTransfer services to invoke them. The service types and arguments are not restricted by BACnet, but they shall be conveyed using the Confirmed or Unconfirmed PrivateTransfer services. The protocol mechanisms used in the handling of these APDUs shall perform as specified in this standard.

The format of proprietary application layer services, invoked using PrivateTransfer, shall follow the encoding rules of this standard.

When using the PrivateTransfer service, it is important to note that segmentation is not permitted for Error APDUs. The implementor shall ensure that the parameters in the Error APDU do not expand to the point where segmentation is required.

## 23.3 Adding Proprietary Properties to a Standardized Object

BACnet defines a set of standard objects, each with a set of standard properties that can be accessed and manipulated with BACnet services. BACnet allows a vendor to add proprietary properties to extend the capabilities of a standard object. Proprietary properties receive the same support from BACnet services as standard properties and therefore can be accessed and manipulated in a manner identical to standard properties.

Objects may indicate conformance to an object profile by use of the `Profile_Name` property.

If a proprietary property is to be a commandable property, additional properties that fulfill the role of the standard `Priority_Array` and `Relinquish_Default` properties shall be provided for each commandable property. The priority arbitration mechanism described in Clause 19 shall apply.

Vendors may add proprietary properties to a standard object by modifying the object definition within a device. Proprietary properties are enumerated with `Property_Identifier` values of 512 and above. These property identifiers can be used in any BACnet service that uses a `Property_Identifier` as a parameter.

Proprietary property identifiers implicitly reference the `Vendor_Identifier` property of the `Device` object in the device where they reside. It is entirely possible, and expected, that different vendors will use the same enumeration values to represent completely different properties.

## 23.4 Adding Proprietary Object Types to BACnet

To accommodate building applications where the defined set of standardized objects is not adequate, BACnet allows a vendor to add proprietary object types. Standard object types shall be used when possible. To enhance extensibility, BACnet provides the same support for proprietary objects as for standard objects.

Objects may indicate conformance to an object profile by use of the `Profile_Name` property.

### 23.4.1 Proprietary Object\_Type Enumerations

Vendors may add proprietary object types to BACnet by extending the `BACnetObjectType` enumeration. Proprietary object types are enumerated with `Object_Type` values of 128 and above. These `Object_Type` values may be used in any BACnet service that uses an `Object_Type` as a parameter.

### 23.4.2 Proprietary Property Datatypes

The properties of vendor proprietary objects may include both standard and proprietary datatypes. Proprietary datatypes may only be constructed from application datatypes defined in 20.2.1.4.

### 23.4.3 Required Properties in Proprietary Object Types

Non-standard object types shall support the following properties:

- `Object_Identifier`
- `Object_Name`

### Object\_Type

These properties shall be implemented to behave as they would in standard BACnet objects. This means that the Object\_Identifier and Object\_Name properties shall be unique within the BACnet device that maintains them. The Object\_Name string shall be at least one character in length and shall consist of only printable characters.

### 23.5 Restrictions on Extending BACnet

The following restrictions to extending BACnet apply:

- (a) APDU types 8 through 15 are reserved for future ASHRAE use.
- (b) Services may be added only via the Confirmed- and UnconfirmedPrivateTransfer services. That is, the enumerations BACnetConfirmedServiceChoice and BACnetUnconfirmedServiceChoice may not be extended.

## 24 NETWORK SECURITY

This clause defines a limited security architecture for BACnet. Network security in BACnet is optional. The intent of this architecture is to provide peer entity, data origin, and operator authentication, as well as data confidentiality and integrity. Other types of communications security, such as access control and non-repudiation, are not provided in the BACnet standard. Systems that require these services may add them to BACnet in a proprietary manner.

### 24.1 Security Architecture

#### 24.1.1 Overview

Peer and data origin authentication is performed in BACnet using handshaking. Handshaking will ensure that communication has been established between two known nodes within a communications network. Handshaking will be performed for one of two reasons:

- (a) The Client device needs to authenticate that a confirmed service request was indeed executed by the claimed device. With this mechanism, unconfirmed service requests cannot be authenticated.
- (b) The Server device needs to authenticate that a confirmed service request was indeed initiated by the claimed device. With this mechanism, unconfirmed service requests cannot be authenticated.

This is accomplished by testing that bound enciphered data can be communicated between the two nodes using a common Session Key (SK). SKs are obtained from a device known as a key server.

Operator authentication is performed in BACnet by authenticating a password provided by a user. The password can be authenticated locally by the device or over the network. If the password is authenticated over the network, the key server shall contain the master list of passwords.

Data confidentiality and integrity are performed in BACnet using encipherment. Data are enciphered using a common SK that is obtained from a key server. With this mechanism, broadcast or multicast messages cannot be enciphered.

SKs are distributed to the secure BACnet devices by the key server. A device requests a key between itself and another device from the key server using the RequestKey service. Alternatively, keys may be delivered by the key server to devices upon network initialization or at a timed interval. The key server shall deliver the SK to the devices by writing to the List\_Of\_Session\_Keys property of the Device object using the AddListElement service. The SKs being sent over the BACnet network shall be enciphered using the unique Private Key (PK) of each device. Once in the device, each SK can be deciphered for use. The lifetime for SKs is a local matter.

#### 24.1.2 Private Cryptographic Keys

Any BACnet device X that needs to authenticate peers or encipher data needs to hold a unique Private Key ( $PK_x$ ).  $PK_x$  is a 56-bit Data Encryption Standard (DES) cryptographic key.  $PK_x$  is used to decipher SKs that are used in secure BACnet transactions.

Generation and distribution of the PKs in BACnet are considered local matters.

#### 24.1.3 Session Cryptographic Keys

The key server generates and distributes all the required SKs. To do this, it must hold a copy of all the PKs used on the BACnet network. An SK is a 56-bit DES cryptographic key. The method for generating an SK is a local matter. SKs are distributed, protected by a PK, using the AddListElement service.

#### 24.1.4 Cryptographic Algorithm

Enciphering and deciphering of data shall be performed using the DES algorithm. DES is specified in Federal Information Processing Standard 46-2 (also known as ANSI X3.92). To prevent compromise of the data or the cryptographic keys, all enciphered APDUs shall be padded, before encipherment, with random data up to the maximum length supported by the recipient device.

## 24.2 Authentication Mechanisms

### 24.2.1 Procedure for Obtaining a Session Key

The procedure for obtaining an SK is as follows:

- (a) Device A, which requires authentication, sends a RequestKey service request to the key server indicating that remote client B will be authenticated.
- (b) The key server authenticates that the RequestKey service request was initiated by device A, using  $PK_A$  in the message initiation authentication procedure in 24.2.4.
- (c) The key server generates a Session Key for devices A and B ( $SK_{AB}$ ).
- (d) The key server enciphers  $SK_{AB}$  and the BACnetAddress of device A with the  $PK_B$  of device B. This information is then sent to device B using an AddListElement request.
- (e) Device B accepts the AddListElement request and authenticates that the key was indeed sent by the key server, using  $PK_B$  in the message initiation authentication procedure in 24.2.4.
- (f) Once the key server has been authenticated, device B shall decipher  $SK_{AB}$  and place it in its Device object. A 'Result(+) is then returned to the key server for the AddListElement request.
- (g) The key server enciphers  $SK_{AB}$  and the BACnetAddress of client B with the  $PK_A$  of client A. This information is then sent to client A using a AddListElement request.
- (h) Device A accepts the AddListElement request and authenticates that the key was indeed sent by the key server, using  $PK_A$  in the message initiation authentication procedure in 24.2.4.
- (i) Once the key server has been authenticated, client A shall decipher  $SK_{AB}$  and place it in its Device object. A 'Result(+) is then returned to the key server for the AddListElement request.

### 24.2.2 Peer Authentication Mechanism

The procedure of peer authentication is summarized as follows:

- (a) Once device A receives  $SK_{AB}$ , authentication of device B can begin.
- (b) Device A generates an Authenticate service request and sends it to device B. The Service Request portion of the BACnet-Confirmed-Request-PDU, i.e., the fully formed Authenticate-Request production, is enciphered with  $SK_{AB}$ . The APDU header and all lower layer PCI are left unenciphered.
- (c) If device B can decipher the Authenticate service request, it shall modify the 'Pseudo Random Number' as specified in the Authenticate service procedure, encipher it as the 'Modified Random Number' using  $SK_{AB}$ , and return it in the Authenticate-ACK portion of a ComplexACK to device A.
- (d) If device A receives a ComplexACK with the correct 'Modified Random Number', then device B is authenticated.

### 24.2.3 Message Execution Authentication

The method used by a BACnet client to authenticate that a message is being executed by the correct BACnet server is performed by enhancing peer authentication to include a binding to a Transaction State Machine (TSM). This implies that message execution authentication can be performed only on confirmed service requests. The process of message execution authentication consists of two parts, obtaining an SK and authentication of message receipt. The process of obtaining an SK is described in 24.2.1. The procedure for Client A to authenticate that Server B is executing a certain message is as follows:

- (a) Once Client A receives  $SK_{AB}$ , message execution authentication of Server B can begin.
- (b) Client A generates an Authenticate service request and sends it to Server B. The 'Expected Invoke ID' parameter of this message shall contain the invokeID of the Confirmed Request APDU being authenticated. The Service Request

portion of the BACnet-Confirmed-Request-PDU, i.e., the fully formed Authenticate-Request production, is enciphered with  $SK_{AB}$ . The APDU header and all lower layer PCI are left unenciphered.

- (c) After sending the Authenticate service request, Client A shall immediately send the Confirmed Request APDU that is being authenticated to Server B. The InvokeId of the Confirmed Request APDU shall match the 'Expected Invoke ID' of the Authenticate service request.
- (d) If Server B can decipher the Authenticate service request, it shall wait up to 30 seconds for the Confirmed Request APDU with the 'Expected Invoke ID'. If the APDU is received, Server B shall modify the 'Pseudo Random Number' as specified in the Authenticate service procedure, encipher it as the 'Modified Random Number' using  $SK_{AB}$ , and return it in the Authenticate-ACK portion of a ComplexACK-PDU to Client A.
- (e) If Client A receives a ComplexACK for the Authenticate service request with the correct 'Modified Random Number', then the message is being executed by Server B.

*NOTE: This procedure may also be used by a server to authenticate the receipt of simple or complex acknowledgment by the client.*

#### 24.2.4 Message Initiation Authentication

The method used by a BACnet server to authenticate that a message was initiated by the claimed BACnet client is performed by enhancing peer authentication to include a binding to a Transaction State Machine (TSM). This implies that message initiation authentication can be performed only on confirmed service requests. When the message initiation authentication involves the key server, a PK is used to encipher and decipher the information. When neither device involved in the authentication is a key server, an SK is used to encipher and decipher information. The procedure for Server B to authenticate that Client A has initiated a certain message is as follows:

- (a) If neither Server B or Client A is a key server, an  $SK_{AB}$  must be obtained before authentication can begin.
- (b) Server B generates a Authenticate service request and sends it to Client A. The 'Expected Invoke ID' parameter of this message shall contain the InvokeId of the Confirmed Request APDU being authenticated. The Service Request portion of the BACnet-Confirmed-Request-PDU, i.e., the fully formed Authenticate-Request production, is enciphered with either  $SK_{AB}$ , or the appropriate PK if either A or B is a key server. The APDU header and all lower layer PCI are left unenciphered.
- (c) If Client A can decipher the Authenticate service request, it shall search its TSMs for the Confirmed Request APDU with the 'Expected Invoke ID'. If the TSM is found, Client A shall modify the 'Pseudo Random Number' as specified in the Authenticate service procedure, encipher it as the 'Modified Random Number' using the appropriate key, and return it in the Authenticate-ACK portion of a ComplexACK-PDU to Server B.
- (d) If Server B receives a ComplexACK for the Authenticate service request with the correct 'Modified Random Number', then the message was initiated by Client A.

#### 24.2.5 Operator Authentication

BACnet provides a method that allows an operator to log onto a networked device. The procedure of operator authentication is summarized as follows:

- (a) The operator logs onto Client A, giving an operator name and password. The only restriction on passwords and names is that they be printable characters. If Client A has the capability, it shall authenticate the password locally. Otherwise, it shall proceed on to the next step.
- (b) Client A shall generate an Authenticate service request and transmit it to the key server. The 'Operator Name' and 'Operator Password' parameters shall be included in the Authenticate request. The Service Request portion of the BACnet-Confirmed-Request-PDU, i.e., the fully formed Authenticate-Request production, is enciphered with Client A's PK. The APDU header and all lower layer PCI are left unenciphered.
- (c) If the key server can decipher the Authenticate service request, it shall check the 'Operator Name' against the 'Operator Password' to see if they correlate. If the operator is authentic, the key server shall modify the 'Pseudo Random Number' as specified in the Authenticate service procedure, encipher it as the 'Modified Random Number'

using Client A's PK, and return it in the Authenticate-ACK portion of a ComplexACK-PDU to Client A. If not, the key server shall return a 'Result(-)' with the Error portion of the BACnet-Error-PDU enciphered with Client A's PK.

- (d) If Client A receives a ComplexACK with the correct 'Modified Random Number', then the operator is authenticated.

### 24.3 Data Confidentiality Mechanism

The process of ensuring data confidentiality and integrity consists of two parts: obtaining an SK and enciphering data. The process of obtaining an SK is described in 24.2.1. The procedure of encipherment is as follows.

- (a) Once client A receives  $SK_{AB}$ , encipherment of data between A and B can begin.
- (b) Client A requests that an Enciphered Session be started with server B, using the Authenticate service. If the Authenticate service request is successful, the process proceeds to step 3. Otherwise, an Enciphered Session cannot be established.
- (c) When A needs to send data to B, A enciphers the data portion of the APDU using the key  $SK_{AB}$  and sends the APDU to B. The fixed part of the APDU as well as all lower layer PCI are left unenciphered.
- (d) When B receives the data from A, B deciphers the data portion of the APDU using the key  $SK_{AB}$ .
- (e) When B replies to A, the data portion of the APDU is enciphered using  $SK_{AB}$  and the fixed part of the APDU header and all lower layer PCI are left unenciphered.
- (f) To terminate the Enciphered Session, either A or B may send an Authenticate service request with 'Start Enciphered Session' set to FALSE.

#### 24.3.1 Requesting an Enciphered Session

The procedure to request an enciphered session is as follows:

- (a) Client A generates an Authenticate service request and sends it to server B. The 'Start Enciphered Session' parameter shall be sent and set to TRUE. The Service Request portion of the BACnet-Confirmed-Request-PDU, i.e., the fully formed Authenticate-Request production, is enciphered with  $SK_{AB}$ . The APDU header and all lower layer PCI are left unenciphered.
- (b) Before processing this message, B shall use the Message Initiation Authentication procedure in 24.2.4 to ensure that A sent the message. If B can decipher the Authenticate request and will accept the enciphered session, it shall modify the 'Pseudo Random Number' as specified in the Authenticate service procedure, encipher it as the 'Modified Random number' using  $SK_{AB}$ , and return it in the Authenticate-ACK portion of a ComplexACK-PDU to A. If not, B shall return a 'Result(-)' with the Error portion of the BACnet-Error-PDU enciphered using  $SK_{AB}$ .
- (c) If A receives a ComplexACK-PDU with the correct 'Modified Random Number', then an enciphered session is started.

#### 24.3.2 Ending an Enciphered Session

The procedure to terminate an enciphered session is as follows:

- (a) Device A generates an Authenticate confirmed request and sends it to device B. The 'Start Enciphered Session' parameter shall be included and set to FALSE. The Service Request portion of the BACnet-Confirmed-Request-PDU, i.e., the fully formed Authenticate-Request production, is enciphered with  $SK_{AB}$ . The APDU header and all lower layer PCI are left unenciphered.
- (b) Before processing this message, B shall use the Message Initiation Authentication procedure in 24.2.4 to ensure that A sent the message. If B can decipher the Authenticate request and will accept the termination of the enciphered session, it shall modify the 'Pseudo Random Number' as specified in the Authenticate service procedure, encipher it as the 'Modified Random Number' using  $SK_{AB}$ , and return a ComplexACK-PDU to A. If not, B shall return a 'Result(-)' with the Error portion of the BACnet-Error-PDU enciphered using  $SK_{AB}$ .

- (c) If Client A receives a ComplexACK-PDU with the the correct 'Modified Random Number', then the enciphered session is terminated.

## 24.4 RequestKey Service

The RequestKey service is used by a client BACnet protocol user to request that an SK be set up between itself and another BACnet protocol user. To ensure data integrity, the Service Request portion of the BACnet-Confirmed-Request-PDU, i.e., the fully formed RequestKey-Request production, shall be enciphered using the requesting client's PK. The APDU header and all lower layer PCI are left unenciphered. Note that the use of this service may require extending the originating device's APDU\_Timeout value to accommodate the time required to deliver an authenticated session key to both key server clients.

### 24.4.1 Structure

The structure of the RequestKey service primitives is shown in Table 24-1.

**Table 24-1.** Structure of RequestKey Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Requesting Device Identifier	M	M(=)		
Requesting Device Address	M	M(=)		
Remote Device Identifier	M	M(=)		
Remote Device Address	M	M(=)		
Result(+)			S	S(=)
Result(-)			S	S(=)
Error Type			M	M(=)

#### 24.4.1.1 Argument

This parameter shall convey the parameters for the RequestKey confirmed service request.

##### 24.4.1.1.1 Requesting Device Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the identity of the client requesting that an SK be generated. Since this argument is protected by encipherment, its integrity is assured.

##### 24.4.1.1.2 Requesting Device Address

This parameter, of type BACnetAddress, shall convey the address of the client requesting that an SK be generated. Since this argument is protected by encipherment, its integrity is assured.

##### 24.4.1.1.3 Remote Device Identifier

This parameter, of type BACnetObjectIdentifier, shall convey the identity of the associated remote device that is receiving an SK. Since this argument is protected by encipherment, its integrity is assured.

##### 24.4.1.1.4 Remote Device Address

This parameter, of type BACnetAddress, shall convey the address of the associated remote device that is receiving an SK. Since this argument is protected by encipherment, its integrity is assured.

#### 24.4.1.2 Result(+)

The 'Result('+) shall indicate that the service request succeeded. The security policy of authenticating that the requester does receive the 'Result('+) is a local matter. If authentication of this message is desired, Message Execution Authentication shall be used.

#### 24.4.1.3 Result(-)

The 'Result(-)' parameter shall indicate that the service request has failed in its entirety. The reason for failure shall be specified by the 'Error Type' parameter. To ensure data integrity, the 'Error Type' shall be protected by encipherment using the client's PK.

#### 24.4.1.3.1 Error Type

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. The Error Class shall be SECURITY. Error Codes are defined in 18.5.

#### 24.4.2 Service Procedure

The service provider (the key server) shall authenticate that this request was initiated by the requesting device using the Message Initiation Authentication procedure in 24.2.4 before proceeding. After deciphering and verifying the validity of the request, the key server shall generate the requested SK. Once this SK is generated, the key server shall deliver it to the Remote Device and then to the Requesting Device by writing to the List\_Of\_Session\_Keys property of the Device object using the AddListElement service. The List\_Of\_Session\_Keys property element shall be enciphered using the PK of the recipient. If this succeeds, the key server shall return a 'Result(+) for this service. If this fails, the key server shall return a 'Result(-)' for this service. The arguments of the 'Result(-)' shall be enciphered with the requesting device's PK.

### 24.5 Authenticate Service

The Authenticate service is used by a client protocol user to authenticate a peer device, initiating device, executing device, or human operator. To ensure data integrity, the Service Request portion of the BACnet-Confirmed-Request-PDU, i.e., the fully formed Authenticate-Request production, shall be enciphered. If the transaction is occurring between the client and the key server, the client's PK shall be used. If the transaction is between non-key server devices, the corresponding SK shall be used to encipher and decipher the parameters.

#### 24.5.1 Structure

The structure of the Authenticate service primitives is shown in Table 24-2.

**Table 24-2. Structure of Authenticate Primitives**

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Pseudo Random Number	M	M(=)		
Expected Invoke ID	U	U(=)		
Operator Name	U	U(=)		
Operator Password	C	C(=)		
Start Enciphered Session	U	U(=)		
Result(+)			S	S(=)
Modified Random Number			M	M(=)
Result(-)			S	S(=)
Error Type			M	M(=)

#### 24.5.1.1 Argument

This parameter shall convey the parameters for the Authenticate service request.

##### 24.5.1.1.1 Pseudo Random Number

This parameter, of type Unsigned32, is a pseudo random number generated by the service requester. It is used as the seed for the 'Result(+) argument called Modified Random Number.

##### 24.5.1.1.2 Expected Invoke ID

This parameter, of type Unsigned8, is an optional parameter used to perform Message Initiator Authentication and Message Execution Authentication. It shall be the 'Invoke Id' of the message being authenticated.

##### 24.5.1.1.3 Operator Name

This parameter, of type CharacterString, is an optional parameter used to perform Operator Authentication. If provided, it shall indicate the name of the operator requesting access.

#### **24.5.1.4 Operator Password**

This parameter, of type `CharacterString`, is a conditional parameter used to perform Operator Authentication. It shall be provided when the 'Operator Name' parameter is present. It shall indicate the password of the operator requesting access. The 'Operator Password' shall have a length of no more than 20 characters.

#### **24.5.1.5 Start Enciphered Session**

This optional parameter, of type `BOOLEAN`, indicates that the requesting BACnet-user is attempting to either start (TRUE) or terminate (FALSE) an enciphered session. If this parameter is absent, an enciphered session is not being established or terminated.

#### **24.5.1.2 Result(+)**

The 'Result(+)’ shall indicate that the service request succeeded. The security policy of authenticating that the requesting BACnet-user does receive the 'Result(+)’ is a local matter. If authentication of this message is desired, Message Execution Authentication shall be used. The 'Result(+)’ primitive returns a Modified Random Number as defined in 24.5.2.

#### **24.5.1.3 Result(-)**

The 'Result(-)' parameter shall indicate that the service request has failed in its entirety. The reason for failure shall be specified by the 'Error Type' parameter. To ensure data integrity, the 'Error Type' shall be protected by encipherment using the client's PK.

#### **24.5.1.3.1 Error Type**

This parameter consists of two component parameters: (1) an 'Error Class' and (2) an 'Error Code'. The Error Class shall be SECURITY. Error codes are defined in 18.5.

### **24.5.2 Service Procedure**

After deciphering and verifying the validity of the request, the service provider shall perform either

- (a) Message Execution Authentication;
- (b) Message Initiation Authentication;
- (c) Operator Authentication; or
- (d) Enciphered Session Determination.

In the event that the authentication succeeds, the service provider shall generate the Modified Random Number by inverting the most significant and least significant two bits of every octet of the received Pseudo Random Number and return it in the 'Result(+)’ primitive. Otherwise a 'Result(-)' shall be issued. In either case, the parameters of the APDU shall be enciphered. If the transaction is occurring between the client and the key server, the client's PK shall be used. If the transaction is between non-key-server clients, the corresponding SK shall be used to encipher and decipher the parameters.

#### **24.5.2.1 Message Execution Authentication**

The process of message execution authentication consists of the following:

- (a) Decode the Authenticate APDU and start a transaction state machine (TSM) for the 'Expected Invoke ID'.
- (b) Wait up to 30 seconds for the receipt of another APDU with the 'Expected Invoke ID' from the requester.
- (c) If an APDU with the 'Expected Invoke ID' is received, then a 'Result(+)’ shall be generated and returned to the requester. If not, then a 'Result(-)' shall be generated.

#### **24.5.2.2 Message Initiation Authentication**

The process of message initiation authentication consists of the following:

- (a) Decode the Authenticate APDU and determine if a transaction state machine (TSM) for the 'Expected Invoke ID' exists to the requester.

- (b) If an APDU with the 'Expected Invoke ID' is outstanding, then a 'Result(+)'' shall be generated and returned to the requester. If not, then a 'Result(-)' shall be generated.

#### 24.5.2.3 Operator Authentication

The process of operator authentication consists of the following:

- (a) Decode the Authenticate APDU and determine if a valid operator can be associated with the 'Operator Name' parameter of the APDU. If not, a negative result shall be returned to the requester.
- (b) If an operator exists, the 'Operator Password' shall be validated. If the password is valid, a 'Result(+)'' shall be returned to the requester. If not, a 'Result(-)' shall be returned to the requester.

#### 24.5.2.4 Enciphered Session Determination

The process of enciphered session determination consists of the following:

- (a) Decode the Authenticate APDU and send a Message Initiation Authentication request to the requester.
- (b) If the requester responds to the Message Initiation Authentication affirmatively, then the executing device shall determine if the request to either start or end an enciphered session can be accommodated. If the request can be accommodated, a 'Result(+)'' shall be sent. If not, a 'Result(-)' shall be sent.

## 25 REFERENCES

- ANSI/EIA/CEA-709.1-B (2002), *Control Network Protocol Specification*.
- ANSI/IEEE Standard 754 (1985), *IEEE Standard for Binary Floating-Point Arithmetic*.
- ANSI INCITS 92-1981 (R1998), (formerly ANSI X3.92-1981), *Data Encryption Algorithm*.
- ANSI INCITS X3.4-1986 (R1997), *Information Processing – Coded Character Sets – 7-Bit American National Standard Code for Information Interchange (7-bit ASCII)*.
- ANSI/TIA/EIA-232-F-1997 (R2002), *Interface Between Data Terminal Equipment and Data Communication Equipment Employing Serial Binary Data Interchange*.
- ANSI/TIA/EIA-485-A-1998 (R2003), *Standard for Electrical Characteristics of Generators and Receivers for Use in Balanced Digital Multipoint Systems*.
- ANSI X3.41-1974 (R1990), *American National Standard Code Extension Techniques for Use with the 7-bit Coded Character Set of American National Standard Code for Information Interchange*.
- ATA 878.1 (1999), *ARCNET Local Area Network Standard*.
- DDN Protocol Handbook, Volumes 1-3, NIC 50004, 50005, and 50006.
- Echelon, *LonMark™ Layer 1-6 Interoperability Guidelines Version 3.3*.
- FIPS 46-2 (1993), *Federal Information Processing Standards - Data Encryption Standard*.
- IETF RFC 2616 (1999), *Hypertext Transfer Protocol – HTTP/1.1*, Internet Engineering Task Force
- IETF RFC 2617 (1999), *HTTP Authentication: Basic and Digest Access Authentication*, Internet Engineering Task Force
- IETF RFC 2246 (1999), *The TLS Protocol Version 1.0*, Internet Engineering Task Force
- ISO 7498 (1984), *Information processing systems - Open Systems Interconnection - Basic Reference Model*.
- ISO TR 8509 (1987), *Information processing systems - Open Systems Interconnection - service conventions*.
- ISO 8649 (1988), *Information processing systems - Open Systems Interconnection - Service definition for the Association Control Service Element*.
- ISO 8802-2 (1998), *Information processing systems - Local area networks - Part 2: Logical link control*.
- ISO/IEC 8802-3 (2000), *Information processing systems - Local area networks - Part 3: Carrier sense multiple access with collision detection (CSMA/CD) access method and physical layer specifications*.
- ISO 8822 (1994), *Information processing systems - Open Systems Interconnection - Connection-oriented presentation service definition*.
- ISO/IEC 8824 (1990), *Information technology - Open Systems Interconnection - Specification of Abstract Syntax Notation One (ASN.1)*.
- ISO/IEC 8825 (1990), *Information technology - Open Systems Interconnection - Specification of Basic Encoding Rules for Abstract Syntax Notation One (ASN.1)*.

## **25. REFERENCES**

- ISO 9545 (1994), *Information processing systems - Open Systems Interconnection - Application Layer Structure (ALS)*.
- ISO/IEC 10646-1 (2000), *IT - Universal Multiple-Octet Coded Character Set (UCS) - Part 1: Architecture and Basic Multilingual Plane*.
- JIS C 6226 (1983), *Code of the Japanese Graphic Character Set for Information Interchange*. Japan Institute for Standardization.
- Konnex Association, *Konnex Handbook Volume 3: System Specifications*.
- Konnex Association, *Konnex Handbook Volume 3: System Specifications, Part 7: Interworking, Chapter 2: Datapoint Types*.
- Konnex Association, *Konnex Handbook Volume 3: System Specifications, Part 7: Interworking, Chapter 3: Standard Identifier Tables, Annex 1 – Property Identifiers*.
- Konnex Association, *Konnex Handbook Volume 7: Applications Descriptions*.
- NETSCAPE SSL3 DRAFT302 (1996), *The SSL Protocol Version 3.0*, Netscape Communications
- W3C (2000), *Simple Object Access Protocol (SOAP) 1.1*, World Wide Web Consortium
- W3C (2001), *XML Schema Part 0: Primer*, World Wide Web Consortium
- W3C (2001), *XML Schema Part 1: Structures*, World Wide Web Consortium
- W3C (2001), *XML Schema Part 2: Datatypes*, World Wide Web Consortium
- W3C (2003), *Extensible Markup Language (XML) 1.0 (Second Edition)*, World Wide Web Consortium
- WS-I (2004), *WS-I Basic Profile 1.0*, Web Services Interoperability Organization

### **Sources for Reference Material**

- ANSI: American National Standards Institute, 25 West 43<sup>rd</sup> St., 4<sup>th</sup> Floor, New York , NY 10036.
- DDN: Available from the Defense Data Network Information Center, SRI International, 333 Ravenswood Ave., Room EJ291, Menlo Park, CA 94025.
- Echelon: Echelon Corporation, 550 Meridian Ave., San Jose, CA 95126.
- EIA: Electronics Industries Alliance, 2500 Wilson Blvd. Arlington, VA 22201.
- EIBA: EIB Association (EIBA) s.c.r.l., Neerveldstraat / Rue de Neerveld 105, B-1200 Brussels, Belgium
- FIPS: National Institute of Standards and Technology, Gaithersburg, MD 20899.
- IEEE: The Institute of Electrical and Electronics Engineers, Inc., 3 Park Ave., 17<sup>th</sup> Floor, New York, NY 10016.
- Internet Engineering Task Force, [www.ietf.org](http://www.ietf.org).
- INCITS: The International Committee for Information Technology Standards (INCITS) is sponsored by the Information Technology Industry Council (ITI), 1250 Eye St. NW, Suite 200, Washington, DC 20005.
- ISO: Available from ANSI.
- JIS: Available from ANSI.

Konnex Association: Neerveldstraat / Rue de Neerveld 105, B-1200 Brussels, Belgium

LonMark International, 550 Meridian Avenue, San Jose, CA 95126.

Netscape Communications, [www.netscape.com](http://www.netscape.com)

W3C: World Wide Web Consortium, [www.w3.org](http://www.w3.org)

WS-I: Web Services Interoperability Organization, [www.ws-i.org](http://www.ws-i.org)

**ANNEX A - PROTOCOL IMPLEMENTATION CONFORMANCE STATEMENT (NORMATIVE)**

(This annex is part of this Standard and is required for its use.)

**BACnet Protocol Implementation Conformance Statement****Date:** \_\_\_\_\_**Vendor Name:** \_\_\_\_\_**Product Name:** \_\_\_\_\_**Product Model Number:** \_\_\_\_\_**Application Software Version:** \_\_\_\_\_ **Firmware Revision:** \_\_\_\_\_ **BACnet Protocol Revision:** \_\_\_\_\_**Product Description:**


---



---



---



---



---



---



---



---



---



---



---



---

**BACnet Standardized Device Profile (Annex L):**

- BACnet Operator Workstation (B-OWS)**
- BACnet Building Controller (B-BC)**
- BACnet Advanced Application Controller (B-AAC)**
- BACnet Application Specific Controller (B-ASC)**
- BACnet Smart Sensor (B-SS)**
- BACnet Smart Actuator (B-SA)**

**List all BACnet Interoperability Building Blocks Supported (Annex K):** \_\_\_\_\_

---



---



---

**Segmentation Capability:**

- Able to transmit segmented messages      Window Size \_\_\_\_\_
- Able to receive segmented messages      Window Size \_\_\_\_\_

**Standard Object Types Supported:**

An object type is supported if it may be present in the device. For each standard Object Type supported provide the following data:

- 1) Whether objects of this type are dynamically creatable using the CreateObject service
- 2) Whether objects of this type are dynamically deletable using the DeleteObject service
- 3) List of the optional properties supported
- 4) List of all properties that are writable where not otherwise required by this standard
- 5) List of all properties that are conditionally writable where not otherwise required by this standard
- 6) List of proprietary properties and for each its property identifier, datatype, and meaning

7) List of any property range restrictions

**Data Link Layer Options:**

- BACnet IP, (Annex J)
- BACnet IP, (Annex J), Foreign Device
- ISO 8802-3, Ethernet (Clause 7)
- ATA 878.1, 2.5 Mb. ARCNET (Clause 8)
- ATA 878.1, EIA-485 ARCNET (Clause 8), baud rate(s) \_\_\_\_\_
- MS/TP master (Clause 9), baud rate(s): \_\_\_\_\_
- MS/TP slave (Clause 9), baud rate(s): \_\_\_\_\_
- Point-To-Point, EIA 232 (Clause 10), baud rate(s): \_\_\_\_\_
- Point-To-Point, modem, (Clause 10), baud rate(s): \_\_\_\_\_
- LonTalk, (Clause 11), medium: \_\_\_\_\_
- Other: \_\_\_\_\_

**Device Address Binding:**

Is static device binding supported? (This is currently necessary for two-way communication with MS/TP slaves and certain other devices.)  Yes       No

**Networking Options:**

- Router, Clause 6 - List all routing configurations, e.g., ARCNET-Ethernet, Ethernet-MS/TP, etc.
- Annex H, BACnet Tunneling Router over IP
- BACnet/IP Broadcast Management Device (BBMD)

Does the BBMD support registrations by Foreign Devices?     Yes     No

**Character Sets Supported:**

Indicating support for multiple character sets does not imply that they can all be supported simultaneously.

- |                                            |                                                                          |                                     |
|--------------------------------------------|--------------------------------------------------------------------------|-------------------------------------|
| <input type="checkbox"/> ANSI X3.4         | <input type="checkbox"/> IBM <sup>TM</sup> /Microsoft <sup>TM</sup> DBCS | <input type="checkbox"/> ISO 8859-1 |
| <input type="checkbox"/> ISO 10646 (UCS-2) | <input type="checkbox"/> ISO 10646 (UCS-4)                               | <input type="checkbox"/> JIS C 6226 |

**If this product is a communication gateway, describe the types of non-BACnet equipment/networks(s) that the gateway supports:**

---



---



---

**ANNEX B - GUIDE TO SPECIFYING BACnet DEVICES (INFORMATIVE)**

(This annex is not part of this standard but is included for informative purposes only.)

The BIBBs (Annex K) and standardized BACnet device profiles (Annex L) are intended to be a useful tool for people who design, specify, or operate building automation systems that contain BACnet devices. This classification approach is a compromise between two conflicting goals. The first goal is to promote interoperability by limiting the various combinations of BACnet object types and services that can be supported and still conform to this standard. The other goal is to avoid unnecessarily restricting manufacturers of BACnet devices in the sense that they would be required to provide BACnet functionality that would never be used by a device except to meet a conformance requirement. Maximum interoperability would be achieved by requiring all BACnet devices to support exactly the same combination of standard object types and application services. On the other hand, complete flexibility for manufacturers would inevitably lead to such widespread variation in the particular object types and application services that are supported that many devices would only partially interoperate. Interoperability would be limited to the intersection of the application services and object types supported by the devices.

The idea behind the BIBB and device profile model is to combine the portions of the BACnet protocol that are needed to perform particular functions, and to identify those functions that a system designer would expect in a certain type of device. When designing or specifying BACnet devices for an automation system, it is appropriate to specify the device profile that best meets the needs of the application and any additional BIBBs that are also required. Devices can be expected to interoperate with respect to a given BIBB so long as one device implements the A-side functionality and the other device implements the B-side functionality.

A particular manufacturer may decide to build a product that supports more BIBBs than required by its device profile. This can be determined from the PICS.

**ANNEX C - FORMAL DESCRIPTION OF OBJECT TYPE STRUCTURES (INFORMATIVE)**

(This annex is not part of this standard but is included for informative purposes only.)

**ACCUMULATOR ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	Unsigned,
description	[28]	CharacterString OPTIONAL,
device-type	[31]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
out-of-service	[81]	BOOLEAN,
scale	[186]	BACnetScale,
units	[117]	BACnetEngineeringUnits,
prescale	[188]	BACnetPrescale OPTIONAL,
max-pres-value	[65]	Unsigned,
value-change-time	[192]	BACnetDateTime OPTIONAL,
value-before-change	[190]	Unsigned OPTIONAL,
value-set	[191]	Unsigned OPTIONAL,
logging-record	[184]	BACnetAccumulatorRecord OPTIONAL,
logging-object	[183]	BACnetObjectIdentifier OPTIONAL,
pulse-rate	[186]	Unsigned OPTIONAL,
high-limit	[45]	Unsigned OPTIONAL,
low-limit	[59]	Unsigned OPTIONAL,
limit-monitoring-interval	[182]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
time-delay	[113]	Unsigned OPTIONAL,
limit-enable	[52]	BACnetLimitEnable OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[167]	CharacterString OPTIONAL

**ANALOG-INPUT ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	REAL,
description	[28]	CharacterString OPTIONAL,
device-type	[31]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
out-of-service	[81]	BOOLEAN,
update-interval	[118]	Unsigned OPTIONAL,
units	[117]	BACnetEngineeringUnits,
min-pres-value	[69]	REAL OPTIONAL,
max-pres-value	[65]	REAL OPTIONAL,
resolution	[106]	REAL OPTIONAL,
cov-increment	[22]	REAL OPTIONAL,

time-delay	[113]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
high-limit	[45]	REAL OPTIONAL,
low-limit	[59]	REAL OPTIONAL,
deadband	[25]	REAL OPTIONAL,
limit-enable	[52]	BACnetLimitEnable OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**ANALOG-OUTPUT ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	REAL,
description	[28]	CharacterString OPTIONAL,
device-type	[31]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
out-of-service	[81]	BOOLEAN,
units	[117]	BACnetEngineeringUnits,
min-pres-value	[69]	REAL OPTIONAL,
max-pres-value	[65]	REAL OPTIONAL,
resolution	[106]	REAL OPTIONAL,
priority-array	[87]	BACnetPriorityArray,
relinquish-default	[104]	REAL,
cov-increment	[22]	REAL OPTIONAL,
time-delay	[113]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
high-limit	[45]	REAL OPTIONAL,
low-limit	[59]	REAL OPTIONAL,
deadband	[25]	REAL OPTIONAL,
limit-enable	[52]	BACnetLimitEnable OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**ANALOG-VALUE ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	REAL,
description	[28]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
out-of-service	[81]	BOOLEAN,

units	[117]	BACnetEngineeringUnits,
priority-array	[87]	BACnetPriorityArray OPTIONAL,
relinquish-default	[104]	REAL OPTIONAL,
cov-increment	[22]	REAL OPTIONAL,
time-delay	[113]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
high-limit	[45]	REAL OPTIONAL,
low-limit	[59]	REAL OPTIONAL,
deadband	[25]	REAL OPTIONAL,
limit-enable	[52]	BACnetLimitEnable OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**AVERAGING ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
minimum-value	[136]	REAL,
minimum-value-timestamp	[150]	BACnetDateTime OPTIONAL,
average-value	[125]	REAL,
variance-value	[151]	REAL OPTIONAL,
maximum-value	[135]	REAL,
maximum-value-timestamp	[149]	BACnetDateTime OPTIONAL,
description	[28]	CharacterString OPTIONAL,
attempted-samples	[124]	Unsigned,
valid-samples	[146]	Unsigned,
object-property-reference	[78]	BACnetDeviceObjectPropertyReference,
window-interval	[147]	Unsigned,
window-samples	[148]	Unsigned,
profile-name	[168]	CharacterString OPTIONAL
}		

**BINARY-INPUT ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	BACnetBinaryPV,
description	[28]	CharacterString OPTIONAL,
device-type	[31]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
out-of-service	[81]	BOOLEAN,
polarity	[84]	BACnetPolarity,
inactive-text	[46]	CharacterString OPTIONAL,
active-text	[4]	CharacterString OPTIONAL,
change-of-state-time	[16]	BACnetDateTime OPTIONAL,
change-of-state-count	[15]	Unsigned OPTIONAL,
time-of-state-count-reset	[115]	BACnetDateTime OPTIONAL,
elapsed-active-time	[33]	Unsigned32 OPTIONAL,
time-of-active-time-reset	[114]	BACnetDateTime OPTIONAL,

time-delay	[113]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
alarm-value	[6]	BACnetBinaryPV OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**BINARY-OUTPUT ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	BACnetBinaryPV,
description	[28]	CharacterString OPTIONAL,
device-type	[31]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
out-of-service	[81]	BOOLEAN,
polarity	[84]	BACnetPolarity,
inactive-text	[46]	CharacterString OPTIONAL,
active-text	[4]	CharacterString OPTIONAL,
change-of-state-time	[16]	BACnetDateTime OPTIONAL,
change-of-state-count	[15]	Unsigned OPTIONAL,
time-of-state-count-reset	[115]	BACnetDateTime OPTIONAL,
elapsed-active-time	[33]	Unsigned32 OPTIONAL,
time-of-active-time-reset	[114]	BACnetDateTime OPTIONAL,
minimum-off-time	[66]	Unsigned32 OPTIONAL,
minimum-on-time	[67]	Unsigned32 OPTIONAL,
priority-array	[87]	BACnetPriorityArray,
relinquish-default	[104]	BACnetBinaryPV,
time-delay	[113]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
feedback-value	[40]	BACnetBinaryPV OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**BINARY-VALUE ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	BACnetBinaryPV,
description	[28]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
out-of-service	[81]	BOOLEAN,
inactive-text	[46]	CharacterString OPTIONAL,

active-text	[4]	CharacterString OPTIONAL,
change-of-state-time	[16]	BACnetDateTime OPTIONAL,
change-of-state-count	[15]	Unsigned OPTIONAL,
time-of-state-count-reset	[115]	BACnetDateTime OPTIONAL,
elapsed-active-time	[33]	Unsigned32 OPTIONAL,
time-of-active-time-reset	[114]	BACnetDateTime OPTIONAL,
minimum-off-time	[66]	Unsigned32 OPTIONAL,
minimum-on-time	[67]	Unsigned32 OPTIONAL,
priority-array	[87]	BACnetPriorityArray OPTIONAL,
relinquish-default	[104]	BACnetBinaryPV OPTIONAL,
time-delay	[113]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
alarm-value	[6]	BACnetBinaryPV OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**CALENDAR ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
description	[28]	CharacterString OPTIONAL,
present-value	[85]	BOOLEAN,
date-list	[23]	SEQUENCE OF BACnetCalendarEntry,
profile-name	[168]	CharacterString OPTIONAL
}		

**COMMAND ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
description	[28]	CharacterString OPTIONAL,
present-value	[85]	Unsigned,
in-process	[47]	BOOLEAN,
all-writes-successful	[9]	BOOLEAN,
action	[2]	SEQUENCE OF BACnetActionList, -- accessed as a BACnetARRAY
action-text	[3]	SEQUENCE OF CharacterString OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**DEVICE ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
system-status	[112]	BACnetDeviceStatus,
vendor-name	[121]	CharacterString,
vendor-identifier	[120]	Unsigned16,
model-name	[70]	CharacterString,
firmware-revision	[44]	CharacterString,
application-software-version	[12]	CharacterString,
location	[58]	CharacterString OPTIONAL,

description	[28] CharacterString OPTIONAL,
protocol-version	[98] Unsigned,
protocol-revision	[139] Unsigned,
protocol-services-supported	[97] BACnetServicesSupported,
protocol-object-types-supported	[96] BACnetObjectTypesSupported,
object-list	[76] SEQUENCE OF BACnetObjectIdentifier, -- accessed as a BACnetARRAY
structured-object-list	[209] SEQUENCE OF BACnetObjectIdentifier OPTIONAL, -- accessed as a BACnetARRAY
max-APDU-length-supported	[62] Unsigned,
segmentation-supported	[107] BACnetSegmentation,
vt-classes-supported	[122] SEQUENCE OF BACnetVTClass OPTIONAL,
active-vt-sessions	[5] SEQUENCE OF BACnetVTSessions OPTIONAL,
local-time	[57] Time OPTIONAL,
local-date	[56] Date OPTIONAL,
utc-offset	[119] INTEGER OPTIONAL,
daylight-savings-status	[24] BOOLEAN OPTIONAL,
apdu-segment-timeout	[10] Unsigned OPTIONAL,
apdu-timeout	[11] Unsigned OPTIONAL,
number-of-APDU-retries	[73] Unsigned,
list-of-session-keys	[55] SEQUENCE OF BACnetSessionKey OPTIONAL,
time-synchronization-recipients	[116] SEQUENCE OF BACnetRecipient OPTIONAL,
max-master	[64] Unsigned(1..127) OPTIONAL, -- required for MS/TP master, see 12.11
max-info-frames	[63] Unsigned OPTIONAL, -- required for MS/TP master, see 12.11
device-address-binding	[30] SEQUENCE OF BACnetAddressBinding,
database-revision	[155] Unsigned,
configuration-files	[154] SEQUENCE OF BACnetObjectIdentifier OPTIONAL,
last-restore-time	[157] BACnetTimeStamp OPTIONAL,
backup-failure-timeout	[153] Unsigned16 OPTIONAL,
active-cov-subscriptions	[152] SEQUENCE OF BACnetCOVSubscription OPTIONAL,
max-segments-accepted	[167] Unsigned OPTIONAL,
slave-proxy-enable	[172] SEQUENCE OF BOOLEAN OPTIONAL,
auto-slave-discovery	[169] SEQUENCE OF BOOLEAN OPTIONAL,
slave-address-binding	[171] SEQUENCE OF BACnetAddressBinding OPTIONAL,
manual-slave-address-binding	[170] SEQUENCE OF BACnetAddressBinding OPTIONAL,
profile-name	[168] CharacterString OPTIONAL,
last-restart-reason	[196] BACnetRestartReason OPTIONAL,
time-of-device-restart	[203] BACnetTimeStamp OPTIONAL,
restart-notification-recipients	[202] SEQUENCE OF BACnetRecipient OPTIONAL,
utc-time-synchronization-recipients	[206] SEQUENCE OF BACnetRecipient OPTIONAL,
time-synchronization-interval	[204] Unsigned OPTIONAL,
align-intervals	[193] BOOLEAN OPTIONAL,
interval-offset	[195] Unsigned OPTIONAL
}	

**EVENT-ENROLLMENT ::= SEQUENCE {**

object-identifier	[75] BACnetObjectIdentifier,
object-name	[77] CharacterString,
object-type	[79] BACnetObjectType,
description	[28] CharacterString OPTIONAL,
event-type	[37] BACnetEventType,
notify-type	[72] BACnetNotifyType,
event-parameters	[83] BACnetEventParameter,
object-property-reference	[78] BACnetDeviceObjectPropertyReference,
event-state	[36] BACnetEventState,
event-enable	[35] BACnetEventTransitionBits,

acked-transitions	[0]	BACnetEventTransitionBits,
notification-class	[17]	Unsigned,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp, -- accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**EVENT-LOG ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
description	[28]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
enable	[133]	BOOLEAN,
start-time	[142]	BACnetDateTime OPTIONAL,
stop-time	[143]	BACnetDateTime OPTIONAL,
stop-when-full	[144]	BOOLEAN,
buffer-size	[126]	Unsigned32,
log-buffer	[131]	SEQUENCE OF BACnetEventLogRecord,
record-count	[141]	Unsigned32,
total-record-count	[145]	Unsigned32,
notification-threshold	[137]	Unsigned32 OPTIONAL,
records-since-notification	[140]	Unsigned32 OPTIONAL,
last-notify-record	[173]	Unsigned32 OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, --accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**FILE ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
description	[28]	CharacterString OPTIONAL,
file-type	[43]	CharacterString,
file-size	[42]	Unsigned,
modification-date	[71]	BACnetDateTime,
archive	[13]	BOOLEAN,
read-only	[99]	BOOLEAN,
file-access-method	[41]	BACnetFileAccessMethod,
record-count	[141]	Unsigned OPTIONAL,
profile-name	[168]	CharacterString OPTIONAL
}		

**GROUP ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
description	[28]	CharacterString OPTIONAL,
list-of-group-members	[53]	SEQUENCE OF ReadAccessSpecification,
present-value	[85]	SEQUENCE OF ReadAccessResult,

profile-name	[168]	CharacterString OPTIONAL
	}	

**LIFE-SAFETY-POINT ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	BACnetLifeSafetyState,
tracking-value	[164]	BACnetLifeSafetyState,
description	[28]	CharacterString OPTIONAL,
device-type	[31]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability,
out-of-service	[81]	BOOLEAN,
mode	[160]	BACnetLifeSafetyMode,
accepted-modes	[175]	SEQUENCE OF BACnetLifeSafetyMode,
time-delay	[113]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
life-safety-alarm-values	[166]	SEQUENCE OF BACnetLifeSafetyState OPTIONAL,
alarm-values	[7]	SEQUENCE OF BACnetLifeSafetyState OPTIONAL,
fault-values	[39]	SEQUENCE OF BACnetLifeSafetyState OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, --accessed as a BACnetARRAY
silenced	[163]	BACnetSilencedState,
operation-expected	[161]	BACnetLifeSafetyOperation,
maintenance-required	[158]	BACnetMaintenance OPTIONAL,
setting	[162]	Unsigned8 OPTIONAL,
direct-reading	[156]	REAL OPTIONAL,
units	[117]	BACnetEngineeringUnits OPTIONAL,
member-of	[159]	SEQUENCE OF BACnetDeviceObjectReference OPTIONAL,
profile-name	[168]	CharacterString OPTIONAL
	}	

**LIFE-SAFETY-ZONE ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	BACnetLifeSafetyState,
tracking-value	[164]	BACnetLifeSafetyState,
description	[28]	CharacterString OPTIONAL,
device-type	[31]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability,
out-of-service	[81]	BOOLEAN,
mode	[160]	BACnetLifeSafetyMode,
accepted-modes	[175]	SEQUENCE OF BACnetLifeSafetyMode,
time-delay	[113]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
life-safety-alarm-values	[166]	SEQUENCE OF BACnetLifeSafetyState OPTIONAL,
alarm-values	[7]	SEQUENCE OF BACnetLifeSafetyState OPTIONAL,
fault-values	[39]	SEQUENCE OF BACnetLifeSafetyState OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
silenced	[163]	BACnetSilencedState,
operation-expected	[161]	BACnetLifeSafetyOperation,
maintenance-required	[158]	BOOLEAN OPTIONAL,
zone-members	[165]	SEQUENCE OF BACnetDeviceObjectReference,
member-of	[159]	SEQUENCE OF BACnetDeviceObjectReference OPTIONAL,
profile-name	[168]	CharacterString OPTIONAL

**LOOP ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
present-value	[85]	REAL,
description	[28]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
out-of-service	[81]	BOOLEAN,
update-interval	[118]	Unsigned OPTIONAL,
output-units	[82]	BACnetEngineeringUnits,
manipulated-variable-reference	[60]	BACnetObjectPropertyReference,
controlled-variable-reference	[19]	BACnetObjectPropertyReference,
controlled-variable-value	[21]	REAL,
controlled-variable-units	[20]	BACnetEngineeringUnits,
setpoint-reference	[109]	BACnetSetpointReference,
setpoint	[108]	REAL,
action	[2]	BACnetAction,
proportional-constant	[93]	REAL OPTIONAL,
proportional-constant-units	[94]	BACnetEngineeringUnits OPTIONAL,
integral-constant	[49]	REAL OPTIONAL,
integral-constant-units	[50]	BACnetEngineeringUnits OPTIONAL,
derivative-constant	[26]	REAL OPTIONAL,

derivative-constant-units	[27] BACnetEngineeringUnits OPTIONAL,
bias	[14] REAL OPTIONAL,
maximum-output	[61] REAL OPTIONAL,
minimum-output	[68] REAL OPTIONAL,
priority-for-writing	[88] Unsigned (1..16),
cov-increment	[22] REAL OPTIONAL,
time-delay	[113] Unsigned OPTIONAL,
notification-class	[17] Unsigned OPTIONAL,
error-limit	[34] REAL OPTIONAL,
deadband	[25] REAL OPTIONAL,
event-enable	[35] BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0] BACnetEventTransitionBits OPTIONAL,
notify-type	[72] BACnetNotifyType OPTIONAL,
event-time-stamps	[130] SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[168] CharacterString OPTIONAL
}	

**MULTI-STATE-INPUT ::= SEQUENCE {**

object-identifier	[75] BACnetObjectIdentifier,
object-name	[77] CharacterString,
object-type	[79] BACnetObjectType,
present-value	[85] Unsigned, -- maximum value is restricted by the number-of-states
description	[28] CharacterString OPTIONAL,
device-type	[31] CharacterString OPTIONAL,
status-flags	[111] BACnetStatusFlags,
event-state	[36] BACnetEventState,
reliability	[103] BACnetReliability OPTIONAL,
out-of-service	[81] BOOLEAN,
number-of-states	[74] Unsigned,
state-text	[110] SEQUENCE OF CharacterString OPTIONAL, -- accessed as a BACnetARRAY
time-delay	[113] Unsigned OPTIONAL,
notification-class	[17] Unsigned OPTIONAL,
alarm-values	[7] SEQUENCE OF Unsigned OPTIONAL,
fault-values	[39] SEQUENCE OF Unsigned OPTIONAL,
event-enable	[35] BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0] BACnetEventTransitionBits OPTIONAL,
notify-type	[72] BACnetNotifyType OPTIONAL,
event-time-stamps	[130] SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[168] CharacterString OPTIONAL
}	

**MULTI-STATE-OUTPUT ::= SEQUENCE {**

object-identifier	[75] BACnetObjectIdentifier,
object-name	[77] CharacterString,
object-type	[79] BACnetObjectType,
present-value	[85] Unsigned, -- maximum value is restricted by the number-of-states
description	[28] CharacterString OPTIONAL,
device-type	[31] CharacterString OPTIONAL,
status-flags	[111] BACnetStatusFlags,
event-state	[36] BACnetEventState,
reliability	[103] BACnetReliability OPTIONAL,
out-of-service	[81] BOOLEAN,
number-of-states	[74] Unsigned,
state-text	[110] SEQUENCE OF CharacterString OPTIONAL, -- accessed as a BACnetARRAY

priority-array relinquish-default time-delay notification-class feedback-value event-enable acked-transitions notify-type event-time-stamps  profile-name }	[87] BACnetPriorityArray, [104] Unsigned, [113] Unsigned OPTIONAL, [17] Unsigned OPTIONAL, [40] Unsigned OPTIONAL, [35] BACnetEventTransitionBits OPTIONAL, [0] BACnetEventTransitionBits OPTIONAL, [72] BACnetNotifyType OPTIONAL, [130] SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY [168] CharacterString OPTIONAL
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**MULTI-STATE-VALUE** ::= SEQUENCE {

object-identifier object-name object-type present-value  description status-flags event-state reliability out-of-service number-of-states state-text  priority-array relinquish-default time-delay notification-class alarm-values fault-values event-enable acked-transitions notify-type event-time-stamps  profile-name }	[75] BACnetObjectIdentifier, [77] CharacterString, [79] BACnetObjectType, [85] Unsigned, -- maximum value is restricted by the number-of-states [28] CharacterString OPTIONAL, [111] BACnetStatusFlags, [36] BACnetEventState, [103] BACnetReliability OPTIONAL, [81] BOOLEAN, [74] Unsigned, [110] SEQUENCE OF CharacterString OPTIONAL, -- accessed as a BACnetARRAY [87] BACnetPriorityArray OPTIONAL, [104] Unsigned OPTIONAL, [113] Unsigned OPTIONAL, [17] Unsigned OPTIONAL, [7] SEQUENCE OF Unsigned OPTIONAL, [39] SEQUENCE OF Unsigned OPTIONAL, [35] BACnetEventTransitionBits OPTIONAL, [0] BACnetEventTransitionBits OPTIONAL, [72] BACnetNotifyType OPTIONAL, [130] SEQUENCE OF BACnetTimeStamp OPTIONAL, --accessed as a BACnetARRAY [168] CharacterString OPTIONAL
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**NOTIFICATION-CLASS** ::= SEQUENCE {

object-identifier object-name object-type description notification-class priority ack-required recipient-list profile-name }	[75] BACnetObjectIdentifier, [77] CharacterString, [79] BACnetObjectType, [28] CharacterString OPTIONAL, [17] Unsigned, [86] SEQUENCE SIZE(3) OF Unsigned, -- accessed as a BACnetARRAY [1] BACnetEventTransitionBits, [102] SEQUENCE OF BACnetDestination, [168] CharacterString OPTIONAL
---------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**PROGRAM** ::= SEQUENCE {

object-identifier object-name	[75] BACnetObjectIdentifier, [77] CharacterString,
----------------------------------	-------------------------------------------------------

object-type	[79] BACnetObjectType,
program-state	[92] BACnetProgramState,
program-change	[90] BACnetProgramRequest,
reason-for-halt	[100] BACnetProgramError OPTIONAL,
description-of-halt	[29] CharacterString OPTIONAL,
program-location	[91] CharacterString OPTIONAL,
description	[28] CharacterString OPTIONAL,
instance-of	[48] CharacterString OPTIONAL,
status-flags	[111] BACnetStatusFlags,
reliability	[103] BACnetReliability OPTIONAL,
out-of-service	[81] BOOLEAN,
profile-name	[168] CharacterString OPTIONAL
}	

**PULSE-CONVERTER** ::= SEQUENCE {

object-identifier	[75] BACnetObjectIdentifier,
object-name	[77] CharacterString,
object-type	[79] BACnetObjectType,
description	[28] CharacterString OPTIONAL,
present-value	[85] REAL,
input-reference	[181] BACnetObjectPropertyReference OPTIONAL,
status-flags	[111] BACnetStatusFlags,
event-state	[36] BACnetEventState,
reliability	[103] BACnetReliability OPTIONAL,
out-of-service	[81] BOOLEAN,
units	[117] BACnetEngineeringUnits,
scale-factor	[188] REAL,
adjust-value	[176] REAL,
count	[177] Unsigned,
update-time	[189] BACnetDateTime,
count-change-time	[179] BACnetDateTime,
count-before-change	[178] Unsigned,
cov-increment	[22] REAL OPTIONAL,
cov-period	[180] Unsigned OPTIONAL,
notification-class	[17] Unsigned OPTIONAL,
time-delay	[113] Unsigned OPTIONAL,
high-limit	[45] REAL OPTIONAL,
low-limit	[59] REAL OPTIONAL,
deadband	[25] REAL OPTIONAL,
limit-enable	[52] BACnetLimitEnable OPTIONAL,
event-enable	[35] BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0] BACnetEventTransitionBits OPTIONAL,
notify-type	[72] BACnetNotifyType OPTIONAL,
event-time-stamps	[130] SEQUENCE OF BACnetTimeStamp OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[167] CharacterString OPTIONAL
}	

**SCHEDEULE** ::= SEQUENCE {

object-identifier	[75] BACnetObjectIdentifier,
object-name	[77] CharacterString,
object-type	[79] BACnetObjectType,
present-value	[85] ABSTRACT-SYNTAX.&Type, -- Any datatype
description	[28] CharacterString OPTIONAL,
effective-period	[32] BACnetDateRange,
weekly-schedule	[123] SEQUENCE SIZE(7) OF BACnetDailySchedule OPTIONAL,

schedule-default exception-schedule  list-of-object-property-references priority-for-writing status-flags reliability out-of-service profile-name }	-- accessed as a BACnetARRAY [174] ABSTRACT-SYNTAX.&Type, -- Any primitive datatype, [38] SEQUENCE OF BACnetSpecialEvent OPTIONAL, -- accessed as a BACnetARRAY [54] SEQUENCE OF BACnetDeviceObjectPropertyReference, [88] Unsigned (1..16), [111] BACnetStatusFlags, [103] BACnetReliability, [81] BOOLEAN, [168] CharacterString OPTIONAL
<b>TREND-LOG ::= SEQUENCE {</b> object-identifier object-name object-type description enable start-time stop-time log-device-object-property log-interval cov-resubscription-interval client-cov-increment stop-when-full buffer-size log-buffer record-count total-record-count notification-threshold records-since-notification last-notify-record event-state notification-class event-enable acked-transitions notify-type event-time-stamps  profile-name logging-type align-intervals interval-offset trigger status-flags reliability }	[75] BACnetObjectIdentifier, [77] CharacterString, [79] BACnetObjectType, [28] CharacterString OPTIONAL, [133] BOOLEAN, [142] BACnetDateTime OPTIONAL, [143] BACnetDateTime OPTIONAL, [132] BACnetDeviceObjectPropertyReference OPTIONAL, [134] Unsigned OPTIONAL, [128] Unsigned OPTIONAL, [127] BACnetClientCOV OPTIONAL, [144] BOOLEAN, [126] Unsigned32, [131] SEQUENCE OF BACnetLogRecord, [141] Unsigned32, [145] Unsigned32, [137] Unsigned32 OPTIONAL, [140] Unsigned32 OPTIONAL, [173] Unsigned32 OPTIONAL, [36] BACnetEventState, [17] Unsigned OPTIONAL, [35] BACnetEventTransitionBits OPTIONAL, [0] BACnetEventTransitionBits OPTIONAL, [72] BACnetNotifyType OPTIONAL, [130] SEQUENCE OF BACnetTimeStamp OPTIONAL, --accessed as a BACnetARRAY [168] CharacterString OPTIONAL, [197] BACnetLoggingType, [193] BOOLEAN OPTIONAL, [195] Unsigned OPTIONAL, [205] BOOLEAN OPTIONAL, [111] BACnetStatusFlags, [103] BACnetReliability OPTIONAL
<b>ACCESS-DOOR ::= SEQUENCE {</b> object-identifier object-name object-type present-value description status-flags event-state	[75] BACnetObjectIdentifier, [77] CharacterString, [79] BACnetObjectType, [85] BACnetDoorValue, [28] CharacterString OPTIONAL, [111] BACnetStatusFlags, [36] BACnetEventState,

reliability	[103]	BACnetReliability,
out-of-service	[81]	BOOLEAN,
priority-array	[87]	BACnetPriorityArray,
relinquish-default	[104]	BACnetDoorValue,
door-status	[231]	BACnetDoorStatus,
lock-status	[233]	BACnetLockStatus,
secured-status	[235]	BACnetDoorSecuredStatus,
door-members	[228]	SEQUENCE OF BACnetDeviceObjectReference OPTIONAL, --accessed as a BACnetARRAY
door-pulse-time	[230]	Unsigned,
door-extended-pulse-time	[227]	Unsigned OPTIONAL,
door-unlock-delay-time	[232]	Unsigned OPTIONAL,
door-open-too-long-time	[229]	Unsigned,
door-alarm-state	[226]	BACnetDoorAlarmState OPTIONAL,
masked-alarm-values	[234]	SEQUENCE OF BACnetDoorAlarmState OPTIONAL,
maintenance-required	[158]	BACnetMaintenance OPTIONAL,
time-delay	[113]	Unsigned OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
alarm-values	[7]	SEQUENCE OF BACnetDoorAlarmState OPTIONAL,
fault-values	[39]	SEQUENCE OF BACnetDoorAlarmState OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, --accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL
}		

**LOAD-CONTROL ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
description	[28]	CharacterString OPTIONAL,
present-value	[85]	BACnetShedState,
state-description	[28]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
requested-shed-level	[218]	BACnetShedLevel,
start-time	[142]	BACnetDateTime,
shed-duration	[219]	Unsigned,
duty-window	[213]	Unsigned,
enable	[133]	BOOLEAN,
full-duty-baseline	[215]	REAL OPTIONAL,
expected-shed-level	[214]	BACnetShedLevel,
actual-shed-level	[212]	BACnetShedLevel,
shed-levels	[221]	SEQUENCE OF Unsigned, -- accessed as a BACnetARRAY
shed-level-descriptions	[220]	SEQUENCE OF CharacterString, -- accessed as a BACnetARRAY
notification-class	[17]	Unsigned OPTIONAL,
time-delay	[113]	Unsigned OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL, – accessed as a BACnetARRAY
profile-name	[167]	CharacterString OPTIONAL

{

**STRUCTURED-VIEW ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
description	[28]	CharacterString OPTIONAL,
node-type	[208]	BACnetNodeType OPTIONAL,
node-subtype	[207]	CharacterString OPTIONAL,
subordinate-list	[211]	SEQUENCE OF BACnetDeviceObjectReference, -- accessed as a BACnetARRAY
subordinate-annotations	[210]	SEQUENCE OF CharacterString OPTIONAL, -- accessed as a BACnetARRAY
profile-name	[167]	CharacterString OPTIONAL

}

**TREND-LOG-MULTIPLE ::= SEQUENCE {**

object-identifier	[75]	BACnetObjectIdentifier,
object-name	[77]	CharacterString,
object-type	[79]	BACnetObjectType,
description	[28]	CharacterString OPTIONAL,
status-flags	[111]	BACnetStatusFlags,
event-state	[36]	BACnetEventState,
reliability	[103]	BACnetReliability OPTIONAL,
enable	[133]	BOOLEAN,
start-time	[142]	BACnetDateTime OPTIONAL,
stop-time	[143]	BACnetDateTime OPTIONAL,
log-device-object-property	[132]	SEQUENCE OF BACnetDeviceObjectProperty, --accessed as a BACnetARRAY
logging-type	[197]	BACnetLoggingType,
log-interval	[134]	Unsigned,
align-intervals	[193]	BOOLEAN OPTIONAL,
interval-offset	[195]	Unsigned OPTIONAL,
trigger	[205]	BOOLEAN OPTIONAL,
stop-when-full	[144]	BOOLEAN,
buffer-size	[126]	Unsigned32,
log-buffer	[131]	SEQUENCE OF BACnetLogMultipleRecord,
record-count	[141]	Unsigned32,
total-record-count	[145]	Unsigned32,
notification-threshold	[137]	Unsigned32 OPTIONAL,
records-since-notification	[140]	Unsigned32 OPTIONAL,
last-notify-record	[173]	Unsigned32 OPTIONAL,
notification-class	[17]	Unsigned OPTIONAL,
event-enable	[35]	BACnetEventTransitionBits OPTIONAL,
acked-transitions	[0]	BACnetEventTransitionBits OPTIONAL,
notify-type	[72]	BACnetNotifyType OPTIONAL,
event-time-stamps	[130]	SEQUENCE OF BACnetTimeStamp OPTIONAL --accessed as a BACnetARRAY
profile-name	[168]	CharacterString OPTIONAL

}

**ANNEX D - EXAMPLES OF STANDARD OBJECT TYPES (INFORMATIVE)**

(This annex is not part of this standard but is included for informative purposes.)

This annex provides examples of the BACnet standard object types defined in Clause 12.

**D.1 Example of an Accumulator object**

Property:	Object_Identifier =	(Accumulator, Instance 1)
Property:	Object_Name =	"Tenant 1"
Property:	Object_Type =	ACCUMULATOR
Property:	Present_Value =	323
Property:	Description =	""
Property:	Device_Type =	"Electric Pulse"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Out_Of_Service =	FALSE
Property:	Scale =	2
Property:	Units =	KILOWATT_HOURS
Property:	Prescale =	(1,10000)
Property:	Max_Pres_Value =	9999
Property:	Value_Change_Time =	(23-MAR-01,18:50:21.2)
Property:	Value_Before_Change =	0
Property:	Value_Set =	67
Property:	Logging_Record =	((13-JUL-01,13:00:00.2),120,1,NORMAL)
Property:	Logging_Object =	(Trend Log, Instance 100)
Property:	Pulse_Rate =	3
Property:	High_Limit =	15
Property:	Low_Limit =	0
Property:	Limit_Monitoring_Interval =	300
Property:	Notification_Class =	3
Property:	Time_Delay =	10
Property:	Limit_Enable =	{TRUE, FALSE}
Property:	Event_Enable =	{TRUE, FALSE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	ALARM
Property:	Event_Time_Stamps =	((12-JUL-01,18:50:21.2), (*-*.*,*.*.*.*), (12-JUL-01,19:01:34.0))

**D.2 Example of an Analog Input Object**

The following is an example of an Analog Input object that is used for mixed air temperature of an air handler. The object supports both COV and intrinsic reporting.

Property:	Object_Identifier =	(Analog Input, Instance 1)
Property:	Object_Name =	"1AH1MAT"
Property:	Object_Type =	ANALOG_INPUT
Property:	Present_Value =	58.1
Property:	Description =	"Mixed Air Temperature"
Property:	Device_Type =	"1000 OHM RTD"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Update_Interval =	10

Property:	Units =	DEGREES_FAHRENHEIT
Property:	Min_Pres_Value =	-50.0
Property:	Max_Pres_Value =	250.0
Property:	Resolution =	0.1
Property:	COV_Increment =	0.2
Property:	Time_Delay =	10
Property:	Notification_Class =	3
Property:	High_Limit =	60.0
Property:	Low_Limit =	55.0
Property:	Deadband =	1.0
Property:	Limit_Enable =	{TRUE, TRUE}
Property:	Event_Enable =	{TRUE, FALSE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	EVENT
Property:	Event_Time_Stamps =	((23-MAR-95,18:50:21.2), (*-*-*,:*.*-*), (23-MAR-95,19:01:34.0))

#### D.3 Example of an Analog Output Object

The following is an example of an Analog Output object that is used for a damper in an air handler. The object supports neither COV nor intrinsic reporting.

Property:	Object_Identifier =	(Analog Output, Instance 1)
Property:	Object_Name =	"1AH1DMPR"
Property:	Object_Type =	ANALOG_OUTPUT
Property:	Present_Value =	75.0
Property:	Description =	"Damper Actuator"
Property:	Device_Type =	"3-8 PSI Actuator"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Units =	PERCENT
Property:	Min_Pres_Value =	0.0
Property:	Max_Pres_Value =	100.0
Property:	Resolution =	0.1
Property:	Priority_Array =	{NULL, NULL, NULL, NULL, 75.0... NULL}
Property:	Relinquish_Default =	50.0

#### D.4 Example of an Analog Value Object

The following is an example of an Analog Value object that is used for enthalpy calculation. The object supports neither COV nor intrinsic reporting.

Property:	Object_Identifier =	(Analog Value, Instance 1)
Property:	Object_Name =	"1AH1ENTH"
Property:	Object_Type =	ANALOG_VALUE
Property:	Present_Value =	38.1
Property:	Description =	"Enthalpy"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Units =	BTUS-PER-POUND-DRY-AIR

## D.5 Example of an Averaging Object

The following is an example of an Averaging object that is used for determining average and maximum electrical demand. The object property it refers to is a standard analog input measuring KW. In the current period, one sample was missed.

Property:	Object_Identifier =	(Averaging, Instance 1)
Property:	Object_Name =	"FLR 12 DEMAND"
Property:	Object_Type =	AVERAGING
Property:	Minimum_Value =	2.4
Property:	Minimum_Value_Timestamp =	(16-DEC-1999,13:15:07.32)
Property:	Average_Value =	12.7
Property:	Maximum_Value =	18.8
Property:	Maximum_Value_Timestamp =	(16-DEC-1999,13:06:12.19)
Property:	Description =	"Floor 12 Electrical Demand"
Property:	Attempted_Samples =	15
Property:	Valid_Samples =	14
Property:	Object_Property_Reference =	(Analog Input, Instance 12)
Property:	Window_Interval =	900
Property:	Window_Samples =	15

## D.6 Examples of a Binary Input Object

Example 1: A typical Binary Input object.

In this example, the Binary Input is connected to a high static pressure cutoff switch with normally open contacts. Exceeding the static pressure limit of the switch causes the normally open contacts to close. The ACTIVE state of the physical input indicates that the contacts are closed. The object supports both COV and intrinsic reporting.

Property:	Object_Identifier =	(Binary Input, Instance 1)
Property:	Object_Name =	"HighPressSwitch"
Property:	Object_Type =	BINARY_INPUT
Property:	Present_Value =	ACTIVE
Property:	Description =	"Penthouse Supply High Static"
Property:	Device_Type =	"ABC Pressure Switch"
Property:	Status_Flags =	{TRUE, FALSE, FALSE, FALSE}
Property:	Event_State =	OFFNORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Polarity =	NORMAL
Property:	Inactive_Text =	"Static Pressure OK"
Property:	Active_Text =	"High Pressure Alarm"
Property:	Change_Of_State_Time =	(23-MAR-1995, 19:01:34.0)
Property:	Change_Of_State_Count =	134
Property:	Time_Of_State_Count_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Elapsed_Active_Time =	401
Property:	Time_Of_Active_Time_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Time_Delay =	10
Property:	Notification_Class =	3
Property:	Alarm_Value =	ACTIVE
Property:	Event_Enable =	{TRUE, FALSE, TRUE}
Property:	Acked_Transitions =	{FALSE, TRUE, TRUE}
Property:	Notify_Type =	ALARM
Property:	Event_Time_Stamps =	((23-MAR-95,18:50:21.2), (*-*-*,:*.*), (21-MAR-95,01:02:03.0))

Example 2: A Binary Input object that is out-of-service.

In this second example, an open circuit has been found by the control system in the binary input described above. The input has been taken out of service.

Property:	Object_Identifier =	(Binary Input, Instance 1)
Property:	Object_Name =	"HighPressSwitch"
Property:	Object_Type =	BINARY_INPUT
Property:	Present_Value =	INACTIVE
Property:	Description =	"Penthouse Supply High Static"
Property:	Device_Type =	"ABC Pressure Switch"
Property:	Status_Flags =	{FALSE, TRUE, FALSE, TRUE}
Property:	Event_State =	NORMAL
Property:	Reliability =	OPEN_LOOP
Property:	Out_Of_Service =	TRUE
Property:	Polarity =	NORMAL
Property:	Inactive_Text =	"Static Pressure OK"
Property:	Active_Text =	"High Pressure Alarm"
Property:	Change_Of_State_Time =	(23-MAR-1995, 19:01:34.0)
Property:	Change_Of_State_Count =	135
Property:	Time_Of_State_Count_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Elapsed_Active_Time =	451
Property:	Time_Of_Active_Time_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Time_Delay =	10
Property:	Notification_Class =	3
Property:	Alarm_Value =	ACTIVE
Property:	Event_Enable =	{TRUE, FALSE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	ALARM
Property:	Event_Time_Stamps =	((21-MAR-95,01:09:34.0), (23-MAR-95,19:01:34.0), (21-MAR-95,01:11:21.2))

## D.7 Examples of a Binary Output Object

Example 1: A typical Binary Output object.

In this example, a fan is controlled by a binary output connected to a relay with normally closed contacts. The fan operates unless the relay is energized. The INACTIVE state of the binary output object is reversed by the polarity property to energize the relay and open the contacts turning off the fan. Note that in this example the Priority\_Array contains all NULLs and thus Relinquish\_Default determines the Present\_Value. The object does not support intrinsic reporting.

Property:	Object_Identifier =	(Binary Output, Instance 1)
Property:	Object_Name =	"Floor3ExhaustFan"
Property:	Object_Type =	BINARY_OUTPUT
Property:	Present_Value =	INACTIVE
Property:	Description =	"Third floor bathroom exhaust fan"
Property:	Device_Type =	"ABC 100 Relay"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Polarity =	REVERSE
Property:	Inactive_Text =	"Fan is turned off"

Property:	Active_Text =	"Fan is running"
Property:	Change_Of_State_Time =	(23-MAR-1995, 19:01:34.0)
Property:	Change_Of_State_Count =	47
Property:	Time_Of_State_Count_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Elapsed_Active_Time =	650
Property:	Time_Of_Active_Time_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Minimum_Off_Time =	100
Property:	Minimum_On_Time =	10
Property:	Priority_Array =	{NULL, NULL, NULL}
Property:	Relinquish_Default =	INACTIVE

Example 2: A Binary Output object that has been overridden.

In this second example, the fan has been found to be inoperable. Since the fan cannot operate until repaired, an operator has overridden the control system to maintain the fan in an inactive state.

Property:	Object_Identifier =	(Binary Output, Instance 1)
Property:	Object_Name =	"Floor3ExhaustFan"
Property:	Object_Type =	BINARY_OUTPUT
Property:	Present_Value =	INACTIVE
Property:	Description =	"Third floor bathroom exhaust fan"
Property:	Device_Type =	"ABC 100 Relay"
Property:	Status_Flags =	{FALSE, TRUE, TRUE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	OPEN_LOOP
Property:	Out_Of_Service =	FALSE
Property:	Polarity =	REVERSE
Property:	Inactive_Text =	"Fan is turned off"
Property:	Active_Text =	"Fan is running"
Property:	Change_Of_State_Time =	(23-MAR-1995, 19:01:34.0)
Property:	Change_Of_State_Count =	134
Property:	Time_Of_State_Count_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Elapsed_Active_Time =	401
Property:	Time_Of_Active_Time_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Minimum_Off_Time =	100
Property:	Minimum_On_Time =	10
Property:	Priority_Array =	{NULL, NULL, NULL}
Property:	Relinquish_Default =	INACTIVE

## D.8 Example of a Binary Value Object

In this example, the Binary Value is a mechanism that allows an exhaust fan to be enabled by an operator. The fan control logic uses this value to determine if the fan should operate but only if other conditions are met. For example, the fan may not be turned off if a fire alarm has occurred or if the system is shut down. The object does not support intrinsic reporting.

Property:	Object_Identifier =	(Binary Value, Instance 1)
Property:	Object_Name =	"ExhaustFanEnable"
Property:	Object_Type =	BINARY_VALUE
Property:	Present_Value =	ACTIVE
Property:	Description =	"Exhaust Fan Operator Enable"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL

Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Inactive_Text =	"Enabled by Operator"
Property:	Active_Text =	"Fan Not Enabled by Operator"
Property:	Change_Of_State_Time =	(23-MAR-1995, 19:01:34.0)
Property:	Change_Of_State_Count =	134
Property:	Time_Of_State_Count_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Elapsed_Active_Time =	401
Property:	Time_Of_Active_Time_Reset =	(1-JAN-1995, 00:00:00.0)
Property:	Minimum_Off_Time =	0
Property:	Minimum_On_Time =	0
Property:	Priority_Array =	{NULL...NULL, ACTIVE}
Property:	Relinquish_Default =	INACTIVE

#### D.9 Example of a Calendar Object

The following is an example of a CALENDAR object that specifies the holidays for a school district.

Property:	Object_Identifier =	(Calendar, Instance 1)
Property:	Object_Name =	"HOLIDAYS"
Property:	Object_Type =	CALENDAR
Property:	Description =	"1995-1996 School District Holidays"
Property:	Present_Value =	TRUE
Property:	Date_List =	((23-DEC-1995)-(3-JAN-1996)), (19-FEB-1996), (27-MAY-1996))

This is a calendar called "HOLIDAYS". Holidays are defined for Christmas Vacation between December 23 and January 3, for Presidents' Day on February 19, and for Memorial Day on May 27. On these dates the Present\_Value of the calendar will be TRUE. On all other dates, the Present\_Value will be FALSE. A real school calendar would likely have more members in the Date\_List; only three are shown here for simplicity.

#### D.10 Examples of a Command Object

Example 1: Occupied and unoccupied zone.

In this example, a particular zone of an office building has two temperature setpoints: one for unoccupied and one for occupied zone operation. The zone also has a lighting override to force lighting off during unoccupied periods. Setting the Present\_Value of the COMMAND object to 1 will select unoccupied mode, while 2 will select occupied mode.

Assumed objects:	<u>Object_Identifier</u>	<u>Object_Name</u>	<u>Object_Type</u>
	X'00800005'	ZONE43	ANALOG_VALUE
	X'01000003'	LIGHTING43	BINARY_OUTPUT

Property:	Object_Identifier =	(Command, Instance 1)
Property:	Object_Name =	"ZONE43CONTROL"
Property:	Object_Type =	COMMAND
Property:	Description =	"Fourth Floor, West Wing Office Suite"
Property:	Present_Value =	1
Property:	In_Process =	FALSE
Property:	All_Writes_Successful =	TRUE

Property:	Action =	{((,(Analog Value, Instance 5),Present_Value,,65.0,,TRUE,TRUE), ,(,Binary Output, Instance 3),Present_Value, ,INACTIVE,8,1,TRUE,TRUE)), ((,(Analog Value, Instance 5), Present_Value,,72.0,,TRUE,TRUE), ,(,Binary Output, Instance 3), Present_Value, ,ACTIVE,8,2,TRUE,TRUE))}
Property:	Action_Text =	{"Unoccupied", "Occupied"}

#### Example 2: Occupied and unoccupied zone.

This example builds on the previous example by adding communication between the device containing the COMMAND object and another device that controls an elevator subsystem. When the zone is placed in an unoccupied mode, that floor of the building is locked out for elevator service. In this example, the elevator subsystem is located in the BACnet device "DDC4".

Assumed objects:	<u>Object_Identifier</u>	<u>Object_Name</u>	<u>Object_Type</u>
	X'00800005'	ZONE43	ANALOG_VALUE
	X'01000003'	LIGHTING43	BINARY_OUTPUT
	X'02000001'	DDC4	DEVICE
	X'01400001'	FL4	BINARY_VALUE

Property:	Object_Identifier =	(Command, Instance 1)
Property:	Object_Name =	"ZONE43CONTROL"
Property:	Object_Type =	COMMAND
Property:	Description =	"Fourth Floor, West Wing Office Suite"
Property:	Present_Value =	2
Property:	In_Process =	FALSE
Property:	All_Writes_Successful =	TRUE
Property:	Action =	{((,(Analog Value, Instance 5), Present_Value,,65.0, 8,,TRUE,TRUE), ,(,Binary Output, Instance 3), Present_Value, ,INACTIVE,8,1,TRUE,TRUE), ((Device, Instance 1), (Binary Value, Instance 1),Present_Value, ,INACTIVE, 8,1,TRUE,TRUE)),  ((,(Analog Value, Instance 5), Present_Value,,72.0, 8,2,TRUE,TRUE), ,(,Binary Output, Instance 3), Present_Value, ,ACTIVE,8,,TRUE,TRUE), ((Device, Instance 1), (Binary Value, Instance 1),Present_Value,,ACTIVE, 8,,TRUE,TRUE))}
Property:	Action_Text =	{"Unoccupied", "Occupied"}

#### D.11 Examples of a Device Object

##### Example 1: A "sophisticated" BACnet device.

Property:	Object_Identifier =	(Device, Instance 1)
Property:	Object_Name =	"AC1 System Controller"
Property:	Object_Type =	DEVICE
Property:	System_Status =	OPERATIONAL
Property:	Vendor_Name =	"ABC Controls"
Property:	Vendor_Identifier =	1001
Property:	Model_Name =	"1000 Plus"

Property:	Firmware_Revision =	"1.2"
Property:	Application_Software_Version =	"V4.0 - April 12, 1989"
Property:	Location =	"Basement Mechanical Room"
Property:	Description =	"AC1 Controller"
Property:	Protocol_Version =	1
Property:	Protocol_Revision =	4
Property:	Protocol_Services_Supported =	B'1111111111111111111111111111111111111111111111111111111111111111'
Property:	Protocol_Object_Types_Supported =	B'111111111111111111111111'
Property:	Object_List =	((Analog Input, Instance 1), (Analog Input, Instance 2), ...) ((Structured View, Instance 1), (Structured View, Instance 2))
Property:	Structured_Object_List =	
Property:	Max_APDU_Length_Accepted =	480
Property:	Segmentation_Supported =	SEGMENTED_BOTH
Property:	Max_Segments_Accepted =	16
Property:	VT_Classes_Supported =	(DEFAULT-TERMINAL, DEC-VT100)
Property:	Active_VT_Sessions	((29,5,1, X'0000C0B3EF13'),(23,8,2, X'05'))
Property:	Local_Time	12:34:56.78
Property:	Local_Date	29-SEP-1989, FRIDAY
Property:	UTC_Offset =	6.0
Property:	Daylight_Savings_Status =	FALSE
Property:	APDU_Segment_Timeout =	2000
Property:	APDU_Timeout =	3000
Property:	Number_Of_APDU_Retries =	3
Property:	List_Of_Session_Keys =	((X'3799246237984589', 1, X'03'), (X'4446214686489744', 1, X'05'))
Property:	Time_Synchronization_Recipients =	(Device, Instance 18)
Property:	Device_Address_Binding =	(((Device, Instance 1), 1, X'01'), ((Device, Instance 12), 1, X'17'), ((Device, Instance 40), 2, X'02608C41A606'), ...)
Property:	Database_Revision =	123
Property:	Configuration_Files =	((File, Instance 1), (File, Instance 2))
Property:	Last_Restore_Time =	(2, (29-SEP-1989, 01:00:00.0))
Property:	Backup_Failure_Timeout =	300
Property:	Active_COV_Subscriptions =	(((0, (Device, Instance 12)), 300), (Analog Input, Instance 1, Present_Value), TRUE, 100, 1.0), (((0, (Device, Instance 40)), 600), (Analog Input, Instance 1, Present_Value), TRUE, 3, 1.5))
Property:	Last_Restart_Reason =	DETECTED_POWERED_OFF
Property:	Restart_Notification_Recipients =	((0,X'FF')) -- This example uses an MS/TP broadcast address.
Property:	Time_Of_Device_Restart =	(02-SEP-2003, 12:34:56.78)

Example 2: A "simple" BACnet device.

Property:	Object_Identifier =	(Device, Instance 2)
Property:	Object_Name =	"Room 101 VAV Controller"
Property:	Object_Type =	DEVICE
Property:	System_Status =	DOWNLOAD_REQUIRED
Property:	Vendor_Name =	"XYZ Controls"
Property:	Vendor_Identifier =	1001
Property:	Model_Name =	"VAV 100"
Property:	Firmware_Revision =	"1.0"
Property:	Application_Software_Version =	"2-1-88"
Property:	Protocol_Version =	1
Property:	Protocol_Revision =	1
Property:	Protocol_Services_Supported =	B'1111010000001001000010000011100011'

Property:	Protocol_Object_Types_Supported =	B'110110110100010001'
Property:	Object_List =	((Analog Input, Instance 1), (Analog Input, Instance 2), (Analog Output, Instance 1), (Binary Input, Instance 1), (Binary Output, Instance 1), (Device, Instance 9))
Property:	Max_APDU_Length_Supported =	50
Property:	Segmentation_Supported =	NO_SEGMENTATION
Property:	APDU_Segment_Timeout =	2000
Property:	APDU_Timeout =	60,000
Property:	Number_Of_APDU_Retries =	3
Property:	Max_Master	85
Property:	Max_Info_Frames	3
Property:	Device_Address_Binding =	((Device, Instance 1), 1, X'01'), ((Device, Instance 12), 1, X'17')
Property:	Database_Revision =	69
Property:	Last_Restart_Reason =	DETECTED_POWERED_OFF
Property:	Restart_Notification_Recipients =	((Device, Instance 18))
Property:	Time_Of_Device_Restart =	(04-OCT-2002, 02:04:06.08)

### D.12 Examples of an Event Enrollment Object

The following Analog Input object is assumed for the examples below. All objects are assumed to be located in device 12.

#### ANALOG\_INPUT

Property:	Object_Identifier =	(Analog Input, Instance 2)
Property:	Object_Name =	"Zone1_Temp"
Property:	Object_Type =	ANALOG_INPUT
Property:	Present_Value =	86.0
Property:	Description =	"Receptionist Lobby Temp"
Property:	Device_Type =	"PT 3K RTD"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Update_Interval =	5
Property:	Units =	DEGREES_FAHRENHEIT
Property:	Min_Pres_Value =	55.0
Property:	Max_Pres_Value =	95.0
Property:	Resolution =	0.1

#### Example 1: OUT\_OF\_RANGE event type.

This is an example of an OUT\_OF\_RANGE Event\_Type. The State transition NORMAL to HIGH\_LIMIT has not been acknowledged. The management of recipients is done through the use of a Notification Class object.

#### EVENT\_ENROLLMENT

Property:	Object_Identifier =	(Event Enrollment, Instance 1)
Property:	Object_Name =	"Zone1_Alarm"
Property:	Object_Type =	EVENT_ENROLLMENT
Property:	Description =	"Zone 1 Alarms"
Property:	Event_Type =	OUT_OF_RANGE

Property:	Notify_Type =	ALARM
Property:	Event_Parameters =	(30, 65.0, 85.0, 0.25)
Property:	Object_Property_Reference =	((Device, Instance 12),(Analog Input, Instance 2), Present_Value)
Property:	Event_State =	HIGH_LIMIT
Property:	Event_Enable =	(TRUE, TRUE, TRUE)
Property:	Acked_Transitions =	(FALSE, TRUE, TRUE)
Property:	Notification_Class =	1
Property:	Event_Time_Stamps =	((23-MAR-95,18:50:21.2), (*-*-*,:*:*.*), (21-MAR-95,01:02:03.0))

#### Example 2: CHANGE\_OF\_VALUE\_EVENT event type.

This is an example of a CHANGE\_OF\_VALUE Event\_Type. The management of recipients is done through the use of optional properties of the Event Enrollment object instead of a Notification Class object.

#### EVENT\_ENROLLMENT

Property:	Object_Identifier =	(Event Enrollment, Instance 2)
Property:	Object_Name =	"Zone1TempCOV"
Property:	Object_Type =	EVENT_ENROLLMENT
Property:	Description =	"Zone 1 Temperature COV"
Property:	Event_Type =	CHANGE_OF_VALUE
Property:	Notify_Type =	EVENT
Property:	Event_Parameters =	(5, 0.25)
Property:	Object_Property_Reference =	((Device, Instance 12),(Analog Input, Instance 2), Present_Value)
Property:	Event_State =	NORMAL
Property:	Event_Enable =	(TRUE, FALSE, FALSE)
Property:	Acked_Transitions =	(TRUE, TRUE, TRUE)
Property:	Event_Time_Stamps =	((23-MAR-95,18:50:21.2), (*-*-*,:*:*.*), (23-MAR-95,19:01:34.0))

#### Example 3: CHANGE\_OF\_BITSTRING event type.

This example illustrates the use of a CHANGE\_OF\_BITSTRING event.

#### EVENT\_ENROLLMENT

Property:	Object_Identifier =	(Event Enrollment, Instance 3)
Property:	Object_Name =	"Zone1 Rel"
Property:	Object_Type =	EVENT_ENROLLMENT
Property:	Description =	"Reliability alarm for zone 1 temperature"
Property:	Event_Type =	CHANGE_OF_BITSTRING
Property:	Notify_Type =	ALARM
Property:	Event_Parameters =	(30, B'0111', (B'0100', B'0010', B'0001', B'0110', B'0101', B'0011'))
Property:	Object_Property_Reference =	((Device, Instance 12),(Analog Input, Instance 2), Status_Flags)
Property:	Event_State =	NORMAL
Property:	Event_Enable =	(TRUE, TRUE, FALSE)
Property:	Acked_Transitions =	(TRUE, TRUE, TRUE)
Property:	Notification_Class =	3
Property:	Event_Time_Stamps =	((23-MAR-95,18:50:21.2), (*-*-*,:*:*.*), (23-MAR-95,19:01:34.0))

**D.13 Example of a File Object**

A File Object holding trend information:

Property:	Object_Identifier =	(File, Instance 7)
Property:	Object_Name =	"TREND_AI1"
Property:	Object_Type =	FILE
Property:	Description =	"Trend of AI1"
Property:	File_Type =	"TREND"
Property:	File_Size =	750
Property:	Modification_Date =	(1-NOV-1995, 08:30:49.0)
Property:	Archive =	FALSE
Property:	Read_Only =	FALSE
Property:	File_Access_Method=	RECORD_ACCESS
Property:	Record_Count =	150

**D.14 Example of a Group Object**

The following is an example of a group object that is used to reference temperatures in a particular zone of a building.

Property:	Object_Identifier =	(Group, Instance 1)
Property:	Object_Name =	"ZONE1_TEMPS"
Property:	Object_Type =	GROUP
Property:	Description =	"Zone 1 Temperature Group"
Property:	List_Of_Group_Members =	((Analog Input, Instance 8),(Present_Value, Reliability, Description)), ((Analog Input, Instance 9),(Present_Value, Reliability, Description)), ((Analog Input, Instance 10),(Present_Value, Reliability, Description)), ((Analog Input, Instance 11),(Present_Value, Reliability, Description)), ((Analog Input, Instance 12),(Present_Value, Reliability, Description)))
Property:	Present_Value =	((Analog Input, Instance 8), Present_Value, 69.7, Reliability, NO_FAULT_DETECTED, Description, "Room 1"), ((Analog Input, Instance 9), Present_Value, 71.2, Reliability, NO_FAULT_DETECTED, Description, "Room 2"), ((Analog Input, Instance 10), Present_Value, -50.0, Reliability, UNRELIABLE_OTHER, Description, "Room 3"), ((Analog Input, Instance 11), Present_Value, 69.7, Reliability, NO_FAULT_DETECTED, Description, "Room 4"), ((Analog Input, Instance 12), Present_Value, 73.3, Reliability, NO_FAULT_DETECTED, Description, "Room 5"))

**D.15 Example of a Life Safety Point Object**

In this example, a smoke detector is represented as a Life Safety Point object.

Property:	Object_Identifier =	(Life Safety Point, Instance 2)
Property:	Object_Name =	"SMK3W"
Property:	Object_Type =	LIFE_SAFETY_POINT
Property:	Present_Value =	PREALARM
Property:	Tracking_Value =	PREALARM
Property:	Description =	"Floor 3, West Zone Smoke Detector"
Property:	Device_Type =	"Old Smokey model 123"
Property:	Status_Flags =	{TRUE, FALSE, FALSE, FALSE}
Property:	Event_State =	LIFE_SAFETY_ALARM
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE

Property:	Mode =	ON
Property:	Accepted_Modes =	{ENABLED, DISABLED, TEST}
Property:	Time_Delay =	10
Property:	Notification_Class =	39
Property:	Life_Safety_Alarm_Values =	(ALARM)
Property:	Alarm_Values =	(PREALARM)
Property:	Fault_Values =	(FAULT)
Property:	Event_Enable =	{TRUE, TRUE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	ALARM
Property:	Event_Time_Stamps =	((23-MAR-95, 18:50:21.2), (*-*-*,:*.*.*), (23-MAR-95, 19:01:34.0))
Property:	Silenced =	SILENCE_AUDIBLE
Property:	Operation_Expected =	RESET_ALARM
Property:	Maintenance_Required =	NONE
Property:	Setting =	50
Property:	Direct_Reading =	84.3
Property:	Units =	PERCENT-OBSCURATION-PER-METER
Property:	Member_Of =	((Life Safety Zone, Instance 5))

#### D.16 Example of a Life Safety Zone Object

In this example, a fire zone is represented as a Life Safety Zone object.

Property:	Object_Identifier =	(Life Safety Zone, Instance 2)
Property:	Object_Name =	"SMK3"
Property:	Object_Type =	LIFE_SAFETY_ZONE
Property:	Present_Value =	PREALARM
Property:	Tracking_Value =	PREALARM
Property:	Description =	"Floor 3 Smoke"
Property:	Status_Flags =	{TRUE FALSE, FALSE, FALSE}
Property:	Event_State =	LIFE_SAFETY_ALARM
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Mode =	ON
Property:	Accepted_Modes =	{ENABLED, DISABLED, TEST}
Property:	Time_Delay =	10
Property:	Notification_Class =	39
Property:	Life_Safety_Alarm_Values =	(ALARM)
Property:	Alarm_Values =	(PREALARM)
Property:	Fault_Values =	(FAULT)
Property:	Event_Enable =	{TRUE, TRUE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	ALARM
Property:	Event_Time_Stamps =	((23-MAR-95, 18:50:21.2), (*-*-*,:*.*.*), (23-MAR-95, 19:01:34.0))
Property:	Silenced =	UNSILENCED
Property:	Operation_Expected =	SILENCE_AUDIBLE
Property:	Maintenance_Required =	NONE
Property:	Zone_Members =	((Life Safety Point, Instance 22), (Life Safety Point, Instance 23))
Property:	Member_Of =	((Life Safety Zone, Instance 5))

### D.17 Example of a Loop Object

The following is an example of a LOOP object that is used for supply air temperature control of an air handler. The algorithm represented is a positioning PI algorithm of the following form:

$$\text{Output} = \{\text{Proportional\_Constant} * [\text{Error} + (\text{Integral\_Constant} * \text{"Integral of the Error"})]\} + \text{Bias}$$

Where: Error = (Process\_Variable\_Value - Setpoint) and "Integral of the Error" has units of °F-min.

Assumed objects:	<u>Object_Identifier</u>	<u>Object_Name</u>	<u>Object_Type</u>
	X'00400005'	AHU_VALVE	ANALOG_OUTPUT
	X'00000003'	AHU_SAT	ANALOG_INPUT
	X'00800007'	RESET_OAT	ANALOG_VALUE

The object supports COV reporting.

Property:	Object_Identifier =	(Loop, Instance 1)
Property:	Object_Name =	"AHU_SAT_LOOP"
Property:	Object_Type =	LOOP
Property:	Present_Value =	8.3
Property:	Description =	"Supply air temp. PI control"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Update_Interval =	1
Property:	Output_Units =	POUNDS_FORCE_PER_SQUARE_INCH
Property:	Manipulated_Variable_Reference =	((Analog Output, Instance 5), Present_Value)
Property:	Controlled_Variable_Reference =	((Analog Input, Instance 3), Present_Value)
Property:	Controlled_Variable_Value =	56.1
Property:	Controlled_Variable_Units =	DEGREES_FAHRENHEIT
Property:	Setpoint_Reference =	((Analog Value, Instance 7), Present_Value)
Property:	Setpoint =	57.0
Property:	Action =	DIRECT
Property:	Proportional_Constant =	0.5
Property:	Proportional_Constant_Units =	PSI_PER_DEGREE_FAHRENHEIT
Property:	Integral_Constant =	0.1
Property:	Integral_Constant_Units =	PER-MINUTE
Property:	Derivative_Constant =	0.0
Property:	Derivative_Constant_Units =	NO-UNITS
Property:	Bias =	9.0
Property:	Maximum_Output =	15.0
Property:	Minimum_Output =	3.0
Property:	Priority_For_Writing =	10
Property:	COV_Increment =	0.2
Property:	Time_Delay =	3
Property:	Notification_Class =	1
Property:	Error_Limit =	5.0
Property:	Deadband =	1.0
Property:	Event_Enable =	{TRUE, TRUE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	ALARM
Property:	Event_Time_Stamps =	((23-MAR-95,18:50:21.2), (*-*.*,:*.*), (23-MAR-95,19:01:34.0))

### D.18 Examples of a Multi-state Input Object

Example 1 - Two-speed fan.

In this example Input #1 is connected to the "aux" contact on the low-speed starter and Input #2 is connected to the "aux" contact of the high-speed starter. If the low-speed starter is "off," then the high-speed starter is disabled. The table below shows the relationship between the two inputs and the present value. The actual logic used to determine and establish the present value is a local matter. The object supports intrinsic reporting.

<u>Present Value</u>	<u>Low-Speed Starter</u>	<u>High-Speed Starter</u>
1	OFF (inactive)	OFF (inactive)
2	ON (active)	OFF (inactive)
3	ON (active)	ON (active)

Property:	Object_Identifier =	(Multi-state Input, Instance 1)
Property:	Object_Name =	"Fan1_Input"
Property:	Object_Type =	MULTI_STATE_INPUT
Property:	Present_Value =	2
Property:	Description =	"2-speed Fan#1"
Property:	Device_Type =	"ZZZ Fan Motor"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Number_Of_States =	3
Property:	State_Text =	("Off", "On_Low", "On_High")
Property:	Time_Delay =	3
Property:	Notification_Class =	4
Property:	Alarm_Values =	(3)
Property:	Fault_Values =	(2)
Property:	Event_Enable =	{TRUE, TRUE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	EVENT
Property:	Event_Time_Stamps =	((23-MAR-95,18:50:21.2), (*-*-*,:*:*.*), (23-MAR-95,19:01:34.0))

Example 2: Hand-off-auto switch.

In this example the contacts of a three-position hand-off-auto switch are monitored as binary inputs. If the first input is active, then the present value is set to 1 (hand); if the second input is active, the present value is 2 (off); and if the third input is active, then the present value is 3 (auto). The object does not support intrinsic reporting.

Property:	Object_Identifier =	(Multi-state Input, Instance 2)
Property:	Object_Name =	"H-O-A"
Property:	Object_Type =	MULTISTATE_INPUT
Property:	Present_Value =	1
Property:	Description =	"Hand-Off-Auto 1"
Property:	Device_Type =	"ZZZ switch"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE

Property: Number\_Of\_States = 3  
 Property: State\_Text = ("Hand", "Off", "Auto")

### D.19 Examples of a Multi-state Output Object

Example 1: Two-speed fan.

In this example Output #1 is connected to the coil of the low-speed starter and Output #2 is connected to the coil of the high-speed starter. If the low-speed starter is "off," then the high-speed starter is disabled. The table below shows the relationship between the two outputs and the present value. The actual logic used to determine, establish, and use the present value is a local matter. The object supports intrinsic reporting.

<u>Present Value</u>	<u>Low-Speed Starter</u>	<u>High-Speed Starter</u>
1	OFF (inactive)	OFF (inactive)
2	ON (active)	OFF (inactive)
3	ON (active)	ON (active)

Property: Object\_Identifier = (Multi-state Output, Instance 1)  
 Property: Object\_Name = "Fan1\_Output"  
 Property: Object\_Type = MULTI\_STATE\_OUTPUT  
 Property: Present\_Value = 2  
 Property: Description = "2-speed Fan#1"  
 Property: Device\_Type = "ABC Fan Model A-6"  
 Property: Status\_Flags = {FALSE, FALSE, FALSE, FALSE}  
 Property: Event\_State = OFFNORMAL  
 Property: Reliability = NO\_FAULT\_DETECTED  
 Property: Out\_Of\_Service = FALSE  
 Property: Number\_Of\_States = 3  
 Property: State\_Text = {"Off", "On\_Low", "On\_High"}  
 Property: Priority\_Array = {NULL, NULL...2...NULL}  
 Property: Relinquish\_Default = 1  
 Property: Time\_Delay = 3  
 Property: Notification\_Class = 4  
 Property: Feedback\_Value = 3  
 Property: Event\_Enable = {TRUE, TRUE, TRUE}  
 Property: Acked\_Transitions = {TRUE, TRUE, TRUE}  
 Property: Notify\_Type = EVENT  
 Property: Event\_Time\_Stamps = ((23-MAR-95,18:50:21.2),  
                               (\*-\*-\*,:\*.\*,\*),  
                               (21-MAR-95,01:02:03.0))

Example 2: Three-position switch.

In this example the contacts of a three-position switch are controlled as binary outputs. If the present value is 1, the first output will be active. If the present value is 2, then the second output is active. If the present value is 3, then the third output is active. The object does not support intrinsic reporting.

Property: Object\_Identifier = (Multi-state Output, Instance 2)  
 Property: Object\_Name = "3-POS-SW"  
 Property: Object\_Type = MULTI\_STATE\_OUTPUT  
 Property: Present\_Value = 1  
 Property: Description = "3 POSITION SWITCH #1"

Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NOFAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Number_Of_States =	3
Property:	State_Text =	{"Position_1", "Position_2", "Position_3"}
Property:	Priority_Array =	{NULL...NULL}
Property:	Relinquish_Default =	1

#### D.20 Example of a Multi-state Value Object

Example 1 - Unit Ventilator Operating Mode.

In this example the Present\_Value is being used to indicate the operating mode for a Unit Ventilator. The actual logic used to determine and establish the present value is a local matter.

Property:	Object_Identifier =	(Multi-state Value, Instance 1)
Property:	Object_Name =	"UV39"
Property:	Object_Type =	MULTISTATE_VALUE
Property:	Present_Value =	2
Property:	Description =	"UnitVent Room 39"
Property:	Status_Flags =	{FALSE,FALSE,FALSE,FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:	Number_Of_States =	4
Property:	State_Text =	("Unoccupied", "Warmup", "Occupied", "Setback")

#### D.21 Example of a Notification Class Object

The following is an example of a Notification Class object for critical system alarms that contains a time-dependent recipient list.

Property:	Object_Identifier =	(Notification Class, Instance 1)
Property:	Object_Name =	"Alarms1"
Property:	Object_Type =	NOTIFICATION_CLASS
Property:	Description =	"Critical System Alarms"
Property:	Notification_Class =	1
Property:	Priority =	(3, 10, 10)
Property:	Ack_Required =	(TRUE, TRUE, TRUE)
Property:	Recipient_List =	((Monday, Tuesday, Wednesday, Thursday, Friday), 6:00, 20:00, (Device, Instance 12), 21, TRUE, (TRUE, TRUE, TRUE)), ((Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday), 0:00, 6:00, (Device, Instance 18), 5, TRUE, (TRUE, TRUE, FALSE)), ((Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday), 20:00, 24:00, (Device, Instance 18), 5, TRUE, (TRUE, TRUE, FALSE)))

#### D.22 Examples of a Program Object

The following sections provide examples of several types of application programs that use the PROGRAM object as a network-visible representation of their activities and program-specific parameters. The vendor-specific properties shown are purely for illustrative purposes and do not in any way reflect requirements of the standard. In particular, mnemonic names are used for property identifiers to clarify the intended use shown in each example. The actual implementation of these properties will use numeric codes that are specific to each vendor, to represent each property that is not defined in the standard.

## Example 1: An averaging program.

In this example, the application program uses three properties, Value1, Value2, and Value3, as inputs and produces an output that is the average of the three, according to the formula

$$\text{Average} = (\text{Value1} + \text{Value2} + \text{Value3}) / 3.$$

The program object has been extended through the addition of four vendor-specific properties: Value1, Value2, Value3, and Average.

Property:	Object_Identifier =	(Program, Instance 1)
Property:	Object_Name =	"SomeAverage"
Property:	Object_Type =	PROGRAM
Property:	Program_State =	RUNNING
Property:	Program_Change =	READY
Property:	Reason_For_Halt =	NORMAL
Property:	Description_Of_Halt =	"Normal"
Property:	Program_Location =	"Line 2"
Property:	Description =	"Average of Somethings"
Property:	Instance_Of =	"ThreeWayAverager"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:*	Value1 =	10
Property:*	Value2 =	22
Property:*	Value3 =	28
Property:*	Average =	20

*NOTE: Those properties that are shown above with an asterisk "\*" are so-called vendor-specific properties. They are shown here for illustrative purposes and do not represent a requirement of the standard.*

## Example 2: A maximum flow program.

In this example, the application program uses three properties, Ref1, Ref2, and Ref3, as BACnetPropertyReferences pointing to properties of three other objects that serve as inputs and produces an output that is the maximum of the three, according to the formula

$$\text{Max} = \text{Maximum}_\text{Of}(\text{Ref1}, \text{Ref2}, \text{Ref3}).$$

The program object has been extended through the addition of four vendor-specific properties: Ref1, Ref2, Ref3, and Max.

Property:	Object_Identifier =	(Program, Instance 2)
Property:	Object_Name =	"MaxFlow"
Property:	Object_Type =	PROGRAM
Property:	Program_State =	RUNNING
Property:	Program_Change =	READY
Property:	Reason_For_Halt =	NORMAL
Property:	Description_Of_Halt =	"Normal"
Property:	Program_Location =	"Line 5"
Property:	Description =	"Maximum of three Flows"
Property:	Instance_Of =	"Max3Refs"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Out_Of_Service =	FALSE
Property:*	Ref1 =	((Analog Input, Instance 272), Present_Value)
Property:*	Ref2 =	((Analog Input, Instance 273), Present_Value)

Property:*	Ref3 =	((Analog Input, Instance 274), Present_Value)
Property:*	Max =	45.6

*NOTE: Those properties shown above with an asterisk "\*" are so-called vendor-specific properties. They are shown here for illustrative purposes and do not represent a requirement of the standard.*

### D.23 Example of a Pulse Converter Object

Property:	Object_Identifier =	(Pulse Converter, Instance 1)
Property:	Object_Name =	"Meter 5"
Property:	Object_Type =	PULSE_CONVERTER
Property:	Description =	""
Property:	Present_Value =	125.0
Property:	Input_Reference =	((Accumulator, Instance 1), Present_Value)
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Out_Of_Service =	FALSE
Property:	Units =	LITERS_PER_HOUR
Property:	Scale_Factor =	0.5
Property:	Adjust_Value =	500.0
Property:	Count =	250
Property:	Update_Time =	(10-JUL-01,11:40:21.0),
Property:	Count_Change_Time =	(10-JUL-01,11:30:01.0),
Property:	Count_Before_Change =	523
Property:	COV_Increment =	10.0
Property:	COV_Period =	3600
Property:	Notification_Class =	5
Property:	Time_Delay =	0
Property:	High_Limit =	1000.0
Property:	Low_Limit =	0.0
Property:	Deadband =	0.0
Property:	Limit_Enable =	{FALSE, TRUE}
Property:	Event_Enable =	{TRUE, FALSE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	ALARM
Property:	Event_Time_Stamps =	((12-JUL-01,18:50:21.2), (*-*-*,:*:*.*), (12-JUL-01,19:01:34.0))

### D.24 Example of a Schedule Object

The following is an example of a Schedule object that is used to control a classroom during the school year. In this example, a different Schedule object is assumed to be defined for the remainder of the calendar year. The reference property of this schedule is the Present\_Value of a Binary Output object, in device 12, that controls a rooftop unit providing conditioned air to room 208.

Property:	Object_Identifier =	(Schedule, Instance 2)
Property:	Object_Name =	"Rm208Sched"
Property:	Object_Type =	SCEDULE
Property:	Present_Value =	ACTIVE
Property:	Description =	"Room 208 Schedule"
Property:	Effective_Period =	((5-SEP-1995)-(10-JUN-1996))

Property:	Weekly_Schedule =	{((8:00,ACTIVE),(17:00,INACTIVE)), ((8:00,ACTIVE)), ((8:00,ACTIVE),(17:00,INACTIVE)), ((8:00,ACTIVE),(17:00,INACTIVE), (19:00,ACTIVE),(23:30,INACTIVE)), ((8:00,ACTIVE),(17:00,INACTIVE)), ((00:00,INACTIVE)), ((10:00,ACTIVE),(17:00,INACTIVE))}
Property:	Exception_Schedule =	((23-NOV-1995),(0:00,INACTIVE),10), ((HOLIDAYS,(0:00,INACTIVE),11), ((5-MAR-1996)-(7-MAR-1996),((0:00,INACTIVE), (9:00,ACTIVE),(14:00,INACTIVE)),6), ((8-MAR-1996),((10:00,INACTIVE),(11:00,NULL)),7))
Property:	List_Of_Object_Property_References =	((Device, Instance 12),(Binary Output, Instance 9), Present_Value)
Property:	Priority_For_Writing =	15
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Schedule_Default =	INACTIVE
Property:	Out_Of_Service =	FALSE

On normal Mondays, Wednesdays, and Fridays the rooftop is made ACTIVE at 8 A.M. and INACTIVE at 5 P.M. On normal Tuesdays, the rooftop is made ACTIVE at 8 A.M. and is not otherwise affected by the schedule. On normal Thursdays, the rooftop is made ACTIVE at 8 A.M., INACTIVE at 5 P.M., ACTIVE again at 7 P.M., and INACTIVE at 11:30 P.M. On Saturdays the rooftop is INACTIVE all day. On Sundays the rooftop is made ACTIVE at 10 A.M. and INACTIVE at 5 P.M.

On Thursday, November 23, 1995, the normal Thursday schedule is overridden by the first SPECIALEVENT in the Exception\_Schedule list, which sets the rooftop INACTIVE for the entire day.

On Monday, February 19, 1996, the normal Monday schedule is overridden by the second SPECIALEVENT in the Exception\_Schedule list, which follows the HOLIDAYS calendar described in D.9. Since February 19, 1996, Presidents' Day, is in the HOLIDAYS object's Date\_List, the TIMEVALUEs associated with the second SPECIALEVENT are followed, which set the rooftop INACTIVE for the entire day.

The third SPECIALEVENT overrides the normal schedule between March 5, 1996, and March 7, 1996, for a teachers' conference. On these three days, the rooftop is made ACTIVE at 9 A.M. and INACTIVE at 2 P.M.

The fourth SPECIALEVENT overrides the normal Friday schedule on March 8, 1996, to create an hour of inactivity in the middle of the day for maintenance. On this day, the rooftop is made ACTIVE at 8 A.M. (by the normal schedule), INACTIVE at 10 A.M. (by the exception schedule), ACTIVE again at 11 A.M. (by the exception relinquishing, and the normal schedule resuming) and INACTIVE at 5 P.M. (by the normal schedule).

## D.25 Example of a Trend Log Object

The following is an example of a Trend Log object that periodically logs data from an object in a remote device and which performs buffer-ready notification via intrinsic reporting.

Property:	Object_Identifier =	(Trend Log, Instance 1)
Property:	Object_Name =	"Room 3Log"
Property:	Object_Type =	TREND_LOG
Property:	Description =	"Room 3 Temperature"
Property:	Enable =	TRUE
Property:	Log_DeviceObjectProperty =	((Device, Instance 100), Analog Input, Instance 3, Present_Value)
Property:	Log_Interval =	6,000
Property:	Stop_When_Full =	FALSE
Property:	Buffer_Size =	250
Property:	Log_Buffer =	((23-MAR-1998,12:32:33.0), 72.0,(FALSE,FALSE,FALSE,TRUE))

		(23-MAR-1998,12:34:32.0),72.1,(FALSE,FALSE,FALSE,FALSE)),...)
Property:	Record_Count =	250
Property:	Total_Record_Count =	131040
Property:	Notification_Threshold =	83
Property:	Records_Since_Notification =	30
Property:	Last_Notify_Record =	131010
Property:	Event_State =	NORMAL
Property:	Notification_Class =	1
Property:	Event_Enable =	{FALSE, TRUE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	EVENT
Property:	Event_Time_Stamps=	((23-MAR-95, 18:50:21.2), (*-*-*,:*:*.*), (23-MAR-95, 19:01:34.0))
Property:	Logging_Type =	POLLED
Property:	Align_Intervals =	FALSE
Property:	Interval_Offset =	0
Property:	Trigger =	FALSE
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Reliability =	NO_FAULT_DETECTED

#### D.26 Example of an Access Door object

This example of an access door represents the main entrance doors to an office building. The door is scheduled for UNLOCK at priority 10 but this has been overridden with a LOCK by the manual operator at priority 8. The door is currently locked but is opened which has resulted in a forced-open alarm condition. The door-open-too-long alarm is temporarily masked and will not generate this type of alarm regardless of how long the door is held open.

Property:	object-identifier =	(Access Door, Instance 1)
Property:	object-name =	“Main Entrance”
Property:	object-type =	ACCESS DOOR
Property:	present-value =	LOCK
Property:	description =	“Main entrance south building”
Property:	status-flags =	(TRUE, FALSE, TRUE, FALSE)
Property:	event-state =	OFFNORMAL
Property:	reliability =	NO_FAULT_DETECTED
Property:	out-of-service =	FALSE
Property:	priority-array =	{NULL, NULL, NULL, NULL, NULL, NULL, NULL, LOCK, NULL, UNLOCK, NULL, NULL, NULL, NULL, NULL, NULL}
Property:	relinquish-default =	LOCK
Property:	door-status =	OPEN
Property:	lock-status =	LOCKED
Property:	secured-status =	UNSECURED
Property:	door-members =	{(Multistate Input, Instance 1), (Binary Output, Instance 7), (Binary Input, Instance 1), (Schedule, Instance 4)}
Property:	door-pulse-time =	60
Property:	door-extended-pulse-time =	300
Property:	door-open-too-long-time =	300
Property:	door-alarm-state	FORCED_OPEN
Property:	masked-alarm-values =	{DOOR_OPEN_TOO_LONG}
Property:	maintenance-required =	NONE
Property:	time-delay =	0
Property:	notification-class =	1

Property:	alarm-values =	{DOOR_OPEN_TOO_LONG, FORCED_OPEN, TAMPER}
Property:	fault-values =	{DOOR_FAULT}
Property:	event-enable =	{TRUE, FALSE, TRUE}
Property:	acked-transitions =	{FALSE, TRUE, TRUE}
Property:	notify-type =	ALARM
Property:	event-time-stamps =	((7-JAN-2006, 15:30:51.7), (*-*-*,:*.*.*), (*-*-*,:*.*.*))

### D.27 Example of an Event Log Object

The following is an example of an Event Log object that logs event notifications and which performs buffer-ready notification via intrinsic reporting.

Property:	Object_Identifier =	(Event Log, Instance 1)
Property:	Object_Name =	"Event Log"
Property:	Object_Type =	EVENT_LOG
Property:	Description =	"All event notifications"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Enable =	TRUE
Property:	Stop_When_Full =	FALSE
Property:	Buffer_Size =	250
Property:	Log_Buffer =	((23-MAR-2004,12:32:33.0), (0, (Device, Instance 20), (Analog Input, Instance 1), (23-MAR-2004,12:32:25.0), 1, 1, OUT_OF_RANGE, "Too Hot", ALARM, TRUE, NORMAL, HIGH_LIMIT, (105.1, (TRUE, FALSE, FALSE, FALSE), 2.0, 100.0)), ...)
Property:	Record_Count =	953
Property:	Total_Record_Count =	1000
Property:	Notification_Threshold =	950
Property:	Records_Since_Notification =	3
Property:	Last_Notify_Record =	950
Property:	Notification_Class =	1
Property:	Event_Enable =	{FALSE, TRUE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	EVENT
Property:	Event_Time_Stamps =	((23-MAR-2004, 6:50:21.2),(*-*-*,:*.*.*), (23-MAR-2004, 6:01:34.0))

### D.28 Example of a Load Control object

Property:	Object_Identifier =	(Load_Control, Instance 1)
Property:	Object_Name =	"Load Control 1"
Property:	Object_Type =	LOAD CONTROL
Property:	Description =	"Chiller Load Control"
Property:	Present_Value =	SHED_COMPLIANT
Property:	State_Description =	"shedding compliant with request"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}
Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Requested_Shed_Level =	(Percent, 80)
Property:	Start_Time =	(1-JUL-2002,10:00:00.0)
Property:	Shed_Duration =	120
Property:	Duty_Window =	30
Property:	Enable =	TRUE

Property:	Full_Duty_Baseline =	250.0
Property:	Expected_Shed_Level =	80
Property:	Actual_Shed_Level =	80
Property:	Shed_Levels =	(1, 3, 6, 9)
Property:	Shed_Level_Descriptions =	("switch to alternate energy", "setback 2 degrees", "dim lights 20%", "setback 4 degrees")
Property:	Notification_Class =	3
Property:	Time_Delay =	60
Property:	Event_Enable =	{TRUE, FALSE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	ALARM
Property:	Event_Time_Stamps =	((17-APR-2001,18:50:21.2), (*-*.*,:*.*), (17-APR-2001,19:01:34.0))

### D.29 Example of a Structured View object

In this example, the objects comprising an air handling unit application are structured using a Structured View Object.

Property:	Object_Identifier =	(Structured View, Instance 1)
Property:	Object_Name =	"AHU1"
Property:	Object_Type =	STRUCTURED_VIEW
Property:	Description =	"Air Handling Unit 1"
Property:	Node_Type =	equipment
Property:	Node_Subtype =	"AHU"
Property:	Subordinate_List =	((Schedule, Instance 4), (Analog Value, Instance 3), (Analog Value, Instance 4), ((Device, Instance 2), (Analog Input, Instance 1)), (Analog Input, Instance 1), (Analog Input, Instance 2), (Structured View, Instance 2), (Structured View, Instance 3), (Structured View, Instance 4))
Property:	Subordinate_Annotations =	("AHU1 Mode Schedule", "AHU1 Heating Setpoint", "AHU1 Cooling Setpoint", "Outside Air Temperature", "AHU1 Supply Air Temperature", "AHU1 Exhaust Air Temperature", "AHU1 Preheater Subsystem", "AHU1 Fan Supply Air Subsystem ", "AHU1 Fan Exhaust Air Subsystem")

### D.30 Example of a Trend Log Multiple Object

The following is an example of a Trend Log Multiple object that logs data every 5 minutes from objects in remote device 100 and which performs buffer-ready notification via intrinsic reporting.

Property:	Object_Identifier =	(Trend Log Multiple, Instance 1)
Property:	Object_Name =	"Area 47 Log"
Property:	Object_Type =	TREND_LOG_MULTIPLE
Property:	Description =	"Area 47 Records"
Property:	Status_Flags =	{FALSE, FALSE, FALSE, FALSE}

Property:	Event_State =	NORMAL
Property:	Reliability =	NO_FAULT_DETECTED
Property:	Enable =	TRUE
Property:	Log_DeviceObjectProperty =	((Analog Input, Instance 3), Present_Value, (Device, Instance 100)), ((Analog Input, Instance 3), Status_Flags, (Device, Instance 100)), ((Binary Output, Instance 5), Present_Value, (Device, Instance 100))
Property:	Logging_Type =	POLLED
Property:	Log_Interval =	30000
Property:	Align_Intervals =	TRUE
Property:	Interval_Offset =	15000
Property:	Stop_When_Full =	FALSE
Property:	Buffer_Size =	250
Property:	Log_Buffer =	((23-MAR-2004,12:32:33.0),72.0,(FALSE,FALSE,FALSE,FALSE),ON), ((23-MAR-2004,12:34:32.0),72.1,(FALSE,FALSE,FALSE,FALSE),ON), ...)
Property:	Record_Count =	250
Property:	Total_Record_Count =	131040
Property:	Notification_Threshold =	83
Property:	Records_Since_Notification =	30
Property:	Last_Notify_Record =	131010
Property:	Notification_Class =	1
Property:	Event_Enable =	{FALSE, TRUE, TRUE}
Property:	Acked_Transitions =	{TRUE, TRUE, TRUE}
Property:	Notify_Type =	EVENT
Property:	Event_Time_Stamps =	((23-MAR-2004, 18:50:21.2),(*-*-*,:*:.*), (23-MAR-2004, 18:01:34.0))

**ANNEX E - EXAMPLES OF BACnet APPLICATION SERVICES (INFORMATIVE)**

(This annex is not part of this standard but is included for informative purposes only.)

This annex provides examples of the use of application services defined in Clauses 13-17. In these examples, the names of properties are spelled out in Mixed Case, the values of properties with a datatype of CharacterString are enclosed in double quotes ("), and the values of enumerated types are spelled out in UPPER CASE. No encoding of parameters is contained in the examples; only their unencoded, symbolic values are shown. The encoding for these examples may be found in Annex F.

**E.1 Alarm and Event Services****E.1.1 Examples of the AcknowledgeAlarm Service**

See section E.1.4 for the use of the AcknowledgeAlarm service in conjunction with the ConfirmedEventNotification service and section E.1.5 for use of the AcknowledgeAlarm service in conjunction with the UnconfirmedEventNotification service.

**E.1.2 Example of the ConfirmedCOVNotification Service**

The following example illustrates a notification that the present value of a monitored Analog Input object has changed.

Service =	ConfirmedCOVNotification
'Subscriber Process Identifier' =	18
'Initiating Device Identifier' =	(Device, Instance 4)
'Monitored Object Identifier' =	(Analog Input, Instance 10)
'Time Remaining' =	0
'List of Values' =	((Present_Value, 65.0), (Status_Flags, (FALSE, FALSE, FALSE, FALSE)))

**E.1.3 Example of the UnconfirmedCOVNotification Service**

The following example illustrates a notification that the present value of a monitored Analog Input object has changed.

Service =	UnconfirmedCOVNotification
'Subscriber Process Identifier' =	18
'Initiating Device Identifier' =	(Device, Instance 4)
'Monitored Object Identifier' =	(Analog Input, Instance 10)
'Time Remaining' =	0
'List of Values' =	((Present_Value, 65.0), (Status_Flags, (FALSE, FALSE, FALSE, FALSE)))

**E.1.4 Example of the ConfirmedEventNotification Service**

Assumed objects:	<u>Object Identifier</u> (Analog Input, Instance 2)	<u>Object Name</u> Zone1_Temp	<u>Object Type</u> ANALOG_INPUT
------------------	--------------------------------------------------------	----------------------------------	------------------------------------

Consider an Analog Input called "Zone1\_Temp" that supports intrinsic event reporting. Assume that the temperature in zone one has just risen to the point that it exceeds the high-limit value, causing the alarm to become active and the TO-OFFNORMAL bit in the Acked\_Transitions property to be cleared. Further assume that there is no associated message text. The device will issue a ConfirmedEventNotification service request primitive with the following parameters:

Service =	ConfirmedEventNotification
'Process Identifier' =	1
'Initiating Device Identifier' =	(Device, Instance 4)
'Event Object Identifier' =	(Analog Input, Instance 2)
'Time Stamp' =	16
'Notification Class' =	4
'Priority' =	100
'Event Type' =	OUT_OF_RANGE

'Notify Type' =	ALARM
'AckRequired' =	TRUE
'From State' =	NORMAL
'To State' =	HIGH_LIMIT
'Event Values' =	((Exceeding_Value, 80.1), (Status_Flags, (TRUE, FALSE, FALSE, FALSE)), (Deadband, 1.0), (Exceeded_Limit, 80.0))

This PDU will be sent to each device specified by the Notification Class object associated with this Analog Input. Assuming that the PDU is correctly received, a 'Result(+) confirm primitive will be received from each recipient as a confirmation that the message was received. Because the 'AckRequired' parameter has a value of TRUE, it is expected that a human operator will be notified and will acknowledge the alarm. After this happens, an AcknowledgeAlarm indication primitive will be received. The parameters in this primitive will be:

Service =	AcknowledgeAlarm
'Acknowledging Process Identifier' =	1
'Event Object Identifier' =	(Analog Input, Instance 2)
'Event State Acknowledged' =	HIGH_LIMIT
'Time Stamp' =	16
'Acknowledgment Source' =	"MDL"
'Time Of Acknowledgment' =	(21-Jun-1992, 13:03:41.9)

The local BACnet device will locate the appropriate Analog Input object instance, set the TO-OFFNORMAL bit in the Acked\_Transitions property, and issue a 'Result(+) response primitive. Note that the 'Time Stamp' parameter is a sequence number in this example, and it has the value that was sent with the ConfirmedEventNotification.

### E.1.5 Example of the UnconfirmedEventNotification Service

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Input, Instance 2)	Zone1_Temp	ANALOG_INPUT

Consider an Analog Input called "Zone1\_Temp" that supports intrinsic event reporting. Assume that the temperature in zone one has just risen to the point that it exceeds the high-limit value, causing the alarm to become active and the TO-OFFNORMAL bit in the Acked\_Transitions property to be cleared. Further assume that there is no associated message text. The device will issue an UnconfirmedEventNotification service request primitive with the following parameters:

Service =	UnconfirmedEventNotification
'Process Identifier' =	1
'Initiating Device Identifier' =	(Device, Instance 9)
'Event Object Identifier' =	(Analog Input, Instance 2)
'Time Stamp' =	16
'Notification Class' =	4
'Priority' =	100
'Event Type' =	OUT_OF_RANGE
'Notify Type' =	ALARM
'AckRequired' =	TRUE
'From State' =	NORMAL
'To State' =	HIGH_LIMIT
'Event Values' =	((Present_Value, 80.1), (Status_Flags, (TRUE, FALSE, FALSE, FALSE)), (Deadband, 1.0), (High_Limit, 80.0))

This PDU will be sent to a particular recipient or broadcast locally, remotely, or globally depending on the value of the Recipient\_List property of the Notification Class object associated with this Analog Input. Because the 'AckRequired' parameter has a value of TRUE, it is expected that a human operator will be notified and will acknowledge the alarm. After this happens, an AcknowledgeAlarm indication primitive will be received. The parameters in this primitive will be:

Service =	AcknowledgeAlarm
-----------	------------------

'Acknowledging Process Identifier' = 1  
 'Event Object Identifier' = (Analog Input, Instance 2)  
 'Event State Acknowledged' = HIGH\_LIMIT  
 'Time Stamp' = 16  
 'Acknowledgment Source' = "MDL"  
 'Time Of Acknowledgment' = (21-Jun-1992, 13:03:41.9)

The local BACnet device will locate the appropriate Analog Input object instance, set the TO-OFFNORMAL bit in the Acked\_Transitions property, and issue a 'Result(+)’ response primitive. Note that the 'Time Stamp' parameter is a sequence number in this example, and it has the value that was sent with the UnconfirmedEventNotification.

### E.1.6 Example of the GetAlarmSummary Service

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Input, Instance 2)	Zone1_Temp	ANALOG_INPUT
	(Analog Input, Instance 3)	Zone2_Temp	ANALOG_INPUT

A BACnet device attempting to obtain a list of active alarms from another BACnet device would issue the following service request:

Service = GetAlarmSummary

A typical response to this request would be a 'Result(+)’ containing no parameters, indicating that there are no active alarms, or a 'Result(+)’, conveying a list of active alarms as shown below.

'List of Alarm Summaries' = (((Analog Input, Instance 2), HIGH\_LIMIT, B'011'),  
 ((Analog Input, Instance 3), LOW\_LIMIT, B'111'))

Notice that the LOW\_LIMIT from "Zone2\_Temp" was previously acknowledged, but the HIGH\_LIMIT from "Zone1\_Temp" was not.

### E.1.7 Examples of the GetEnrollmentSummary Service

Example 1: Obtain a summary of all alarms that are not acknowledged.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Input, Instance 2)	Zone1_Temp	ANALOG_INPUT
	(Event Enrollment, Instance 6)	CW_Flow_Alarm	EVENT_ENROLLMENT

Service = GetEnrollmentSummary

'Acknowledgment Filter' = NOT-ACKED

A typical response to this request would be a 'Result(+)’ containing no parameters, indicating that there are no unacknowledged alarms, or a 'Result(+)’, conveying a list of active alarms as shown below.

'List of Enrollment Summaries' = (((Analog Input, Instance 2), OUT\_OF\_RANGE, HIGH\_LIMIT, 100, 4),  
 ((Event Enrollment, Instance 6), CHANGE\_OF\_STATE, NORMAL, 50, 2))

Example 2: Obtain a summary of all event enrollments with a priority in the range 6-10 for which a particular device subscribes.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Input, Instance 2)	Zone1_Temp	ANALOG_INPUT
	(Analog Input, Instance 3)	Zone2_Temp	ANALOG_INPUT
	(Analog Input, Instance 4)	Zone3_Temp	ANALOG_INPUT
	(Event Enrollment, Instance 7)	CW_Temp_Alarm	EVENT_ENROLLMENT
	(Device, Instance 17)	Console 1	DEVICE

Service = GetEnrollmentSummary  
 'Acknowledgment Filter' = ALL  
 'Enrollment Filter' = ((Device, Instance 17), 9)  
 'Priority Filter' = (6,10)

A typical response to this request would be a 'Result(+) containing no parameters, indicating that there are no event enrollments that meet the specified criteria, or a 'Result(+)', conveying a list of Event Enrollment objects that do meet the criteria as shown below.

'List of Enrollment Summaries' = (((Analog Input, Instance 2), OUT\_OF\_RANGE, NORMAL, 8, 4),  
 ((Analog Input, Instance 3), OUT\_OF\_RANGE, NORMAL, 8, 4),  
 ((Analog Input, Instance 4), OUT\_OF\_RANGE, NORMAL, 8, 4),  
 ((Event Enrollment, Instance 7), FLOATING\_LIMIT, NORMAL, 3, 8))

#### E.1.8 Example of the GetEventInformation Service

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Input, Instance 2)	Zone1_Temp	ANALOG_INPUT
	(Analog Input, Instance 3)	Zone2_Temp	ANALOG_INPUT

A BACnet device attempting to obtain a list of active events from another BACnet device would issue the following service request:

Service = GetEventInformation

A typical response to this request would be a 'Result(+) containing no parameters, indicating that there are no active events, or a 'Result(+)', conveying a list of active events as shown below.

'List of Event Summaries' = (((Analog Input, Instance 2), HIGH\_LIMIT, B'011', ((7-Jun-99, 15:35:00.20),  
 (\*-\*-\*;\*.\*.\*), (\*-\*-\*;\*.\*.\*)), ALARM, B'111', (15, 15, 20)),  
 ((Analog Input, Instance 3), NORMAL, B'110', ((7-Jun-99, 15:40:00.00),  
 (\*-\*-\*;\*.\*.\*), (15:45:30.30)), ALARM, B'111', (15, 15, 20)),  
 FALSE)

Notice that the to NORMAL transition from Zone2\_Temp has not been acknowledged.

#### E.1.9 Example of the LifeSafetyOperation Service

This example illustrates the use of the LifeSafetyOperation service to reset a trouble condition.

Service = LifeSafetyOperation  
 'Requesting Process Identifier' = 18  
 'Requesting Source' = "MDL"  
 'Request' = RESET  
 'Object Identifier' = (Life Safety Point, 1)

#### E.1.10 Example of the SubscribeCOV Service

This example illustrates the use of the SubscribeCOV service to subscribe indefinitely to COV notifications from an Analog Input object.

Service = SubscribeCOV  
 'Subscriber Process Identifier' = 18  
 'Monitored Object Identifier' = (Analog Input, Instance 10)

'Issue Confirmed Notifications' = TRUE  
 'Lifetime' = 0

### E.1.11 Example of the SubscribeCOVProperty Service

This example illustrates the use of the SubscribeCOVProperty service to subscribe to COV notifications on the present-value of an Analog Input object.

Service =	SubscribeCOVProperty
'Subscriber Process Identifier' =	18
'Monitored Object Identifier' =	(Analog Input, Instance 10)
'Issue Confirmed Notifications' =	TRUE
'Lifetime' =	60
'Monitored Property' =	(Present_Value)
'COV Increment' =	1.0

## E.2 File Access Services

The following examples illustrate typical uses of files. The actual form and content of files is both vendor-specific and application-specific.

### E.2.1 Examples of the AtomicReadFile Service

Example 1: Read data from a file.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(File, Instance 1)	ChillerData	FILE

Service =	AtomicReadFile
'File Identifier' =	(File, Instance 1)
'Stream Access':	
'File Start Position' =	0
'Requested Octet Count' =	27

The 'Result(+)’ parameters would be:

'End Of File' =	FALSE
'Stream Access':	
'File Start Position' =	0
'File Data' =	"Chiller01 On-Time=4.3 Hours"

Example 2: Read record from a file.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(File, Instance 2)	ChillerTrendLog	FILE

Service =	AtomicReadFile
'File Identifier' =	(File, Instance 2)
'Record Access':	
'File Start Record' =	14
'Requested Record Count' =	3

The 'Result(+)’ parameters would be:

'End Of File' =	TRUE
'Record Access':	

'File Start Record' = 14  
 'Returned Record Count' = 2  
 'File Record Data' = ((12:00,45.6), (12:15,44.8))

Notice that in this example not all of the requested data are returned.

### E.2.2 Examples of the AtomicWriteFile Service

Example 1: Write data to a file.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(File, Instance 1)	ChillerData	FILE

Service = AtomicWriteFile  
 'File Identifier' = (File, Instance 1)  
 'Stream Access':  
   'File Start Position' = 30  
   'File Data' = "Chiller01 On-Time=4.3 Hours"

The 'Result(+)’ parameters would be:

'Stream Access':  
   'File Start Position' = 30

Example 2: Append two records to a file.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(File, Instance 2)	ChillerTrendLog	FILE

Service = AtomicWriteFile  
 'File Identifier' = (File, Instance 2)  
 'Record Access':  
   'File Start Record' = -1  
   'Record Count' = 2  
   'File Record Data' = ((12:00,45.6),  
                        (12:15,44.8))

The 'Result(+)’ parameters would be:

'Record Access':  
   'File Start Record' = 14

## E.3 Object Access Services

### E.3.1 Example of the AddListElement Service

Example 1. Adding members to a group object.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Group, Instance 3)	AHU1_GRAPH	GROUP
	(Analog Input, Instance 9)	AHU1_SA_TEMP	ANALOG_INPUT
	(Analog Input, Instance 10)	AHU1_RA_TEMP	ANALOG_INPUT
	(Analog Input, Instance 11)	AHU1_OAD_POS	ANALOG_INPUT
	(Analog Input, Instance 12)	AHU1_SA_PRESS	ANALOG_INPUT
	(Analog Input, Instance 13)	AHU1_CW_VALVE	ANALOG_INPUT
	(Analog Input, Instance 14)	OA_TEMP	ANALOG_INPUT
	(Analog Input, Instance 15)	OA_HUMID	ANALOG_INPUT

Consider a BACnet device that contains the following group object used for a graphic display:

```

Property: Object_Identifier = (Group, Instance 3)
Property: Object_Name = "AHU1_GRAPH"
Property: Object_Type = GROUP
Property: Description = "Points for AHU1 graphic"
Property: List_Of_Group_Members = (((Analog Input, Instance 9), (Present_Value, Reliability)),
                                  ((Analog Input, Instance 10), (Present_Value, Reliability)),
                                  ((Analog Input, Instance 11), (Present_Value, Reliability)),
                                  ((Analog Input, Instance 12), (Present_Value, Reliability, Description)),
                                  ((Analog Input, Instance 13), (Present_Value, Reliability, Description)),
                                  ((Analog Input, Instance 14), (Present_Value)))
Property: Present_Value = (65.2, NO_FAULT_DETECTED, 72.4, NO_FAULT_DETECTED, 99,
                           NO_FAULT_DETECTED, 0.67, NO_FAULT_DETECTED, "Inches of water", 32,
                           NO_FAULT_DETECTED, "% open", 68.3)

```

The system operator has decided to upgrade the control software in AHU1 to use an enthalpy economizer cycle. As a result, the operator wants to add a humidity reading to "AHU1\_GRAPH". The AddListElement Service primitive is used with the following parameters:

```

Service = AddListElement
'Object Identifier' = (Group, Instance 3)
'Property Identifier' = List_Of_Group_Members
'List of Elements' = ((Analog Input, Instance 15),(Present_Value, Reliability))

```

Assuming the service request succeeds, a 'Result(+)’ service primitive will be issued and the object "AHU1\_GRAPH" now has the properties:

```

Property: Object_Identifier = (Group, Instance 3)
Property: Object_Name = "AHU1_GRAPH"
Property: Object_Type = GROUP
Property: Description = "Points for AHU1 graphic"
Property: List_Of_Group_Members = (((Analog Input, Instance 9), (Present_Value, Reliability)),
                                  ((Analog Input, Instance 10), (Present_Value, Reliability)),
                                  ((Analog Input, Instance 11), (Present_Value, Reliability)),
                                  ((Analog Input, Instance 12), (Present_Value, Reliability, Description)),
                                  ((Analog Input, Instance 13), (Present_Value, Reliability, Description)),
                                  ((Analog Input, Instance 14), (Present_Value)),
                                  ((Analog Input, Instance 15), (Present_Value, Reliability)))

```

Property: Present\_Value = (65.2, NO\_FAULT\_DETECTED, 72.4, NO\_FAULT\_DETECTED, 99, NO\_FAULT\_DETECTED, 0.67, NO\_FAULT\_DETECTED, "Inches of water", 32, NO\_FAULT\_DETECTED, "% open", 68.3, 42.1, NO\_FAULT\_DETECTED)

*NOTE: In this example the new element was added at the end of the list. This is a logical place because the list must be traversed to determine if the "new" element already exists. This standard does not require adding new list elements at the end.*

### E.3.2 Example of the RemoveListElement Service

Example 1: Removing a member of a group.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Group, Instance 3)	AHU1_GRAPH	GROUP
	(Analog Input, Instance 9)	AHU1_SA_TEMP	ANALOG_INPUT
	(Analog Input, Instance 10)	AHU1_RA_TEMP	ANALOG_INPUT
	(Analog Input, Instance 11)	AHU1_OAD_POS	ANALOG_INPUT
	(Analog Input, Instance 12)	AHU1_SA_PRESS	ANALOG_INPUT
	(Analog Input, Instance 13)	AHU1_CW_VALVE	ANALOG_INPUT
	(Analog Input, Instance 14)	OA_TEMP	ANALOG_INPUT

This is an example of using the RemoveListElement Service to change an existing group object. Assume that a group object "AHU1\_GRAPH" is defined as:

Property: Object\_Identifier = (Group, Instance 3)  
 Property: Object\_Name = "AHU1\_GRAPH"  
 Property: Object\_Type = GROUP  
 Property: List\_Of\_Group\_Members = (((Analog Input, Instance 9), (Present\_Value, Reliability)),  
                                           ((Analog Input, Instance 10), (Present\_Value, Reliability)),  
                                           ((Analog Input, Instance 11), (Present\_Value, Reliability)),  
                                           ((Analog Input, Instance 12), (Present\_Value, Reliability, Description)),  
                                           ((Analog Input, Instance 13), (Present\_Value, Reliability, Description)),  
                                           ((Analog Input, Instance 14), (Present\_Value)))  
 Property: Present\_Value = (65.2, NO\_FAULT\_DETECTED, 72.4, NO\_FAULT\_DETECTED, 99.0,  
                                           NO\_FAULT\_DETECTED, 0.67, NO\_FAULT\_DETECTED, "Inches of water", 32.0,  
                                           NO\_FAULT\_DETECTED, % open", 68.3)

A system operator is updating graphic displays and decides that the Description properties in this group are not really used and wishes to remove them. Even though Description is an element of a property list, it cannot be removed by this service because it is nested inside the List\_Of\_Group\_Members. A two step process is required as shown below.

The following service request is issued:

Service = RemoveListElement  
 'Object Identifier' = (Group, Instance 3)  
 'Property Identifier' = "List\_Of\_Elements"  
 'List of Elements' = (((Analog Input, Instance 12), (Present\_Value, Reliability, Description)),  
                                           ((Analog Input, Instance 13), (Present\_Value, Reliability, Description)))

This service request is successful and the status of the object "AHU1\_GRAPH" at this point is:

Property: Object\_Identifier = (Group, Instance 3)  
 Property: Object\_Name = "AHU1\_GRAPH"  
 Property: Object\_Type = GROUP

Property: List\_Of\_Group\_Members = (((Analog Input, Instance 9), (Present\_Value, Reliability)),  
                                           ((Analog Input, Instance 10), (Present\_Value, Reliability)),  
                                           ((Analog Input, Instance 11), (Present\_Value, Reliability)),  
                                           ((Analog Input, Instance 14), (Present\_Value)))  
 Property: Present\_Value =         (65.2, NO\_FAULT\_DETECTED, 72.4, NO\_FAULT\_DETECTED, 99.0,  
                                           NO\_FAULT\_DETECTED, 68.3)

The AddListElement service is now used to replace the group members that were removed but are still needed for the graphic display.

The following service request is issued:

```
Service =                      AddListElement
'Object Identifier' =         (Group, Instance 3)
'Property Identifier' =      "List_Of_Group_Members"
'List of Elements' =         (((Analog Input, Instance 12), (Present_Value, Reliability)),
                                    ((Analog Input, Instance 13), (Present_Value, Reliability)))
```

This service request is successful and the "AHU1\_GRAPH" is now in the desired form:

```
Property: Object_Identifier =         (Group, Instance 3)
Property: Object_Name =              "AHU1_GRAPH"
Property: Object_Type =              GROUP
Property: List_Of_Group_Members =    (((Analog Input, Instance 9), (Present_Value, Reliability)),
                                            ((Analog Input, Instance 10), (Present_Value, Reliability)),
                                            ((Analog Input, Instance 11), (Present_Value, Reliability)),
                                            ((Analog Input, Instance 14), (Present_Value)))
                                            ((Analog Input, Instance 12), (Present_Value, Reliability)),
                                            ((Analog Input, Instance 13), (Present_Value, Reliability)))
Property: Present_Value =          (65.2, NO_FAULT_DETECTED, 72.4, NO_FAULT_DETECTED, 99.0,
                                            NO_FAULT_DETECTED, 68.3, 0.67, NO_FAULT_DETECTED, 32.0,
                                            NO_FAULT_DETECTED)
```

### E.3.3 Example of the CreateObject Service

This is an example of using the CreateObject service to create a file object to be used for a trend log.

```
Service =                      CreateObject
'Object Type' =               FILE
'List of Initial Values' =    ((Object_Name, "Trend 1"), (File_Access_Method, RECORD_ACCESS))
```

Assuming that the CreateObject service request was correctly received and the device has the ability to create a file object, a 'Result(+)' will be returned conveying the Object\_Identifier of the newly created object.

'Object\_Identifier' =       (File, Instance 13)

Note that in this example only the File\_Type and File\_Access\_Method properties of the new object are initialized as a side effect of the object creation. The other properties of the object will contain default values provided by the vendor. If these default values are not acceptable, then initial values for these properties may be included in the 'List of Initial Values' for the CreateObject service. Alternatively, any writable properties of the object may be initialized or written to via a WriteProperty or WritePropertyMultiple service request after the object is created.

**E.3.4 Example of the DeleteObject Service**

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Group, Instance 6)	ZONE1_TEMPS	GROUP
	(Group, Instance 7)	NotDeleteable	GROUP

Consider a BACnet device that contains two group objects, "ZONE1\_TEMPS" and "NotDeleteable". The object "NotDeleteable" was created and protected at configuration time and may not be deleted by this protocol service.

Example 1: The successful deletion of an object.

The following request service primitive is issued:

Service = DeleteObject  
 'Object Identifier' = (Group, Instance 6)

The object is deleted and the server issues a 'Result(+)’ response primitive.

Example 2: An unsuccessful attempt to delete a group object.

The following request service primitive is issued:

Service = DeleteObject  
 'Object Identifier' = (Group, Instance 7)

This object is protected and cannot be deleted by this protocol service. The server issues the following response primitive.

'Result(-)'  
 'Error Type' = (SERVICES, OBJECT\_NOT\_DELETABLE)

**E.3.5 Examples of the ReadProperty Service**

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Input, Instance 5)	SPACE_TEMP	ANALOG_INPUT

We wish to read the present value for an analog input called "SPACE\_TEMP".

Service = ReadProperty  
 'ObjectIdentifier' = (Analog Input, Instance 5)  
 'PropertyIdentifier' = Present\_Value

Assuming the target machine can locate the object with this ID and the requested properties, the result would be:

'ObjectIdentifier' = (Analog Input, Instance 5)  
 'PropertyIdentifier' = Present\_Value  
 'Value' = 72.3

The result indicates that the present value of "SPACE\_TEMP" is 72.3.

### E.3.6 Examples of the ReadPropertyConditional Service

Example 1: Parameters for getting the Object\_Identifiers of all Binary Input objects.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Binary Input, Instance 1)	AC1 Status	BINARY_INPUT
	(Binary Input, Instance 2)	AC2 Status	BINARY_INPUT
	(Binary Input, Instance 3)	AC1 Freezestat	BINARY_INPUT
	(Binary Input, Instance 4)	AC2 Freezestat	BINARY_INPUT

Suppose a user wishes to find out the Object\_Identifier of all binary input objects within a BACnet device.

Service = ReadPropertyConditional  
'Object Selection Criteria'  
'Selection Logic' = AND (note that either AND or OR may be used here because there is only one selection criterion)  
'List of Selection Criteria' = (Object\_Type, =, BINARY\_INPUT)

This would produce a listing of all binary input objects in the BACnet device that is conveyed in the 'Result(+) primitive.

'List of Read Access Results' = ((Binary Input, Instance 1), (Binary Input, Instance 2),  
(Instance 3), (Binary Input, Instance 4))

With the appropriate selection criteria, the ReadPropertyConditional service can be used to return the Object\_Identifiers of any group of objects related by a common property value, whether it be Object\_Type, Present\_Value, Reliability, Status, or some other property.

Example 2: Parameters for a conditional read of Analog Inputs.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Input, Instance 1)	Room 101 Space Temp	ANALOG_INPUT
	(Analog Input, Instance 2)	AC1 HWS Temp	ANALOG_INPUT
	(Analog Input, Instance 3)	AC1 HWR Temp	ANALOG_INPUT

Suppose we wish to read the Present\_Value property of all Analog Input objects where the Present\_Value is greater than 100.0.

Service = ReadPropertyConditional Service  
'Object Selection Criteria'  
'Selection Logic' = AND  
'List of Selection Criteria' = ((Object\_Type, =, ANALOG\_INPUT), (Present\_Value, >, 100.0))  
'List of Property References' = (Present\_Value)

This could result in the following sort of list:

'List of Read Access Results' = (((Analog Input, Instance 1), Present\_Value, 102.3),  
((Analog Input, Instance 2), Present\_Value, 180.7),  
((Analog Input, Instance 3), Present\_Value, 142.1))

Example 3: Parameters for finding unreliable or out of service objects.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Binary Input, Instance 1)	AC1 Status	BINARY_INPUT
	(Analog Input, Instance 2)	AC1 Discharge Temp	ANALOG_INPUT

The following parameters could be used to find all the objects that have their Reliability property not equal to NO\_FAULT\_DETECTED or their Out\_Of\_Service property equal to TRUE.

Service = ReadPropertyConditional Service  
 'Object Selection Criteria'  
     'Selection Logic' = OR  
     'List of Selection Criteria' = ((Reliability, ≠, NO\_FAULT\_DETECTED), (Out\_Of\_Service, =, TRUE))  
 'List of Property Identifiers' = (Present\_Value, Reliability, Out\_Of\_Service)

A typical result might be:

'List of Read Access Results' = (((Binary Input, Instance 1),(Present\_Value,ACTIVE, Reliability, NO\_FAULT\_DETECTED, Out\_Of\_Service, TRUE)), ((Analog Input, Instance 2),(Present\_Value,250.0, Reliability, UNRELIABLE\_OTHER, Out\_Of\_Service, FALSE)))

#### Example 4:

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Input, Instance 4)	AC1 Supply Temp	ANALOG_INPUT
	(Analog Input, Instance 7)	CWP1 Pressure	ANALOG_INPUT
	(Analog Input, Instance 8)	Chiller 1 Freon Pressure	ANALOG_INPUT
	(Analog Input, Instance 10)	AC2 Supply Temp	ANALOG_INPUT
	(Analog Input, Instance 12)	AC3 Supply Temp	ANALOG_INPUT

The following parameters could be used to find the identifiers of all objects with Object\_Names that match Comparison Values containing the wildcard characters "\*" or "?".

Service = ReadPropertyConditional Service  
'Object Selection Criteria'  
    'Selection Logic' = OR  
    'List of Selection Criteria' = ((Object\_Name, =, "C\* Pressure"), (Object\_Name, =, "AC? Supply Temp"))  
'List of Property Identifiers' = (Object\_Name)

A typical result might be:

'List of Read Access Results' = (((Analog Input, Instance 4), ("AC1 Supply Temp")),  
((Analog Input, Instance 7), ("CWP1 Pressure")),  
((Analog Input, Instance 8), ("Chiller 1 Freon Pressure"))),  
((Analog Input, Instance 10), ("AC2 Supply Temp")),  
((Analog Input, Instance 12), ("AC3 Supply Temp"))))

### E.3.7 Examples of the ReadPropertyMultiple Service

Example 1: Parameters for reading multiple properties of a single object.

Assumed objects: Object Identifier (Analog Input, Instance 16)      Object Name SPACE\_TEMP      Object Type ANALOG\_INPUT

We wish to read the Present\_Value and Reliability of an analog point called "SPACE TEMP".

Service = ReadPropertyMultiple  
'List of Read Access Specifications' = ((Analog Input, Instance 16), (Present Value,Reliability))

Assuming the target machine can locate the object with this identifier and the requested properties, the result would be:

'List of Read Access Results' = ((Analog Input, Instance 16), ((Present\_Value, 72.3), (Reliability, NO FAULT DETECTED)))

The result indicates that the present value of "SPACE\_TEMP" is 72.3 and that it is reliable so far as the device can determine.

Example 2: Parameters for reading the properties of several objects.

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Input, Instance 33)	CW_STEMP	ANALOG_INPUT
	(Analog Input, Instance 34)	CW_RTEMP	ANALOG_INPUT
	(Analog Input, Instance 35)	CW_FLOW	ANALOG_INPUT

Suppose we wish to access the present values of three analog inputs in a chilled water system whose properties are grouped together in objects called "CW\_STEMP", "CW\_RTEMP", and "CW\_FLOW".

```
Service = ReadPropertyMultiple
'List of Read Access Specifications' = (((Analog Input, Instance 33), (Present_Value)),
                                         ((Analog Input, Instance 50), (Present_Value)),
                                         ((Analog Input, Instance 35), (Present_Value)))
```

Assuming successful access of two out of the three requested values:

```
'List of Read Access Results' = (((Analog Input, Instance 33), (Present_Value, 42.3)),
                                         ((Analog Input, Instance 50), (Present_Value, 'Property Access Error' =
                                         (OBJECT, UNKNOWN_OBJECT))),
                                         ((Analog Input, Instance 35), (Present_Value, 435.7)))
```

This result indicates that the supply temperature was successfully accessed and is currently 42.3, and the flow is 435.7. But access to the present value of the return temperature failed. The error type related to this part of the request is in the Error Class OBJECT and the specific Error Code is UNKNOWN\_OBJECT. This occurred because the object identifier was incorrect, possibly due to an operator error.

### E.3.8 Example of the ReadRange Service

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Trend Log, Instance 1)	ROOM3TEMP	TREND_LOG

We wish to look at all the records for the last five minutes within a Trend Log's Log Buffer.

```
Service = ReadRange
'ObjectIdentifier' = (Trend Log, Instance 1)
'PropertyIdentifier' = Log_Buffer
'Range'
  'Time Range'
  'Beginning Time' = (23-MAR-1998, 19:52:34.0)
  'Ending Time' = (23-MAR-1998, 19:57:34.0)
```

A typical result might be:

```
'Result Flags' = (TRUE, TRUE, FALSE)
'ItemCount' = 2
'Item Data' = (((23-MAR-1998, 19:54:27.0), 18.0, (FALSE, FALSE, FALSE, FALSE)),
                  ((23-MAR-1998, 19:56:27.0), 18.1, (FALSE, FALSE, FALSE, FALSE)))
```

**E.3.9 Examples of the WriteProperty Service**

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Value, Instance 1)	HW_Setpoint	ANALOG_VALUE

We wish to modify the Present\_Value of an Analog Value object with an Object\_Name of "HW\_Setpoint".

```
Service = WriteProperty
'ObjectIdentifier' = (Analog Value, Instance 1)
'PropertyIdentifier' = Present_Value
'PropertyValue' = 180.0
```

Assuming the target machine can locate the object with the specified Object\_Identifier and modify the Present\_Value property, the result would be the issuance of a 'Result(+) primitive with no additional parameters. This acknowledgment would be conveyed to the service requester in a SimpleACK-PDU without parameters.

**E.3.10 Examples of the WritePropertyMultiple Service**

Assumed objects:	<u>Object Identifier</u>	<u>Object Name</u>	<u>Object Type</u>
	(Analog Value, Instance 5)	Room 1 Temp Setpoint	ANALOG_VALUE
	(Analog Value, Instance 6)	Room 2 Temp Setpoint	ANALOG_VALUE
	(Analog Value, Instance 7)	Room 3 Temp Setpoint	ANALOG_VALUE

We wish to modify the Present\_Value of three analog variable objects used in the control of three space temperature loops.

```
Service = WritePropertyMultiple
'List of Write Access Specifications' = (((Analog Value, Instance 5), (Present_Value, 67.0)),
                                         ((Analog Value, Instance 6), (Present_Value, 67.0)),
                                         ((Analog Value, Instance 7), (Present_Value, 72.0)))
```

Assuming the responding BACnet-user can locate each of the three objects, the result would be the replacement of the former values of each of these properties with the provided values and the issuance of a 'Result(+) primitive with no additional parameters. This acknowledgment would be conveyed to the service requester in a SimpleACK-PDU without parameters.

**E.4 Remote Device Management Services****E.4.1 An Example of the DeviceCommunicationControl Service**

While troubleshooting a problem on a BACnet network, it becomes necessary to stop communication exchanges from a particular device for a period of five minutes. This is accomplished by means of the DeviceCommunicationControl Service as follows.

```
Service = DeviceCommunicationControl
'Time Duration' = 5
'Enable/Disable' = DISABLE
'Password' = "#egbdf!"
```

**E.4.2 An Example of the ConfirmedPrivateTransfer Service**

This is an example of a typical proprietary service request using a BACnet confirmed service.

```
Service = ConfirmedPrivateTransfer
'VendorID' = 25
'Service Number' = 8
'ServiceParameters' = (72.4, X'1649')
```

Assuming that the service is successfully executed but no results need to be returned to the requesting BACnet-user, a 'Result(+)’ primitive will be returned conveying the following information.

```
'VendorID' = 25
'Service Number' = 8
'Result Block' = NIL
```

#### **E.4.3 An Example of the UnconfirmedPrivateTransfer Service**

This is an example of a typical proprietary service request using a BACnet unconfirmed service.

```
Service = UnconfirmedPrivateTransfer
'VendorID' = 18
'Service Number' = 12
'ServiceParameters' = (72.4, X'1649')
```

Since this is an unconfirmed service, no response is expected.

#### **E.4.4 Example of the ReinitializeDevice Service**

This example illustrates the use of the ReinitializeDevice service for requesting a WARMSTART for a device that requires a password with this service.

```
Service = ReinitializeDevice
'Reinitialization State of Device' = WARMSTART
'Password' = "AbCdEfGh"
```

If the password is successfully validated, a 'Result (+)' primitive will be returned and then the device will reinitialize. Otherwise, a 'Result (-)' primitive will be returned.

#### **E.4.5 Examples of the ConfirmedTextMessageService**

This example illustrates the use of the ConfirmedTextMessage service.

```
Service = ConfirmedTextMessage
'Text Message Source Device' = (Device, Instance 5)
'Message Priority' = NORMAL
'Message' = "P.M. required for PUMP347"
```

If the ConfirmedTextMessage-Request was successfully received, a 'Result(+)’ will be returned. Otherwise, a 'Result(-)' will be returned.

#### **E.4.6 Examples of the UnconfirmedTextMessage Service**

This example illustrates the use of the UnconfirmedTextMessage service.

```
Service = UnconfirmedTextMessage
'Text Message Source Device' = (Device, Instance 5)
'Message Priority' = NORMAL
'Message' = "P.M. required for PUMP347"
```

#### **E.4.7 Example of the TimeSynchronization Service**

An example of parameter usage for the TimeSynchronization service follows.

```
Service =      TimeSynchronization
'Time'
'Date' = 17-Nov-92
'Time' = 22:45:30.7
```

This request will notify all remote devices that the current time is 30.7 seconds past 10:45 P.M. on November 17, 1992. The remote devices may use this information to update their internal clocks so that all devices will be synchronized.

#### **E.4.8 Examples of the Who-Has and I-Have Services**

Examples of the parameter usage for the Who-Has and I-Have services follow.

Example 1: Locating the device that contains an object for which the Object\_Name is known.

Consider an attempt to locate an object with an object name of "OATemp":

```
Service =      Who-Has
'Object Name' =  "OATemp"
```

Assuming that there is exactly one device that has such an object, the following I-Have service indication would be received:

```
Service =      I-Have
'Device Identifier' = (Device, Instance 8)
'Object Identifier' = (Analog Input, Instance 3)
'Object Name' =      "OATemp"
```

Example 2: Locating the device that contains an object for which the Object\_Identifier is known.

Consider an attempt to locate an object with an Object\_Identifier of (Analog Input, Instance 3).

```
Service =      Who-Has
'Object Identifier' = (Analog Input, Instance 3)
```

Assuming that there is exactly one device that has such an object, the following I-Have service indication would be received:

```
Service =      I-Have
'Device Identifier' = (Device, Instance 8)
'Object Identifier' = (Analog Input, Instance 3)
'Object Name' =      "OATemp"
```

#### **E.4.9 Examples of the Who-Is and I-Am Services**

Examples of parameter usage for the Who-Is and I-Am services follow.

Example 1: Establishing the network address of a device.

We wish to determine the network address of another BACnet Device, but only its Device Identifier is known.

```
Service =      Who-Is
'Who-Is Device Identifier' = (Device, Instance 3)
```

Assuming that there is such a device on the network, it responds sometime later using the I-Am service:

Service = I-Am  
 'I-Am Device Identifier' = (Device, Instance 3)  
 'Max APDU Length Accepted' = 1024  
 'Segmentation Supported' = NO SEGMENTATION  
 'Vendor Identifier' = 99

The MAC layer source address combined with the network layer SNET and SADR provide all of the addressing information needed to communicate with the device (Device, Instance 3).

Example 2: Finding out about all network devices.

Suppose we wish to determine which devices are currently on the local network.

Service = Who-Is Service

Each of the devices on the network answers, resulting in several I-Am service requests:

Service = I-Am  
 'I-Am Device Identifier' = (Device, Instance 1)  
 'Max APDU Length Accepted' = 480  
 'Segmentation Supported' = SEGMENTED\_TRANSMIT  
 'Vendor Identifier' = 99

Service = I-Am  
 'I-Am Device Identifier' = (Device, Instance 2)  
 'Max APDU Length Accepted' = 206  
 'Segmentation Supported' = SEGMENTED\_RECEIVE  
 'Vendor Identifier' = 33

Service = I-Am  
 'I-Am Device Identifier' = (Device, Instance 3)  
 'Max APDU Length Accepted' = 1024  
 'Segmentation Supported' = NO SEGMENTATION  
 'Vendor Identifier' = 99

Service = I-Am  
 'I-Am Device Identifier' = (Device, Instance 4)  
 'Max APDU Length Accepted' = 128  
 'Segmentation Supported' = SEGMENTED\_BOTH  
 'Vendor Identifier' = 66

This procedure can be expanded to find out about all devices in a BACnet internet by including the global network address (X'FFFF') in the network layer header.

## E.5 Virtual Terminal Services

Examples of parameter usage for the VT-Open, VT-Data, and VT-Close services follow. For readability purposes, some of the examples include imbedded control characters, such as carriage return. These are shown within text strings enclosed in curly braces, e.g., "{cr}{lf}text".

Establishing a Session with a Default Terminal:

We wish to create a VT-session with the Default-terminal style of operator interface in another BACnet Device.

Service = VT-Open  
 'VT-class' = ANSI\_X3.64  
 'Local VT Session Identifier' = 5

Assuming that the target machine can create a new VT-session, the 'Result (+)' response might be:

'Remote VT Session Identifier' = 29

The result indicates that target device has accepted the request and created a new session.

Now that a session is established, the operator interface program in the remote device prompts us to sign-on by issuing a VT-Data request:

Service = VT-Data  
 'VT-session Identifier' = 5  
 'VT-new Data' = "{cr}{lf}Enter User Name:"  
 'VT-data Flag' = 0

Our operator interface display queue is empty so it can accept all of the incoming characters. Our VT-User therefore issues a 'Result (+)':

'All New Data Accepted' = TRUE

Eventually, our human operator enters his or her name in response to the prompt, causing a VT-Data request to be issued:

Service = VT-Data  
 'VT-session Identifier' = 29  
 'VT-new Data' = "FRED{cr}"  
 'VT-data Flag' = 0

The remote operator interface accepts the incoming characters as well and responds with 'Result (+)':

'All New Data Accepted' = TRUE

Then the remote operator interface echoes the entered characters and another prompt:

Service = VT-Data  
 'VT-session Identifier' = 5  
 'VT-new Data' = "FRED{cr}{lf}Enter Password:"  
 'VT-data Flag' = 1

Our operator interface display queue is empty so it can accept all of the incoming characters. Our VT-User therefore issues 'Result (+)':

'All New Data Accepted' = TRUE

For some reason, FRED decides to cancel this virtual terminal session and signals the operator interface program to do so. The operator interface program issues a VT-Close request:

Service = VT-Close  
 'List of Remote VT Session Identifiers' = (29)

## E.6 Security Services

This example shows the use of the Request Key and Authenticate services leading to the issuance of a session key to two devices, A and B, by a key server. The procedure is detailed in 24.2.1. Enciphered productions are indicated by *italics*.

Device A begins the process by directing a RequestKey-Request, enciphered using device A's Private Key  $PK_A$ , to the key server. Assume that the 'Invoke ID' of the BACnet-Confirmed-Request-PDU is 15:

```

Service =           RequestKey
'Requesting Device Identifier' = (Device, Instance 1)
'Requesting Device Address' = (2,X'11')
'Remote Device Identifier' = (Device, Instance 2)
'Remote Device Address' = (2,X'22')

```

In order to authenticate that the request was truly originated by device A, the key server issues an Authenticate-Request containing the 'Expected Invoke ID' = 15:

```

Service =           Authenticate
'Pseudo Random Number' = X'12345678'
'Expected Invoke ID' = 15

```

Note that the Authenticate-Request production is likewise enciphered prior to transmission using the Private Key of device A, a copy of which resides in the key server.

Since device A did, in fact, originate the Request Key service request, the Authenticate-Request can be deciphered by device A using its Private Key,  $PK_A$ . Moreover, the 'Expected Invoke ID' matches the 'Invoke ID' of the previous Request Key request. Device A therefore manipulates the 'Pseudo Random Number' to produce the 'Modified Random Number' as described in 24.5.2, enciphers it using its Private Key, and issues a ComplexACK with an enciphered Authenticate-ACK production consisting of the 'Modified Random Number':

```
'Authenticate-ACK' = X '93B5D7F1'
```

The key server then generates a session key and writes it, enciphered using each device's respective PK, to the List\_Of\_Session\_Keys property of the Device objects of both device A and device B using the AddListElement service. Each device executes the authentication procedure illustrated above before carrying out the AddListElement service request and issuing an acknowledgment. Finally, if all has gone well, the key server issues a SimpleACK-PDU to device A reflecting the successful completion of the original Request Key service.

**ANNEX F - EXAMPLES OF APDU ENCODING (INFORMATIVE)**

(This annex is not part of the standard but is included for informative purposes only.)

This annex illustrates the use of BACnet encoding rules by showing the encoded APDUs for the examples in Annex E.

**F.1 Example Encodings for Alarm and Event Services****F.1.1 Encoding for Example E.1.1 - AcknowledgeAlarm Service**

The encoding for example E.1.1 is included in F.1.4 and F.1.5.

**F.1.2 Encoding for Example E.1.2 - ConfirmedCOVNotification Service**

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'0F'	Invoke ID=15
X'01'	Service Choice=1 (ConfirmedCOVNotification-Request)
X'09'	SD Context Tag 0 (Subscriber Process Identifier, L=1)
X'12'	Subscriber Process Identifier=18
X'1C'	SD Context Tag 1 (Initiating Device Identifier, L=4)
X'02000004'	Device, Instance 4
X'2C'	SD Context Tag 2 (Monitored Object Identifier, L=4)
X'0000000A'	Analog Input, Instance Number=10
X'39'	SD Context Tag 3 (Time Remaining, L=1)
X'00'	Time Remaining=0
X'4E'	PD Opening Tag 4 (List Of Values)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'2E'	PD Opening Tag 2 (Value)
X'44'	Application Tag 4 (Real, L=4)
X'42820000'	65.0
X'2F'	PD Closing Tag 2 (Value)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'6F'	111 (STATUS_FLAGS)
X'2E'	PD Opening Tag 2 (Value)
X'82'	Application Tag 8 (Bit String, L=2)
X'0400'	0,0,0,0 (FALSE, FALSE, FALSE, FALSE)
X'2F'	PD Closing Tag 2 (Value)
X'4F'	PD Closing Tag 4 (List Of Values)

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'0F'	Invoke ID=15
X'01'	Service ACK Choice=1 (ConfirmedCOVNotification)

**F.1.3 Encoding for Example E.1.3 - UnconfirmedCOVNotification Service**

X'10'	PDU Type=1 (BACnet-Unconfirmed-Request-PDU)
X'02'	Service Choice=2 (UnconfirmedCOVNotification-Request)
X'09'	SD Context Tag 0 (Subscriber Process Identifier, L=1)
X'12'	18
X'1C'	SD Context Tag 1 (Initiating Device Identifier, L=4)

X'02000004'	Device, Instance Number=4
X'2C'	SD Context Tag 2 (Monitored Object Identifier, L=4)
X'0000000A'	Analog Input, Instance Number=10
X'39'	SD Context Tag 3 (Time Remaining, L=1)
X'00'	0
X'4E'	PD Opening Tag 4 (List Of Values)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'2E'	PD Opening Tag 2 (Value)
X'44'	Application Tag 4 (Real, L=4)
X'42820000'	65.0
X'2F'	PD Closing Tag 2 (Value)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'6F'	111 (STATUS_FLAGS)
X'2E'	PD Opening Tag 2 (Value)
X'82'	Application Tag 8 (Bit String, L=2)
X'0400'	0,0,0,0 (FALSE, FALSE, FALSE, FALSE)
X'2F'	PD Closing Tag 2 (Value)
X'4F'	PD Closing Tag 4 (List Of Values)

#### F.1.4 Encoding for Example E.1.4 - ConfirmedEventNotification Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'10'	Invoke ID=16
X'02'	Service Choice=2 (ConfirmedEventNotification-Request)
X'09'	SD Context Tag 0 (Process Identifier, L=1)
X'01'	Process Identifier=1
X'1C'	SD Context Tag 1 (Initiating Device Identifier, L=4)
X'02000004'	Device, Instance 4
X'2C'	SD Context Tag 2 (Event Object Identifier, L=4)
X'00000002'	Analog Input, Instance Number=2
X'3E'	PD Opening Tag 3 (Time Stamp)
X'19'	SD Context Tag 1 (SequenceNumber, L=1)
X'10'	16
X'3F'	PD Closing Tag 3 (Time Stamp)
X'49'	SD Context Tag 4 (Notification Class, L=1)
X'04'	4
X'59'	SD Context Tag 5 (Priority, L=1)
X'64'	100
X'69'	SD Context Tag 6 (Event Type, L=1)
X'05'	5 (OUT_OF_RANGE)
X'89'	SD Context Tag 8 (Notify Type, L=1)
X'00'	0 (ALARM)
X'99'	SD Context Tag 9 (AckRequired, L=1)
X'01'	TRUE
X'A9'	SD Context Tag 10 (From State, L=1)
X'00'	0 (NORMAL)
X'B9'	SD Context Tag 11 (To State, L=1)
X'03'	3 (HIGH_LIMIT)
X'CE'	PD Opening Tag 12 (Event Values)
X'5E'	PD Opening Tag 5 (BACnetNotificationParameters, Choice 5=OUT_OF_RANGE)
X'0C'	SD Context Tag 0 (Exceeding Value, L=4)
X'42A03333'	80.1
X'1A'	SD Context Tag 1 (Status Flags, L=2)
X'0480'	1,0,0,0 (TRUE, FALSE, FALSE, FALSE)

X'2C'	SD Context Tag 2 (Deadband, L=4)
X'3F800000'	1.0
X'3C'	SD Context Tag 3 (Exceeded Limit, L=4)
X'42A00000'	80.0
X'5F'	PD Closing Tag 5 (BACnetNotificationParameters)
X'CF'	PD Closing Tag 12 (Event Values)

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'10'	Invoke ID=16
X'02'	Service ACK Choice=2 (ConfirmedEventNotification)

At some future time, an AcknowledgeAlarm-Request is generated:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'07'	Invoke ID=7
X'00'	Service Choice=0 (AcknowledgeAlarm-Request)
X'09'	SD Context Tag 0 (Acknowledging Process Identifier, L=1)
X'01'	Acknowledging Process Identifier=1
X'1C'	SD Context Tag 1 (Event Object Identifier, L=4)
X'00000002'	Analog Input, Instance Number=2
X'29'	SD Context Tag 2 (Event State Acknowledged, L=1)
X'03'	3 (HIGH_LIMIT)
X'3E'	PD Opening Tag 3 (Time Stamp)
X'19'	SD Context Tag 1 (Sequence Number, L=1)
X'10'	16
X'3F'	PD Closing Tag 3 (Time Stamp)
X'4C'	SD Context Tag 4 (Acknowledgment Source, L=4)
X'00'	ANSI X3.4 Encoding
X'4D444C'	"MDL"
X'5E'	PD Opening Tag 5 (Time Of Acknowledgment)
X'2E'	PD Opening Tag 2 (Date Time)
X'A4'	Application Tag 10 (Date, L=4)
X'5C0615FF'	June 21, 1992
X'B4'	Application Tag 11 (Time, L=4)
X'0D032909'	13:03:41.9
X'2F'	PD Closing Tag 2 (Date Time)
X'5F'	PD Closing Tag 5 (Time Of Acknowledgment)

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'07'	Invoke ID=7
X'00'	Service ACK Choice=0 (AcknowledgeAlarm)

### F.1.5 Encoding for Example E.1.5 - UnconfirmedEventNotification Service

X'10'	PDU Type=1 (BACnet-Unconfirmed-Request-PDU)
X'03'	Service Choice=3 (UnconfirmedEventNotification-Request)
X'09'	SD Context Tag 0 (Process Identifier, L=1)
X'01'	1
X'1C'	SD Context Tag 1 (Initiating Device Identifier, L=4)

X'02000009'	Device, Instance Number=9
X'2C'	SD Context Tag 2 (Event Object Identifier, L=4)
X'00000002'	Analog Input, Instance Number=2
X'3E'	PD Opening Tag 3 (Time Stamp)
X'19'	SD Context Tag 1 (SequenceNumber, L=1)
X'10'	16
X'3F'	PD Closing Tag 3 (Time Stamp)
X'49'	SD Context Tag 4 (Notification Class, L=1)
X'04'	4
X'59'	SD Context Tag 5 (Priority, L=1)
X'64'	100
X'69'	SD Context Tag 6 (Event Type, L=1)
X'05'	5 (OUT_OF_RANGE)
X'89'	SD Context Tag 8 (Notify Type, L=1)
X'00'	0 (ALARM)
X'99'	SD Context Tag 9 (AckRequired, L=1)
X'01'	1 (TRUE)
X'A9'	SD Context Tag 10 (From State, L=1)
X'00'	0 (NORMAL)
X'B9'	SD Context Tag 11 (To State, L=1)
X'03'	3 (HIGH_LIMIT)
X'CE'	PD Opening Tag 12 (Event Values)
X'5E'	PD Opening Tag 5 (BACnetNotificationParameters, Choice 5=OUT_OF_RANGE)
X'0C'	SD Context Tag 0 (Exceeding Value, L=4)
X'42A03333'	80.1
X'1A'	SD Context Tag 1 (Status Flags, L=2)
X'0480'	1,0,0,0 (TRUE, FALSE, FALSE, FALSE)
X'2C'	SD Context Tag 2 (Deadband, L=4)
X'3F800000'	1.0
X'3C'	SD Context Tag 3 (Exceeded Limit, L=4)
X'42A00000'	80.0
X'5F'	PD Closing Tag 5 (BACnetNotificationParameters)
X'CF'	PD Closing Tag 12 (Event Values)

At some future time, an AcknowledgeAlarm-Request is generated:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'07'	Invoke ID=7
X'00'	Service Choice=0 (AcknowledgeAlarm-Request)
X'09'	SD Context Tag 0 (Acknowledging Process Identifier, L=1)
X'01'	Acknowledging Process Identifier=1
X'1C'	SD Context Tag 1 (Event Object Identifier, L=4)
X'00000002'	Analog Input, Instance Number=2
X'29'	SD Context Tag 2 (Event State Acknowledged, L=1)
X'03'	3 (HIGH_LIMIT)
X'3E'	PD Opening Tag 3 (Time Stamp)
X'19'	SD Context Tag 1 (Sequence Number, L=1)
X'10'	16
X'3F'	PD Closing Tag 3 (Time Stamp)
X'4C'	SD Context Tag 4 (Acknowledgment Source, L=4)
X'00'	ANSI X3.4 Encoding
X'4D444C'	"MDL"
X'5E'	PD Opening Tag 5 (Time Of Acknowledgment)
X'2E'	PD Opening Tag 2 (Date Time)

X'A4'	Application Tag 10 (Date, L=4)
X'5C0615FF'	June 21, 1992
X'B4'	Application Tag 11 (Time, L=4)
X'0D032909'	13:03:41.9
X'2F'	PD Closing Tag 2 (Date Time)
X'5F'	PD Closing Tag 5 (Time Of Acknowledgment)

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'07'	Invoke ID=7
X'00'	Service ACK Choice=0 (AcknowledgeAlarm)

#### F.1.6 Encoding for Example E.1.6 - GetAlarmSummary Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'01'	Invoke ID=1
X'03'	Service Choice=3 (GetAlarmSummary-Request)

Assuming the service procedure executes correctly, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'01'	Invoke ID=1
X'03'	Service ACK Choice=3 (GetAlarmSummary-ACK)
X'C4'	Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'00000002'	Analog Input, Instance Number=2
X'91'	Application Tag 9 (Enumerated, L=1) (Alarm State)
X'03'	3 (HIGH_LIMIT)
X'82'	Application Tag 8 (Bit String, L=2) (Acknowledged Transitions)
X'0560'	0,1,1 (FALSE, TRUE, TRUE)
X'C4'	Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'00000003'	Analog Input, Instance Number=3
X'91'	Application Tag 9 (Enumerated, L=1) (Alarm State)
X'04'	4 (LOW_LIMIT)
X'82'	Application Tag 8 (Bit String, L=2) (Acknowledged Transitions)
X'05E0'	1,1,1 (TRUE, TRUE, TRUE)

#### F.1.7 Encoding for Example E.1.7 - GetEnrollmentSummary Service

Example 1: Request encoding.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'01'	Invoke ID=1
X'04'	Service Choice=4 (GetEnrollmentSummary-Request)
X'09'	SD Context Tag 0 (Acknowledgment Filter, L=1)
X'02'	2 (NOT_ACKED)

Assuming the service procedure executes correctly, a complex acknowledgment is returned containing the requested values:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'01'	Invoke ID=1
X'04'	Service ACK Choice=4 (GetEnrollmentSummary-ACK)
X'C4'	Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'00000002'	Analog Input, Instance Number=2
X'91'	Application Tag 9 (Enumerated, L=1) (Event Type)
X'05'	5 (OUT_OF_RANGE)
X'91'	Application Tag 9 (Enumerated, L=1) (Event State)
X'03'	3 (HIGH_LIMIT)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Priority)
X'64'	100
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Notification Class)
X'04'	4
X'C4'	Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'02400006'	Event Enrollment, Instance Number=6
X'91'	Application Tag 9 (Enumerated, L=1) (Event Type)
X'01'	1 (CHANGE_OF_STATE)
X'91'	Application Tag 9 (Enumerated, L=1) (Event State)
X'00'	0 (NORMAL)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Priority)
X'32'	50
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Notification Class)
X'02'	2

Example 2: Request encoding.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'02'	Invoke ID=2
X'04'	Service Choice=4 (GetEnrollmentSummary-Request)
X'09'	SD Context Tag 0 (Acknowledgment Filter, L=1)
X'00'	0 (ALL)
X'1E'	PD Opening Tag 1 (Enrollment Filter)
X'0E'	PD Opening Tag 0 (Recipient)
X'0C'	SD Context Tag 0 (Device, L=4)
X'02000011'	Device, Instance Number=17
X'0F'	PD Closing Tag 0 (Recipient)
X'19'	SD Context Tag 1 (Process Identifier)
X'09'	9
X'1F'	PD Closing Tag 1 (Enrollment Filter)
X'4E'	PD Opening Tag 4 (Priority Filter)
X'09'	SD Context Tag 0 (MinPriority, L=1)
X'06'	6
X'19'	SD Context Tag 1 (MaxPriority, L=1)
X'0A'	10
X'4F'	PD Closing Tag 4 (Priority Filter)

Assuming the service procedure executes correctly, a complex acknowledgment is returned containing the requested values:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'02'	Invoke ID=2
X'04'	Service ACK Choice=4 (GetEnrollmentSummary-ACK)

X'C4'	Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'00000002'	Analog Input, Instance Number=2
X'91'	Application Tag 9 (Enumerated, L=1) (Event Type)
X'05'	5 (OUT_OF_RANGE)
X'91'	Application Tag 9 (Enumerated, L=1) (Event State)
X'00'	0 (NORMAL)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Priority)
X'08'	8
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Notification Class)
X'04'	4
 X'C4'	 Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'00000003'	Analog Input, Instance Number=3
X'91'	Application Tag 9 (Enumerated, L=1) (Event Type)
X'05'	5 (OUT_OF_RANGE)
X'91'	Application Tag 9 (Enumerated, L=1) (Event State)
X'00'	0 (NORMAL)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Priority)
X'08'	8
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Notification Class)
X'04'	4
 X'C4'	 Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'00000004'	Analog Input, Instance Number=4
X'91'	Application Tag 9 (Enumerated, L=1) (Event Type)
X'05'	5 (OUT_OF_RANGE)
X'91'	Application Tag 9 (Enumerated, L=1) (Event State)
X'00'	0 (NORMAL)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Priority)
X'08'	8
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Notification Class)
X'04'	4
 X'C4'	 Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'02400007'	Event Enrollment, Instance Number=7
X'91'	Application Tag 9 (Enumerated, L=1) (Event Type)
X'04'	4 (FLOATING_LIMIT)
X'91'	Application Tag 9 (Enumerated, L=1) (Event State)
X'00'	0 (NORMAL)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Priority)
X'03'	3
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Notification Class)
X'08'	8

#### F.1.8 Encoding for Example E.1.8 - GetEventInformation Service

X'02'	PDU Type = 0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=1)
X'02'	Maximum APDU Size Accepted = 206 octets
X'01'	Invoke ID = 1
X'1D'	Service Choice = 29 (GetEventInformation)

Assuming the service procedure executes correctly, a complex acknowledgment is returned:

X'30'	PDU Type = 3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'01'	Invoke ID=01

X'1D'	Service ACK Choice = 29, (GetEventInformation-ACK)	
X'0E'	PD opening Tag 0	
X'0C'	SD context Tag 0 (ObjectIdentifier, L=4)	
X'00000002'	Analog Input, Instance Number = 2	
X'19'	SD context Tag 1 (Enumerated, L=1)	
X'03'	3 (HIGH_LIMIT)	
X'2A'	SD context Tag 2 (Bit String, L=2)	
X'0560'	0,1,1 (FALSE, TRUE, TRUE)	
X'3E'	PD opening Tag 3	
X'0C'	SD context Tag 0 (Time L=4)	
X'0F230014'	Time 15:35:00.20	
X'0C'	SD context Tag 0 (Time L=4)	
X'FFFFFFFF'	Time unspecified	
X'0C'	SD context Tag 0 (Time L=4)	
X'FFFFFFFF'	Time unspecified	
X'3F'	PD closing Tag 3	
X'49'	SD context Tag 4 (Enumerated, L=1)	
X'00'	0 (ALARM)	
X'5A'	SD context Tag 5 (Bit String, L=2)	
X'05E0'	1,1,1 (TRUE, TRUE, TRUE)	
X'6E'	PD opening Tag 6	
X'21'	Application Tag 2 (Unsigned Integer, L=1)	
X'0F'	15 (Priority)	
X'21'	Application Tag 2 (Unsigned Integer, L=1)	
X'0F'	15 (Priority)	
X'21'	Application Tag 2 (Unsigned Integer, L=1)	
X'14'	20 (Priority)	
X'6F'	PD closing Tag 6	
X'0C'	SD context Tag 0 (ObjectIdentifier, L=4)	
X'00000003'	Analog Input, Instance Number = 3	
X'19'	SD context Tag 1 (Enumerated, L=1)	
X'00'	0 (NORMAL)	
X'2A'	SD context Tag 2 (Bit String, L=2)	
X'05C0'	1,1,0 (TRUE, TRUE, FALSE)	
X'3E'	PD opening Tag 3	
X'0C'	SD context Tag 0 (Time L=4)	
X'0F280000'	Time 15:40:00.00	
X'0C'	SD context Tag 0 (Time L=4)	
X'FFFFFFFF'	Time unspecified	
X'0C'	SD context Tag 0 (Time L=4)	
X'0F2D1E1E'	15:45:30.30	
X'3F'	PD closing Tag 3	
X'49'	SD context Tag 4 (Enumerated, L=1)	
X'00'	0 (ALARM)	
X'5A'	SD context Tag 5 (Bit String, L=2)	
X'05E0'	1,1,1 (TRUE, TRUE, TRUE)	
X'6E'	PD opening Tag 6	
X'21'	Application Tag 2 (Unsigned Integer, L=1)	
X'0F'	15 (Priority)	
X'21'	Application Tag 2 (Unsigned Integer, L=1)	
X'0F'	15 (Priority)	
X'21'	Application Tag 2 (Unsigned Integer, L=1)	
X'14'	20 (Priority)	
X'6F'	PD closing Tag 6	

X'0F'	PD closing Tag 0
X'19'	SD context Tag 1 (Boolean, L=1)
X'00'	FALSE (More Events)

#### F.1.9 Encoding for Example E.1.9 - LifeSafetyOperation

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'0F'	Invoke ID=15
X'1B'	Service Choice=27 (LifeSafetyOperation-Request)
X'09'	SD Context Tag 0 (Requesting Process Identifier, L=1)
X'12'	18
X'1C'	SD Context Tag 1 (Requesting Source, L=4)
X'00'	ANSI X3.4 Encoding
X'4D444C'	"MDL"
X'29'	SD Context Tag 2 (Request, L=1)
X'04'	4 (RESET)
X'3C'	SD Context Tag 3 (Object Identifier, L=4)
X'05400001'	Life Safety Point, Instance Number = 1

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'0F'	Invoke ID=15
X'1B'	Service ACK Choice=27 (LifeSafetyOperation)

#### F.1.10 Encoding for Example E.1.10 - SubscribeCOV

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'0F'	Invoke ID=15
X'05'	Service Choice=5 (SubscribeCOV-Request)
X'09'	SD Context Tag 0 (Subscriber Process Identifier, L=1)
X'12'	18
X'1C'	SD Context Tag 1 (Monitored Object Identifier, L=4)
X'0000000A'	Analog Input, Instance Number=10
X'29'	SD Context Tag 2 (Issue Confirmed Notifications, L=1)
X'01'	1 (TRUE)
X'39'	SD Context Tag 3 (Lifetime, L=1)
X'00'	0

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'0F'	Invoke ID=15
X'05'	Service ACK Choice=5 (SubscribeCOV)

#### F.1.11 Encoding for Example E.1.11 - SubscribeCOVProperty

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'0F'	Invoke ID=15
X'1C'	Service Choice=28 (SubscribeCOVProperty-Request)

X'09'	SD Context Tag 0 (Subscriber Process Identifier, L=1)
X'12'	18
X'1C'	SD Context Tag 1 (Monitored Object Identifier, L=4)
X'0000000A'	Analog Input, Instance Number=10
X'29'	SD Context Tag 2 (Issue Confirmed Notifications, L=1)
X'01'	1 (TRUE)
X'39'	SD Context Tag 3 (Lifetime, L=1)
X'3C'	60
X'4E'	PD Opening Tag 4 (Monitored Property, L=1)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'4F'	PD Closing Tag 4 (Property Identifier)
X'5C'	SD Context Tag 5 (COV Increment, L=4)
X'3F800000'	1.0

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'0F'	Invoke ID=15
X'1C'	Service ACK Choice=28 (SubscribeCOVProperty)

## F.2 Example Encodings for File Access Services

### F.2.1 Encoding for Example E.2.1 - AtomicReadFile Service

Example 1: Read data from a file.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'00'	Invoke ID=0
X'06'	Service Choice=6 (AtomicReadFile-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (File Identifier)
X'02800001'	File, Instance Number=1
X'0E'	PD Opening Tag 0 (Stream Access)
X'31'	Application Tag 3 (Signed Integer, L=1) (File Start Position)
X'00'	0
X'21'	Application Tag 2 (Unsigned, L=1) (Requested Octet Count)
X'1B'	27
X'0F'	PD Closing Tag 0 (Stream Access)

Assuming this service procedure executes correctly, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'00'	Invoke ID=0
X'06'	Service ACK Choice=6 (AtomicReadFile-ACK)
X'10'	Application Tag 1 (Boolean, 0 (FALSE)) (End Of File)
X'0E'	PD Opening Tag 0 (Stream Access)
X'31'	Application Tag 3 (Signed Integer, L=1) (File Start Position)
X'00'	0
X'65'	Application Tag 6 (Octet String, L>4)
X'1B'	Extended Length=27
X'4368696C6C65723031204F6E2D54696D653D342E3320486F757273'	"Chiller01 On-Time=4.3 Hours"

X'0F PD Closing Tag 0 (Stream Access)

Example 2: Read record from a file.

X'00'	PDU type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'12'	Invoke ID=18
X'06'	Service Request=6 (AtomicReadFile-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (FileIdentifier)
X'02800002'	File, Instance Number=2
X'1E'	PD Opening Tag 1 (Record Access)
X'31'	Application Tag 3 (Signed Integer, L=1) (File Start Record)
X'0E'	14
X'21'	Application Tag 2 (Unsigned, L=1) (Requested Record Count)
X'03'	3
X'1F	PD Closing Tag 1 (Record Access)

Assuming this service procedure executes correctly, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'12'	Invoke ID=18
X'06'	Service ACK Choice=6 (AtomicReadFile-ACK)
X'11'	Application Tag 1 (Boolean, 1 (TRUE)) (End Of File)
X'1E'	PD Opening Tag 1(RecordAccess)
X'31'	Application Tag 3 (Signed Integer, L=1) (File Start Record)
X'0E'	14
X'21'	Application Tag 2 (Unsigned, L=1) (Returned Record Count)
X'02'	2
X'65'	Application Tag 6 (Octet String, L>4) (File Record Data)
X'0A'	Extended Length=10
X'31323A30302C34352E36'	"12:00,45.6"
X'65'	Application Tag 6 (Octet String, L>4) (File Record Data)
X'0A'	Extended Length=10
X'31323A31352C34342E38'	"12:15,44.8"
X'1F	PD Closing Tag 1 (Record Access)

### F.2.2 Encoding for Example E.2.2 - AtomicWriteFile Service

Example 1: Write data to a file.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'55'	Invoke ID=85
X'07'	Service Choice=7 (AtomicWriteFile-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (File Identifier)
X'02800001'	File, Instance Number=1
X'0E'	PD Opening Tag 0 (Stream Access)
X'31'	Application Tag 3 (Signed Integer, L=1) (File Start Position)
X'1E'	30
X'65'	Application Tag 6 (Octet String, L>4) (File Data)
X'1B'	Extended Length=27
X'4368696C6C65723031204F6E2D54696D653D342E3320486F757273'	"Chiller01 On-Time=4.3 Hours"

X'0F PD Closing Tag 0 (Stream Access)

Assuming this service procedure executes correctly, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'55'	Invoke ID=85
X'07'	Service ACK Choice=7 (AtomicWriteFile-ACK)
X'09'	SD Context Tag 0 (File Start Position, L=1)
X'1E'	30

Example 2: Append two records to a file.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'55'	Invoke ID=85
X'07'	Service Choice=7 (AtomicWriteFile-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (File Identifier)
X'02800002'	File, Instance Number=2
X'1E'	PD Opening Tag 1 (Record Access)
X'31'	Application Tag 3 (Signed Integer, L=1) (File Start Record)
X'FF'	-1 (Append to End of File)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Record Count)
X'02'	2
X'65'	Application Tag 6 (Octet String, L>4) (File Record Data)
X'0A'	Extended Length=10
X'31323A30302C34352E36'	"12:00,45.6"
X'65'	Application Tag 6 (Octet String, L>4) (File Record Data)
X'0A'	Extended Length=10
X'31323A31352C34342E38'	"12:15,44.8"
X'1F	PD Closing Tag 1 (Record Access)

Assuming this service procedure executes correctly, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'55'	Invoke ID=85
X'07'	Service ACK Choice=7 (AtomicWriteFile-ACK)
X'19'	SD Context Tag 1 (File Start Record, L=1)
X'0E'	14

### F.3 Example Encodings for Object Access Services

#### F.3.1 Encoding for Example E.3.1 - AddListElement Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'01'	Invoke ID=1
X'08'	Service Choice=8 (AddListElement-Request)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'02C00003'	Group, Instance Number=3
X'19'	SD Context Tag 1 (Property Identifier, L=1)
X'35'	53 (LIST_OF_GROUP_MEMBERS)
X'3E'	PD Opening Tag 3 (List Of Elements)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'0000000F'	Analog Input, Instance Number=15

X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'1F'	PD Closing Tag 1 (List Of Property References)
X'3F'	PD Closing Tag 3 (List Of Elements)

Assuming this service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'01'	Invoke ID=1
X'08'	Service ACK Choice=8 (AddListElement)

### F.3.2 Encoding for Example E.3.2 - RemoveListElement Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'34'	Invoke ID=52
X'09'	Service Choice=9 (RemoveListElement-Request)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'02C00003'	Group, Instance Number=3
X'19'	SD Context Tag 1 (Property Identifier, L=1)
X'35'	53 (LIST_OF_GROUP_MEMBERS)
X'3E'	PD Opening Tag 3 (List Of Elements)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'0000000C'	Analog Input, Instance Number=12
X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'1C'	28 (DESCRIPTION)
X'1F'	PD Closing Tag 1 (List Of Property References)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'0000000D'	Analog Input, Instance Number=13
X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'1C'	28 (DESCRIPTION)
X'1F'	PD Closing Tag 1 (List Of Property References)
X'3F'	PD Closing Tag 3 (List Of Elements)

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'34'	Invoke ID=52
X'09'	Service ACK Choice=9 (RemoveListElement)

This second part of the example re-inserts two of the three elements removed above:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'02'	Maximum APDU Size Accepted=206 octets
X'35'	Invoke ID=53
X'08'	Service Choice=8 (AddListElement-Request)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'02C00003'	Group, Instance Number=3
X'19'	SD Context Tag 1 (Property Identifier, L=1)
X'35'	53 (LIST_OF_GROUP_MEMBERS)
X'3E'	PD Opening Tag 3 (List Of Elements)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'0000000C'	Analog Input, Instance Number=12
X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'1F'	PD Closing Tag 1 (List Of Property References)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'0000000D'	Analog Input, Instance Number=13
X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'1F'	PD Closing Tag 1 (List Of Property References)
X'3F'	PD Closing Tag 3 (List Of Elements)

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'35'	Invoke ID=53
X'08'	Service ACK Choice=8 (AddListElement)

### F.3.3 Encoding for Example E.3.3 - CreateObject Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'56'	Invoke ID=86
X'0A'	Service Choice=10 (CreateObject-Request)
X'0E'	PD Opening Tag 0 (Object Specifier)
X'09'	SD Context Tag 0 (Object Type, L=1)
X'0A'	10 (File Object)
X'0F'	PD Closing Tag 0 (Object Specifier)
X'1E'	PD Opening Tag 1 (List Of Initial Values)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'4D'	77 (OBJECT_NAME)
X'2E'	PD Opening Tag 2 (Value)
X'75'	Application Tag 7 (Character String, L>4)
X'08'	Extended Length=8
X'00'	ANSI X3.4 Encoding
X'5472656E642031'	"Trend 1"
X'2F'	PD Closing Tag 2 (Value)

X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'29'	41 (FILE_ACCESS_METHOD)
X'2E'	PD Opening Tag 2 (Value)
X'91'	Application Tag 9 (Enumerated, L=1)
X'00'	0 (RECORD_ACCESS)
X'2F'	PD Closing Tag 2 (Value)
X'1F'	PD Closing Tag 1 (List Of Initial Values)

Assuming the service procedure executes correctly, an acknowledgment is returned conveying the new object identifier:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'56'	Invoke ID=86
X'0A'	Service ACK Choice=10 (CreateObject-ACK)
X'C4'	Application Tag 12 (Object Identifier, L=4)
X'0280000D'	File, Instance Number=13

#### F.3.4 Encoding for Example E.3.4 - DeleteObject Service

Example 1: A successful attempt to delete an object.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'57'	Invoke ID=87
X'0B'	Service Choice=11 (DeleteObject-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4)
X'02C00006'	Group, Instance Number=6

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'57'	Invoke ID=87
X'0B'	Service ACK Choice=11 (DeleteObject)

Example 2: An unsuccessful attempt to delete an object.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'58'	Invoke ID=88
X'0B'	Service Choice=11 (DeleteObject-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4)
X'02C00007'	Group, Instance Number=7

In this example, the object is assumed to be protected and cannot be deleted by this protocol service. The server issues the following response:

X'50'	PDU Type=5 (BACnet-Error-PDU)
X'58'	Original Invoke ID=88
X'0B'	Error Choice=11 (DeleteObject)
X'91'	Application Tag 9 (Enumerated, L=1) (Error Class)
X'01'	1 (OBJECT)
X'91'	Application Tag 9 (Enumerated, L=1) (Error Code)
X'17'	23 (OBJECT_DELETION_NOT_PERMITTED)

### F.3.5 Encoding for Example E.3.5 - ReadProperty Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'00'	Maximum APDU Size Accepted=50 octets
X'01'	Invoke ID=1
X'0C'	Service Choice=12 (ReadProperty-Request)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000005'	Analog Input, Instance Number=5
X'19'	SD Context Tag 1 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)

This request produces the following result:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'01'	Invoke ID=1
X'0C'	Service ACK Choice=12 (ReadProperty-ACK)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000005'	Analog Input, Instance Number=5
X'19'	SD Context Tag 1 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'3E'	PD Opening Tag 3 (Property Value)
X'44'	Application Tag 4 (Real, L=4)
X'4290999A'	72.3
X'3F'	PD Closing Tag 3 (Property Value)

### F.3.6 Encoding for Example E.3.6 - ReadPropertyConditional Service

Example 1: Getting the object identifiers of all Binary Input objects.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'51'	Invoke ID=81
X'0D'	Service Choice=13 (ReadPropertyConditional Request)
X'0E'	PD Opening Tag 0 (Object Selection Criteria)
X'09'	SD Context Tag 0 (Selection Logic, L=1)
X'00'	0 (AND)
X'1E'	PD Opening Tag 1 (List Of Selection Criteria)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'4F'	79 (OBJECT_TYPE)
X'29'	SD Context Tag 2 (Relation Specifier)
X'00'	0 (EQUAL)
X'3E'	PD Opening Tag 3 (Comparison Value)
X'91'	Application Tag 9 (Enumerated, L=1) (Object Type)
X'03'	3 (BINARY_INPUT)
X'3F'	PD Closing Tag 3 (Comparison Value)
X'1F'	PD Closing Tag 1 (List Of Selection Criteria)
X'0F'	PD Closing Tag 0 (Object Selection Criteria)

This request produces the following result:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'51'	Invoke ID=81
X'0D'	Service Ack Choice=13 (ReadPropertyConditional-ACK)

X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00C00001'	Binary Input, Instance Number=1
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00C00002'	Binary Input, Instance Number=2
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00C00003'	Binary Input, Instance Number=3
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00C00004'	Binary Input, Instance Number=4

Example 2: Conditional read of Analog Inputs.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'52'	Invoke ID=82
X'0D'	Service Choice=13 (ReadPropertyConditional Request)
X'0E'	PD Opening Tag 0 (Object Selection Criteria)
X'09'	SD Context Tag 0 (Selection Logic, L=1)
X'00'	Enumeration 0 (AND)
X'1E'	PD Opening Tag 1 (List Of Selection Criteria)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'4F'	79 (OBJECT_TYPE)
X'29'	SD Context Tag 2 (Relation Specifier)
X'00'	0 (EQUAL)
X'3E'	PD Opening Tag 3 (Comparison Value)
X'91'	Application Tag 9 (Enumerated, L=1) (Object Type)
X'00'	0 (ANALOG_INPUT)
X'3F'	PD Closing Tag 3 (Comparison Value)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'29'	SD Context Tag 2 (Relation Specifier)
X'03'	3 (GREATER_THAN)
X'3E'	PD Opening Tag 3 (Comparison Value)
X'44'	Application Tag 4 (Real, L=4)
X'42C80000'	100.0
X'3F'	PD Closing Tag 3 (Comparison Value)
X'1F'	PD Closing Tag 1 (List Of Selection Criteria)
X'0F'	PD Closing Tag 0 (Object Selection Criteria)

This request produces the following result:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'52'	Invoke ID=82
X'0D'	Service Ack Choice=13 (ReadPropertyConditional-ACK)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000001'	Analog Input, Instance Number=1
X'1E'	PD Opening Tag 1 (List Of Results)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'4E'	PD Opening Tag 4 (Property Value)

	X'44'	Application Tag 4 (Real, L=4)
	X'42CC999A'	102.3
X'1F'	X'4F'	PD Closing Tag 4 (Property Value)
		PD Closing Tag 1 (List Of Results)
X'0C'		SD Context Tag 0 (Object Identifier, L=4)
X'00000002'		Analog Input, Instance Number=2
X'1E'		PD Opening Tag 1 (List Of Results)
	X'29'	SD Context Tag 2 (Property Identifier, L=1)
	X'55'	85 (PRESENT_VALUE)
	X'4E'	PD Opening Tag 4 (Property Value)
	X'44'	Application Tag 4 (Real, L=4)
	X'4334B333'	180.7
X'1F'	X'4F'	PD Closing Tag 4 (Property Value)
		PD Closing Tag 1 (List Of Results)
X'0C'		SD Context Tag 0 (Object Identifier, L=4)
X'00000003'		Analog Input, Instance Number=3
X'1E'		PD Opening Tag 1 (List Of Results)
	X'29'	SD Context Tag 2 (Property Identifier, L=1)
	X'55'	85 (PRESENT_VALUE)
	X'4E'	PD Opening Tag 4 (Property Value)
	X'44'	Application Tag 4 (Real, L=4)
	X'430E199A'	142.1
X'1F'	X'4F'	PD Closing Tag 4 (Property Value)
		PD Closing Tag 1 (List Of Results)

Example 3: Finding unreliable or out-of-service objects.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'53'	Invoke ID=83
X'0D'	Service Choice=13 (ReadPropertyConditional Request)
X'0E'	PD Opening Tag 0 (Object Selection Criteria)
X'09'	SD Context Tag 0 (Selection Logic, L=1)
X'01'	1 (OR)
X'1E'	PD Opening Tag 1 (List Of Selection Criteria)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'29'	SD Context Tag 2 (Relation Specifier)
X'01'	1 (NOT_EQUAL)
X'3E'	PD Opening Tag 3 (Comparison Value)
X'91'	Application Tag 9 (Enumerated, L=1)
X'00'	0 (NO_FAULT_DETECTED)
X'3F'	PD Closing Tag 3 (Comparison Value)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'51'	81 (OUT_OF_SERVICE)
X'29'	SD Context Tag 2 (Relation Specifier)
X'00'	0 (EQUAL)
X'3E'	PD Opening Tag 3 (Comparison Value)
X'11'	Application Tag 1 (Boolean, 1 (TRUE))
X'3F'	PD Closing Tag 3 (Comparison Value)
X'1F'	PD Closing Tag 1 (List Of Selection Criteria)
X'0F'	PD Closing Tag 0 (Object Selection Criteria)

X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'51'	81 (OUT_OF_SERVICE)
X'1F'	PD Closing Tag 1 (List Of Property References)

Assuming the service procedure executes correctly, a complex acknowledgment is returned containing the requested values:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'53'	Invoke ID=83
X'0D'	Service Ack Choice=13 (ReadPropertyConditional-ACK)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00C00001'	Binary Input, Instance Number=1
X'1E'	PD Opening Tag 1 (List Of Results)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'4E'	PD Opening Tag 4 (Property Value)
X'91'	Application Tag 9 (Enumerated, L=1)
X'01'	1 (ACTIVE)
X'4F'	PD Closing Tag 4 (Property Value)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'4E'	PD Opening Tag 4 (Property Value)
X'91'	Application Tag 9 (Enumerated, L=1)
X'00'	0 (NO_FAULT_DETECTED)
X'4F'	PD Closing Tag 4 (Property Value)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'51'	81 (OUT_OF_SERVICE)
X'4E'	PD Opening Tag 4 (Property Value)
X'11'	Application Tag 1 (Boolean, 1 (TRUE))
X'4F'	PD Closing Tag 4 (Property Value)
X'1F'	PD Closing Tag 1 (List Of Results)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000002'	Analog Input, Instance Number=2
X'1E'	PD Opening Tag 1 (List Of Results)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'4E'	PD Opening Tag 4 (Property Value)
X'44'	Application Tag 4 (Real, L=4)
X'437A0000'	250.0
X'4F'	PD Closing Tag 4 (Property Value)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'4E'	PD Opening Tag 4 (Property Value)
X'91'	Application Tag 9 (Enumerated, L=1)
X'07'	7 (UNRELIABLE_OTHER)
X'4F'	PD Closing Tag 4 (Property Value)

X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'51'	81 (OUT_OF_SERVICE)
X'4E'	PD Opening Tag 4 (Property Value)
X'10'	Application Tag 1 (Boolean, 0 (FALSE))
X'4F'	PD Closing Tag 4 (Property Value)
X'1F'	PD Closing Tag 1 (List Of Results)

Example 4: Finding the identifiers of all objects with Object\_Names that match the comparison values "C\* Pressure" and "AC? Supply Temp".

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'54'	Invoke ID=84
X'0D'	Service Choice=13 (ReadPropertyConditional Request)
X'0E'	PD Opening Tag 0 (Object Selection Criteria)
X'09'	SD Context Tag 0 (Selection Logic, L=1)
X'01'	1 (OR)
X'1E'	PD Opening Tag 1 (List Of Selection Criteria)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'4D'	77 (OBJECT_NAME)
X'29'	SD Context Tag 2 (Relation Specifier)
X'00'	0 (EQUAL)
X'3E'	PD Opening Tag 3 (Comparison Value)
X'75'	Application Tag 7 (Character String, L>4)
X'0C'	Extended Length=12
X'00'	ANSI X3.4 Encoding
X'432A205072657373757265' "C* Pressure"	
X'3F'	PD Closing Tag 3 (Comparison Value)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'4D'	77 (OBJECT_NAME)
X'29'	SD Context Tag 2 (Relation Specifier)
X'00'	0 (EQUAL)
X'3E'	PD Opening Tag 3 (Comparison Value)
X'75'	Application Tag 7 (Character String, L>4)
X'10'	Extended Length=16
X'00'	ANSI X3.4 Encoding
X'41433F20537570706C792054656D70' "AC? Supply Temp"	
X'3F'	PD Closing Tag 3 (Comparison Value)
X'1F'	PD Closing Tag 1 (List Of Selection Criteria)
X'0F'	PD Closing Tag 0 (Object Selection Criteria)
X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'4D'	77 (OBJECT_NAME)
X'1F'	PD Closing Tag 1 (List Of Property References)

Assuming this service procedure executes correctly, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'54'	Invoke ID=84

X'0D'	Service Ack Choice=13 (ReadPropertyConditional-ACK)	
X'0C'	X'00000004'	SD Context Tag 0 (Object Identifier, L=4) Analog Input, Instance Number=4
X'1E'	X'29'	PD Opening Tag 1 (List Of Results) SD Context Tag 2 (Property Identifier, L=1) 77 (OBJECT_NAME)
	X'4D'	PD Opening Tag 4 (Property Value) X'75'
	X'4E'	Application Tag 7 (Character String, L>4) X'10' Extended Length=16 X'00' ANSI X3.4 Encoding X'41433120537570706C792054656D70' "AC1 Supply Temp"
X'1F'	X'4F'	PD Closing Tag 4 (Property Value) PD Closing Tag 1 (List Of Results)
X'0C'	X'00000007'	SD Context Tag 0 (Object Identifier, L=4) Analog Input, Instance Number=7
X'1E'	X'29'	PD Opening Tag 1 (List Of Results) SD Context Tag 2 (Property Identifier, L=1) 77 (OBJECT_NAME)
	X'4D'	PD Opening Tag 4 (Property Value) X'75'
	X'4E'	Application Tag 7 (Character String, L>4) X'0E' Extended Length=14 X'00' ANSI X3.4 Encoding X'43575031205072657373757265' "CWP1 Pressure"
X'1F'	X'4F'	PD Closing Tag 4 (Property Value) PD Closing Tag 1 (List Of Results)
X'0C'	X'00000008'	SD Context Tag 0 (Object Identifier, L=4) Analog Input, Instance Number=8
X'1E'	X'29'	PD Opening Tag 1 (List Of Results) SD Context Tag 2 (Property Identifier, L=1)
	X'4D'	77 (OBJECT_NAME)
	X'4E'	PD Opening Tag 4 (Property Value) X'75'
	X'19'	Application Tag 7 (Character String, L>4) Extended Length=25
	X'00'	X'00' ANSI X3.4 Encoding X'4368696C6C65722031204672656F6E205072657373757265' "Chiller 1 Freon Pressure"
X'1F'	X'4F'	PD Closing Tag 4 (Property Value) PD Closing Tag 1 (List Of Results)
X'0C'	X'0000000A'	SD Context Tag 0 (Object Identifier, L=4) Analog Input, Instance Number=10
X'1E'	X'29'	PD Opening Tag 1 (List Of Results) SD Context Tag 2 (Property Identifier, L=1)
	X'4D'	77 (OBJECT_NAME)
	X'4E'	PD Opening Tag 4 (Property Value) X'75'
	X'10'	Application Tag 7 (Character String, L>4) Extended Length=16
	X'00'	X'00' ANSI X3.4 Encoding X'41433220537570706C792054656D70' "AC2 Supply Temp"
X'1F'	X'4F'	PD Closing Tag 4 (Property Value) PD Closing Tag 1 (List Of Results)
X'0C'	X'0000000C'	SD Context Tag 0 (Object Identifier, L=4) Analog Input, Instance Number=12

X'1E'	PD Opening Tag 1 (List Of Results)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'4D'	77 (OBJECT_NAME)
X'4E'	PD Opening Tag 4 (Property Value)
X'75'	Application Tag 7 (Character String, L>4)
X'10'	Extended Length=16
X'00'	ANSI X3.4 Encoding
	X'41433320537570706C792054656D70' "AC3 Supply Temp"
X'4F'	PD Closing Tag 4 (Property Value)
X'1F'	PD Closing Tag 1 (List Of Results)

### F.3.7 Encoding for Example E.3.7 - ReadPropertyMultiple Service

Example 1: Reading multiple properties of a single object.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'F1'	Invoke ID=241
X'0E'	Service Choice=14 (ReadPropertyMultiple-Request)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000010'	Analog Input, Instance Number=16
X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'1F'	PD Closing Tag 1 (List Of Property References)

Assuming this service procedure executes correctly, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'F1'	Invoke ID=241
X'0E'	Service ACK Choice=14 (ReadPropertyMultiple-ACK)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000010'	Analog Input, Instance Number=16
X'1E'	PD Opening Tag 1 (List Of Results)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'4E'	PD Opening Tag 4 (Property Value)
X'44'	Application Tag 4 (Real, L=4)
X'4290999A'	72.3
X'4F'	PD Closing Tag 4 (Property Value)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'67'	103 (RELIABILITY)
X'4E'	PD Opening Tag 4 (Property Value)
X'91'	Application Tag 9 (Enumerated, L=1)
X'00'	0 (NO_FAULT_DETECTED)
X'4F'	PD Closing Tag 4 (Property Value)
X'1F'	PD Closing Tag 1 (List Of Results)

Example 2: Reading properties of several objects.

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'02'	Invoke ID=2
X'0E'	Service Choice=14 (ReadPropertyMultiple-Request)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000021'	Analog Input, Instance Number=33
X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'1F'	PD Closing Tag 1 (List Of Property References)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000032'	Analog Input, Instance Number=50
X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'1F'	PD Closing Tag 1 (List Of Property References)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000023'	Analog Input, Instance Number=35
X'1E'	PD Opening Tag 1 (List Of Property References)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'1F'	PD Closing Tag 1 (List Of Property References)

Assuming this service procedure executes correctly, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'02'	Invoke ID=2
X'0E'	Service ACK Choice=14 (ReadPropertyMultiple-ACK)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000021'	Analog Input, Instance Number=33
X'1E'	PD Opening Tag 1 (List Of Results)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'4E'	PD Opening Tag 4 (Property Value)
X'44'	Application Tag 4 (Real, L=4)
X'42293333'	42.3
X'4F'	PD Closing Tag 4 (Property Value)
X'1F'	PD Closing Tag 1 (List Of Results)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000032'	Analog Input, Instance Number=50
X'1E'	PD Opening Tag 1 (List Of Results)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'5E'	PD Opening Tag 5 (Property Access Error)
X'91'	Application Tag 9 (Enumerated, L=1) (Error Class)
X'01'	1 (OBJECT)
X'91'	Application Tag 9 (Enumerated, L=1) (Error Code)
X'1F'	31 (UNKNOWN_OBJECT)

X'5F'	PD Closing Tag 5 (Property Access Error)
X'1F'	PD Closing Tag 1 (List Of Results)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00000023'	Analog Input, Instance Number=35
X'1E'	PD Opening Tag 1 (List Of Results)
X'29'	SD Context Tag 2 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'4E'	PD Opening Tag 4 (Property Value)
X'44'	Application Tag 4 (Real, L=4)
X'43D9D99A'	435.7
X'4F'	PD Closing Tag 4 (Property Value)
X'1F'	PD Closing Tag 1 (List Of Results)

### F.3.8 Encoding for Example E.3.8 - ReadRange Service

Example 1: Reading records from a Trend Log object.

X'02'	PDU Type = 0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=1)
X'02'	Maximum APDU Size Accepted = 206 octets
X'01'	Invoke ID = 1
X'1A'	Service Choice = (26), (ReadRange-Request)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'05000001'	Trend Log, Instance Number = 1
X'19'	SD Context Tag 1 (Property Identifier, L=1)
X'83'	131 (LOG_BUFFER)
X'5E'	PD Opening Tag 5 (Time Range)
X'A4'	Application Tag 10 (Date, L=4)
X'620317FF'	March 23, 1998 (Day Of Week Unspecified)
X'B4'	Application Tag 11, (Time, L=4)
X'13342200'	19:52:34.0
X'A4'	Application Tag 10 (Date, L=4)
X'620317FF'	March 23, 1998 (Day Of Week Unspecified)
X'B4'	Application Tag 11, (Time, L=4)
X'13392200'	19:57:34.0
X'5F'	PD Closing Tag 5 (Time Range)

Assuming the service procedure executes correctly, a complex acknowledgment is returned containing the requested data:

X'30'	PDU Type = 3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'01'	Invoke ID=1
X'1A'	Service ACK Choice = (26), (ReadRange-ACK)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'05000001'	Trend Log, Instance Number = 1
X'19'	SD Context Tag 1 (Property Identifier, L=1)
X'83'	131 (LOG_BUFFER)
X'3A'	SD Context Tag 3 (Result Flags, L=2)
X'05C0'	1,1,0 (TRUE, TRUE, FALSE)
X'49'	SD Context Tag 4 (Item Count, L=1)
X'02'	2
X'5E'	PD Opening Tag 5 (Item Data)
X'0E'	PD Opening Tag 0 (Timestamp)
X'A4'	Application Tag 10 (Date, L=4)
X'62031701'	Monday, March 23, 1998

X'B4'	Application Tag 11, (Time, L=4)
X'13361B00'	19:54:27.0
X'0F'	PD Closing Tag 0 (Timestamp)
X'1E'	PD Opening Tag 1 (Log Datum)
X'2C'	SD Context Tag 2 (REAL, L=4)
X'41900000'	18.0
X'1F'	PD Closing Tag 1 (Log Datum)
X'2A'	SD Context Tag 2 (Status Flags, L=2)
X'0400'	0,0,0,0 (FALSE, FALSE, FALSE, FALSE)
X'0E'	PD Opening Tag 0 (Timestamp)
X'A4'	Application Tag 10 (Date, L=4)
X'62031701'	Monday, March 23, 1998
X'B4'	Application Tag 11, (Time, L=4)
X'13381B00'	19:56:27.0
X'0F'	PD Closing Tag 0 (Timestamp)
X'1E'	PD Opening Tag 1 (Log Datum)
X'2C'	SD Context Tag 2 (REAL, L=4)
X'4190CCCD'	18.1
X'1F'	PD Closing Tag 1 (Log Datum)
X'2A'	SD Context Tag 2 (Status Flags, L=2)
X'0400'	0,0,0,0 (FALSE, FALSE, FALSE, FALSE)
X'5F'	PD Closing Tag 5 (Item Data)

### F.3.9 Encoding for Example E.3.9 - WriteProperty Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'59'	Invoke ID=89
X'0F'	Service Choice=15 (WriteProperty-Request)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00800001'	Analog Value, Instance Number=1
X'19'	SD Context Tag 1 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'3E'	PD Opening Tag 3 (Property Value)
X'44'	Application Tag 4 (Real, L=4)
X'43340000'	Property Value=180.0
X'3F'	PD Closing Tag 3 (Property Value)

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'59'	Invoke ID=89
X'0F'	Service ACK Choice=15 (WriteProperty)

### F.3.10 Encoding for Example E.3.10 - WritePropertyMultiple Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'01'	Invoke ID=1
X'10'	Service Choice=16 (WritePropertyMultiple-Request)
X'0C'	SD Context Tag 0 (Object Identifier, L=4)
X'00800005'	Analog Value, Instance Number=5
X'1E'	PD Opening Tag 1 (List Of Properties)
X'09'	SD Context Tag 0 (Property Identifier, L=1)

X'55'	85 (PRESENT_VALUE)
X'2E'	PD Opening Tag 2 (Property Value)
X'44'	Application Tag 4 (Real, L=4)
X'42860000'	67.0
X'2F	PD Closing Tag 2 (Property Value)
X'1F	PD Closing Tag 1 (List Of Properties)
 X'0C'	 SD Context Tag 0 (Object Identifier, L=4)
X'00800006'	Analog Value, Instance Number=6
X'1E'	PD Opening Tag 1 (List Of Properties)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'2E'	PD Opening Tag 2 (Property Value)
X'44'	Application Tag 4 (Real, L=4)
X'42860000'	67.0
X'2F	PD Closing Tag 2 (Property Value)
X'1F	PD Closing Tag 1 (List Of Properties)
 X'0C'	 SD Context Tag 0 (Object Identifier, L=4)
X'00800007'	Analog Value, Instance Number=7
X'1E'	PD Opening Tag 1 (List Of Properties)
X'09'	SD Context Tag 0 (Property Identifier, L=1)
X'55'	85 (PRESENT_VALUE)
X'2E'	PD Opening Tag 2 (Property Value)
X'44'	Application Tag 4 (Real, L=4)
X'42900000'	72.0
X'2F	PD Closing Tag 2 (Property Value)
X'1F	PD Closing Tag 1 (List Of Properties)

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'01'	Invoke ID=1
X'10'	Service ACK Choice=16 (WritePropertyMultiple)

#### F.4 Example Encodings for Remote Device Management Services

##### F.4.1 Encoding for Example E.4.1 - DeviceCommunicationControl Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'05'	Invoke ID=5
X'11'	Service Choice=17 (DeviceCommunicationControl-Request)
 X'09'	 SD Context Tag 0 (Time Duration, L=1)
X'05'	5
X'19'	SD Context Tag 1 (Enable-Disable, L=1)
X'01'	1 (DISABLE)
X'2D'	SD Context Tag 2 (Password, L>4)
X'08'	Extended Length=8
X'00'	ANSI X3.4 Encoding
X'23656762646621'	"#egbdf!"

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'05'	Invoke ID=5
X'11'	Service ACK Choice=17 (DeviceCommunicationControl)

#### F.4.2 Encoding for Example E.4.2 - ConfirmedPrivateTransfer Service

X'00'	PDU Type=0 (BACnet Confirmed-Request-PDU) SEG=0, MOR=0, SA=0)
X'04'	Maximum APDU Size Accepted=1024 octets
X'55'	Invoke ID=85
X'12'	Service Choice=18 (ConfirmedPrivateTransfer)
X'09'	SD Context Tag 0 (Vendor ID, L=1)
X'19'	25 (XYZ Controls Company Limited)
X'19'	SD Context Tag 1 (Service Number, L=1)
X'08'	8 (XYZ Proprietary Service #8)
X'2E'	PD Opening Tag 2 (Service Parameters)
X'44'	Application Tag 4 (Real, L=4)
X'4290CCCD'	72.4
X'62'	Application Tag 6 (Octet String, L=2)
X'1649'	X'1649'
X'2F	PD Closing Tag 2 (Service Parameters)

Assuming that the service is successfully executed but no results need to be returned to the requesting BACnet-user, a 'Result(+)'  
primitive will be returned using a BACnet-ComplexACK-PDU:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'55'	Invoke ID=85
X'12'	Service Choice=18 (ConfirmedPrivateTransfer-ACK)
X'09'	SD Context Tag 0 (Vendor ID, L=1)
X'19'	25
X'19'	SD Context Tag 1 (Service Number, L=1)
X'08'	8

#### F.4.3 Encoding for Example E.4.3 - UnconfirmedPrivateTransfer Service

X'10'	PDU Type=1 (BACnet-Unconfirmed-Request-PDU)
X'04'	Service Choice=4 (UnconfirmedPrivateTransfer-Request)
X'09'	SD Context Tag 0 (Vendor ID, L=1)
X'19'	25
X'19'	SD Context Tag 1 (Service Number, L=1)
X'08'	8
X'2E'	PD Opening Tag 2 (Service Parameters)
X'44'	Application Tag 4 (Real, L=4)
X'4290CCCD'	72.4
X'62'	Application Tag 6 (Octet String, L=2)
X'1649'	X'1649'
X'2F	PD Closing Tag 2 (Service Parameters)

#### F.4.4 Encoding for Example E.4.4 - ReinitializeDevice Service

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'01'	Maximum APDU Size Accepted=128 octets

X'02'	Invoke ID=2
X'14'	Service Choice=20 (ReinitializeDevice-Request)
X'09'	SD Context Tag 0 (Reinitialized State Of Device, L=1)
X'01'	1 (WARMSTART)
X'1D'	SD Context Tag 1 (Password, L>4)
X'09'	Extended Length=9
X'00'	ANSI X3.4 Encoding
X'4162436445664768'	"AbCdEfGh"

Assuming this service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'02'	Invoke ID=2
X'14'	Service ACK Choice=20 (ReinitializeDevice)

#### F.4.5 Encoding for Example E.4.5 - ConfirmedTextMessageService

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'01'	Maximum APDU Size Accepted=128 octets
X'03'	Invoke ID=3
X'13'	Service Choice=19 (ConfirmedTextMessage-Request)
X'0C'	SD Context Tag 0 (Text Message Source Device, L=4)
X'02000005'	Device, Instance Number=5
X'29'	SD Context Tag 2 (Message Priority, L=1)
X'00'	0 (NORMAL)
X'3D'	SD Context Tag 3 (Message, L>4)
X'18'	Extended Length=24
X'00'	ANSI X3.4 Encoding
X'504D20726571756972656420666F722050554D50333437' "PM required for PUMP347"	

Assuming the service procedure executes correctly, a simple acknowledgment is returned:

X'20'	PDU Type=2 (BACnetSimpleACK-PDU)
X'03'	Invoke ID=3
X'13'	Service ACK Choice=19 (ConfirmedTextMessage)

#### F.4.6 Encoding for Example E.4.6 - UnconfirmedTextMessage Service

X'10'	PDU Type=1 (BACnet-Unconfirmed-Request-PDU)
X'05'	Service Choice=5 (UnconfirmedTextMessage-Request)
X'0C'	SD Context Tag 0 (Text Message Source Device, L=4)
X'02000005'	Device, Instance Number=5
X'29'	SD Context Tag 2 (Message Priority, L=1)
X'00'	0 (NORMAL)
X'3D'	SD Context Tag 3 (Message, L>4)
X'18'	Extended Length=24
X'00'	ANSI X3.4 Encoding
X'504D20726571756972656420666F722050554D50333437' "PM required for PUMP347"	

Note that no response is required for this message since it is of type unconfirmed.

**F.4.7 Encoding for Example E.4.7 - TimeSynchronization Service**

X'10'	PDU Type=1 (BACnet-Unconfirmed-Service-Request-PDU)
X'06'	Service Choice=6 (TimeSynchronization-Request)
X'A4'	Application Tag 10 (Date, L=4)
X'5C0B11FF'	November 17, 1992 (Day of Week Unspecified)
X'B4'	Application Tag 11 (Time, L=4)
X'162D1E46'	22:45:30.70

**F.4.8 Encoding for Example E.4.8 - Who-Has and I-Have Services**

Example 1: Locating the device that contains an object for which the Object\_Name is known.

X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'07'	Service Choice=7 (Who-Has-Request)
X'3D'	SD Context Tag 3 (Object Name, L>4)
X'07'	Extended Length=7
X'00'	ANSI X3.4 Encoding
X'4F4154656D70'	"OATemp"

Assuming that exactly one other device has such an object, the following I-Have service indication would be received.

X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'01'	Service Choice=1 (I-Have-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (Device Identifier)
X'02000008'	Device, Instance Number=8
X'C4'	Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'00000003'	Analog Input, Instance Number=3
X'75'	Application Tag 7 (Character String, L>4) (Object Name)
X'07'	Extended Length=7
X'00'	ANSI X3.4 Encoding
X'4F4154656D70'	"OATemp"

Example 2: Locating the device that contains an object for which the Object\_Identifier is known.

X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'07'	Service Choice=7 (Who-Has-Request)
X'2C'	SD Context Tag 2 (Object Identifier, L=4)
X'00000003'	Analog Input, Instance Number=3

Assuming that exactly one other device has such an object, the following I-Have service indication would be received.

X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'01'	Service Choice=1 (I-Have-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (Device Identifier)
X'02000008'	Device, Instance Number=8
X'C4'	Application Tag 12 (Object Identifier, L=4) (Object Identifier)
X'00000003'	Analog Input, Instance Number=3
X'75'	Application Tag 7 (Character String, L>4) (Object Name)
X'07'	Extended Length=7
X'00'	ANSI X3.4 Encoding

X'4F4154656D70' "OATemp"

#### F.4.9 Encoding for Example E.4.9 - Who-Is and I-Am Services

Example 1: Establishing the network address of a device with a known Device object identifier, i.e., instance number.

X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'08'	Service Choice=8 (Who-Is-Request)
X'09'	SD Context Tag 0 (Device Instance Range Low Limit, L=1)
X'03'	3
X'19'	SD Context Tag 1 (Device Instance Range High Limit, L=1)
X'03'	3

Assuming that there is such a device on the network, it responds some time later using the I-Am service:

X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'00'	Service Choice=0 (I-Am-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (I-Am Device Identifier)
X'02000003'	Device, Instance Number=3
X'22'	Application Tag 2 (Unsigned Integer, L=2) (Max APDU Length Accepted)
X'0400'	1024
X'91'	Application Tag 9 (Enumerated, L=1) (Segmentation Supported)
X'03'	3 (NO_SEGMENTATION)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Vendor ID)
X'63'	99

Example 2: Finding out about all network devices.

X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'08'	Service Choice=8 (Who-Is-Request)

Each device on the network responds using the I-Am service:

X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'00'	Service Choice=0 (I-Am-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (I-Am Device Identifier)
X'02000001'	Device, Instance Number=1
X'22'	Application Tag 2 (Unsigned Integer, L=2) (Max APDU Length Accepted)
X'01E0'	480
X'91'	Application Tag 9 (Enumerated, L=1) (Segmentation Supported)
X'01'	1 (SEGMENTED_TRANSMIT)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Vendor ID)
X'63'	99

X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'00'	Service Choice=0 (I-Am-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (I-Am Device Identifier)
X'02000002'	Device, Instance Number=2
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Max APDU Length Accepted)

X'CE'	206
X'91'	Application Tag 9 (Enumerated, L=1) (Segmentation Supported)
X'02'	2 (SEGMENTED_RECEIVE)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Vendor ID)
X'21'	33
X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'00'	Service Choice=0 (I-Am-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (I-Am Device Identifier)
X'02000003'	Device, Instance Number=3
X'22'	Application Tag 2 (Unsigned Integer, L=2) (Max APDU Length Accepted)
X'0400'	1024
X'91'	Application Tag 9 (Enumerated, L=1) (Segmentation Supported)
X'03'	3 (NO_SEGMENTATION)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Vendor ID)
X'63'	99
X'10'	PDU Type=1 (Unconfirmed-Service-Request-PDU)
X'00'	Service Choice=0 (I-Am-Request)
X'C4'	Application Tag 12 (Object Identifier, L=4) (I-Am Device Identifier)
X'02000004'	Device, Instance Number=4
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Max APDU Length Accepted)
X'80'	128
X'91'	Application Tag 9 (Enumerated, L=1) (Segmentation Supported)
X'00'	0 (SEGMENTED_BOTH)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Vendor ID)
X'42'	66

### F.5 Encoding for Example E.5 - Virtual Terminal Services

Establishing a VT session:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'01'	Maximum APDU Size Accepted=128 octets
X'50'	Invoke ID=80
X'15'	Service Choice=21 (VT-Open-Request)
X'91'	Application Tag 9 (Enumerated, L=1) (VT Class)
X'01'	1 (ANSI_X3.64)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Local VT Session Identifier)
X'05'	5

Assuming that the target device can create a new VT-session, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'50'	Invoke ID=80
X'15'	Service Choice=21 (VT-Open-ACK)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Remote VT Session Identifier)
X'1D'	29

Terminal sign-on. The target device sends a prompt:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'01'	Maximum APDU Size Accepted=128 octets
X'51'	Invoke ID=81
X'17'	Service Choice=23 (VT-Data-Request)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (VT Session Identifier)
X'05'	5
X'65'	Application Tag 6 (Octet String, L>4) (VT New Data)
X'12'	Extended Length=18
X'0D0A456E7465722055736572204E616D653A'	"{cr}{lf}Enter User Name:"
X'21'	Application Tag 2 (Unsigned Integer, L=1) (VT Data Flag)
X'00'	0

Assuming that the operator interface device receives the data correctly, a complex acknowledgment is returned:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'51'	Invoke ID=81
X'17'	Service Choice=23 (VT-Data-ACK)
X'09'	SD Context Tag 0 (All New Data Accepted, L=1)
X'01'	1 (TRUE)

Entering user name:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'01'	Maximum APDU Size Accepted=128 octets
X'52'	Invoke ID=82
X'17'	Service Choice=23 (VT-Data-Request)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (VT Session Identifier)
X'1D'	29
X'65'	Application Tag 6 (Octet String, L>4) (VT New Data)
X'05'	Extended Length=5
X'465245440D'	"FRED{cr}"
X'21'	Application Tag 2 (Unsigned Integer, L=1) (VT Data Flag)
X'00'	0

To which the target device would respond:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'52'	Invoke ID=82
X'17'	Service Choice=23 (VT-Data-ACK)
X'09'	SD Context Tag 0 (All New Data Accepted, L=1)
X'01'	1 (TRUE)

Entering password:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'01'	Maximum APDU Size Accepted=128 octets
X'53'	Invoke ID=83
X'17'	Service Choice=23 (VT-Data-Request)
X'21'	Application Tag 2 (Unsigned Integer, L=1) (VT Session Identifier)
X'05'	5

X'65'	Application Tag 6 (Octet String, L>4) (VT New Data)
X'15'	Extended Length=21
X'465245440D0A456E7465722050617373776F72643A'	"FRED{cr}{lf}Enter Password:"
X'21'	Application Tag 2 (Unsigned Integer, L=1) (VT Data Flag)
X'01'	1

To which the target device would respond:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'53'	Invoke ID=83
X'17'	Service Choice=23 (VT-Data-ACK)
X'09'	SD Context Tag 0 (All New Data Accepted, L=1)
X'01'	1 (TRUE)

Terminal sign-off:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'01'	Maximum APDU Size Accepted=128 octets
X'54'	Invoke ID=84
X'16'	Service Choice=22 (VT-Close-Request)

X'21'	Application Tag 2 (Unsigned Integer, L=1) (List Of Remote VT Session Identifiers)
X'1D'	29

Response:

X'20'	PDU Type=2 (BACnet-SimpleACK-PDU)
X'54'	Invoke ID=84
X'16'	Service ACK Choice=22 (VT-Close)

## F.6 Encoding for Example E.6 - Security Services

Device A sends a Request Key service request to the key server:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'05'	Maximum APDU Size Accepted=1470 octets
X'0F'	Invoke ID=15
X'19'	Service Choice=25 (RequestKey-Request)

--- Note that all octets from here to the end of the APDU are to be enciphered ---

X'C4'	Application Tag 12 (Object Identifier, L=4) (Requesting Device Identifier)
X'02000001'	Device, Instance Number=1
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Network Number)
X'02'	2
X'61'	Application Tag 6 (Octet String, L=1) (MAC Address)
X'11'	17
X'C4'	Application Tag 12 (Object Identifier, L=4) (Remote Device Identifier)
X'02000002'	Device, Instance Number=2
X'21'	Application Tag 2 (Unsigned Integer, L=1) (Network Number)
X'02'	2
X'61'	Application Tag 6 (Octet String, L=1) (MAC Address)
X'22'	34

The key server then seeks to authenticate the Request Key request:

X'00'	PDU Type=0 (BACnet-Confirmed-Request-PDU, SEG=0, MOR=0, SA=0)
X'05'	Maximum APDU Size Accepted=1470 octets
X'01'	Invoke ID=1
X'18'	Service Choice=24 (Authenticate-Request)

--- Note that all octets from here to the end of the APDU are to be enciphered ---

X'0C'	<i>SD Context Tag 0 (Pseudo Random Number, L=4)</i>
X'12345678'	305,419,896
X'19'	<i>SD Context Tag 1 (Expected Invoke ID, L=1)</i>
X'0F'	15

The originator of the Request Key service request responds to the authenticate request with a complex acknowledgment:

X'30'	PDU Type=3 (BACnet-ComplexACK-PDU, SEG=0, MOR=0)
X'01'	Invoke ID=01
X'18'	Service Choice=24 (Authenticate-ACK)

--- Note that all octets from here to the end of the APDU are to be enciphered ---

X'24'	<i>Application Tag 2 (Unsigned Integer, L=4) (Modified Random Number)</i>
X'93B5D7F1'	2,478,168,049

## ANNEX G - CALCULATION OF CRC (INFORMATIVE)


(This annex is not part of this standard but is included for informative purposes only.)

Historically, CRC generators have been implemented as shift registers with exclusive OR feedback. This provides an inexpensive way to process CRC information on a serial bit stream in hardware. Since commercial UARTs do not provide hardware calculation of CRC, UART-based protocols such as those described in Clauses 9 and 10 must perform this calculation with software. While this can be done one bit at a time, simulating a shift register with feedback, a much more efficient algorithm is possible that computes the CRC on an entire octet at once. This annex shows how the CRC may be computed in this manner. This algorithm is presented as an example and is not intended to restrict the vendor's implementation of the CRC calculation.

### G.1 Calculation of the Header CRC

We begin with the diagram of a hardware CRC generator as shown in Figure G-1. The polynomial used is

$$X^8 + X^7 + 1$$

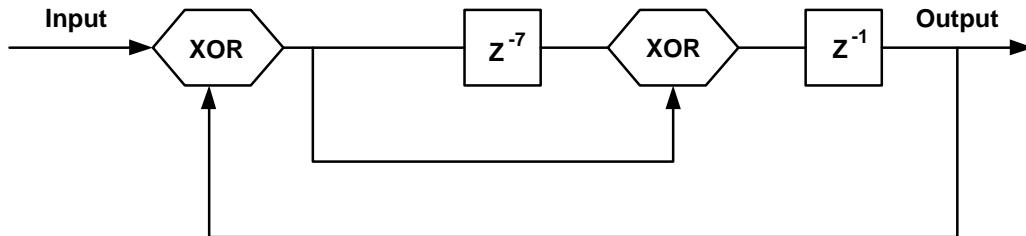

**Figure G-1.** Hardware header-CRC generator.

The hardware implementation operates on a serial bit stream, whereas our calculation must operate on entire octets. To this end, we follow the operation of the circuit through eight bits of data. The CRC shift register is initialized to X0 (input end) to X7 (output end), the input data is D0 to D7 (least significant bit first, as transmitted and received by a UART). Within each block below, the terms are exclusive OR'ed vertically.

	input register contents							
D0	----- X0 X1 X2 X3 X4 X5 X6 X7 -----							
D1	X0 X1 X2 X3 X4 X5 X6 D0 D0 X7 X7 -----							
D2	X0 X1 X2 X3 X4 X5 D1 D0 D1 X6 X7 X6 D0 D0 X7 X7 -----							
D3	X0 X1 X2 X3 X4 D2 D1 D0 D2 X5 X6 X7 X5 D1 D0 D1 X6 X7 X6 D0 D0 X7 X7 -----							

D4		x0	x1	x2	x3			
	D3	D2	D1	D0		D3		
	X4	X5	X6	X7		X4		
	D2	D1	D0			D2		
	X5	X6	X7			X5		
	D1	D0				D1		
	X6	X7				X6		
	D0					D0		
	X7					X7		
D5		x0	x1	x2				
	D4	D3	D2	D1	D0	D4		
	X3	X4	X5	X6	X7	X3		
	D3	D2	D1	D0		D3		
	X4	X5	X6	X7		X4		
	D2	D1	D0			D2		
	X5	X6	X7			X5		
	D1	D0				D1		
	X6	X7				X6		
	D0					D0		
	X7					X7		
D6		x0	x1					
	D5	D4	D3	D2	D1	D0	D5	
	X2	X3	X4	X5	X6	X7	X2	
	D4	D3	D2	D1	D0		D4	
	X3	X4	X5	X6	X7		X3	
	D3	D2	D1	D0			D3	
	X4	X5	X6	X7			X4	
	D2	D1	D0				D2	
	X5	X6	X7				X5	
	D1	D0					D1	
	X6	X7					X6	
	D0						D0	
	X7						X7	
D7		x0						
	D6	D5	D4	D3	D2	D1	D0	D6
	X1	X2	X3	X4	X5	X6	X7	X1
	D5	D4	D3	D2	D1	D0		D5
	X2	X3	X4	X5	X6	X7		X2
	D4	D3	D2	D1	D0			D4
	X3	X4	X5	X6	X7			X3
	D3	D2	D1	D0				D3
	X4	X5	X6	X7				X4
	D2	D1	D0					D2
	X5	X6	X7					X5
	D1	D0						D1
	X6	X7						X6
	D0							D0
	X7							X7

								D0
								X7
D7	D6	D5	D4	D3	D2	D1	D7	
X0	X1	X2	X3	X4	X5	X6	X0	
D6	D5	D4	D3	D2	D1	D0	D6	
X1	X2	X3	X4	X5	X6	X7	X1	
D5	D4	D3	D2	D1	D0		D5	
X2	X3	X4	X5	X6	X7		X2	
D4	D3	D2	D1	D0			D4	
X3	X4	X5	X6	X7			X3	
D3	D2	D1	D0				D3	
X4	X5	X6	X7				X4	
D2	D1	D0					D2	
X5	X6	X7					X5	
D1	D0						D1	
X6	X7						X6	
D0							D0	
X7							X7	

The final block above is the net result of shifting an octet of data through the CRC generator. By performing the indicated exclusive OR operations, an octet can be processed into the CRC. In order to simplify the required shifting operations, we define X0 to be the most significant bit of the parallel representation and X7 to be the least significant. Since most microprocessors number bits in the opposite order, we rename the bits to correspond to standard microprocessor bit nomenclature. Let C7 = X0, C6 = X1, etc. The final block in the previous table thus becomes:

X0	X1	X2	X3	X4	X5	X6	X7	
C7	C6	C5	C4	C3	C2	C1	C0	
								D0
								C0
D7	D6	D5	D4	D3	D2	D1	D7	
C7	C6	C5	C4	C3	C2	C1	C7	
D6	D5	D4	D3	D2	D1	D0	D6	
C6	C5	C4	C3	C2	C1	C0	C6	
D5	D4	D3	D2	D1	D0		D5	
C5	C4	C3	C2	C1	C0		C5	
D4	D3	D2	D1	D0			D4	
C4	C3	C2	C1	C0			C4	
D3	D2	D1	D0				D3	
C3	C2	C1	C0				C3	
D2	D1	D0					D2	
C2	C1	C0					C2	
D1	D0						D1	
C1	C0						C1	
D0							D0	
C0							C0	

or, rearranging vertically (since exclusive OR is commutative) to minimize computation, and recognizing that any term exclusive OR'ed with itself may be eliminated:

D7	D6	D5	D4	D3	D2	D1
C7	C6	C5	C4	C3	C2	C1
D6	D5	D4	D3	D2	D1	D0 D7
C6	C5	C4	C3	C2	C1	C0 C7
D5	D4	D3	D2	D1	D0	D6
C5	C4	C3	C2	C1	C0	C6
D4	D3	D2	D1	D0		D5
C4	C3	C2	C1	C0		C5
D3	D2	D1	D0			D4
C3	C2	C1	C0			C4
D2	D1	D0				D3
C2	C1	C0				C3
D1	D0					D2
C1	C0					C2
D0						D1
C0						C1

In operation, the CRC register C7-C0 is initialized to all ones. During transmission, the Frame Type, Destination Address, Source Address, and Length are passed through the calculation before transmission. The ones complement of the final CRC register value is then transmitted. At the receiving end, the Frame Type, Destination Address, Source Address, Length octets, and the received CRC octet are passed through the calculation. If all octets are received correctly, then the final value of the receiver's CRC register will be the constant X'55'.

As an example of usage, consider a token frame from node X'05' to node X'10'. The frame appears as:

Description	Value	CRC Register After Octet is Processed
preamble 1, not included in CRC	X'55'	
preamble 2, not included in CRC	X'FF'	X'FF' (initial value)
frame type = TOKEN	X'00'	X'55'
destination address	X'10'	X'C2'
source address	X'05'	X'BC'
data length MSB = 0	X'00'	X'95'
data length LSB = 0	X'00'	X'73' ones complement is X'8C'
Header CRC	X'8C'	X'55' final result at receiver

Thus, the transmitter would calculate the CRC on the five octets X'00', X'10', X'05', X'00', and X'00' to be X'73'. The ones complement of this is X'8C', which is appended to the frame.

The receiver would calculate the CRC on the six octets X'00', X'10', X'05', X'00', and X'8C' to be X'55', which is the expected result for a correctly received frame.

### G.1.1 Sample Implementation of the Header CRC Algorithm in C

As an example, a C language implementation of the header CRC algorithm is presented. Inputs are the octet to be processed and the accumulating CRC value. The function return value is the updated CRC value.

In order to minimize shifting, we make use of the bits shifted left out of the least significant octet. In particular, bit 8 will be exclusive OR'ed with the least significant octet.

Desired result:

C7	C6	C5	C4	C3	C2	C1	C0
C6	C5	C4	C3	C2	C1	C0	C7
C5	C4	C3	C2	C1	C0		C6
C4	C3	C2	C1	C0			C5
C3	C2	C1	C0				C4
C2	C1	C0					C3
C1	C0						C2
C0							C1

Shifted 16 bit word:

	C7	C6	C5	C4	C3	C2	C1	v
	C7	C6	C5	C4	C3	C2	C1	v<<1
	C7	C6	C5	C4	C3	C2	C1	v<<2
	C7	C6	C5	C4	C3	C2	C1	v<<3
	C7	C6	C5	C4	C3	C2	C1	v<<4
	C7	C6	C5	C4	C3	C2	C1	v<<5
	C7	C6	C5	C4	C3	C2	C1	v<<6
	C7	C6	C5	C4	C3	C2	C1	v<<7
C7	C6	C5	C4	C3	C2	C1	C0	

```

/* Accumulate "dataValue" into the CRC in crcValue.
/ Return value is updated CRC
/
/ Assumes that "unsigned char" is equivalent to one octet.
/ Assumes that "unsigned int" is 16 bits.
/ The ^ operator means exclusive OR.
*/
unsigned char CalcHeaderCRC(unsigned char dataValue, unsigned char crcValue)
{
    unsigned int crc;

    crc = crcValue ^ dataValue;           /* XOR C7..C0 with D7..D0 */

    /* Exclusive OR the terms in the table (top down) */
    crc = crc ^ (crc << 1) ^ (crc << 2) ^ (crc << 3)
        ^ (crc << 4) ^ (crc << 5) ^ (crc << 6) ^ (crc << 7);

    /* Combine bits shifted out left hand end */
    return (crc & 0xfe) ^ ((crc >> 8) & 1);
}

```

### G.1.2 Sample Implementation of the Header CRC Algorithm in Assembly Language

As an example, an assembly language implementation of the Header CRC algorithm for the 68HC11 (an eight bit processor with a simple instruction set) is presented. The routine accumulates the CRC into the variable CRCLO. T1 is a temporary storage variable. Most instructions act on either accumulator A or B.

```

HEADERCRC:          ;ACCUMULATE THE OCTET (0,X) INTO THE DATA CRC
    LDAB  0,X          ;FETCH DATA OCTET (INDEXED OPERATION)
    EORB  CRCLO        ;D7-D0 EXCLUSIVE OR C7-C0
    STAB  CRCLO        ;SAVE RESULT
    CLRA              ;CLEAR REGISTER A
    ASLD              ;SHIFT (A,B) LEFT AS A 16 BIT VALUE
    ; A=(- - - - - 7) B=(6 5 4 3 2 1 0 -)
    EORB  CRCLO
    ASLD              ;A=(- - - - - 7 6) B=(5 4 3 2 1 0 - -)

```

```

;      (- - - - - 7) B=(6 5 4 3 2 1 0 -)
EORB  CRCLO
ASLD
; A=(- - - - - 7 6 5) B=(4 3 2 1 0 - - -)
;      (- - - - - 7 6) B=(5 4 3 2 1 0 - - -)
;      (- - - - - - 7) B=(6 5 4 3 2 1 0 -)
EORB  CRCLO

ASLD
; A=(- - - - 7 6 5 4) B=(3 2 1 0 - - - -)
;      (- - - - - 7 6 5) B=(4 3 2 1 0 - - - -)
;      (- - - - - 7 6) B=(5 4 3 2 1 0 - - -)
;      (- - - - - - 7) B=(6 5 4 3 2 1 0 -)
EORB  CRCLO
ASLD
; A=(- - - 7 6 5 4 3) B=(2 1 0 - - - - -)
;      (- - - - 7 6 5 4) B=(3 2 1 0 - - - -)
;      (- - - - - 7 6 5) B=(4 3 2 1 0 - - - -)
;      (- - - - - 7 6) B=(5 4 3 2 1 0 - - -)
;      (- - - - - - 7) B=(6 5 4 3 2 1 0 -)
EORB  CRCLO
ASLD
; A=(- - 7 6 5 4 3 2) B=(1 0 - - - - - -)
;      (- - - 7 6 5 4 3) B=(2 1 0 - - - - -)
;      (- - - - 7 6 5 4) B=(3 2 1 0 - - - - -)
;      (- - - - - 7 6 5) B=(4 3 2 1 0 - - - -)
;      (- - - - - 7 6) B=(5 4 3 2 1 0 - - -)
;      (- - - - - - 7) B=(6 5 4 3 2 1 0 -)
EORB  CRCLO

ASLD
; A=(- 7 6 5 4 3 2 1) B=(0 - - - - - - -)
;      (- - 7 6 5 4 3 2) B=(1 0 - - - - - -)
;      (- - - 7 6 5 4 3) B=(2 1 0 - - - - - -)
;      (- - - - 7 6 5 4) B=(3 2 1 0 - - - - -)
;      (- - - - - 7 6 5) B=(4 3 2 1 0 - - - -)
;      (- - - - - 7 6) B=(5 4 3 2 1 0 - - -)
;      (- - - - - - 7) B=(6 5 4 3 2 1 0 -)
EORB  CRCLO
ANDB #0FEH           ;CLEAR LSB OF BOTTOM HALF
ANDA #01H            ;CLEAR ALL BUT LSB OF HIGH HALF
STAA T1
; A=(- - - - - - 1) B=(0 - - - - - - -)
;      (- - - - - - 2) B=(1 0 - - - - - -)
;      (- - - - - - 3) B=(2 1 0 - - - - - -)
;      (- - - - - - 4) B=(3 2 1 0 - - - - -)
;      (- - - - - - 5) B=(4 3 2 1 0 - - - -)
;      (- - - - - - 6) B=(5 4 3 2 1 0 - - -)
;      (- - - - - - 7) B=(6 5 4 3 2 1 0 -)
;      (- - - - - - -) B=(7 6 5 4 3 2 1 -)
EORB T1              ;COMBINE LSB OF HIGH HALF
STAB  CRCLO
RTS


```

### G.1.3 Other Implementations of the Header CRC Algorithm

Other implementations of the Header CRC algorithm are possible. It may be seen that the new CRC value is a function of the prior CRC value exclusive OR'ed with the data value. Thus, a lookup table with 256 elements may be used to quickly determine the new CRC value, using the prior CRC exclusive OR'ed with the data value as an index. The contents of the table may be computed using the implementations shown in G.1.1 or G.1.2.

## G.2 Calculation of the Data CRC

We begin with the diagram of a hardware CRC generator as shown in Figure G-2. The polynomial used is the CRC-CCITT:

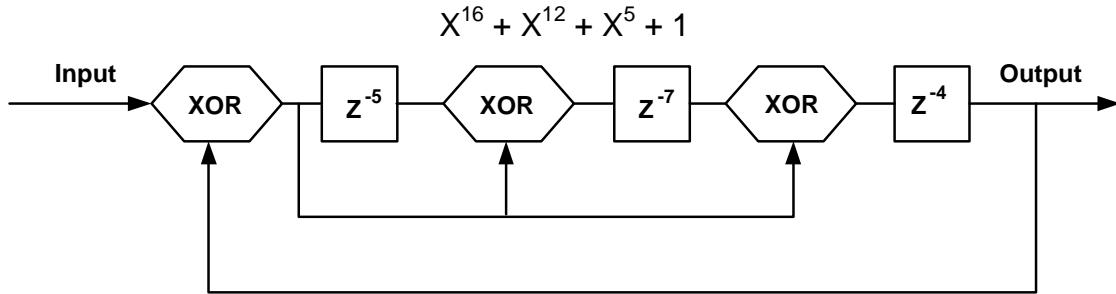

**Figure G-2.** Hardware data-CRC generator.


The hardware implementation operates on a serial bit stream, whereas our calculation must operate on entire octets. To this end, we follow the operation of the circuit through eight bits of data. The CRC shift register is initialized to X0 (input end) to X15 (output end), the input data is D0 to D7 (least significant bit first, as transmitted and received by a UART). Within each block below, the terms are exclusive OR'ed vertically.

D6	X0	X1	X2	X3	X4	X5	X6	X7	X8	X9
	D3 D2 D1 D0		D3 D2 D1 D0					D3 D2		
	X12 X13 X14 X15		X12 X13 X14 X15					X12 X13		
	D5 D4		D5 D4				D5 D4			
	X10 X11		X10 X11				X10 X11			
	D1 D0		D1 D0				D1 D0			
	X14 X15		X14 X15				X14 X15			
D7	X0	X1	X2	X3	X4	X5	X6	X7	X8	
	D3 D2 D1 D0		D3 D2 D1 D0					D3		
	X12 X13 X14 X15		X12 X13 X14 X15					X12		
	D6 D5 D4		D6 D5 D4				D6 D5 D4			
	X9 X10 X11		X9 X10 X11				X9 X10 X11			
	D2 D1 D0		D2 D1 D0				D2 D1 D0			
	X13 X14 X15		X13 X14 X15				X13 X14 X15			
	X0	X1	X2	X3	X4	X5	X6	X7		
	D3 D2 D1 D0		D3 D2 D1 D0							
	X12 X13 X14 X15		X12 X13 X14 X15							
	D7 D6 D5 D4		D7 D6 D5 D4				D7 D6 D5 D4			
	X8 X9 X10 X11		X8 X9 X10 X11				X8 X9 X10 X11			
	D3 D2 D1 D0		D3 D2 D1 D0				D3 D2 D1 D0			
	X12 X13 X14 X15		X12 X13 X14 X15				X12 X13 X14 X15			


The final block above is the net result of shifting an octet of data through the CRC generator. By performing the indicated exclusive OR operations, an octet can be processed into the CRC. In order to simplify the required shifting operations, we define X0 to be the most significant bit of the parallel representation and X15 to be the least significant. Since most microprocessors number bits in the opposite order, we rename the bits to correspond to standard microprocessor bit nomenclature. Let C15 = X0, C14 = X1, etc. The final block in the previous table thus becomes:

X0	X1	X2	X3	X4	X5	X6	X7	X8	X9	X10	X11	X12	X13	X14	X15
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----															
C15	C14	C13	C12	C11	C10	C9	C8	C7	C6	C5	C4	C3	C2	C1	C0
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+-----															
	C15	C14	C13	C12	C11	C10	C9	C8							
	D3 D2 D1 D0		D3 D2 D1 D0												
	C3 C2 C1 C0		C3 C2 C1 C0												
	D7 D6 D5 D4		D7 D6 D5 D4				D7 D6 D5 D4								
	C7 C6 C5 C4		C7 C6 C5 C4				C7 C6 C5 C4								
	D3 D2 D1 D0		D3 D2 D1 D0				D3 D2 D1 D0								
	C3 C2 C1 C0		C3 C2 C1 C0				C3 C2 C1 C0								

or, rearranging vertically (since exclusive OR is commutative) to minimize computation:

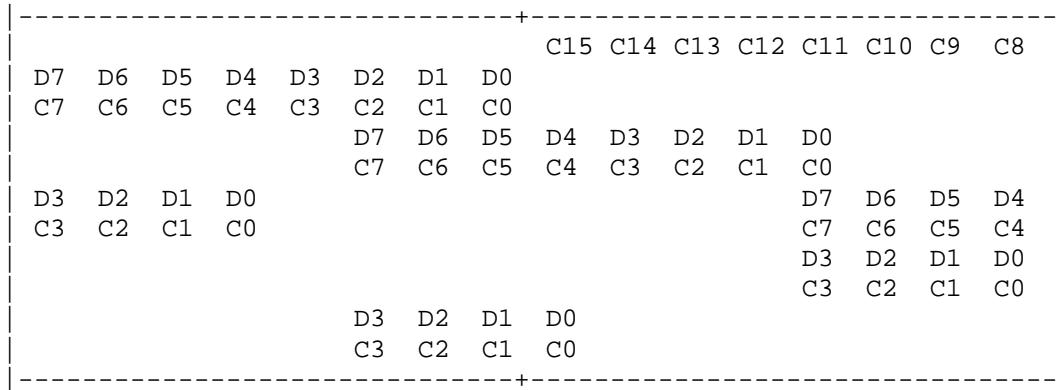

In operation, the CRC register C15-C0 is initialized to all ones. During transmission, the Data are passed through the calculation before transmission. The ones complement of the final CRC register value is then transmitted with the least significant octet (C7-C0) first. At the receiving end, all data octets, including the received CRC octets, are passed through the calculation. If all octets are received correctly, then the final value of the receiver's CRC register will be the constant X'F0B8':



As an example of usage, consider a data sequence X'01', X'22', X'30':

Description	Value	CRC Accumulator After Octet is Processed
		X'FFFF' (initial value)
first data octet	X'01'	X'1E0E'
second data octet	X'22'	X'EB70'
third data octet	X'30'	X'42EF' ones complement is X'BD10'
CRC1 (least significant octet)	X'10'	X'0F3A'
CRC2 (most significant octet)	X'BD'	X'F0B8' final result at receiver

Thus, the transmitter would calculate the CRC on the three octets X'01', X'22', and X'30' to be X'42EF'. The ones complement of this is X'BD10', which is appended to the frame least significant octet first as X'10', X'BD'.

The receiver would calculate the CRC on the five octets X'01', X'22', X'30', X'10', and X'BD' to be X'F0B8', which is the expected result for a correctly received frame.

### G.2.1 Sample Implementation of the Data CRC Algorithm in C

As an example, a C language implementation of the Data CRC algorithm is presented. Inputs are the octet to be processed and the accumulating CRC value. The function return value is the updated CRC value.

```
/*
 * Accumulate "dataValue" into the CRC in crcValue.
 * Return value is updated CRC
 */
/* Assumes that "unsigned char" is equivalent to one octet.
 * Assumes that "unsigned int" is 16 bits.
 * The ^ operator means exclusive OR.
 */

unsigned int CalcDataCRC(unsigned char dataValue, unsigned int crcValue)
{
    unsigned int crcLow;
```

```

crcLow = (crcValue & 0xff) ^ dataValue; /* XOR C7..C0 with D7..D0 */

/* Exclusive OR the terms in the table (top down) */
return (crcValue >>8) ^ (crcLow << 8) ^ (crcLow <<3)
      ^ (crcLow <<12) ^ (crcLow >> 4)
      ^ (crcLow & 0x0f) ^ ((crcLow & 0x0f) << 7);
}

```

### G.2.2 Sample Implementation of the Data CRC Algorithm in Assembly Language

As an example, an assembly language implementation of the Data CRC calculation for the 68HC11 (an eight-bit processor with a simple instruction set) is presented. The routine accumulates the CRC into the variables CRCLO and CRCHI. T1 and T2 are temporary storage variables. Most instructions act on either accumulator A or B.

```

DATACRC:           ;ACCUMULATE THE OCTET (0,X) INTO THE DATA CRC
    LDAA 0,X          ;FETCH DATA OCTET (INDEXED OPERATION)
    EORA CRCLO        ;D7-D0 EXCLUSIVE OR C7-C0
    STAA CRCLO        ;SAVE RESULT
    CLRB              ;CLEAR REGISTER B
    LSRA              ;SHIFT A RIGHT, 0 INTO MSB, LSB INTO CARRY
    RORB              ;ROTATE B RIGHT, CARRY INTO MSB
    LSRA
    RORB
    LSRA
    RORB
    LSRA
    RORB
    ; A=(- - - - 7 6 5 4) B=(3 2 1 0 - - - -)
    ;
    EORA CRCLO
    ANDA #0FH          ;MASK OFF ALL BUT LS 4 BITS
    ; A=(- - - - 7 6 5 4) B=(3 2 1 0 - - - -)
    ; (- - - - 3 2 1 0)
    ;
    STAA T1            ;SAVE TEMP RESULT (NOT USED EXCEPT AS TEMP)
    STAB T2            ;SHIFT RIGHT 1 BIT
    LSRA
    RORB
    ; A=(- - - - - 7 6 5) B=(4 3 2 1 0 - - - )
    ; (- - - - - 3 2 1) (0 - - - - - - - )
    ;
    EORA CRCLO        ;COMBINE PARTIAL TERMS
    EORA T2
    EORB CRCHI        ;C8-C15
    EORB T1
    ; A=(- - - - - 7 6 5) B=(4 3 2 1 0 - - - )
    ; (- - - - - 3 2 1) (0 - - - - - - - )
    ; (7 6 5 4 3 2 1 0) (15 14 13 12 11 10 9 8)
    ; (3 2 1 0 - - - -) (- - - - 7 6 5 4)
    ;                               (- - - - 3 2 1 0)
    ;
    STAA CRCHI        ;SAVE RESULT
    STAB CRCLO
    RTS

```

### G.2.3 Other Implementations of the Data CRC Algorithm

Other implementations of the Data CRC algorithm are possible. It can be seen that the new CRC value may be factored into the exclusive OR of two terms. One term is the most significant octet of the prior CRC value. The other term is a function of the least significant octet of the prior CRC value exclusive OR'ed with the data value. A lookup table with 256 elements may be used to quickly determine the value of the second term, using the least significant octet of the prior CRC exclusive OR'ed with the data value as an index. This term may then be exclusive OR'ed with the most significant octet of the prior CRC value to form the new CRC value. The contents of the table may be computed using the implementation shown in G.2.1 or G.2.2.

**ANNEX H - COMBINING BACnet NETWORKS WITH NON-BACnet NETWORKS (NORMATIVE)**

(This annex is part of this standard and is required for its use.)

**H.1 Mapping Non-BACnet Networks onto BACnet Routers**

In addition to providing the means to interconnect multiple BACnet networks, BACnet routers may also be used to provide a gateway function to non-BACnet networks. Non-BACnet networks are characterized by the use of message structures, procedures, and medium access control techniques other than those contained in this standard. The mapping from BACnet to non-BACnet networks is performed by extending the routing table concept to allow non-BACnet devices to be addressable using BACnet NPCI. Thus, each non-BACnet network is assigned a unique two-octet network number, and each device on the non-BACnet network is represented by a "MAC address" that may, or may not, correspond to the actual octets used to address the device using the medium access control in use on the foreign network. Since communication with devices on non-BACnet networks is, by definition, not standardized here, the specific procedures for interpreting, translating, or relaying messages received by such a router-gateway from either the BACnet or non-BACnet ports are outside the scope of this standard.

**H.2 Multiple "Virtual" BACnet Devices in a Single Physical Device**

A BACnet device is one that possesses a Device object and communicates using the procedures specified in this standard. In some instances, however, it may be desirable to model the activities of a physical building automation and control device through the use of more than one BACnet device. Each such device will be referred to as a "virtual BACnet device." This can be accomplished by configuring the physical device to act as a router to one or more "virtual networks." The idea is that each virtual BACnet device would be associated with a unique DNET and DADR pair, i.e., a unique BACnet address. The physical device would be expected to perform exactly as if it were a router between the network on which messages for the virtual BACnet devices are received and a real BACnet network with the same network number as assigned to the virtual BACnet devices.

**H.3 Using BACnet with the DARPA Internet Protocols**

This subclause describes procedures whereby BACnet messages may be conveyed using the protocols developed by the Defense Advanced Research Projects Agency (DARPA) of the Department of Defense (DoD). Collectively, these protocols are known as the Internet Protocol suite. The methodology described in this appendix involves encapsulating/decapsulating BACnet LSDUs and conveying them across an internet using the capabilities of IP routers, a technique often referred to as "tunneling." Although this appendix will describe the procedures in terms of a BACnet/Internet Protocol Packet-Assembler-Disassembler, the necessary functionality could be built into BACnet nodes directly.

**H.3.1 BACnet/Internet Protocol Packet-Assembler-Disassembler (B/IP PAD)**

A B/IP PAD is a device that implements the BACnet network layer as described in Clause 6 of this standard as well as the DoD User Datagram Protocol (UDP) and the Internet Protocol (IP).

Upon receipt of a BACnet packet from the local network, the B/IP PAD inspects the NPCI to see if a DNET network number has been supplied. If so, the B/IP PAD then consults an internal table consisting of entries mapping network numbers, IP addresses of all B/IP PADs within the BACnet internetwork, and the IP address of an IP router on the local network that represents the next hop for the IP datagram. If an appropriate entry is found, the B/IP PAD encapsulates the LSDU portion of the BACnet message (see Figure H-1) in a UDP packet where the LSDU represents the data portion of the packet. The UDP source and destinations ports shall be set to X'BAC0'. The B/IP PAD shall then send an IP datagram containing the UDP packet to the local IP router indicating its own IP address as the source address and the IP address of the B/IP PAD corresponding to the DNET contained in the BACnet message as the destination IP address. If the DNET in the BACnet message is the global broadcast address, this procedure shall result in the transmission of the BACnet LSDU to all B/IP PADs contained in the table. Conveyance of packets between B/IP PADs follows standard IP procedures.

Upon receipt of an IP datagram from an IP router, a B/IP PAD shall locate the BACnet process at UDP port X'BAC0', which shall prepare the data portion of the UDP datagram for transmission as a BACnet message on the local network using the procedures defined in 6.3.

### H.3.2 Implementation Notes

An implementation on an 8802-3 LAN might be configured as shown in Figure H-1. BACnet packets are differentiated from IP packets and those of other protocols by the LSAP contained in the LLC header. IP uses an LSAP of X'06', whereas the BACnet network layer is identified by an LSAP of X'82'. In the case shown in the Figure, each packet actually appears twice on the network, once as a BACnet message and once as an IP message. B/IP PADs could also be constructed to implement the IP routing procedure for any IP packet in addition to performing the BACnet encapsulation/decapsulation. Such a device would be a B/IP PAD/Router. This is illustrated in Figure H-2.

For further information about the DoD protocols, consult the *DDN Protocol Handbook* referenced in Clause 25.

### H.4 Using BACnet with the IPX Protocol


This subclause describes procedures whereby BACnet

messages may be conveyed using the protocols developed by Novell Corporation, which are known as Internetwork Datagram Protocol or, more popularly, IPX. This protocol layer is based on a subset of the Xerox Network Services (XNS) protocols, in particular using the Packet Exchange Protocol (PEP). The methodology described in this subclause involves encapsulating/decapsulating BACnet LSDUs and conveying them across an IPX internetwork using the capabilities of IPX routers, a technique that here will be called *IPX Tunneling*. Although this appendix will describe the procedures in terms of a BACnet/IPX packet-assembler-disassembler, the necessary functionality could be built into BACnet nodes directly.


#### H.4.1 BACnet/IPX Packet-Assembler-Disassembler (B/IPX PAD)

A B/IPX PAD is a device that implements both the BACnet network layer as described in Clause 6 of this standard, as well as the IPX network layer.

Upon receipt of a BACnet packet from the local network, the B/IPX PAD inspects the NPCI to see if a DNET network number has been supplied. If so, the B/IPX PAD then consults an internal table consisting of entries mapping BACnet network numbers to (IPX network number, MAC layer address) pairs that represent all remote B/IPX PADs within the BACnet internetwork. If an appropriate entry is found, the B/IPX PAD encapsulates the LSDU portion of the BACnet message (see Figure 6-1) in an IPX Tunnel packet (see Figure H-3) where the destination network and MAC-layer addresses correspond to those of the remote B/IPX PAD and the destination socket number shall be set to the BACnet IPX socket number X'87C1'. The B/IPX PAD shall then send an IPX datagram containing this tunnel packet to the local IPX router, indicating its own IPX network number, MAC-layer address, and the BACnet IPX socket number as the source. If the DNET in the BACnet message is the

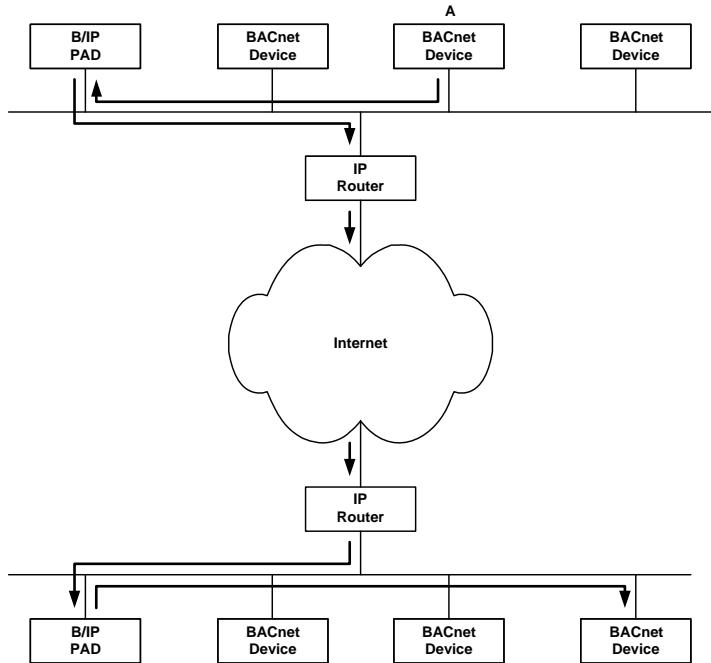

**Figure H-1.** IP tunneling implemented with a B/IP PAD. <sup>B</sup>

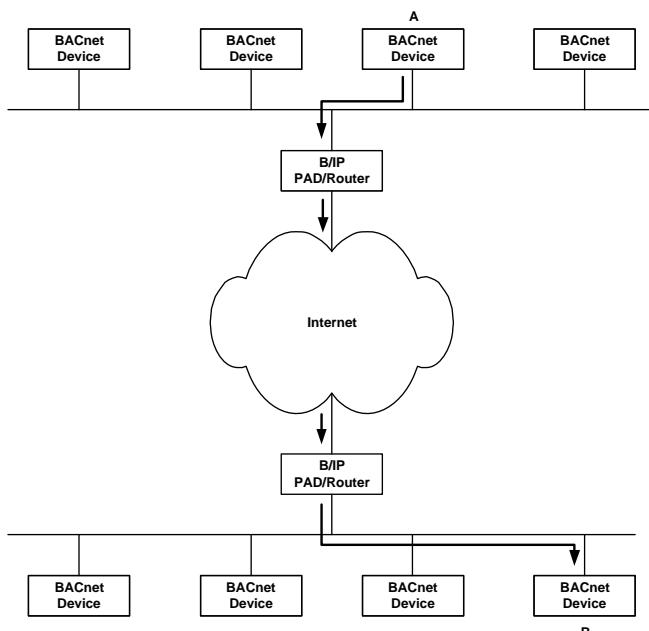

**Figure H-2.** IP tunneling implemented with a B/IP PAD router.

global broadcast address, this procedure shall result in the transmission of the BACnet LSDU tunnel packet to all B/IPX PADs contained in the table. Conveyance of packets between B/IPX PADs follows standard IPX routing procedures.

Upon receipt of an IPX datagram using the BACnet socket, a B/IPX PAD shall prepare the data portion of the BACnet IPX Tunnel packet for transmission as a BACnet message on the local network using the procedures defined in 6.3.

#### H.4.2 Implementation Notes

An implementation on an 8802-3 LAN might be configured as shown in Figure H-1. BACnet packets are differentiated from IPX packets and those of other protocols by the LSAP contained in the LLC header. IPX uses an LSAP of X'E0', whereas the BACnet network layer is identified by an LSAP of X'82'. In the case shown in the Figure, each packet actually appears twice on the network: once as a BACnet message and once as an IPX message. B/IPX PADs could also be constructed to implement the IPX routing procedure for any IPX packet in addition to performing the BACnet encapsulation/decapsulation. Such a device would be a B/IPX PAD/Router. This is illustrated in Figure H-2.

#### References

NetWare® System Interface Technical Overview  
Addison-Wesley Publishing Company, Reading Massachusetts  
ISBN 0-201-57027-0

;IPX Header (30 octets)		
dw	X'FFFF	;XNS checksum (not used by IPX)
dw	?	;packet length (set by IPX)
db	?	;routers crossed (set by IPX)
db	4	;type 4=Packet Exchange Packet
dd	?	;32 bit dest network number
db	?,?,?,?,?,?	;dest MAC layer address
dw	X'87C1'	;dest BACnet socket
dd	?	;32 bit source network number
db	?,?,?,?,?,?	;source MAC layer address
dw	X'87C1'	;source BACnet socket
db 546 dup ?		;BACnet LSDU

**Figure H-3.** Structure of a BACnet IPX tunnel packet.

## H.5 Using BACnet with EIB/KNX

This clause describes how BACnet objects and properties are mapped to corresponding EIB/KNX Datapoints and Functional Blocks. Functional Blocks are part of the Interworking Model defined by the EIB Association / Konnex Association. In the following clauses, references to "EIB" also apply to Konnex.

### H.5.1 Object Structures

The following subclauses describe the relationship between EIB Functional Blocks and BACnet objects.

#### H.5.1.1 EIB

EIB Functional Blocks not only describe the semantics of a function in the English language, but also define how to access the services associated with that function. This is done on the basis of "Datapoints." The Datapoints are divided into two principal categories, input and output. A Functional Block consists of a non-empty collection of one or more input and output Datapoints. At least one Datapoint is required.

Functional Blocks are contained within Physical Devices. A Physical Device implements at least one Functional Block. It may be regarded as a container for, or collection of, Functional Blocks.

#### H.5.1.2 BACnet

BACnet's object types define functions in terms of semantics and the services used to access these functions. To accomplish this task, BACnet object types contain properties. An object type consists of a non-empty collection of properties, some of which are mandatory while others may be optional.

BACnet also defines a Device object and a "BACnet Device" contains a collection of instances of object types. Each BACnet Device contains one, and only one, Device object. See 12.11. Typically, each physical device corresponds to a single BACnet Device and therefore contains a single Device object. An exception is described in H.2.

#### H.5.1.3 Relationship of EIB to BACnet

EIB Functional Blocks are comparable to BACnet object types while EIB Datapoints correlate to BACnet properties.

## H.5.2 Mapping Rules for the BACnet Device Object Type

This clause provides rules for the assignment of values to the properties of the BACnet Device object type.

### H.5.2.1 Object\_Identifier

The Object\_Identifier of a Device object is of type BACnetObjectIdentifier and must be unique internetwork-wide [OR: unique to the entire internetwork]. See 12.11.1. The encoding is defined in 20.2.14. The Object Type field (the upper 10 bits) contains the enumerated value of the BACnetObjectType. In this mapping, the content of the 22-bit Instance Number field depends on whether the Object\_Identifier is identifying a Device object or some other type of object. Subject to the uniqueness constraint, a one-to-one mapping of EIB Physical Devices to BACnet Devices can be achieved by setting the upper 6 bits of the instance number to a unique EIB subnetwork identifier. This could be a part of an EIB Domain Address if it is available and is unique over all linked projects. The lower 16 bits of the instance number shall be set to the Individual Address of the EIB device. Other mapping algorithms must also ensure that the Device's BACnetObjectIdentifier remains unique internetwork wide.

### H.5.2.2 Object\_Name

This CharacterString is unique internetwork-wide. The string is generated from the EIB Project-Installation ID and the EIB Individual Address. The Object\_Name is "EIB\_Project-Installation\_ID::EIB\_Individual\_Address". Example: For an EIB Project-Installation ID of X'0011' = D'17' and an EIB Individual Address of 1.6.7, the Object\_Name string would be "17::1.6.7".

**H.5.2.3 Object\_Type**

The value of this property shall be DEVICE (= D'8').

**H.5.2.4 System\_Status**

Subclause 12.10.4 lists the values for this BACnet property. EIB device status is determined by two variables: LoadStateMachine (LSM) and RunStateMachine (RSM). The BACnet OPERATIONAL\_READ\_ONLY property value is not supported by EIB devices. Table H-1 lists the relationship between EIB RunStateMachine and EIB LoadStateMachine values and BACnet System\_Status.

**Table H-1.** Mapping of the EIB device status to BACnet System\_Status

BACnet System_Status	EIB RunStateMachine	EIB LoadStateMachine
OPERATIONAL	running	Loaded
OPERATIONAL_READ_ONLY	-	-
DOWNLOAD_REQUIRED	ready	Unloaded
DOWNLOAD_IN_PROGRESS	ready	Loading
NON_OPERATIONAL	halted	Error

**H.5.2.5 Vendor\_Name**

This CharacterString identifies the manufacturer of the EIB device, with the EIB manufacturer code in parentheses. Example: "XYZ Company (1)"

**H.5.2.6 Vendor\_Identifier**

This is the unique Vendor Identifier code assigned by ASHRAE. If the vendor has no BACnet Vendor Identifier, this property shall be set to the Vendor Identifier for EIBA: D'74'.

**H.5.2.7 Model\_Name**

This is the model name of the EIB device as registered with the EIBA / Konnex Association.

**H.5.2.8 Firmware\_Revision**

The firmware revision shall be the mask version of the EIB device. The content is equal to [EIB::DeviceObject:PID\_FIRMWARE\_REVISION].

**H.5.2.9 Application\_Software\_Revision**

This property is the software revision of the application running on the EIB device. The content is equal to [EIB::DeviceObject:PID\_PROGRAM\_VERSION].

**H.5.2.10 Protocol\_Version**

This is the version of the BACnet protocol supported by this device. See 12.11.12.

**H.5.2.11 Protocol\_Revision**

This is the minor revision level of the BACnet protocol supported by this device. See 12.11.13.

**H.5.2.12 Protocol\_Services\_Supported**

This property indicates the BACnet protocol services supported by this device. See 12.11.14.

**H.5.2.13 Protocol\_Object\_Types\_Supported**

This property indicates the BACnet protocol object types supported by this device. See Clause 12.11.15. The protocol object types supported shall be at least Analog Input, Analog Output, Analog Value, Binary Input, Binary Output, and Binary Value.

**H.5.2.14 Object\_List**

This property is a BACnetARRAY of Object\_Identifiers. See Clause 12.11.16.

**H.5.2.15 Max\_APDU\_Length\_Accepted**

The value of this property shall be greater than or equal to 50. See Clause 12.11.17.

**H.5.2.16 Segmentation\_Supported**

See Clause 12.11.19.

**H.5.2.17 APDU\_Timeout**

See Clause 12.11.28.

**H.5.2.18 Number\_Of\_APDU\_Retries**

See Clause 12.11.29.

**H.5.2.19 Device\_Address\_Binding**

See Clause 12.11.34.

**H.5.2.20 Database\_Revision**

See Clause 12.11.35. This value shall be updated anytime the EIB device configuration is changed.

**H.5.3 Mapping Rules for Other BACnet Object Types**

This clause provides rules for the assignment of values to specific properties of these BACnet object types: Analog Input, Analog Output, Analog Value, Binary Input, Binary Output, and Binary Value.

**H.5.3.1 Object\_Identifier**

An Object\_Identifier is a 32-bit number that must be unique within a BACnet Device. The encoding is defined in Clause 20.2.14. The Object Type field (the upper 10 bits) contains the enumerated value of the BACnetObjectType. In this mapping, the content of the 22-bit Instance Number field depends on whether the Object\_Identifier is identifying a Device object or some other type of object. The Object\_Identifiers of other object types must be unique within the BACnet device that contains them. See Clause 12. Subject to this constraint, the upper 6 bits of the instance number shall uniquely identify each instance of a mapped object contained within a BACnet Device while the remaining 16 bits shall contain the EIB Individual Address to simplify diagnostics.

**H.5.3.2 Object\_Name**

This CharacterString is unique within the BACnet Device. The string is generated from the EIB Project-Installation ID, the EIB Individual Address, and the EIB Functional Block ID - Instance. The Object\_Name is "EIB\_Project-Installation\_ID::EIB\_Individual\_Address#Functional\_Block\_ID-Instance". Example: For an EIB Project-Installation ID of X'0011' = D'17', an EIB Individual Address of 1.6.7, a Functional Block ID of D'10' and a Functional Block Instance of D'2' the Object\_Name string would be "17::1.6.7#10-2".

### **H.5.3.3 Object\_Type**

The value of this property shall be as listed below:

ANALOG-INPUT	D'0'
ANALOG-OUTPUT	D'1'
ANALOG-VALUE	D'2'
BINARY-INPUT	D'3'
BINARY-OUTPUT	D'4'
BINARY-VALUE	D'5'

### **H.5.3.4 Present\_Value**

This property contains the present value of the Input / Output / Value. For Binary object types the permissible values are ACTIVE and INACTIVE. For Analog object types the property value is a REAL.

### **H.5.3.5 Description**

This property contains the EIB group address associated with the Present\_Value property as a CharacterString with the notation "x/y/z", where "x" is the main group, "y" is the subgroup, and "z" is the function.

### **H.5.3.6 Status\_Flags**

The values for the status flags shall be set as:

IN_ALARM	The value of this flag shall be logical FALSE (0).
FAULT	Logical TRUE (1) if the Reliability property does not have a value of NO_FAULT_DETECTED, otherwise logical FALSE (0).
OVERRIDDEN	Logical TRUE (1) if manual override can be detected by the EIB device and is executed, otherwise logical FALSE (0).
OUT_OF_SERVICE	Logical TRUE (1) if the Out_Of_Service property has a value of TRUE, otherwise logical FALSE (0).

### **H.5.3.7 Event\_State**

The value of this property is always set to NORMAL.

### **H.5.3.8 Reliability**

The optional "Reliability" property shall, if implemented, return at least NO\_FAULT\_DETECTED in case that the EIB Datapoints' Quality Codes are GOOD, and UNRELIABLE\_OTHER in case at least one EIB Datapoint's Quality Code is BAD. An EIB Datapoint's Quality Code is GOOD if the Datapoint can be read from (Input) or written to (Output); otherwise its Quality Code is BAD. If an implementation is able to distinguish different sources of a failure, it may return other reliability codes of type BACnetReliability.

### **H.5.3.9 Out\_Of\_Service**

The mandatory "Out\_Of\_Service" property shall be set to TRUE if the corresponding EIB device cannot be reached or the Present\_Value cannot be read from (Input) or written to (Output) the device. Otherwise this property is set to FALSE.

### H.5.3.10 Polarity

The value of this property shall always be NORMAL.

### H.5.3.11 Units

The BACnet Analog Input/Output/Value Present\_Value is of datatype REAL. The EIB datatypes 8-Bit Unsigned Value, 8-Bit Signed Value, 2-Octet Unsigned Value, 2-Octet Signed Value, 2-Octet Float Value, 4-Octet Unsigned Value, 4-Octet Signed Value, and 4-Octet Float Value are mapped into the datatype REAL.

These datatypes encompass a larger number of Datapoint types that are mapped into a REAL with a BACnetEngineeringUnit. See Table H-2.

**Table H-2.** EIB Datapoint Types

ID	Name	Range	Units	BACnetEngineeringUnits
5.001	DPT_Scaling	0...100	%	(98) percent
5.003	DPT_Angle	0...360	°	(90) degrees-angular
5.010	DPT_Value_1_Ucount	0...255	counter pulses	
6.010	DPT_Value_1_Count		counter value	
7.001	DPT_Value_2_Ucount		counter pulses (16-bit unsigned value)	
8.001	DPT_Value_2_Count		counter pulses	
9.001	DPT_Value_Temp	-273...+670760	C	(62) degrees-Celsius
9.002	DPT_Value_Tempd	-670760...+670760	K	(63) degrees-Kelvin
9.003	DPT_Value_Tempa	-670760...+670760	K/h	(181) degrees-Kelvin-per-hour
9.004	DPT_Value_Lux	0...670760	Lux	(37) luxes
9.005	DPT_Value_Wsp	0...670760	m/s	(74) meters-per-second
9.006	DPT_Value_Pres	0...670760	Pa	(53) pascals
9.010	DPT_Value_Time1	-670760...+670760	s	(73) seconds
9.011	DPT_Value_Time2	-670760...+670760	ms	(159) milliseconds
9.020	DPT_Value_Volt	-670760...+670760	mV	(124) millivolts
9.021	DPT_Value_Curr	-670760...+670760	mA	(2) milliamperes
12.001	DPT_Value_4_Ucount	0...4294967295	counter pulses	
13.001	DPT_Value_4_Count	-2147483648... +2147483647	counter value	
14.000	DPT_Value_Acceleration		$\text{m s}^{-2}$	(166) meters-per-second-per-second
14.003	DPT_Value_Activity		$\text{s}^{-1}$	(101) per-second
14.005	DPT_Value_Amplitude		(unit as appropriate)	
14.006	DPT_Value_AngleRad		rad angle	(103) radians
14.007	DPT_Value_AngleDeg		° angle	(90) degrees-angular
14.008	DPT_Value_Angular_Momentum		$\text{J s}$	(183) joule-seconds
14.009	DPT_Value_Angular_Velocity		$\text{rad s}^{-1}$	(184) radians-per-second
14.010	DPT_Value_Area		$\text{m}^2$	(0) square-meters
14.011	DPT_Value_Capacitance		F	(170) farads
14.014	DPT_Value_Compressibility		$\text{m}^2 \text{ N}^{-1}$	(185) square-meters-per-Newton
14.015	DPT_Value_Conductance		$\text{S} = \Omega^{-1}$	(173) siemens
14.016	DPT_Value_Electrical_Conductivity		$\text{S m}^{-1}$	(174) siemens-per-meter

**Table H-2.** EIB Datapoint Types (cont.)

ID	Name	Range	Units	BACnetEngineeringUnits
14.017	DPT_Value_Density		$\text{kg m}^{-3}$	(186) kilograms-per-cubic-meter
14.019	DPT_Value_Electric_Current		A	(3) amperes
14.020	DPT_Value_Electric_CurrentDensity		$\text{A m}^{-2}$	(168) amperes-per-square-meter
14.023	DPT_Value_Electric_FieldStrength		$\text{V m}^{-1}$	(177) volts-per-meter
14.027	DPT_Value_Electric_Potential		V	(5) volts
14.028	DPT_Value_Electric_PotentialDifference		V	(5)volts
14.029	DPT_Value_ElectromagneticMoment		$\text{A m}^2$	(169) ampere-square-meters
14.030	DPT_Value_Electromotive_Force		V	(5) volts
14.031	DPT_Value_Energy		J	(16) joules
14.032	DPT_Value_Force		N	(153) newton
14.033	DPT_Value_Frequency		$\text{Hz} = \text{s}^{-1}$	(27) hertz
14.034	DPT_Value_Angular_Frequency		$\text{rad s}^{-1}$	(184) radians-per-second
14.035	DPT_Value_Heat_Capacity		$\text{J K}^{-1}$	(127) joules-per-degree-Kelvin
14.036	DPT_Value_Heat_FlowRate		W	(47) watts
14.037	DPT_Value_Heat_Quantity		J	(16) joules
14.038	DPT_Value_Impedance		W	(47) watts
14.039	DPT_Value_Length		m	(31) meters
14.040	DPT_Value_Light_Quantity		J or lm s	(16) joules
14.041	DPT_Value_Luminance		$\text{cd m}^{-2}$	(180) candelas-per-square-meter
14.042	DPT_Value_Luminous_Flux		lm	(36) lumens
14.043	DPT_Value_Luminous_Intensity		cd	(179) candelas
14.044	DPT_Value_Magnetic_FieldStrength		$\text{A m}^{-1}$	(167) amperes-per-meter
14.045	DPT_Value_Magnetic_Flux		Wb	(178) webers
14.046	DPT_Value_Magnetic_FluxDensity		T	(175) teslas
14.047	DPT_Value_Magnetic_Moment		$\text{A m}^2$	(169) ampere-square-meters
14.048	DPT_Value_Magnetic_Polarization		T	(175) teslas
14.049	DPT_Value_Magnetization		$\text{A m}^{-1}$	(167) amperes-per-meter
14.050	DPT_Value_MagnetomotiveForce		A	(3) amperes
14.051	DPT_Value_Mass		kg	(39) kilograms
14.052	DPT_Value_MassFlux		$\text{kg s}^{-1}$	(42) kilograms-per-second
14.053	DPT_Value_Momentum		N s	(187) newton-seconds
14.054	DPT_Value_Phase_AngleRad		rad	(103) radians
14.055	DPT_Value_Phase_AngleDeg		°	(14) degrees-phase
14.056	DPT_Value_Power		W	(47) watts
14.057	DPT_Value_Power_Factor		$\cos \Phi$	(15) power-factor
14.058	DPT_Value_Pressure		$\text{Pa} = \text{N m}^{-2}$	(53) pascals
14.059	DPT_Value_Reactance		Ω	(4) ohms
14.060	DPT_Value_Resistance		Ω	(4) ohms
14.061	DPT_Value_Resistivity		Ωm	(172) ohm-meters
14.062	DPT_Value_SelfInductance		H	(171) henrys
14.064	DPT_Value_Sound_Intensity		$\text{W m}^{-2}$	(189) watts-per-square-meter
14.065	DPT_Value_Speed		$\text{m s}^{-1}$	(74) meters-per-second
14.066	DPT_Value_Stress		$\text{Pa} = \text{N m}^{-2}$	(53) pascals

**Table H-2.** EIB Datapoint Types (cont.)

ID	Name	Range	Units	BACnetEngineeringUnits
14.067	DPT_Value_Surface_Tension		N m <sup>-1</sup>	(188) newtons-per-meter
14.068	DPT_Value_Common_Temperature		C	(62) degrees-Celsius
14.069	DPT_Value_Absolute_Temperature		K	(63) degrees-Kelvin
14.070	DPT_Value_TemperatureDifference		K	(63) degrees-Kelvin
14.071	DPT_Value_Thermal_Capacity		J K <sup>-1</sup>	(127) joules-per-degree-Kelvin
14.072	DPT_Value_Thermal_Conductivity		W m <sup>-1</sup> K <sup>-1</sup>	(190) watts-per-meter-per-degree-Kelvin
14.073	DPT_Value_ThermoelectricPower		V K <sup>-1</sup>	(176) volts-per-degree-Kelvin
14.074	DPT_Value_Time		s	(73) seconds
14.075	DPT_Value_Torque		N m	(160) newton-meters
14.076	DPT_Value_Volume		m <sup>3</sup>	(80) cubic-meters
14.077	DPT_Value_Volume_Flux		m <sup>3</sup> s <sup>-1</sup>	(85) cubic-meters-per-second
14.078	DPT_Value_Weight		N	(153) newton
14.079	DPT_Value_Work		J	(16) joules

**H.5.3.12 Priority\_Array**

This is an internal implementation requirement, which is not required to be mapped. See Clause 19.

**H.5.3.13 Relinquish\_Default**

For prioritized writable properties, it is typically required by the mapping that the Present\_Value shall remain unchanged when no active entry (value not equal to NULL) is present. Therefore, the Relinquish\_Default shall be set equal to the Present\_Value.

**H.5.3.14 Profile\_Name**

The profile name shall be set to "74-EIB\_[Profile]", where [Profile] is the name of the EIB Function Block.

**H.5.4 Mappings of EIB Functional Blocks**

The following Functional Block mappings are specified in this clause: Analog Input, Analog Output, Analog Value, Binary Input, Binary Output, Binary Value and Dimming Actuator.

**H.5.4.1 Overview**

This clause provides mappings of standardized EIB Functional Blocks to BACnet objects. These are intended to provide both standardized definitions and to serve as illustrative examples of the mapping rules prescribed above. They therefore contain additional explanations and descriptive text.

For some properties, the mapping may not be to an EIB Datapoint but rather to a static value or to a function that transforms internal information to a BACnet datatype or format.

**H.5.4.2 Analog Input**

The Analog Input Functional Block is mapped to the standard BACnet Analog Input object type as the semantics of these two data structures are identical and the required properties of the BACnet object type can be mapped.

**Table H-3.** Analog Input Mapping

Property Identifier	Property Datatype	O/R/W <sup>1</sup>	EIB Mapping
Object_Identifier	BACnetObjectIdentifier	R	As specified in H.5.3.1
Object_Name	CharacterString	R	As specified in H.5.3.2
Object_Type	BACnetObjectType	R	As specified in H.5.3.3
Present_Value	REAL	R	PID_ANALOG_PRESENT.Value
Description	CharacterString	O	As specified in H.5.3.5
Status_Flags	BACnetStatusFlags	R	As specified in H.5.3.6
Event_State	BACnetEventState	R	NORMAL
Reliability	BACnetReliability	O	As specified in H.5.3.8
Out_Of_Service	BOOLEAN	R	As specified in H.5.3.9
Units	BACnetEngineeringUnits	R	As specified in H.5.3.11
Min_Pres_Value	REAL	O	As specified in H.5.3.11, range lower value
Max_Pres_Value	REAL	O	As specified in H.5.3.11, range higher value
COV_Increment	REAL	O	1.0
Profile_Name	CharacterString	R	"74-EIB_AnalogInput"

<sup>1</sup> O/R/W = Optional, required Readable or required Writable property (see Clause 12). In the context of the mapping, a property is always required if defined as mandatory for the BACnet object type, and additional Properties which are optional in the BACnet specification or are proprietary may be defined as mandatory for the mapping. If a Property is writable, the Property must also be readable.

#### H.5.4.3 Analog Output

The Analog Output Functional Block is mapped to the standard BACnet Analog Output object type as the semantics of these two data structures are identical and the required properties of the BACnet object type can be mapped.

**Table H-4.** Analog Output Mapping

Property Identifier	Property Datatype	O/R/W	Mapping
Object_Identifier	BACnetObjectIdentifier	R	As specified in H.5.3.1
Object_Name	CharacterString	R	As specified in H.5.3.2
Object_Type	BACnetObjectType	R	As specified in H.5.3.3
Present_Value	REAL	W	PID_ANALOG_SET.Value
Description	CharacterString	O	As specified in H.5.3.5
Status_Flags	BACnetStatusFlags	R	As specified in H.5.3.6
Event_State	BACnetEventState	R	NORMAL
Reliability	BACnetReliability	O	As specified in H.5.3.8
Out_Of_Service	BOOLEAN	R	As specified in H.5.3.9
Units	BACnetEngineeringUnits	R	As specified in H.5.3.11
Priority_Array	BACnetPriorityArray	R	As specified in H.5.3.12
Relinquish_Default	REAL	R	As specified in H.5.3.13
Profile_Name	CharacterString	R	"74-EIB_AnalogOutput"

#### H.5.4.4 Analog Value

The Analog Value Functional Block is mapped to the standard BACnet Analog Value object type as the semantics of these two data structures are identical and the required properties of the BACnet object type can be mapped.

**Table H-5.** Analog Value Mapping

Property Identifier	Property Datatype	O/R/W	Mapping
Object_Identifier	BACnetObjectIdentifier	R	As specified in H.5.3.1
Object_Name	CharacterString	R	As specified in H.5.3.2
Object_Type	BACnetObjectType	R	As specified in H.5.3.3
Present_Value	REAL	R	PID_ANALOG_PRESENT.Value
Description	CharacterString	O	As specified in H.5.3.5
Status_Flags	BACnetStatusFlags	R	As specified in H.5.3.6
Event_State	BACnetEventState	R	NORMAL
Reliability	BACnetReliability	O	As specified in H.5.3.8
Out_Of_Service	BOOLEAN	R	As specified in H.5.3.9
Units	BACnetEngineeringUnits	R	As specified in H.5.3.11
COV_Increment	REAL	R	1.0
Profile_Name	CharacterString	R	"74-EIB_AnalogValue"

#### H.5.4.5 Binary Input

The Binary Input Functional Block is mapped to the standard BACnet Binary Input object type as the semantics of these two data structures are identical and the required properties of the BACnet object type can be mapped.

**Table H-6.** Binary Input Mapping

Property Identifier	Property Datatype	O/R/W	EIB Mapping
Object_Identifier	BACnetObjectIdentifier	R	As specified in H.5.3.1
Object_Name	CharacterString	R	As specified in H.5.3.2
Object_Type	BACnetObjectType	R	As specified in H.5.3.3
Present_Value	BACnetBinaryPV	R	PID_BOOLEAN_PRESENT.Value
Description	CharacterString	O	As specified in H.5.3.5
Status_Flags	BACnetStatusFlags	R	As specified in H.5.3.6
Event_State	BACnetEventState	R	NORMAL
Reliability	BACnetReliability	O	As specified in H.5.3.8
Out_Of_Service	BOOLEAN	R	As specified in H.5.3.9
Polarity	BACnetPolarity	R	NORMAL
Profile_Name	CharacterString	O	"74-EIB_BinaryInput"

#### H.5.4.6 Binary Output

The Binary Output Functional Block is mapped to the standard BACnet Binary Output object type as the semantics of these two data structures are identical and the required properties of the BACnet object type can be mapped.

**Table H-7.** Binary Output Mapping

Property Identifier	Property Datatype	O/R/W	EIB Mapping
Object_Identifier	BACnetObjectIdentifier	R	As specified in H.5.3.1
Object_Name	CharacterString	R	As specified in H.5.3.2
Object_Type	BACnetObjectType	R	As specified in H.5.3.3
Present_Value	BACnetBinaryPV	W	PID_BOOLEAN_SET.Value
Description	CharacterString	O	As specified in H.5.3.5
Status_Flags	BACnetStatusFlags	R	As specified in H.5.3.6
Event_State	BACnetEventState	R	NORMAL
Reliability	BACnetReliability	O	As specified in H.5.3.8
Out_Of_Service	BOOLEAN	R	As specified in H.5.3.9
Polarity	BACnetPolarity	R	NORMAL
Priority_Array	BACnetPriorityArray	R	As specified in H.5.3.12
Relinquish_Default	BACnetBinaryPV	R	As specified in H.5.3.13
Profile_Name	CharacterString	O	"74-EIB_BinaryOutput"

#### H.5.4.7 Binary Value

The Binary Value Functional Block is mapped to the standard BACnet Binary Value object type as the semantics of these two data structures are identical and the required properties of the BACnet object type can be mapped.

**Table H-8. Binary Value Mapping**

Property Identifier	Property Datatype	O/R/W	EIB Mapping
Object_Identifier	BACnetObjectIdentifier	R	As specified in H.5.3.1
Object_Name	CharacterString	R	As specified in H.5.3.2
Object_Type	BACnetObjectType	R	As specified in H.5.3.3
Present_Value	BACnetBinaryPV	R <sup>1</sup>	PID_BOOLEAN_SET.Value
Description	CharacterString	O	As specified in H.5.3.5
Status_Flags	BACnetStatusFlags	R	As specified in H.5.3.6
Event_State	BACnetEventState	R	NORMAL
Reliability	BACnetReliability	O	As specified in H.5.3.8
Out_Of_Service	BOOLEAN	R	As specified in H.5.3.9
Profile_Name	CharacterString	O	"74-EIB_BinaryValue"

<sup>1</sup> If Present\_Value is commandable, then it is required to be writable. This property is required to be writable when Out\_Of\_Service is TRUE.

#### H.5.4.8 Dimming Actuator

The Dimming Actuator Functional Block is mapped to the standard BACnet Analog Value object, which is extended by the addition of 4 EIB-specific properties.

The present value of the EIB Dimming Actuator is always an Unsigned Integer with a range of 0 to 255 (Unsigned8). These 256 values are linearly mapped to a percentage of the maximum output, i.e., 0 = 0%, 127 = 50%, 255 = 100%. The actual physical value, if required, must be determined by the application.

The Dimming Actuator Functional Block specifies that the requested target state and current physical state be represented by different Datapoints. Although implementations may treat this internally as an identical device state (target requested and current state), this may not be the case when the dimming is the result of ramping or technically required delays. Therefore, for the two current state properties Present\_Value and Present\_Bin\_Value, the corresponding target properties, Target\_Value and Target\_Bin\_Value, have been defined.

**Table H-9.** Dimming Actuator Mapping

Property Identifier	Property Datatype	S/P <sup>1</sup>	O/R/W	Mapping
Object_Identifier	BACnetObjectIdentifier	S	R	As specified in H.5.3.1
Object_Name	CharacterString	S	R	As specified in H.5.3.2
Object_Type	BACnetObjectType	S	R	As specified in H.5.3.3
Description	CharacterString	S	O	As specified in H.5.3.5
Device_Type	CharacterString	S	O	Device's functional description from manufacturer data from ETS
Present_Value	REAL	S	R	PID_ANALOG_PRESENT.Value
Status_Flags	BACnetStatusFlags	S	R	As specified in H.5.3.6
Event_State	BACnetEventState	S	R	NORMAL
Reliability	BACnetReliability	S	O	As specified in H.5.3.8
Out_Of_Service	BOOLEAN	S	R	As specified in H.5.3.9
Units	BACnetEngineeringUnits	S	R	As specified in H.5.3.11
COV_Increment	REAL	S	R	1.0
Profile_Name	CharacterString	S	R	"74-EIB_DimmingActuator"
Target_Value	REAL	P	W	PID_ANALOG_SET.Value
Present_Bin_Value	BACnetBinaryPV	P	R	PID_BOOLEAN_PRESENT.Value
Target_Bin_Value	BACnetBinaryPV	P	W	PID_BOOLEAN_SET.Value
Dimming_Control <sup>2</sup>	REAL	P	O/W	PID_CONTROL_SET.Value

<sup>1</sup> S/P = Standard/Proprietary property

<sup>2</sup> Because BACnet specifies that a writable property must also be readable, the value returned when the Dimming\_Control property is read shall be 0.0

#### H.5.4.9 Defining Proprietary Object Types

If it is not possible to map an EIB Functional Block to an existing BACnet object type, a new proprietary object type must be defined. Such object types shall be assigned an object type enumeration greater than 127 and contain the Profile\_Name property to uniquely identify such object types and to provide a reference to an object-specific profile or description of the object type. At a minimum, proprietary object types must have the Object\_Identifier, Object\_Name, Object\_Type and Profile\_Name properties. See Clause 23.

#### H.5.4.10 Defining Proprietary Properties

If it is possible to map a Functional Block to a standard BACnet object type but Datapoints exist within the EIB standard that cannot be mapped to existing object properties, or if a completely new proprietary object type with proprietary properties is defined, it will be necessary to define proprietary properties for that object type. Proprietary properties shall be assigned property identifiers greater than 511 and the profile pointed to by the Profile\_Name property of the object type shall provide the property name, datatype and conformance code for each such profile-specific property. See Clause 23.

#### H.5.5 Additional Information

This clause provides information on the EIB Functional Blocks Specification.

##### H.5.5.1 EIB Functional Blocks (FBs)

Within the Functional Block specifications, the Datapoints of a device are called properties and receive a property ID in terms of a unique name within the description of a functional block. The names of the properties always start with "PID\_", as in the example PID\_BOOLEAN\_PRESENT.

Each such Datapoint property provides the following state information at run time:

Value: The current value of the property; it may be any kind of Datapoint Type.

Timestamp: Optional; it may be absolute or relative, depending on the device's capabilities.

Qualitycode: Either GOOD or BAD.

## H.6 Using BACnet with the BACnet/WS Web Services Interface (Annex N)

This clause provides examples of the correspondence between BACnet/WS node attributes to specific properties of BACnet Objects. For some nodes and attributes, mapping might not be to a BACnet property but rather to a static value or to a function that transforms internal information to a BACnet datatype or concept.

### H.6.1 Typical Mappings of BACnet/WS attributes to BACnet Object Properties

The "normalized attributes", as defined by Annex N, are designed to provide an interoperable model of selected data to a Web services client. The following clauses define the correspondence of those attributes with BACnet properties.

#### H.6.1.1 Display Name

This attribute may correspond to the BACnet property Object\_Name, except that DisplayName values do not need to be unique in the Web services data model.

#### H.6.1.2 Description

This attribute may correspond to the BACnet property Description.

#### H.6.1.3 Value and Related Attributes

The mappings for attributes related to the Value attribute, and its ValueType, vary according to BACnet object type, and may correspond as shown in the following table.

**Table H-10.** Value and Value Related Attribute Mappings to BACnet Object Properties

BACnet Object Type	Value	ValueType	Units	Maximum	Minimum	Resolution
Accumulator	Present_Value	"Integer"	Units	Max_Pres_Value		
Analog Input	Present_Value	"Real"	Units	Max_Pres_Value	Min_Pres_Value	Resolution
Analog Output	Present_Value	"Real"	Units	Max_Pres_Value	Min_Pres_Value	Resolution
Analog Value	Present_Value	"Real"	Units			
Averaging	(varies)	"Real"				
Binary Input	Present_Value	"Boolean"				
Binary Output	Present_Value	"Boolean"				
Binary Value	Present_Value	"Boolean"				
Calendar	Present_Value	"Boolean"				
Command	Present_Value	"Integer"				
Device	System_Status	"Multistate"				
Event Enrollment	Event_State	"Multistate"				
Life Safety Point	Present_Value	"Multistate"				
Life Safety Zone	Present_Value	"Multistate"				
Loop	Present_Value	"Real"	Output_Units	Maximum_Output	Minimum_Output	
Multistate Input	Present_Value	"Multistate"				
Multistate Output	Present_Value	"Multistate"				
Multistate Value	Present_Value	"Multistate"				
Pulse Converter	Present_Value	"Real"	Units			
Schedule	Present_Value	(varies)				

#### H.6.1.4 Writable

This attribute may correspond to the PICS conformance statement declaration of writable for the BACnet property to which this node maps, but it may also vary depending on which user is making the Web services request or on other configuration or operational criteria.

### H.6.1.5 InAlarm

This boolean attribute may correspond to the IN\_ALARM flag in the BACnet property Status\_Flags. If the IN\_ALARM flag of that property is set to true, then InAlarm shall be true.

### H.6.1.6 PossibleValues and WritableValues

The mapping for these attributes varies based on BACnet object type, and may be mapped according to the following table. The WritableValues attribute is always a subset of the PossibleValues attribute.

**Table H-11. PossibleValues and WritableValues Attribute Mappings**

BACnet Object Type	BACnet Property or Datatype Mapping
Binary Input	Active_Text, Inactive_Text properties
Binary Output	Active_Text, Inactive_Text properties
Binary Value	Active_Text, Inactive_Text properties
Command	Action_Text property
Device	BACnetDeviceStatus enumeration
Event Enrollment	BACnetEventState enumeration
Life Safety Point	BACnetLifeSafetyState enumeration
Life Safety Zone	BACnetLifeSafetyState enumeration
Multistate Input	State_Text property
Multistate Output	State_Text property
Multistate Value	State_Text property
Schedule	(varies)

### H.6.1.7 Overridden

This boolean attribute may correspond to the OVERRIDDEN flag in the BACnet property StatusFlags. If the OVERRIDDEN flag of that property is set to true, then Overridden shall be true.

**ANNEX I - COMMANDABLE PROPERTIES WITH MINIMUM ON AND OFF TIMES (INFORMATIVE)**

(This annex is not part of this standard but is included for information purposes only)

This annex is an example of the use of a commandable property with minimum on and off times.

Suppose that we have a binary output object with a 600-second (10-minute) Minimum\_On\_Time, a 1200-second (20-minute) Minimum\_Off\_Time, and NORMAL polarity. The Priority\_Array is all NULL, and the Present\_Value is INACTIVE (off) due to the Relinquish\_Default and has been INACTIVE for several hours. See Figure I-1(a).

In Figure I-1(b) a write is made to the Present\_Value at priority 9 with a value of ACTIVE (on). Logic internal to the request server writes the value to entry 9 in the Priority\_Array. Since the Present\_Value has been off for more than 20 minutes, the change of state can occur immediately. Thus, the Present\_Value will take the value ACTIVE and the Change\_Of\_State\_Time will be set to the time of control.

Because the state of the Present\_Value has changed, the minimum on and off time maintenance entity writes the new state of ACTIVE to entry 6 in the Priority\_Array in order to enforce the minimum time. Any further writes to the Present\_Value at priorities numerically greater than 6 (less important) will be entered into the Priority\_Array but will not be acted upon due to the presence of the ACTIVE at priority 6. For example, in Figure I-1(c), a write to Present Value at priority 7 with a value of INACTIVE will be entered into the Priority\_Array but will not be acted upon.

Writes to priorities numerically less than 6 will be entered into the Priority\_Array and may cause changes of state due to their higher priority. This is desired for emergency and fire control.

In Figure I-1(e) the minimum on and off time maintenance entity in the device issues a relinquish (NULL) at priority 6 when the Minimum\_On\_Time expires, 10 minutes after the initial write. The remaining entries in the Priority\_Array are then examined to determine the new Present\_Value. If no change of state results, then no further action occurs. This would be the case in our example if no INACTIVE requests at priorities numerically less than 9 had been made.

In our example we had an INACTIVE at priority 7. Thus, in Figure I-1(f), when the Minimum\_On\_Time expires and the ACTIVE at priority 6 is relinquished, the value at priority 7 takes control. The Present\_Value changes state to INACTIVE. As before, because the state of the Present\_Value has changed, the minimum on and off time maintenance entity writes the new state of INACTIVE to entry 6 in the Priority\_Array in order to enforce the minimum time.

We note that while write to priorities numerically less than 6 are not subject to minimum on and off times, if such writes cause changes of states the server should still write the new value to priority 6. Thus, if the higher priority request is relinquished within the minimum time, the minimum will be enforced before any lower priority requests can cause changes of state.

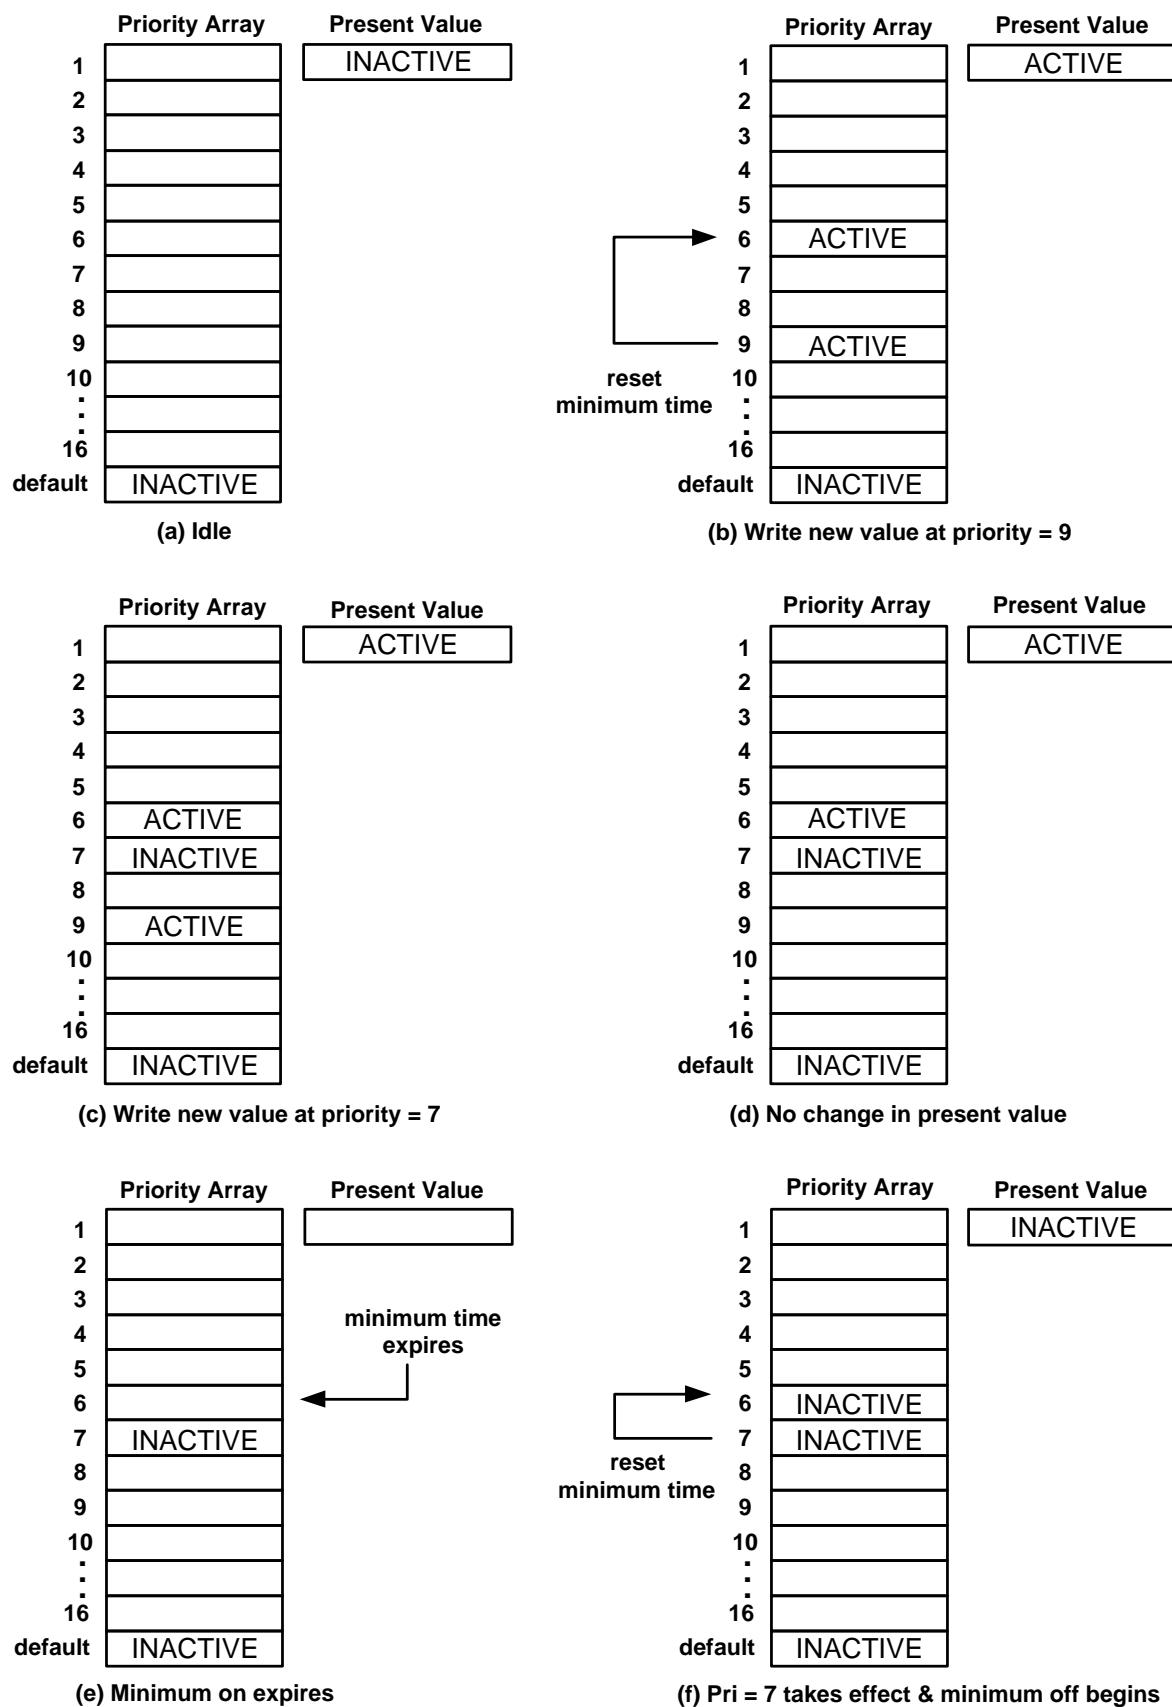


Figure I-1. Example of minimum on and off times.

## ANNEX J - BACnet/IP (NORMATIVE)

### J.1 General

This normative annex specifies the use of BACnet messaging with the networking protocols originally defined as the result of research sponsored by the U. S. government's Defense Advanced Research Projects Agency and now maintained by the Internet Engineering Task Force. This suite of protocols is generally known as the "Internet Protocols."

#### J.1.1 BACnet/IP (B/IP) Network Definition

A BACnet/IP network is a collection of one or more IP subnetworks (IP domains) that are assigned a single BACnet network number. A BACnet internetwork (3.2.26) consists of two or more BACnet networks. These networks may be BACnet/IP networks or use the technologies specified in Clauses 7, 8, 9, and 11. This standard also supports the inclusion of IP multicast groups in a fashion analogous to IP subnets, as described below in J.8.

#### J.1.2 Addressing within B/IP Networks

In the case of B/IP networks, six octets consisting of the four-octet IP address followed by a two-octet UDP port number (both of which shall be transmitted most significant octet first) shall function analogously to the MAC address of the technologies of Clauses 7, 8, 9, and 11 with respect to communication between individual devices and inclusion in the Clause 6 NPCI, where a DADR or SADR is required. This address shall be referred to as a B/IP address. The default UDP port for both directed messages and broadcasts shall be X'BAC0' and all B/IP devices shall support it. In some cases, e.g., a situation where it is desirable for two groups of BACnet devices to coexist independently on the same IP subnet, the UDP port may be configured locally to a different value without it being considered a violation of this protocol. Where the "B/IP broadcast address" is referred to in this Annex, it means an IP address with the subnet of the broadcasting device in the network portion and all 1's in the host portion of the address and the UDP port of the devices on the B/IP network in question. An IP multicast address in conjunction with an appropriate UDP port may be used in lieu of the B/IP broadcast address under the circumstances defined in J.8.

#### J.1.3 B/IP Concept

A BACnet/IP network shall function in concept identically to the other non-IP network types with respect to directed messages and broadcast messages, including local, remote, and global broadcasts, as defined in 6.3.2: a directed message shall be sent directly to the destination node; a "local broadcast" shall reach all nodes on a single B/IP network; a "remote broadcast" shall reach all nodes on a single BACnet network with network number different from that of the originator's network; a "global broadcast" shall reach all nodes on all networks. The management of broadcasts within a single B/IP network, or between multiple B/IP networks, or between B/IP and non-B/IP networks, is described in J.4.

### J.2 BACnet Virtual Link Layer

The BACnet Virtual Link Layer (BVLL) provides the interface between the BACnet Network Layer (Clause 6) and the underlying capabilities of a particular communication subsystem. This Annex specifies the BACnet Virtual Link Control (BVLC) functions required to support BACnet/IP directed and broadcast messages. The purpose and format of each message is described in the following subclauses.

Note that each BVLL message has at least three fields. The 1-octet BVLC Type field indicates which underlying communication subsystem or microprotocol is in use. In this case, a BVLC Type of X'81' indicates the use of BACnet/IP as defined in this Annex. The 1-octet BVLC Function field identifies the specific function to be carried out in support of the indicated communication subsystem or microprotocol type. The 2-octet BVLC Length field is the length, in octets, of the entire BVLL message, including the two octets of the length field itself, most significant octet first.

#### J.2.1 BVLC-Result: Purpose

This message provides a mechanism to acknowledge the result of those BVLL service requests that require an acknowledgment, whether successful (ACK) or unsuccessful (NAK). These are: Write-Broadcast-Distribution-Table (ACK, NAK); Read-Broadcast-Distribution-Table (NAK only); Register-Foreign-Device (ACK, NAK); Read-Foreign-Device-Table (NAK only); Delete-Foreign-Device-Table-Entry (ACK, NAK); and Distribute-Broadcast-To-Network (NAK only).

**J.2.1.1 BVLC-Result: Format**

The BVLC-Result message consists of four fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'00'	BVLC-Result
BVLC Length:	2-octets	L	Length L, in octets, of the BVLL message
Result Code:	2-octets	X'0000'	Successful completion
		X'0010'	Write-Broadcast-Distribution-Table NAK
		X'0020'	Read-Broadcast-Distribution-Table NAK
		X'0030'	Register-Foreign-Device NAK
		X'0040'	Read-Foreign-Device-Table NAK
		X'0050'	Delete-Foreign-Device-Table-Entry NAK
		X'0060'	Distribute-Broadcast-To-Network NAK

**J.2.2 Write-Broadcast-Distribution-Table: Purpose**

This message provides a mechanism for initializing or updating a Broadcast Distribution Table (BDT) in a BACnet Broadcast Management Device (BBMD).

**J.2.2.1 Write-Broadcast-Distribution-Table: Format**

The Write-Broadcast-Distribution-Table message consists of four fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'01'	Write-Broadcast-Distribution-Table
BVLC Length:	2-octets	L	Length L, in octets, of the BVLL message
List of BDT Entries:	N*10-octets		

N indicates the number of entries in the BDT. Each BDT entry consists of the 6-octet B/IP address of a BBMD followed by a 4-octet field called the broadcast distribution mask that indicates how broadcast messages are to be distributed on the IP subnet served by the BBMD. See J.4.3.2.

**J.2.3 Read-Broadcast-Distribution-Table: Purpose**

The message provides a mechanism for retrieving the contents of a BBMD's BDT.

**J.2.3.1 Read-Broadcast-Distribution-Table: Format**

The Read-Broadcast-Distribution-Table message consists of three fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'02'	Read-Broadcast-Distribution-Table
BVLC Length:	2-octets	X'0004'	Length, in octets, of the BVLL message

**J.2.4 Read-Broadcast-Distribution-Table-Ack: Purpose**

This message returns the current contents of a BBMD's BDT to the requester. An empty BDT shall be signified by a list of length zero.

**J.2.4.1 Read-Broadcast-Distribution-Table-Ack: Format**

The Read-Broadcast-Distribution-Table-Ack message consists of four fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'03'	Read-Broadcast-Distribution-Table-Ack
BVLC Length:	2-octets	L	Length L, in octets, of the BVLL message
List of BDT Entries:	N*10-octets		

N indicates the number of entries in the BDT whose contents are being returned.

### **J.2.5 Forwarded-NPDU: Purpose**

This BVLL message is used in broadcast messages from a BBMD as well as in messages forwarded to registered foreign devices. It contains the source address of the original node as well as the original BACnet NPDU.

#### **J.2.5.1 Forwarded-NPDU: Format**

The Forwarded-NPDU message consists of five fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'04'	Forwarded-NPDU
BVLC Length:	2-octets	L	Length L, in octets, of the BVLL message
B/IP Address of Originating Device:			6-octets
BACnet NPDU from Originating Device:			Variable length

### **J.2.6 Register-Foreign-Device: Purpose**

This message allows a foreign device, as defined in J.5.1, to register with a BBMD for the purpose of receiving broadcast messages.

#### **J.2.6.1 Register-Foreign-Device: Format**

The Register-Foreign-Device message consists of four fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'05'	Register-Foreign-Device
BVLC Length:	2-octets	X'0006'	Length, in octets, of the BVLL message
Time-to-Live	2-octets	T	Time-to-Live T, in seconds

The Time-to-Live value is the number of seconds within which a foreign device must re-register with a BBMD or risk having its entry purged from the BBMD's FDT. This value will be sent most significant octet first. See J.5.2.2.

### **J.2.7 Read-Foreign-Device-Table: Purpose**

The message provides a mechanism for retrieving the contents of a BBMD's FDT.

#### **J.2.7.1 Read-Foreign-Device-Table: Format**

The Read-Foreign-Device-Table message consists of three fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'06'	Read-Foreign-Device-Table
BVLC Length:	2-octets	X'0004'	Length, in octets, of the BVLL message

### **J.2.8 Read-Foreign-Device-Table-Ack: Purpose**

This message returns the current contents of a BBMD's FDT to the requester. An empty FDT shall be signified by a list of length zero.

#### **J.2.8.1 Read-Foreign-Device-Table-Ack: Format**

The Read-Foreign-Device-Table-Ack message consists of four fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'07'	Read-Foreign-Device-Table-Ack
BVLC Length:	2-octets	L	Length L, in octets, of the BVLL message
List of FDT Entries:	N*10-octets		

N indicates the number of entries in the FDT whose contents are being returned. Each returned entry consists of the 6-octet B/IP address of the registrant; the 2-octet Time-to-Live value supplied at the time of registration; and a 2-octet value representing the number of seconds remaining before the BBMD will purge the registrant's FDT entry if no re-registration occurs. The time remaining includes the 30-second grace period as defined in Clause J.5.2.3.

### **J.2.9 Delete-Foreign-Device-Table-Entry: Purpose**

This message is used to delete an entry from the Foreign-Device-Table.

#### **J.2.9.1 Delete-Foreign-Device-Table-Entry: Format**

The Delete-Foreign-Device-Table-Entry message consists of four fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'08'	Delete-Foreign-Device-Table-Entry
BVLC Length:	2-octets	X'000A'	Length, in octets, of the BVLL message
FDT Entry:	6-octets		

The FDT entry is the B/IP address of the table entry to be deleted.

### **J.2.10 Distribute-Broadcast-To-Network: Purpose**

This message provides a mechanism whereby a foreign device may cause a BBMD to broadcast a message on all IP subnets in the BBMD's BDT.

#### **J.2.10.1 Distribute-Broadcast-To-Network: Format**

The Distribute-Broadcast-To-Network message consists of four fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'09'	Distribute-Broadcast-To-Network
BVLC Length:	2-octets	L	Length L, in octets, of the BVLL message
BACnet NPDU from Originating Device:			Variable length

### **J.2.11 Original-Unicast-NPDU: Purpose**

This message is used to send directed NPDUs to another B/IP device or router.

#### **J.2.11.1 Original-Unicast-NPDU: Format**

The Original-Unicast-NPDU message consists of four fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'0A'	Original-Unicast-NPDU
BVLC Length:	2-octets	L	Length L, in octets, of the BVLL message
BACnet NPDU:			Variable length

### **J.2.12 Original-Broadcast-NPDU: Purpose**

This message is used by B/IP devices and routers which are not foreign devices to broadcast NPDUs on a B/IP network.

#### **J.2.12.1 Original-Broadcast-NPDU: Format**

The Original-Broadcast-NPDU message consists of four fields:

BVLC Type:	1-octet	X'81'	BVLL for BACnet/IP
BVLC Function:	1-octet	X'0B'	Original-Broadcast-NPDU
BVLC Length:	2-octets	L	Length L, in octets, of the BVLL message

BACnet NPDU: Variable length

### J.3 BACnet/IP Directed Messages


B/IP devices shall communicate directly with each other by using the B/IP address of the recipient. Each NPDU shall be transmitted in a BVLL Original-Unicast-NPDU.

### J.4 BACnet/IP Broadcast Messages

This clause defines how BACnet broadcast messages are managed within a B/IP network.

#### J.4.1 B/IP Broadcast Management, Single IP Subnet


In this case, the B/IP network consists of a single IP subnet. A "local broadcast" shall use the B/IP broadcast address and the NPDU shall be transmitted in a BVLL Original-Broadcast-NPDU message. Because all nodes are on a single IP subnet, such messages will automatically reach all nodes. See Figure J-1.

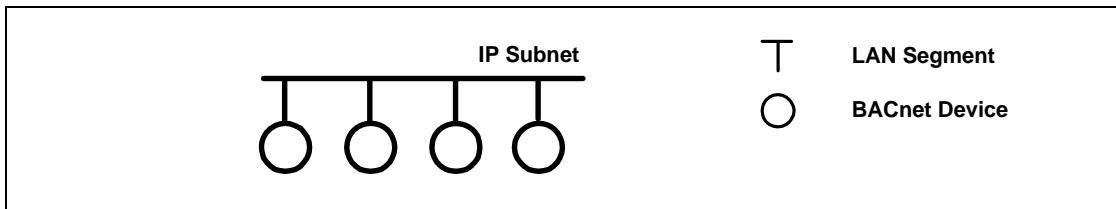

**Figure J-1.** A B/IP network consisting of a single IP subnet.

#### J.4.2 B/IP Broadcast Management, Multiple IP Subnets

In this case, the BACnet/IP network consists of two or more IP subnets. A "local broadcast" shall use the B/IP broadcast address, and the NPDU shall be transmitted in a BVLL Original-Broadcast-NPDU message. Because standard IP routers do not forward such broadcasts, an ancillary device is required to perform this function. This device shall be called a BACnet/IP Broadcast Management Device (BBMD). See Figure J-2.

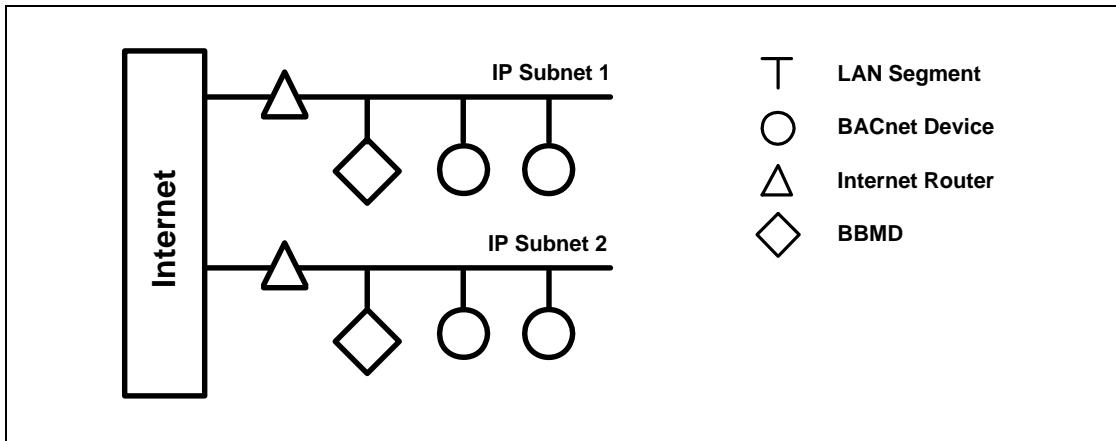

**Figure J-2.** A B/IP network consisting of two IP subnets.

#### J.4.3 BBMD Concept

Each IP subnet that is part of a B/IP network comprised of two or more subnets shall have one, and only one, BBMD. Each BBMD shall possess a table called a Broadcast Distribution Table (BDT) which shall be the same in every BBMD in a given B/IP network. If the BBMD has also been designated to register foreign devices as described below, it shall also possess a Foreign Device Table (FDT).

##### J.4.3.1 Broadcast Distribution

There are two ways that a BBMD may distribute broadcast messages to remote IP subnets. The first is to use IP "directed broadcasts" (also called "one-hop" distribution). This involves sending the message using a B/IP address in which the network

portion of the address contains the subnet of the destination IP subnet and the host portion of the address contains all 1's. While this method of distribution is efficient, it requires that the IP router serving the destination subnet be configured to support the passage of such directed broadcasts.

Since not all IP routers are configured to pass directed broadcasts, a BBMD may be configured to send a directed message to the BBMD on the remote subnet ("two-hop" distribution) which then transmits it using the B/IP broadcast address. Since the use of one-hop distribution requires an IP router configuration that may or may not be possible, while the two-hop method is always available, the choice of which method to use in any given case is a local matter.

#### **J.4.3.2 Broadcast Distribution Table Format**

The BDT consists of one entry for each BBMD within a B/IP network. Each entry consists of the 6-octet B/IP address of the BBMD serving the IP subnet and a 4-octet broadcast distribution mask. If messages are to be distributed on the remote IP subnet using directed broadcasts, the broadcast distribution mask shall be identical to the subnet mask associated with the subnet, i.e., all 1's in the network portion of the 4-octet IP address field and all 0's in the host portion. If messages are to be distributed on the remote IP subnet by sending the message directly to the remote BBMD, the broadcast distribution mask shall be all 1's. The use of the broadcast distribution mask is described in J.4.5.

#### **J.4.4 BBMD Configuration**

The configuration of the BACnet-related capability of a BBMD shall consist of supplying it with a BDT. The table may be supplied by local means or by means of the BVLL Write-Broadcast-Distribution-Table message.

#### **J.4.5 BBMD Operation - Broadcast Distribution**

Upon receipt of a BVLL Write-Broadcast-Distribution-Table message, a BBMD shall attempt to create or replace its BDT, depending on whether or not a BDT has previously existed. If the creation or replacement of the BDT is successful, the BBMD shall return a BVLC-Result message to the originating device with a result code of X'0000'. Otherwise, the BBMD shall return a BVLC-Result message to the originating device with a result code of X'0010' indicating that the write attempt has failed.

Upon receipt of a BVLL Read-Broadcast-Distribution-Table message, a BBMD shall load the contents of its BDT into a BVLL Read-Broadcast-Distribution-Table-Ack message and send it to the originating device. If the BBMD is unable to perform the read of its BDT, it shall return a BVLC-Result message to the originating device with a result code of X'0020' indicating that the read attempt has failed.

Upon receipt of a BVLL Original-Broadcast-NPDU message, a BBMD shall construct a BVLL Forwarded-NPDU message and send it to each IP subnet in its BDT with the exception of its own. The B/IP address to which the Forwarded-NPDU message is sent is formed by inverting the broadcast distribution mask in the BDT entry and logically ORing it with the BBMD address of the same entry. This process produces either the directed broadcast address of the remote subnet or the unicast address of the BBMD on that subnet depending on the contents of the broadcast distribution mask. See J.4.3.2.. In addition, the received BACnet NPDU shall be sent directly to each foreign device currently in the BBMD's FDT also using the BVLL Forwarded-NPDU message.


Upon receipt of a BVLL Forwarded-NPDU message, a BBMD shall process it according to whether it was received from a peer BBMD as the result of a directed broadcast or a unicast transmission. A BBMD may ascertain the method by which Forwarded-NPDU messages will arrive by inspecting the broadcast distribution mask field in its own BDT entry since all BDTs are required to be identical. If the message arrived via directed broadcast, it was also received by the other devices on the BBMD's subnet. In this case the BBMD merely retransmits the message directly to each foreign device currently in the BBMD's FDT. If the message arrived via a unicast transmission it has not yet been received by the other devices on the BBMD's subnet. In this case, the message is sent to the devices on the BBMD's subnet using the B/IP broadcast address as well as to each foreign device currently in the BBMD's FDT. A BBMD on a subnet with no other BACnet devices may omit the broadcast using the B/IP broadcast address. The method by which a BBMD determines whether or not other BACnet devices are present is a local matter.

Upon receipt of a BVLL Distribute-Broadcast-To-Network message from a foreign device, the receiving BBMD shall transmit a BVLL Forwarded-NPDU message on its local IP subnet using the local B/IP broadcast address as the destination address. In addition, a Forwarded-NPDU message shall be sent to each entry in its BDT as described above in the case of the receipt of a BVLL Original-Broadcast-NPDU as well as directly to each foreign device currently in the BBMD's FDT except the originating node. If the BBMD is unable to perform the forwarding function, it shall return a BVLC-Result message to the foreign device with a result code of X'0060' indicating that the forwarding attempt was unsuccessful.

## J.5 Addition of Foreign B/IP Devices to an Existing B/IP Network

### J.5.1 Foreign device definition

A "foreign" device is a BACnet device that has an IP subnet address different from those comprising the BACnet/IP network that the device seeks to join. The foreign device may be a full-time node on the foreign subnet or may be a part-time participant, as would be the case if the device accessed the internet via a SLIP or PPP connection. See Figure J-3.

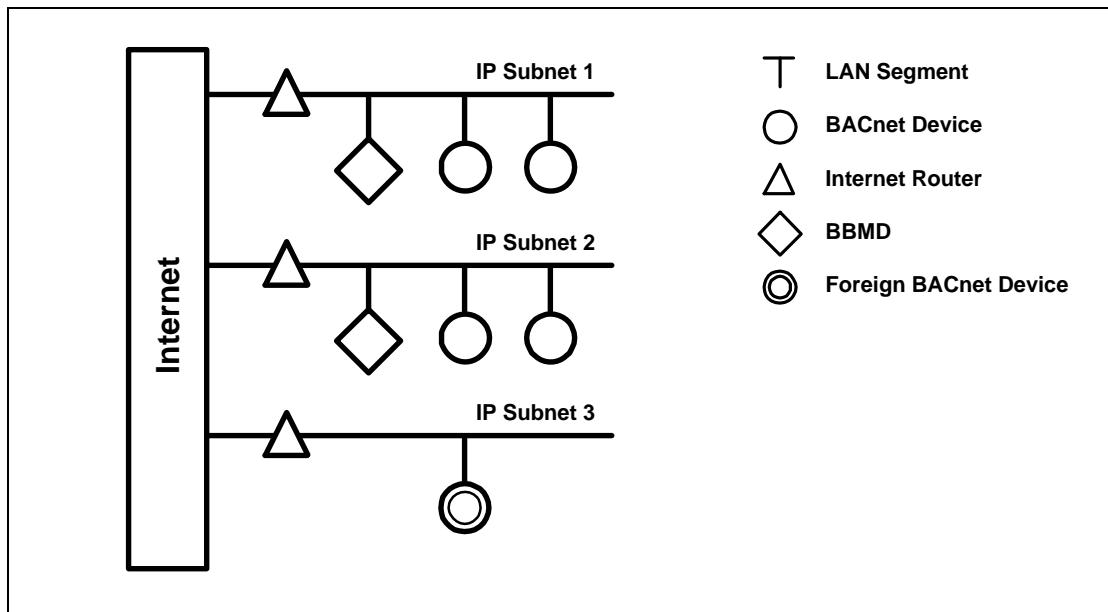

**Figure J-3.** The "foreign" BACnet device on Subnet 3 can register to receive broadcasts from devices on Subnets 1 and 2 by sending a BVLL Register-Foreign-Device message to a BBMD that supports foreign device registration.

### J.5.2 BBMD Operation - Foreign Devices

In order for a foreign device to fully participate in the activities of a B/IP network, the device must register itself with a BBMD serving one of the IP subnets comprising that network. "Full participation" implies the ability to send and receive both directed and broadcast messages. Registration consists of sending a BVLL Register-Foreign-Device message to an appropriate BBMD and receiving a BVLC-Result message containing a result code of X'0000' indicating the successful completion of the registration. Ascertaining the IP address of such a BBMD is a local matter but could involve the use of a domain nameserver or the distribution of a numeric IP address to authorized users. The UDP port X'BAC0' shall be considered the default, but the use of other port values is permitted if required by the local network architecture, e.g., where two B/IP networks share the same physical LAN.

#### J.5.2.1 Foreign Device Table

Each device that registers as a foreign device shall be placed in an entry in the BBMD's Foreign Device Table (FDT). Each entry shall consist of the 6-octet B/IP address of the registrant; the 2-octet Time-to-Live value supplied at the time of registration; and a 2-octet value representing the number of seconds remaining before the BBMD will purge the registrant's FDT entry if no re-registration occurs. The number of seconds remaining shall be initialized to the 2-octet Time-to-Live value supplied at the time of registration plus 30 seconds (see J.5.2.3), with a maximum of 65535.

Two BVLL messages support the maintenance of FDTs and are described in J.5.2.1.1 and J.5.2.1.2.

##### J.5.2.1.1 Use of the BVLL Read-Foreign-Device-Table Message

Upon receipt of a BVLL Read-Foreign-Device-Table message, a BBMD shall load the contents of its FDT into a BVLL Read-Foreign-Device-Table-Ack message and send it to the originating device. If the BBMD is unable to perform the read of its FDT, it shall return a BVLC-Result message to the originating device with a result code of X'0040' indicating that the read attempt has failed.

### J.5.2.1.2 Use of the BVLL Delete-Foreign-Device-Table-Entry Message

Upon receipt of a BVLL Delete-Foreign-Device-Table-Entry message, a BBMD shall search its foreign device table for an entry corresponding to the B/IP address supplied in the message. If an entry is found, it shall be deleted and the BBMD shall return a BVLC-Result message to the originating device with a result code of X'0000'. Otherwise, the BBMD shall return a BVLC-Result message to the originating device with a result code of X'0050' indicating that the deletion attempt has failed.

### J.5.2.2 Use of the BVLL Register-Foreign-Device Message

Upon receipt of a BVLL Register-Foreign-Device message, a BBMD capable of providing foreign device support and having available table entries, shall add an entry to its FDT as described in J.5.2.1 and reply with a BVLC-Result message containing a result code of X'0000' indicating the successful completion of the registration. A BBMD incapable of providing foreign device support shall return a BVLC-Result message containing a result code of X'0030' indicating that the registration has failed.


### J.5.2.3 Foreign Device Table Timer Operation

Upon receipt of a BVLL Register-Foreign-Device message, a BBMD shall start a timer with a value equal to the Time-to-Live parameter supplied plus a fixed grace period of 30 seconds. If, within the period during which the timer is active, another BVLL Register-Foreign-Device message from the same device is received, the timer shall be reset and restarted. If the time expires without the receipt of another BVLL Register-Foreign-Device message from the same foreign device, the FDT entry for this device shall be cleared.

## J.6 Routing Between B/IP and non-B/IP BACnet Networks

### J.6.1 Router Operation

In concept, a router between a B/IP network and a non-B/IP network functions identically to the routers described in Clause 6. See Figure J-4.

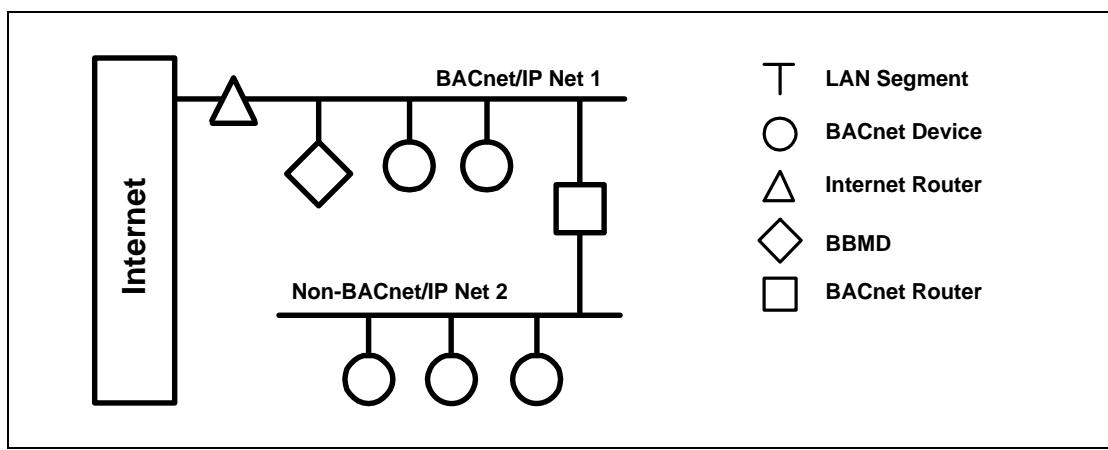

**Figure J-4.** A BACnet router can be used to convey messages between devices on a B/IP network and non-B/IP network using the procedures in Clause 6.

There are two possible differences. First, on the B/IP side, the B/IP address is used in place of the MAC layer address referred to throughout Clause 6. Second, if B/IP and non-B/IP BACnet devices reside on the same physical LAN, then all traffic is typically sent and received through a single physical port. The collection of B/IP devices would, in such a case, have a network number distinct from the network number of the non-B/IP devices. Such a scenario could easily occur on an Ethernet network where some devices are IP-capable while others are not.

## J.7 Routing Between Two B/IP BACnet Networks

Although the foreign registration process provides the ability for remote devices to participate in a particular B/IP network, there may be occasions when it is desirable for two collections of B/IP devices to interoperate more closely. This type of interoperation can only produce results consistent with the assumptions and intent contained in the original BACnet standard if the configuration of the two B/IP networks has been coordinated. For example, it is assumed that Device object identifiers are unique "internetwork wide." If this is not the case, the Who-Is service will produce ambiguous results. Similarly, the Who-Has service may be useless for dynamic configuration applications if multiple instances of objects with identical object identifiers exist.


The BACnet standard also assumes that only a single path exists between devices on different BACnet networks and that this path passes through a BACnet router. The internet's web topology violates this assumption in that, apart from security constraints such as "firewalls", any IP device can communicate directly with any other IP device if it knows the device's IP address.

This clause specifies how B/IP internetworks may be constructed.

### J.7.1 B/IP Internetwork Design Considerations


This standard recognizes that BACnet internetworks containing one or more B/IP networks can be configured in a variety of ways, depending on the requirements of an installation. Any of these configurations shall be deemed to conform to this standard provided they employ the techniques specified in this clause.

- 1) Depending on local traffic conditions and security requirements, all B/IP subnets can be configured into a single B/IP network. This case is dealt with in clauses J.1-6.
- 2) Creating two or more B/IP networks, each with a unique network number, can be useful for limiting the propagation of local broadcast messages and for providing security by confining traffic to a particular geographic or logical area.
- 3) A single device can be configured to provide all the routing for a B/IP internetwork. See Figure J-5. The advantages include: only a single routing table is required; the possibility of creating multiple paths between B/IP networks is eliminated; the resulting star topology is easy to conceptualize. The disadvantages are: there is a single point of failure; a single device could present a traffic bottleneck under heavy load conditions.

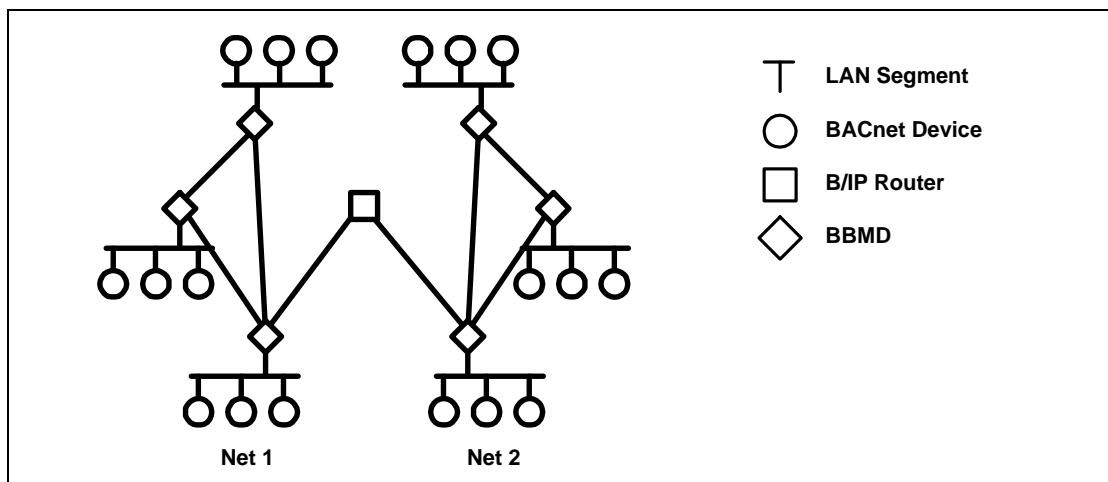

**Figure J-5.** A single B/IP Router can perform all routing for two or more B/IP networks by registering as a foreign device on each network. It is then "directly connected" to each such network and uses a UDP port unique to that network for the receipt of communications from its individual nodes. See J.7.2. The unique UDP port is required to determine a message's origin for the purpose of appending an SNET to the routed packet. Note that the UDP port associated with the B/IP addresses of the non-router nodes remains in general X'BAC0'.

- 4) While the functions of BBMDs as specified in J.4 and of BACnet routers as specified in Clause 6 and J.7.2 are entirely distinct, this standard does not preclude the implementation of BBMD functionality and router functionality in a single physical device. See Figure J-6.

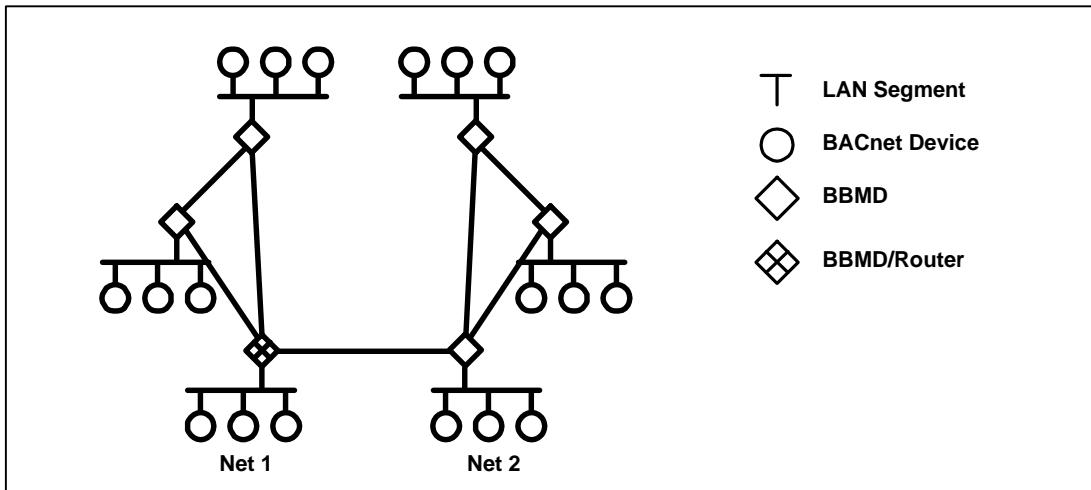

**Figure J-6.** An alternative to the architecture depicted in Figure J-5 is to combine both BBMD and router functionality in the same physical device as explicitly permitted in J.7.1.

### J.7.2 B/IP Routers

B/IP routers adhere to the requirements of Clause 6 with the following differences:

- 1) The physical ports of Clause 6 routers are replaced by logical ports. Each logical port is identified by the unique B/IP address of the port's connection to the B/IP network served by the router.
- 2) The term "directly connected network" in Clause 6 implies a physical LAN connection between a LAN segment and a physical router port. In this clause "directly connected network" is extended to mean any B/IP network from which a router can receive local broadcast or IP multicast messages. Such networks are: the B/IP network on which a router resides by virtue of having an IP network number in common with one of the IP subnets comprising the B/IP network; a B/IP network in which the router participates as a member of an IP multicast group; or a B/IP network in which a router participates by having registered as a foreign device with a BBMD serving that network.
- 3) Networks that are not directly connected are called "remote networks." Remote networks, whether B/IP or non-B/IP, may be reachable by communicating using B/IP with a router serving the remote network.

### J.7.3 B/IP Router Tables

B/IP router tables shall contain the following information for each logical port:

- (a) the B/IP address for this port,
- (b) if the port is to be used to communicate with nodes on a network directly connected by virtue of the router having an IP network number in common with one of the IP subnets comprising the B/IP network, the BACnet network number of the network, else

if the port is to be used to communicate with nodes on a network directly connected by virtue of the router registering as a foreign device with a BBMD, the BACnet network number of the network served by the BBMD and the B/IP address of the BBMD offering foreign device registration,

- (c) a list of network numbers reachable through this port along with the B/IP address of the next router on the path to each network number and the reachability status, as defined in 6.6.1, of each such network.

Because internetworks involving multiple B/IP networks may be more dynamic than traditional BACnet internetworks, implementers of B/IP routers may wish to provide a mechanism whereby specific table entries can be selectively activated and deactivated. The mechanism for accomplishing this is deemed to be a local matter.

#### **J.7.4 B/IP Router Operation**

Upon start-up, each B/IP router shall search its routing table for active entries indicating direct connection via foreign registration with a BBMD. The router shall then proceed to register itself with each such network using the procedures specified in J.5. At the conclusion of all such registrations, the router shall follow the procedure of 6.6.2 in that it shall broadcast an I-Am-Router-To-Network message containing the network numbers of each accessible network except the networks reachable via the network on which the broadcast is being made. Note that networks accessed through a given active UDP port that are not directly connected, but are reachable by means of communication with another B/IP router shall, upon router startup, be deemed to be reachable.

Additional router operations with regard to local and remote traffic shall follow the procedures of Clause 6.

#### **J.8 Use of IP Multicast within BACnet/IP**

BACnet/IP devices that so desire may alternatively use IP multicasting as a method for distributing BACnet broadcast messages, subject to the constraints imposed in this clause. This is accomplished through the use of an IP class D address which is made up of a single multicast group identifier rather than a combination of network and host IDs. Such devices shall be referred to as B/IP-M devices. The use of IP multicasting also requires that devices comprising a multicast group that reside on more than one IP subnet be served by IP routers capable of supporting IP multicast distribution. (See RFC 1112.) Note that all B/IP-M devices must also be capable of processing unicast messages and must each have a unique unicast IP address. All B/IP devices sharing a common IP multicast address should also share a common BACnet network number.

##### **J.8.1 B/IP Multicast (B/IP-M) concept**

For the purposes of BACnet/IP, a B/IP-M group functions logically in the same manner as an IP subnet in the previous clauses. The B/IP multicast group address replaces the B/IP broadcast address for members of the group. The following constraints apply:

1. If the B/IP-M group is part of a BACnet network with B/IP non-multicast devices, there shall be one, and only one, BBMD configured to serve the B/IP-M group devices. A BACnet network comprised solely of B/IP-M devices need not have a BBMD unless foreign devices are to be supported.
2. In order to prevent the receipt of multiple broadcast messages, devices that are in the B/IP-M group and B/IP non-multicast devices may not share the same IP subnet. Note that this does not necessarily preclude them from sharing the same physical LAN if the IP router serving the LAN can support multiple IP subnets.

##### **J.8.2 B/IP-M Use of BVLL Messages**

B/IP-M devices shall use the Original-Unicast-NPDU BVLL message for directed messages to any B/IP device within the BACnet/IP network. B/IP-M devices shall use the Original-Broadcast-NPDU BVLL message for the purpose of transmitting BACnet "local" and "global" broadcasts and shall use the B/IP-M group address as the destination IP address.

##### **J.8.3 B/IP-M BBMD Operation**

BBMDs function as described in J.4.5 except that the BBMD serving the B/IP-M group must also be a member of the group and that the B/IP-M group address is used analogously to the B/IP broadcast address with respect to the B/IP-M group. It is also required that the BDT entry for each BBMD serving a B/IP-M group shall use a broadcast distribution mask of all 1's to force "two-hop" BBMD-to-BBMD broadcast distribution. This is to prevent the multiple receipt of broadcast messages that would occur if the B/IP-M BBMD were on the same IP subnet as any of the B/IP-M devices themselves and a "directed broadcast" were used. The following paragraphs summarize the relevant operations of BBMDs that serve a B/IP-M group:

Upon receipt of an Original-Broadcast-NPDU via its B/IP-M group address, a BBMD shall forward the message to other entries in its BDT (as well as to any devices in its FDT if the BBMD also supports foreign device registration) as described in J.4.5.

Upon receipt of a Forwarded-NPDU from a peer BBMD, the BBMD shall re-transmit the message using the B/IP-M group address (as well as direct it to any devices in its FDT if the BBMD also supports foreign device registration).

Upon receipt of a BVLL Distribute-Broadcast-To-Network message from a foreign device, the receiving BBMD shall transmit a BVLL Forwarded-NPDU message using the B/IP-M group address as the destination address. In addition, a Forwarded-NPDU message shall be sent to each entry in its BDT as described in J.4.5 as well as directly to each foreign device currently in the BBMD's FDT except the originating node. Error processing is as described in J.4.5.

#### **J.9 Sources for Internet Information**

The RFCs referred to in this Annex are available from:

USC/Information Sciences Institute  
4676 Admiralty Way, Suite 1001  
Marina del Rey, CA 90292-6695

or online at: [WWW.ISI.EDU](http://WWW.ISI.EDU).

**ANNEX K - BACnet INTEROPERABILITY BUILDING BLOCKS (BIBBs) (NORMATIVE)**

BACnet Interoperability Building Blocks (BIBBs) are collections of one or more BACnet services. These are prescribed in terms of an "A" and a "B" device. Both of these devices are nodes on a BACnet internetwork. In most cases, the "A" device will act as the user of data (client), and the "B" device will be the provider of this data (server). In addition, certain BIBBs may also be predicated on the support of certain, otherwise optional, BACnet objects or properties and may place constraints on the allowable values of specific properties or service parameters.

**K.1 Data Sharing BIBBs**

These BIBBs prescribe the BACnet capabilities required to interoperably perform the data sharing functions enumerated in 22.2.1.1 for the BACnet devices defined therein.

**K.1.1 BIBB - Data Sharing - ReadProperty-A (DS-RP-A)**

The A device is a user of data from device B.

BACnet Service	Initiate	Execute
ReadProperty	x	

**K.1.2 BIBB - Data Sharing-ReadProperty-B (DS-RP-B)**

The B device is a provider of data to device A.

BACnet Service	Initiate	Execute
ReadProperty		x

**K.1.3 BIBB - Data Sharing-ReadPropertyMultiple-A (DS-RPM-A)**

The A device is a user of data from device B and requests multiple values at one time.

BACnet Service	Initiate	Execute
ReadPropertyMultiple	x	

**K.1.4 BIBB - Data Sharing-ReadPropertyMultiple-B (DS-RPM-B)**

The B device is a provider of data to device A and returns multiple values at one time.

BACnet Service	Initiate	Execute
ReadPropertyMultiple		x

**K.1.5 BIBB - Data Sharing-ReadPropertyConditional-A (DS-RPC-A)**

The A device is a user of data from device B and requests that values be returned based upon specific criteria that are contained in the message.

BACnet Service	Initiate	Execute
ReadPropertyConditional	x	

**K.1.6 BIBB - Data Sharing-ReadPropertyConditional-B (DS-RPC-B)**

The B device is a provider of data to device A based, conditionally, upon the selection criteria in the request from device A.

BACnet Service	Initiate	Execute
ReadPropertyConditional		x

**K.1.7 BIBB - Data Sharing-WriteProperty-A (DS-WP-A)**

The A device sets a value in device B.

BACnet Service	Initiate	Execute
WriteProperty	x	

**K.1.8 BIBB - Data Sharing-WriteProperty-B (DS-WP-B)**

The B device allows a value to be changed by device A.

BACnet Service	Initiate	Execute
WriteProperty		x

**K.1.9 BIBB - Data Sharing-WritePropertyMultiple-A (DS-WPM-A)**

The A device sets multiple values in device B at one time.

BACnet Service	Initiate	Execute
WritePropertyMultiple	x	

**K.1.10 BIBB - Data Sharing-WritePropertyMultiple-B (DS-WPM-B)**

The B device allows multiple values to be changed by device A at one time.

BACnet Service	Initiate	Execute
WritePropertyMultiple		x

**K.1.11 BIBB - Data Sharing-COV-A (DS-COV-A)**

The A device is a user of COV data from device B.

BACnet Service	Initiate	Execute
SubscribeCOV	x	
ConfirmedCOVNotification		x
UnconfirmedCOVNotification		x

Support for subscriptions of a limited lifetime is required, and support for subscriptions of indefinite lifetime is optional.

**K.1.12 BIBB - Data Sharing-COV-B (DS-COV-B)**

The B device is a provider of COV data to device A.

BACnet Service	Initiate	Execute
SubscribeCOV		x
ConfirmedCOVNotification	x	
UnconfirmedCOVNotification	x	

Devices claiming conformance to DS-COV-B shall support a minimum of five concurrent subscriptions. Support for subscriptions of a limited lifetime is required, and support for subscriptions of indefinite lifetime is optional.

**K.1.13 BIBB - Data Sharing-COVP-A (DS-COVP-A)**

The A device is a user of COV data from device B.

BACnet Service	Initiate	Execute
SubscribeCOVProperty	x	
ConfirmedCOVNotification		x
UnconfirmedCOVNotification		x

Support for subscriptions of a limited lifetime is required, and support for subscriptions of indefinite lifetime is optional.

**K.1.14 BIBB - Data Sharing-COVP-B (DS-COVP-B)**

The B device is a provider of COV data of an arbitrary property of a specified object to device A.

BACnet Service	Initiate	Execute
SubscribeCOVProperty		x
ConfirmedCOVNotification	x	
UnconfirmedCOVNotification	x	

Devices claiming conformance to DS-COVP-B shall support a minimum of five concurrent subscriptions. Support for subscriptions of a limited lifetime is required, and support for subscriptions of indefinite lifetime is optional.

**K.1.15 BIBB - Data Sharing-COV-Unsolicited-A (DS-COVU-A)**

The A device processes unsolicited COV data from device B.

BACnet Service	Initiate	Execute
UnconfirmedCOVNotification		x

**K.1.16 BIBB - Data Sharing-COV-Unsolicited-B (DS-COVU-B)**

The B device generates unsolicited COV notifications.

BACnet Service	Initiate	Execute
UnconfirmedCOVNotification	x	

**K.2 Alarm and Event Management BIBBs**

These BIBBs prescribe the BACnet capabilities required to interoperably perform the alarm and event management functions enumerated in Clause 22.2.1.2 for the BACnet devices defined therein.

**K.2.1 BIBB - Alarm and Event-Notification-A (AE-N-A)**

The A device processes notifications about alarms and other events.

BACnet Service	Initiate	Execute
ConfirmedEventNotification		x
UnconfirmedEventNotification		x

Devices claiming conformance to AE-N-A shall be able to process notifications from any standard or proprietary event-generating object of any standard or proprietary event type (excluding the CHANGE\_OF\_LIFE\_SAFETY and/or BUFFER\_READY event types).

**K.2.2 BIBB - Alarm and Event-Notification Internal-B (AE-N-I-B)**

Device B generates notifications about alarms and other events.

BACnet Service	Initiate	Execute
ConfirmedEventNotification	x	
UnconfirmedEventNotification	x	

Devices claiming conformance to AE-N-I-B shall also support either Intrinsic or Algorithmic reporting. Any device that supports the generation of event notifications that require operator acknowledgment shall support AE-ACK-B and AE-INFO-B. Any device that supports the generation of TO-FAULT or TO-OFFNORMAL event notifications shall support AE-INFO-B.

Devices that only support generation of CHANGE\_OF\_LIFE\_SAFETY and/or BUFFER\_READY notifications shall not claim support for this BIBB.

**K.2.3 BIBB - Alarm and Event-Notification External-B (AE-N-E-B)**

Device B contains an Event Enrollment object that monitors values in another device. Device B is capable of generating event notifications for alarm conditions based on value(s) in another device. Devices conforming to this BIBB shall conform to DS-RP-A, AE-N-I-B, and shall support at least 1 Event Enrollment object with an Object\_Property\_Reference property that supports references to properties in objects contained in other devices. Any device that supports the generation of event notifications that require operator acknowledgment shall support AE-ACK-B and AE-INFO-B. Any device that supports the generation of TO-FAULT or TO-OFFNORMAL event notifications shall support AE-INFO-B.

Devices that only support Event Enrollment objects that only support generation of CHANGE\_OF\_LIFE\_SAFETY and/or BUFFER\_READY notifications shall not claim support for this BIBB.

**K.2.4 BIBB - Alarm and Event-ACK-A (AE-ACK-A)**

Device A acknowledges alarm/event notifications.

BACnet Service	Initiate	Execute
AcknowledgeAlarm	x	

**K.2.5 BIBB - Alarm and Event-ACK-B (AE-ACK-B)**

Device B processes acknowledgments of previously transmitted alarm/event notifications.

BACnet Service	Initiate	Execute
AcknowledgeAlarm		x

To support this BIBB the device must also support acknowledgeable alarms.

**K.2.6 BIBB - Alarm and Event-Alarm Summary-A (AE-ASUM-A)**

Device A requests summaries of alarms from device B.

BACnet Service	Initiate	Execute
GetAlarmSummary	x	

#### K.2.7 BIBB - Alarm and Event-Alarm Summary-B (AE-ASUM-B)

Device B provides summaries of alarms device A.

BACnet Service	Initiate	Execute
GetAlarmSummary		x

#### K.2.8 BIBB - Alarm and Event-Enrollment Summary-A (AE-ESUM-A)

Device A requests event enrollments from device B.

BACnet Service	Initiate	Execute
GetEnrollmentSummary	x	

#### K.2.9 BIBB - Alarm and Event-Enrollment Summary-B (AE-ESUM-B)

Device B provides event enrollments to device A.

BACnet Service	Initiate	Execute
GetEnrollmentSummary		x

#### K.2.10 BIBB - Alarm and Event-Information-A (AE-INFO-A)

Device A requests event information from device B.

BACnet Service	Initiate	Execute
GetEventInformation	x	

#### K.2.11 BIBB - Alarm and Event-Information-B (AE-INFO-B)

Device B provides event information to device A.

BACnet Service	Initiate	Execute
GetEventInformation		x

#### K.2.12 BIBB - Alarm and Event-LifeSafety-A (AE-LS-A)

Life safety device A is able to process and acknowledge life safety notifications and is able to request silence and reset operations from life safety device B.

BACnet Service	Initiate	Execute
LifeSafetyOperation	x	
ConfirmedEventNotification		x
UnconfirmedEventNotification		x
AcknowledgeAlarm	x	

#### K.2.13 BIBB - Alarm and Event-LifeSafety-B (AE-LS-B)

Life safety device B is able to generate life safety notifications and is able to process silence and reset operations on its life safety objects.

BACnet Service	Initiate	Execute

LifeSafetyOperation		x
ConfirmedEventNotification	x	
UnconfirmedEventNotification	x	

Devices claiming conformance to AE-LS-B shall support at least one instance of a Life Safety Point or Life Safety Zone object and shall be able to generate ConfirmedEventNotification and UnconfirmedEventNotification service requests describing CHANGE\_OF\_LIFE\_SAFETY event transitions.

Any device that supports the generation of event notifications that require operator acknowledgment shall support AE-ACK-B and AE-INFO-B. Any device that supports the generation of TO-FAULT or TO-OFFNORMAL event notifications shall support AE-INFO-B.

### K.3 Scheduling BIBBs

These BIBBs prescribe the BACnet capabilities required to interoperably perform the scheduling functions enumerated in Clause 22.2.1.3 for the BACnet devices defined therein.

#### K.3.1 BIBB - Scheduling-A (SCHED-A)

The A device manipulates schedules and calendars on the B device. The A device must support the DS-RP-A and DS-WP-A BIBBs.

#### K.3.2 BIBB - Scheduling-Internal-B (SCHED-I-B)

The B device provides date and time scheduling of the values of specific properties of specific objects within the device. In addition to supporting the DS-RP-B and DS-WP-B BIBBs, each device claiming conformance to SCHED-I-B shall also possess at least one Calendar and one Schedule object. Devices claiming conformance to SCHED-I-B shall also support either DM-TS-B or DM-UTC-B.

The Schedule object must support at least 6 entries per day. The List\_of\_Object\_Property\_Reference property shall support at least one entry. The Schedule object must support a non-empty Exception\_Schedule property. The Priority\_For\_Writing property in the Schedule object shall be writable.

#### K.3.3 BIBB - Scheduling-External-B (SCHED-E-B)

The B device provides date and time scheduling of the values of specific properties of specific objects in other devices. Devices claiming conformance to SCHED-E-B shall also support SCHED-I-B and DS-WP-A. The List\_of\_Object\_Property\_References property shall support references to objects in external devices.

### K.4 Trending BIBBs

These BIBBs prescribe the BACnet capabilities required to interoperably perform the trending functions enumerated in Clause 22.2.1.4 for the BACnet devices defined therein.

#### K.4.1 BIBB - Trending-Viewing and Modifying Trends-A (T-VMT-A)

The A device displays trend data from the B device and manipulates trend log collection parameters in the B device.

BACnet Service	Initiate	Execute
ReadRange	x	

#### K.4.2 BIBB - Trending-Viewing and Modifying Trends Internal-B (T-VMT-I-B)

The B device collects the trend log data records in an internal buffer. Each device claiming conformance to T-VMT-I-B must be able to support at least one Trend Log object.

BACnet Service	Initiate	Execute
ReadRange		x

#### **K.4.3 BIBB - Trending-Viewing and Modifying Trends External-B (T-VMT-E-B)**

The B device is capable of trending properties of objects contained in other devices. The B device shall support T-VMT-I-B and DS-RP-A. The Log\_Interval and Log\_DeviceObjectProperty properties must be writable.

The Trend Log objects must be capable of trending REAL, Unsigned, INTEGER, BOOLEAN, Bit String, Enumerated and NULL values.

#### **K.4.4 BIBB - Trending-Automated Trend Retrieval-A (T-ATR-A)**

The A device responds to a notification that a trend log is ready with new data and acquires the new data from the log.

BACnet Service	Initiate	Execute
ConfirmedEventNotification		x
ReadRange	x	

Devices claiming conformance to T-ATR-A must be able to process BUFFER\_READY event notifications generated by Trend Log objects and Event Enrollment objects.

#### **K.4.5 BIBB - Trending-Automated Trend Retrieval-B (T-ATR-B)**

The B device notifies the A device that a trending buffer has acquired a predetermined number of data samples using the BUFFER\_READY event algorithm either intrinsically in the Trend Log object or algorithmically using an Event Enrollment object.

BACnet Service	Initiate	Execute
ConfirmedEventNotification	x	
ReadRange		x

Devices claiming conformance to T-ATR-B must support the Trend Log object.

#### **K.4.6 BIBB - Trending-Viewing and Modifying Multiple Values-A (T-VMMV-A)**

The A device displays data from a Trend Log Multiple object in the B device and manipulates Trend Log Multiple object collection parameters in the B device.

BACnet Service	Initiate	Execute
ReadRange	x	

#### **K.4.7 BIBB - Trending-Viewing and Modifying Multiple Values Internal-B (T-VMMV-I-B)**

The B device collects the multiple-data log records in an internal buffer. Each device claiming conformance to T-VMMV-I-B shall be able to support at least one Trend Log Multiple object.

BACnet Service	Initiate	Execute
ReadRange		x

#### **K.4.8 BIBB - Trending-Viewing and Modifying Multiple Values External-B (T-VMMV-E-B)**

The B device is capable of logging multiple properties of multiple objects contained in other devices. The B device shall support T-VMMV-I-B and DS-RPM-A. The Log\_Interval and Log\_DeviceObjectProperty properties shall be writable.

#### **K.4.9 BIBB - Trending-Automated Multiple Value Retrieval-A (T-AMVR-A)**

The A device responds to a notification that a Trend Log Multiple object is ready with new data and acquires the new data from the log.

BACnet Service	Initiate	Execute
ConfirmedEventNotification		x
ReadRange	x	

Devices claiming conformance to T-AMVR-A must be able to process BUFFER\_READY event notifications generated by Trend Log Multiple objects and Event Enrollment objects.

#### K.4.10 BIBB - Trending-Automated Multiple Value Retrieval-B (T-AMVR-B)

The B device notifies the A device that a Trend Log Multiple object's buffer has acquired a predetermined number of data samples using the BUFFER\_READY event algorithm either intrinsically in the Trend Log Multiple object or algorithmically using an Event Enrollment object.

BACnet Service	Initiate	Execute
ConfirmedEventNotification	x	
ReadRange		x

Devices claiming conformance to T-AMVR-B shall support the Trend Log Multiple object.

### K.5 Device and Network Management BIBBs

These device management BIBBs prescribe the BACnet capabilities required to interoperably perform the device management functions enumerated in Clause 22.2.1.5 for the BACnet devices defined therein. The network management BIBBs prescribe the BACnet capabilities required to interoperably perform network management functions.

#### K.5.1 BIBB - Device Management-Dynamic Device Binding-A (DM-DDB-A)

The A device seeks information about device attributes of other devices and interprets device announcements.

BACnet Service	Initiate	Execute
Who-Is	x	
I-Am		x

#### K.5.2 BIBB - Device Management-Dynamic Device Binding-B (DM-DDB-B)

The B device provides information about its device attributes and responds to requests to identify itself.

BACnet Service	Initiate	Execute
Who-Is		x
I-Am	x	

#### K.5.3 BIBB - Device Management-Dynamic Object Binding-A (DM-DOB-A)

The A device seeks address information about objects.

BACnet Service	Initiate	Execute
Who-Has	x	
I-Have		x

**K.5.4 BIBB - Device Management-Dynamic Object Binding-B (DM-DOB-B)**

The B device provides address information about its objects upon request.

BACnet Service	Initiate	Execute
Who-Has		x
I-Have	x	

**K.5.5 BIBB - Device Management-DeviceCommunicationControl-A (DM-DCC-A)**

The A device exercises communication control over the B device.

BACnet Service	Initiate	Execute
DeviceCommunicationControl	x	

Support for requests of a limited duration is required, and support for requests of an indefinite duration is optional.

**K.5.6 BIBB - Device Management-DeviceCommunicationControl-B (DM-DCC-B)**

The B device responds to communication control exercised by the A device.

BACnet Service	Initiate	Execute
DeviceCommunicationControl		x

Support for requests of a limited duration is required, and support for requests of an indefinite duration is optional.

**K.5.9 BIBB - Device Management-Text Message-A (DM-TM-A)**

The A device initiates the transmission of text messages. The interpretation and subsequent processing of the messages is a local matter.

BACnet Service	Initiate	Execute
ConfirmedTextMessage	x <sup>1</sup>	
UnconfirmedTextMessage	x <sup>1</sup>	

<sup>1</sup> The A device must support initiation of at least one of these services.

**K.5.10 BIBB - Device Management-Text Message-B (DM-TM-B)**

The B device processes the text messages.

BACnet Service	Initiate	Execute
ConfirmedTextMessage		x
UnconfirmedTextMessage		x

**K.5.11 BIBB - Device Management-TimeSynchronization-A (DM-TS-A)**

The A device provides time synchronization to B devices. The time parameter contained in the service request contains the date and time as determined by the clock in the device issuing the service request. Normally this will be "local time," i.e., the time in the local time zone corrected for daylight savings time as appropriate.

BACnet Service	Initiate	Execute
TimeSynchronization	x	

Devices claiming conformance to DM-TS-A must support the Time\_Synchronization\_Recipients property of the Device object.

**K.5.12 BIBB - Device Management-TimeSynchronization-B (DM-TS-B)**

The B device interprets time synchronization messages from the A device.

BACnet Service	Initiate	Execute
TimeSynchronization		x

Devices claiming conformance to DM-TS-B must support the Local\_Time and Local\_Date properties of the Device object.

**K.5.13 BIBB - Device Management-UTCTimeSynchronization-A (DM-UTC-A)**

The A device provides time synchronization to B devices. The time parameter contained in the service request contains "Coordinated Universal Time" (UTC). For all practical purposes, UTC is synonymous with Greenwich Mean Time, the time at the zero or Greenwich meridian.

BACnet Service	Initiate	Execute
UTCTimeSynchronization	x	

Devices claiming conformance to DM-TS-A must support the Time\_Synchronization\_Recipients property of the Device object.

**K.5.14 BIBB - Device Management-UTCTimeSynchronization-B (DM-UTC-B)**

The B device interprets time synchronization messages from the A device.

BACnet Service	Initiate	Execute
UTCTimeSynchronization		x

Devices claiming conformance to DM-TS-B must support the Local\_Time, Local\_Date, UTC\_Offset, and Daylight\_Saving\_Status properties of the Device object.

**K.5.15 BIBB - Device Management-ReinitializeDevice-A (DM-RD-A)**

The A device is authorized to reinitialize the B device.

BACnet Service	Initiate	Execute
ReinitializeDevice	x	

Devices claiming conformance to DM-RD-A shall be able to initiate ReinitializeDevice requests containing the Password parameter. Devices claiming conformance to DM-RD-A are only required to support the WARMSTART and COLDSTART service choices.

**K.5.16 BIBB - Device Management-ReinitializeDevice-B (DM-RD-B)**

The B device performs reinitialization requests from the A device. The optional password field shall be supported.

BACnet Service	Initiate	Execute
ReinitializeDevice		x

Devices claiming conformance to DM-RD-B are only required to support the WARMSTART and COLDSTART service choices.

**K.5.17 BIBB - Device Management-Backup and Restore-A (DM-BR-A)**

The A device reads the files that contain the configuration of the B device and writes those files to the B device should it need to be restored to its previously backed-up state.

BACnet Service	Initiate	Execute

AtomicReadFile	x	
AtomicWriteFile	x	
CreateObject	x	
ReinitializeDevice	x	

Devices claiming conformance to DM-BR-A are required to support all service choices of the ReinitializeDevice service. In addition, devices claiming conformance to DM-BR-A shall support the device A capabilities as described in Clause 19.1.

#### K.5.18 BIBB - Device Management-Backup and Restore-B (DM-BR-B)

The B device provides its configuration file to the A device and allows the A device to write this file to recover its configuration in the event of a failure.

BACnet Service	Initiate	Execute
AtomicReadFile		x
AtomicWriteFile		x
ReinitializeDevice		x

Devices claiming conformance to DM-BR-B are required to support all service choices of the ReinitializeDevice service. In addition, devices claiming conformance to DM-BR-B shall support the device B capabilities as described in Clause 19.1. Once a Restore procedure has been initiated on the device, the Read\_Only property of configuration File objects shall contain the value FALSE and the File\_Size property of the configuration File objects shall be writable if the size of the configuration file can change based on the device's configuration.

If the configuration file objects are not guaranteed to exist once a Restore procedure has been initiated, then the device must support execution of the CreateObject service.

#### K.5.19 BIBB - Device Management-Restart-A (DM-R-A)

The A device processes restart notifications.

BACnet Service	Initiate	Execute
UnconfirmedCOVNotification		x

#### K.5.20 BIBB - Device Management-Restart-B (DM-R-B)

The B device informs the A device(s) each time it restarts.

BACnet Service	Initiate	Execute
UnconfirmedCOVNotification	x	

Devices claiming conformance to DM-R-B shall support the Last\_Restart\_Reason, Restart\_Notification\_Recipients, and Time\_Of\_Device\_Restart properties of the Device object.

#### K.5.21 BIBB - Device Management-List Manipulation-A (DM-LM-A)

Many BACnet object types have properties that are lists of a particular datatype. The A device can add and remove list elements in properties of objects in the B device.

BACnet Service	Initiate	Execute
AddListElement	x	
RemoveListElement	x	

#### K.5.22 BIBB - Device Management-List Manipulation-B (DM-LM-B)

The B device responds to requests to add or remove list elements.

BACnet Service	Initiate	Execute

AddListElement		x
RemoveListElement		x

**K.5.23 BIBB - Device Management-Object Creation and Deletion-A (DM-OCD-A)**

BACnet allows object instances to be dynamically created and deleted. The A device may dynamically create and delete the object types supported by the B device.

BACnet Service	Initiate	Execute
CreateObject	x	
DeleteObject	x	

**K.5.24 BIBB - Device Management-Object Creation and Deletion-B (DM-OCD-B)**

The B device creates and deletes object instances based on requests from the A device. The object types whose dynamic creation and deletion is supported shall be enumerated in the Standard Object Types Supported section of device B's PICS.

BACnet Service	Initiate	Execute
CreateObject		x
DeleteObject		x

**K.5.25 BIBB - Device Management-Virtual Terminal-A (DM-VT-A)**

The A device initiates a virtual terminal session and exchanges data with the B device.

BACnet Service	Initiate	Execute
VT-Open	x	
VT-Close	x	x
VT-Data	x	x

**K.5.26 BIBB - Device Management-Virtual Terminal-B (DM-VT-B)**

The B devices permits the establishment of a virtual terminal session and exchanges data with the A device.

BACnet Service	Initiate	Execute
VT-Open		x
VT-Close	x	x
VT-Data	x	x

**K.5.27 BIBB - Network Management-Connection Establishment-A (NM-CE-A)**

The A device commands a half-router to establish and terminate connections as needed for communication with other devices.

BACnet Network Layer Message	Initiate	Execute
Establish-Connection-To-Network	x	
Disconnect-Connection-To-Network	x	

**K.5.28 BIBB - Network Management-Connection Establishment-B (NM-CE-B)**

The B device executes commands to establish and terminate connections as needed.

BACnet Network Layer Message	Initiate	Execute
Establish-Connection-To-Network		x
Disconnect-Connection-To-Network		x

**K.5.29 BIBB - Network Management-Router Configuration-A (NM-RC-A)**

The A device may query and change the configuration of routers and half-routers.

BACnet Network Layer Message	Initiate	Execute
Who-Is-Router-To-Network	x	
I-Am-Router-To-Network		x
I-Could-Be-Router-To-Network		x
Initialize-Routing-Table	x	
Initialize-Routing-Table-Ack		x

**K.5.30 BIBB - Network Management-Router Configuration-B (NM-RC-B)**

The B device responds to router management commands and must meet the requirements for BACnet Routers as stated in Clause 6.

BACnet Network Layer Message	Initiate	Execute
Who-Is-Router-To-Network	x	x
I-Am-Router-To-Network	x	x
Initialize-Routing-Table		x
Initialize-Routing-Table-Ack	x	

**ANNEX L - DESCRIPTIONS AND PROFILES OF STANDARDIZED BACnet DEVICES (NORMATIVE)**

(This annex is part of this Standard and is required of its use.)

This annex provides descriptions of six "standardized" types of BACnet devices. Any device that implements all the required BACnet capabilities for a particular device type and interoperability area may claim to be a device of that particular type. Devices may also provide additional capabilities and shall indicate these capabilities in their PICS. The devices defined herein are: BACnet Operator Workstation, BACnet Building Controller, BACnet Advanced Application Controller, BACnet Application Specific Controller, BACnet Smart Actuator, and BACnet Smart Sensor.

**L.1 BACnet Operator Workstation (B-OWS)**

The B-OWS is the operator's window into a BACnet system. While it is primarily used for the operation of a system, it may be used for configuration activities that are beyond the scope of this standard. It is not intended to perform direct digital control. It enables the specification of the following:

## Data Sharing

- Ability to provide the values of any of its BACnet objects
- Archival storage of data
- Presentation of data (i.e., reports and graphics)
- Ability to monitor the value of all BACnet object types, including all required and optional properties
- Ability to modify setpoints and parameters

## Alarm and Event Management

- Operator notification and presentation of event information
- Alarm acknowledgment by operators
- Alarm summarization
- Adjustment of alarm limits
- Adjustment of alarm routing

## Scheduling

- Modification of schedules
- Display of the start and stop times (schedule) of scheduled devices

## Trending

- Modification of the parameters of a trend log
- Display and archive of trend data

## Device and Network Management

- Ability to respond to queries about its status
- Ability to respond to requests for information about any of its objects
- Display of information about the status of any device on the BACnet internetwork
- Ability to silence a device on the network that is transmitting erroneous data
- Ability to synchronize the time in devices across the BACnet internetwork
- Ability to cause a remote device to reinitialize itself
- Ability to backup and restore the configuration of other devices
- Ability to command half-routers to establish and terminate connections

**L.2 BACnet Building Controller (B-BC)**

A B-BC is a general-purpose, field-programmable device capable of carrying out a variety of building automation and control tasks. It enables the specification of the following:

## Data Sharing

- Ability to provide the values of any of its BACnet objects
- Ability to retrieve the values of BACnet objects from other devices
- Ability to allow modification of some or all of its BACnet objects by another device

- Ability to modify some BACnet objects in other devices

#### Alarm and Event Management

- Generation of alarm / event notifications and the ability to direct them to recipients
- Maintain a list of unacknowledged alarms / events
- Notifying other recipients that the acknowledgment has been received
- Adjustment of alarm / event parameters

#### Scheduling

- Ability to schedule output actions, both in the local device and in other devices, both binary and analog, based on date and time

#### Trending

- Collection and delivery of (time, value) pairs

#### Device and Network Management

- Ability to respond to queries about its status
- Ability to respond to requests for information about any of its objects
- Ability to respond to communication control messages
- Ability to synchronize its internal clock upon request
- Ability to perform re-initialization upon request
- Ability to upload its configuration and allow it to be subsequently restored
- Ability to command half-routers to establish and terminate connections

### L.3 BACnet Advanced Application Controller (B-AAC)

A B-AAC is a control device with limited resources relative to a B-BC. It may be intended for specific applications and supports some degree of programmability.

#### Data Sharing

- Ability to provide values for any of its BACnet objects upon request
- Ability to allow modification of some or all of its BACnet objects by another BACnet device

#### Alarm and Event Management

- Generation of limited alarm and event notifications and the ability to direct them to recipients
- Tracking acknowledgments of alarms from human operators
- Adjustment of alarm parameters

#### Scheduling

- Ability to schedule actions in the local device based on date and time

#### Trending

- No requirement

#### Device and Network Management

- Ability to respond to queries about its status
- Ability to respond to requests for information about any of its objects
- Ability to respond to communication control messages
- Ability to synchronize its internal clock upon request
- Ability to perform re-initialization upon request

### L.4 BACnet Application Specific Controller (B-ASC)

A B-ASC is a controller with limited resources relative to a B-AAC. It is intended for use in a specific application and supports limited programmability. It enables specification of the following:

#### Data Sharing

- Ability to provide the values of any of its BACnet objects
- Ability to allow modification of some or all of its BACnet objects by another device

Alarm and Event Management

- No requirement

Scheduling

- No requirement

Trending

- No requirement

Device and Network Management

- Ability to respond to queries about its status
- Ability to respond to requests for information about any of its objects
- Ability to respond to communication control messages

## L.5 BACnet Smart Actuator (B-SA)

A B-SA is a simple control device with limited resources; it is intended for specific applications.

Data Sharing

- Ability to provide values for any of its BACnet objects upon request
- Ability to allow modification of some or all of its BACnet objects by another device

Alarm and Event Management

- No requirement

Scheduling

- No requirement

Trending

- No requirement

Device and Network Management

- Ability to respond to queries about its status
- Ability to respond to requests for information about any of its objects

## L.6 BACnet Smart Sensor (B-SS)

A B-SS is a simple sensing device with very limited resources.

Data Sharing

- Ability to provide values for any of its BACnet objects upon request

Alarm and Event Management

- No requirement

Scheduling

- No requirement

Trending

- No requirement

Device and Network Management

- Ability to respond to queries about its status
- Ability to respond to requests for information about any of its objects

## L.7 Profiles of the Standard BACnet Devices

The following tables indicate which BIBBs must be supported by each device type for each interoperability area.

	<b>B-OWS</b>	<b>B-BC</b>	<b>B-AAC</b>	<b>B-ASC</b>	<b>B-SA</b>	<b>B-SS</b>
<b>Data Sharing</b>	DS-RP-A,B	DS-RP-A,B	DS-RP-B	DS-RP-B	DS-RP-B	DS-RP-B
	DS-RPM-A	DS-RPM-A,B	DS-RPM-B	DS-WP-B	DS-WP-B	
	DS-WP-A	DS-WP-A,B	DS-WP-B			
	DS-WPM-A	DS-WPM-B	DS-WPM-B			

	<b>B-OWS</b>	<b>B-BC</b>	<b>B-AAC</b>	<b>B-ASC</b>	<b>B-SA</b>	<b>B-SS</b>
<b>Alarm &amp; Event</b>	AE-N-A	AE-N-I-B	AE-N-I-B			
<b>Mgmt</b>	AE-ACK-A	AE-ACK-B	AE-ACK-B			
	AE-INFO-A	AE-INFO-B	AE-INFO-B			
	AE-ESUM-A	AE-ESUM-B				

	<b>B-OWS</b>	<b>B-BC</b>	<b>B-AAC</b>	<b>B-ASC</b>	<b>B-SA</b>	<b>B-SS</b>
<b>Scheduling</b>	SCHED-A	SCHED-E-B	SCHED-I-B			

	<b>B-OWS</b>	<b>B-BC</b>	<b>B-AAC</b>	<b>B-ASC</b>	<b>B-SA</b>	<b>B-SS</b>
<b>Trending</b>	T-VMT-A	T-VMT-I-B				
	T-ATR-A	T-ATR-B				

	<b>B-OWS</b>	<b>B-BC</b>	<b>B-AAC</b>	<b>B-ASC</b>	<b>B-SA</b>	<b>B-SS</b>
<b>Device &amp;</b>	DM-DDB-A,B	DM-DDB-A,B	DM-DDB-B	DM-DDB-B	DM-DDB-B <sup>1</sup>	DM-DDB-B <sup>1</sup>
<b>Network Mgmt</b>	DM-DOB-B	DM-DOB-B	DM-DOB-B	DM-DOB-B	DM-DOB-B <sup>1</sup>	DM-DOB-B <sup>1</sup>
	DM-DCC-A	DM-DCC-B	DM-DCC-B	DM-DCC-B		
	DM-TS-A	DM-TS-B or DM-UTC-B	DM-TS-B or DM-UTC-B			
	DM-UTC-A					
	DM-RD-A	DM-RD-B	DM-RD-B			
	DM-BR-A	DM-BR-B				
	NM-CE-A	NM-CE-A				

<sup>1</sup> Not required if the device is a BACnet MS/TP Slave.

**ANNEX M – GUIDE TO EVENT NOTIFICATION PRIORITY ASSIGNMENTS (INFORMATIVE)**

[This annex is not part of this standard. It is merely informative and does not contain requirements for conformance to the standard.]

The Alarm and Event Priorities and Network Priorities defined in 13.4.1 broadly categorize the alarm and event notification priorities. This annex provides examples of various alarms and events that could be assigned into these categories.

Table M-1 extends Table 13-5 by adding semantic meaning to the priority classifications. The subsequent narrative details the classifications and provides examples of various alarm and event priorities in an interoperable system.

**Table M-1. Message Groups Priorities**

Message Group	Priority Range	Network Priority	Brief Description
Life Safety	00 – 31	Life Safety Message	Notifications related to an immediate threat to life, safety or health such as fire detection or armed robbery
Property Safety	32 - 63	Life Safety Message	Notifications related as an immediate threat to property such as forced entry
Supervisory	64 - 95	Critical Equipment Message	Notifications related to improper operation, monitoring failure (particularly of Life Safety or Property Safety monitoring), or monetary loss
Trouble	96 - 127	Critical Equipment Message	Notifications related to communication failure (particularly of Life Safety or Property Safety equipment)
Miscellaneous Higher Priority Alarm and Events	128 - 191	Urgent Message	Higher-level notifications related to occupant discomfort, normal operation, normal monitoring, or return to normal
Miscellaneous Lower Priority Alarm and Events	192 - 255	Normal Message	Lower-level notification related to occupant discomfort, normal operation, normal monitoring, or return to normal.

**M.1 Life Safety Message Group (0 – 31)**

This message group includes any event report related to an immediate threat to life, safety or health. Examples include fire detection, armed robbery and medical emergency.

**M.1.1 Life Safety Message Group Examples**

Criteria for membership in a particular life safety message group vary from jurisdiction to jurisdiction. The examples below are intended to clarify the intent of the grouping and are not meant to be prescriptive.

<u>Event</u>	<u>Description/Examples</u>
Reliable Fire Alarms	Fire alarm events produced by reliable fire alarm detection devices. Examples might include smoke detectors and heat detectors.
Life Safety Process Alarms	A process or equipment alarm that indicates an immediate threat to life, safety or health belongs at this priority. Examples might include carbon monoxide or explosive vapor detection and toxic chemical release.
Fire Alarms Requiring Verification	Fire alarm events requiring verification report. Examples might include pull stations and alarmed fire exit doors. This category is separated from reliable fire alarm because of the potential for false alarms caused by vandals or environmental contamination.
Medical Alarms	Immediate threats to life or health due to medical emergencies. Examples might include heart attack or stroke alarm and falls with injuries.

Hold Up And Duress Alarms	Potential threats to life, safety or health due to criminal activity belong at this priority. Examples might include armed robbery, kidnapping, and bomb threats.
Panic Alarms	Any condition requiring immediate outside intervention to prevent or reduce threats to life, safety, or health.
Life Safety PreAlarm Alerts	Conditions that are likely to become full-fledged Life Safety threats momentarily or tentative detection of Life Safety threats. Examples include fire prealarm or toxic gas nearing the alarm level.
Life Safety Return To Normal	Reporting or recording of returns to normal after a Life Safety Alarm or Alert. Examples include resetting a fire pull station or discontinuing a medical alarm.

### M.2 Property Safety Message Group (32 – 63)

Any event report related as an immediate threat to property belongs in this group. Example events include forced entry, unlocked doors, and equipment above the allowed operating temperature.

#### M.2.1 Property Safety Message Group Examples

<u>Event</u>	<u>Description/Examples</u>
Burglar Alarms and Forced Door Alarms	Improper intrusion into a secure area where there is potential for property damage or theft. Examples include motion detected in an unoccupied space, locked door forced open, and broken exterior glass.
Security Alarms	Potential intrusion or unauthorized occupant alarms. Examples include interior door improperly opened or person without proper ID.
Watchman Tour Alarms	Alarms related to a predefined watch tour or other manual property supervision not being properly conducted. Examples include watchman late to station and watchman station out of order.
Property Process Alarms	Any process or equipment alarm that indicates a direct threat to property not covered elsewhere. Examples include freeze alarm and low duct pressure with danger of collapse.
Door Held Open Alarms	Alarms related to a door or other opened items that were previously opened properly and should now be closed and locked, but are not. An example would be a door propped open past normal business hours.
Property Safety Return To Normal	Reporting or recording of returns to normal after a Property Safety Alarm. Examples include locking door held open and resetting a burglar alarm.

### M.3 Supervisory Message Group (64 – 95)

Any event report related to improper operation, monitoring failure (particularly of Life Safety or Property Safety monitoring), or monetary loss belongs in this group. Example events include fire sprinkler valve shut off, communication failure and excessive energy use.

#### M.3.1 Supervisory Message Group Examples

<u>Event</u>	<u>Description/Examples</u>
Fire Supervision (tamper)	Fire alarm and suppression components that are supervised against tampering. Examples include sprinkler valve shutoff and uninterruptable power supply disable.

Security Supervision (tamper)	Security and burglar alarm components that are supervised against tampering. Examples include box tamper switches and uninterruptable power supply disable.
Energy Alarms	Loss of energy management control likely to result in monetary loss. Examples include failure to control electrical demand within allowed limits and failure of incoming energy sources such as gas or steam.
Early Warning Alerts	Warnings used to eliminate future problems by initiating early corrective action. Examples include security video recording tape low and standby generator fuel tank not full.
Energy Warnings	Problems with energy management control that could result in monetary loss if left uncorrected. Examples include failure of loads to shed for automated electrical demand control, or reductions in available incoming energy sources such as low gas pressure.
Supervisory Return To Normal	Reporting or recording of return to normal after a Supervisory off-normal report. An example is a fire sprinkler valve returning to normal.

#### M.4 Trouble Message Group (96 – 127)

Any event report related to communication failure (particularly of Life Safety or Property Safety equipment) belongs in this group.

##### M.4.1 Trouble Message Group Examples

<u>Event</u>	<u>Description/Examples</u>
Fire Trouble (equipment failure)	Failure of fire alarm and suppression components. Examples include loss of communication with fire alarm components or failure of a smoke detector.
Security and Burglar Trouble (equipment failure)	Failure of security and burglar alarm components. Examples include loss of communication with security components or failure of an intrusion detector.
Communication Equipment Failure Trouble	Failure of equipment used for communication (but not directly related to fire or security applications). Examples include Local Area Network component failure, telephone system component failure, and Building Automation System communication failure.
Process Trouble	Problems with general processes or equipment not operating correctly. Examples include HVAC interlocks failing to operate, equipment not responding to commands, and control programs not operating.
Energy Warnings	Problems with energy management control that could result in monetary loss if left uncorrected. Examples include failure of loads to shed for automated electrical demand control, or reductions in available incoming energy sources such as low gas pressure.
Communication Equipment Warning Trouble	Warnings or troubles with equipment used for communication (but not directly related to fire or security applications). Examples include degraded throughput, excessive message retries, or low buffer warnings.
Trouble Return To Normal	Reporting or recording of return to normal after a Trouble off-normal report. An example is communication returning to normal.

## M.5 Miscellaneous Higher Priority Message Group (128 – 191)

Any higher-level event report related to occupant discomfort, normal operation, normal monitoring, or return to normal belongs in this group. Example events include normal event logging, room temperature above setpoint and test result logging.

### M.5.1 Miscellaneous Higher Priority Group Examples

<u>Event</u>	<u>Description/Examples</u>
Equipment And Industrial Supervision	Used for miscellaneous supervision of equipment or processes that are not likely to result in risks to people or property, or in loss of money.
Comfort Alarm	Reporting of temperature, humidity, noise levels or other conditions that will cause occupant discomfort with accompanying loss of productivity and discontent can be reported using this priority. Examples include high or low occupied space temperature, high or low humidity, and high carbon dioxide levels.
System Status Normal	Simple status changes to the normal or passive states that do not imply any problem or required action. Examples include preprogrammed or timed changes, and preprogrammed triggers operating properly.
Comfort Normal	Reporting of occupied space temperature, humidity, noise levels, or other conditions returning to their normal values after a comfort alarm or warning.

## M.6 Miscellaneous Lower Priority Message Group (192 – 255)

Any lower-level event report related to occupant discomfort, normal operation, normal monitoring, or return to normal belongs in this group. Example events include normal event logging, room temperature above setpoint, return to normal events and test result logging.

### M.6.1 Miscellaneous Lower Priority Group Examples

<u>Event</u>	<u>Description/Examples</u>
System Events	Simple system events that only require simple logging or noting for future reference can use this priority. Examples include access granted or denied and normal watchtour station reached.
System Status Active	Simple status changes to the active state that do not imply any problem or required action can use this priority. Examples include preprogrammed or timed changes and preprogrammed triggers operating properly.
Comfort Warning	Reporting of temperature, humidity, noise levels, or other conditions that are out of the usual range and could eventually lead to occupant discomfort with accompanying loss of productivity and discontent can be reported using this priority. Examples include high or low occupied space temperature, high or low humidity, and high carbon dioxide levels.
Test and Diagnostic Events	Reporting of normal test results or normal diagnostics such as fire alarm walk test events can use this priority.

**ANNEX N - BACnet/WS WEB SERVICES INTERFACE (NORMATIVE)**

(This annex is part of this standard and is required for its use.)

This annex defines a data model and Web service interface for integrating facility data from disparate data sources with a variety of business management applications. The data model and access services are generic and can be used to model and access data from any source, whether the server owns the data locally or is acting as a gateway to other standard or proprietary protocols.

Implementations of the services described in this standard shall conform to the Web Services Interoperability Organization (WS-I) Basic Profile 1.0, which specifies the use of Simple Object Access Protocol (SOAP) 1.1 over Hypertext Transfer Protocol -- HTTP/1.1 (RFC2616) and encodes the data for transport using Extensible Markup Language (XML) 1.0 (Second Edition), which uses the datatypes and the lexical and canonical representations defined by the World Wide Web Consortium XML Schema.

Clients may determine the version of the BACnet/WS standard that a server implements by querying a specific numerical value as defined in Clause N.9. The numerical value for the version described in this document is 1.

There are three distinct usages of datatype names in this standard. Datatype names beginning with a lowercase letter, such as "string", and "nonNegativeInteger", refer to datatypes defined by the XML Schema standard. Datatype names beginning with an uppercase letter, such as "Real" or "Multistate" refer to the value types defined in Clause N.8.9. Datatype names used in a "typical language binding signature" are arbitrary and are for illustrative purposes only.

### **N.1 Data Model**

The data structures and methods used to store information internally in a BACnet/WS server are a local matter. However, in order to exchange that information using Web services, this standard establishes a minimal set of requirements for the structuring and association of data exchanged with a BACnet/WS server.

A node is the fundamental primitive data element in the BACnet/WS data model. Nodes are arranged into a hierarchy in the data model. The topmost node in the hierarchy is known as the root node. A root node has children, but no parent. Every other node has a single parent and may optionally have children. The network visible state of a node is exposed as a collection of attributes.

Any node may have a value. The possible types for a node's value are limited to the primitive datatypes "String", "OctetString", "Real", "Integer", "Multistate", "Boolean", "Date", "Time", "DateTime", and "Duration". Nodes that have a value may also have other attributes related to that value, such as minimum, writable, etc.

An attribute is a single aspect or quality of a node, such as its value or its writability. Every node exposes a collection of attributes. Some attributes are required for all nodes, and some are conditionally required based on the value of other attributes. Some of the attributes are localizable and may return different values based on an option in a service request. Attributes are described more fully in Clause N.8.

Attributes may themselves have attributes that define a single aspect or quality of the original attribute. This standard supports this recursion syntactically, but does not define or require that any of the standardized attributes have attributes themselves at this time. Servers may provide proprietary attributes for any node or attribute at any level in the hierarchy.

A path is a character string that is used to identify a node or an attribute of a node. The hierarchy of nodes is reflected in a path as a hierarchy of identifiers arranged as a delimited series, similar to the arrangement of identifiers in a Uniform Resource Locator (URL) for the World Wide Web. A path like "/East Wing/AHU #5/Discharge Temp" identifies a node, and a path like "/East Wing/AHU #5/Discharge Temp:InAlarm" identifies the InAlarm attribute of that node. Paths are described more fully in Clause N.2.

To allow for an arbitrary number of logical arrangements of nodes, a single node may logically appear to be in more than one place in the hierarchy through the use of a reference node. Reference nodes may be used to build alternate logical arrangements of nodes since the children of a reference node may differ from that of its referent node. Reference nodes are described more fully in Clause N.4.

The arrangement of data nodes into hierarchies and the naming of those nodes is generally a local matter. However, this standard also defines a number of standardized nodes with standardized names and locations that allow clients to obtain basic information about the server itself. These standardized nodes are described more fully in Clause N.9.

## N.2 Paths

A path is a character string that is used to identify a node or a specific attribute. The hierarchy of nodes is reflected in a path as a hierarchy of node identifiers arranged as a delimited series separated by forward slash ("/") characters. Similarly, the hierarchy of attributes is reflected in a path as a hierarchy of attribute identifiers arranged as a delimited series separated by colon (":") characters.

Certain services accept an optional attribute path on the end of a node path. If an attribute path is not specified to those services, the Value attribute is assumed. The attribute path is separated from the node path with a colon.

The concatenated path form is:

[/node-identifier[/node-identifier]...][:attribute-identifier[:attribute-identifier]...]

where square brackets indicate optionality and “...” indicates repetition of the previous element.

Examples: "/aaa"    "/aaa/bbb"    "/aaa/bbb/ccc:Description"    "/aaa/bbb/ccc:Description:.foo"

All identifiers are case sensitive and shall be of non-zero length. Identifiers are not localizable and are not affected by the "locale" or "canonical" service options. A path with no node identifier ("") refers to the root of the hierarchy, and ":attribute-identifier" is the syntax for accessing the attributes of the root node.

Only printable characters may be used to construct path identifiers, and, as an additional restriction, all characters equivalent to the ANSI X3.4 "control characters" (those less than X'20') are not allowed, and neither are any characters equivalent to the following ANSI X3.4 characters:    / \ : ; | < > \* ? [ ] { }

Node identifiers beginning with a period (".") character and attribute identifiers not beginning with a period (".") character are reserved for use by ASHRAE. This restriction separates node and attribute identifiers that are defined by this standard from those that are defined by the server, perhaps based on user input. Server defined node identifiers shall not start with a period, so that "/aaa/.first-floor" is invalid but "/aaa/first-floor" is valid. Conversely, all server defined attribute identifiers shall start with a period, so that "/aaa:MyNewAttribute" is invalid but "/aaa:.MyNewAttribute" is valid. This asymmetry is based on the expected common usage where most node identifiers will be server defined and most attributes are standard, making the use of periods the exception rather than the norm.

Space characters are allowed and are significant in identifiers; however, it is recommended that identifiers should not begin or end with space characters.

## N.3 Normalized Points

Most building automation protocols, both standard and proprietary, have the concept of organizing data into "points" that have "values." In addition to their values, points often contain data such as "point description" or "point is in alarm." But these data may be named, structured, and/or accessed differently in different protocols.

To ensure that a Web service client can retrieve data without knowing these naming and access-method details, this standard defines "normalized points." This means that the common attributes of points available in the majority of building data models are exposed using a common set of names.

In this data model, nodes with a NodeType (see Clause N.8.5) of "Point" are required to have a value and have a common collection of attributes that may be used to map to these data from other protocols. Some data may not be available in some protocols, in which case either the normalized attribute is absent, or it has a reasonable default value.

#### N.4 Reference Notes

A node that refers to another node somewhere else in the hierarchy is termed a "reference node." The node to which it refers is its "referent node". A reference node reflects most of the attributes of its "referent node", including its type, so that for most purposes, the reference node is indistinguishable from its referent node. The use of reference nodes allows a node's data to appear in more than one place in the hierarchy.

Multiple hierarchies may be supported on a server. Automated discovery of those hierarchies may be done by starting at the root, or any other starting point, and using the Children attribute to enumerate the available nodes in a structured fashion. Two or more paths in different hierarchies may express different relationships for a single object. To denote this, and so that apparent duplicates of an object can be discerned, a node can refer to another node somewhere else in the hierarchy. It is arbitrary and a local matter which node is the referent node and which is the reference node. Multiple reference nodes can point to the same referent node, or alternately can daisy chain, one to one another, ultimately leading to a referent they all have in common which is not a reference node. There shall be at least one referent node which is not a reference node, as it is forbidden to create a loop of references.

One network-visible distinction between a reference node and its referent node is in the presence of a Reference attribute in the reference node. This attribute contains a path to the referent node. The Reference attribute is present in a node if and only if that node is a reference node.

In most cases, the distinction of whether a node is a reference node or not is unnecessary. But in those cases where the client needs to make a distinction, it can check for the presence of a Reference and act accordingly. A client can also determine, for any given node, if there are reference nodes that refer to it. This may be done with the Aliases attribute.

Except for the attributes Children, Aliases, Attributes, and Reference, any attribute read from the reference node will have the same value as when read from the referent node. The reason for this is that, when references are used to create different relationships between nodes, the nodes are not fundamentally changed by that association. Therefore, only the attributes involved in expressing the relationships between nodes, namely Children, Aliases, Attributes, and Reference, are expected to be different depending on which path was used to access the node. The Attributes node only changes as needed to reflect the changing presence or absence of the Children, Aliases or Reference attributes. Otherwise, the contents of the Attributes attribute is unchanged.

A reference node may point to another reference node, but it is not allowed to refer to itself, nor is it allowed to create a loop of references.

For example, the paths "/Geographic/East Wing/Air Handler 5/Discharge Temp" and "/Cooling/Chiller Manager/Air Handler 5/Terminal Box 345-A" express two different relationships for Air Handler 5. If the geographic relationship was modeled first, then for the cooling distribution relationship, the node identified by "/Cooling/Chiller Manager/Air Handler 5" would be a reference node with its Reference Attribute containing the path "/Geographic/East Wing/Air Handler 5".

#### N.5 Localization

BACnet/WS supports the creation of products that are specifically designed for particular regions of the world. The designation of a natural language, paired with a set of notational customs, such as date and number formats, is referred to as a "locale". A BACnet/WS server may support multiple locales simultaneously, and several of the attributes of a node are accessible for different locales (see Clauses N.11.4, N.11.5, and N.11.6). For example, in a server that supports multiple locales, the DisplayName attribute can be used to get a user interface presentation name for the node in more than one language. Specifying a locale in a service also allows the client to request dates, times and numbers in a format appropriate to that locale.

#### N.6 Security

BACnet/WS does not define its own authentication mechanism; rather, this standard specifies the use of lower level Web service authentication methods defined by other standards. Some servers might not support or require any authentication at all. Others might provide authentication by means of a simple username and password using HTTP Basic authentication (defined by section 2 of HTTP Authentication: Basic and Digest Access Authentication) secured through an SSL (Secure Sockets Layer, defined by SSL Protocol Version 3.0) or TLS (Transport Layer Security, defined by TLS Protocol Version 1.0) connection. Some servers may be secured through public key certificates or more advanced options that are currently in development or yet to be defined.

For specification simplicity and increased interoperability, servers shall claim support for one or both of the following authentication and authorization mechanisms: "None"; "HTTP Basic through SSL or TLS".

In addition to authentication, some forms of authorization can also occur before the Web services defined by this standard are invoked. For example, some Web services host environments (e.g., Application Servers) can be configured to limit users' access to certain services based on HTTP path or SOAP method.

The content and format of errors returned from these lower level authentication and authorization methods varies and is not specified by this standard since the services defined by this standard were never invoked.

When a Web service request successfully passes through the lower levels, and the services defined by this standard are invoked, additional authentication and authorization operations may be performed by those services and the content and format of errors resulting from such operations are fully defined by this standard. The configuration of authentication and authorization policies, at any level, is a local matter.

## N.7 Sessions

The Web services defined by this standard are stateless and establish no sessions between clients and servers. There is no requirement for any information to be retained on the server from one service invocation to the next. Service options such as "locale" that could be held in a session on the server are instead maintained by the client in a service options string that is provided to the server for each service invocation.

## N.8 Attributes

A node is exposed to Web services as a collection of named attributes. There are two forms of attributes: those that are a primitive datatype, and those that are an array of primitive datatypes. Only the Value attribute is writable with the services defined by this standard.

While some attributes are specified as optional, the presence of those attributes on a given node is not expected to change dynamically. Clients can assume that the collection of available attributes will remain relatively stable in operation and normally will be changed only by a reconfiguration or reprogramming of the server and not in the normal course of operation. For example, even though the default value for the InAlarm attribute is "false", the InAlarm attribute is not expected to be absent when the node is not in alarm and present only when the node is in alarm. Generally, if an attribute can have a value that is different from its default during the normal course of operation, then the attribute should be present at all times.

The server may provide proprietary attributes for any node or attribute anywhere in the hierarchy of the data model. Proprietary attributes shall begin with a period ('.') character to distinguish them from standard attributes. The datatype and set of possible values for these attributes are not defined by this standard.

### N.8.1 Primitive Attributes

The datatype of a primitive attribute in this standard is defined using its XML Schema datatype name, such as "boolean", "nonNegativeInteger", and "double". See Clause N.10 for details of how these are encoded for use in Web services.

The datatype of some attributes, such as Value and Minimum, is dependent on the value of the ValueType attribute. This is more fully described in Clause N.8.9.

### N.8.2 Enumerated Attributes

Some primitive attributes are enumerations. Enumerated attributes are of datatype XML Schema "string", but the set of allowed values is defined by this standard. Additionally, some enumerated attributes are localizable (see Clause N.5). In that case, the non-localized set of values is defined by this standard, but the localized strings are a local matter.

### N.8.3 Array Attributes

Array attributes are attributes that contain an array of primitive values. Each element in the array has the same primitive datatype. The contents of an array attribute may be accessed either as an array of separate elements or as a single concatenation of all the elements.

The datatype of an array element in this standard is defined using its XML Schema datatype name, such as "boolean", "nonNegativeInteger", and "double". See Clause N.10 for details of how these are encoded for use in Web services.

When array attributes are accessed with a service that returns an array, such as getArray, the array elements are returned as individual strings. However, when accessed with a service that returns a single string, such as getValue, the array values are concatenated into a single string by separating the array elements with a ';' (semicolon) character, for example, "high;medium;low". The values of the individual array elements are not permitted to contain semicolons.

The server shall retain a constant order for the elements of an array attribute. Clients of services such as getArrayRange can therefore depend on this behavior to read the array an element at a time.

#### N.8.4 Attribute Summary

Some attributes are always required, and some are conditionally required, based on criteria outlined in the following table. The datatype referred to in the table is an XML Schema datatype name. See Clause N.10 for more information on encoding for Web services. Attributes that are not listed as Localizable are never affected by the "locale" service option (see Clause N.11.4 ) and are always encoded in their non-localized canonical form (see Clause N.11.6).

**Table N-1.** Attribute Summary

Attribute Identifier	Datatype	Array	Enum-erated	Local-izable	Presence
"NodeType"	string	No	Yes	No	Required
"NodeSubtype"	string	No	No	Yes	Optional
"DisplayName"	string	No	No	Yes	Optional
"Description"	string	No	No	Yes	Optional
"ValueType"	string	No	Yes	No	Required
"Value"	(varies - see N.8.9)	No	No	Yes	Required if ValueType is not "None"
"Units"	string	No	Yes	Yes	Required if ValueType is "Real" or "Integer"
"Writable"	boolean	No	No	No	Required if ValueType is not "None"
"InAlarm"	boolean	No	No	No	Optional
"Minimum"	(varies - see N.8.9)	No	No	Yes	Optional
"Maximum"	(varies - see N.8.9)	No	No	Yes	Optional
"Resolution"	(varies - see N.8.9)	No	No	Yes	Optional
"MinimumLength"	nonNegativeInteger	No	No	No	Optional and only present if ValueType is "String"
"MaximumLength"	nonNegativeInteger	No	No	No	Optional and only present if ValueType is "String"
"IsMultiLine"	boolean	No	No	No	Optional
"Attributes"	string	Yes	No	No	Required
"WritableValues"	string	Yes	No	Yes	Required if ValueType is "Multistate" or "Boolean" and Writable is true
"PossibleValues"	string	Yes	No	Yes	Required if ValueType is "Multistate" or "Boolean"
"Overridden"	boolean	No	No	No	Optional
"ValueAge"	double (seconds)	No	No	Yes	Optional
"Aliases"	string	Yes	No	No	Required if there are reference nodes referring to this node (see Clause N.4)
"Children"	string	Yes	No	No	Optional
"Reference"	string	No	No	No	Present if and only if the node is a reference node (see Clause N.4)
"HasHistory"	boolean	No	No	No	Required if ValueType is not "None"
"SinglyWritableLocales"	string	Yes	No	No	Present if and only if ValueType is "String" and Writable is true
"HasDynamicChildren"	boolean	No	No	No	Optional

## N.8.5 NodeType

This required attribute indicates the general classification of a node. It is intended as a hint to a client application about the contents of a node, and is not intended to convey an exact definition. The list of values for this attribute is not extensible. Further refinement of classification is provided by the NodeSubtype attribute. The allowable values for this attribute are:

```
{"Unknown", "System", "Network", "Device", "Functional", "Organizational", "Area", "Equipment",
"Point", "Collection", "Property", "Other"}
```

The "Unknown" type may be used for data that originated in another source and for which no type information is known. The "System" type may be used to designate an entire mechanical system. The "Network" type may be used to represent a communications network, and the "Device" type could be used to represent a physical device on that network. The "Functional" type can be used to represent a single system component such as a control module or a logical component such as a function block. The "Organizational" type is intended to represent business concepts such as departments or people. The "Area" type represents a geographical concept such as a campus, building, floor, etc. A "Point" represents a single point of data, either a physical input or output of a control or monitoring device, or a software calculation or configuration setting. An "Equipment" type may be used to represent a single piece of equipment that may be a collection of "Points". A "Collection" is just a generic container used to group things together such as a collection of references to all space temperatures in a building. The "Property" type is intended to model data that is logically part of the parent node. The "Other" type is used for everything that does not fit into one of these broad categories.

## N.8.6 NodeSubtype

This optional attribute is a string of printable characters whose content is not restricted. It provides a more specific classification of the node. For example, when the NodeType attribute has a value of "Area", the NodeSubtype attribute could have a value such as "Campus", "Building", or "Floor". This attribute may be localized, possibly returning different locale-appropriate values when a "locale" service option is specified.

## N.8.7 DisplayName

This required attribute is a string of printable characters whose content is not restricted. It is used to provide a short (10-30 character) descriptive name or title for display to humans in user interfaces. It should be localized if localization is supported, returning possibly different locale-appropriate values when a "locale" service option is specified. A client may retrieve this attribute in any locale the server supports for use in creating multilingual displays. The values of the DisplayName attributes do not need to be unique among sibling nodes.

A DisplayName attribute may be different from the path identifier used to access the node. For example, for the node identified by the path "/Building 12/Room 225", the DisplayName could be "Bob's Office" in one locale and "Bureau de Bob" in another locale, or it could just be "Room 225" in all locales.

## N.8.8 Description

This optional attribute is a string of printable characters whose content is not restricted. This attribute may be localized, possibly returning different locale-appropriate values when a "locale" service option is specified.

## N.8.9 ValueType

This required attribute indicates the datatype of the Value attribute and attributes restricting the Value attribute. If the node has no value, then this attribute shall have the value "None". The list of values for this attribute is not extensible. The allowable values for this attribute are:

```
{"None", "String", "OctetString", "Real", "Integer", "Multistate", "Boolean", "Date", "Time", "DateTime", "Duration"}
```

The "None" type is used when the node does not have a value. The "String" type is used for nodes that have character string values that are intended to be human readable. An "OctetString" is used to contain arbitrary binary data that is typically not human readable. A "Real" is a floating point value, for example 75.6. An "Integer" is for values that are expressed in whole numbers, for example, 1234. A "Multistate" is a value that is a choice from a set of named states, for example, {"high", "medium", "low"}. A "Boolean" is a choice between exactly two named states, such as "on" and "off", one of which is considered true and the other false. A "Date" is used to represent values that are calendar dates. A "Time" is used to represent

a time of day. A "DateTime" is used to represent an exact moment in time, specifying both a date and a time. A "Duration" represents a time span, such as "5 seconds."

The representation of all value types other than "None" and "OctetString" may be affected by the "locale" service option if the server supports localization for a particular locale or locales. See Clauses N.5 and N.11.4.

The effect of this attribute on the datatype of Value and related attributes is summarized in the following table. The datatypes referred to in the table are XML Schema datatype names. See Clause N.10 for more information on encoding of Web services. Attributes whose datatype is listed as n/a in the table shall not be present in the node.

**Table N-2. Effect of ValueType Attribute**

ValueType Attribute Value	Value Attribute Datatype	Minimum Attribute Datatype	Maximum Attribute Datatype	Resolution Attribute Datatype
"None"	n/a	n/a	n/a	n/a
"String"	string	n/a	n/a	n/a
"OctetString"	base64Binary	n/a	n/a	n/a
"Real"	double	double	double	double
"Integer"	integer	integer	integer	integer
"Multistate"	string	n/a	n/a	n/a
"Boolean"	boolean	n/a	n/a	n/a
"Date"	date	date	date	integer (days)
"Time"	time	time	time	double (seconds)
"DateTime"	dateTime	dateTime	dateTime	double (seconds)
"Duration"	double (seconds)	double (seconds)	double (seconds)	double (seconds)

### N.8.10 Value

This optional attribute represents the value of the node. The datatype of this attribute is indicated by the ValueType attribute. The Value attribute is present if and only if the value of the ValueType attribute is not "None". When the ValueType attribute of the node is "String" or "Multistate", then the values of this attribute may be localized based on the "locale" service option. See Clause N.11.4.

### N.8.11 Units

This optional attribute defines the engineering units for the Value attribute of the node. If the ValueType attribute is "Real" or "Integer", then this attribute is required to be present, but may have the value of "no-units". This attribute may optionally be present for other values of the ValueType attribute.

This attribute's value is available in two forms. If the "canonical" service option is false, then the value of this attribute is a string whose contents are not restricted and may be appropriate to the requested locale. If the "canonical" service option is true, then the value of this attribute is restricted to be exactly equal to one of the enumeration identifiers, such as "degrees-Celsius", "inches-of-water", etc., which are defined by the ASN.1 production for BACnetEngineeringUnits in Clause 21.

This attribute is extensible to support units other than those defined by this standard. In the case where the units of the node's value does not match one of the units defined in this standard, the value returned for this attribute when the "canonical" service option is true shall be "other", and the value returned when the "canonical" service option is false shall be a string whose contents are not restricted and may be appropriate to the requested locale.

### N.8.12 Writable

This optional attribute indicates whether the Value attribute is writable through Web services. This attribute shall be present if and only if the Value attribute is present.

### N.8.13 InAlarm

This optional attribute indicates whether this node is "in alarm" or not. The meaning of "in alarm" is a local matter. If the concept of "in alarm" is not appropriate to this node, then this attribute shall not be present.

**N.8.14 Minimum**

This optional attribute indicates the minimum value of the Value attribute. The datatype of this attribute is defined in Clause N.8.9.

**N.8.15 Maximum**

This optional attribute indicates the maximum value of the Value attribute. The datatype of this attribute is defined in Clause N.8.9.

**N.8.16 Resolution**

This optional attribute indicates the smallest change that can be represented in the value of the Value attribute. The datatype of this attribute is defined in Clause N.8.9.

**N.8.17 MinimumLength**

This optional attribute indicates the minimum length, in characters, for the value of the Value attribute when the ValueType attribute is equal to "String".

**N.8.18 MaximumLength**

This optional attribute indicates the maximum length, in characters, for the value of the Value attribute when the ValueType attribute is equal to "String".

**N.8.19 IsMultiLine**

This optional attribute indicates that the value of the Value attribute, when the ValueType attribute is equal to "String", is intended to be capable of containing multiple lines of text. The value might not actually contain multiple lines at any given time, and it is not intended that IsMultiLine change dynamically based on the contents of the value. This attribute is primarily used as a hint to a user interface to display or edit the text in a manner capable of supporting multiple lines.

If the value contains multiple lines, the lines are separated by the character equivalent to the ANSI X3.4 control character known as "new line" or "line feed" (X'0A'). In all cases, the Value attribute is returned as a single string since the Value attribute is not an array attribute.

If IsMultiLine is missing or false, the presence of, acceptance of, or rejection of "new line" characters is a local matter.

**N.8.20 Attributes**

This required attribute is an array containing all of the names of the attributes present in this node.

**N.8.21 WritableValues**

This optional attribute is an array containing all of the string values that may be written to the Value attribute of a node whose ValueType is equal to "Multistate" or "Boolean".

**N.8.22 PossibleValues**

This optional attribute is an array containing all of the possible string values for the Value attribute of a node whose ValueType is equal to "Multistate" or "Boolean". For nodes that have a ValueType attribute equal to "Boolean", the first entry in the array corresponds to "true", and the second entry corresponds to "false".

**N.8.23 Overridden**

This optional attribute indicates that the value of the Value attribute has been overridden by some means. For physical inputs or outputs, this shall mean that the Value attribute is no longer tracking changes to the physical input or that the physical output is no longer reflecting changes made to the Value attribute.

**N.8.24 ValueAge**

This optional attribute indicates the time, in seconds, since the time when the value of the Value attribute was last successfully updated in the server. Caching is permitted in gateways; this attribute shall indicate the age of the cached value.

**N.8.25 Aliases**

This optional attribute contains the collection of paths that identify reference nodes that refer to this node.

**N.8.26 Children**

This optional attribute is an array that contains the collection of identifiers for the children of this node on a given path. Each of these identifiers can be used to construct a new path to a child node according to the rules set forth in Clause N.2. Note that the child identifiers specified by this attribute do not start with a '/' character, so when constructing a new path to a child node, the '/' separator will need to be used between the original path and the child identifier.

Absence of this attribute shall indicate that the node has no children. Therefore, if the node has children, this attribute is required to be present. If the node has no children, this attribute shall either be absent or present and empty.

**N.8.27 Reference**

This optional attribute is present if and only if the node is a reference node. The value of this attribute is a path to a referent node. See Clause N.4.

**N.8.28 HasHistory**

This optional attribute indicates that there are historical records for this node. Clients may use this to determine if the getHistoryPeriodic is applicable to this node.

**N.8.29 SinglyWritableLocales**

This optional attribute is an array that contains the collection of locales that can be used with the writeSingleLocale service option to set individual localized values for a String node. This attribute is present if and only if the ValueType attribute equals "String" and the Writable attribute is true. The collection of singly writable locales shall be a subset of the collection returned by the getSupportedLocales service.

If the server supports writing values for multiple locales on a given String node, then the SinglyWritableLocales attribute shall contain all of the locales which may be individually written and retained.

If a String node does not support the writing of individual values for different locales, then it is a local matter as to whether the server shall return one of its supported locales or an empty array for this attribute.

If the server declares multiple locales in SinglyWritableLocales and those locales are individually written to with separate values using the writeSingleLocale service option, then the server shall retain those values separately and return the appropriate value, based on the locale service option, when the node is subsequently read.

It is a local matter as to how these values are stored and whether individual storage is preallocated for each singly writable locale or if space is allocated only when separate values are needed. Note that when writing, if the writeSingleLocale service option is false, the logical behavior is that all writable locales are written simultaneously and a server with dynamic allocation may take that opportunity to revert to having only one copy of the string value since all the writable locales will contain the same value.

**N.8.30 HasDynamicChildren**

This optional attribute indicates that the node has a dynamic collection of children that are expected to change over time. If this attribute is missing or false, then clients can assume that the children nodes are relatively stable and are changed by a reconfiguration or reprogramming of the server and not in the normal course of operation. If this attribute is true, then clients should assume that the children nodes may change at any time and should reread the Children attribute as needed.

## N.9 Standard Nodes

While the arrangement of data nodes into hierarchies and the naming of those nodes is generally a local matter, this standard also defines a number of standardized nodes with standardized names and locations that allow clients to obtain basic information about the server. These standard nodes all have names beginning with a period (".") character to distinguish them from other nodes in the server whose presence, structure and behavior is not defined by this standard.

The locations, names, types, and presence requirements of the standard nodes are summarized in the following table.

**Table N-3. Standard Nodes**

Node Path	ValueType	NodeType	Presence	Meaning of the Value
/.sysinfo	"None"	"Other"	Required	The /.sysinfo node is just a container for the following nodes; it has no value
/.sysinfo/.vendor-name	"String"	"Other"	Required	The name of the vendor of this server (unrestricted contents)
/.sysinfo/.model-name	"String"	"Other"	Required	The model name and/or number of this server (unrestricted contents)
/.sysinfo/.software-version	"String"	"Other"	Required	The version/revision of the software running in this server (unrestricted contents)
/.sysinfo/.standard-version	"Integer"	"Other"	Required	The version of the standard that the server is implementing, as defined in the prolog to this Annex.

## N.10 Encodings

This clause defines how data is encoded for use in the Web services defined by this standard.

### N.10.1 Canonical Form

This standard defines a canonical form for attribute values to allow for unambiguous machine processing. The localized forms are more suited for presentation to humans, and the canonical forms are more suited for parsing and processing by machines.

The datatypes defined for the various attributes in Clause N.8.4 are XML Schema datatypes. The XML Schema standard ("XML Schema Part 2: Datatypes") defines a "lexical representation" and a "canonical representation" for each of these datatypes. The "canonical form" defined by this standard is equal to one of the XML Schema representations, selected according to the following table. All attributes not indicated as "Localizable" in Clause N.8.4 shall always be encoded in their canonical form.

**Table N-4.** Examples of Localized and Canonical Forms

XML Schema Datatype	XML Schema encoding rule used for the BACnet/WS Canonical Form	Example value in BACnet/WS Localized Form	Corresponding value in BACnet/WS Canonical Form
double	XML Schema "Lexical Representation"	"7,345.23" or "7 345,23"	"7345.23" or "7.34523E3"
boolean	XML Schema "Canonical Representation"	"On" or "Run"	"true"
integer	XML Schema "Canonical Representation"	"7,345" or "7 345"	"7345"
date	XML Schema "Lexical Representation"	"13-Aug-2005" or "8-13-2005" or "13/08/05"	"2005-08-13"
time	XML Schema "Canonical Representation"	"2:03:04 PM EST" or "14:03:04 EST"	"19:03:04Z"
dateTime	XML Schema "Canonical Representation"	"2:03:04 PM 13-Aug-2005 EST"	"2005-08-13T19:03:04Z"
base64Binary	XML Schema "Lexical Representation"	(no Localized Form)	"ZWcgawW/hZ+UuLi4="

## N.10.2 Service Parameters

Web service toolkits (software libraries) typically provide "language bindings" that provide a mapping between the native formats of data values in memory and the encoded format used on the wire in a Web service call.

Many of the services defined by this standard have service parameters (function arguments and return values) that are polymorphic. For example, the same service can be used to return a ValueAge attribute, which is of datatype double, and a Writable attribute, which is of datatype boolean. To accomplish this polymorphism without using complex datatypes on the wire, the Web service method signatures of these services defines these parameters to be the XML Schema datatype "string".

Because these polymorphic service parameters are all declared to be of XML Schema datatype "string", the language bindings will bind all of these parameters to the native representation of a character string.

The information in this standard, combined with the information provided by the ValueType attribute, together give the client all the information it needs to unambiguously map between a polymorphic service parameter and a native format.

The mapping between the canonical form of an attribute value and a polymorphic service parameter string follows the rules defined by the XML Schema standard for encoding datatypes for use in XML instance documents. The result of following these rules is simply that the same sequence of characters is sent on the wire for a polymorphic parameter as would be sent if that parameter had been declared to be of the specific datatype being encoded.

For example: The "Start" service parameter of the getHistoryPeriodic service is declared with a specific XML Schema datatype of "dateTime". The characters sent on the wire for this parameter would be in the form "2004-06-27T19:44Z". In contrast, the return parameter for the getValue service is declared to be an XML Schema datatype of "string". However, if the getValue service is used to read the Value attribute for a node whose ValueType attribute is "DateTime", the characters sent on the wire for the return parameter would also be in the form "2004-06-27T19:44Z".

The mechanism for, and the configuration of, the mapping between the non-canonical (localized) form of an attribute value and a polymorphic service parameter string, such as localized date formats, is a local matter.

## N.11 Service Options

Some services accept service options that modify their behavior or their return values.

Individual options are specified in string form as simply "option-name" or "option-name=option-value". For example, "readback", or "locale=en-UK". When multiple options are combined into a single string, they are separated by a semicolon, such as "readback;locale=en-UK". White space is significant and shall not be stripped during parsing. The option-value is not constrained with the exception that it shall not contain a semicolon.

The '=' character and option-value may be omitted for boolean options. If a boolean option name is present without an option-value, then it assumes the value "true". Options with a default value of "true" will have to be explicitly set to "false". If an option-name is specified more than once in the string, the last one takes precedence.

The strings used for option-name and option-value are not subject to the effects of the "locale" and "canonical" options. The option names are from the fixed set defined in this standard. The "Datatype" referred to in the following table is the XML Schema datatype name. This datatype defines the canonical format for the option value when represented as a string.

**Table N-5. Service Options**

Option Name	Datatype	Default if Not Specified
"readback"	boolean	False
"errorString"	string	(see Clause <b>Error! Reference source not found.</b> )
"errorPrefix"	string	empty string
"locale"	string	varies based on server configuration
"writeSingleLocale"	boolean	false
"canonical"	boolean	False
"precision"	nonNegativeInteger	6
"noEmptyArrays"	boolean	False

### N.11.1 readback

This option causes services that set a value or values to attempt to read back the value or values just written and return the results.

### N.11.2 errorString

This option specifies the string to be returned for errors rather than the default format defined by Clause N.13.

Changing the error string may simplify client calculations or presentations. For example, if the client requires "-1" to be returned for errors to aid in some numerical calculations, it would specify a service option of "errorString=-1". If the client is filling a report and wants blank strings returned for errors, it would specify a service option of "errorString="".

### N.11.3 errorPrefix

This option specifies the string to be returned in front of the default format defined by Clause N.13. Changing the error prefix may be desired if the default format could possibly conflict with a real value. Whereas the errorString service option is intended to define the entire contents of the error string, the errorPrefix merely prefixes the default format to allow clients to get the original error information in addition to a customized prefix. If both errorString and errorPrefix are specified, the resultant error string is the errorPrefix followed by the errorString.

### N.11.4 locale

This option specifies the locale that shall be used for formatting of date/time values, units, numbers and string values by the server. The format of the locale option is: "locale=language-tag", where language-tag is in the form described by RFC 3066. For example, the locale string for US English is "en-US", and Canadian French is "fr-CA", and the corresponding service options would be formatted as "locale=en-US" and "locale=fr-CA".

The value of the locale service option must match exactly one of the strings returned from the getSupportedLocales service. There is no language fallback or hierarchical matching mechanism.

In services which read data from a node such as the getValue, getValues, or getArray services, the server is required to accept all values for the "locale" option which are returned by the getSupportedLocales service. When writing data to a node with services such as the setValue or setValues services, the server shall accept all values for the "locale" option which are returned in the WritableLocales attribute of the node. The error WS\_ERR\_LOCALE\_NOT\_SUPPORTED shall be returned if a locale is specified that the server does not support.

The values available in the WritableLocales attribute of a node shall be a subset of the values returned by the getSupportedLocales service.

A server shall be configurable to associate a date, time and numeric formats with each locale. When a localized value is requested, the server shall return the string formatted according to the format for the specified locale. For example, a server should be able to support localized time and date formats such as "2004/06/15 8:00am" or "15-Jun-2004, 08:00:00" and numeric formats such as "1,234.56" or "1 234,56". This will help to ensure that all servers used within an installation will be capable of presenting data in a consistent manner.

In some cases, the "locale" option may be overridden by the "canonical" option. This is described in Clause N.11.6.

#### **N.11.5 writeSingleLocale**

This option applies only to setting the values for nodes with a ValueType of "String". The default behavior of a server is to set the value for the Value attribute in all locales, regardless of the "locale" service option. This is safer than setting only one locale because the client might not be aware of which locales are in use, and setting only one might lead to inconsistent values across locales. For clients that are aware of the different locales and want to set different values for the different locales, this service option allows the client to override this default behavior and write only one locale at a time.

If this option is true, then the locale service option, if present, shall be equal to one of the locales listed in the SinglyWritableLocales attribute for the node being written, otherwise, an invalid locale error is returned.

If this option is true and no "locale" option is specified, then string values are set only in the default locale. If the default locale is not one of those listed in the SinglyWritableLocales for the node being written, then an invalid locale error is returned.

#### **N.11.6 canonical**

This option is intended to override certain localized string formats. The "canonical form" is a locale-independent standardized form, as defined in Clause N.10.1, that can be parsed in a consistent manner when node values are intended to be processed by machine rather than to be presented to humans.

The interaction between the "locale" and "canonical" options is summarized in the following table. Attributes not listed in this table are not affected.

**Table N-6.** Locale and Canonical Options

Attribute Name	Effect of "locale"	Effect of "canonical"
Value, when ValueType is "String"	The server may return and accept different values for different locales. For reading, server shall use the "locale" option to select the returned value. For writing, the "locale" option is ignored (all locales are written) unless the "writeSingleLocale" option is true.	Ignored.
Value, when ValueType is "Multistate"	The server may return and accept different values for different locales. For any given locale, these values shall be one of the values returned for the "PossibleValues" attribute for that locale.	Ignored.
Value, when ValueType is "Real", "Integer", "DateTime", "Date", "Time", "Duration", or "Boolean"	Value is formatted according to a server configuration to be appropriate to the requested locale.	Overrides "locale". The format is defined in N.10.1
Value, when ValueType is "OctetString"	Ignored.	Ignored.
DisplayName	May return different values for different locales.	Ignored.
PossibleValues	May return different values for different locales.	Ignored.
WritableValues	May return different values for different locales.	Ignored.
Units	Value is formatted according to a server configuration to be appropriate to the requested locale.	Overrides "locale". The format is defined in N.8.11.
Description	May return different values for different locales.	Ignored.
ValueAge, Minimum, Maximum, and Resolution	Value is formatted according to a server configuration to be appropriate to the requested locale.	Overrides "locale". The format is defined in N.20.1.

### N.11.7 precision

This option specifies the number of digits after the decimal point for the floating point value of any requested attribute. The value shall be rounded, not truncated. For example, "precision=2" makes "123.45673" into "123.46". This applies to fractional seconds in time-related values as well.

### N.11.8 noEmptyArrays

This option specifies that the server should not return empty arrays, and should return an error instead. This is primarily for Web services language bindings that do not correctly process arrays with no elements in them.

## N.12 Services

This clause defines the Web services that provide the means to access and manipulate the data in the server.

### N.12.1 getValue Service

This required service is used to retrieve a single value for a single attribute of a single node. This service always returns its results as a single string.

This service can be used to retrieve primitive attributes, such as Value, and array attributes, such as PossibleValues. The format of this string result is dictated by the attribute's datatype and the service options.

If this service is used for an array attribute, then the array elements shall be concatenated into a single semicolon-delimited string that can be easily split at the client since the element strings are not allowed to contain semicolon characters. If the client would rather retrieve an array of individual strings, it can use the getArray or getArrayRange service instead.

A typical programming language signature for this service is:

```
CString getValue(CString options, CString path)
```

### N.12.1.1 Structure

The structure of the getValue service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-7. Structure of getValue Service Primitives**

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Options	M	M(=)		
Path	M	M(=)		
Result			M	M(=)

### N.12.1.2 Argument

This parameter shall convey the parameters for the getValue confirmed service request.

#### N.12.1.2.1 Options

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

#### N.12.1.2.2 Path

This parameter, of type XML Schema string, shall contain a path as defined in Clause N.2.

#### N.12.1.3 Result

This parameter, of type XML Schema string, shall contain the results of the service call. This parameter is polymorphically encoded, as defined in Clause N.10.2. The result shall be either a valid value or an error string. The format of error strings is defined by Clause N.13.

#### N.12.1.4 Service Procedure

The service will attempt to find the node and attribute specified by the Path parameter, and if successful, shall format its value into a string according to the rules specified in Clauses N.8.10, N.10.1 and N.11. If the Path parameter refers to an array attribute, then the formatted string representations of the individual elements are concatenated into a single string using the semicolon (';') character as the delimiter between elements. If an attribute identifier is not specified by the Path parameter, the Value attribute is assumed.

The getValue service, and all the various "get" methods, are allowed to return a result without consulting any other network node, either because the data is cached or because the origin of the data is the server itself. If the server, for any internal reason, is unable to return a value according to its normal means of execution, then the result returned shall be WS\_ERR\_OTHER. If for an external reason, the server is unable to contact an external source of the data according to its normal means of execution, then the result returned shall be WS\_ERR\_COMMUNICATION\_FAILED. This will be typical when, for example, the server attempts to establish communication with the device serving the data, and that device fails to respond.

The error conditions and responses are summarized in the following table:

**Table N-8.** Error Conditions for the getValue Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOTAUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains a locale specifier that is not currently supported.	WS_ERR_LOCALE_NOT_SUPPORTED
The Options parameter contains an unsupported option.	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The path could not be parsed or contains an illegal character.	WS_ERR_PATH_SYNTAX
The node identified by the Path parameter does not exist.	WS_ERR_NODE_NOT_FOUND
The attribute specified in the Path parameter is not present in the specified node.	WS_ERR_ATTRIBUTE_NOT_FOUND
Communication with the device failed.	WS_ERR_COMMUNICATION_FAILED
Unable to return the requested value, for some other reason.	WS_ERR_OTHER

## N.12.2 get Values Service

This optional service is similar to the getValue service with the exception that it takes multiple paths and returns multiple results, one for each path. This service always returns its results as a non-empty array of strings.

A typical programming language signature for this service is:

```
CString[] getValues(CString options, CString paths[])
```

### N.12.2.1 Structure

The structure of the getValues service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-9.** Structure of getValues Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Options	M	M(=)		
Paths	M	M(=)		
Result			M	M(=)

### N.12.2.2 Argument

This parameter shall convey the parameters for the getValues confirmed service request.

#### N.12.2.2.1 Options

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

#### N.12.2.2.2 Paths

This parameter, of type array of XML Schema string, shall contain an array of path strings as defined in Clause N.2.

### N.12.2.3 Result

This parameter, of type array of XML Schema string, shall contain the results of the service call. Each entry in the array is either a valid value or an error string. Each entry is polymorphically encoded, as defined in Clause N.10.2. The format of error strings is defined by Clause N.13.

### N.12.2.4 Service Procedure

This service will process the entries in the Paths parameter starting with the first entry in the array. Each entry is evaluated separately in the same manner as the getValue service and the results of that evaluation are entered into the corresponding entry in the return array. If there is an error condition that prevents the processing of the Paths parameter, if the Paths parameter is of zero length, or if the server can determine that the same error would be returned for each entry in the return array, then the result of the service shall be an array of one element containing the error string.

The error conditions and responses are summarized in the following table:

**Table N-10.** Error Conditions for the getValues Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOTAUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains a locale specifier that is not currently supported.	WS_ERR_LOCALE_NOT_SUPPORTED
The Options parameter contains an unsupported option	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The Paths parameter array has no members.	WS_ERR_LIST_OF_PATHS_IS_EMPTY
The path could not be parsed or contains an illegal character.	WS_ERR_PATH_SYNTAX
The node identified by the path parameter does not exist.	WS_ERR_NODE_NOT_FOUND
The attribute specified in the Path parameter is not present in the specified node.	WS_ERR_ATTRIBUTE_NOT_FOUND
Communication with the device failed.	WS_ERR_COMMUNICATION_FAILED
Unable to return the requested value, for some other reason.	WS_ERR_OTHER

### N.12.3 getRelativeValues Service

This optional service is similar to the getValues service with the exception that it takes a single base path that specifies a node or attribute, and a list of additional sub paths that are appended to the base path to form a complete path. A typical use of this service would be for the base path to represent a path to a node and the sub paths to be a list of attributes, but the service is not limited to that usage. This service always returns its results as a non-empty array of strings.

A typical programming language signature for this service is:

```
CString[] getRelativeValues(CString options, CString basePath, CString paths[])
```

### N.12.3.1 Structure

The structure of the getRelativeValues service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-11.** Structure of getRelativeValues Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Options	M	M(=)		
Base Path	M	M(=)		
Paths	M	M(=)		
Result			M	M(=)

### N.12.3.2

This parameter shall convey the parameters for the getRelativeValues confirmed service request.

#### N.12.3.2.1 Options

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

#### N.12.3.2.2 Base Path

This parameter, of type XML Schema string, shall contain either an empty string or a complete and valid path string as defined in Clause N.2 that identifies a node or attribute. This path shall end with a node identifier or an attribute identifier, not a path delimiter ('/' or ':'). If this parameter is an empty string, then each of the paths in the Paths parameter becomes the full path for evaluation.

#### N.12.3.2.3 Paths

This parameter, of type array of XML Schema string, shall contain an array of path fragments that when appended to the Base Path parameter form a complete and valid path as defined in Clause N.2. Since the Base Path parameter does not end with a delimiter, and may be empty, these path fragments shall begin with a delimiter ('/' or ':') in order to form a complete path.

#### N.12.3.3 Result

This parameter, of type array of XML Schema string, shall contain the results of the service call. Each entry in the array is either a valid value or an error string. Each entry is polymorphically encoded, as defined in Clause N.10.2. The format of error strings is defined by Clause N.13.

#### N.12.3.4 Service Procedure

This service will process the entries in the Paths parameter starting with the first entry in the array. Each entry is evaluated separately in the same manner as if the getValue service were called with a path equal to the Base Path parameter concatenated with the entry being processed, and the results of that evaluation are entered into the corresponding entry in the return array.

The error conditions and responses are summarized in the following table:

**Table N-12.** Error Conditions for the getRelativeValues Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOT_AUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains a locale specifier that is not currently supported.	WS_ERR_LOCALE_NOT_SUPPORTED
The Options parameter contains an unsupported option	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The Paths parameter array has no members.	WS_ERR_LIST_OF_PATHS_IS_EMPTY
The path could not be parsed or contains an illegal character.	WS_ERR_PATH_SYNTAX
The node identified by the path parameter does not exist.	WS_ERR_NODE_NOT_FOUND
The attribute specified in the Path parameter is not present in the specified node.	WS_ERR_ATTRIBUTE_NOT_FOUND
Communication with the device failed.	WS_ERR_COMMUNICATION_FAILED
Unable to return the requested value, for some other reason.	WS_ERR_OTHER

#### N.12.4 getArray Service

This optional service can be used to retrieve array attributes such as Children or PossibleValues as an array of strings rather than as a single concatenated string. The format of the strings in the array is dictated by the attribute's datatype and the service options. This service shall not be used on attributes that are not arrays. If the entire array is too large to return with this service, the client can use multiple calls to the getArrayRange service instead.

If this service is provided, then the getArraySize service shall also be provided. This service is required to be provided if the getArrayRange service is provided.

A typical programming language signature for this service would be:

```
CString[] getArray(CString options, CString path)
```

##### N.12.4.1 Structure

The structure of the getArray service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-13.** Structure of getArray Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Options	M	M(=)		
Path	M	M(=)		
Result			M	M(=)

##### N.12.4.2 Argument

This parameter shall convey the parameters for the getArray confirmed service request.

#### N.12.4.2.1 Options

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

#### N.12.4.2.2 Paths

This parameter, of type XML Schema string, shall contain a path string as defined in Clause N.2.

#### N.12.4.3 Result

This parameter, of type array of XML Schema string, shall contain the results of the service call. If the service succeeds, the result will be an array of valid result strings. Each entry is polymorphically encoded, as defined in Clause N.10.2. If the array attribute has no members, the result array shall be empty unless the noEmptyArrays service option is true, in which case the result array shall contain a single entry for the WS\_ERR\_EMPTY\_ARRAY error condition. If the service fails, the result will be an array containing a single entry containing the error string. The format of error strings is defined by Clause N.13.

#### N.12.4.4 Service Procedure

The service will attempt to find the node and attribute specified by the Path parameter, and if successful, will format its value into an array of strings according to the rules specified in Clauses N.8.10, N.10.1 and N.11.

The error conditions and responses are summarized in the following table:

**Table N-14.** Error Conditions for the getArray Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOT_AUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains a locale specifier that is not currently supported.	WS_ERR_LOCALE_NOT_SUPPORTED
The Options parameter contains an unsupported option.	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The path could not be parsed or contains an illegal character.	WS_ERR_PATH_SYNTAX
The node identified by the Path parameter does not exist.	WS_ERR_NODE_NOT_FOUND
The attribute specified in the Path parameter is not present in the specified node.	WS_ERR_ATTRIBUTE_NOT_FOUND
The requested array contains no data (the array size is 0) and the noEmptyArrays service option is true.	WS_ERR_EMPTY_ARRAY
The attribute specified in the Path parameter is not an array attribute.	WS_ERR_NOT_AN_ARRAY
Communication with the device failed.	WS_ERR_COMMUNICATION_FAILED
Unable to return the requested value, for some other reason.	WS_ERR_OTHER

If any errors occur, the result of the service shall be an array of one entry containing the error string.

#### N.12.5 getArrayRange Service

This optional service can be used to retrieve only a portion of an array attribute such as Children or PossibleValues as an array of strings. The format of the strings in the array is dictated by the attribute's datatype and the service options. This service shall not be used on attributes that are not arrays.

If this service is provided, then the getArray and getArraySize service shall also be provided.

A typical programming language signature for this service would be:

```
CString[] getArrayRange(CString options, CString path, unsigned index, unsigned count)
```

### N.12.5.1 Structure

The structure of the getArrayRange service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-15.** Structure of getArrayRange Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Options	M	M(=)		
Path	M	M(=)		
Index	M	M(=)		
Count	M	M(=)		
Result			M	M(=)

### N.12.5.2 Argument

This parameter shall convey the parameters for the getArrayRange confirmed service request.

#### N.12.5.2.1 Options

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

#### N.12.5.2.2 Path

This parameter, of type XML Schema string, shall contain a path string as defined in Clause N.2.

#### N.12.5.2.3 Index

This parameter, of type XML Schema nonNegativeInteger, shall contain the starting index, where the first entry in the array is index zero.

#### N.12.5.2.4 Count

This parameter, of type XML Schema nonNegativeInteger, shall contain the number of array entries to return, starting at the Index parameter. A count of zero shall be invalid.

### N.12.5.3 Result

This parameter, of type array of XML Schema string, shall contain the results of the service call. If the service succeeds, the result shall be an array of valid result strings. Each entry is polymorphically encoded, as defined in Clause **Error! Reference source not found.**. If the service fails, the result shall be an array containing a single entry containing the error string. The format of error strings is defined by Clause **Error! Reference source not found.**.

### N.12.5.4 Service Procedure

The service shall attempt to find the node and attribute specified by the Path parameter, and if successful, shall format its value into an array of strings according to the rules specified in Clauses N.8.10, N.10.1 and N.11, starting at the index specified by the Index parameter and proceeding for the number of entries specified by the Count parameter. If fewer than the specified count of entries exist after the specified index, the result array shall be truncated to contain only the valid entries.

The error conditions and responses are summarized in the following table:

**Table N-16.** Error Conditions for the getArrayRange Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOTAUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains a locale specifier that is not currently supported.	WS_ERR_LOCALE_NOT_SUPPORTED
The Options parameter contains an unsupported option.	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The path could not be parsed or contains an illegal character.	WS_ERR_PATH_SYNTAX
The node identified by the Path parameter does not exist.	WS_ERR_NODE_NOT_FOUND
The attribute specified in the Path parameter is not present in the specified node.	WS_ERR_ATTRIBUTE_NOT_FOUND
The index parameter is outside the range of indices for the specified attribute.	WS_ERR_INDEX_OUT_OF_RANGE
The count parameter is zero.	WS_ERR_COUNT_IS_ZERO
The requested array range contains no data (the result is of zero length) and the noEmptyArrays service option is true.	WS_ERR_EMPTY_ARRAY
The attribute specified in the Path parameter is not an array attribute.	WS_ERR_NOT_AN_ARRAY
Communication with the device failed.	WS_ERR_COMMUNICATION_FAILED
Unable to return the requested value, for some other reason.	WS_ERR_OTHER

If any errors occur, the result of the service shall be an array of one entry containing the error string.

### N.12.6 getArraySize Service

This optional service can be used to retrieve the number of entries in an array attribute. This service shall not be used for attributes that are not arrays.

This service is required to be provided if the getArray service is provided.

A typical programming language signature for this service is:

```
CString getArraySize(CString options, CString path)
```

#### N.12.6.1 Structure

The structure of the getArraySize service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-17.** Structure of getArraySize Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Options	M	M(=)		
Path	M	M(=)		
Result			M	M(=)

#### N.12.6.2 Argument

This parameter shall convey the parameters for the getArraySize confirmed service request.

**N.12.6.2.1 Options**

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

**N.12.6.2.2 Paths**

This parameter, of type XML Schema string, shall contain a path string as defined in Clause N.2.

**N.12.6.3 Result**

This parameter, of type XML Schema string, shall contain the results of the service call. If the service succeeds, the result shall be an XML Schema nonNegativeInteger. This parameter is polymorphically encoded, as defined by Clause N.10.2.. If the service fails, the result shall contain the error string. The format of error strings is defined by Clause N.13.

**N.12.6.4 Service Procedure**

The service shall attempt to find the node and attribute specified by the Path parameter, and if successful, shall return the number of entries in that array attribute.

The error conditions and responses are summarized in the following table:

**Table N-18.** Error Conditions for the getArraySize Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOT_AUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains a locale specifier that is not currently supported.	WS_ERR_LOCALE_NOT_SUPPORTED
The Options parameter contains an unsupported option.	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The path could not be parsed or contains an illegal character.	WS_ERR_PATH_SYNTAX
The node identified by the Path parameter does not exist.	WS_ERR_NODE_NOT_FOUND
The attribute specified in the Path parameter is not present in the specified node.	WS_ERR_ATTRIBUTE_NOT_FOUND
The attribute specified in the Path parameter is not an array attribute.	WS_ERR_NOT_AN_ARRAY
Communication with the device failed.	WS_ERR_COMMUNICATION_FAILED
Unable to return the requested value, for some other reason.	WS_ERR_OTHER

**N.12.7 setValue Service**

This optional service is used to set a new value for a single attribute of a single node. The format of the new value is dictated by the attribute's datatype and the service options. This service always returns its results as a single string.

If the service option "readback" is true, then, after setting the value, this service shall read the value back and the result shall be as if the client had called getValue using the same path and service options. This allows the client to see the effects of any value modification by the server as well as check for errors.

Only the Value attribute is writable.

This service is required to be provided if the setValues service is provided.

A typical programming language signature for this service is:

CString setValue(CString options, CString path, CString Value)

### N.12.7.1 Structure

The structure of the setValue service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-19.** Structure of setValue Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Options	M	M(=)		
Path	M	M(=)		
Value	M	M(=)		
Result			M	M(=)

### N.12.7.2 Argument

This parameter shall convey the parameters for the setValue confirmed service request.

#### N.12.7.2.1 Options

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

#### N.12.7.2.2 Path

This parameter, of type XML Schema string, shall contain a path as defined in Clause N.2.

#### N.12.7.2.3 Value

This parameter, of type XML Schema string, shall contain a new value for the node. This parameter is polymorphically encoded, as defined in Clause N.10.2, and is in the same format as that which would be returned by the getValue service for the same path and service options.

#### N.12.7.3 Result

This parameter, of type XML Schema string, shall contain the results of the service call. The result is either an empty string, a valid value if the "readback" service option is true, or an error string. This parameter is polymorphically encoded, as defined in Clause N.10.2.. The format of error strings is defined by Clause N.13.

#### N.12.7.4 Service Procedure

The service shall attempt to find the node and attribute specified by the Path parameter, and if successful, shall set its value from the given Value parameter according to the formatting rules specified in Clauses N.8.10, N.10.1 and N.11 If an attribute identifier is not specified by the Path parameter, the Value attribute shall be assumed.

If the server supports multiple locales and this service is used to set the value of a node whose ValueType attribute is "String", then the new value shall be set equally for all writable locales unless the "writeSingleLocale" service option is true, in which case it shall be set only for the locale specified by the "locale" service option. See the definitions for the SinglyWritableLocales attribute and the writeSingleLocale service option in clauses N.8.29 and N.11.5 for more information.

If the server supports multiple locales and this service is used to set the value of a node whose ValueType attribute is "Multistate", then the Value parameter shall match exactly one of the strings returned for the WritableValues attribute for the locale specified by the service options.

If multiple locales are supported by the server and this service is used to set the value of a node whose ValueType attribute is "Boolean", then the new value shall match exactly one of the strings returned for the WritableValues attribute for the locale specified by the service options, or it may be equal to "true" or "false" if the "canonical" service option is TRUE.

If the service option "readback" is true, then, after setting the value, the server shall perform the same operations as prescribed for the getValue service, using the same path and service options. If there is any failure during the readback portion of execution, then the result returned by setValue shall be WS\_ERR\_READBACK\_FAILED.

If the service option "readback" is false, then this service shall return an empty string upon success.

The error conditions and responses are summarized in the following table:

**Table N-20.** Error Conditions for the setValue Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOTAUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains a locale specifier that is not currently supported.	WS_ERR_LOCALE_NOT_SUPPORTED
The Options parameter contains an unsupported option.	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The path could not be parsed or contains an illegal character.	WS_ERR_PATH_SYNTAX
The node identified by the Path parameter does not exist.	WS_ERR_NODE_NOT_FOUND
An attribute other than Value is specified.	WS_ERR_ILLEGAL_ATTRIBUTE
The attribute specified in the Path parameter is not present in the specified node.	WS_ERR_ATTRIBUTE_NOT_FOUND
The Value attribute is not writable.	WS_ERR_NOT_WRITABLE
The given value is not formatted properly.	WS_ERR_VALUE_FORMAT
The given value is out of range.	WS_ERR_VALUE_OUT_OF_RANGE
Any other error occurred setting the value.	WS_ERR_WRITE_FAILED
The readback failed.	WS_ERR_READBACK_FAILED
Communication with the device failed.	WS_ERR_COMMUNICATION_FAILED
Unable to update the requested value, for some other reason.	WS_ERR_OTHER

### N.12.8 setValues Service

This optional service is similar to the setValue service with the exception that it takes multiple paths and values and returns multiple results, one for each path. This service always returns its results as a non-empty array of strings.

If this service is provided, then the setValue service shall also be provided.

A typical programming language signature for this service is:

```
CString[] setValues(CString options, CString paths[], CString values[])
```

#### N.12.8.1 Structure

The structure of the setValues service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-21.** Structure of setValues Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Options	M	M(=)		
Paths	M	M(=)		
Values				
Result			M	M(=)

### N.12.8.3 Argument

This parameter shall convey the parameters for the setValues confirmed service request.

#### N.12.8.2.1 Options

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

#### N.12.8.2.2 Paths

This parameter, of type array of XML Schema string, shall contain an array of path strings as defined in Clause N.2.

#### N.12.8.2.3 Values

This parameter, of type array of XML Schema string, shall contain an array of new values corresponding to the Paths parameter. Each entry in this array shall be polymorphically encoded, as defined in Clause N.10.2 and shall have the same format as that which would be returned by the getValue service for the corresponding path with the same service options.

#### N.12.8.3 Result

This parameter, of type array of XML Schema string, shall contain the results of the service call. Each entry in the array is either an empty string, a valid value if the "readback" service option is true, or an error string. Each entry is polymorphically encoded, as defined in Clause N.10.2.. The format of error strings is defined by Clause N.13.

#### N.12.8.4 Service Procedure

This service will process the entries in the Paths parameter and the corresponding entries in the Values parameter, starting with the first entry in each array. Each pair of entries shall be evaluated separately in the same manner as the setValue service and the results entered into a corresponding entry in the return array. If there is an error condition that prevents the processing of the Paths parameter, if the Paths parameter is of zero length, or if the server can determine that the same error would be returned for each entry in the return array, then the result of the service shall be an array of one element containing the error string.

The error conditions and responses are summarized in the following table:

**Table N-22.** Error Conditions for the setValues Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOTAUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains a locale specifier that is not currently supported.	WS_ERR_LOCALE_NOT_SUPPORTED
The Options parameter contains an unsupported option.	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The Paths parameter array has no members.	WS_ERR_LIST_OF_PATHS_IS_EMPTY
The path could not be parsed or contains an illegal character.	WS_ERR_PATH_SYNTAX
The node identified by the Path parameter does not exist.	WS_ERR_NODE_NOT_FOUND
The attribute specified in the Path parameter is not present in the specified node.	WS_ERR_ATTRIBUTE_NOT_FOUND
An attribute other than Value is specified.	WS_ERR_ILLEGAL_ATTRIBUTE
The Value attribute is not writable.	WS_ERR_NOT_WRITABLE
The given value is not formatted properly.	WS_ERR_VALUE_FORMAT
The given value is out of range.	WS_ERR_VALUE_OUT_OF_RANGE
Any other error occurred setting the value.	WS_ERR_WRITE_FAILED
The readback failed.	WS_ERR_READBACK_FAILED
Communications with the device failed.	WS_ERR_COMMUNICATION_FAILED
Unable to update the requested value, for some other reason.	WS_ERR_OTHER

### N.12.9 getHistoryPeriodic

This optional service returns a predictable result of periodic point-in-time trend samples. Each string in the array contains the trended value or an error string in the same format as would be returned from the getValue service for the same path and service options.

The client specifies the sampling for this trend series, regardless of the sampling rate or timestamps of the data stored in the historical records of the server. If there is a mismatch in the requested sample times and the actual sample times, the server shall resample the data, as requested by the client through the Resample Method parameter, to find a value for the requested sample time.

The first sample returned corresponds to the Start parameter, and the remaining samples are spaced apart according to the Interval parameter. The Count parameter specifies the total number of samples to return.

A typical programming language signature for this service is:

```
CString[] getHistoryPeriodic (CString options, CString path, CDateTime start, double interval, unsigned count, CString
resampleMethod)
```

#### N.12.9.1 Structure

The structure of the getHistoryPeriodic service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-23.** Structure of getHistoryPeriodic Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument	M	M(=)		
Options	M	M(=)		
Path	M	M(=)		
Start	M	M(=)		
Interval	M	M(=)		
Count	M	M(=)		
Resample Method	M	M(=)		
Result			M	M(=)

**N.12.9.2 Argument**

This parameter shall convey the parameters for the getHistoryPeriodic confirmed service request.

**N.12.9.2.1 Options**

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

**N.12.9.2.2 Path**

This parameter, of type XML Schema string, shall contain a path string as defined in Clause N.2.

**N.12.9.2.3 Start**

This parameter, of type XML Schema date**T**ime, shall specify the starting date and time, inclusive, for the results.

**N.12.9.2.4 Interval**

This parameter, of type XML Schema double, shall specify the time interval, in seconds, between the returned values. An interval of zero is invalid.

**N.12.9.2.5 Count**

This parameter, of type XML Schema nonNegativeInteger, shall contain the number of values to return. A count of zero is invalid.

**N.12.9.2.6 Resample Method**

This parameter, of type XML Schema string, shall contain one of the string values described in the following table. Servers shall support all standard resample methods.

**Table N-24.** getHistoryPeriodic Resample Method Definitions

Parameter Value	Description
"interpolation"	Each data sample returned is determined by straight line interpolation between the real sample before and the real sample after the specified point in time. If the source Trend Log has a fixed interval and one of the real samples is missing then an error shall be returned for the sample. If one of the real samples is an error then an error shall be returned for the sample.
"average"	Each data sample returned is the average of all collected samples within the time period. The time period is of length Interval and is centered on the returned sample time. If all samples are missing from the sample window, then an error shall be returned for the sample. If one or more, but not all, samples are missing from the sample window, the average will be calculated over those that are present.
"after"	Each data sample returned is the value of the closest real sample at or after the specified point in time. If the source Trend Log has a fixed interval and the closest sample after is missing, then an error shall be returned for the sample. If the closest sample after is an error, then an error shall be returned for the sample.
"before"	Each data sample returned is the value of the closest real sample at or before the specified point in time. If the source Trend Log has a fixed interval and the closest sample before is missing, then an error shall be returned for the sample. If the closest sample before is an error, then an error shall be returned for the sample.
"closest"	Each data sample returned is the value of the closest real sample at, before or after the specified point in time. If the source Trend Log has a fixed interval and the closest sample is missing, then an error shall be returned for the sample. If the closest sample is an error, then an error shall be returned for the sample.
"default"	The server shall use the most appropriate resample method. The server is not restricted to the standard resample methods and may use any proprietary method suited to the data.

### N.12.9.3 Result

This parameter, of type array of XML Schema string, shall contain the results of the service call. If the service succeeds, the result shall be an array of valid result strings. Each member of the array is polymorphically encoded, as defined in Clause N.10.2. If the service fails, the result shall be an array containing a single entry containing the error string. The format of error strings is defined by Clause N.13.

### N.12.9.4 Service Procedure

The service shall attempt to find historical records for the node specified by the Path parameter, and if successful, shall format a series of historical values into an array of strings according to the rules specified in Clauses N.8.10, N.10.1 and N.11, starting at the date and time specified by the Start parameter, and proceeding in time increments of the Interval parameter, for the number of entries specified by the Count parameter. If an attribute identifier is specified by the Path parameter, it shall specify the Value attribute.

If there is a mismatch in the requested sample times and the actual sample times, the server shall resample the data by some means, such as interpolation, to find a value for the requested sample time. If the data is known to the server to not be available at the requested sample time, it shall return a WS\_ERR\_NO\_DATA\_AVAILABLE error for that sample time in the Results array.

If there is an error condition that prevents the retrieval or processing of the requested data, then the result of the service shall be an array of one element containing the error string. If the server can determine that the same error would be returned for each entry in the results array, then the result of the service may be an array of one element containing the error string.

The error conditions and responses are summarized in the following table:

**Table N-25.** Error Conditions for the getHistoryPeriodic Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOT_AUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains a locale specifier that is not currently supported.	WS_ERR_LOCALE_NOT_SUPPORTED
The Options parameter contains an unsupported option	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The path could not be parsed or contains an illegal character.	WS_ERR_PATH_SYNTAX
The node identified by the Path parameter does not exist.	WS_ERR_NODE_NOT_FOUND
An attribute other than Value is specified.	WS_ERR_ILLEGAL_ATTRIBUTE
The attribute specified in the Path parameter is not present in the specified node.	WS_ERR_ATTRIBUTE_NOT_FOUND
The Count parameter is 0.	WS_ERR_COUNT_IS_ZERO
The Interval parameter is 0.	WS_ERR_INTERVAL_IS_ZERO
No data is available for a sample interval.	WS_ERR_NO_DATA_AVAILABLE
There is no history available for this node.	WS_ERR_NO_HISTORY
Communication with the device failed.	WS_ERR_COMMUNICATION_FAILED
Unable to return the requested value, for some other reason.	WS_ERR_OTHER

### N.12.10 getDefaultLocale

This required service retrieves the locale that the server has configured for its default locale. The return value is a locale strings as defined in Clause N.11.4. The empty string ("") shall be returned if there is no default locale, in which case the canonical form shall be used for all values.

A typical programming language signature for this service is:

```
CString getDefaultLocale (CString options)
```

#### N.12.10.1 Structure

The structure of the getDefaultLocale service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-26.** Structure of getDefaultLocale Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument Options	M M	M(=) M(=)		
Result			M	M(=)

#### N.12.10.2 Argument

This parameter shall convey the parameters for the getDefaultLocale confirmed service request.

##### N.12.10.2.1 Options

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

### N.12.10.3 Result

This parameter, of type XML Schema string, shall contain the results of the service call. If the service succeeds, the result shall be a locale string as defined in Clause N.11.4 or an empty string. If the service fails, the result shall contain the error string. The format of error strings is defined by Clause N.13.

### N.12.10.4 Service Procedure

The service shall return the locale string for the configured default locale. The service shall ignore the "locale" service option, if present. The empty string ("") shall be returned if there is no default locale.

The error conditions and responses are summarized in the following table:

**Table N-27.** Error Conditions for the getDefaultLocale Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOTAUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains an unsupported option.	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE

### N.12.11 getSupportedLocales

This required service can be used to retrieve the list of locales supported by the server. Each entry in the returned array is a locale string as defined in Clause N.11.4. If the server does not support multiple locales, then this service shall return only the default locale. If the server does not support localization, and only uses the canonical form, then an array with no entries shall be returned unless the noEmptyArrays service option is true, in which case the result array shall contain a single entry for the WS\_ERR\_EMPTY\_ARRAY error condition.

A typical programming language signature for this service is:

```
CString[] getSupportedLocales (CString options)
```

### N.12.11.1 Structure

The structure of the getSupportedLocales service primitives is shown in the following table. The terminology and symbology used in this table are explained in Clause 5.6.

**Table N-28.** Structure of getSupportedLocales Service Primitives

Parameter Name	Req	Ind	Rsp	Cnf
Argument Options	M M	M(=) M(=)		
Result			M	M(=)

### N.12.11.2 Argument

This parameter shall convey the parameters for the getSupportedLocales confirmed service request.

#### N.12.11.2.1 Options

This parameter, of type XML Schema string, shall contain a string of service options as defined in Clause N.11.

### N.12.11.3 Result

This parameter, of type array of XML Schema string, shall contain the results of the service call. If the service succeeds, the result shall be an array of valid result strings. The result array may be empty unless the noEmptyArrays service option is true, in which case the result array shall contain a single entry for the WS\_ERR\_EMPTY\_ARRAY error condition. If the service fails, the array shall contain a single entry containing the error string. The format of error strings is defined by Clause N.13.

### N.12.11.4 Service Procedure

The service shall collect all the locale strings that are in use in the server. If the server does not support multiple locales, then this service shall return only the default locale. The service shall ignore the "locale" service option, if present.

The error conditions and responses are summarized in the following table:

**25.1.1.1.1 Table N-29.** Error Conditions for the getSupportedLocales Service

Situation	Error
The service user could not be authenticated.	WS_ERR_NOT_AUTHENTICATED
The service user is not authorized to perform this function.	WS_ERR_NOTAUTHORIZED
The Options parameter could not be parsed correctly or had illegal characters.	WS_ERR_OPTIONS_SYNTAX
The Options parameter contains an unsupported option.	WS_ERR_OPTION_NOT_SUPPORTED
The Options parameter contains an option value in an unsupported format.	WS_ERR_OPTION_VALUE_FORMAT
The Options parameter contains an option value that is out of range.	WS_ERR_OPTION_OUT_OF_RANGE
The requested array contains no data (the array size is 0) and the noEmptyArrays service option is true.	WS_ERR_EMPTY_ARRAY

If any error occurs, the result of the service shall be an array of one entry containing the error string.

### N.13 Errors

For maximum interoperability with a wide range of clients, these Web services avoid returning complex (constructed) datatypes by returning both valid data and errors in the same result string.

The default error string encoding is "? error-number error-message". More specifically, the string shall be composed of: a question mark character, followed by a single space character, followed by a standardized error number defined in the following table, in decimal form, followed by a single space character, followed by an informative human-readable error message whose content is a local matter.

The default error encoding can be overridden by the client with the "errorString" service option (see Clause N.11.2 for examples). When the default format is overridden by the "errorString" service option, the string defined for the errorString option shall form the entire string generated for an error.

**Table N-30.** Error Numbers

Error Name	Error Number	Example Error Message
WS_ERR_OTHER	0	"Unspecified Error"
WS_ERR_NOT_AUTHENTICATED	1	"Not Authenticated"
WS_ERR_NOT_AUTHORIZED	2	"Not Authorized"
WS_ERR_OPTIONS_SYNTAX	3	"Bad Options Syntax"
WS_ERR_OPTION_NOT_SUPPORTED	4	"Option Not Supported"
WS_ERR_OPTION_VALUE_FORMAT	5	"Bad Option Value Format"
WS_ERR_OPTION_OUT_OF_RANGE	6	"Option Out of Range"
WS_ERR_LOCALE_NOT_SUPPORTED	7	"Locale Not Supported"
WS_ERR_PATH_SYNTAX	8	"Bad Path Syntax"
WS_ERR_NODE_NOT_FOUND	9	"Node Not Found"
WS_ERR_ATTRIBUTE_NOT_FOUND	10	"Attribute Not Found"
WS_ERR_ILLEGAL_ATTRIBUTE	11	"Illegal Attribute"
WS_ERR_VALUE_FORMAT	12	"Bad Value Format"
WS_ERR_VALUE_OUT_OF_RANGE	13	"Value Out of Range"
WS_ERR_INDEX_OUT_OF_RANGE	14	"Index Out of Range"
WS_ERR_NOT_WRITABLE	15	"Not Writable"
WS_ERR_WRITE_FAILED	16	"Write Failed"
WS_ERR_LIST_OF_PATHS_IS_EMPTY	17	"No Paths Provided "
WS_ERR_COUNT_IS_ZERO	18	"Requested Count is Zero"
WS_ERR_INTERVAL_IS_ZERO	19	"Requested Interval is Zero "
WS_ERR_NO_HISTORY	20	"No History"
WS_ERR_NO_DATA_AVAILABLE	21	"No Data Available"
WS_ERR_EMPTY_ARRAY	22	"Empty Array"
WS_ERR_NOT_AN_ARRAY	23	"Not an Array"
WS_ERR_COMMUNICATION FAILED	24	"Communication with the Remote Device Failed"
WS_ERR_READBACK_FAILED	25	"The Readback Failed"

#### N.14 Extending BACnet/WS

The data model defined by this standard can be extended in the following ways:

1. Extended information that might be considered to be a property of a node may be modeled by adding children nodes with a NodeType of "Property". This allows for the extended property data to be arbitrarily complex.
2. Node classification can be extended by local application of the NodeSubtype attribute. Any string value can be used for the localized value of the Units attribute. However, if the corresponding canonical value of the Units attribute cannot be expressed as defined in Clause N.8.11, then the canonical value of that attribute shall be "other".

## HISTORY OF REVISIONS

<i><b>Protocol</b></i>		<i><b>Summary of Changes to the Standard</b></i>
<i><b>Version</b></i>	<i><b>Revision</b></i>	
1	NA	<p><b>ANSI/ASHRAE 135-1995</b>  Approved by the ASHRAE Standards Committee June 28, 1995; by the ASHRAE Board of Directors June 29, 1995; and by the American National Standards Institute December 19, 1995.</p>
1	NA	<p><b>Addendum a to ANSI/ASHRAE 135-1995</b>  Approved by the ASHRAE Standards Committee January 23, 1999; by the ASHRAE Board of Directors January 27, 1999; and by the American National Standards Institute October 1, 1999.</p> <ol style="list-style-type: none"> <li>1. Add Annex J - BACnet/IP and supporting definitions</li> </ol>
1	1	<p><b>Addendum b to ANSI/ASHRAE 135-1995</b>  Approved by the ASHRAE Standards Committee February 5, 2000; by the ASHRAE Board of Directors February 10, 2000; and by the American National Standards Institute April 25, 2000.</p> <ol style="list-style-type: none"> <li>1. Inconsistencies are eliminated in the definitions of the Analog and Binary Value object types</li> <li>2. Any device that receives and executes UnconfirmedEventNotification service requests must support programmable process identifiers</li> <li>3. Modify each event-generating object type to contain the last timestamp for each acknowledgeable transition</li> <li>4. Modify the Notification Class object by requiring that the 'Notification Class' property be equivalent to the instance number of the Notification Class object</li> <li>5. Modify the Event Notification services to make the 'To State' parameter mandatory for notifications of type ACK_NOTIFICATION</li> <li>6. A new BACnetDeviceObjectPropertyReference production is added and its use in the Event Enrollment and Schedule object types is specified</li> <li>7. Add a Multi-state Value object type</li> <li>8. Add an Averaging object type</li> <li>9. Change all 'Process Identifier' properties and parameters to Unsigned32</li> <li>10. Change the Multi-state Input object type to correct flaws related to fault detection and reporting and achieve consistency with the proposed Multi-state Value object type</li> <li>11. Add a Protocol_Revision property to the Device object type</li> <li>12. The File object type is changed to allow truncation and partial deletion operations</li> <li>13. A new ReadRange service is added to permit reading a range of data items from a property whose datatype is a list or array of lists</li> <li>14. A new UTCTimeSynchronization service is introduced and related changes are made to properties in the Device object type</li> <li>15. Add a Trend Log object type</li> <li>16. The UnconfirmedCOVNotification service is extended to allow notifications without prior subscription as a means of distributing globally important data to a potentially large number of recipients</li> <li>17. Add eight new BACnet engineering units.</li> </ol>

1	2	<p><b>Addendum c to ANSI/ASHRAE 135-1995</b></p> <p>Approved by the ASHRAE Standards Committee June 23, 2001; by the ASHRAE Board of Directors June 28, 2001; and by the American National Standards Institute September 7, 2001.</p> <ol style="list-style-type: none"> <li>1. Add a new Life Safety Point object type that represents the characteristics of initiating and indicating devices in the fire, life safety, and security applications</li> <li>2. Add a new Life Safety Zone object type that represents the characteristics associated with an arbitrary group of BACnet Life Safety Point and Life Safety Zone objects</li> <li>3. Add functionality to the existing BACnet alarm and event features needed to support the Life Safety Point and Life Safety Zone object types</li> <li>4. Add a new LifeSafetyOperation service that provides silence and reset capabilities needed for life safety systems</li> <li>5. Add a new subclause to 19 to describe the use of existing BACnet services to provide backup and restore capability</li> <li>6. Define a new service, SubscribeCOVProperty, to allow COV notifications for arbitrary properties of an object with subscriber-specified COV increments</li> <li>7. Add Vendor ID to proprietary MS/TP frames</li> <li>8. Add a new service, GetEventInformation, that provides enough information to acknowledge alarms</li> </ol>
1	2	<p><b>Addendum d to ANSI/ASHRAE 135-1995</b></p> <p>Approved by the ASHRAE Standards Committee June 23, 2001; by the ASHRAE Board of Directors June 28, 2001; and by the American National Standards Institute September 7, 2001.</p> <ol style="list-style-type: none"> <li>1. Replace Clause 22 with a new clause entitled "Conformance and Interoperability".</li> <li>2. Update Annex A, "Protocol Implementation Conformance Statement".</li> <li>3. Add a new Annex K entitled "BACnet Interoperability Building Blocks (BIBBs)".</li> <li>4. Add a new Annex L entitled "Descriptions and Profiles of Standardized BACnet Devices".</li> </ol>

1	2	<b>Addendum e to ANSI/ASHRAE 135-1995</b> Approved by the ASHRAE Standards Committee June 23, 2001; by the ASHRAE Board of Directors June 28, 2001; and by the American National Standards Institute September 7, 2001. <ol style="list-style-type: none"> <li>1. Define the PTP connection status when the half-router can and cannot re-establish the connection.</li> <li>2. Add Object Profiles and Extensions.</li> <li>3. Add the capability for devices to advertise the maximum number of segments of a segmented APDU that they can receive.</li> </ol>
1	2	<b>ANSI/ASHRAE 135-2001</b> A consolidated version of the standard that incorporates all of the known errata and revisions up to Addendum e to ANSI/ASHRAE 135-1995.
1	2	<b>ANSI/ASHRAE 135-2001 (reprinted May, 2002)</b> This reprinted version incorporated all errata known as of April 12, 2002.
1	3	<b>Addendum b to ANSI/ASHRAE 135-2001</b> Approved by the ASHRAE Standards Committee January 25, 2003; by the ASHRAE Board of Directors January 30, 2003; and by the American National Standards Institute April 3, 2003. <ol style="list-style-type: none"> <li>1. Remove UTC timestamps from Trend Logs and guarantee Trend Log record ordering.</li> </ol>
1	3	<b>EN ISO 16484-5 2003</b> This ISO standard contains the same technical content as Version 1 Revision 3 of ANSI/ASHRAE Standard 135-2001. It also includes all errata approved as of April 24, 2003.
1	4	<b>Addendum a to ANSI/ASHRAE 135-2001</b> Approved by the ASHRAE Standards Committee October 5, 2003; by the ASHRAE Board of Directors January 29, 2004; and by the American National Standards Institute February 15, 2004. <ol style="list-style-type: none"> <li>1. Add Partial Day Scheduling to the Schedule object.</li> <li>2. Enable reporting of proprietary events by the Event Enrollment object.</li> <li>3. Allow detailed error reporting when all ReadPropertyMultiple accesses fail.</li> <li>4. Remove the Recipient property from the Event Enrollment object.</li> <li>5. Add the capability to issue I-Am responses on behalf of MS/TP slave devices.</li> <li>6. Add a new silenced mode to the DeviceCommunicationControl service.</li> <li>7. Add 21 new engineering units.</li> <li>8. Specify the behavior of a BACnetArray when its size is changed.</li> <li>9. Clarify the behavior of a BACnet router when it receives an unknown network message type.</li> </ol>

1	4	<b>Addendum c to ANSI/ASHRAE 135-2001</b> Approved by the ASHRAE Standards Committee October 5, 2003; by the ASHRAE Board of Directors January 29, 2004; and by the American National Standards Institute February 15, 2004.  1. Allow Life Safety objects to advertise supported mode. 2. Add Unsilence Options to the LifeSafetyOperation Service. 3. Specify the relationship between the Event_Type and Event_Parameter properties. 4. Add a new Accumulator Object Type. 5. Add a new Pulse Converter Object Type. 6. Standardize event notification priorities. 7. Define Abort reason when insufficient segments are available. 8. Add new Error Codes and specify usage.
1	4	<b>Addendum d to ANSI/ASHRAE 135-2001</b> Approved by the ASHRAE Standards Committee October 5, 2003; by the ASHRAE Board of Directors January 29, 2004; and by the American National Standards Institute February 15, 2004.  1. Add clauses describing BACnet-EIB/KNX mapping.
1	4	<b>ANSI/ASHRAE 135-2004</b> A consolidated version of the standard that incorporates all of the known errata and revisions up to Addendum d to ANSI/ASHRAE 135-2001.
1	4	<b>ANSI/ASHRAE 135-2004 (reprinted October, 2005)</b> This reprinted version incorporated all errata known as of September 31, 2005.
1	5	<b>Addendum a to ANSI/ASHRAE 135-2004</b> Approved by the ASHRAE Standards Committee October 3, 2004; by the ASHRAE Board of Directors February 10, 2005; and by the American National Standards Institute February 10, 2005.  1. Revise Life Safety Point and Life Safety Zone objects to modify their behavior when placed out of service.
1	5	<b>Addendum c to ANSI/ASHRAE 135-2004</b> Approved by the ASHRAE Standards Committee September 29, 2006 and by the ASHRAE Board of Directors September 29, 2006; and by the American National Standards Institute October 2, 2006.  1. Add BACnet/WS Web Services Interface.
1	5	<b>Addendum d to ANSI/ASHRAE 135-2004</b> Approved by the ASHRAE Standards Committee June 24, 2006, and by the ASHRAE Board of Directors June 29, 2006; and by the American National Standards Institute June 30, 2006.  1. Add a new Structured View object type. 2. Allow acknowledgement of unseen TO-OFFNORMAL event notification. 3. Relax the Private Transfer and Text Message BIBB requirements. 4. Exclude LIFE_SAFETY and BUFFER_READY notifications from the Alarm Notifications BIBBs. 5. Establish the minimum requirements for a BACnet device with an application layer. 6. Remove the requirement for the DM-DOB-A BIBB from the B-OWS and B-BC device profiles. 7. Relax mandated values for APDU timeouts and retries when configurable, and change default values. 8. Fix EventCount handling error in MS/TP Master Node State Machine. 9. Permit routers to use a local network number in Device_Address_Binding.

		10. Identify conditionally writable properties. 11. Specify Error returns for the AcknowledgeAlarm service.
1	6	<b>Addendum e to ANSI/ASHRAE 135-2004</b> Approved by the ASHRAE Standards Committee January 27, 2007, by the ASHRAE Board of Directors March 25, 2007; and by the American National Standards Institute March 26, 2007.  1. Add a new Load Control object type.
1	6	<b>Addendum f to ANSI/ASHRAE 135-2004</b> Approved by the ASHRAE Standards Committee January 27, 2007, and by the ASHRAE Board of Directors March 25, 2007, and by the American National Standards Institute March 26, 2007.  1. Add new Access Door object type.
1	7	<b>Addendum b to ANSI/ASHRAE 135-2004</b> Approved by the ASHRAE Standards Committee October 12, 2008, by the ASHRAE Board of Directors October 24, 2008, and by the American National Standards Institute October 27, 2008.  1. Add a new Event Log object type. 2. Add a new Global Group object type. (Removed after third public review.) 3. Add a new Trend Log Multiple object type. 4. Harmonize the Trend Log object with the new Event Log and Trend Log Multiple objects. 5. Define a means for a device to provide a notification that it has restarted. 6. Define a means to configure a device to periodically send time synchronization messages. 7. Extend the number of character sets supported. (Removed after first public review.) 8. Enable devices other than alarm recipients to acknowledge alarms. 9. Allow MS/TP BACnet Data Expecting Reply frames to be broadcast. 10. Revise the Clause 5 state machines to handle slow servers. (Removed after second public review.) 11. Add new Error Codes and specify usage. 12. Add new Reliability enumeration to objects with a Reliability property.
1	7	<b>Addendum m to ANSI/ASHRAE 135-2004</b> Approved by the ASHRAE Standards Committee October 12, 2008, by the ASHRAE Board of Directors October 24, 2008, and by the American National Standards Institute October 27, 2008.  1. Resolve Foreign Device registration grace period and remaining time ambiguities. 2. Improve Clause 5 FillWindow segment timeout constraints. 3. Clarify the Priority Filter parameter in the GetEventEnrollment service request. 4. Allow alarms to be re-acknowledged successfully. 5. Add requirements to Alarm and Event BIBBs. 6. Remove B-BC requirements for BIBBs without use cases. 7. Clarify that a device may support only the ReinitializeDevice restart choices. 8. Clarify DeviceCommunicationControl and ReinitializeDevice interactions. 9. Define "object." 10. Add a Deadband property to the Loop object. 11. Correct the TO-FAULT conditions in the Life Safety objects' Reliability properties. 12. Clarify the Trend Log's acquisition of Status_Flags.
1	7	<b>ANSI/ASHRAE 135-2008</b> A consolidated version of the standard that incorporates all of the known

**HISTORY OF REVISIONS**

		errata and Addenda <i>a, b, c, d, e, f</i> and <i>m</i> to ANSI/ASHRAE 135-2004.

NA = Not Applicable because the Protocol\_Revision property was first defined in Addendum *b* to ANSI/ASHRAE 135-1995.

## **POLICY STATEMENT DEFINING ASHRAE'S CONCERN FOR THE ENVIRONMENTAL IMPACT OF ITS ACTIVITIES**

ASHRAE is concerned with the impact of its members' activities on both the indoor and outdoor environment. ASHRAE's members will strive to minimize any possible deleterious effects on the indoor and outdoor environment of the systems and components in their responsibility while maximizing the beneficial effects these systems provide, consistent with the accepted standards and the practical state of the art.

ASHRAE's short-range goal is to ensure that the systems and components within its scope do not impact the indoor or outdoor environment to a greater extent than specified by the standards as established by itself and other responsible bodies.

As an ongoing goal, ASHRAE will, through its Standards Committee and extensive technical committee structure, continue to generate up-to-date standards where appropriate and adopt, recommend, and promote those new and revised standards developed by other responsible organizations.

Through its Handbook, appropriate chapters will contain up-to-date standards and design considerations as the material is systematically revised.

ASHRAE will take the lead with research and dissemination of environmental information of its primary interest and will seek out and disseminate information from other responsible organizations that is pertinent, as guides to updating standards.

The effects of the design and selection of equipment and systems will be considered within the scope of the system's intended use and expected misuse. The disposal of hazardous materials, if any, will also be considered.

ASHRAE's primary concern for environmental impact will be at the site where equipment within ASHRAE's scope operates. However, energy source selection and the possible environmental impact due to the energy source and energy transportation will be considered where possible. Recommendations concerning energy source selection should be made by its members.