


A

✓USE SILICONE, HOT GLUE OR ANY OTHER GLUE TO CATCH UP THE VALVE

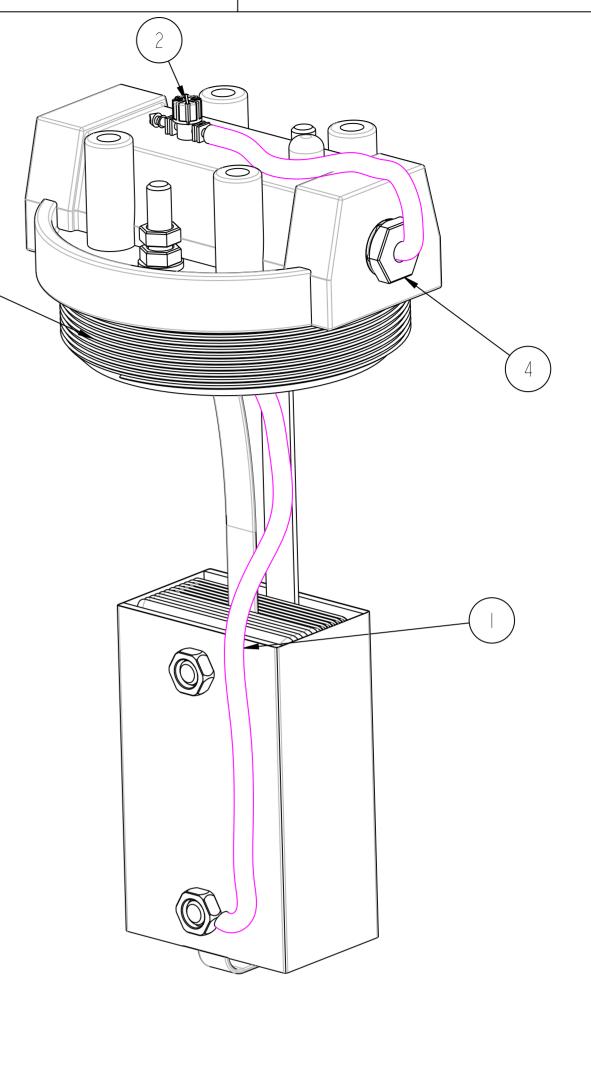

_								
	6	Teflon tape	000000	Buy	00			
	5	Silicone glue	000000	Виу	00			
	4	Plug - Machining	2120410	MAKE	0 0			
	3	Cup - Assembly	2120300	ASM	00			
	2	Barbed valve 1/4"	0000000	Виу	#R612CT			
		air tube (SEE NOTE I)	000000	Виу	0 0			
	#	NAME	DRW No.	SUPPLIAR	CATALOG NO.	QNT		

0.5



	™ .	JULIAN CA	TALOU NO. WIT						
PART NAME:									
Cup with air inlet - Assembly									
WWW.HYDROGEN-FIRST-AID.COM									
Pavlo K.		DRAWING NUMBER	MATERIAL						
Pavlo K.		2120400	_						
Pavlo K.		2120400							
	SUPPLIER	CATALOG NUMBER							
ERWISE SPECIFIED)	ASM	$\bigcirc \bigcirc$							
0.5		UPDATE	 						
	Cup W WWW. Pavlo K. Pavlo K. Pavlo K.	Cup with ai WWW. HYDROG Pavlo K. Pavlo K. Pavlo K. SUPPLIER ASM	PART NAME: Cup with air inlet - Ass WWW. HYDROGEN-FIRST-AID Pavlo K. Pavlo K. Pavlo K. SUPPLIER CATALOG NUMBER ASM O O						

00

NOTES

I) POLYETHYLENE TUBE
INNER DIA 3/16"
OUTTER DIA 1/4"
LENGTH 480MM (19")