


当前文件在印刷时是有效的。更新的版本可以在线获得。

WM 964419 拆卸和安装手套箱灯

拆卸手套箱灯


拆卸杂物箱灯

1. 用螺丝刀小心地将手套箱灯从切口处的手套箱饰板压出 **-A-**。

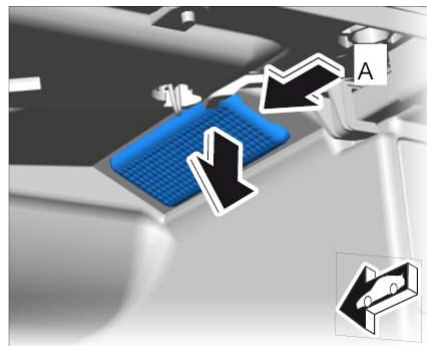

拆卸手套箱灯

2. 松开手套箱灯的电气插头 **-a-**，然后将其断开 **-箭头-**。

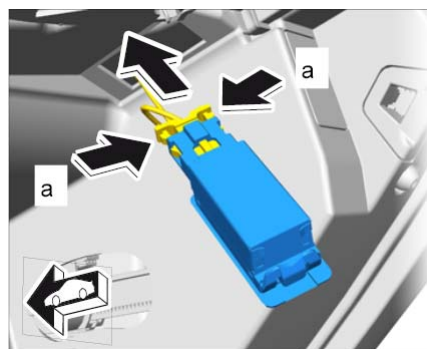


手套箱灯的电气插头

安装手套箱灯


安装杂物箱灯

1. 连接手套箱灯的电气插头 **-箭头-**，直至接头牢固锁止。

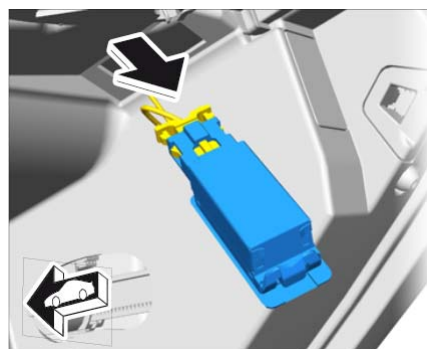

手套箱灯的电气插头

2. 将手套箱灯压入手套箱饰板 -箭头- 。

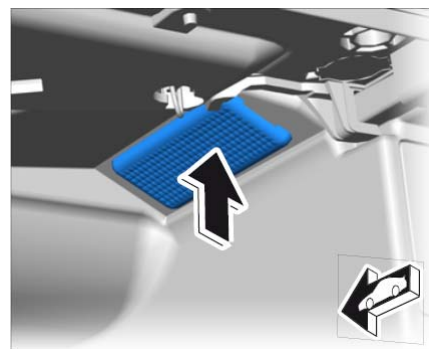

安装手套箱灯

981321, 981331, 981120, 981121, 981130, 981131, 981320, 981330, 981140, 981141, 981340, 981341

年款 起始时间 2012

C00, C02, C05, C06, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C41, C45, C46, C96, C97, C98, C99