


当前文件在印刷时是有效的。更新的版本可以在线获得。

WM 703519 拆卸和安装搁脚板

拆卸和安装搁脚板

拆卸和安装搁脚板

1. 在顶部用手拉出搁脚板 **-箭头-**，并将其从地毯上松开。

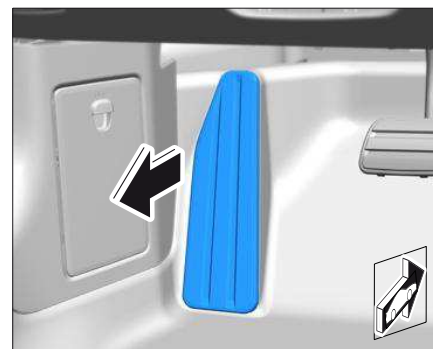

拆卸搁脚板

2. 按照与拆卸相反的顺序进行安装。

982120, 982121, 982130, 982131, 982140, 982141, 982150, 982151, 982320, 982321, 982330, 982331, 982340, 982341, 982350, 982351

年款 起始时间 2017

C00, C02, C05, C06, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C41, C45, C45, C46, C96, C97, C98, C99

