






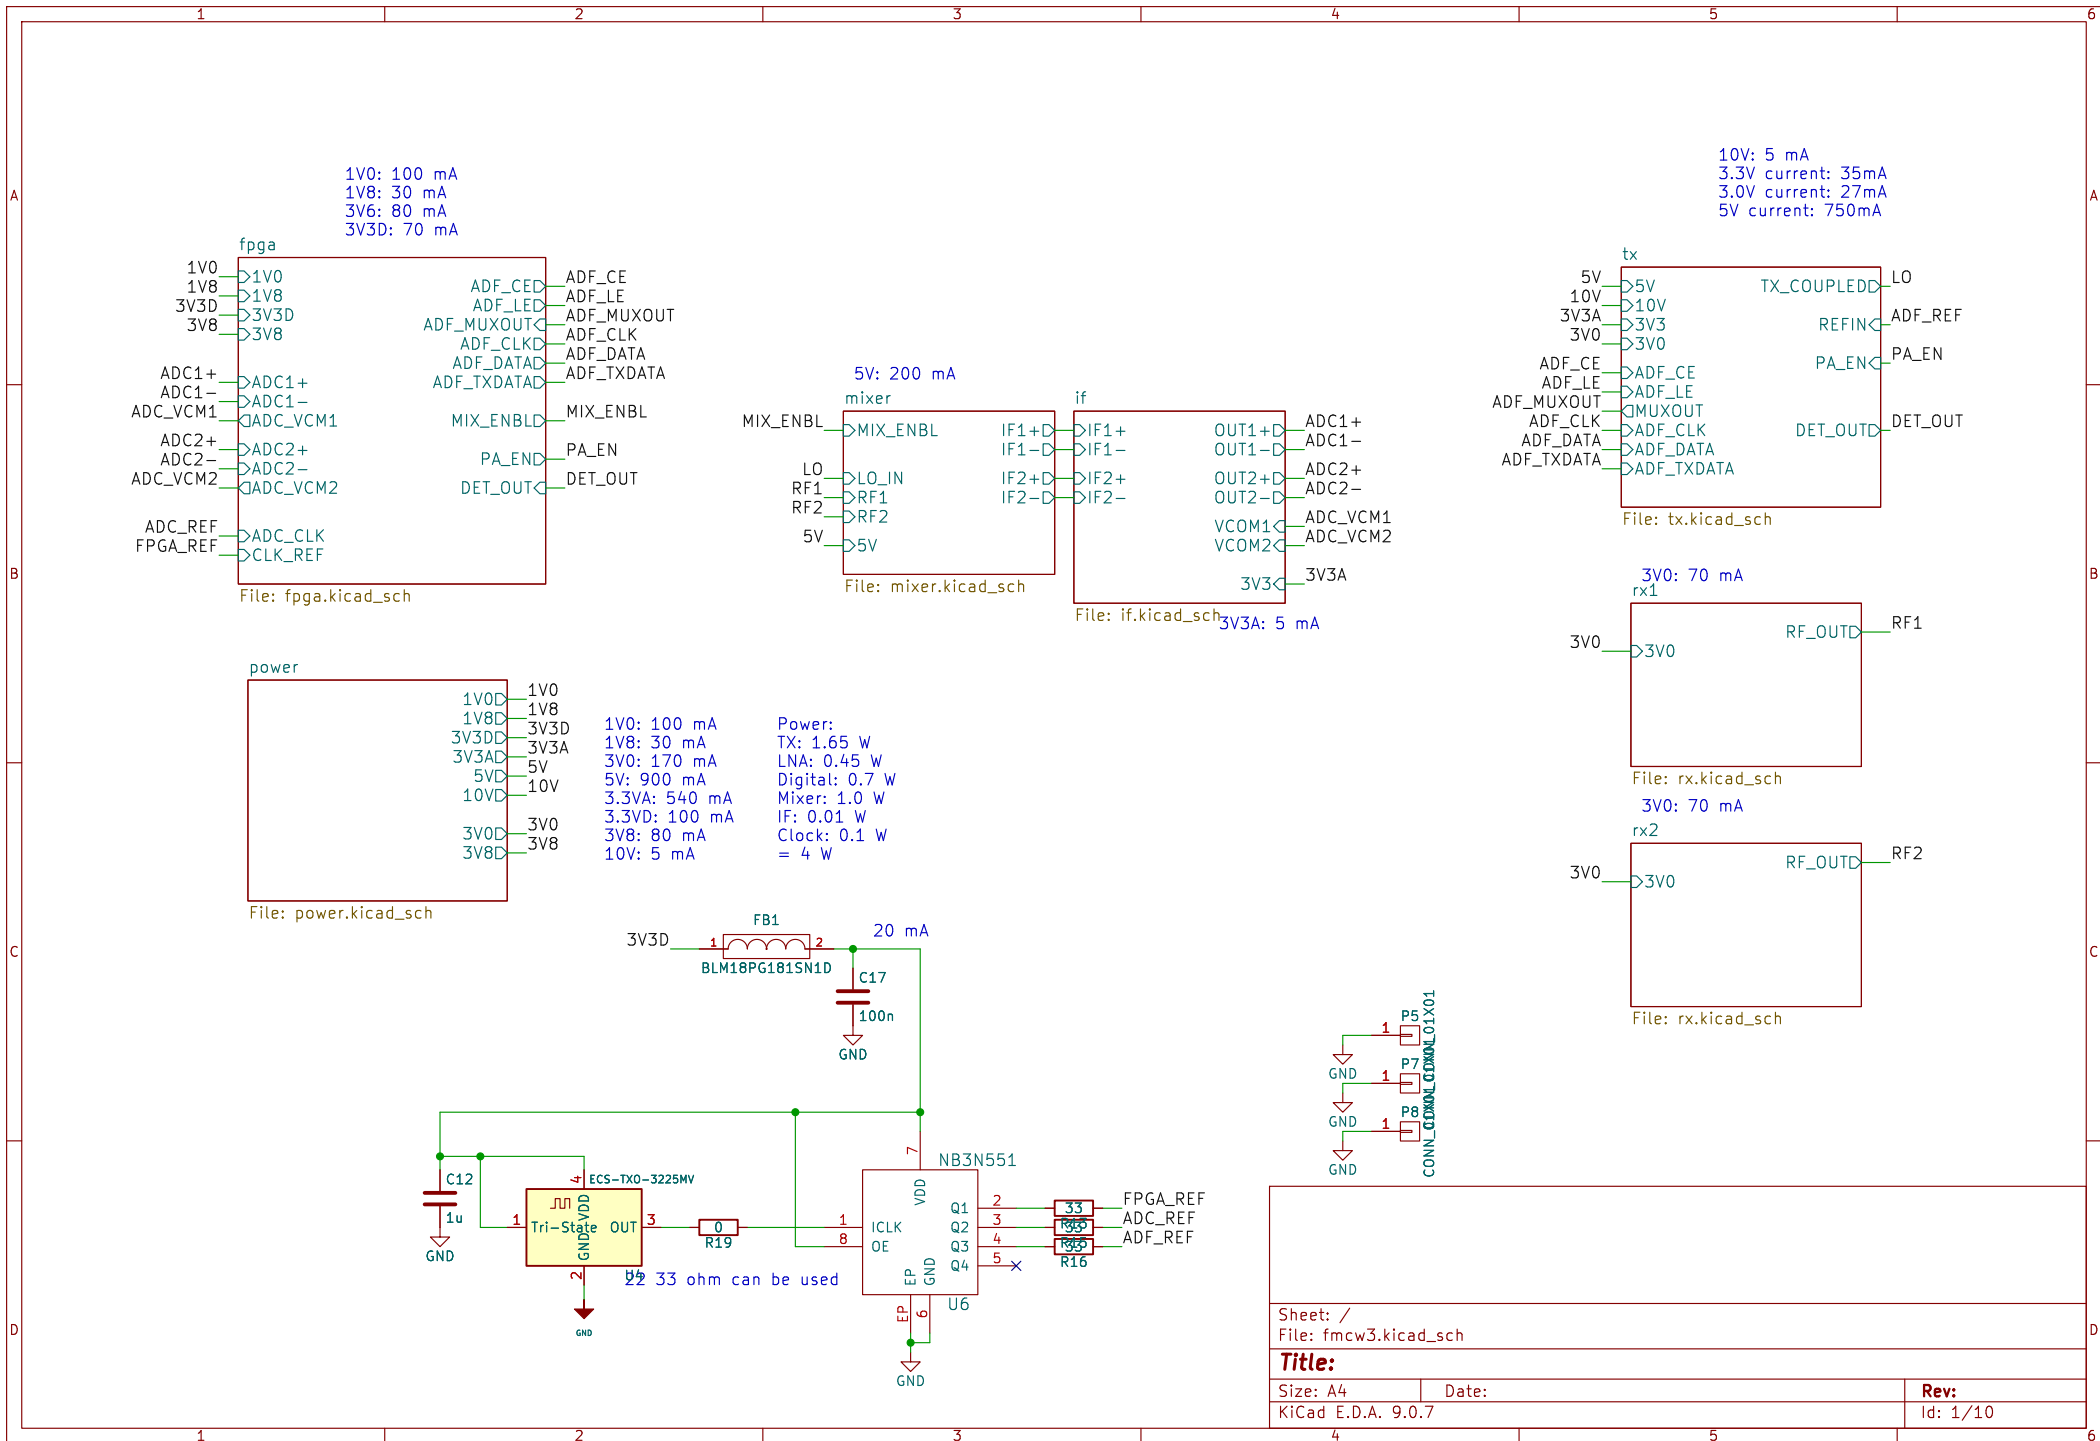







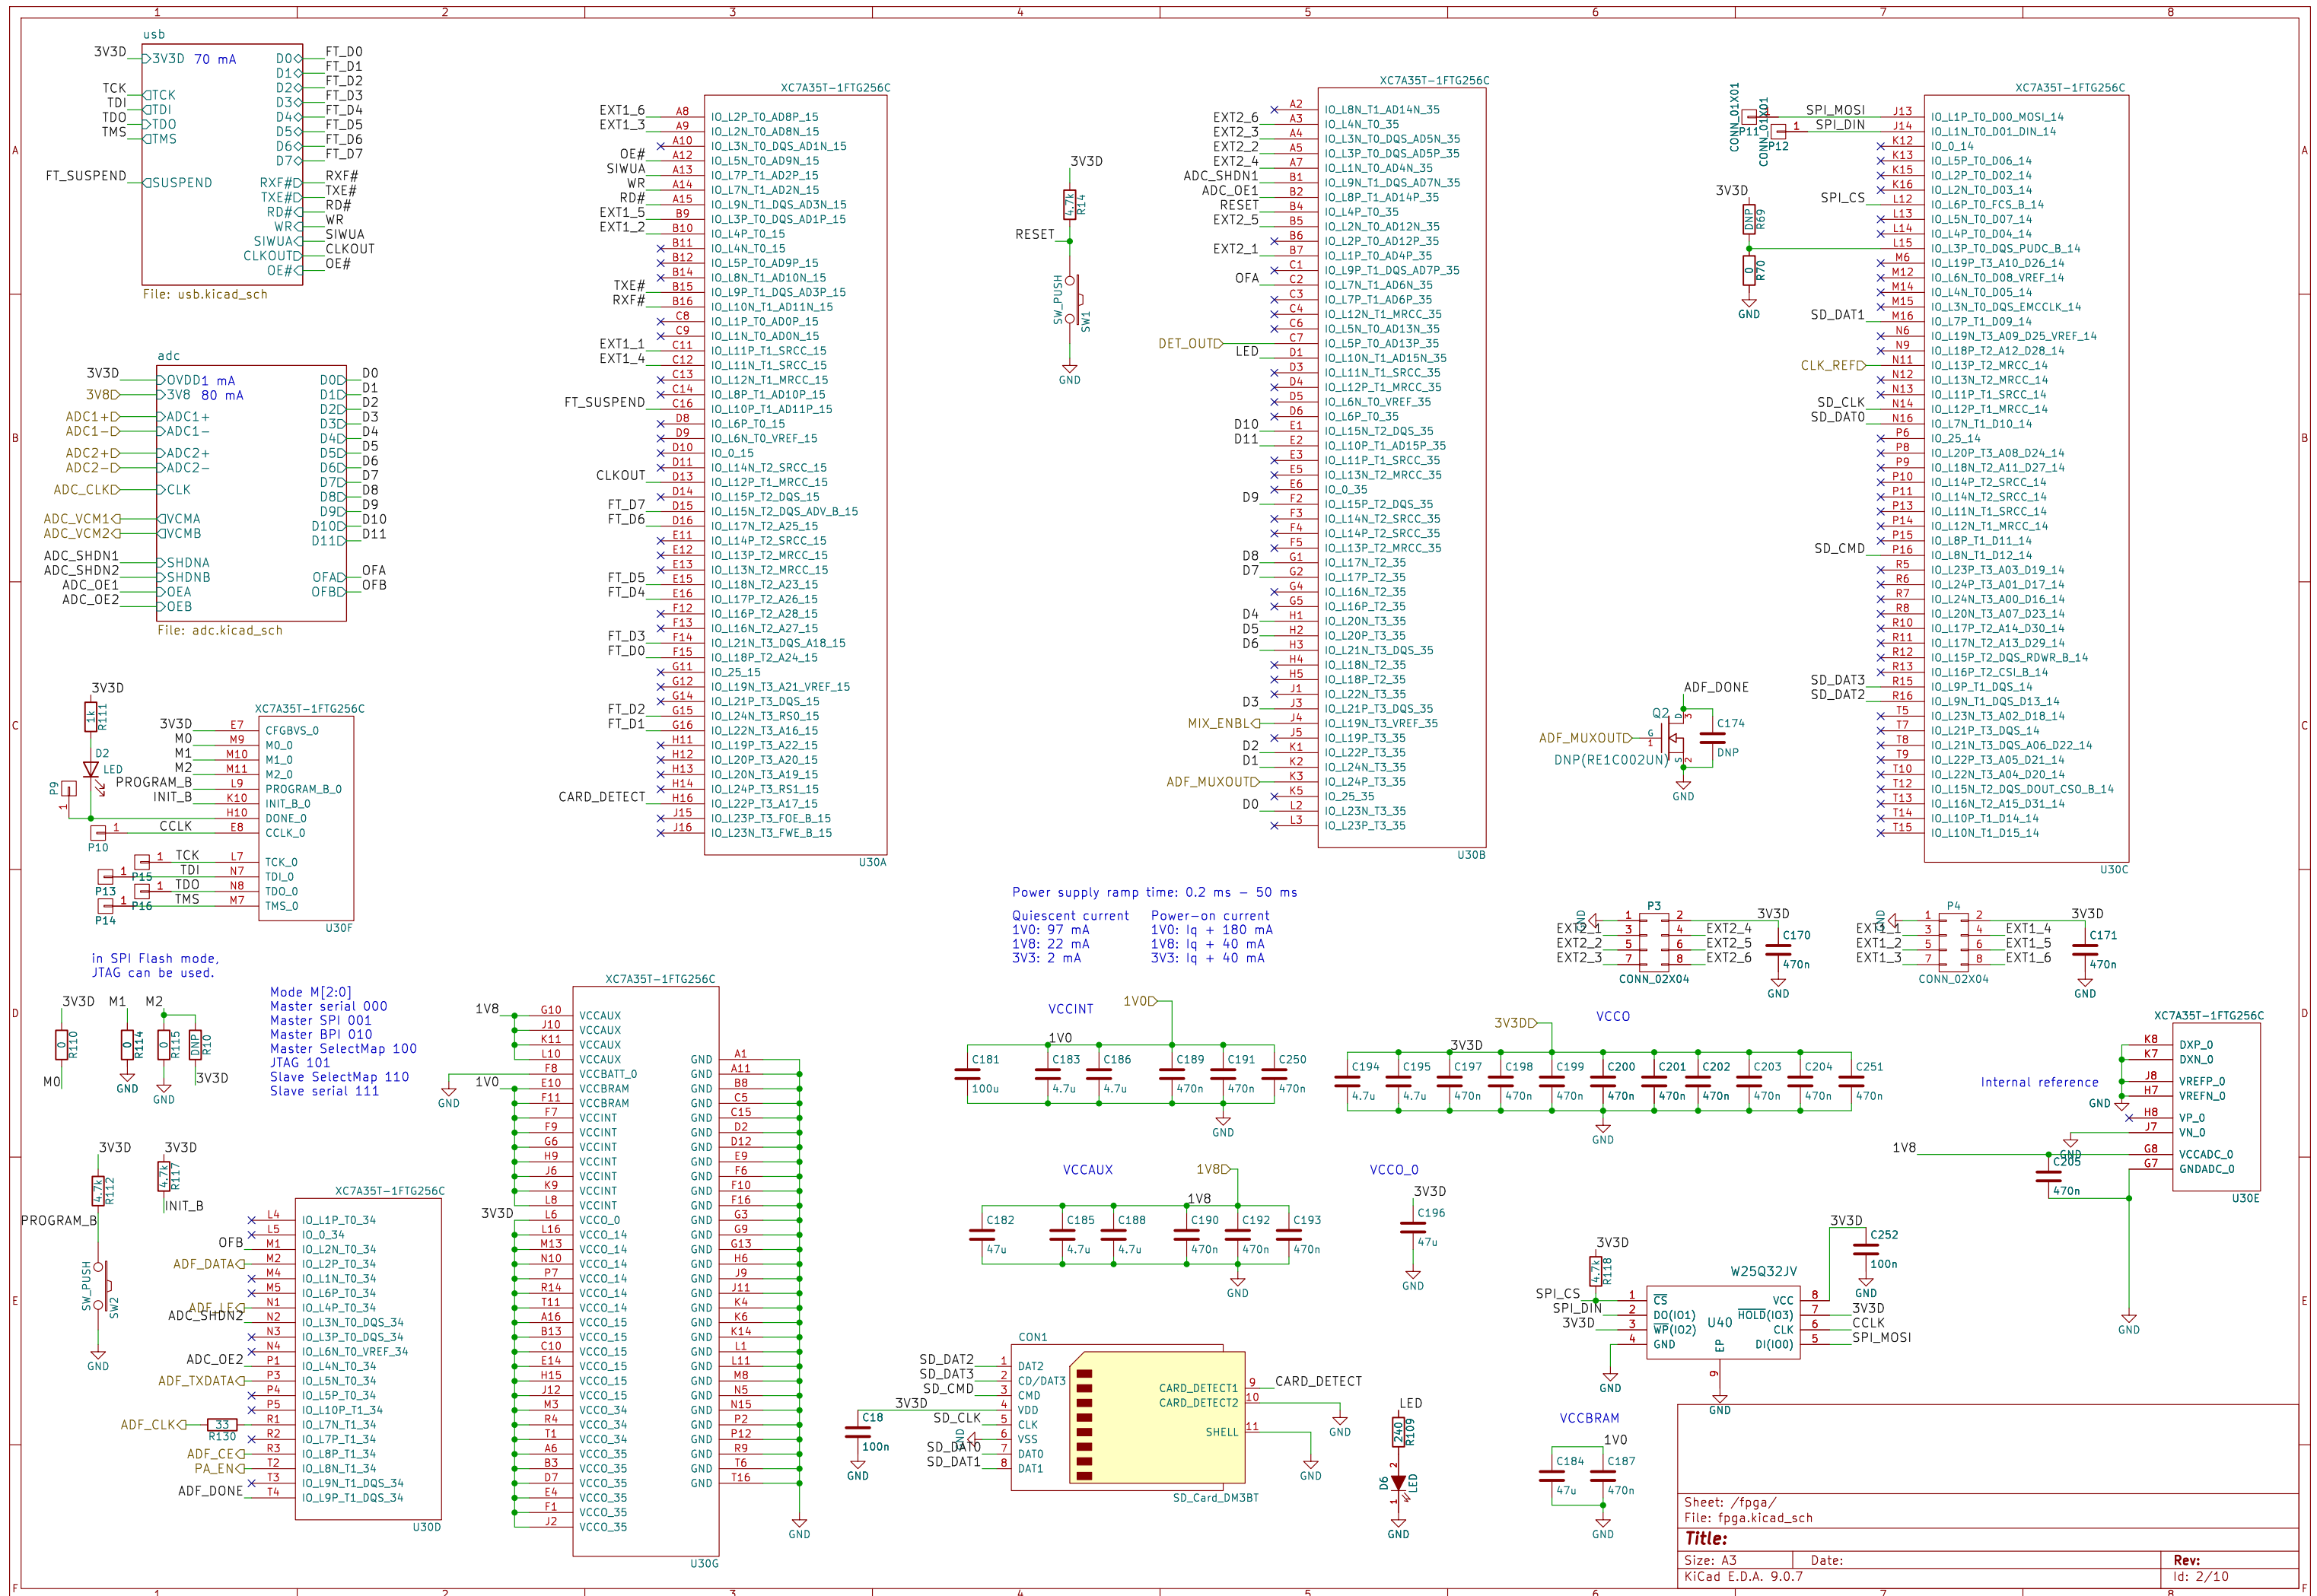


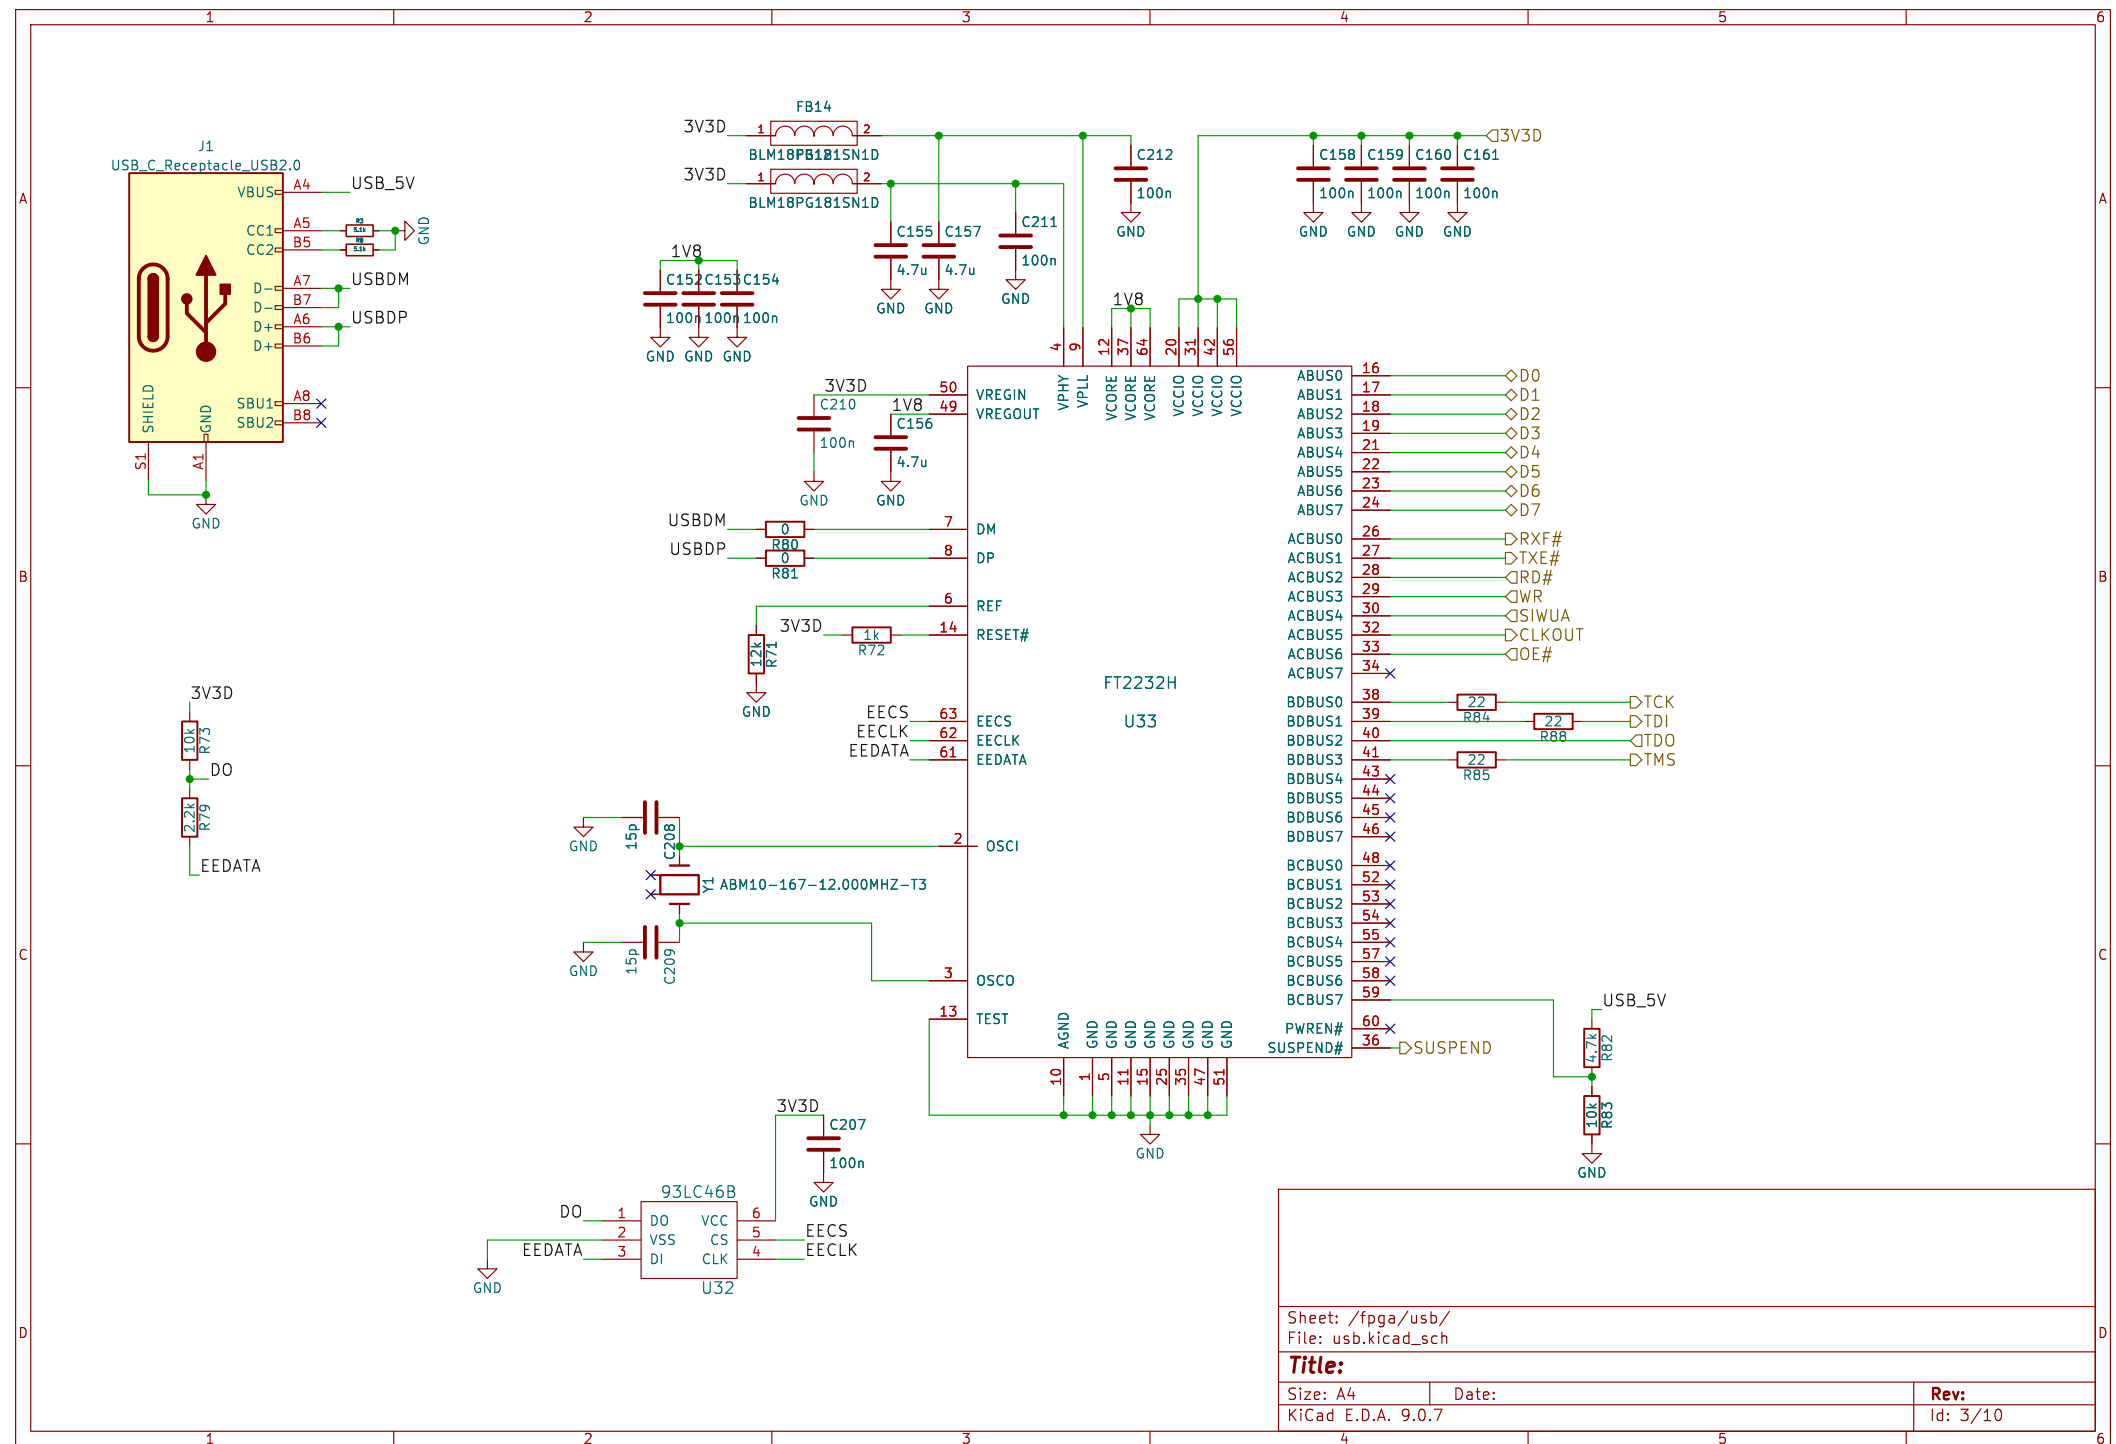

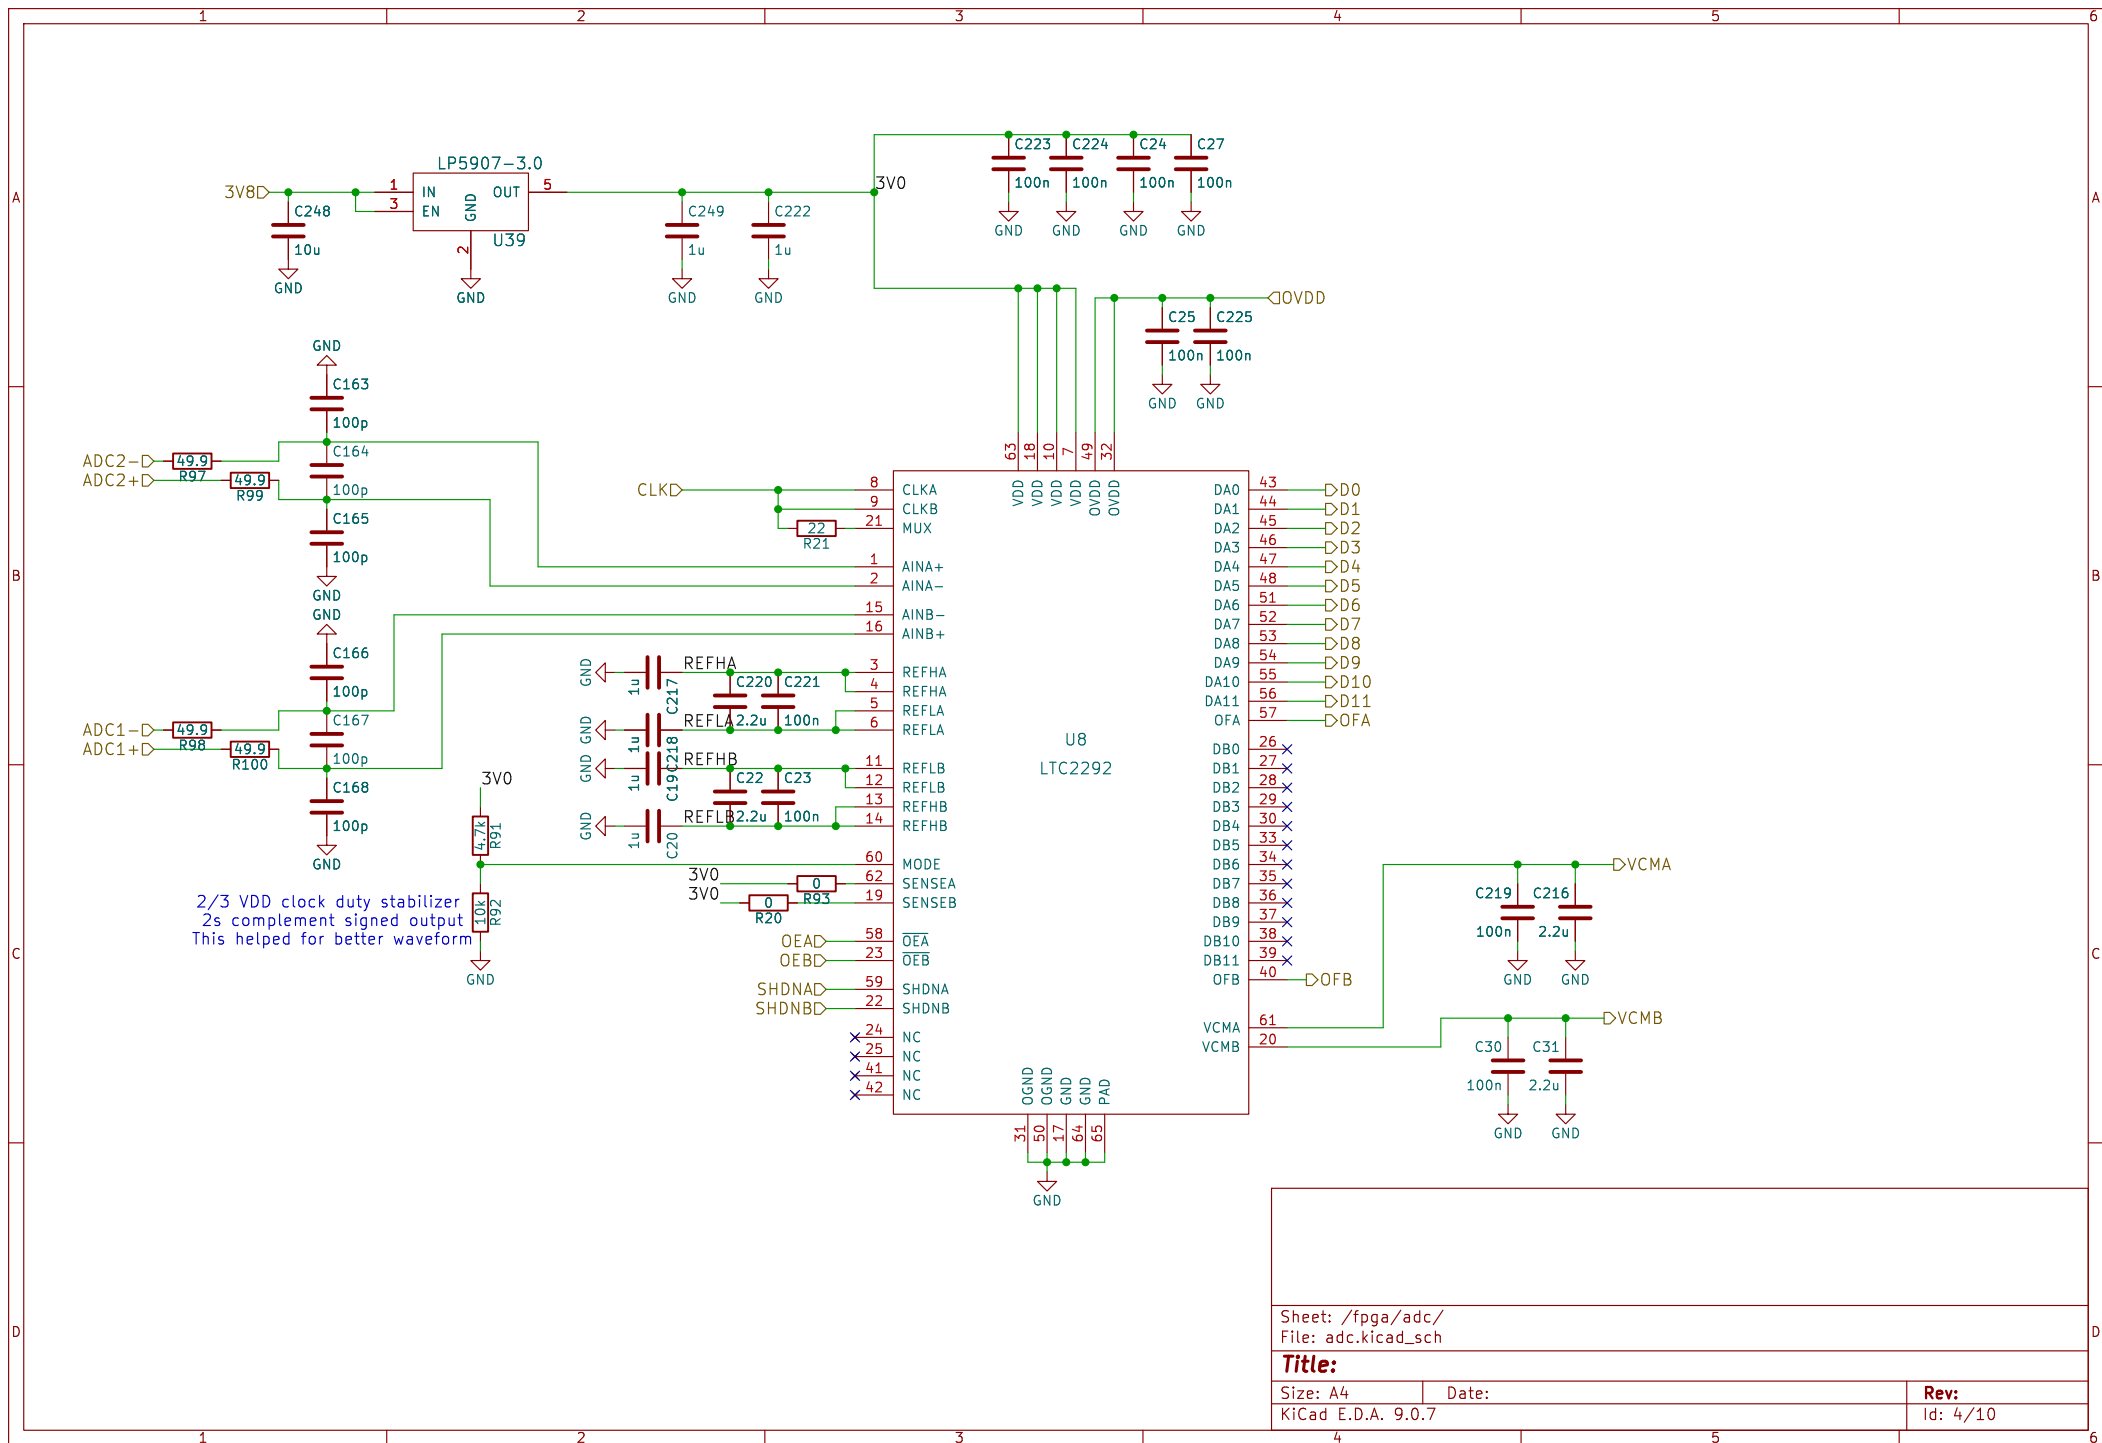

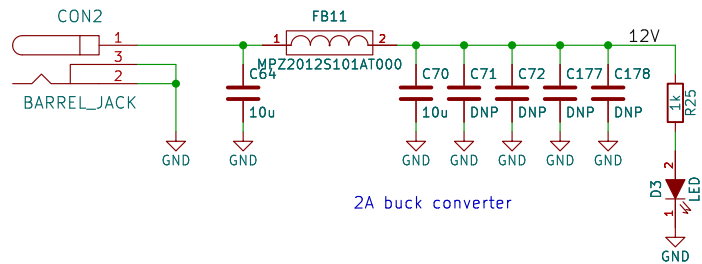

In the Artix-7 data sheet it states that the recommended power-on sequence is VCCINT, VCCBRAM, VCCAUX, and VCCO. 1v0 first 1v8 then 3v3 is the sequence so use power good

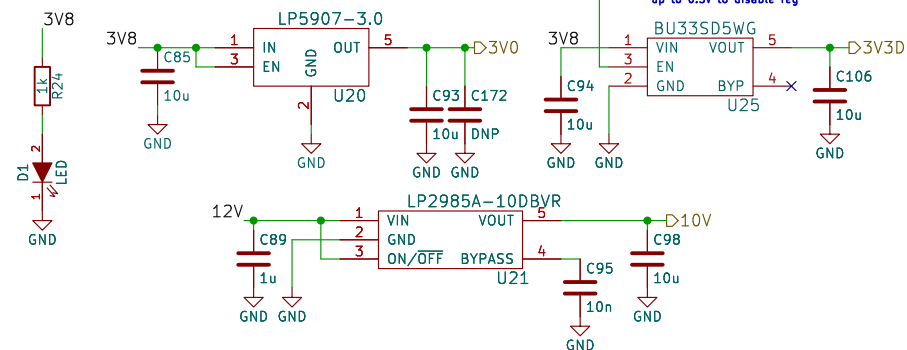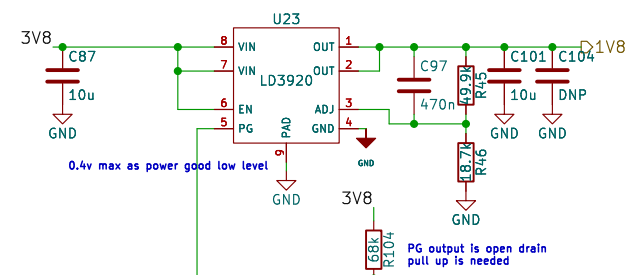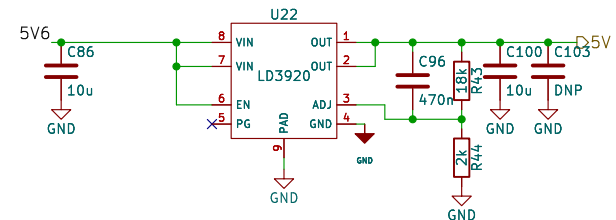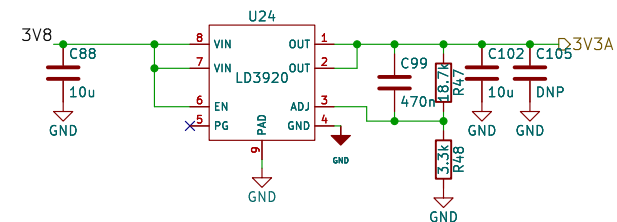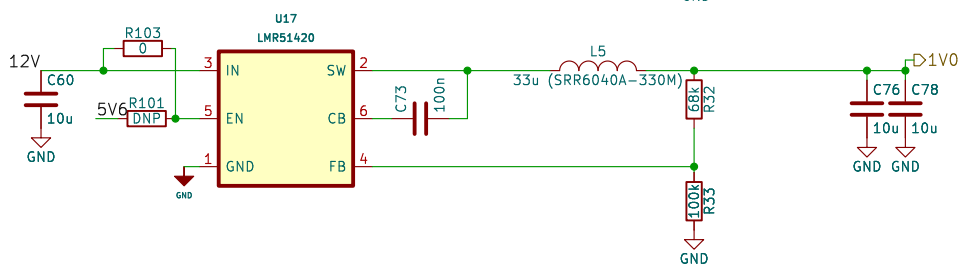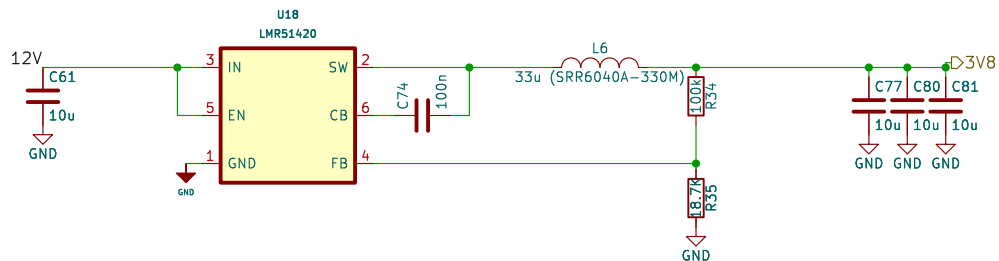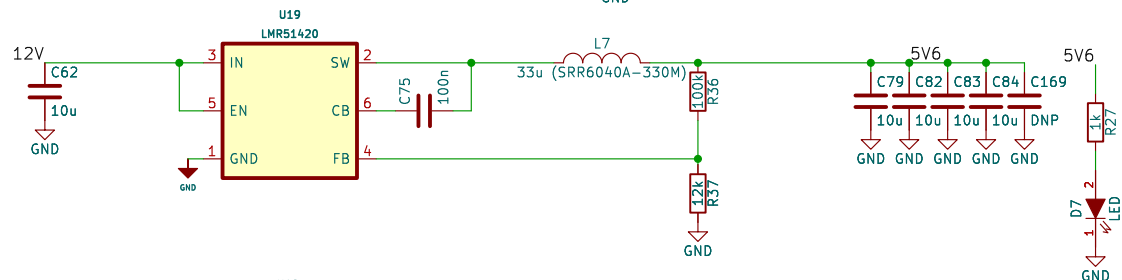


Sheet: /power/
File: power.kicad_sch


Title:


Size: A4
KiCad E.D.A. 9.0.7

Date:

Rev:
Id: 5/10

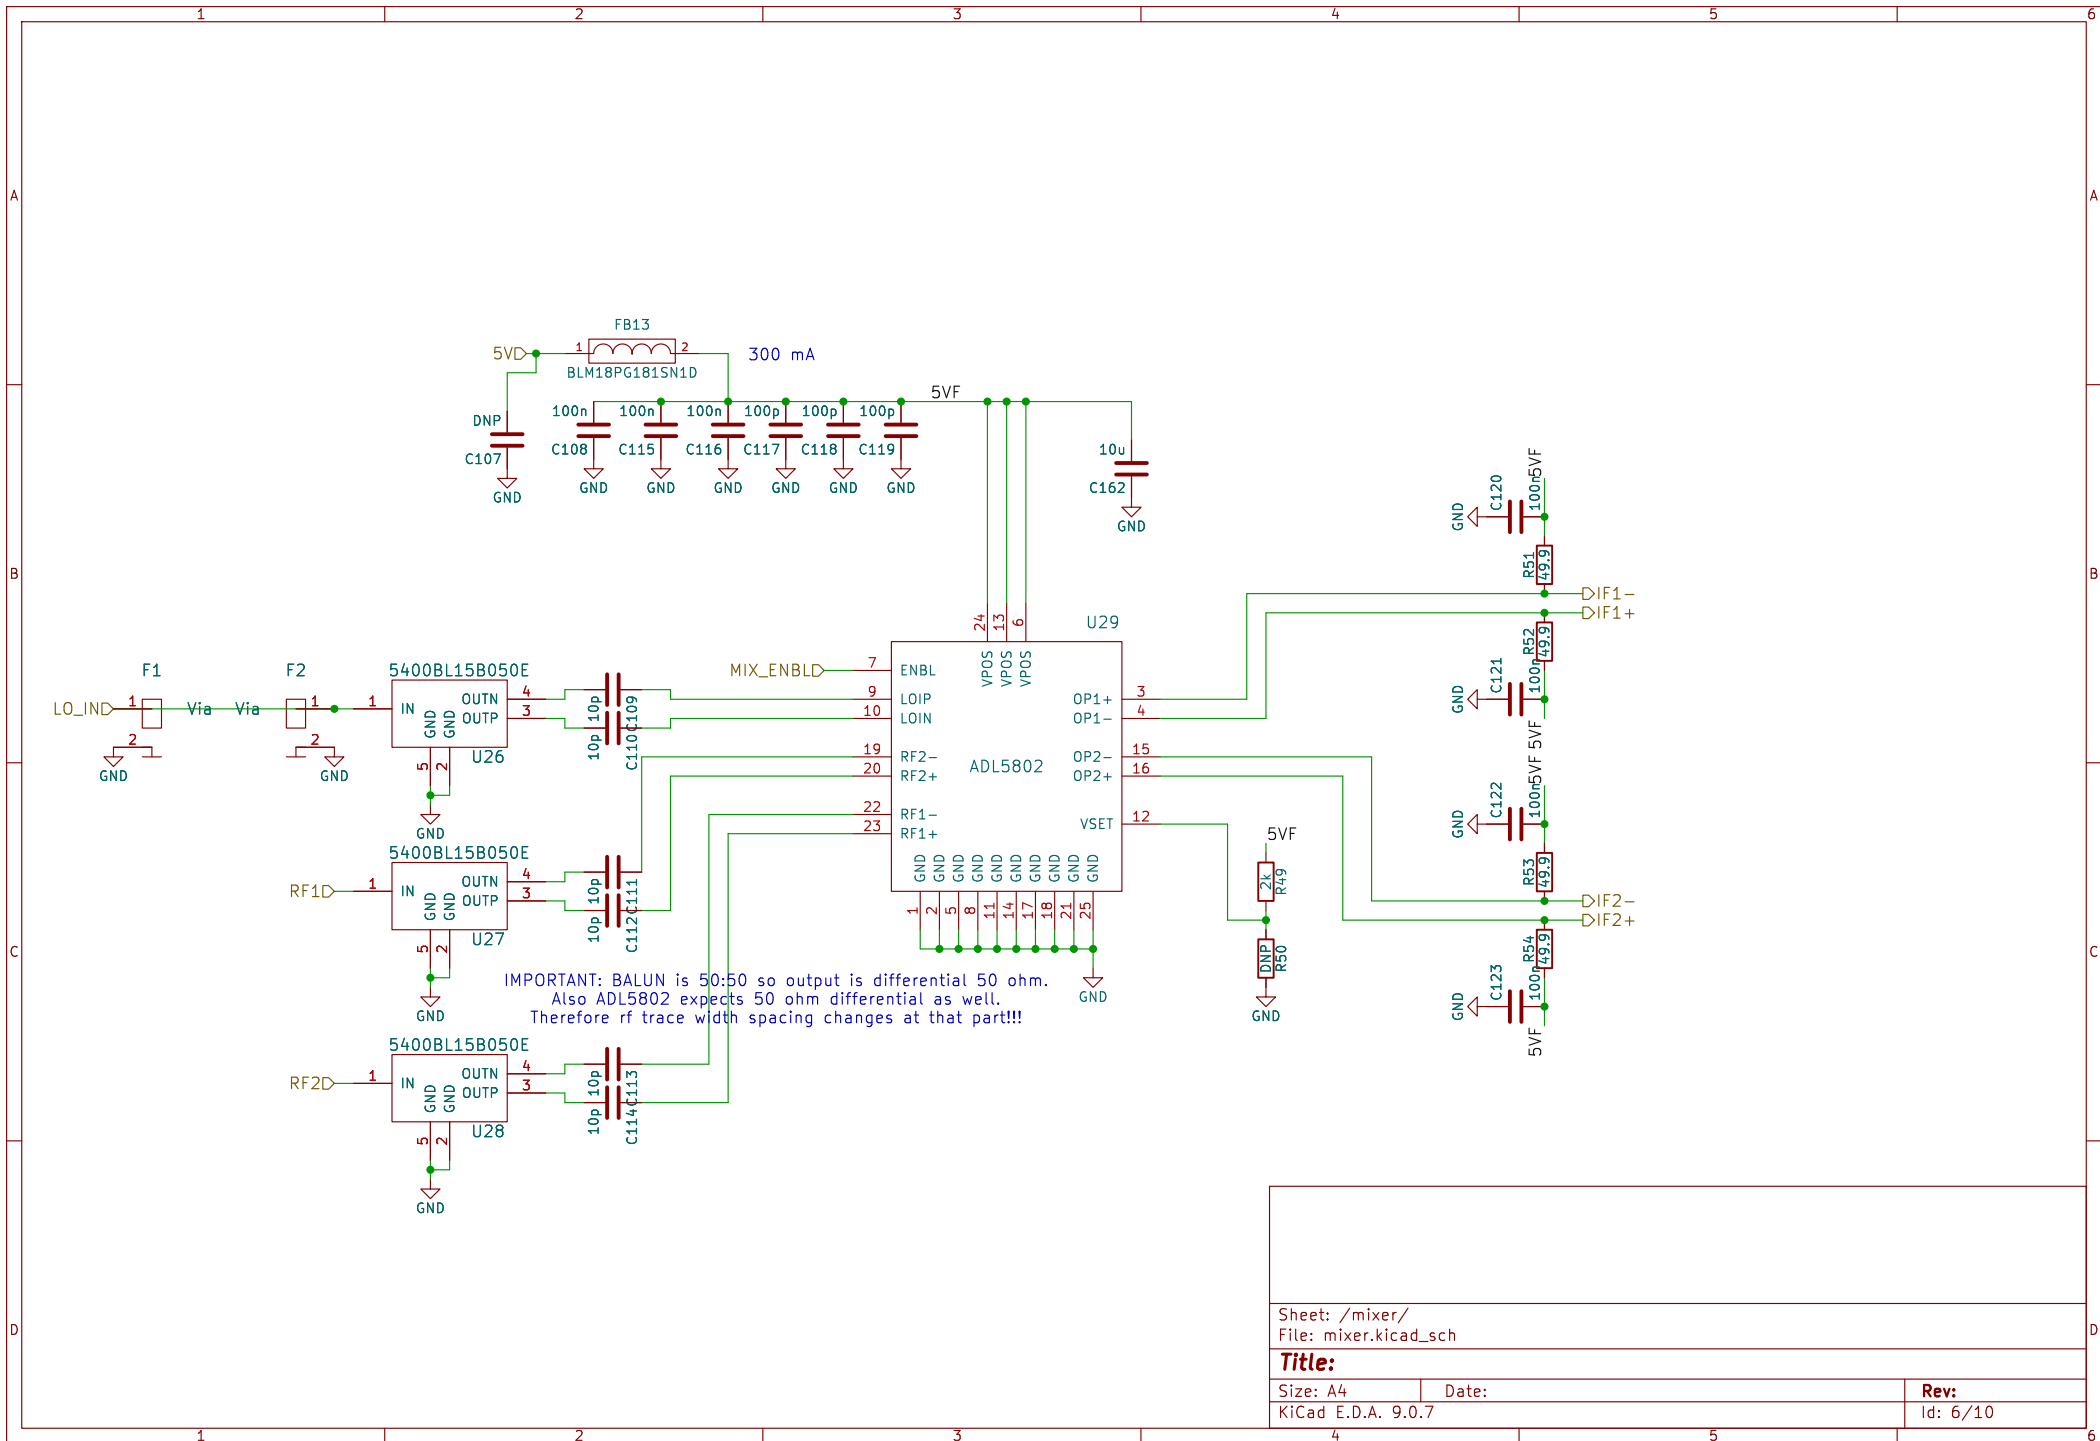

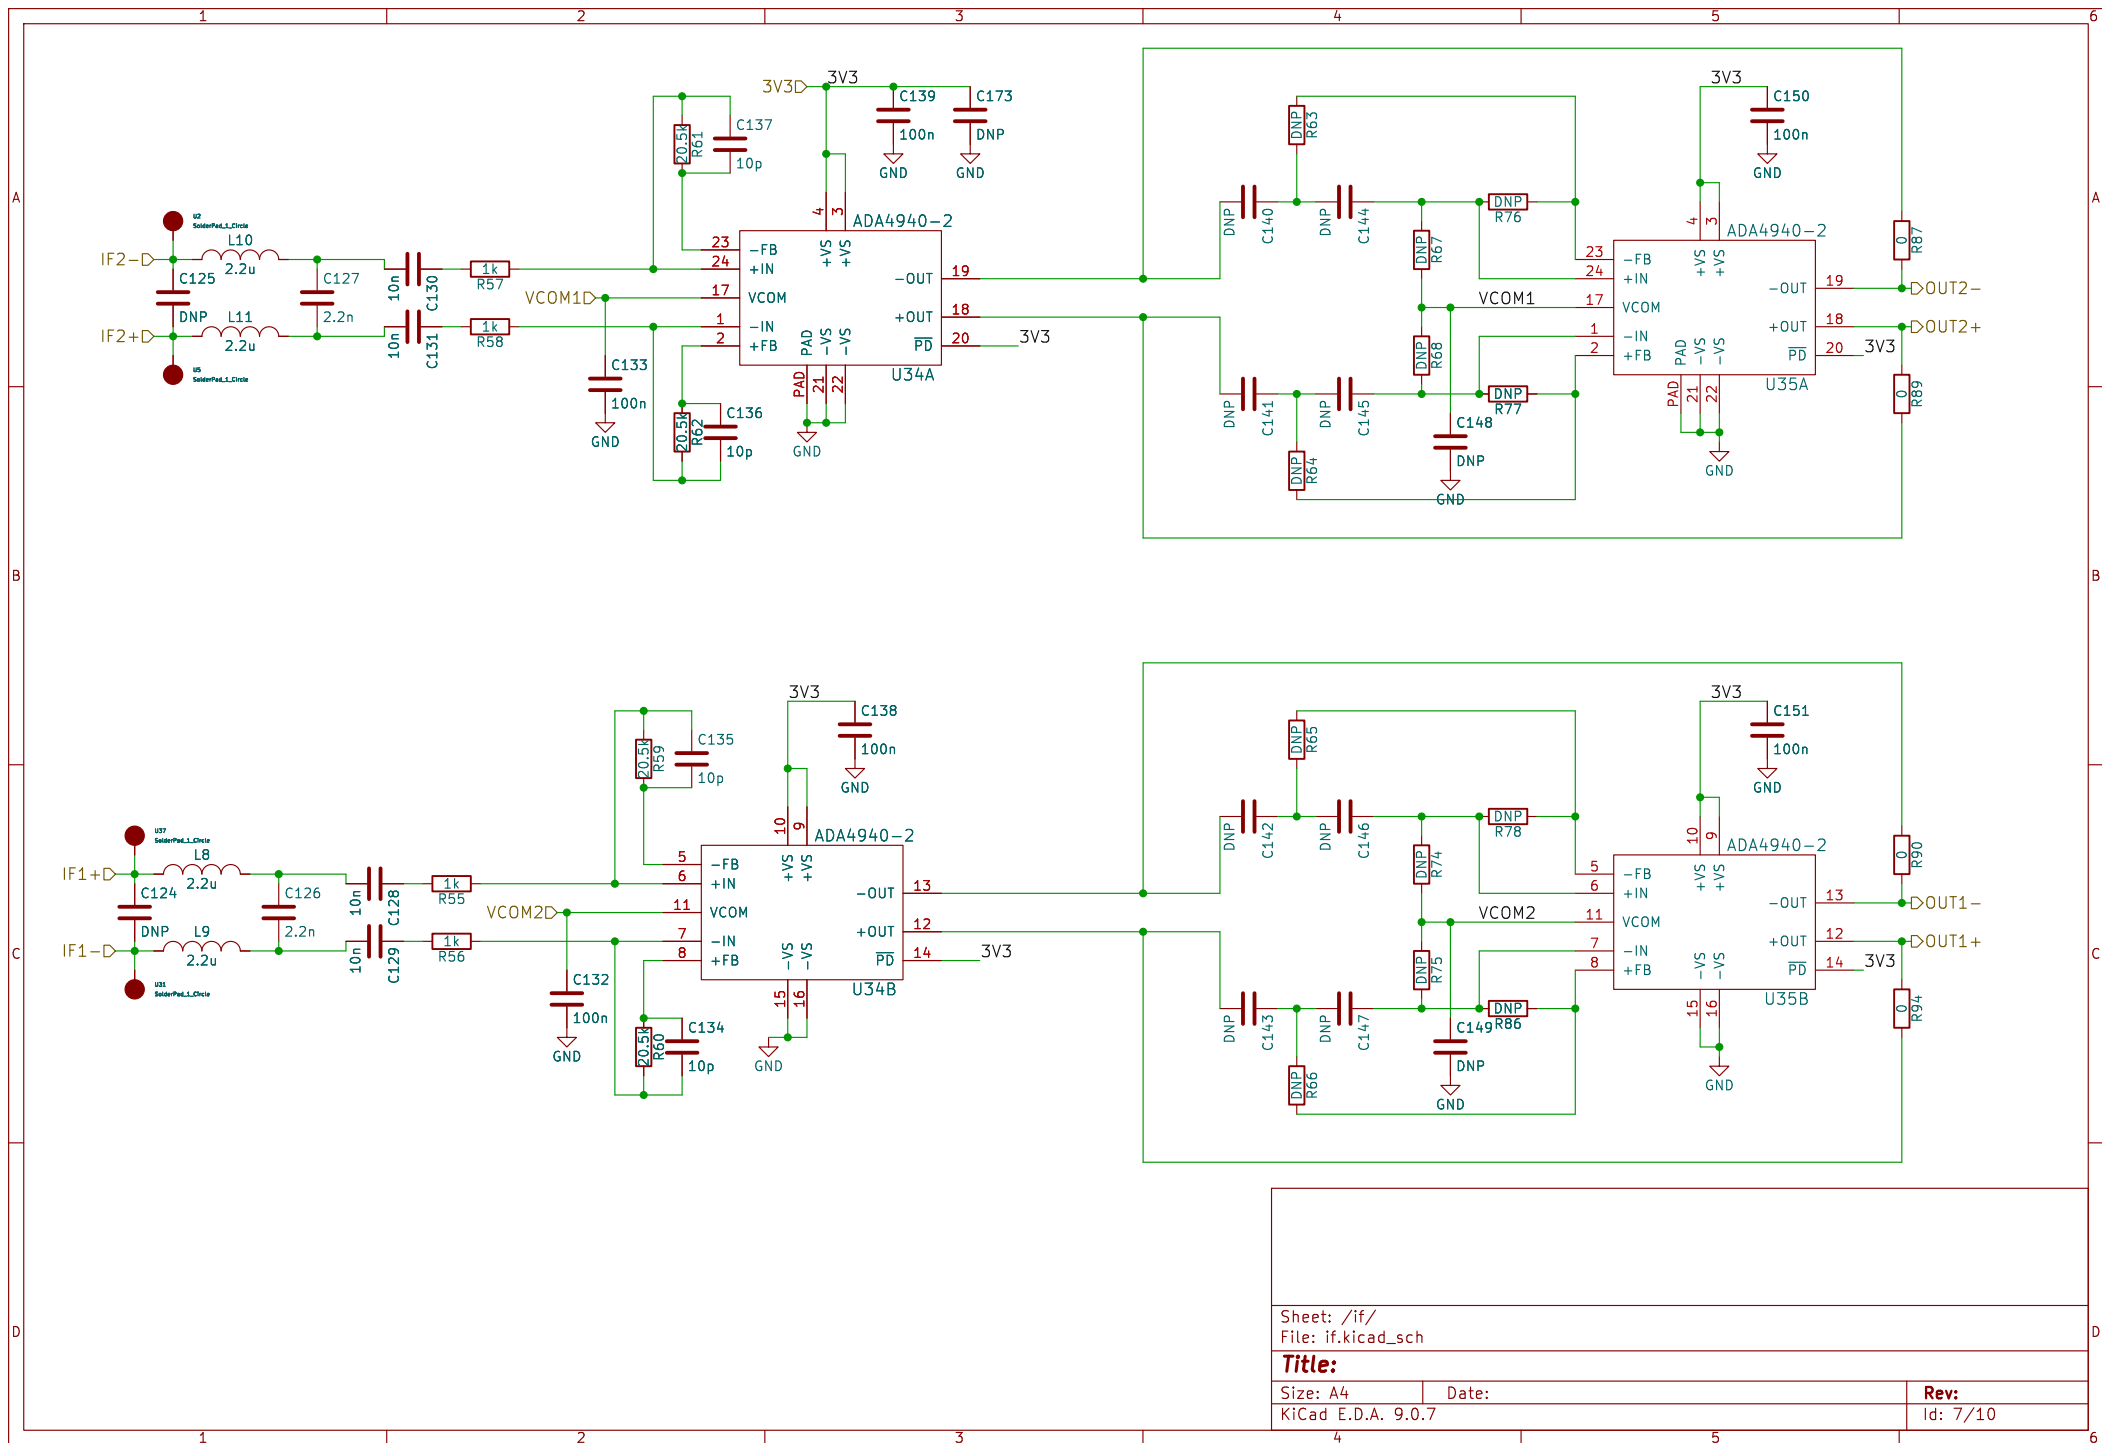

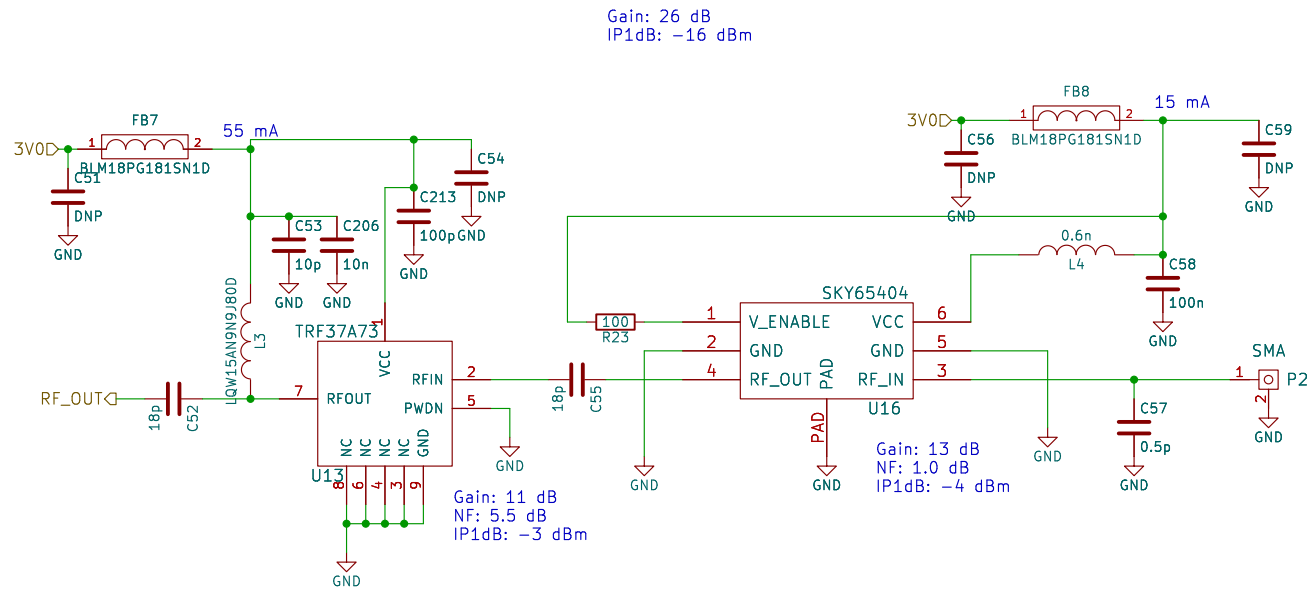

Sheet: /rx2/
File: rx.kicad_sch

Title:

Size: A4
KiCad E.D.A. 9.0.7

Date:

Rev:
Id: 10/10