





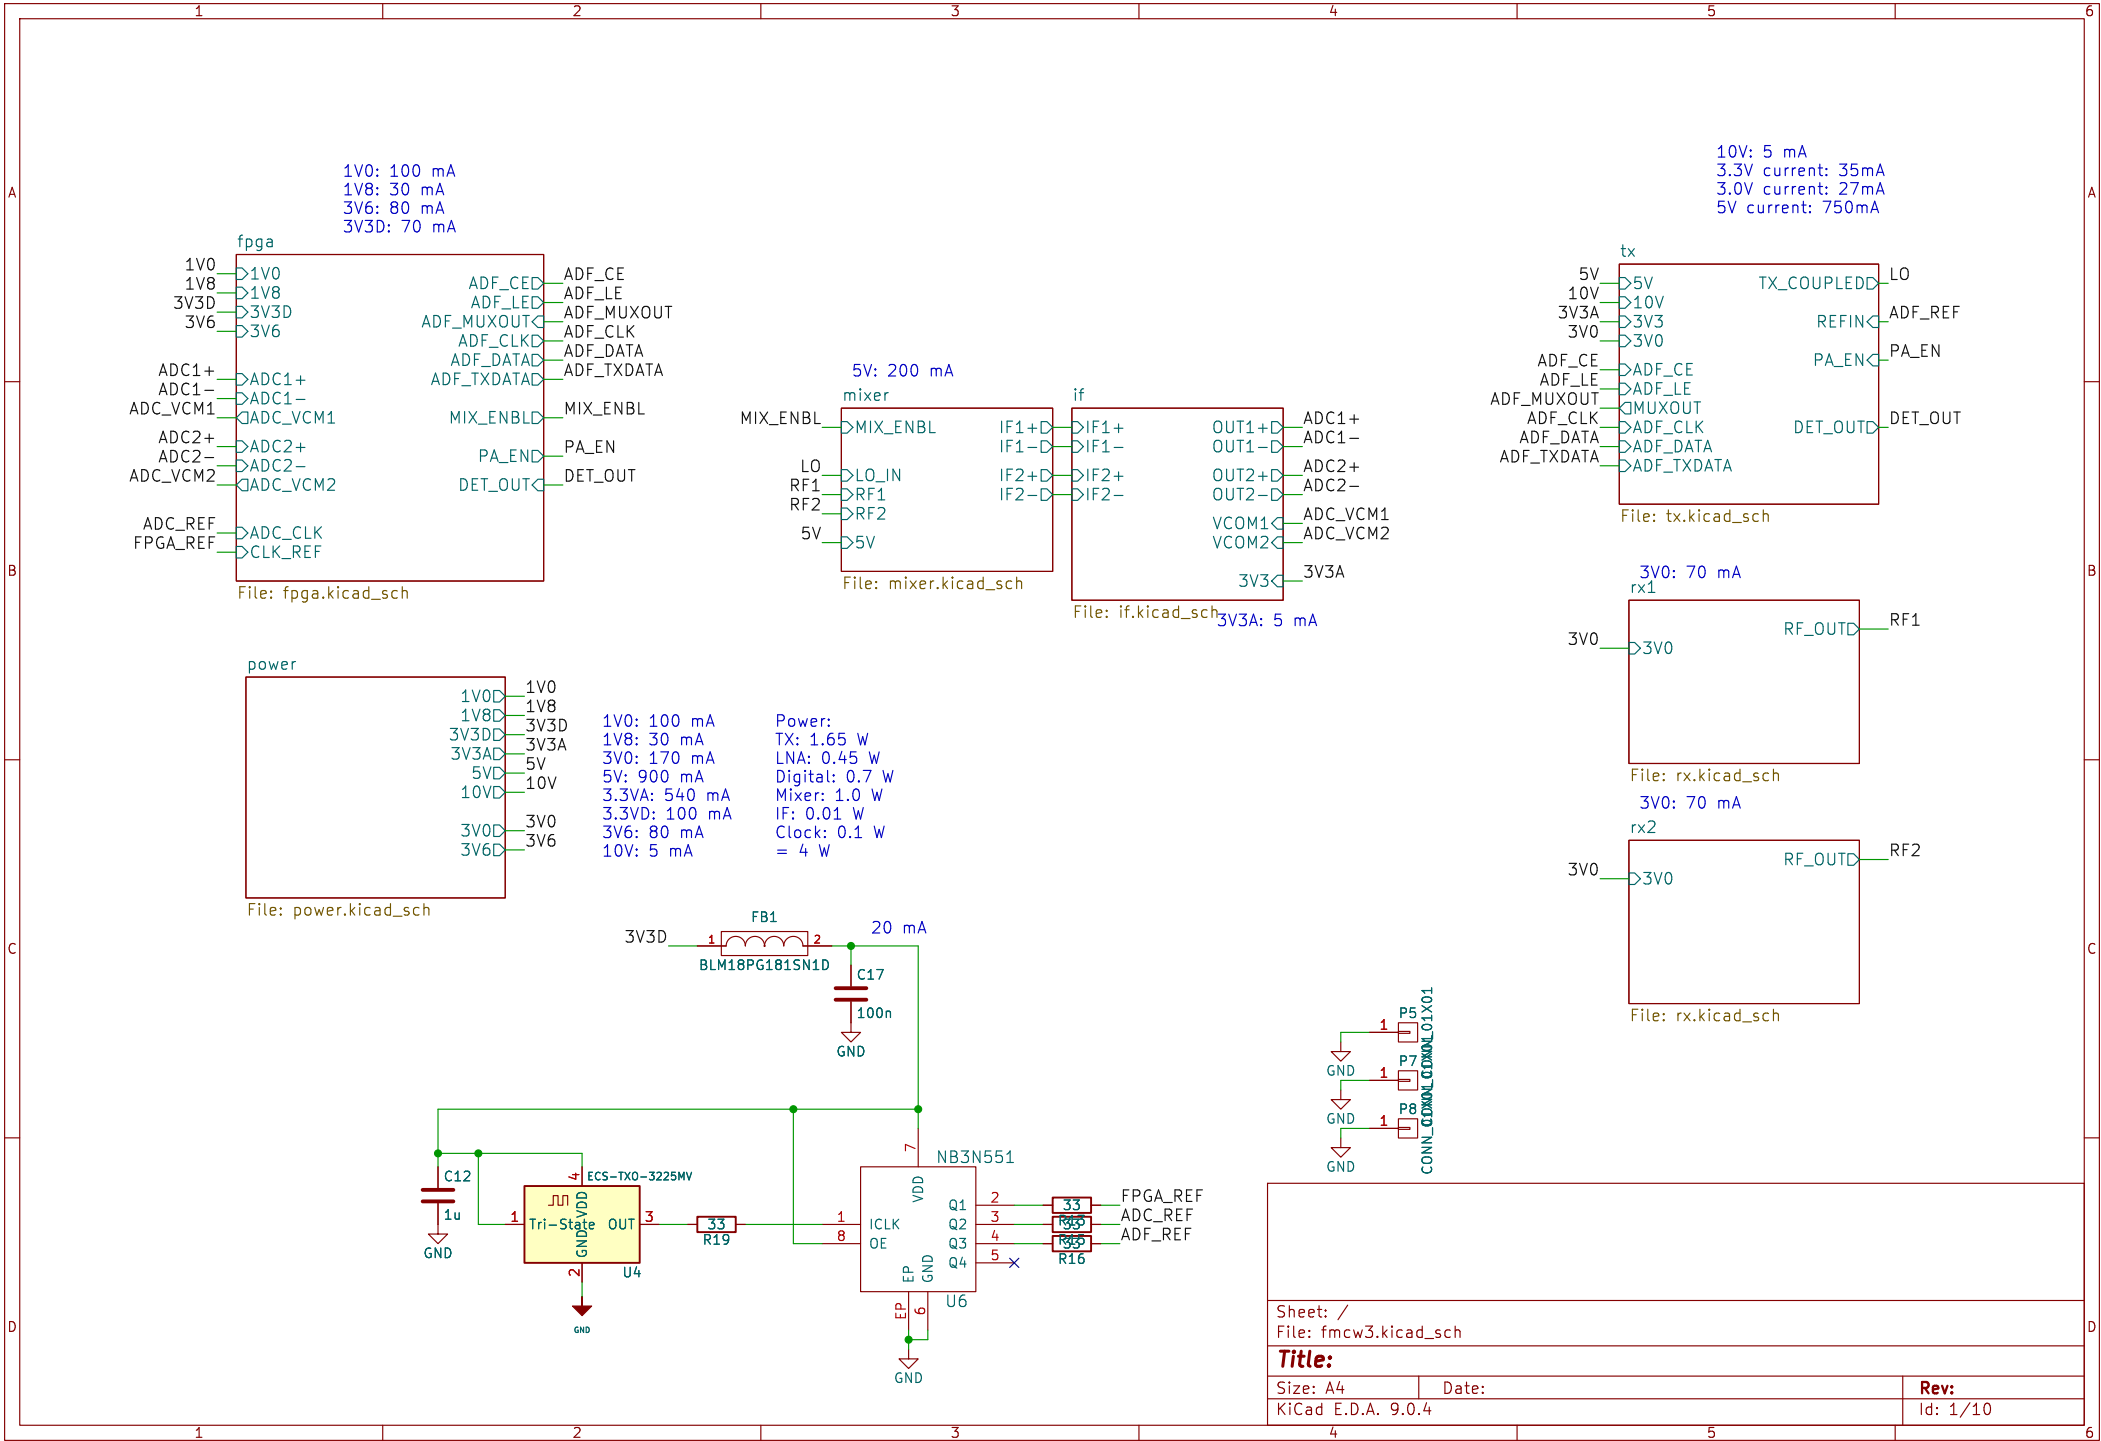




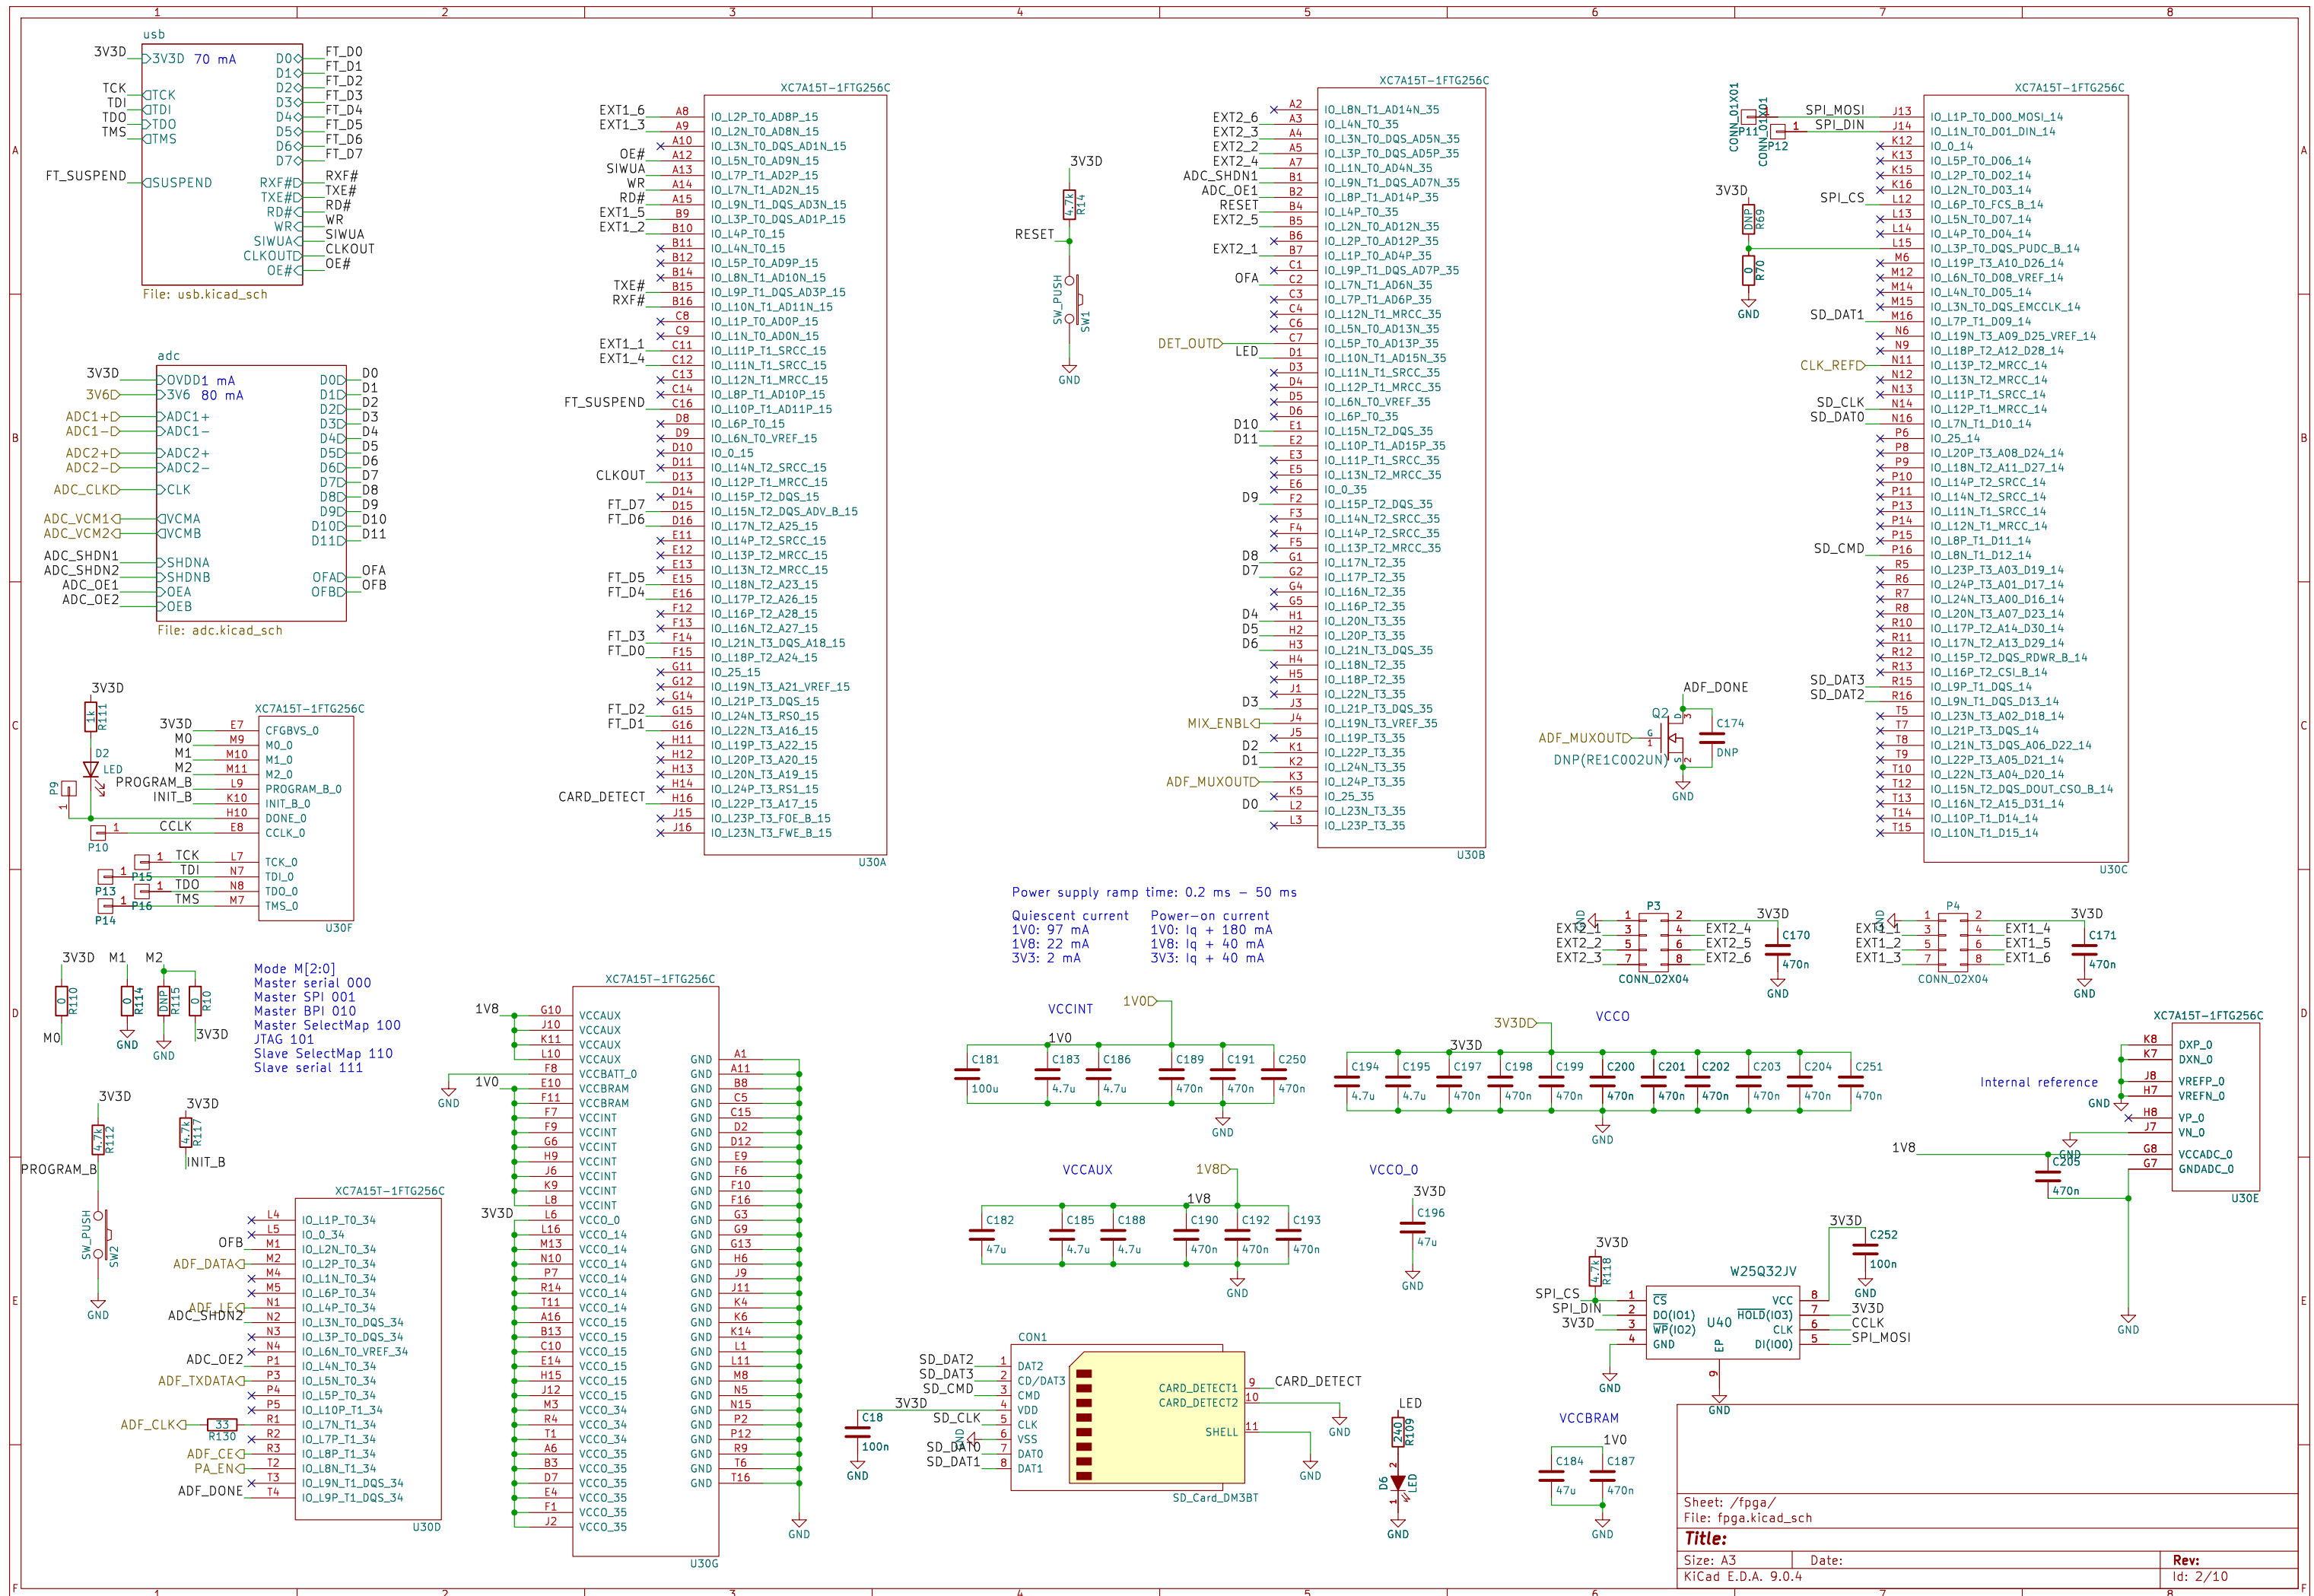


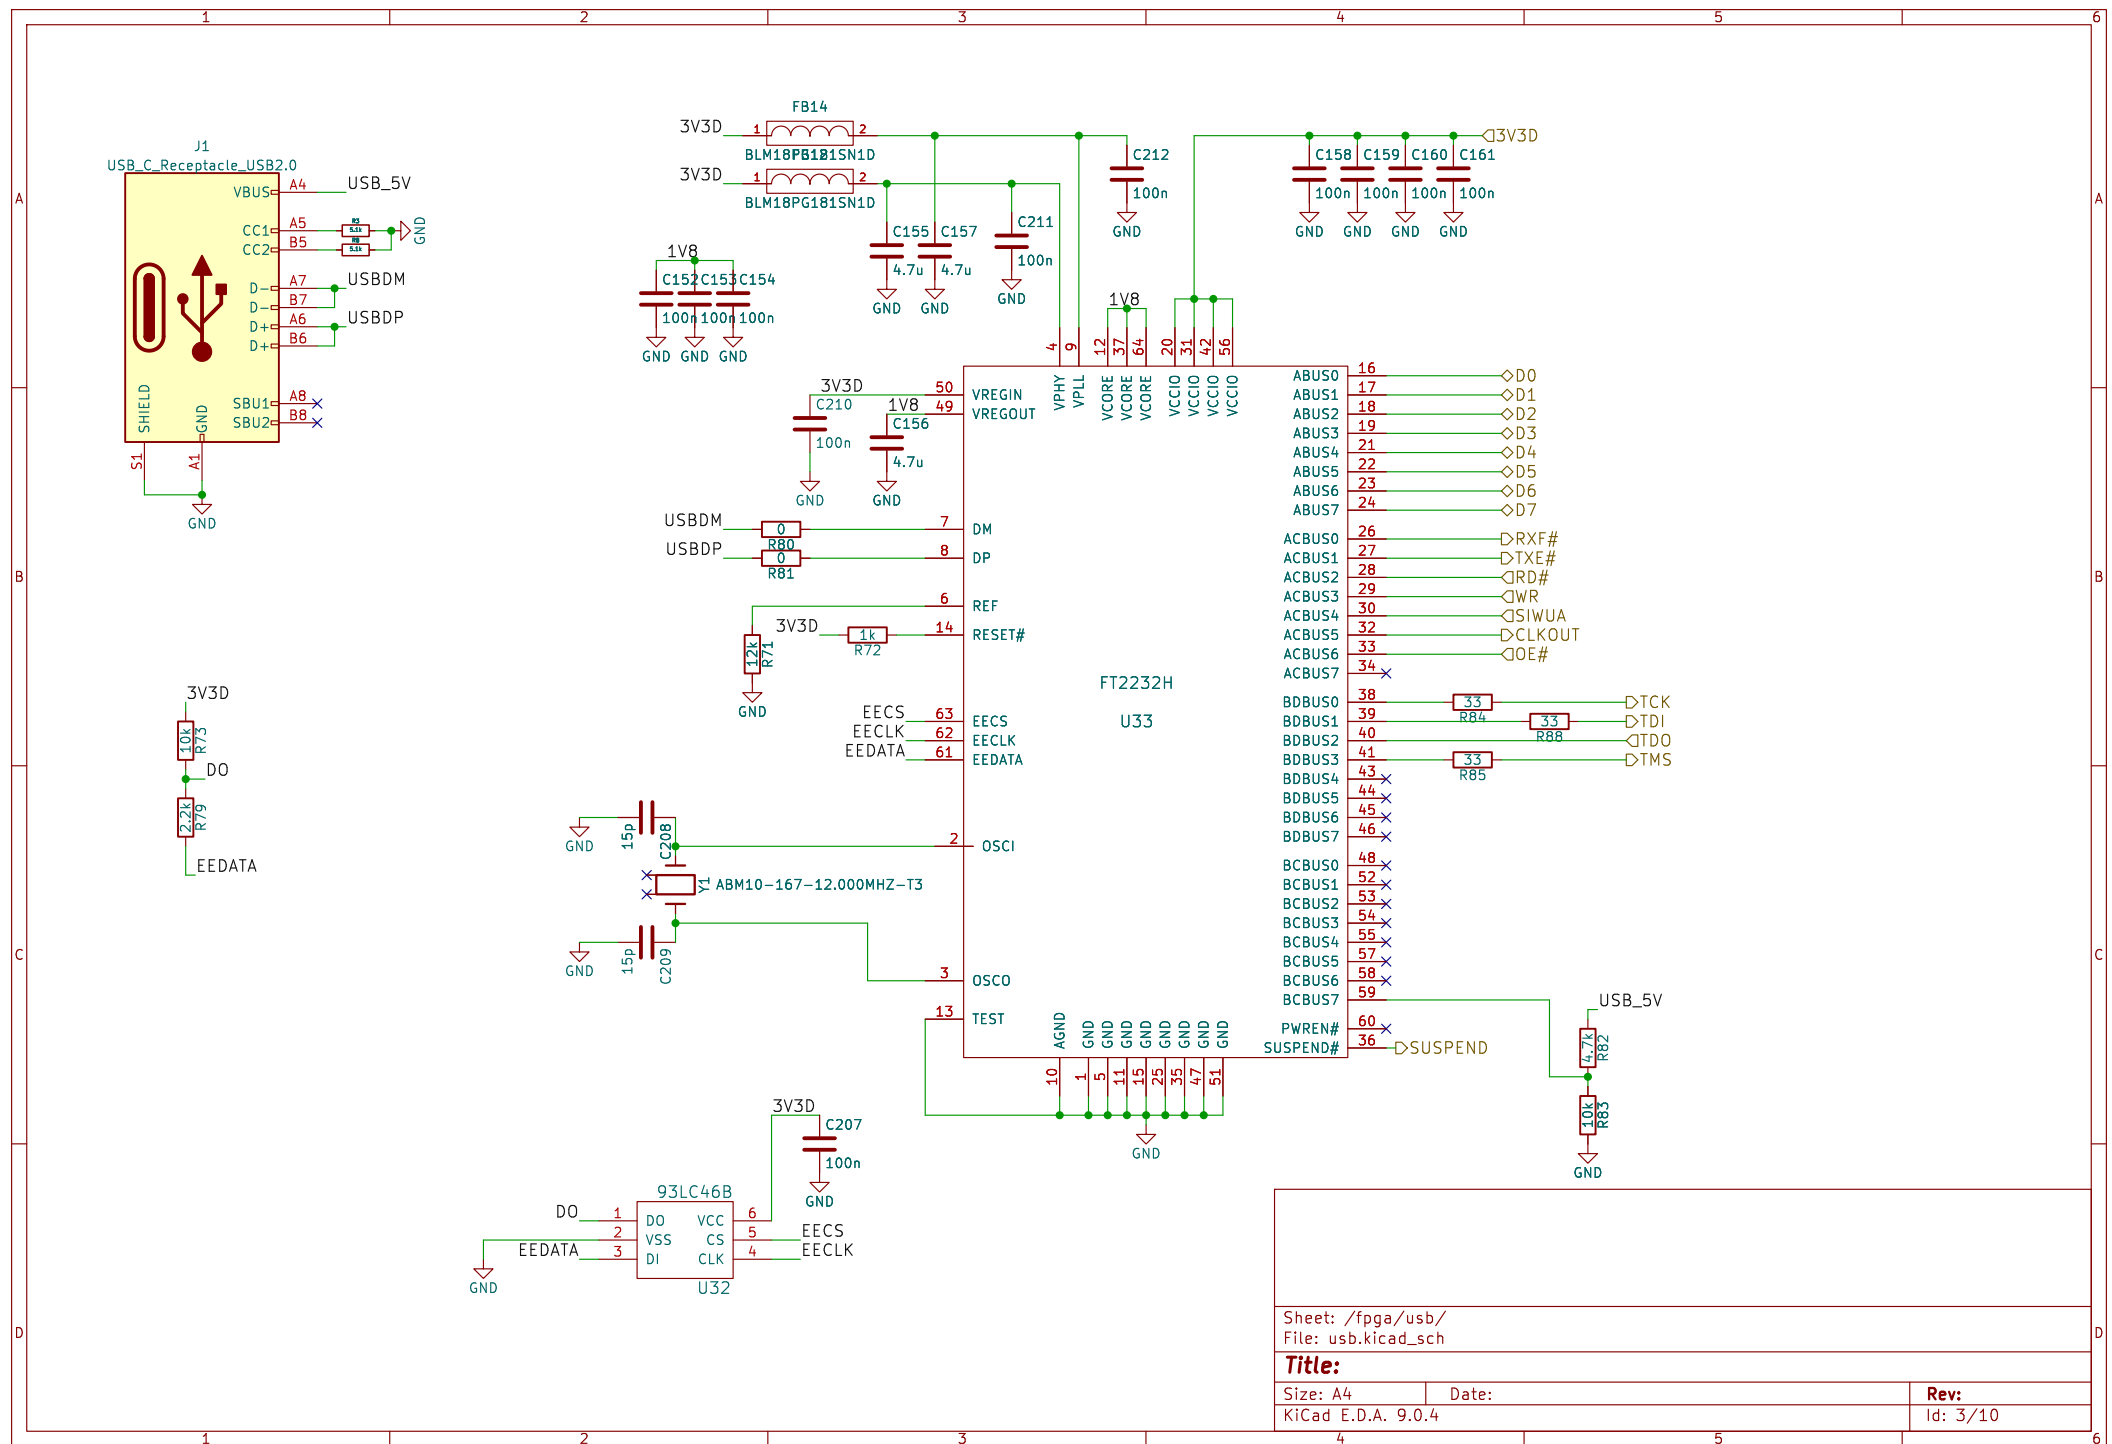


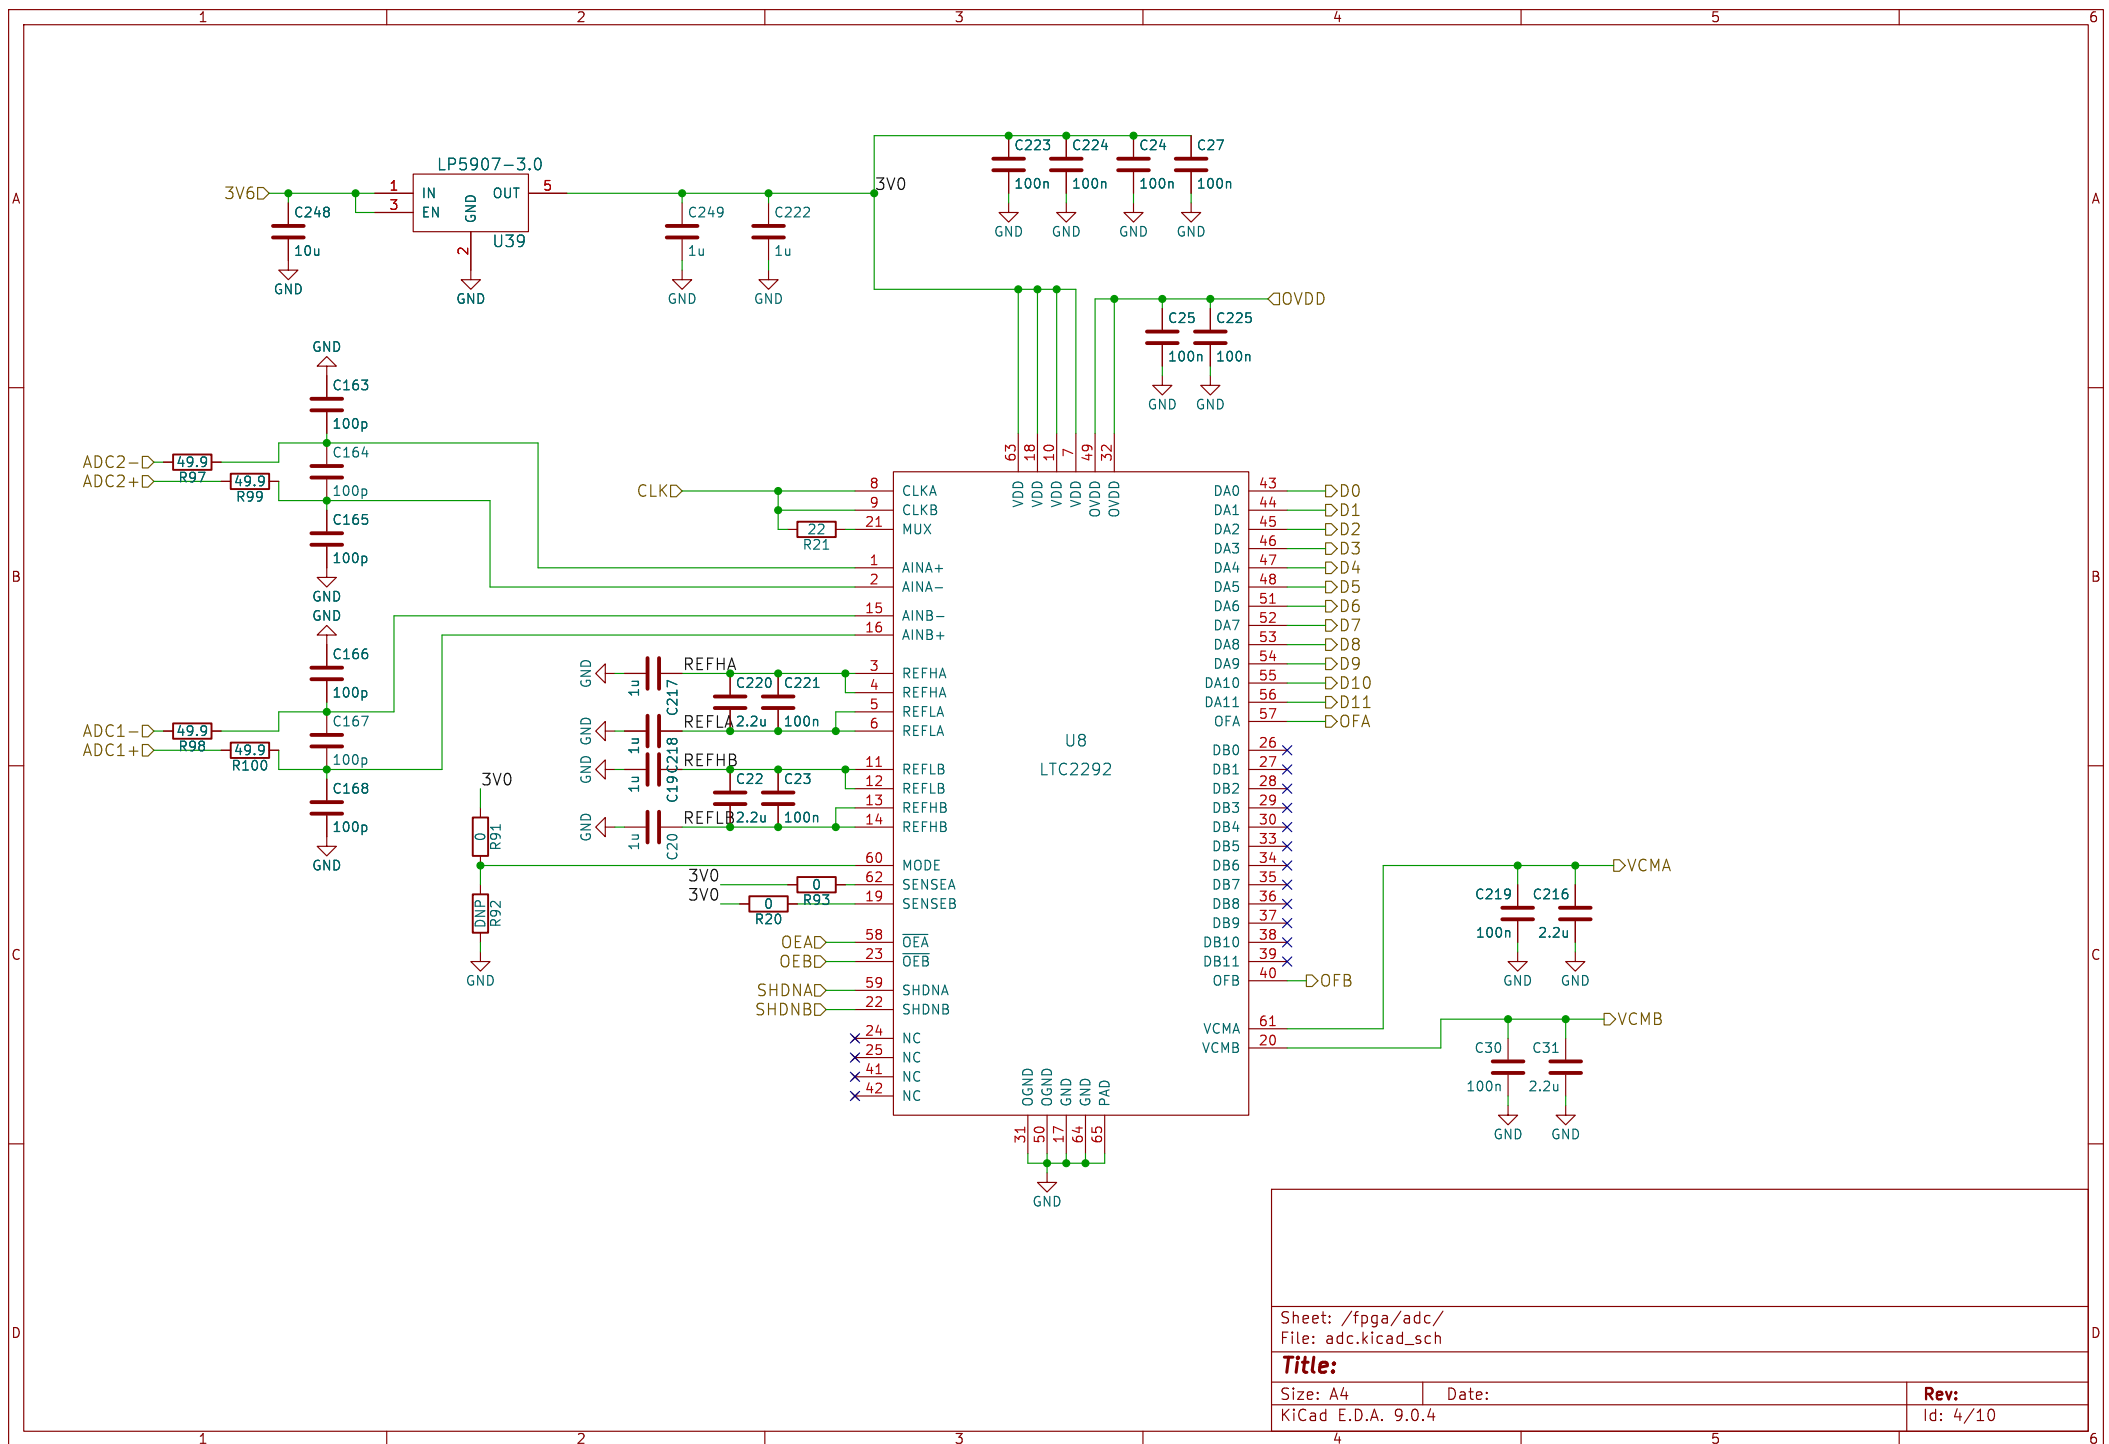



In the Artix-7 data sheet it states that the recommended power-on sequence is VCCINT, VCCBRAM, VCCAUX, and VCCO. 1v0 first 1v8 then 3v3 is the sequence so use power good


2A buck converter

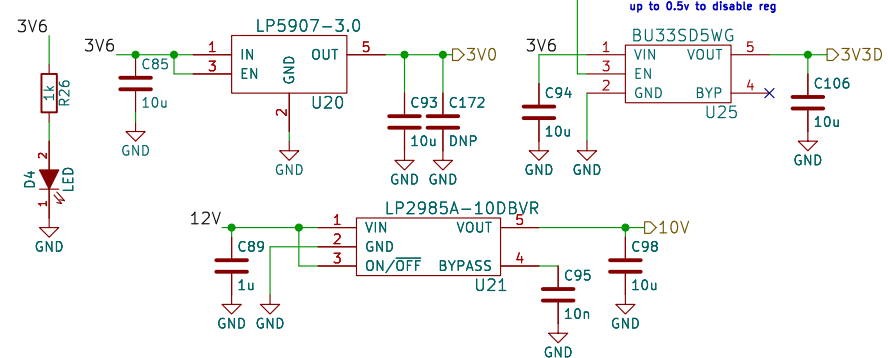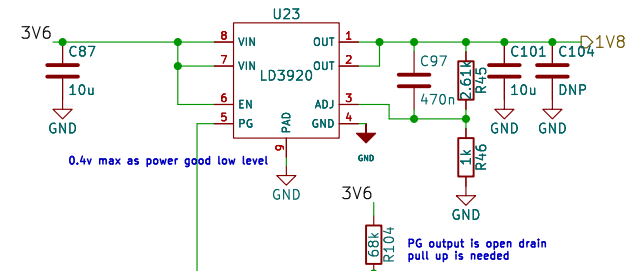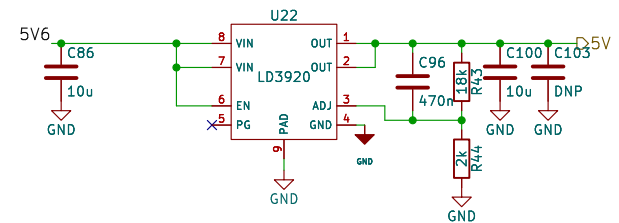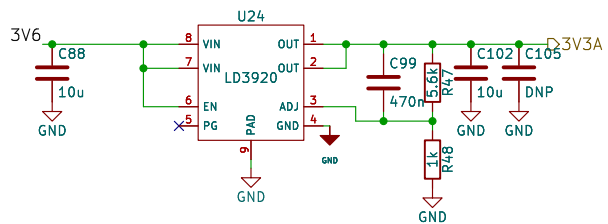

ADL5801 has 50 ohm network suggestion in its datasheet.
 However ADL5802 specifically states that it needs 200ohm diff
 Therefore i will use 100ohm pullup and will not use and transformers
 since the if will be below 10MHz or so.

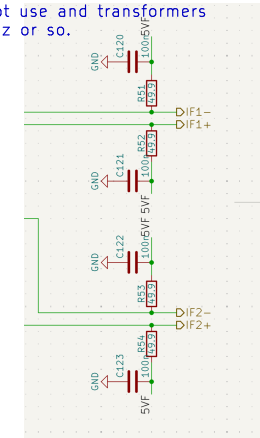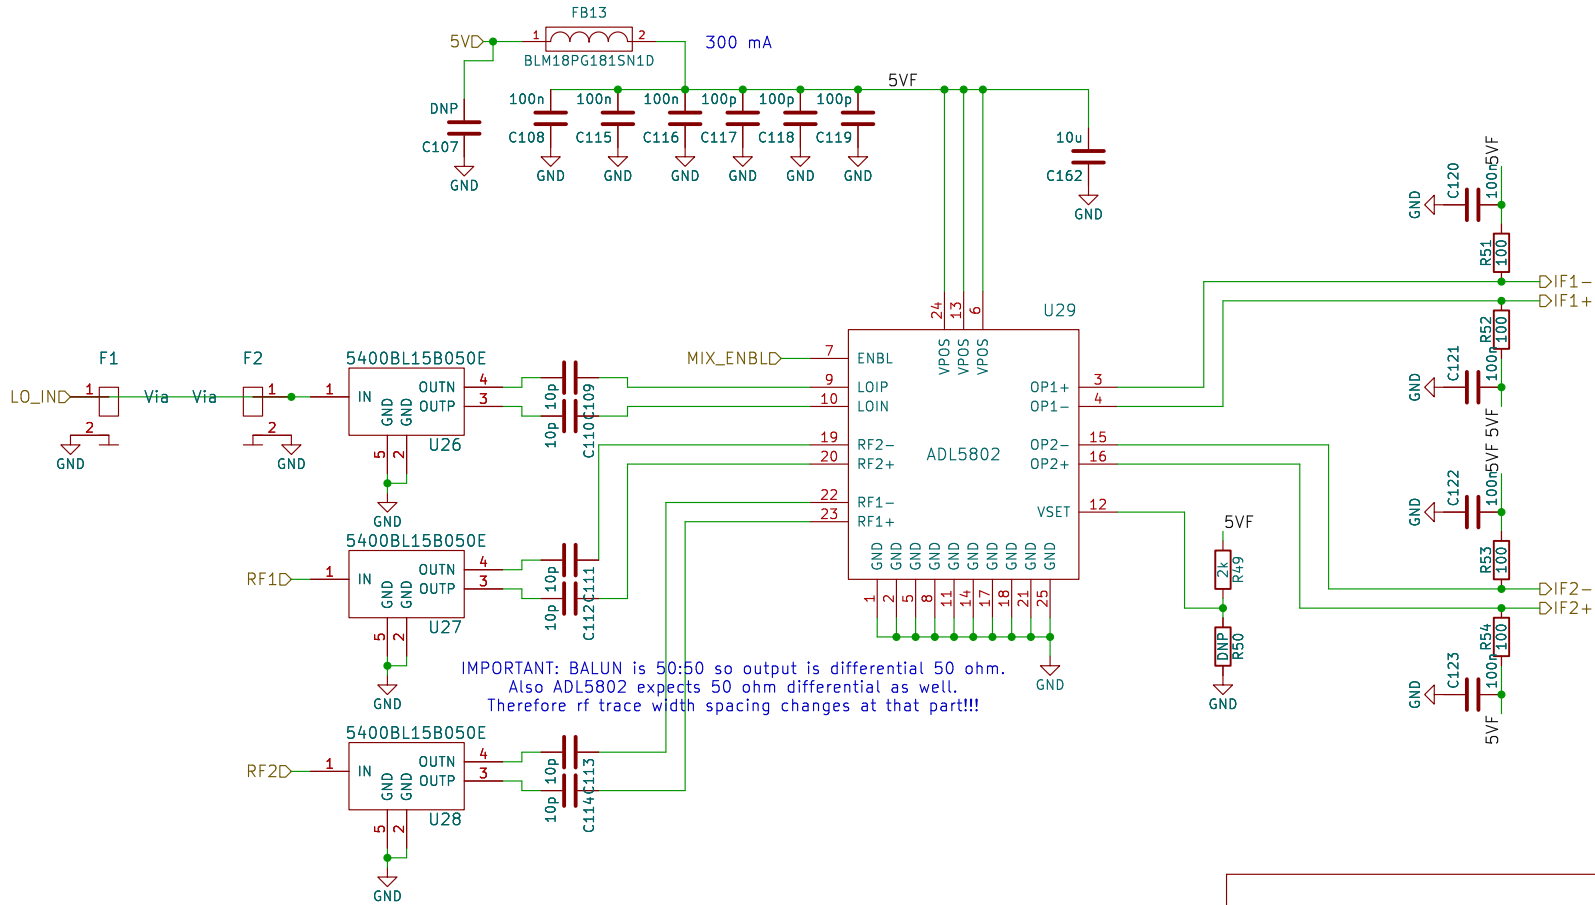

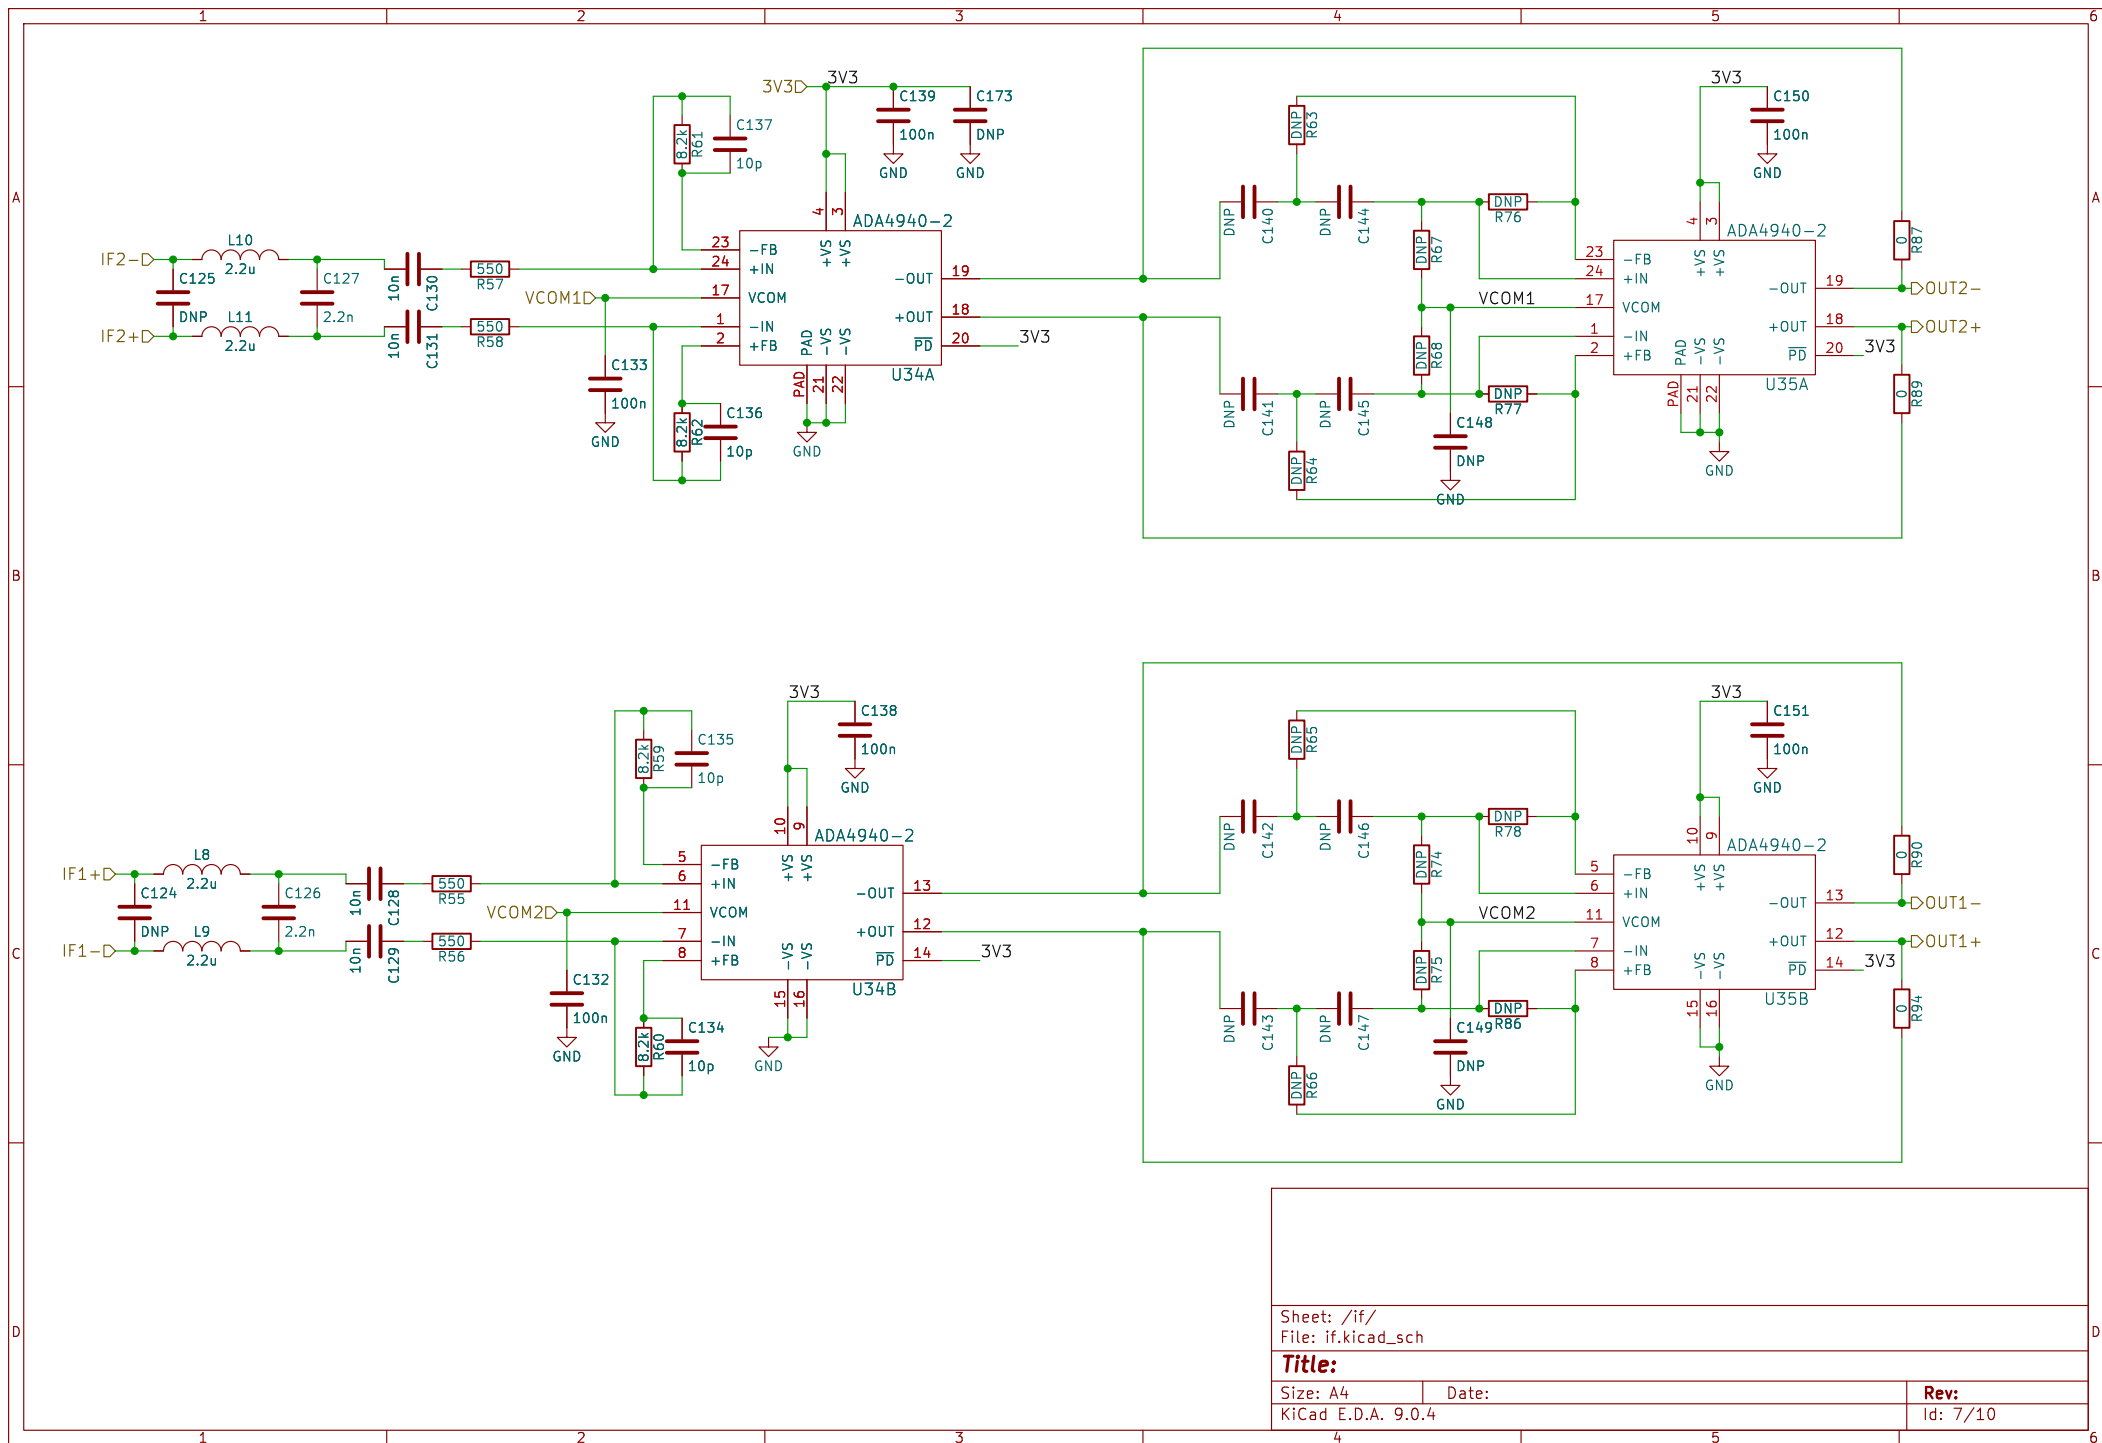

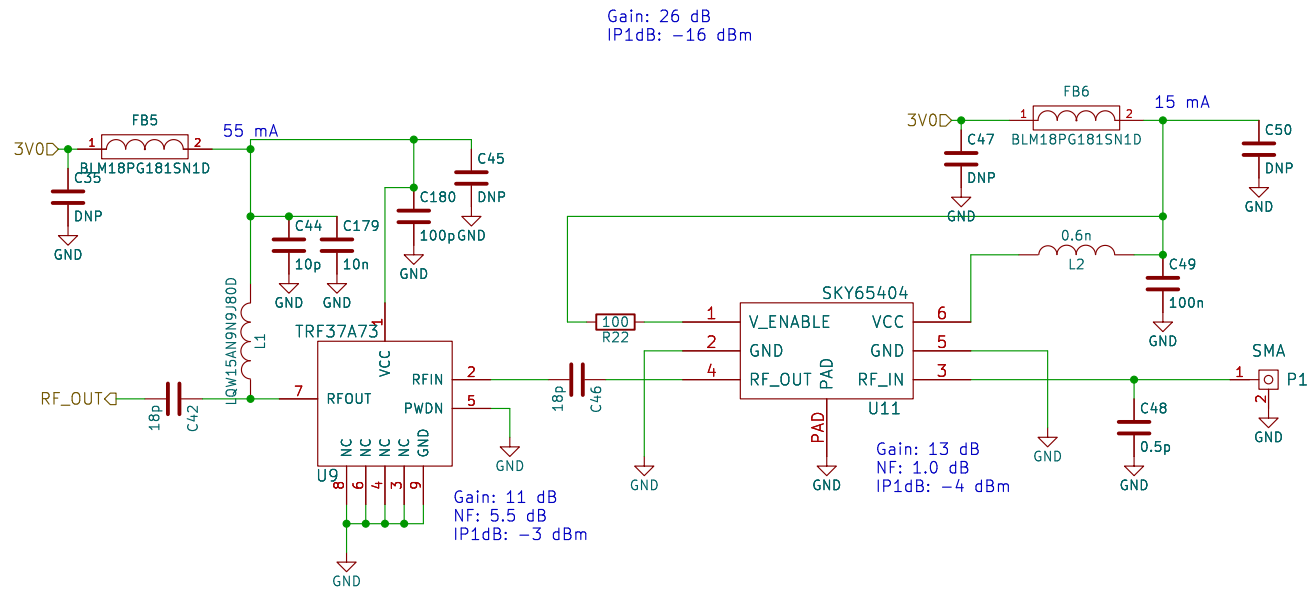

3.0V current: 70mA

Sheet: /rx1/
File: rx.kicad_sch

Title:


Size: A4

Date:

KiCad E.D.A. 9.0.4

Rev:

Id: 9/10

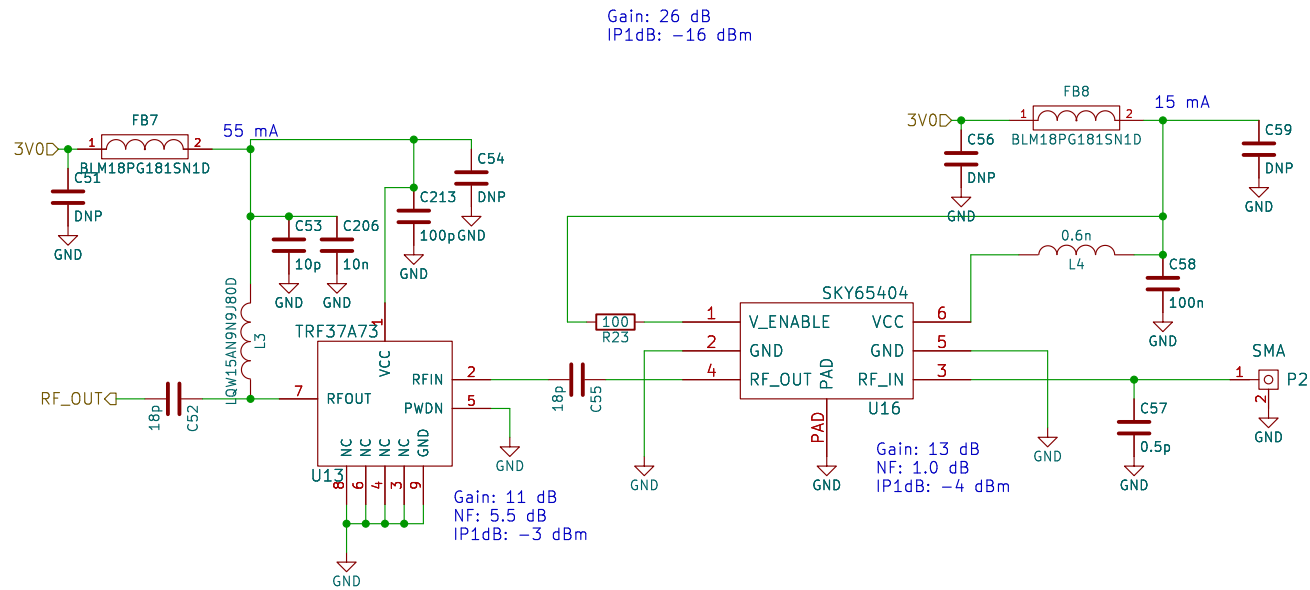

Sheet: /rx2/
File: rx.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 9.0.4

Rev:

Id: 10/10