






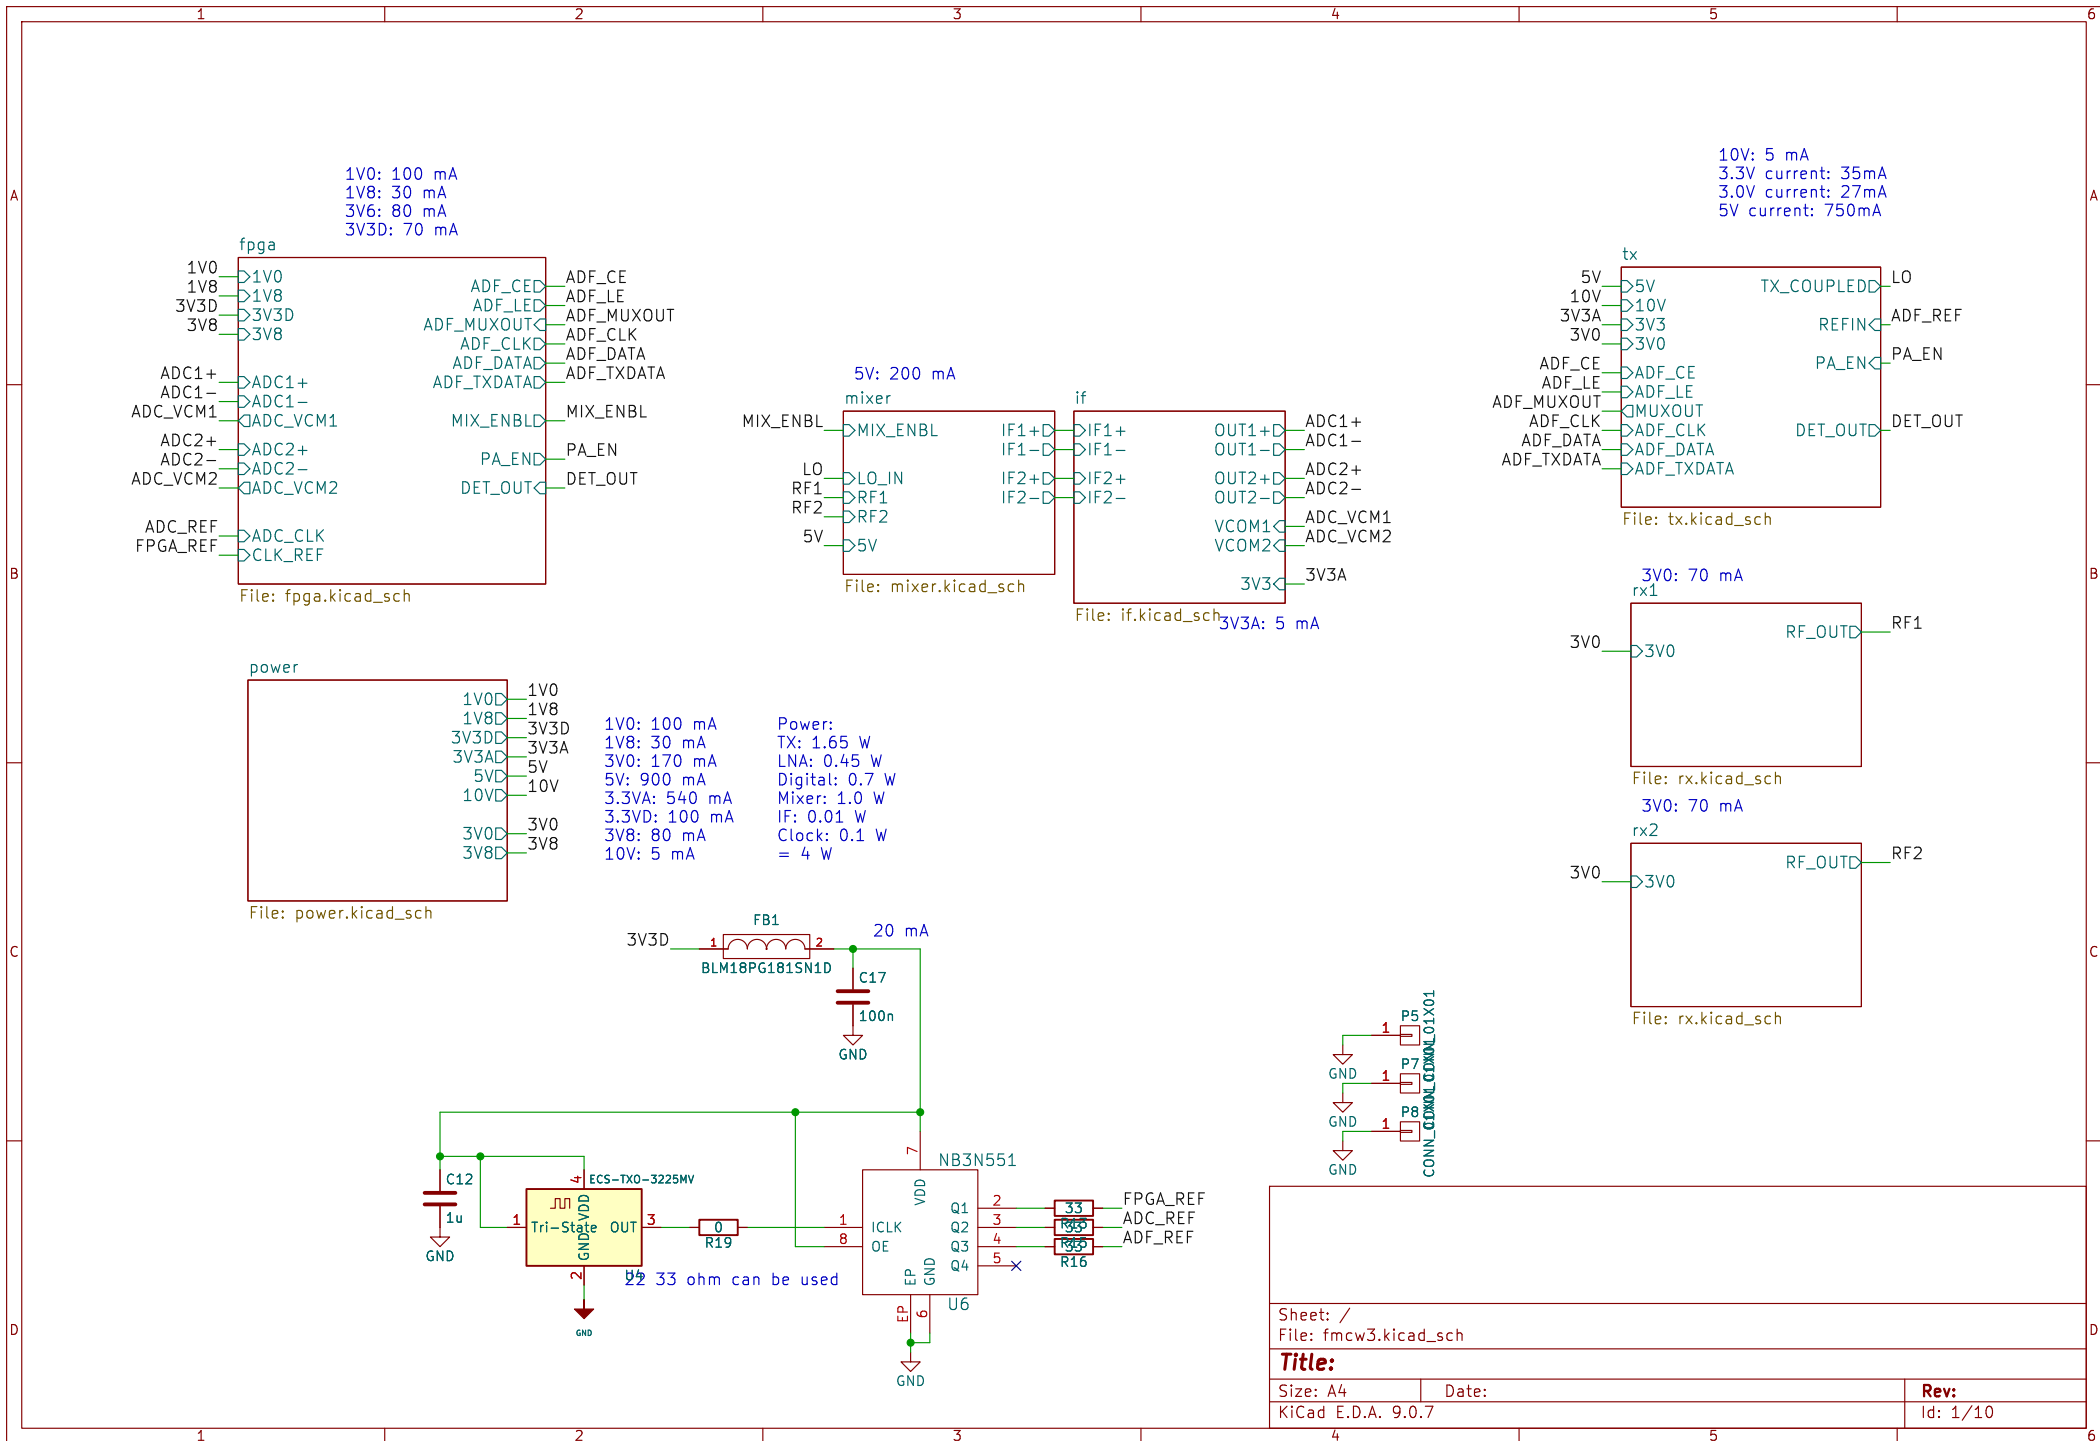








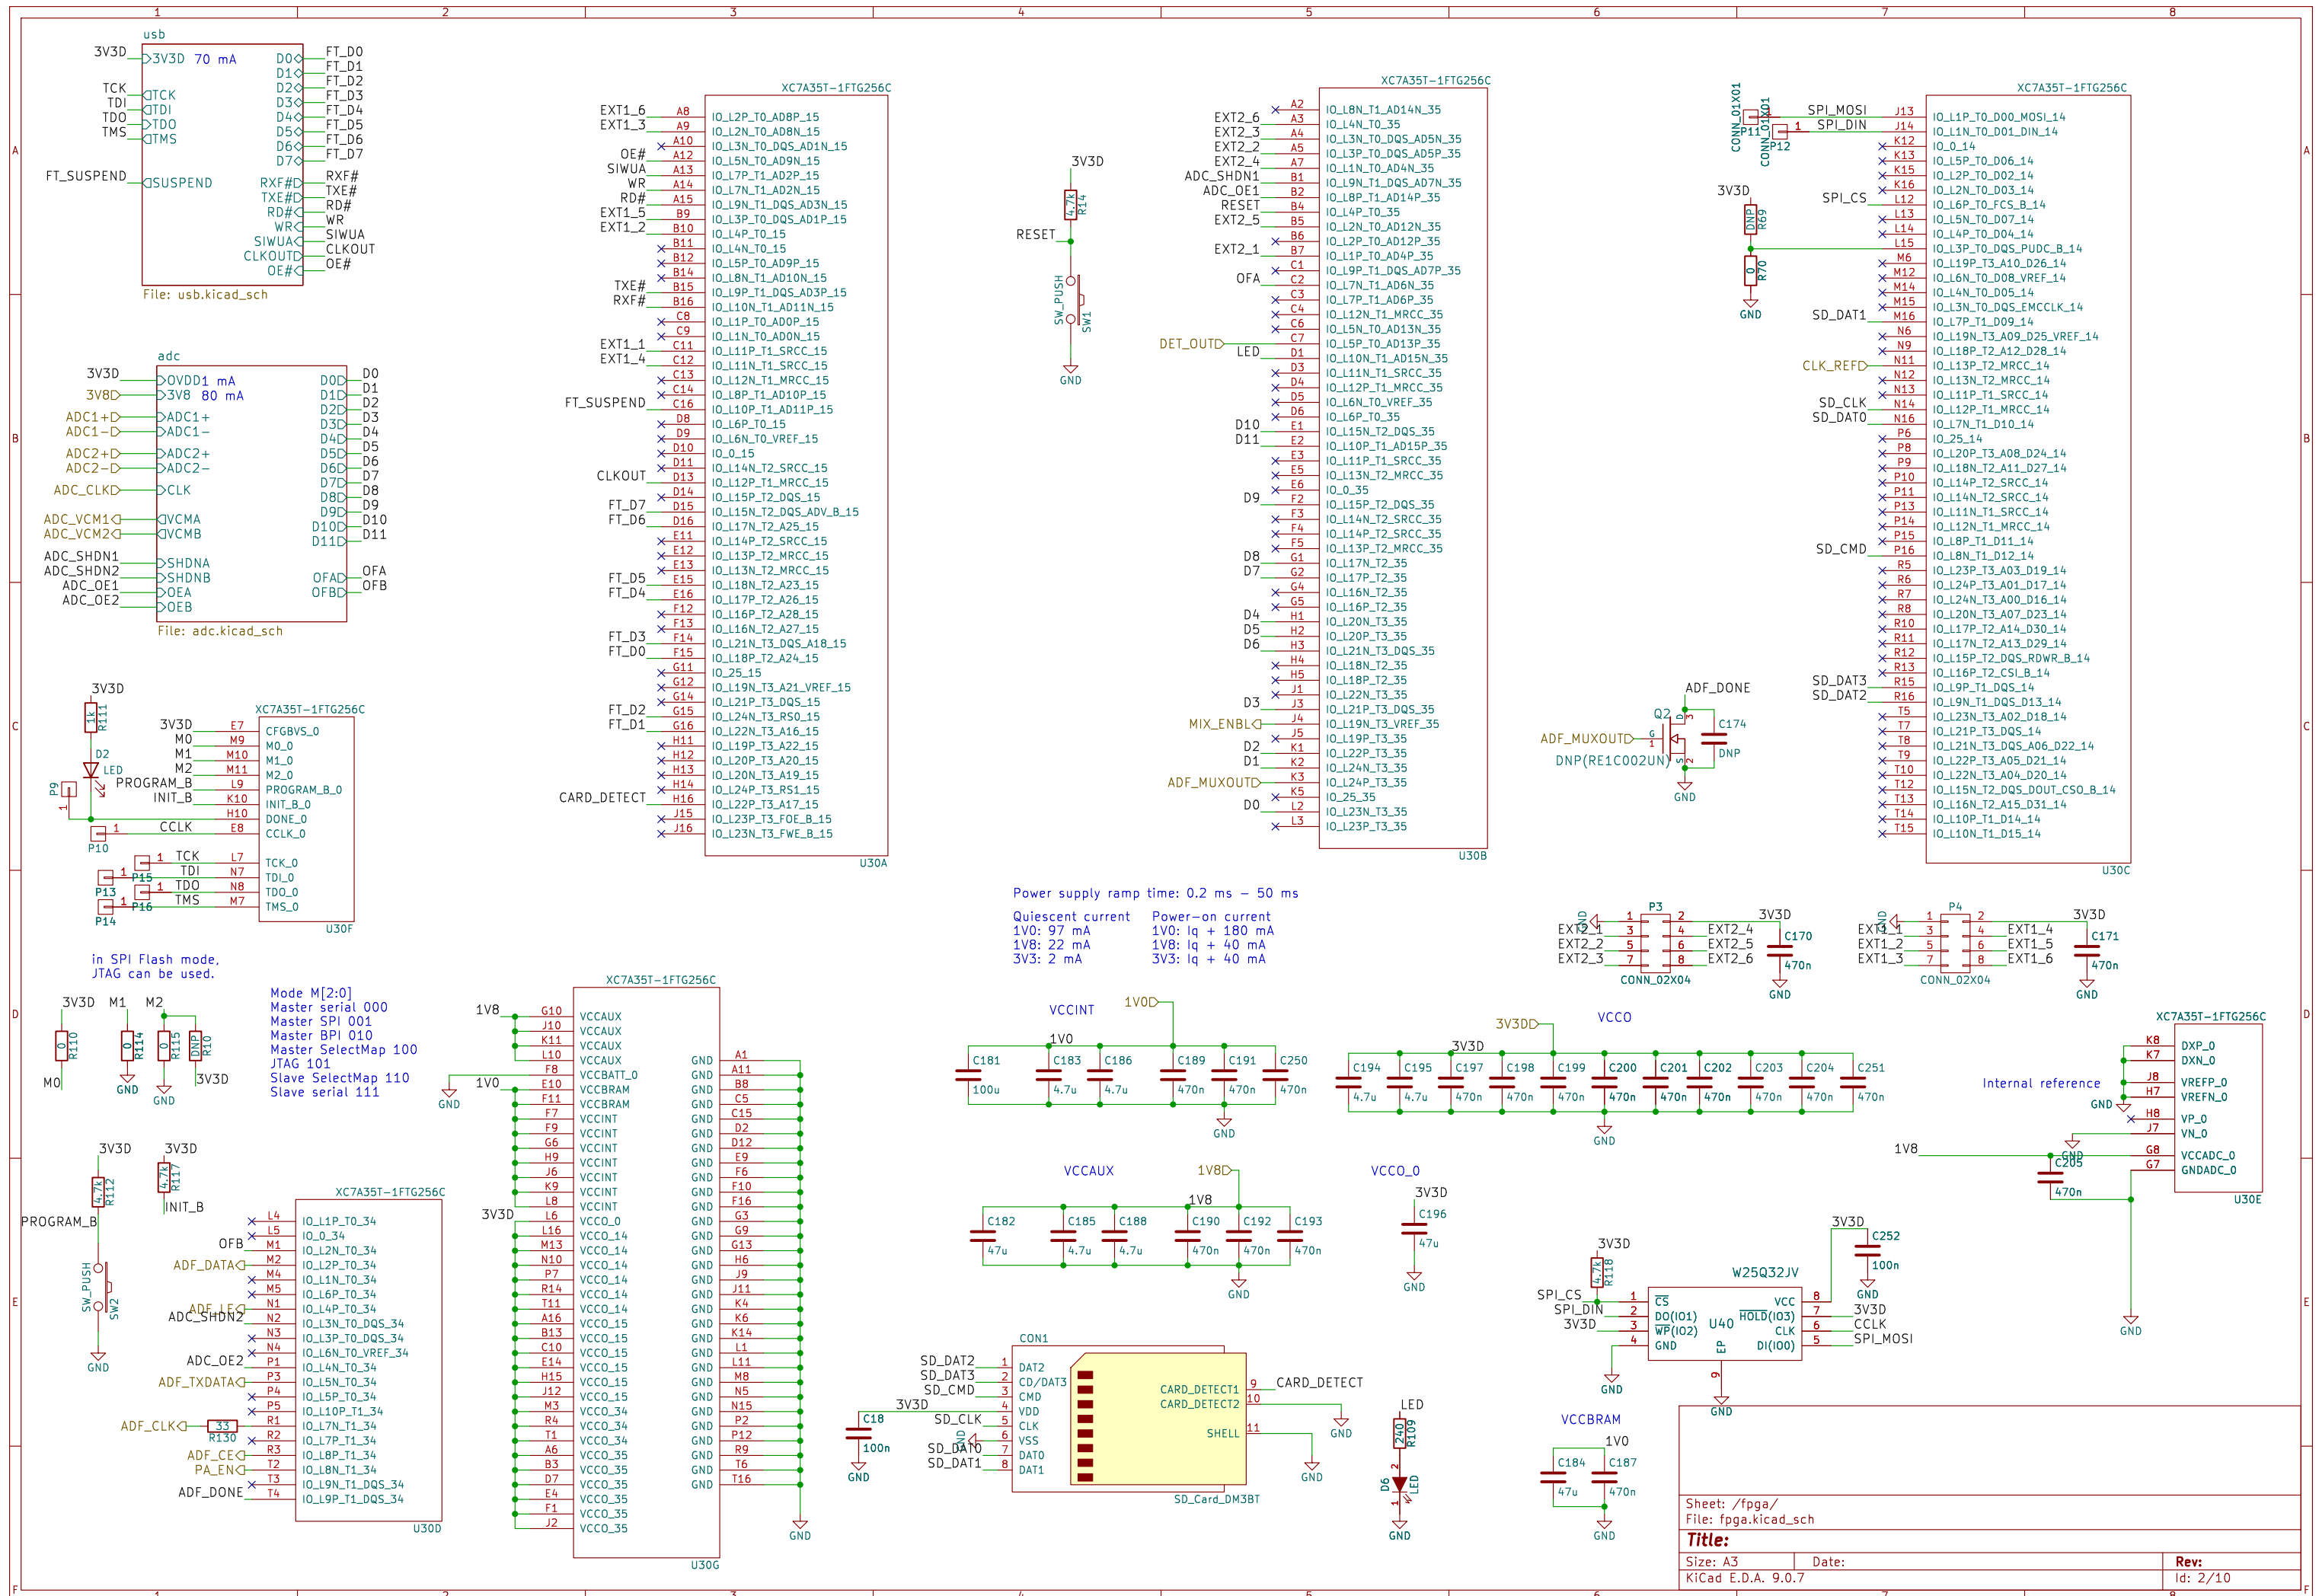


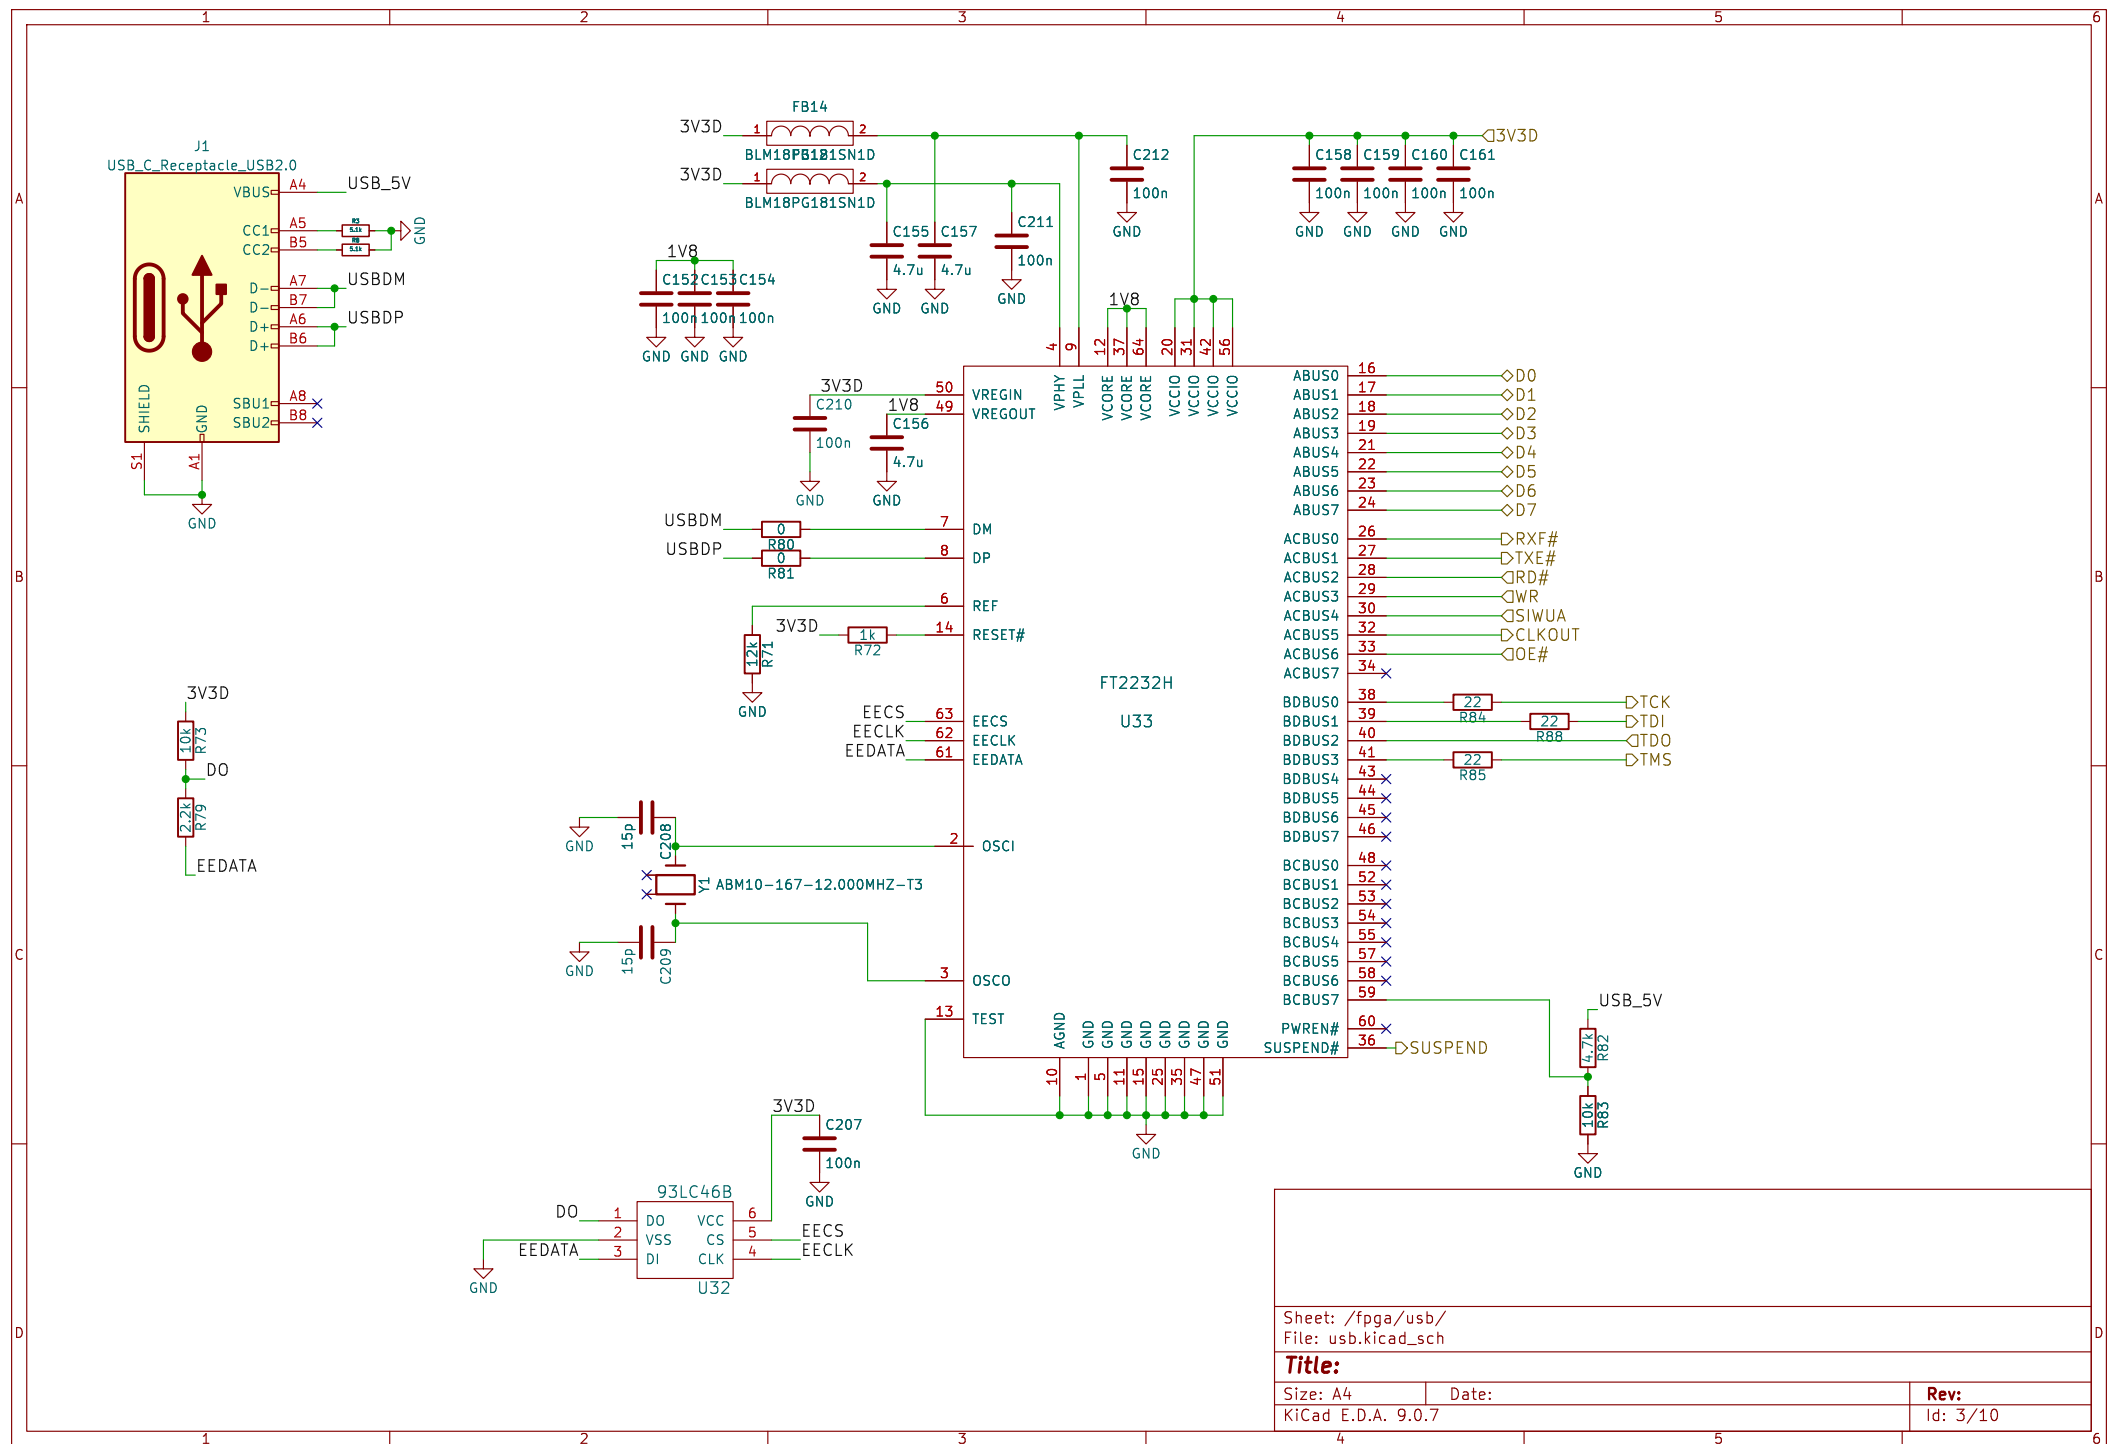

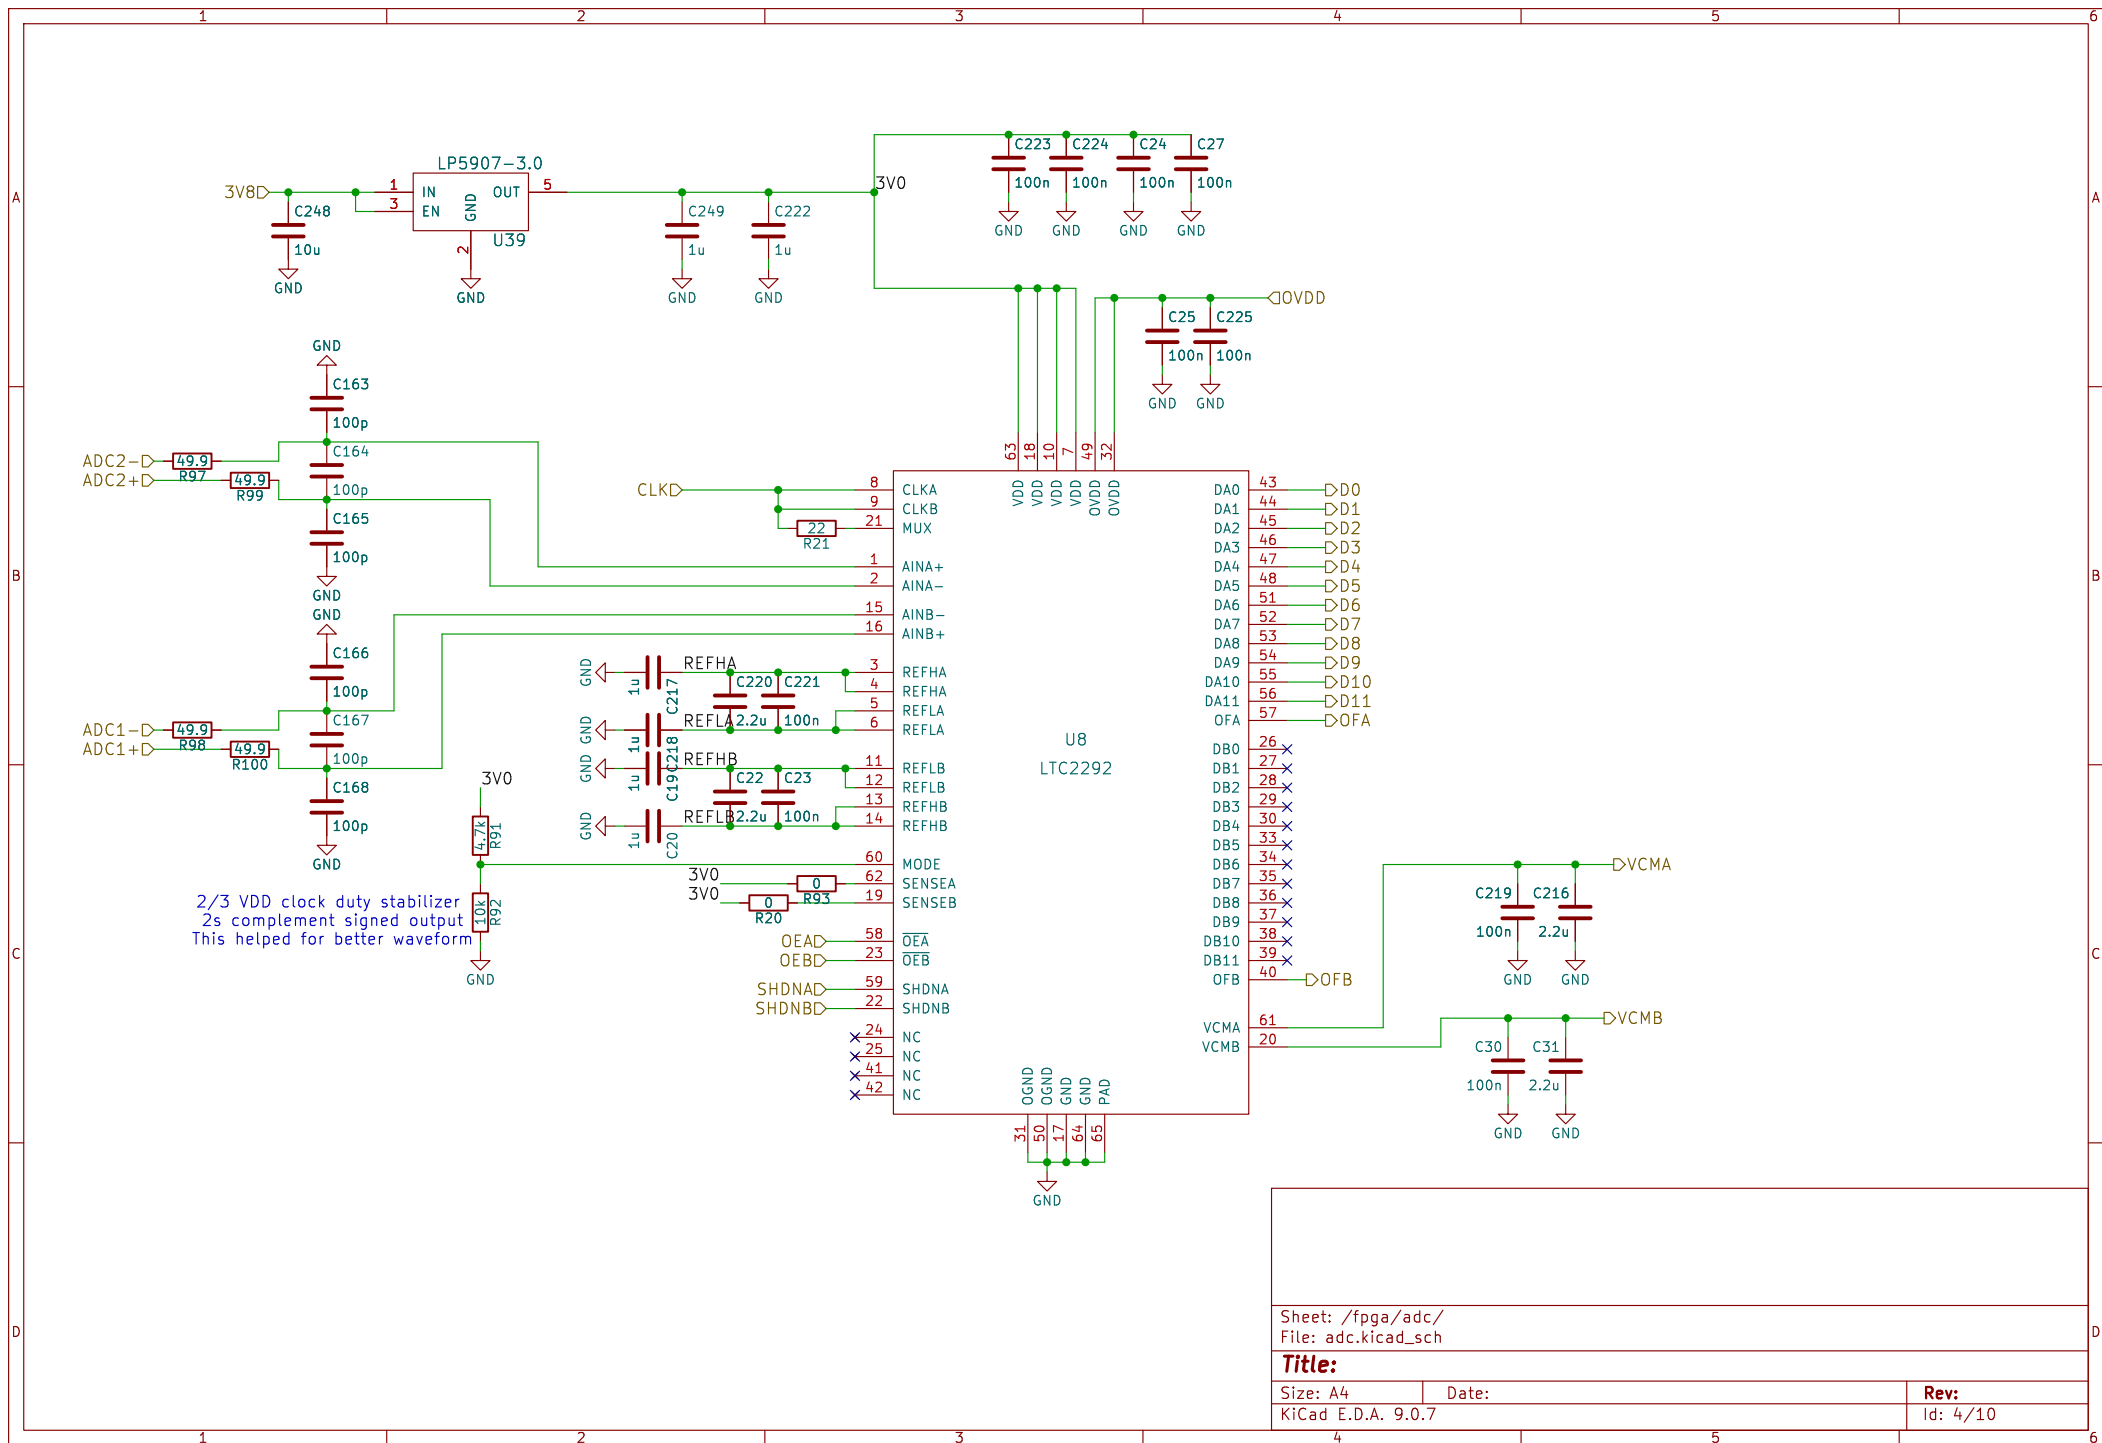

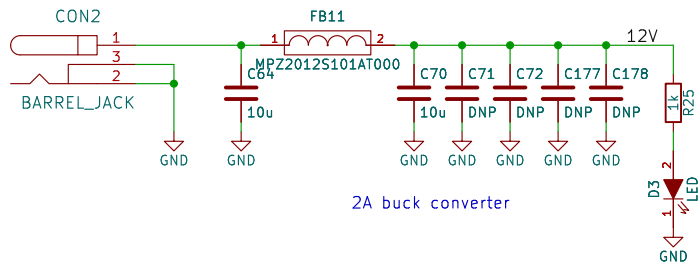

In the Artix-7 data sheet it states that the recommended power-on sequence is VCCINT, VCCBRAM, VCCAUX, and VCCO. 1v0 first 1v8 then 3v3 is the sequence so use power good

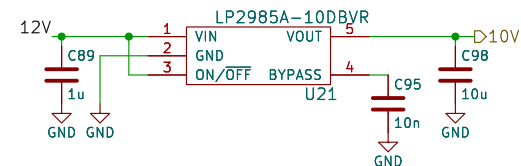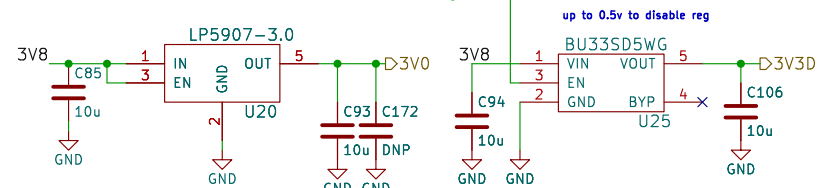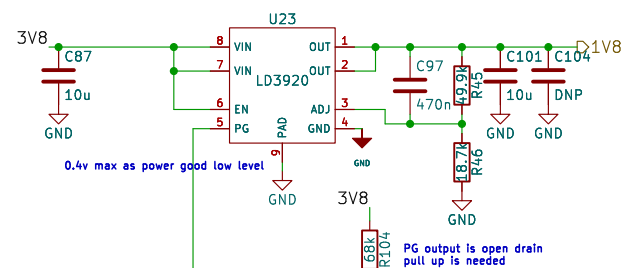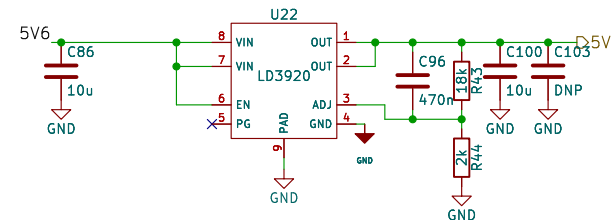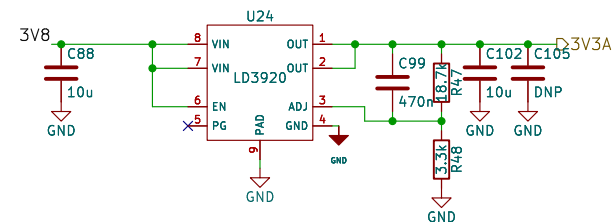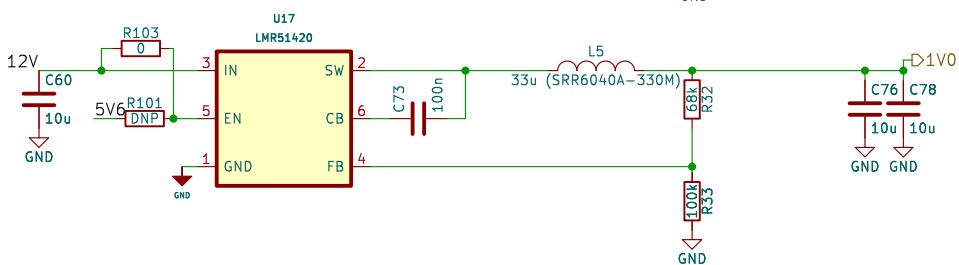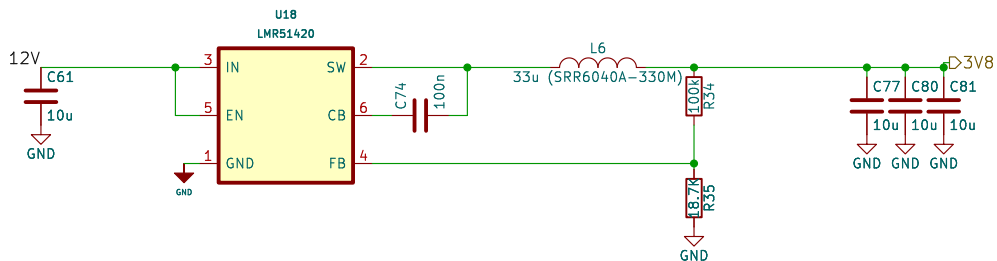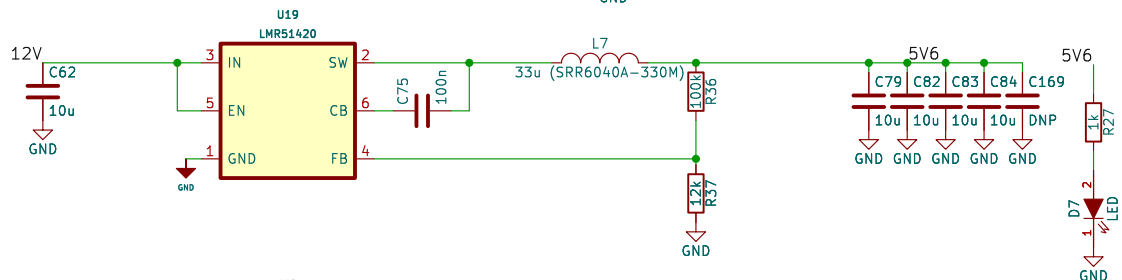

Sheet: /power/
File: power.kicad_sch


Title:


Size: A4
KiCad E.D.A. 9.0.7


Date:


Rev:

Id: 5/10

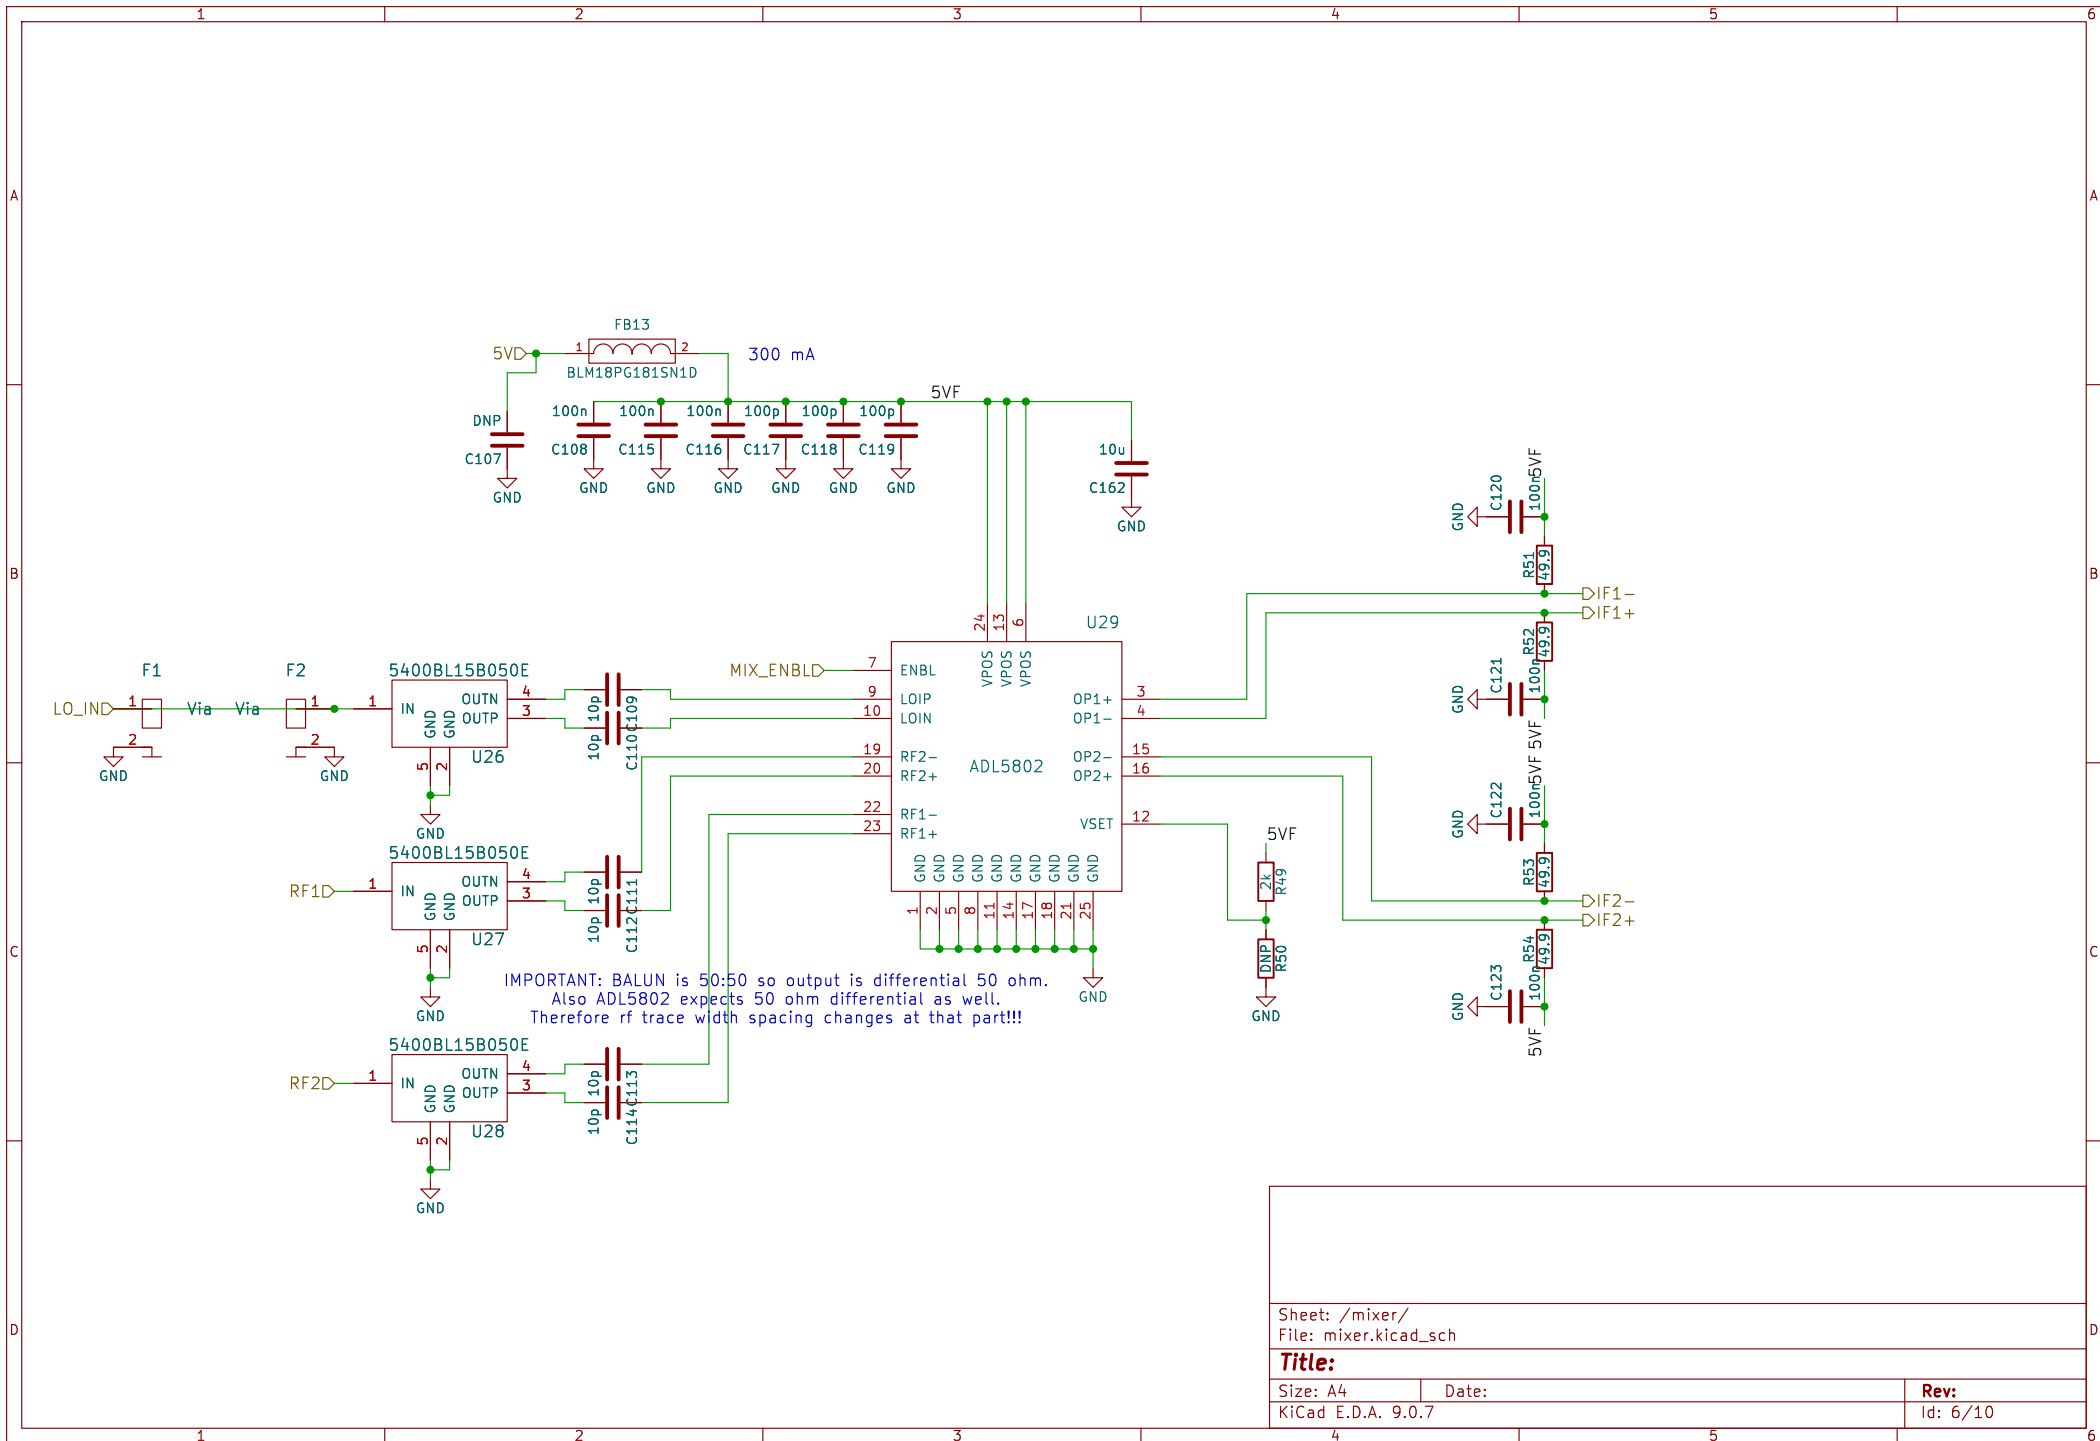

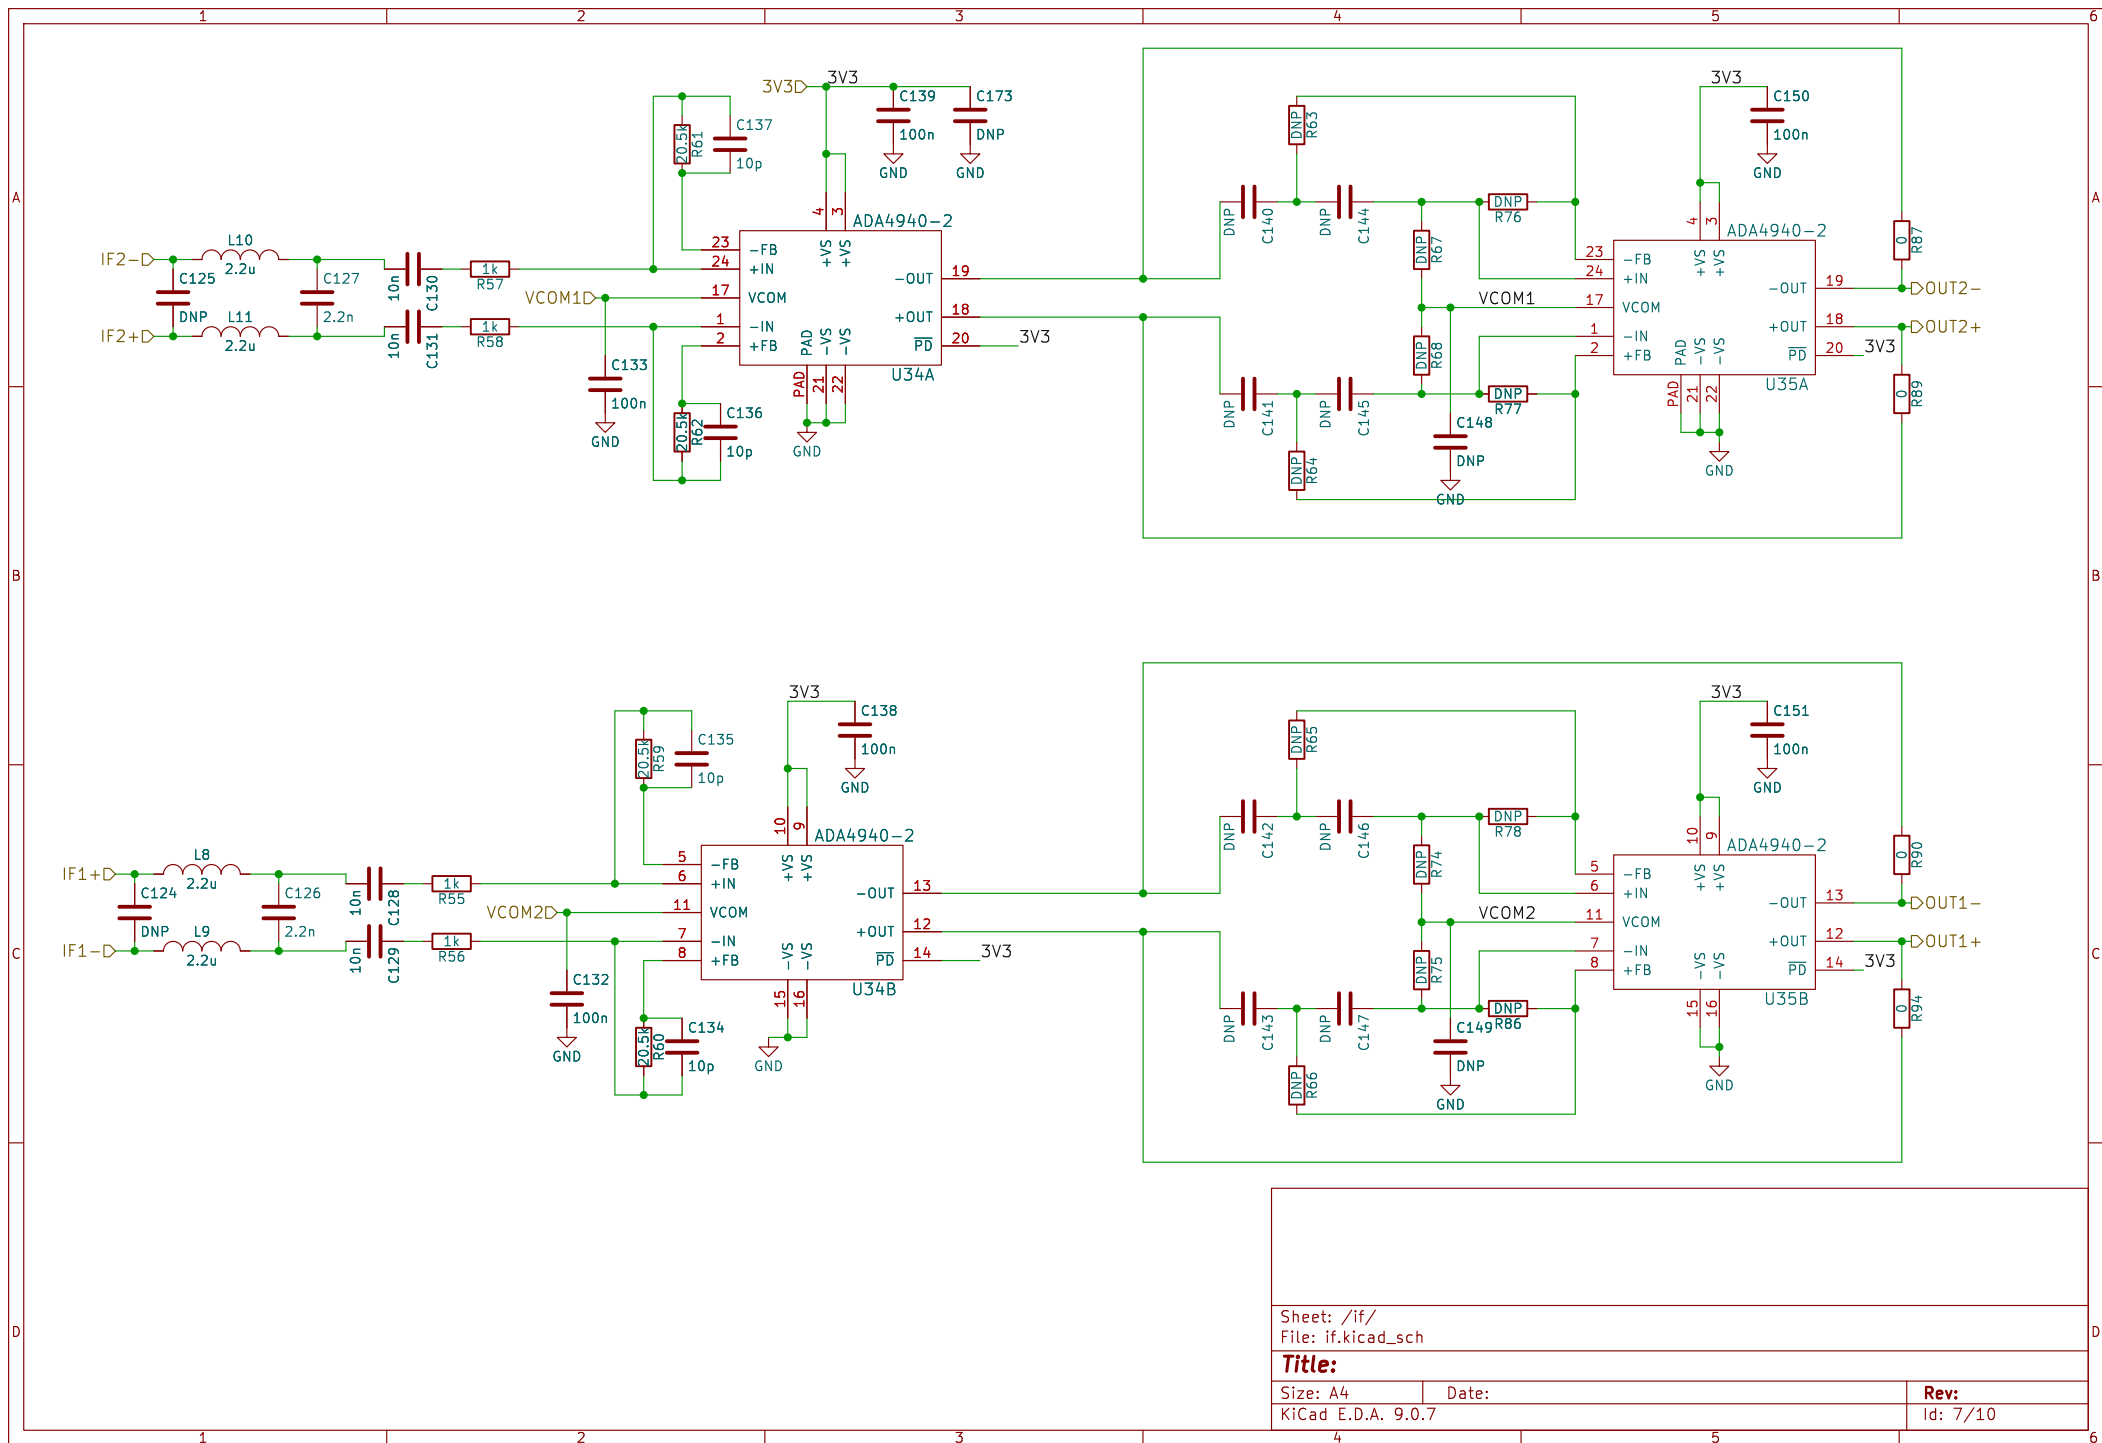

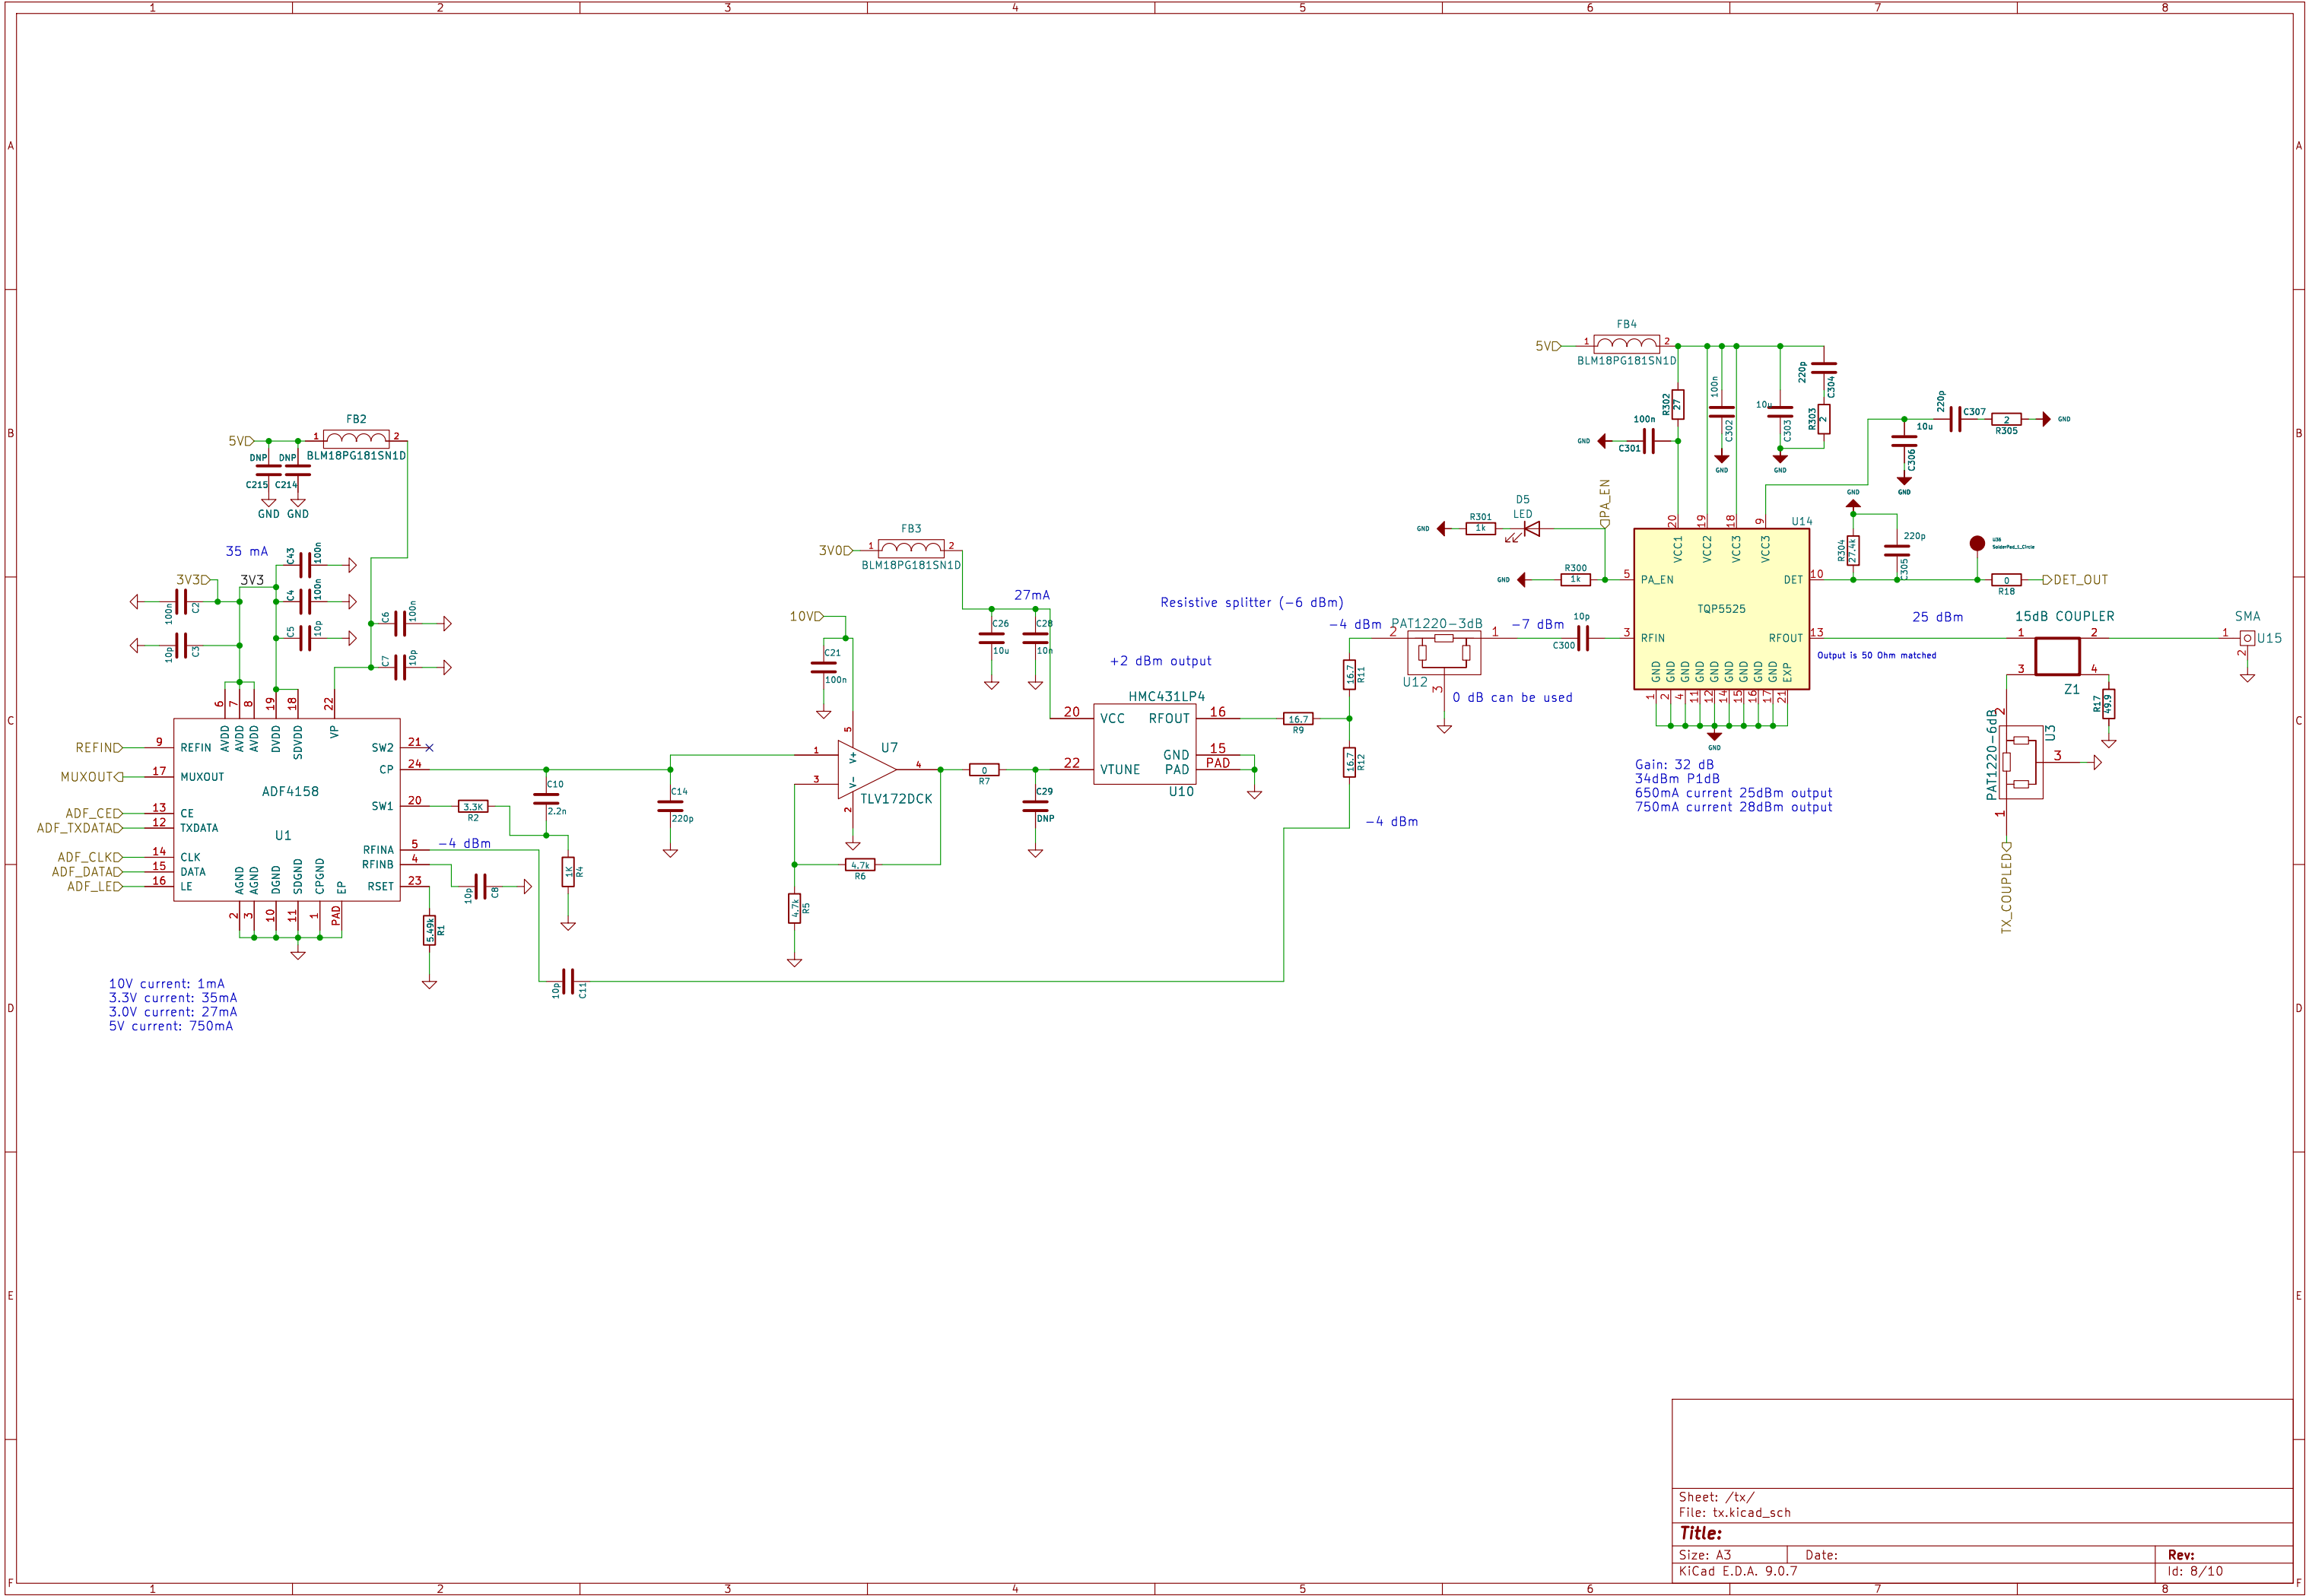

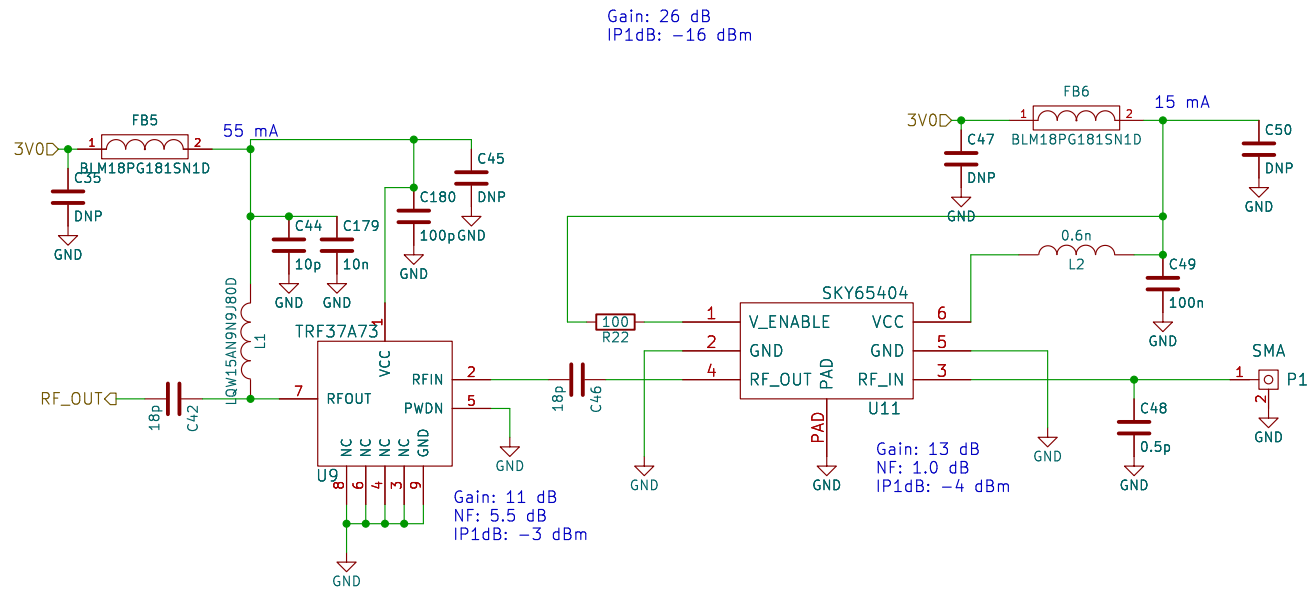

Sheet: /rx1/
File: rx.kicad_sch

Title:


Size: A4

Date:

KiCad E.D.A. 9.0.7

Rev:

Id: 9/10

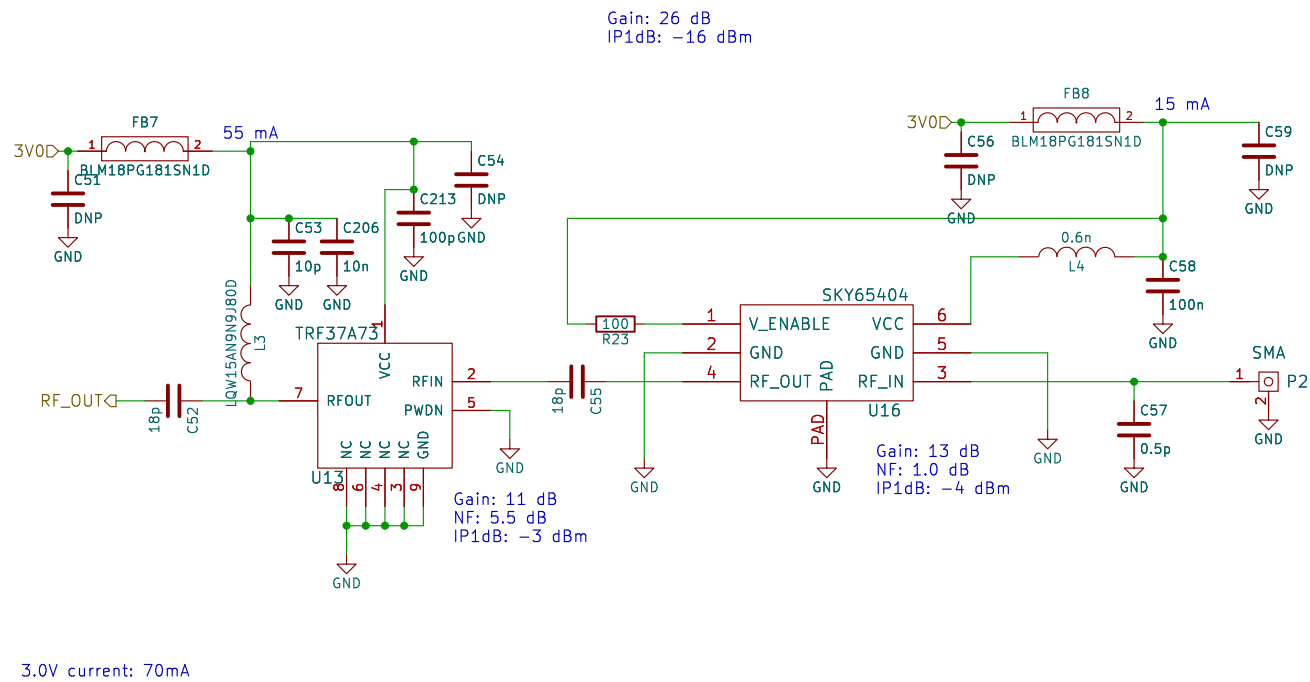

Sheet: /rx2/
File: rx.kicad_sch

Title:

Size: A4
KiCad E.D.A. 9.0.7

Date:

Rev:
Id: 10/10